

User Manual

TABLE OF CONTENTS

SECTION 1:	4	Safety Instructions
Overview	5	System Components and Unpacking
	6	Optional Components
	7	Top Panel Wireless Receiver Controls
	8	Top Panel Controls & Connections
	9	Rear Panel Controls & Connections
	10	Installing or Replacing Receiver Module
SECTION 2:	11	Step 1. Connecting the DELTA PA Receiver to a Power Supply
Set-up & Use	12	Step 2A. Setting up one DELTA PA Receiver
	13	Step 2B. Using More Than One DELTA PA Receiver
		Handheld Transmitter
	14	Step 3. Channel Selection
	15	Step 4. Battery Life & Battery Type
	16	Step 5. Replacing Battery
	17	Step 6. Recharging Batteries
		Belt-pack
	18	Step 7. Connecting & Placement
	19	Step 8. Channel Selection
	20	Step 9. Gain Adjust
	21	Step 10. Battery Life Indicator & Type
	22	Step 11. Replacing Batteries
	23	Step 12. Recharging Batteries
	24	Daily Use Instructions
	SECTION 3:	25
Optional Accessories	26	Belt-Pack Transmitter
	27	Optional Speaker Stand and Bracket Assembly
SECTION 4:	28	Troubleshooting Guide
Troubleshooting		
SECTION 5:	29	Warranty Statement
Warranty & Specifications	30	Safety Warnings
	31	System Specifications

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use the apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. When the mains plug or appliance coupler is used as the disconnect device, it shall remain readily operable.
16. Please keep the unit in a good ventilation environment.
17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
18. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.


SECTION 1:

OVERVIEW

SYSTEM COMPONENTS AND UNPACKING

The standard configuration of the DELTA PA will contain:

DELTA PA Public
Address System
and Power Supply

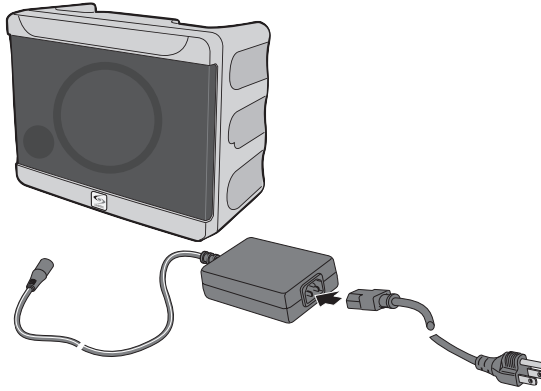

DELTA PA Carry Case



5. Warranty, Safety
& Specifications

4. Troubleshooting

3. Optional
Accessories


2. Setup & Use

1. Overview


OPTIONAL COMPONENTS

Optional equipment which may be part of your DELTA PA system:

BP016 Transmitter and
Charger

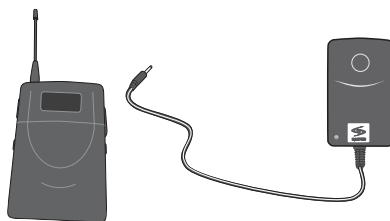


TK250S Noise-
Cancelling Headset
Microphone

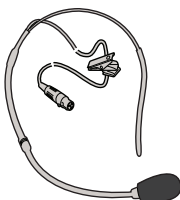

831S Audio
-Technica 831
Lapel Mic



HM016 Transmitter

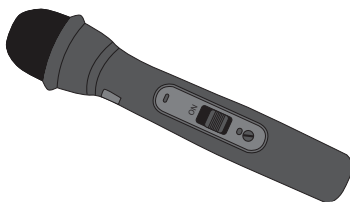


Individual Components

DPA016R	16 Channel UHF Receiver Module
HM016	16 Channel UHF Handheld Transmitter
MH7	Mic Holder for HM016 Handheld Transmitter
BP016	16 Channel UHF Belt-Pack Transmitter
BC016	Battery Charger for BP016 or HM016
831S	Audio-Technica 831 Lapel Mic
TK250S	Lightspeed Noise-cancelling Headset Mic
24V-2.5-A	AC Power Supply
NH1	AA NiMH Rechargeable Battery
SPDPA	Carry Bag for DELTA PA
AC-PWR-NA	AC North American Power Cable

Optional Accessories

GTC900	Guitar/aux In Cable for BP016
TWBRK	Speaker Stand Bracket
SS1	Tripod Speaker Stand
SPSS1	Carry Bag for Tripod Speaker Stand
H10	Wired Dynamic Handheld Mic

TOP PANEL: WIRELESS RECEIVER CONTROLS

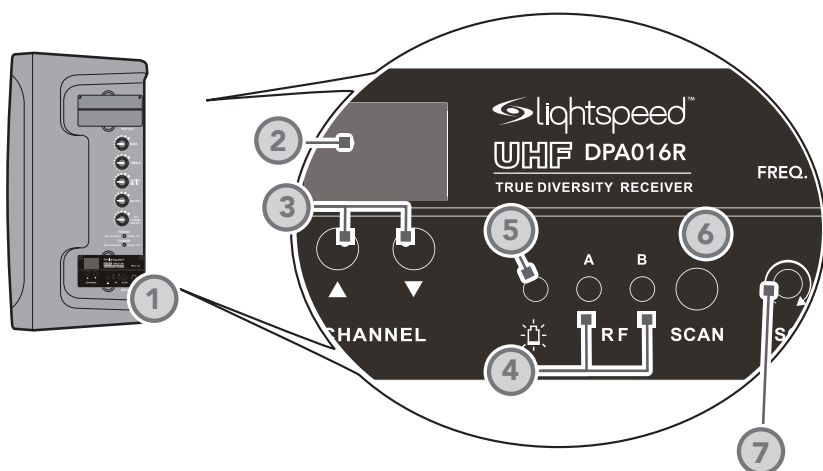

1. WIRELESS RECEIVER 1: One or two wireless receiver modules are located at the top panel.

2. CHANNEL DISPLAY: An LED readout of the receiver module indicates which channel you are on.

3. CHANNEL CONTROL (1-16): The left button increments the channel number (1-16). Each touch of the button moves the number up one until it gets to sixteen. The right button decrements the channel number (16-1).

4. RF CHANNEL A/B INDICATOR: The "A" LED lights up indicating the A channel tuner is receiving the strongest RF signal. The "B" LED lights up indicating the "B" channel tuner is receiving the strongest RF signal.

5. TRANSMITTER LOW BATTERY INDICATOR: This LED will light to indicate the batteries in the corresponding transmitter are low.

6. SCAN: Press this button to automatically select a channel that is free from interference.

7. SQUELCH LEVEL ADJUSTMENT: Covered with a plastic cap, the squelch is adjusted at the factory to provide the best signal level and minimum noise. There is no need to adjust the squelch level in the field.

5. Warranty, Safety
& Specifications


4. Troubleshooting

3. Optional
Accessories

2. Setup & Use

1. Overview

TOP PANEL CONTROLS AND CONNECTIONS

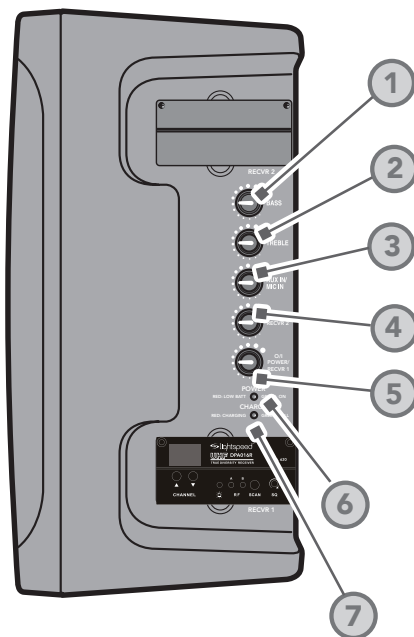

1. **BASS:** Controls the level of low frequency sound output for the system.
2. **TREBLE:** Controls the level of high frequency sound output for the system.

Note: Reducing Feedback

The BASS and TREBLE controls can be used to reduce feedback ("squealing" or "howling"). If you hear high-pitched squealing, lower the treble setting. If you hear low-pitched howling, lower the bass setting.


3. **AUX IN/MIC IN:** Controls the volume of a wired microphone plugged into MIC IN on the back of the system and the volume of an auxiliary piece of equipment plugged into the AUX IN on the

back of the system.

4. **WIRELESS RECVR 2:** Controls the volume of Wireless Microphone 2 if a second wireless receiver is installed.
5. **POWER/WIRELESS RECVR 1:** Turn this knob clockwise to power up the system. Rotate to adjust the volume of Wireless Microphone 1.
6. **POWER LED:** Green = Power On. Red = Low Battery
7. **CHARGING LED:** Green = Full Charge. Red = Charging

***Note:** Internal Delta PA lithium ion battery must be replaced by licensed Lightspeed service center. Broken warning label will void warranty.

REAR PANEL CONTROLS AND CONNECTIONS

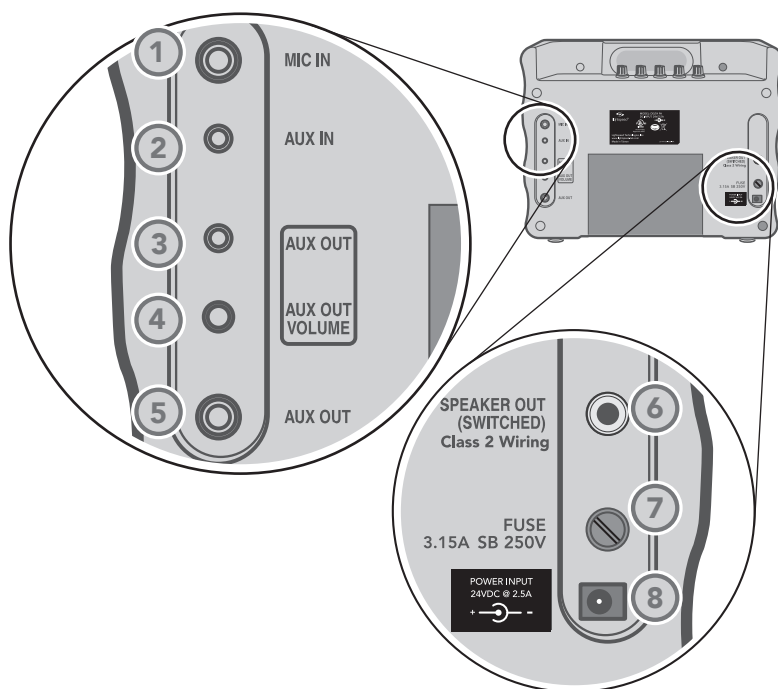

1. **MIC IN:** This 1/4" jack provides an input for a wired handheld microphone.
2. **AUX IN:** This 3.5 mm jack provides an input for audio from an external device, such as a CD player, MP3 player, TV/VCR, computer, etc.
3. **AUX OUT:** This 3.5 mm jack provides an adjustable-level audio output that can be connected to a recorder or assistive listening device.
4. **AUX OUT VOLUME:** This knob controls the level of the 3.5 mm AUX OUT jack. Counterclockwise represents a microphone level signal, while fully clockwise represents a line level signal.
5. **AUX OUT:** This 1/4" jack provides

a line level output signal that can be connected to a recorder, assistive listening device, etc.

6. **SPEAKER OUT (SWITCHED):** This 1/4" jack can be used to connect to an external passive speaker. [NOTE: connection to this jack will mute the internal speaker of the DELTA PA.]

***Note:** Wiring to these terminals should follow the Class 2 wiring methods as outlined in the National Electric Code.

7. **FUSE:** The fuse holder is accessible using a flat-blade screwdriver. Push in and rotate 1/4 turn counterclockwise to remove. [NOTE: replacement is a 3.15A SB 250V slow blow fuse.]
8. **DC POWER:** This jack provides a connection for the DELTA PA power supply.

5. Warranty, Safety & Specifications

4. Troubleshooting

3. Optional Accessories


2. Setup & Use

1. Overview

INSTALLING OR REPLACING A RECEIVER MODULE

NOTE: Make sure the DELTA PA is turned off.

1. Remove the two screws securing the module panel using a small phillips head screwdriver.
2. Remove the module from the enclosure by carefully inserting the blade of a small, flat-blade screwdriver under the face plate edge and nudging it upward.
3. Grasp the edges of the module with both hands and slide it out.
4. Install the new module by aligning it with the guide rails and sliding all the way in to engage the connector at the rear of the module.
5. Replace the two screws.

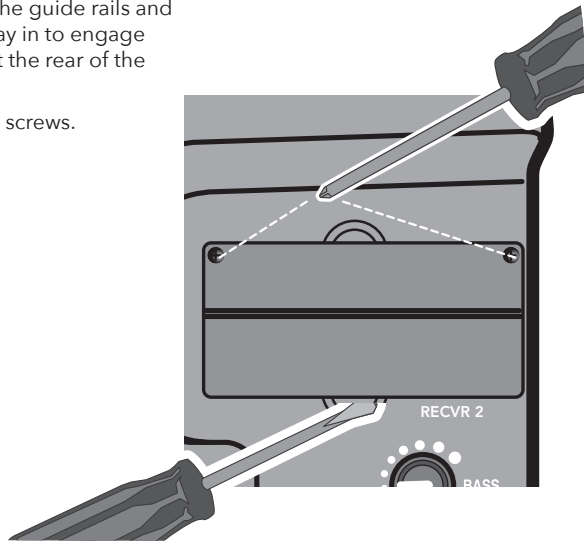


SECTION 2:

SET-UP & USE

1. CONNECTING THE DELTA PA RECEIVER TO A POWER SUPPLY


Note: When the DELTA PA is received, plug in the power supply and let charge overnight before using.

1. Locate the power supply.
2. Insert the DC connector into the "POWER INPUT" connector on the bottom of the DELTA PA and plug the other end to an electrical outlet.

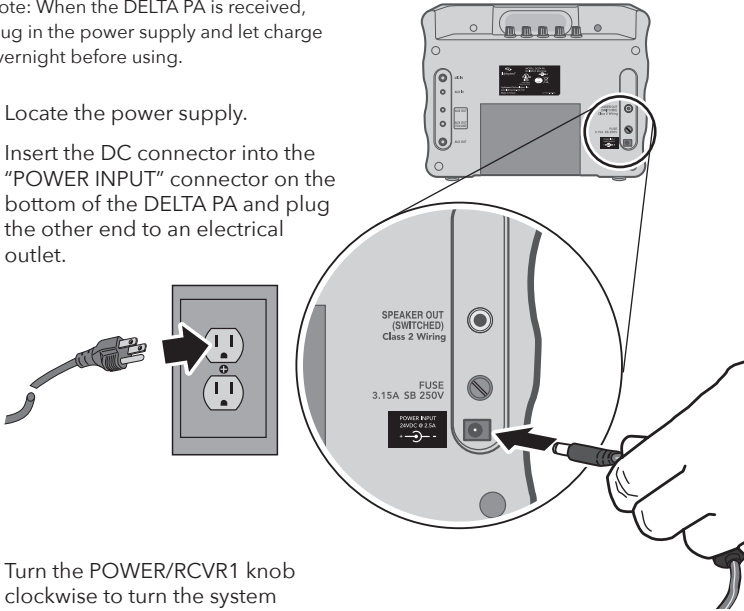


3. Turn the POWER/RCVR1 knob clockwise to turn the system on.
4. The green LED light next to the knob will illuminate to confirm the system is powered up.

***Note:** The DELTA PA can operate on either DC power or battery power.

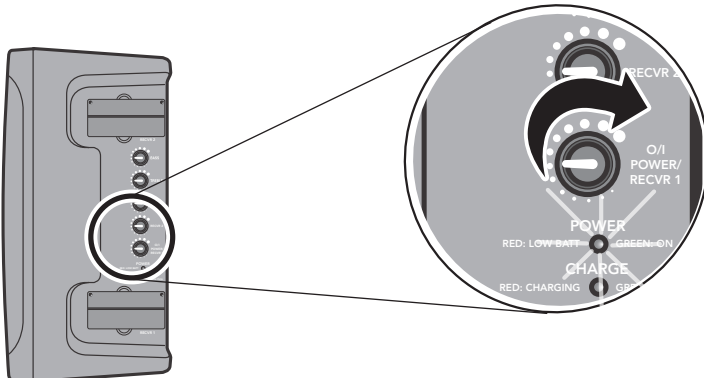

2A. SETTING UP ONE DELTA PA RECEIVER

1. Turn the DELTA PA ON by rotating the POWER/RCVR 1 knob clockwise. The green LED will light.

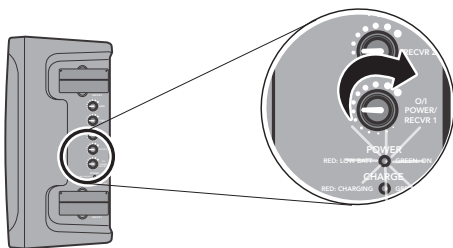


Channel Selection: Receiver

Each Receiver has 16 user-selectable channels to choose from. You can either select a channel manually or by pressing the SCAN button, which will automatically select a clear channel.




2. Clear Channel SCAN (recommended):

A) Make sure the transmitter(s) is OFF before pressing this button. When this button is pressed, the receiver will cycle through all 16 channels and select a clear frequency. (This process takes about 20 seconds.)

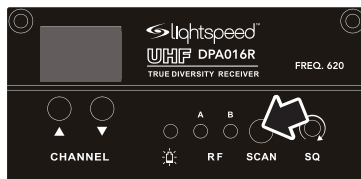

B) Once the receiver selects the clear channel, you will need to select the same channel on the corresponding transmitter (handheld or belt-pack). See pages 14 and 19 for instructions.

NOTE There are 3 different groupings of 16 channels available (620, 640, 660 MHz). Make sure the receiver module frequency group is the same frequency group as the transmitter.

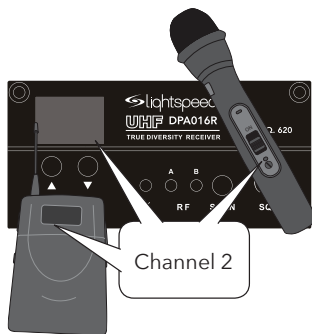

2B. USING MORE THAN ONE DELTA PA RECEIVER



If you have a second DELTA PA:

- A) Verify that RECVR 1 transmitter and receiver 1 are on and set to the same clear channel.
- B) Make sure the transmitter for RECVR 2 is turned off.
- C) Press the SCAN button on the RECVR 2.
- D) After the RECVR 2 receiver selects a clear channel, set the RECVR 2 transmitter (handheld or belt-pack) to the selected channel. See pages 14 and 19 for instructions.

3. Manual Channel Selection:

- A) Pressing the UP CHANNEL button increases the channel number by one.
- B) Pressing the DOWN CHANNEL button decreases the channel number by one.
- C) Once a frequency is selected, you will need to select the same channel on the corresponding transmitter (handheld or belt-pack). See pages 14 and 19 for instructions.

- 4. Set the Receiver 1 and Receiver 2 channels on the second DELTA PA to be the same as the first DELTA PA.

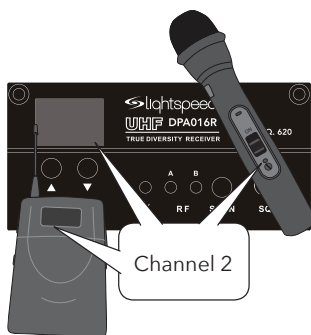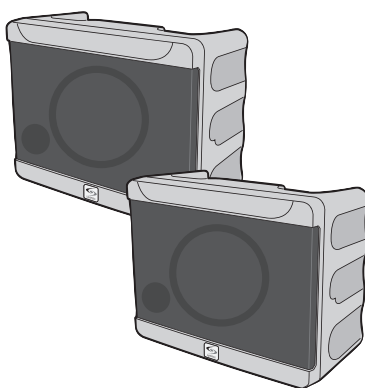


3. CHANNEL SELECTION: HANDHELD TRANSMITTER

Once a channel has been selected on the receiver, you now need to select that same channel on the handheld transmitter. If you have a belt-pack transmitter, go to page 19 for channel selection instructions.



Same
Channel

1. Turn on the microphone by sliding the power button on the barrel forward. The LED will flash red.
2. Use a screwdriver to set the channel switch to the current channel shown on the RECVR screen.

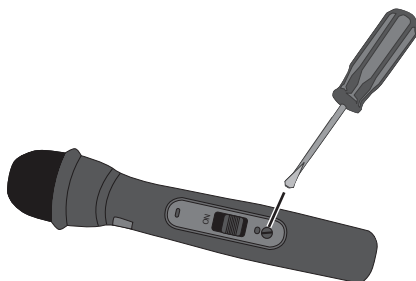

Transmitters and receivers are available in 3 different frequency groups (620, 640, 660 MHz). Verify that the receiver frequency matches the letter code on the silver sticker in the battery compartment of the transmitter.

Model Number: HM016
Serial Number

HM01614324024



FREQUENCY 660 MADE IN TAIWAN




Frequency

4. BATTERY LOW INDICATOR AND BATTERY TYPE ON HANDHELD MICROPHONE

Battery Low Indicator

Battery low indicator is located above the power switch. It glows red when the battery charge is low and recharging is necessary

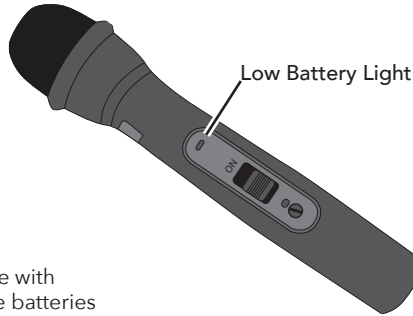


Battery Type

The transmitter will operate with either standard AA alkaline batteries or nickel metal hydride (NiMH) rechargeable batteries. Since these types of batteries have different characteristics, it is important not to mix battery types. Use only AA NiMH batteries when recharging.

NOTE: Do not mix battery types.

WARNING: Do not use NiCad batteries! They will not charge properly and may cause damage to the transmitter.

Lightspeed recommends Panasonic or Energizer batteries. Duracell may not work.

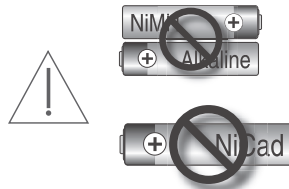


5. REPLACING BATTERIES IN HANDHELD MICROPHONE

Replacing the Batteries

1. Unscrew the end cap to reveal the battery compartment.
2. Remove or replace the batteries as shown. The microphone requires two AA sized batteries stacked end to end.
3. Note the polarity in the battery compartment.

IMPORTANT: Replace batteries with the same type, (alkaline or NiMH), that were installed in your Handheld Microphone. Lightspeed recommends Panasonic or Energizer batteries. Duracell may not work properly.

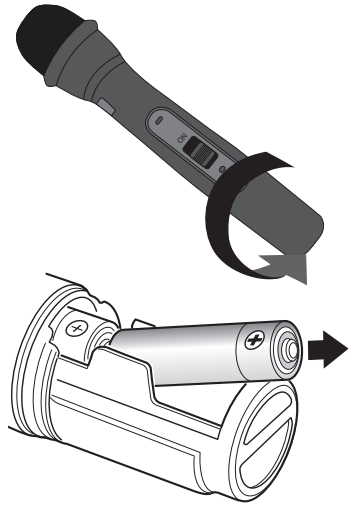

6. RECHARGING BATTERIES IN HANDHELD MICROPHONE


Recharging the Batteries

(NiMH Rechargeable Batteries ONLY):

Make sure there are NiMH rechargeable batteries in the transmitter before plugging in the charger. A full charge will be attained in 8-10 hours. Fully charged Lightspeed microphones will last over 7 hours.

WARNING: Do not attempt to charge alkaline batteries. They can overheat and expand, creating a significant hazard and damaging the transmitter. (This is not covered by warranty.)


1. Switch the transmitter power OFF.
2. Insert the small DC plug into the jack on the bottom of the transmitter.
3. Plug the other end of the charger into any standard 110 VAC outlet.
4. The red LED on the charger will light, indicating that charging is in progress.
5. When the batteries are fully charged, the LED on the charger will glow green.

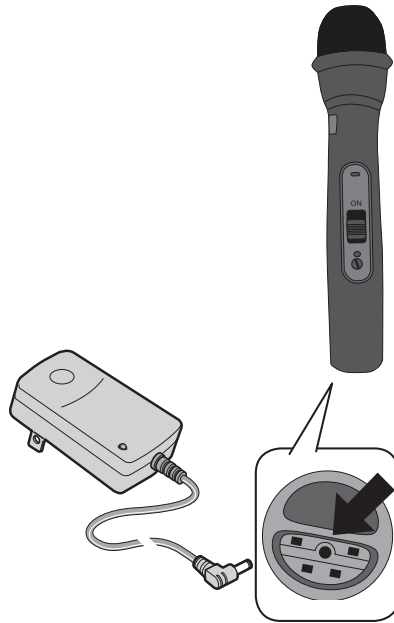

7. CONNECTING AND PLACING BELT-PACK TRANSMITTER


Connecting the Microphone

To connect the microphone, simply insert the microphone connector into the TA4F connector on top of the transmitter. To remove, press the black button on the microphone connector and pull out.

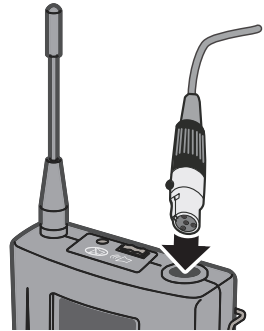

Microphone Options

Lightspeed offers two types of microphones that can be used with this system. The BP016 Transmitter can be used with either a lapel style microphone or a headset microphone. Both plug into the top of the transmitter as shown.

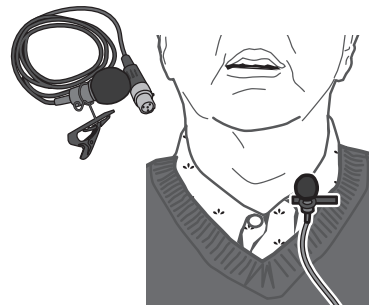


Lapel Microphone Placement

Simply connect the microphone cord directly into the jack on top of the transmitter and clip the microphone to lapel or collar. For optimal sound, position the microphone as close to the mouth as possible.

Headset Microphone Placement

Simply connect the microphone cord directly into the jack on top of the transmitter and place the headset around the back of the head. For optimal sound, position the microphone at the corner of the mouth.

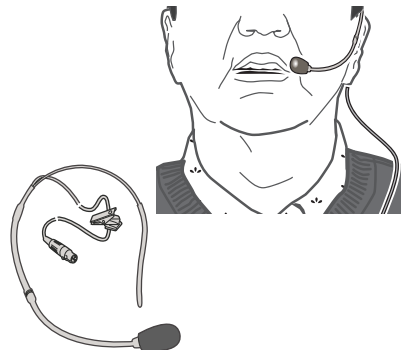


8. CHANNEL SELECTION: BELT-PACK TRANSMITTER

Channel Selection:

Once a channel has been selected on the receiver, you now need to select that same channel on the belt-pack transmitter.

1. Turn the transmitter power on by sliding the PWR button to on. The LED will flash red.
2. Open the battery compartment door by depressing the latches on each side of the transmitter.
3. Use the screwdriver channel set to switch to the current channel shown on the receiver.

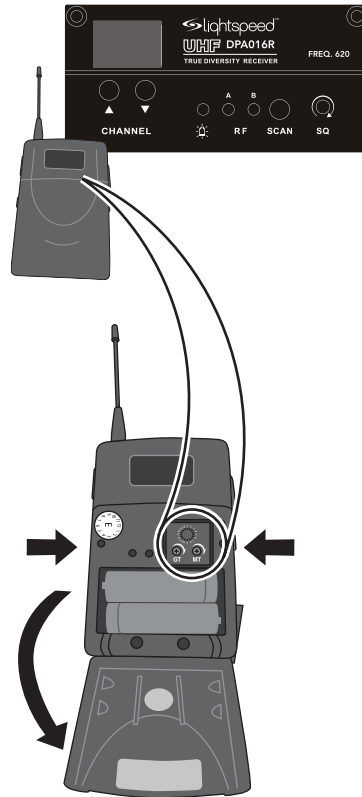

Transmitters and receivers are available in 3 different frequency groups (620, 640, 660 MHz). Verify that the frequency group of the receiver matches the letter code on the silver sticker in the battery compartment of the transmitter.

Model Number: BP016

Serial Number

BP01614324024



FREQUENCY 660 MADE IN TAIWAN

5. Warranty, Safety
& Specifications

4. Troubleshooting

3. Optional
Accessories

2. Setup & Use

1. Overview


9. GAIN ADJUST ON BELT-PACK TRANSMITTER

Gain Adjust:

When changing microphones or users, it may be necessary to adjust the transmitter gain based on differing microphones sensitivities and voice levels.

To adjust the gain:

1. Open the battery compartment door by depressing the latches on each side of the transmitter.
2. Turn the MT dial clockwise to increase the gain and counterclockwise to decrease the gain.

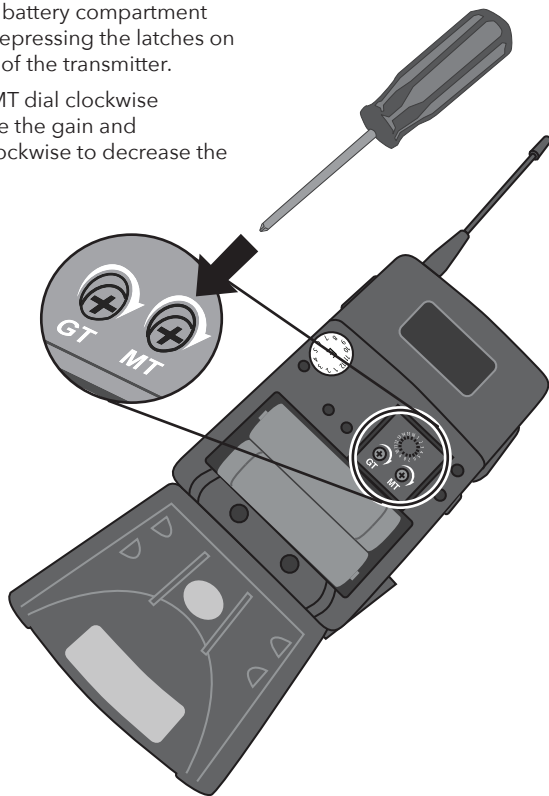


NOTE: If you are using a high impedance source, such as a guitar, it will be necessary to adjust the GT dial. Using a high impedance source requires a special cable. Contact Lightspeed Customer Service at 800-732-8999 for more information. Customers in Canada should contact their local reseller.

10. BATTERY LOW INDICATOR AND TYPE ON BELT-PACK TRANSMITTER

Battery Low Indicator

Battery low indicator is located next to the power switch. It glows red when the battery charge is low and recharging is necessary.

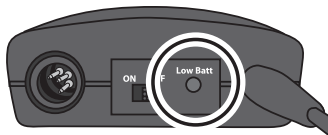


Battery Type

The transmitter will operate with either standard AA alkaline batteries or nickel metal hydride (NiMH) rechargeable batteries. Since these types of batteries have different characteristics, it is important not to mix battery types. Use only AA NiMH batteries when recharging.

NOTE: Do not mix battery types.

WARNING: Do not use NiCad batteries! They will not charge properly and may cause damage to the transmitter.

Lightspeed recommends Panasonic or Energizer batteries. Duracell may not work.

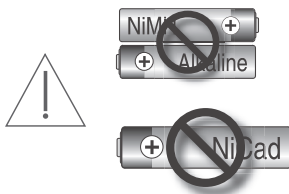


11. REPLACING BATTERIES IN BELT-PACK TRANSMITTER

Replacing the Batteries:

1. Open the battery compartment door by depressing the latches on each side of the transmitter.
2. Remove or replace the batteries and snap the door shut. The belt-pack requires two AA sized batteries.
3. Note the polarity in the battery compartment.

IMPORTANT: Replace batteries with the same type, (alkaline or NiMH), that were installed in your belt-pack transmitter. Lightspeed recommends Panasonic or Energizer batteries. Duracell may not work properly.

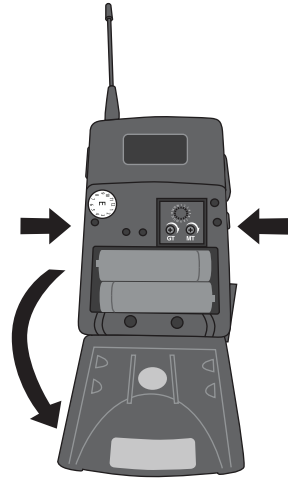

12. RECHARGING BATTERIES IN BELT-PACK TRANSMITTER


Recharging the Batteries

(NiMH Rechargeable Batteries ONLY):

Make sure there are NiMH rechargeable batteries in the transmitter before plugging in the charger. Fully charged Lightspeed transmitters will last over 7 hours. A full charge will be attained in 8-10 hours.


WARNING: Do not attempt to charge alkaline batteries. They can overheat and expand, creating a significant hazard and damaging the transmitter. (This is not covered by warranty.)

1. Switch the transmitter power off.
2. Insert the small DC plug into the jack on the side of the transmitter.
3. Plug the other end of the charger into any standard 110 VAC outlet.
4. The red LED on the charger will light, indicating that charging is in progress.
5. When the batteries are fully charged, the LED on the charger will glow green.

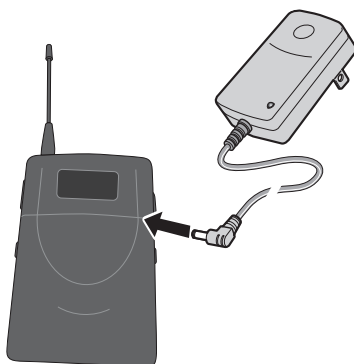


DAILY USE INSTRUCTIONS

1. **Wireless Microphone Operation RF Indicator Lights:** When both the system and the transmitter are on and operating on the same channel you will see a blue glowing RF Indicator Light (either A or B) on the receiver.

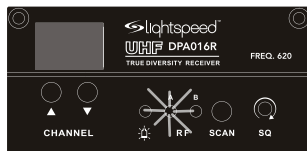

2. **VOLUME ADJUSTMENT:** While speaking into the microphone, slowly turn the RECVR1 volume knob (or RECVR2, depending on which microphone you are operating) clockwise until you reach the desired level.

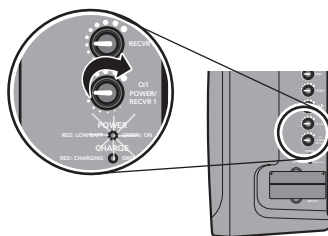


NOTE: Do not stand directly in front of the DELTA PA speaker with the microphone on. This will result in feedback or 'squealing.' It is best to stand behind or to the side of the unit when setting volume level.

3. **SQUELCH ADJUSTMENT:**
Adjusting the squelch level may be necessary to block out potential interference in areas that have very high radio traffic.
 - Maximum squelch (full clockwise) reduces reception range but also reduces the potential for system interference.
 - Minimum squelch (full counter-clockwise) increases reception range, but also increases the potential for system interference.



NOTE: In most cases it will not be necessary to adjust the squelch level. The system already has a clear channel scanner to take care of most interference problems.


4. **TRANSMITTER LOW BATTERY INDICATOR:** This LED will light to indicate the batteries in the corresponding transmitter are low and need to be replaced or recharged.

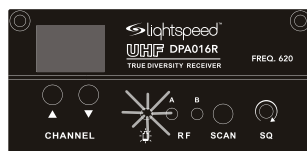

SECTION 3:


OPTIONAL ACCESSORIES

HANDHELD MICROPHONE TRANSMITTER

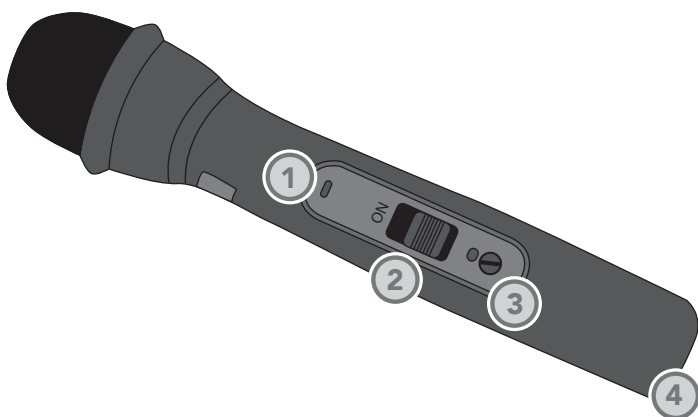

- 1. RED LED:** Lights up briefly when power is switched on, flashes continuously when audio is muted.
- 2. POWER ON/OFF:** Turns the audio on and off. The red LED will flash when power is turned on.
- 3. CHANNEL SWITCH:** Screwdriver adjust to set channel 1-16 to match the channel setting of its receiver.
- 4. BATTERY COMPARTMENT:** Bottom section of microphone barrel unscrews to reveal battery compartment.

BELT-PACK TRANSMITTER

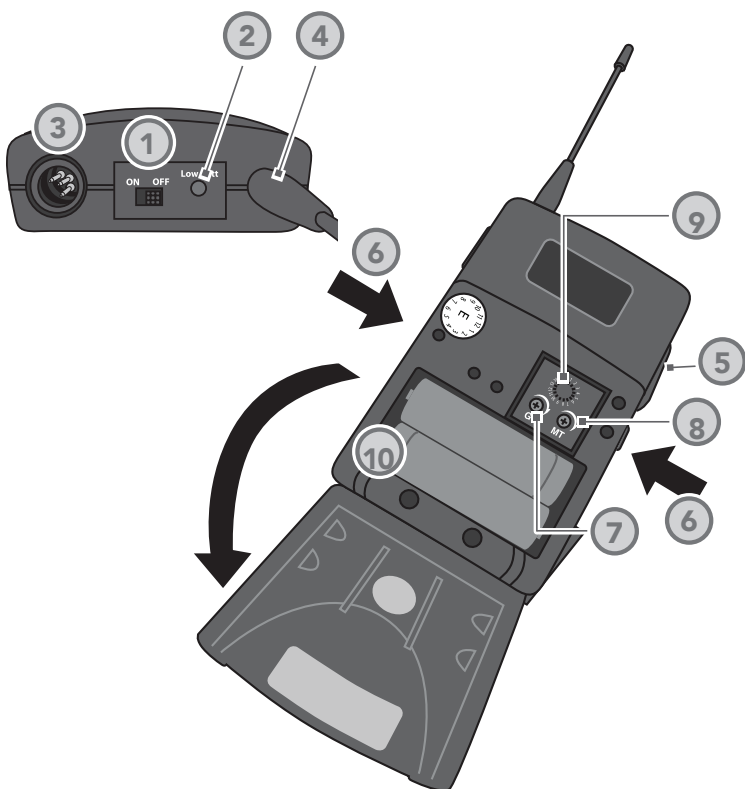

1. ON/OFF BUTTON

2. RED LED: Lights up briefly when power is switched on.

3. MICROPHONE JACK:

Microphone connects to transmitter here.

4. ANTENNA

5. BATTERY CHARGER JACK:

Optional battery charger plugs in here (for NiMH batteries only.)

6. DOOR LATCHES: Press both latches to open the battery compartment door.

7. GT (TRANSMITTER GAIN):

Provides adjustment for differing voice levels and microphone sensitivities.

8. MT (MICROPHONE GAIN):

Provides adjustment for differing levels of high impedance sources, i.e. guitars.

9. CHANNEL SET SWITCH:

Screwdriver adjust to set the channel 1-16 to match its receiver channel.

10. BATTERY COMPARTMENT

OPTIONAL SPEAKER STAND AND BRACKET ASSEMBLY

1. Position the legs of the speaker stand for the appropriate height and width for the application.
2. Extend the speaker stand shaft to desired height.
3. Insert safety pin at an appropriate level. (see figure 1)

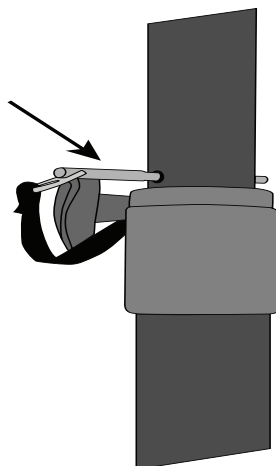


figure 1

5. Place the Delta PA (DPA) amplifier upside down on a table top.
6. Locate the 3 screw holes on the bottom of the amplifier.
7. Align the screw holes with the 3 holes on the bracket as shown in figure 2.

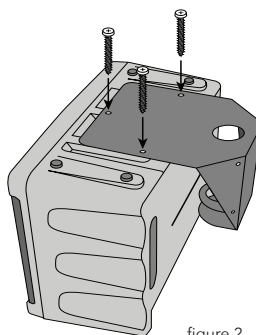


figure 2

8. With the provided screws, attach the bracket to the DPA.
9. Place the assembled DPA with bracket onto the speaker stand as shown in figure 3.
10. Ensure the the top of the speaker stand is touching the top plate of the bracket..

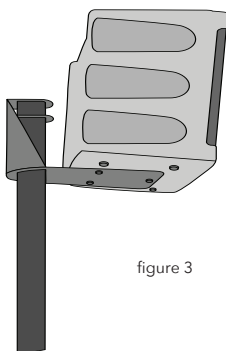


figure 3

SECTION 4:

TROUBLESHOOTING

COMMON PROBLEMS AND SOLUTIONS

Note:

No sound when someone speaks into the wireless microphone:

1. DELTA PA power should be on. The green LED should be lit. If it does not light when the system is switched on, make sure the AC power supply is plugged in.
2. Microphone/transmitter power should be on. If the low battery indicator is on (red) the batteries are most likely too weak. If the batteries are rechargeable, plug the microphone/transmitter into the charger. If the batteries are alkaline, replace them with new alkaline batteries

WARNING: Do not attempt to charge alkaline batteries. They can overheat and expand, creating a significant hazard and damaging the warranty. (This is not covered by warranty.).

3. The transmitter and receiver should be set to the same channel. The blue RF LED (A or B) should be lit.
4. Verify that receiver and transmitter are in the same frequency group. Turn the DELTA PA off and then on again. The letter code from the frequency group will blink on the receiver module. Open the battery compartment on the transmitter and be sure that frequency group printed on the sticker matches the frequency group letter code that blinked when the DELTA PA powered on. If the letters are different, find a microphone or belt-pack with the same frequency group as the receiver indicates when the DELTA PA is turned on.

The wireless mic is experiencing drop-out or interference:

1. The wireless frequency being used may not be a clear channel. Turn the transmitter off and press the SCAN button on the receiver to find a clear frequency. Then select the same channel on the transmitter.
2. Transmitter is out of range of receiver. The transmitters have a maximum range of about 300-350 feet in an open field environment. This range can be dramatically reduced indoors and outdoors when large objects (such as a wall) may be obstructing the path directly between transmitter and receiver. If so, position the two closer together.
3. Batteries are very weak. Right before the batteries are about to die, the overall performance of the system can be drastically lessened. Check the battery status of the transmitter.

Low Volume or Feedback:

1. Ensure microphone is positioned appropriately.
2. Check volume level on the amplifier. If the volume is too high, feedback will occur. Adjust accordingly.

If you review these instructions and still have questions, write down the serial number and model number of your system and call Lightspeed Technical Services at 800.732.8999, 5 a.m. – 5 p.m., PST. Customers in Canada should call their local reseller.

SECTION 5:

WARRANTY, SAFETY & SPECIFICATIONS

Lightspeed Classroom Audio Systems are guaranteed against malfunction due to defects in materials and workmanship for a period of TWO (2) YEARS, beginning at the date of the purchase invoice. If such malfunction occurs, the product will be repaired or replaced (at Lightspeed's option) without charge during the warranty period, subject to the following conditions:

1. The product must have been purchased from an authorized Lightspeed Technologies Dealer or representative.
2. Lightspeed Technologies must perform all warranty service. Any service performed without the authorization of Lightspeed Technologies will void the entire warranty.
3. This warranty does not cover any product that has been subjected to negligent use, connection to improper power source, misuse, or operated beyond its manufactured specifications and limits, or has not been reasonably maintained.
4. Warranty shall not apply to alkaline or NiMH batteries, exterior finish, AC power cords, bulbs, or any other failings due to

normal wear.

5. Warranty is void when equipment is subjected to adverse temperature, humidity, moisture, or other conditions that are not considered normal environmental conditions.
6. This warranty excludes all damages or defects caused by shipping, transporting, or inadequate packaging for shipping.
7. Prepaid shipping label provided by Lightspeed for warranty repair within the U.S. ***Customers in Canada should contact their local reseller for service needs.***

The warranty period for each system and component type is listed below:

DELTA PA: Two (2) years from the date of original purchase.

RF Wireless Transmitters and Receivers: Two (2) years from the date of purchase.

NiMH Batteries: One (1) year from the date of purchase.

Microphones and Cases: One (1) year from date of purchase.

Products will be replaced or repaired at Lightspeed Technologies' option during the warranty period.

For warranty service, please contact Lightspeed Customer Service Department to obtain return authorization approval and an RA number.

Our Service Department (800.732.8999, 5 a.m. – 5 p.m., PST) will handle your repair/replacement needs. *Customers in Canada should contact their local reseller.*

SAFETY WARNINGS

CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED PERSONNEL

LIGHTSPEED TECHNOLOGIES, INC. PH: 1.800.732.8999



CAUTION

RISK OF ELECTRICAL SHOCK
DO NOT OPEN



WARNING

WARNING: To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

LM60-FIN-1044310-01



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product is listed to UL standards and requirements for electrical safety by Underwriters Laboratories Inc.



FCC Caution

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

DELTA PA & BP016 & HM016

INDUSTRY CANADA CAUTION

THIS DEVICE COMPLIES WITH INDUSTRY CANADA LICENCE-EXEMPT RSS-123 STANDARD.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION OF THE DEVICE.

BP016 & HM016

FCC CAUTION

THIS DEVICE COMPLIES WITH PART 74 OF THE FCC RULES.

THIS EQUIPMENT COMPLIES WITH FCC RF RADIATION EXPOSURE LIMITS SET FORTH FOR AN UNCONTROLLED ENVIRONMENT.

SYSTEM SPECIFICATIONS

OVERALL SPECIFICATIONS

Nominal SPL [1W/1M]	89 dB
Maximum SPL	102 dB
System Power [RMS]	30 W at 2 Ω
Music Power [RMS]	40 W at 2 Ω
Amplifier Type	Analog Class AB
Frequency Response of amplifier	90 Hz - 18 kHz
Speaker System	Full-Range 6.5"/4 Ω
Microphone Input	¼ inch phone jack
Wireless Microphones	Up to two 16-Channel UHF True Diversity
Line Input	3.5 mm
Line Output	3.5mm and ¼ inch
Tone Controls	Bass and Treble
Speaker Output	1 switched 2 Ω
Dimensions [H x W x D inches]	9.75 x 12.5 x 6.25
Weight	7.2 lbs./20.4 kg

5. Warranty, Safety
& Specifications

4. Troubleshooting

3. Optional
Accessories

2. Setup & Use

1. Overview

SYSTEM SPECIFICATIONS CONT'D

RECEIVER SPECIFICATIONS

Carrier System	Microprocessor Controlled PLL Synthesized
Macro Frequency Range	620 to 679.75 MHz [3 Macro-Groups]
Micro Frequency Range	25 MHz each Macro-Group
Selectable Frequencies	16
Deviation	± 40 KHz Nominal
Sensitivity	-100 dBm at S/N ratio of >80 dB
Tone-code Frequency	32.768 KHz
Image Rejection	>85 dB
S/N Ratio [Max]	>105 dB

TRANSMITTER SPECIFICATIONS

HM-016 Handheld Microphone

RF Power Output	50 mW Maximum
Spurious Emission	>60 dB below the carrier
Macro Frequency Range	620 MHz to 679.75 MHz [3 Macro-Groups]
Selectable Frequencies	16
Tone-Code Frequency	32.768 KHz
Pre-Emphasis	50 µsec
Limiter Range	>30 dB or audio overload
Battery Type	2 AA
Battery Life [Alkaline]	Approx. 8 Hours
Weight w/o Batteries	4.2 oz/120 g

BP-016 Belt-pack

RF Power Output	50 mW Maximum
Spurious Emission	>60 dB below the carrier
Macro Frequency Range	620 MHz to 679.75 MHz [3 Macro-Groups]
Selectable Frequencies	16
Tone-Code Frequency	32.768 KHz
Pre-Emphasis	50 µsec
Limiter Range	>30 dB or audio overload
Battery Type	2 AA
Battery Life [Alkaline]	Approx. 8 Hours
Microphone Connector	TA4F
Weight w/o Batteries	3 oz/85 g

CHANNEL FREQUENCY ASSIGNMENT

EE	620.000 - 639.750
HH	640.000 - 659.750
LL	660.000 - 679.750



LIGHTSPEED TECHNOLOGIES

11509 SW HERMAN ROAD / TUALATIN, OR 97062

TOLL FREE: 800.732.8999 / PHONE: 503.684.5538 / FAX:

503.684.3197

LIGHTSPEED-TEK.COM

MN0374US01-7