

LEGAL INFORMATION
Copyright © 2012 ZTE CORPORATION.
All rights reserved.
No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.
The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset lock code.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is about one inch from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)

1

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Do not connect the phone with any incompatible enhancement.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not attempt to disassemble the mobile phone or battery.
- Do not charge the mobile phone without battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.

3

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Switch off your wireless device whenever you are instructed to do so by airport or airline staff.
- Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.

5

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for demonstration of functions. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because the handset function has been updated, please refer to the follow-up public information from ZTE.

7

Function	Description
Left soft key	Performs the function indicated at the left bottom of the screen.
Right soft key	Performs the function indicated at the right bottom of the screen.
Center key	Press to confirm actions and make selections.
4-Way Navigation keys	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus.
Send key	Press to dial a phone number or answer a call, or view the call history.
End/Power key	Press to exit to the idle mode. Hold to switch on/off the phone.
QWERTY keyboard	Press to enter characters 0-9, the alphabets from a-z and symbols.

Note: In this User Manual, "press a key" means to press the key and release it, while "hold a key" means to press the key for at least two seconds and then release it.

9

ZTE GSM

ZTE-G R237

English

User Manual

- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

2

- Do not connect the phone with any incompatible enhancement.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmosphere, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

4

- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and idle time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

6

Key Functions



8

Locking and Unlocking the Keypad

In idle screen, hold **Key** to lock the keypad. To unlock the keypad, press **Left soft key** and then press **Key**. Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

Status Bar Icons

Indicator	What it means	Indicator	What it means
	Signal strength		New message
	Silent		Calling or in call
	General		New MMS
	Outdoor		Battery status
	Meeting		Alarm clock set

Battery

The lithium ion battery of the mobile phone can be immediately used after unpacking.


10

Installing the battery

1. Pull the battery cover from the notch on the bottom and remove the cover.
2. Insert the battery by aligning the gold-colored contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.



Remove the battery cover Push down the battery

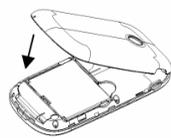

Replace the battery cover

Removing the battery

1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.

11

Inserting the SIM card

Insert the SIM card as follows:

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. Remove the battery if it is already installed.
4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downward.
5. Replace the battery first.
6. Replace the battery cover.



Insert the SIM card

SIM card (Subscriber Identity Module) is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

13

Entering letters

Press A ~ Z to enter desired characters. It does not work in numeric mode.

- ◆ Press **[Shift]** to switch between uppercase and lowercase.
 - ◆ Press **[Space]** to enter a space.
 - ◆ Press **[Delete]** to delete letters left of the cursor.
- Entering numbers
In numeric mode, use the numeric keys to enter numbers.
 - Entering Symbols
Press **Options**→**Input method**→**Insert symbol**, then select desired symbol.

Adding contact to the Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your Phonebook. You can then access these numbers quickly and easily.

1. Go to **Menu**→**Phonebook**→**Add new contact**→**Choose storage**.
 2. Edit the information and save it.
- You can also save a number right after you've made or received a phone call or a text message from someone who is not yet in your Phonebook list.
 - To delete someone from your Phonebook list, first select the name, then select **Options**→**Delete**.

15

3. When you finish writing an SMS/MMS, select **Options** to send or save the message.

- Receive a message
Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.
 1. Press **View** to open the new message. You can also go to **Inbox** to read the message.
 2. Use the **Up/Down keys** to view the message.
 3. While the message is open, use **Options** to reply, delete, or forward the message. You can also call back the sender.

User profiles

Go to **Menu**→**User profiles**. You can select **Options**→**Activate** to activate a profile. Or you can select **Options**→**Customize** to edit a profile.

Call center

Go to **Menu**→**Call center**.

- Call history
Dialed calls, Received calls and Missed calls are saved in Call history. If the records are full, the earliest saved records will be deleted. Also, you can delete call logs and view call timers in Call history.
- Call settings
Go to **Menu**→**Call center**→**Call settings**. You can set call waiting, call divert and call barring and so on.

17

Organizer

Go to **Menu**→**Organizer**.

- Calendar
Go to **Organizer**→**Calendar**. The calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special color.
- Alarm
Go to **Organizer**→**Alarm**. You can view and edit the alarm clocks settings. You can also enable or disable the alarms.

Fun&Games

Go to **Menu**→**Fun&Games**→**Games**.

Your mobile phone has classic games and applications pre-loaded. Select a game and start it, you can view **Help** to see the rules of the game.

Note: please take your handset as the standard.

19

- Video player
You can select a video and play it.
- Audio player
You can play the audio in your phone or memory card. **Note:** Before using this function, you must insert the memory card first.
- FM radio
With the radio, you can search for radio channels and listen to them. In the FM radio interface, you can press the **Up/Down keys** to adjust volume, press the **Left/Right keys** to tune the frequency, and press the **Center key** to pause. Select **Options** to enter the submenu.

Note: The quality of the radio broadcast depends on the coverage of the radio station in that particular area. **Note:** please take your handset as the standard.

File manager

Go to **Menu**→**File manager**. You can check all the folders in the phone or memory card, create new ones or rename, delete the folders, etc.

Note: When you select **Format**, the data will be lost, so please be careful with this function.

21

3. Pull the battery up and remove it from the mobile phone.



Remove the battery cover Pull up the battery

Charging the battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the left side of your mobile phone as shown in the diagram.
2. Connect the other end of the travel adapter to the mains socket.
3. When the battery is being charged, the display will show the animation of a battery being filled up.
4. When the battery is fully charged, disconnect the charger.



Charge the battery

12

Inserting the Memory Card

You can use memory card to expand the storage of the phone. You can store or copy files such as photos, music, and so on. Insert the memory card as follows: Open the battery cover and remove the battery. Insert the card with the metal contacts facing down until it clicks to the right



Insert the memory card

Powering your phone on/off

Make sure that the SIM card is in your device and the battery is charged. Hold the **End/Power key** to power on/off the phone.

Writing text

- Text Mode
Your mobile phone provides the following input methods: Smart abc mode, abc mode and numeric (123) mode.

14

Making and receiving calls

The most basic way to make a call is to input the number in the standby mode and press the **Send key**. You can also make a call from the Phonebook list.

To call someone: Go to **Menu**→**Phonebook**. Use the Up/Down keys to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call to find the right name, and press the **Send key**.

- To receive a call, press the **Send key**.
 - To end a call, press the **End/Power key**.
 - To reject a call, press the **End/Power key**.
- Make sure that you are in an area with sufficient signal coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

Sending and receiving messages

You can use your mobile phone to send and receive messages.

- Send a message
 1. Go to **Menu**→**Messaging**→**Write message**.
 2. Write your message. For more information on input method, see section 'Text Input'. When you write an SMS, press **Options**→**Send to**, and edit the recipient. When you write an MMS, you can edit To, Cc, Bcc, Subject and content. In content field, you can select **Options** and then choose add picture, sound, video, subject.

16

Setting your phone

You can adjust various settings of your phone. Go to **Menu**→**Settings**.

- Phone settings: Set time and date and schedule power on/off, select language, set pref. input methods and LCD backlight, etc.
- Network settings: Set to automatically or manually select network and set the preferred networks.
- Security settings: Set security features to protect your phone and SIM card from unauthorized use.
- Connectivity: View data account.
- Restore factory settings: Enter the phone lock code to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.

Note: You may be required to input the phone password in some of the security settings interfaces. The default password is 1234.

18

Extra

Go to **Menu**→**Extra**.

- Calculator
You can perform simple calculations. You can add, subtract, multiply or divide, and select M+, M-, MR, and MC to perform relevant operations. **Note:** This calculator has limited accuracy and rounding errors may occur especially in long division.
- Flashlight
Press **Center key** or **Left soft key** to turn on or off the torch.

Camera

Go to **Menu**→**Camera**.

- Take a photo: aim the camera at the object and then press the **Center key** to take the shot.
 - Configure camera: press the **Left soft key** to configure your camera.
- Note:** please take your handset as the standard.

Multimedia

Go to **Menu**→**Multimedia**.

- Image viewer
You can select an image and view it.
- Video recorder
Aim the camera lens at the object and then press **Center key** to start, press it again to pause, and press **Right soft key** to finish recording.

20

Using Services

Go to **Menu**→**Services**. Services allow you to view internet content. In Services you can use the STK.

- STK
SIM card Toolkit (STK) services are value-added services provided by your network provider. Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.
- Internet service
You can perform the following operations:
 - ◆ Bookmarks: Access your phone's preset websites. Select a bookmark to load the website.
 - ◆ Input address: Input a URL to visit the site.
 - ◆ Recent pages: Display the pages you've visited recently. Select an item to visit the page again.
 - ◆ Settings: You can set Profiles, Browser options and Preferences.

22