

Leisure Massage Chair

**RT6120**  
USER MANUAL

Thank you for purchasing this product. Please carefully read this manual and pay special attention to safety precautions before using the product to ensure correct operation and use. Please keep this manual properly for future reference.

## ▶ CONTENTS

---

Safety precautions-----	1
Name and function of each part-----	3
External structure-----	3
Internal structure-----	3
Controller-----	4
Detailed functions of each part of controller-----	5
Preparation before use-----	7
Installation site-----	7
Installation method-----	7
Moving method-----	10
Power on-----	10
Product storage and maintenance-----	11
Trouble shooting-----	12
Technical parameters-----	13

## ▶ TECHNICAL PARAMETERS

---

Name of product: Leisure Massage Chair

Model No.: RT6120

Rated voltage: 220-240V~

Rated frequency: 50/60Hz

Rated power: 150W

Safety design: Class I

## ▶ TROUBLE SHOOTING

No.	Problem	Possible Cause	Solution
1	The sound “Xu Xu”, “Ta Ta” is heard.	It is a normal sound made by the working motor or the sound is produced when the massage ball is rubbed against the cloth.	It is normal and no need for treatment.
2	The machine can not be started up.	2.1 The power supply plug is detached.	2.1 Insert the power supply plug into the socket again.
		2.2 The power supply switch is not turned on.	2.2 Turn on the switch
		2.3 The fuse of massage chair blew out.	2.3 Replace a new one with the same mode
3	Backrest or legrest can not ascend or descend.	Over pressure is put on backrest or legrest.	Reduce the pressure on backrest or legrest.

If abnormal phenomenon still remains after above measures have been taken to the massage chair, please contact local distributor for repair and maintenance.

## ▶ SAFETY PRECAUTIONS

### Safety Precautions

- ▶ Before using, please read this “SAFETY PRECAUTIONS” carefully to ensure proper operation.
- ▶ The following “SAFETY PRECAUTIONS” is of great help to your correctly use of this massage chair.
- ▶ To clearly indicate the degrees of danger and damage, the classes of accidents caused by incorrect use are classified into “WARNING” and “CAUTION”, instructions marked as followings should be strictly followed:

	<b>WARNING</b>	Improper operation may cause injury to users.
	<b>CAUTION</b>	Improper operation may cause users injury or product damage.
	Forbidden. Specific instruction will be indicated in the diagram drawings.(e.g, the left drawings means disassembly is not allowed.)	
	Compulsory Specific instruction will be indicated in the diagram drawings.(e.g, the left drawings means to disconnect the power plug)	

### WARNING

	<b>COMPULSARY</b>	<p>We recommend that those with any of the following conditions should consult a doctor before using.</p> <ol style="list-style-type: none"> <li>1. Those who are using electronic medical instrument imbedded in the body, such as cardiac pacemaker etc.</li> <li>2. Those that are being treated by doctors, especially those who feel uncomfortable.</li> <li>3. Those who are malignant tumor patients, heart disease patients, acute patients.</li> <li>4. Women who are pregnant or menstruating.</li> <li>5. Those with osteoporosis or fracture spine.</li> <li>6. Those with skin disease or those whose skins are injured.</li> <li>7. Those whose body temperature is over 38 degrees (Febrile Phase).</li> </ol>
	<b>PROHIBITED</b>	<p>Do not allow the mentally disabled to use the chair alone. (It is OK under supervision)</p> <p>Do not allow children play on massage chair.</p> <p>Do not allow more than one person to use this massage chair at a time.</p> <p>If the power cord or power plug becomes damaged in any way you must disconnect from the mains supply immediately and consult an authorized service engineer for repair or replacement.</p> <p>Do not damage, process, excessively bend, pull hard, twist or knot power cord.</p> <p>Do not use is on electric blanket or heating device to avoid fire.</p>
	<b>NO DISASSEMBLY</b>	<p>Anyone else, except maintenance personnel specified by our company, should not disassemble, maintain, or remodel this massage chair. If any problem, please contact local dealer immediately.</p>

## ▶ SAFETY PRECAUTIONS

### CAUTION

 COMPULSARY	Please do not continuously use the massage chair over 30 minutes, and it is limited to massage a particular part of body in 5 minutes.
	Please put the massage chair on flat ground for use.
	When adjusting the legrest or backrest, please do not exert excessive force on it; in addition, keep children and pets well clear.
	When removing power plug, please hold the insulation plug, do not pull power cord.
	Please do not use the power supply that is beyond the specified electric voltage, as this may cause fire disaster or damage massage chair.
	Before using, please uncover the back cushion to check whether backrest or fabric is damaged; if damaged, please stop using this massage chair immediately, and contact franchiser for repair immediately.
	Please do not operate the controller with damp hands, and do not put heavy objects on controller.
	Please do not use other therapeutic equipments together with this massage chair.
	During use, if you feel uncomfortable, please stop use immediately and consult your doctor.
	This massage chair is designed and intended for non commercial household use only, do not use the massage chair for medical treatment.
 PROHIBITED	Do not use the massage chair in damp environment to avoid electric leakage or electric shock.
	Always switch off power and remove the plug from the mains socket immediately after use and before cleaning.
	To avoid causing discomfort, do not use the massage chair immediately after meals.
	Do not fall into sleep on massage chair, when the massage chair is working.
	Do not use the massage chair when you are drunk or feel bad.
 REMOVE PLUG	If the upholstery becomes dirty, please use only known good quality leather cleaner, do not use chemical cleaners, petrol or detergents etc, and do not spray pesticide on it.
	Do not sit on backrest, legrest, or armrest to avoid accidental injury or machine fault.
	Please do not smoke while using the massage chair.
 REMOVE PLUG	Before maintenance, please pull out power plug. In addition, please do not insert or unplug the power plug with damp hands, to avoid electric shock.
	When the massage chair is not in use, please switch off power and remove the plug from socket. When power is off, please cut off power supply immediately and pull out the power plug from socket.

## ▶ PRODUCT MAINTENANCE AND SAFEKEEPING

### 1. Cleaning

- ▶ Before cleaning, make sure that the plug has been pulled out from the socket.
- ▶ Use a piece of cloth that has been dipped with cleaning agents to wipe the main unit of massage chair, and then use a piece of dry and soft cloth to wipe it.

### Caution

- ▶ Do not use corrosive cleaning agents like benzene or thinner to clean the massage chair, otherwise, the color of upholstery will fade or the massage chair will crack or be eroded.
- ▶ Do not iron the upholstery.

### 2. Maintenance

- ▶ Make sure that the plug has been pulled out from the socket.
- ▶ Sweep off the dust. Keep the massage chair clean and away from damp places.
- ▶ If the massage chair is not to be used for a long period of time, please cover the massage chair with a dustproof cover (self provided).

### Caution

- ▶ Do not store the product under direct sunlight or in places with high temperature. This may cause the color of the upholstery to fade.


### 3. Leather and lining

- ▶ Please use soft and dry cloth to clean the machine.
- ▶ Every two or three months, polish the lining with clean cloth that has been dipped with cleaning agents, and then clean it with dry and soft cloth after it dried.

## ▶ PREPARATION BEFORE USE

### Moving methods

- ▶ The product has casters at the bottom and could be moved easily;
- ▶ Adjust the backrest to the highest position
- ▶ Power it off and pull out the plug;
- ▶ Prize the front part of the chair up as shown in the picture below, and move the chair to desirable place with casters.

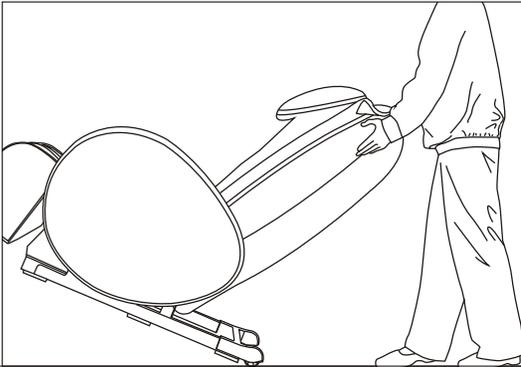

### ⚠ Caution

- ▶ Do not move the chair when people seat on it;
- ▶ Please hold the base and backrest instead of armrests to move the chair (at least 4 people)

### Power on


- ▶ Plug the power plug in a well-grounded three-hole socket;
- ▶ Turn on the power switch on the front lower part of the massage chair.

### ⚠ Caution


- ▶ Please make sure the power wire and all exposed wires are not damaged before power on the chair;
- ▶ Make sure the power switch of the chair is off before connecting to the power.

## ▶ NAME AND FUNCTION OF EACH PART

### External structure

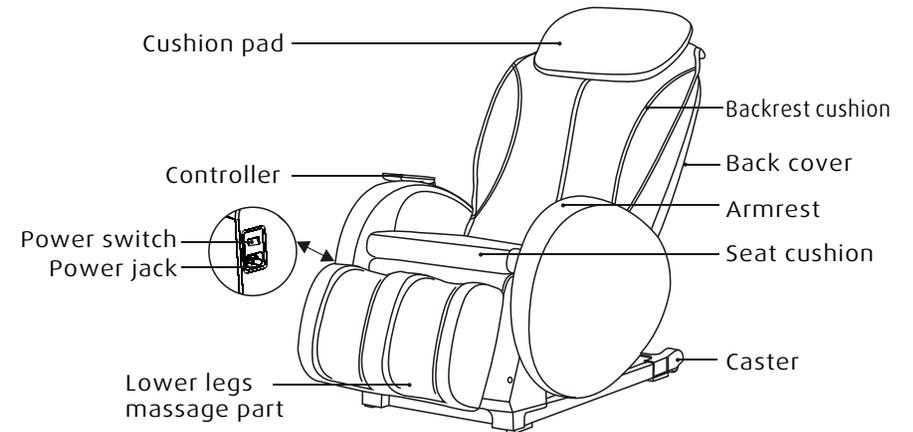


### Internal structure

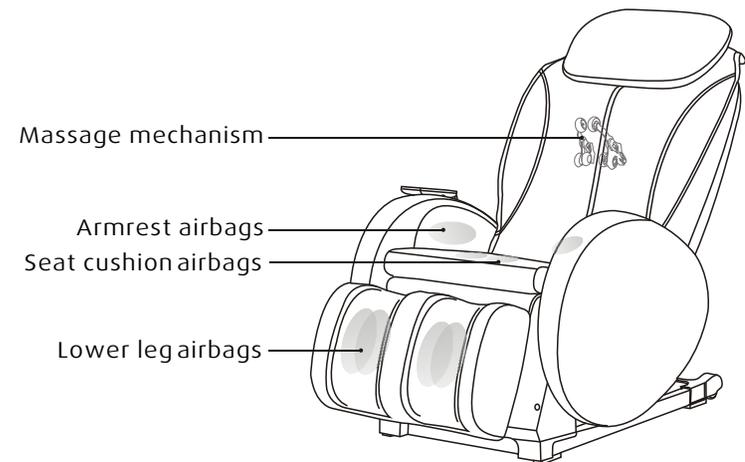

## ▶ NAME AND FUNCTION OF EACH PART

### Controller

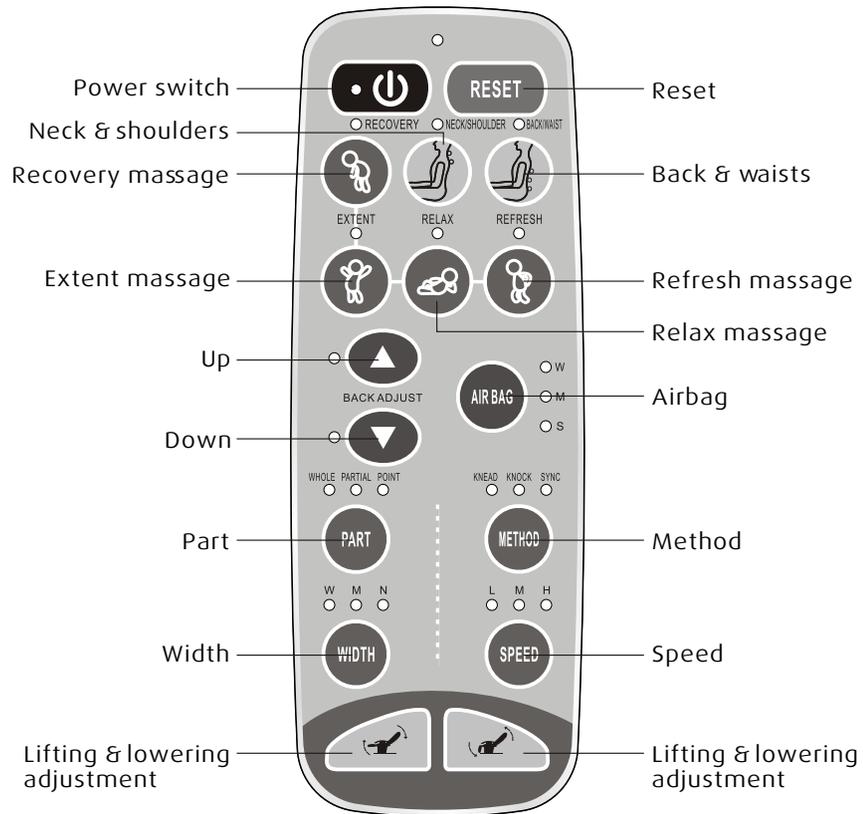


### ⚠ Caution

- ▶ Do not put heavy items on the controller;
- ▶ Do not splash water or other liquid onto the controller panel;
- ▶ Do not allow children to play on the product to avoid any injury;
- ▶ Please turn off the power and pull out the plug when the massage chair is not used in order to prevent children from starting the massage chair unconsciously and getting injured.

## ▶ PREPARATION BEFORE USE


### Step 4:

- ▶ Use the zipper to fix backrest cushion and the cushion pad on the backrest and connect it with seat cushion by zipper.

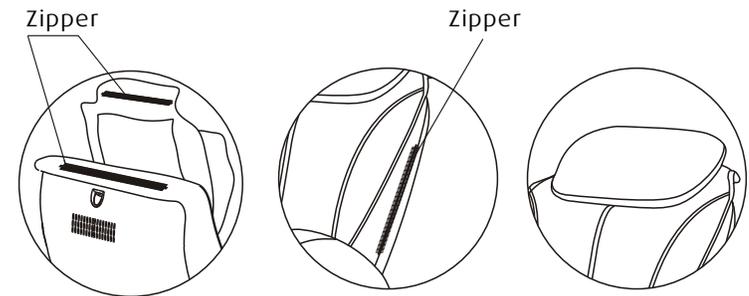

### Step 5:


- ▶ Connect the power line to corresponding socket and power it on, then it can be used.

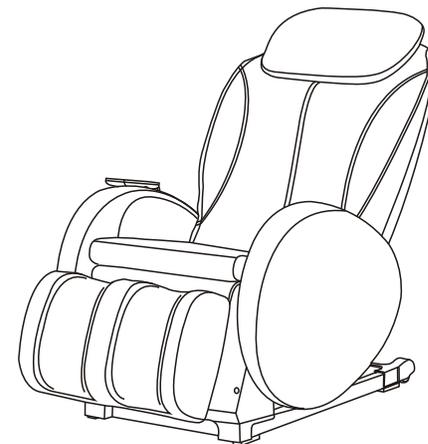

## ▶ PREPARATION BEFORE USE


### Step 2:

- ▶ Align the three buckles of the left armrest to bottom pipe and front vertical pile under the seat rack, push it downward and forward (as shown in the picture below) to make the buckles fastened with the seat rack; and then fasten the left armrest on the seat rack with two bolts.

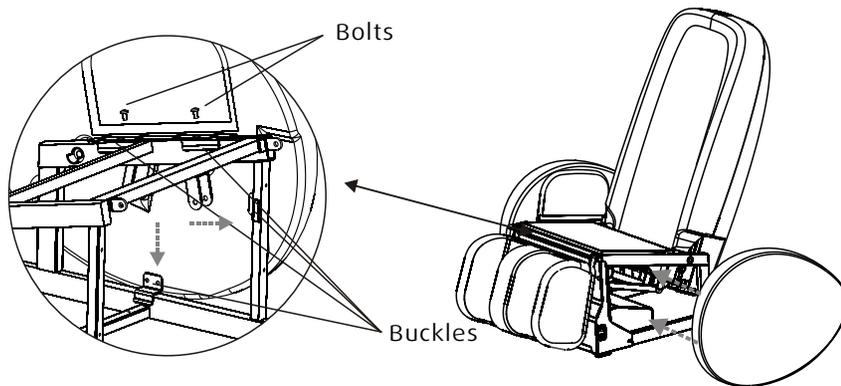

### Step 3:

- ▶ Put the seat cushion on the seat rack and connect the air pipe following the picture below.

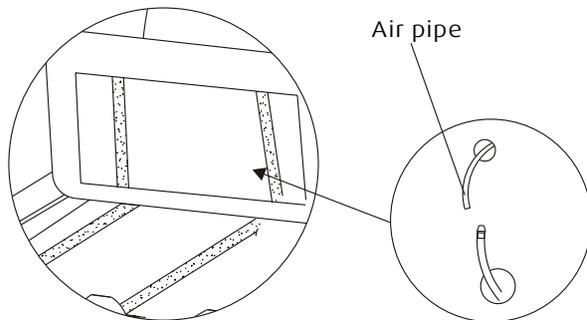

## ▶ NAME AND FUNCTION OF EACH PART

### Detailed functions of each part of controller



#### Power key

- ▶ Blinking indicator lamp means the machine is in idle mode; press this key to make the machine enter standby mode. In standby mode, you could choose one of “refresh massage”, “extent massage”, “relex massage”, “recovery massage”, “neck & shoulders”, “back & waists”, “airbags” and “method” mode to start massage.
- ▶ In standby or massage mode, the chair will return to idle mode when you press this key.
- ▶ Default working time of the machine is 20 minutes.



#### Reset:

- ▶ Press this key, and all massage functions will be stopped and the machine will be reseted to Memory state.



#### Recovery massage:

- ▶ Press this key in standby or massage mode, the indicator lamp will be on and the machine will enter “refresh massage” full-range auto massage program.



#### Extent massage:

- ▶ Press this key in standby or massage mode, the indicator lamp will be on and the machine will enter “extent massage” full-range auto massage program.



#### Relex massage:

- ▶ Press this key in standby or massage mode, the indicator lamp will be on and the machine will enter “relex massage” full-range auto massage program.



#### Refresh massage:

- ▶ Press this key in standby or massage mode, the indicator lamp will be on and the machine will enter “recovery massage” full-range auto massage program.



#### Neck & shoulders:

- ▶ Press this key in standby or massage mode, the indicator lamp will be on and the machine will enter neck & shoulders auto partial massage program.



#### Back & waists:

- ▶ Press this key in standby or massage mode, the indicator lamp will be on and the machine will enter back & waists auto partial massage program.



#### Back position lifting/lowering adjustment:

- ▶ when entering into massage programs, the machine will detect the shoulder position, the buzzer will alarm rapidly to hint user to adjust up/down manually.



- ▶ It is used for lifting/lowering the position of massage point in manual fixed-point massage. It will beep rapidly when it is adjusted to the limited position.

## ▶ NAME AND FUNCTION OF EACH PART



### Airbags:

- ▶ Press this key in standby or massage mode, you can circularly choose weak, medium or strong air pressing massage strength or stop air pressing massage, and corresponding LED will be on or off.



### Part:

- ▶ Press this key when manual massage function is started, and can circularly choose full-range, partial or fixed-point massage mode, corresponding LED will be on or off. Full-range massage means massage up and down on the whole back; partial massage means massage on 1/3 of the whole back; fixed-point massage means massage on one point of the back.
- ▶ Press this key when auto massage function is started, you can select/cancel auto fixed-point massage and corresponding LED will be on or off. Auto fixed-point massage means repeating the current movement or current set of movements in automatic program.



### Method:

- ▶ Press this key in standby or massage mode, you can start manual massage and circularly choose kneading massage, knocking massage or synchronous kneading & knocking massage, and corresponding LED will be on or off.



### Width:

- ▶ Press this key in manual knocking massage mode, you could circularly select wide, medium or narrow massage, and corresponding LED will be on or off.



### Speed:

- ▶ Press this key in manual massage mode, you could circularly select slow, medium or fast massage, and corresponding LED will be on or off.




### Lifting/lowering adjustment

- ▶ Press “” and hold it down, the lower leg massage part will be lifted and the backrest will be lowered slowly while it beeps.
- ▶ Press “” and hold it down, the lower leg massage part will be lowered and the backrest will be lifted slowly while it beeps.

## ▶ PREPARATION BEFORE USE

### Installation site:

- ▶ Please put this product in spacious place. The horizontal distance between backrest rack lifted to the upper limit and lowered to the lower limit is 40cm; the horizontal distance between leg part lifted to the upper limit and lowered to the lower limit is 15cm. Please leave a distance of over 40cm behind the chair and over 15cm in front of the chair.
- ▶ Keep the product over 1m from TV set, radio and other audio-visual devices to prevent signal interference.
- ▶ The bottom of the chair may scratch the floor. It is recommended to put the chair on carpet to prevent scratching the floor and reduce noise in operation.

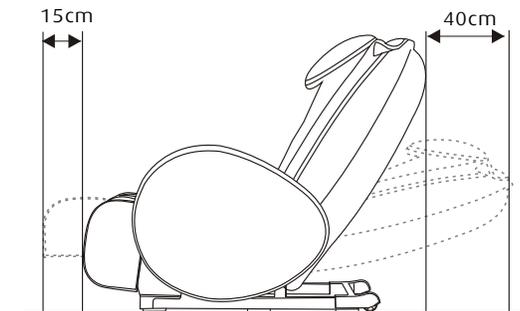

### Installation method:

(At least four people are recommended for moving the chair.)

#### Step 1:

- ▶ Open the package box and carefully take out the main machine, armrests and other accessories of massage chair from the box; check if they are complete according to the packing list);

