

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au


Email: info@qnnsafe.com.au

Phone: 02-87982669

QNN[®] Safe

USER'S MANUAL FOR GTX SERIES SAFE

Serial Number:

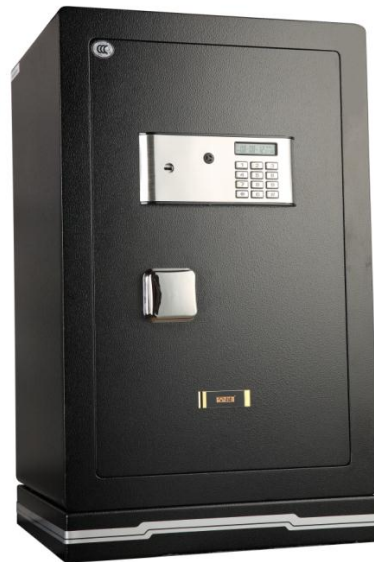

This package contents:

- User manual
- 2 Master keys
- 1 External Battery Box
- 2 Bolt Down Screws M12mm x 80mm
- 4 AA Batteries
- 2 Emergency back up Keys

Please contact your retailer or Qnn Safe Australia P/L if any shortage occurred

For the first time use, it needs the external battery power support:

- Insert the supplied 4 AA batteries into the External Battery Box
- Connect the power to the front panel. The power inlet is located at the center of the bottom side.

After the safe is opened, please replace the batteries into the internal battery box, which is located behind the door plate, please slid the box cover upward or downward to open.

- Prepare the master key into the position
- After enter the right code, turn Master Key clockwise and turn the knob clockwise, Safe is now unlocked. (For some model, just turn the master key to unlock the safe)

This safe is operated by the Master Key and the digital code.

The factory setting for the digital code is: “1 2 3 4 5 6 “

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au

Email: info@qnnsafe.com.au

Phone: 02-87982669

Opening instructions:

- Prepare the Master Key into the position
- Press ⊕ and then the code, and then press ⊕. The “OPEN” displayed with one beep. The door is now ready for open. (factory setting code “123456”)
- Turn Master Key clockwise and turn the knob clockwise, safe now is unlocked. (For some model, just turn the master key to open the door)
- Displayed “E-CODE” with 3 beeps means it is a wrong code try. 3 continual wrong code tries will lead the loudly sound alarm activated for 60 seconds
- To deactivate the alarm, please follow the above instructions to enter the right code.
- Any unexpected sharking and moving toward the safe body will lead the loudly sound alarm be activated for 60 seconds

Closing instructions:

- Close the door
- Turn the knob counterclockwise (For some larger models)
- Turn Master Key counterclockwise, and remove the key.

Changing Code:

Please keep the door at open position during the whole processing until fully ensure that the code is changed correctly.

For security reasons, please change to your own code after the first opening. Your code can be set up to 10 digits

- Open the safe door
- Press the reset button which is located behind the door plate, near the upper hinge, “USER” then displayed at LED window,
- Input your new own digital code (within 10 digits), then press ⊕
- “AGAIN” then displayed at LED window
- To confirm, Input your new own digital code again, then press ⊕
- “DONE” then displayed at LED window with two beeps, which indicate that the code is changed successful
- Keep the door open, check and remember the code.

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au

Email: info@qnnsafe.com.au

Phone: 02-87982669

Emergency Backup

In an emergency saturation, safe can be opened by the Master Key with the override Emergency key together. (Override the digital lock). The key hole is located at the centre of the front panel. A small plastic cover need to be removed by screwing counterclockwise to expose the key hole.

Turn the master key clockwise while hold the Emergency Key counter clockwise. (For some then turn the Handle / Knob to open the door)

Other features:

- **Set Day and Time:** Press ⊕ and then the code, and then press ⊕. The “SET” displayed. Then Press 2 and then Press ⊕ follow the flash cursor to set the Year, Month, Day, Week, Hour, Minis. Press ⊕ to complete
- **Code hidden function:** Press ⊕ and then the code, and then press ⊕. The “SET” displayed. Then Press 3 and then Press ⊕. The “DONE” displayed means function is activated. Repeat the same operation will de-activate the function.
- **Illumination:** light atomically on for 60 seconds after the door is opened ,or light will goes off 3 seconds after door is locked

To saving power, the auto function can be de-activated: Press ⊕ and then the code, and then press ⊕. The “SET” displayed. Then Press 4 and then Press ⊕. The “DONE” displayed means function is de-activated. Repeat the same operation will activate the function again.

To turn the night on manually: open the door, then press ⊕, press ⊕. Light will go off 3 seconds after the safe is locked or automatically turn off after 60 seconds.

Cautions:

- **For security reason, Please do not story the Master Key with Emergency Key together.**
- **Do not store the Emergency Keys and the External Battery Box inside the safe.**
- **When the LED window displays “LO-BAY”, it means that the batteries need to be replaced. Please replace new batteries as soon as possible.**