


MOBILETRON

TIRE PRESSURE MONITORING SYSTEM FOR MOTORCYCLE

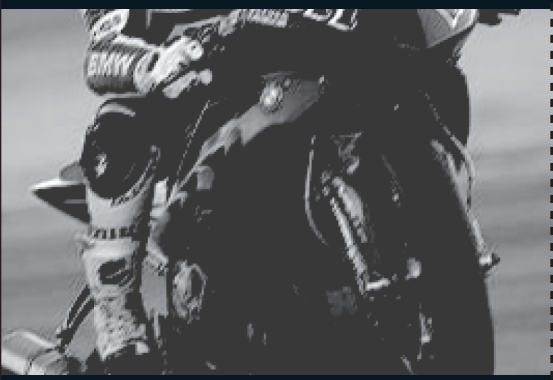


Installation and Operation Instructions


RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

Whether riding your bike for pleasure, commuting or competition, safety is paramount. Through technology TPMS gives the rider real-time tire pressure, tire temperature, and battery voltage monitoring. TPMS improves riding safety.

Why do we need TPMS? It's not only for safety, but also for environmental and economic reasons.

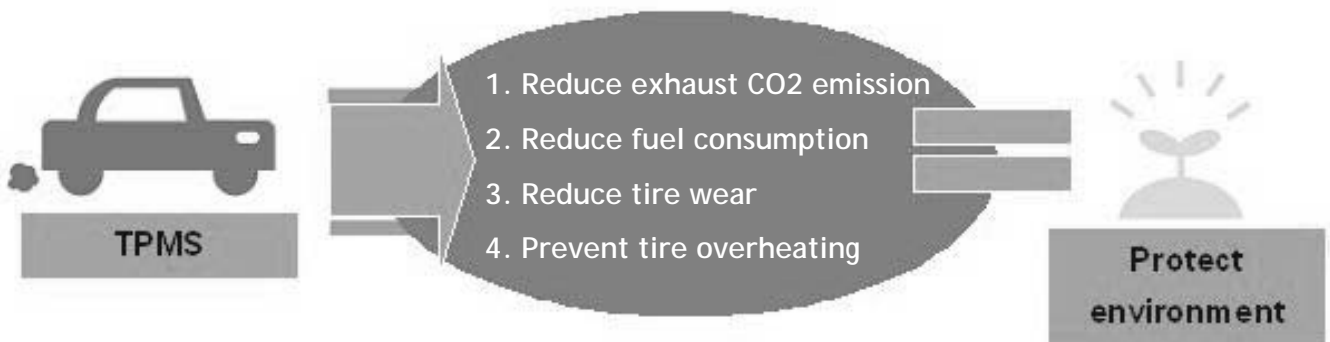

Tire Performance

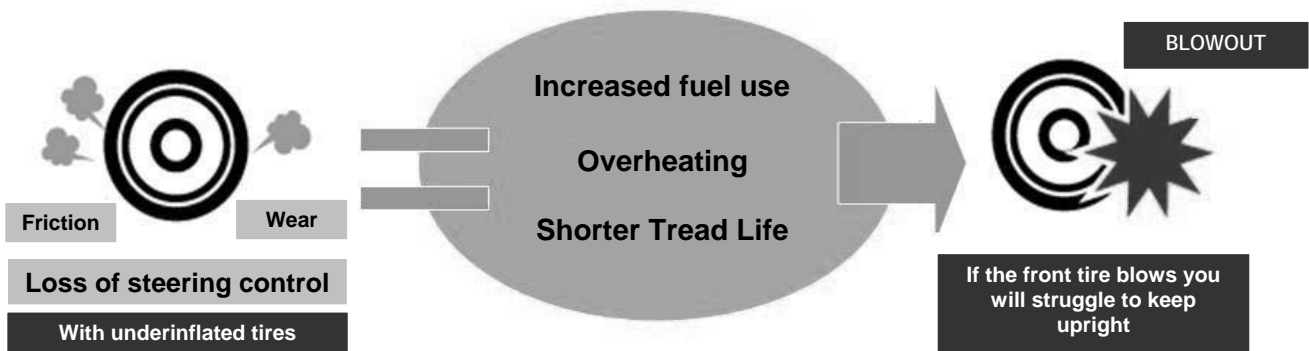

Please take a few minutes to read through this manual as it explains the installation procedure, features and benefits of your TPMS. You will see it's simple to use and care for.

(I) Index

<u>Page</u>	<u>Content</u>
2.	(I)Index
3.	(II) Transmitter installation
5.	Receiver and battery power installation
5.	Receiver Installation
5.	Important installation notes
6.	(III) Receiver operation manual
6.	A. Display and Functionality
6.	B. Operation settings
6.	1. System start
	1-1. Battery voltage
7.	1-2. Self test
7.	1-3. Welcome page and software edition
7.	1-4. Show information on monitor
7.	1-5. Display function change
8.	2. General setting
8.	2-1. Low pressure alarm setting
9.	2-2. High pressure alarm setting
9.	2-3. High temperature alarm setting
9.	2-4. Unit setting
10.	2-5. Reset
10.	2-6. Exit
10.	3. Alarm function and setting
10.	3-1. Low/High pressure alarm
10.	3-2. High temperature alarm
11.	3-3. Low battery voltage alarm
11.	3-4. 10 minutes no signal
11.	3-5. Receiver alarm signal
12.	4. Advance setting
12.	4-1. New ID input
12.	4-2. Search transmitter setting
13.	4-3. Receiver ID setting
13.	4-4. Exit
14.	(IV) Warranty
14.	1. Warranty Service
14.	2. Limited Warranty
15.	3. Caution
16.	(V) Technical specification
17.	(VI) Package contents

(II) Installation

1. Transmitter installation

1-1. Key Accessory Kits :



Valve Protector




Steel strap with screw mount

1-2. Installation Process



Step 1:

Measure steel strap length on tire rim and allow 5cm overlap when cutting the excess strap. Place valve protector on steel strap for next assembling step.

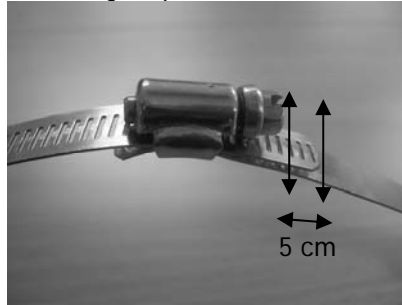

Step 2:

Fit transmitter on to steel clamp and position opposite to the valve protector.
Below picture show the related position sequence.

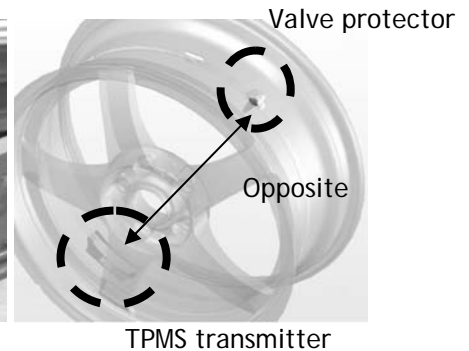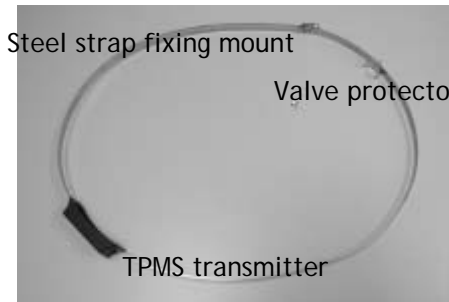

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

Step 3:

Position steel strap screw mount to the side of the valve, and valve protector across the top as per below picture.

(Ensure Valve protector is mounted on a solid part of the strap)



Note:

- 1> The best position for the transmitter is at the center of rim. Make sure the steel strap is tight and flat to the rim's surface.
- 2> If there are any kinks, it could weaken the strap.

Step 4:

Please ensure a distance of at least 5 cm is left between the steel strap screw fix and the valve protector, before fully tightening the steel strap.


Note: Make sure steel strap is not in contact with the valve.



Step 5:

Final Checks:


- 1> The steel strap screw mount must be 5-7cm away from the valve.
- 2> Ensure the steel strap is fed through the top of the valve protector.
- 3> Ensure the transmitter is positioned opposite to the valve.
- 4> Ensure the steel strap is fastened smoothly and tightly to the rim surface.
- 5> Please remind your tire fitters to take care not to damage the TPMS kit when changing the tire.

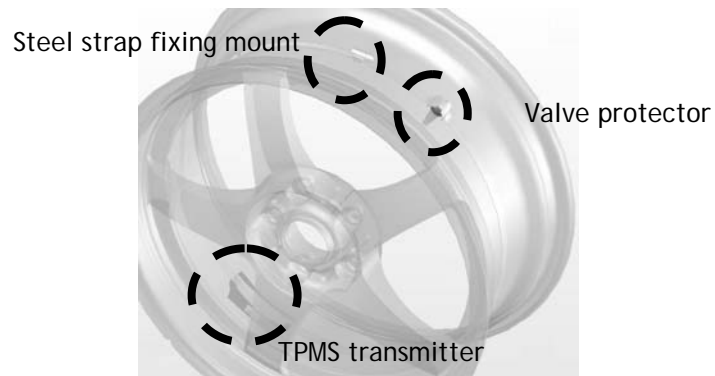

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

2. Receiver Power Cable Connection

Please connect receiver's black cable(negative) and red cable(positive) to the correct battery terminal.

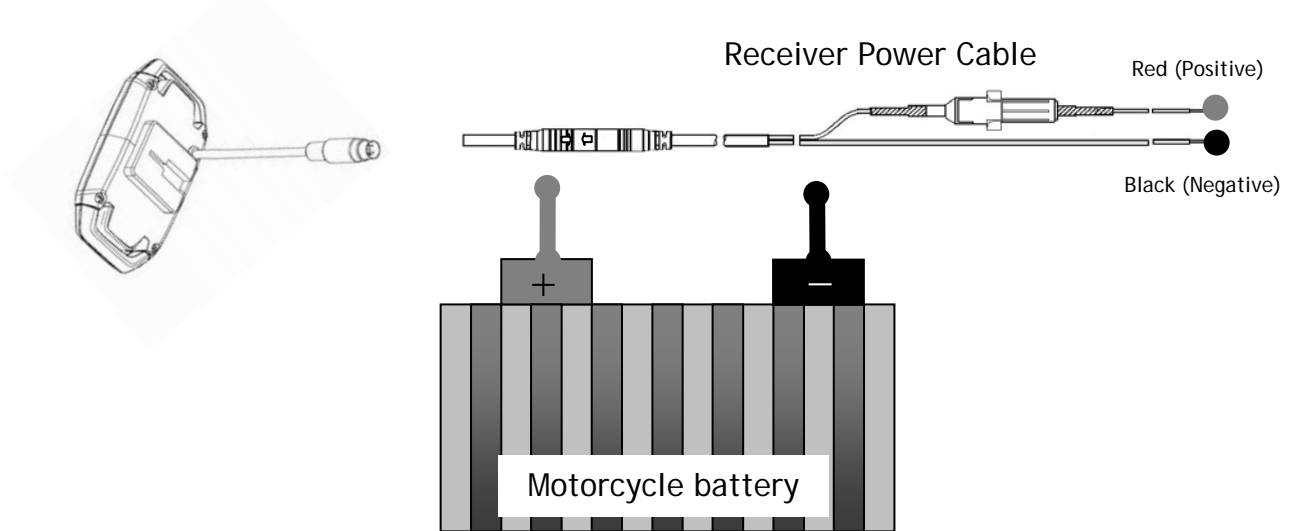

3. Positioning the Receiver

Please position the receiver using the appropriate mount, to the fuel tank, the fairing or the handle bar. Different motorcycle designs may require different mounting solutions.

Note: Please ensure the receiver is positioned so that it does not restrict the handle bar movement, or obstruct the riders' view of the instruments.




4. Important Notes :

- 1> We suggest you check the condition of the steel strap every time you change the tire and replace it at least every 15,000 miles.
- 2> The rim design is model dependent. This manual is only a guide. Please take care to ensure the TPMS kit is fitted correctly. If in doubt, please contact the retailer for support.
- 3> Tires must be re-balanced after installation.
- 4> Please check the receiver, transmitter, steel strap(include Steel strap fixing mount) and valve protector are all in the correct position and secured tightly.
- 5> (Check valve condition each time tires are replaced)
- 6> Information displayed on receiver is for riding reference only. If you encounter any loss of control which could be due to air loss, but that isn't indicated on the display, please stop and check your motorcycle when it is safe to do so.

(III)Receiver operation manual


A. Display and Functionality

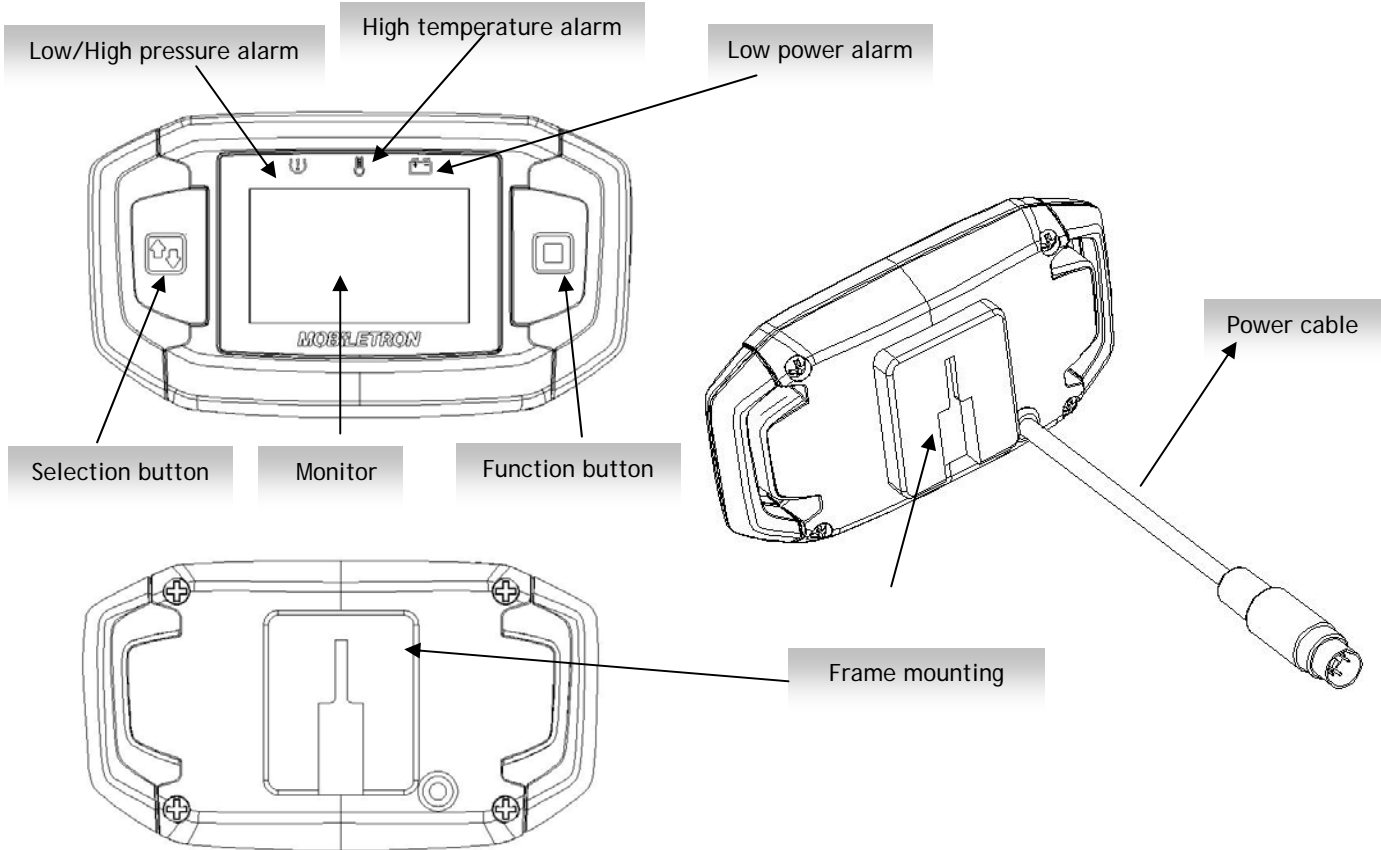

B. Operation setting


1. System start

1-1. Show motorcycle battery voltage.

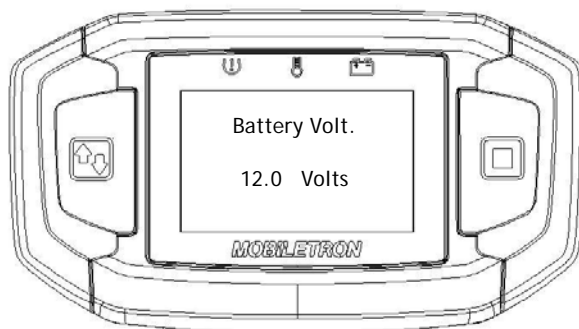


RX014 Bike TPMS(Tire Pressure Monitoring System) Manual


1-2. SELF TEST (3 sec)

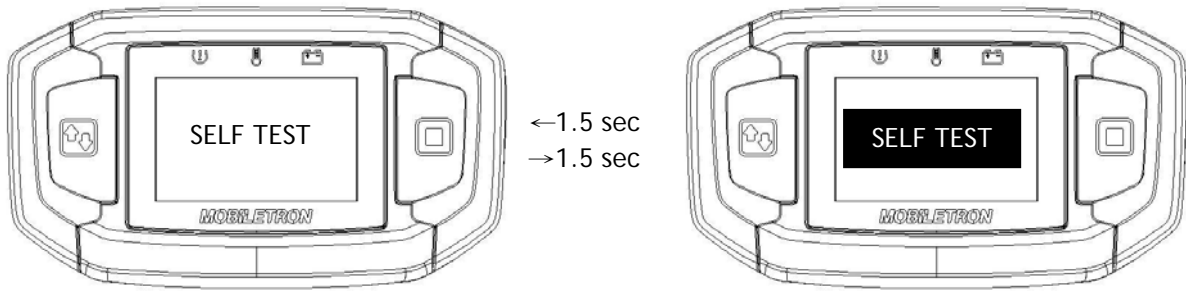


1-3. Welcome page (3 seconds), software edition.

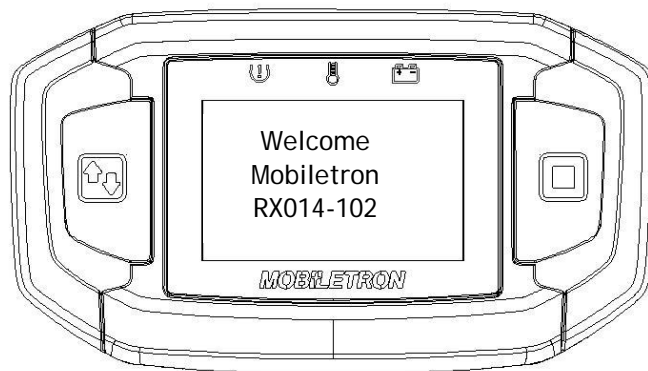

1-4. Show information on monitor:
Show both tires "pressure" and "temperature".

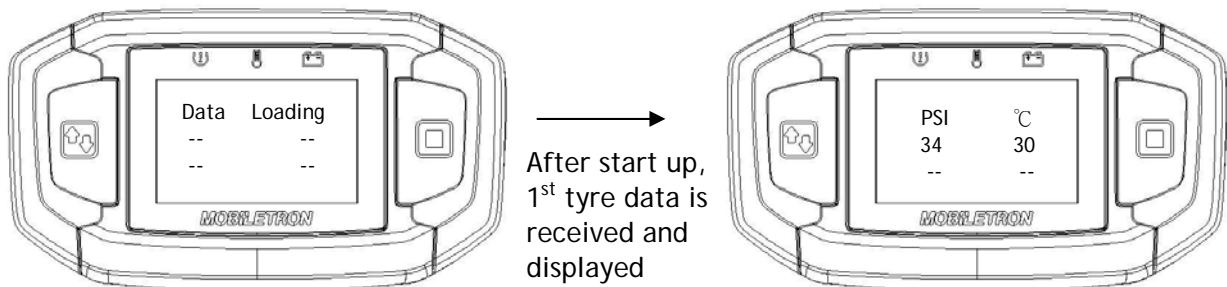




1-5. Display function change:
Press function button to select display data. There are two pages to show "Pressure & Temperature" and motorcycle's battery voltage.
(Battery voltage (measured to one decimal point))

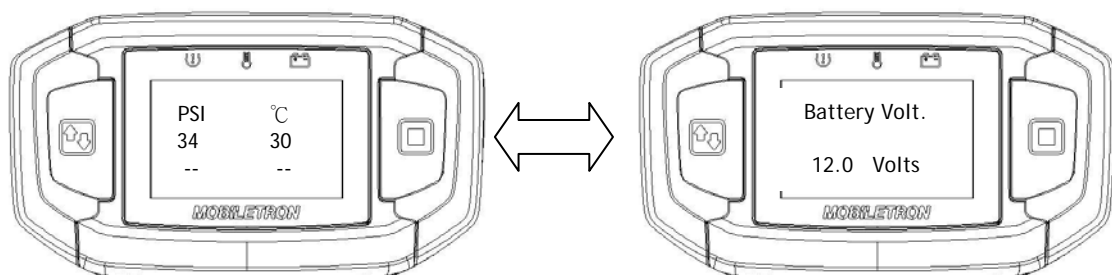

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

2. General settings:


- A. "Selection button": move gray highlight to select desired option
(After selected, press function button again to enter function).
- B. "Function button" & "Enter button":
Press function button to enter general settings.

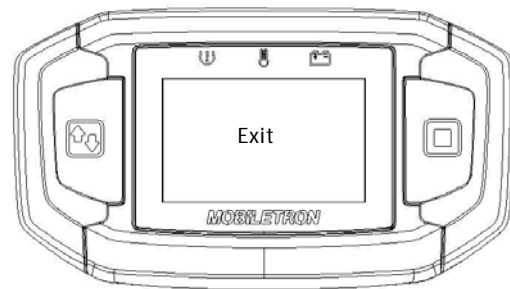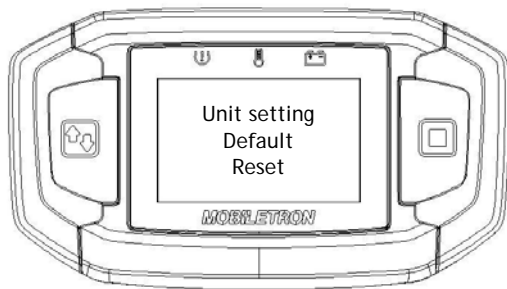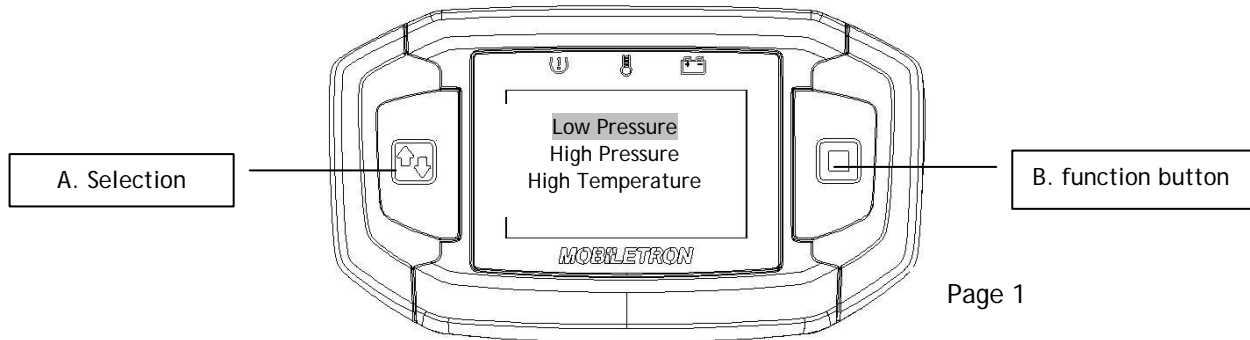

2-1. Low pressure alarm setting

Press function button to set low pressure limit
(Range: 20-40 PSI, Default = 30 PSI)

After the low pressure limit is set, press function button to execute.

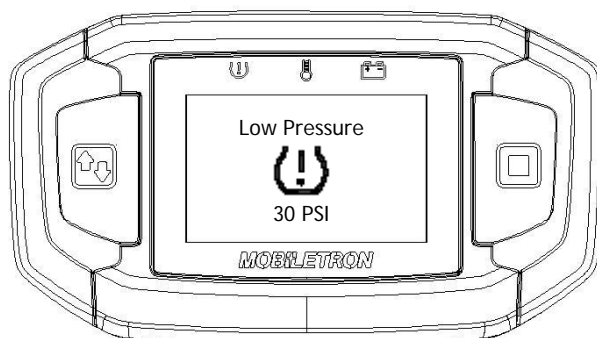


RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

2-2. High pressure alarm setting

Press function button to set high pressure limit

(Range: 40-60 PSI, Default = 50 PSI)

After the high pressure limit is set, press function button to execute.

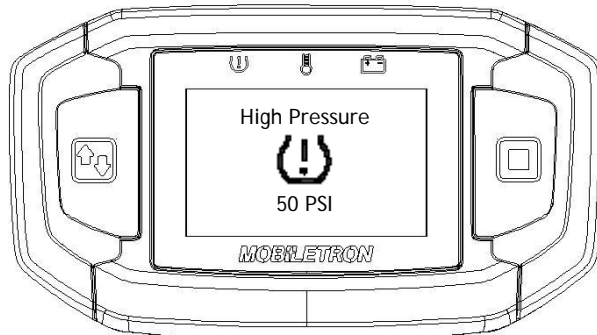


2-3. High temperature alarm setting

Press function button to set high temperature limit

(Range: 00-99°C, Default = 80°C)


After the high temperature limit is set, press function button to execute.

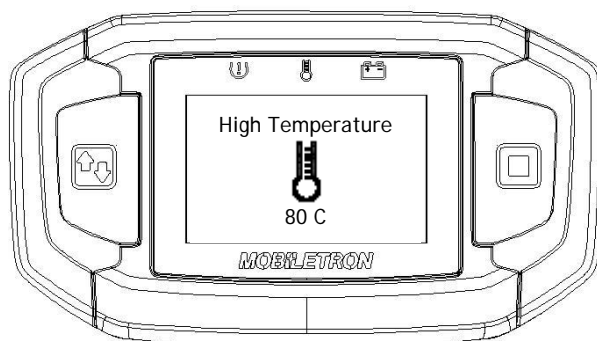

2-4. Unit setting

Unit menu: PSI-°C, PSI-°F, KPa-°C, KPa-°F, Bar-°C, Bar-°F


(Use selection button to choose from the unit menu. Default setting is Bar-°C.)

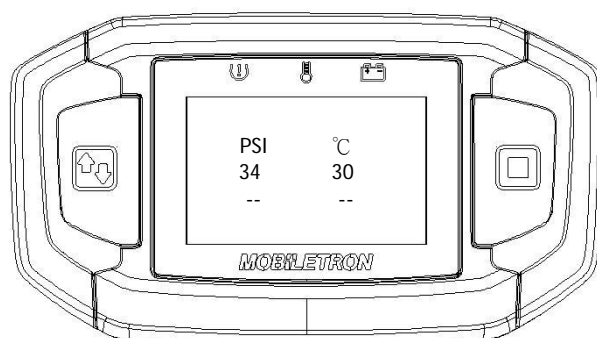

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

2-5. Default

Press selection button to return to default settings. This function does not reset transmitter IDs. Press selection key to select and press function key to execute.

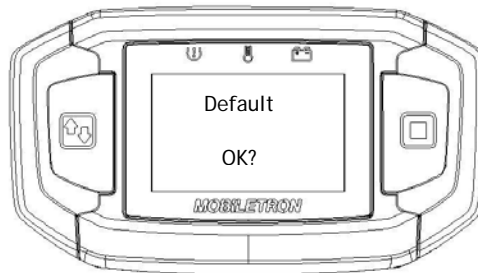

2-6. Reset


Press function button to clear all alarms.




2-7. Exit: Return to display screen.

3. Alarm function and setting

3-1. Low/High pressure alarm: Pressure icon keeps flashing.

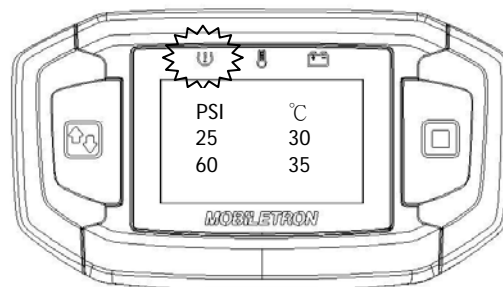

3-2. High temperature alarm: Temperature icon keeps flashing.

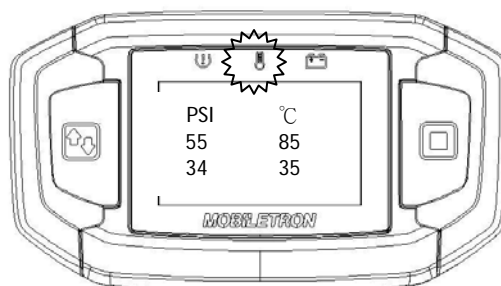


RX014 Bike TPMS(Tire Pressure Monitoring System) Manual


3-3. Low battery voltage alarm: Battery icon keeps flashing.

A. Voltage detection accuracy is $\pm 5\%$ error when connect directly to the battery.


B. Default warns setting is 9.8V.

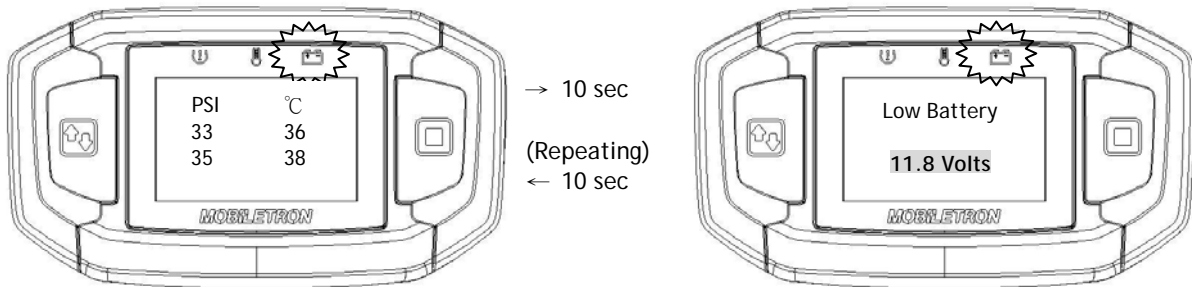

3-4. 10 minutes no signal (Transmitter could be faulty. Please contact dealer)

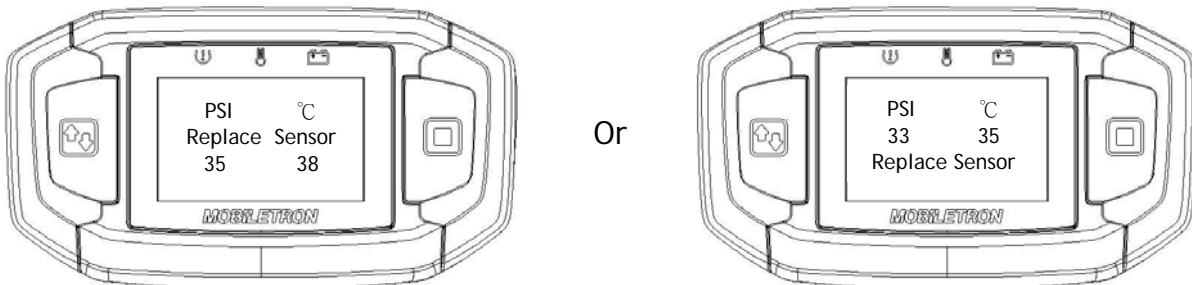

3-5. Receiver alarm signal (Transmitter or receiver could be faulty. Please contact dealer.)

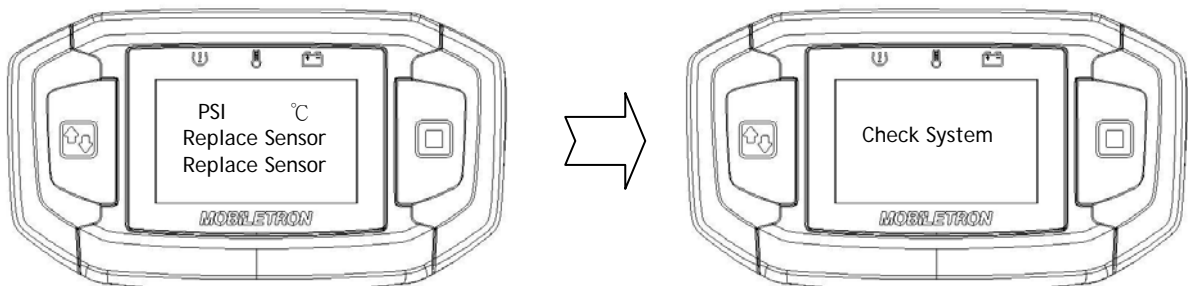

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

4. Advanced setting :


Press and hold both the Function button and the Selection button for 5 seconds to enter advanced setting menu.

Press selection button to move gray highlight for selecting the desired function.

Press function button to enter function.




Page1/2

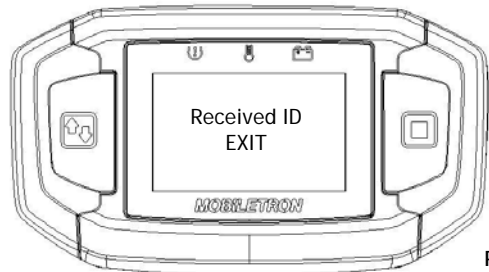



Page2/2

4-1. New ID input (Manually input the transmitter IDs)




A. To press 『Selection button』 to select one tire and to press 『Function button』 to enter next step.

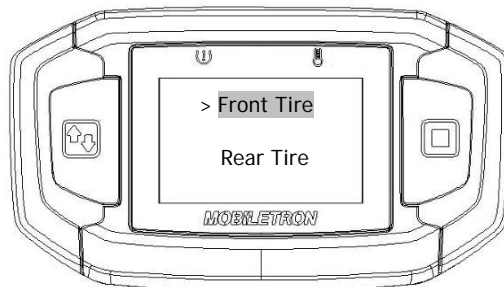

 B. To press 『Selection button』 to enter the new ID, to press the 『Function button』 to confirm the new ID (8 digitals). After you confirm the latest digit, you will see “OK” on monitor. If you want to input the other wheel's ID code, please repeat.

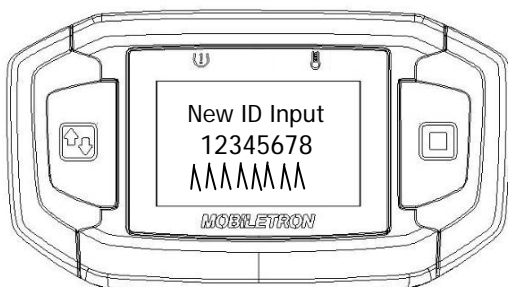

 PS: Each digit of the ID code is hexadecimal in the range 0 to 9 and A to F. The ID code is found as per the label below.

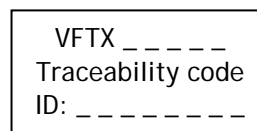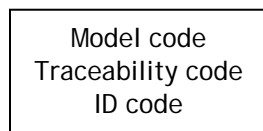

Note: ID code is on the packing. While you install transmitter, please write down ID code on this user manual.


<h2 style="margin: 0;">ID code</h2>	
Front wheel	_ _ _ _ _
Rear wheel	_ _ _ _ _

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

4-2. Search transmitter setting: (User setting only for cap type)

Press "selection button" to choose front/rear wheel.

Press "function button" to execute. The receiver will automatically search cap transmitter's signal.

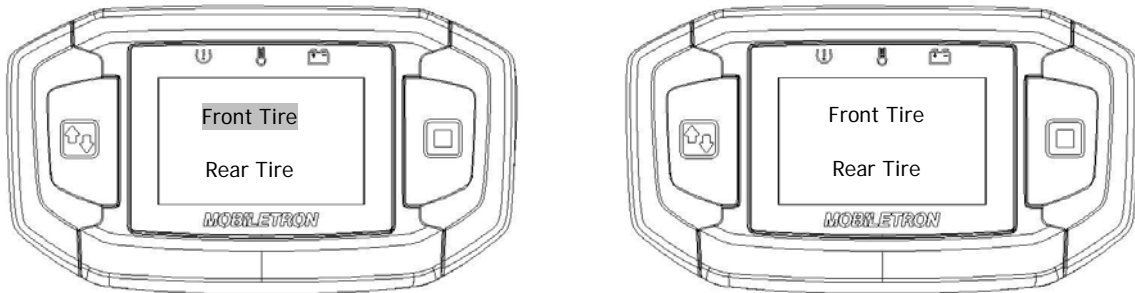


4-3. Receiver ID setting: (Dealer setting only for strap type transmitters requires low frequency remote control)

a. When setting with low frequency remote control 01 is front wheel and 02 is rear wheel.


b. To programme front wheel set low frequency remote to 01, point at the correct transmitter (with the other at least a metre away) and press enter

c. Point remote at receiver and press enter. Your front wheel transmitter is now programmed

d. Repeat for rear wheel with remote set to 02.

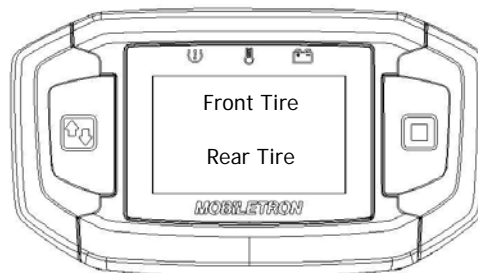

4-4 EXIT: Return to display screen.

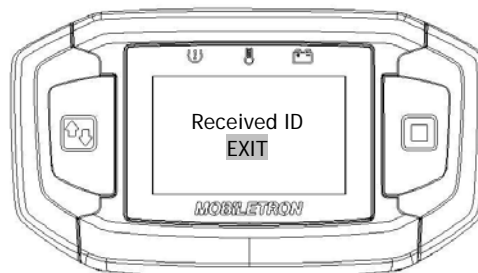

(IV)Warranty

Mobiletron, hereby warrants that this Mobiletron wireless tire pressure monitoring system shall be free from material defects in workmanship and/or materials until the expiry of twelve months from its purchase by the end user, EXCEPT WHERE any such defect has been caused by: Improper or non-normal use, Improper installation, contacts with any corrosive or otherwise harmful substance, any other acts or omission not sanctioned by the User Manual.

- Mobiletron warrants the wireless tire pressure monitoring system product for twelve months from the end user purchase date under normal operation condition, which is free from manual improper operation, improper installation or any casualty.
- Mobiletron's sole obligation shall be to repair or replace the defective product at no charge to the original owner.
- Mobiletron warns the user or driver of the driving safety by the limited warning signal range, and does not protect or take the responsibility of the user's or driver's safety directly.
- In no event will Mobiletron be liable for any direct, indirect, special, incidental or consequential damage, including loss of profit, loss of savings, or any other damages caused by product, or its documentation, or failure of the product to perform, even if Mobiletron has been advised of the possibility of such damages.

1. Warranty Service

- 1> The above warranty will be honored by the retailer from which it was purchased, provided that the owner can provide dated proof of purchase.
- 2> In the event that any defect in the unit is covered by the above warranty, Mobiletron will replace the affected components free of charge, shipping prepaid. The owner shall be responsible for any labor and installation costs incurred in removing the defective parts and/or installing the replacement.
- 3> The retailer shall at Mobiletron' cost send any unit which is defective as described in the above warranty to Mobiletron at No.39, Sec 3, Chung-Ching Rd., Ta-Ya, Taichung Hsien, Taiwan 428.

2. This Limited Warranty Provided by Mobiletron Does Not Cover:

- 1> Product that have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, improper transportation, repair or service in any way that is not authorized by Mobiletron.
- 2> Any damage attributable to fire, flood, lightning strike or act of God.
- 3> This limited warranty coverage will exclude the package material and user manual.
- 4> The damage caused from benzene, alcohol or any corrosive cleaner.
- 5> Any repair should implement in Mobiletron by returning from the Mobiletron
- 6> Authorised retailer. Any repair without authorization will be excluded from the warranty.

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

3. Caution:

3-1. Temperature Compensated Pressure Readings

1> When a tire heats up, caused by long duration of driving or braking, the air pressure inside the tire can also be expected to increase, e.g. tire temperature increases 20°C to 30°C may lead to 3psi to 6psi pressure increment.

2> Never use chemical material to clean Digital Receiver.

3> Never take Digital Receiver apart for repair! Whenever there is problem, please contacts dealer for repair or replacement.

4> Check connections of DC Power Cable at both ends should no display on LCD panel.

5> Be sure to keep record of the Transmitter ID number for each of the corresponding two tires on the last page in this user manual. Because next time if the original transmitter is replaced by a new one, inputting the original Transmitter ID number to the new one should be a must.

3-2. TPMS is designed with radio anti-interference system. In serious electromagnetic waves area like airport, high speed railroad, and amateur radio (ham radio) station (include high power radio transmitter and receiver on road) TPMS might be shortly influenced like "jamming". After you leave this environment, the TPMS will be work well.

RX014 Bike TPMS(Tire Pressure Monitoring System) Manual

(V) Technical Specifications

Transmitter Specification	
Fix type	clamp
Battery life	7 years
Battery voltage	3V
Transmission power	$\leq 3\text{dBm}$
Transmission Frequency	433.92 MHz
Pressure range	0~80 PSI(± 2 psi) 0~5.5 bar(± 0.14 bar) 0~552 Kpa(± 13.8 kPa)
Temperature range	$-40^{\circ}\text{C} \sim 120^{\circ}\text{C} (\pm 3^{\circ}\text{C})$
Weight	39 g
Dimensions	87.6 x 32 x 22.3 mm
Operating humidity	0~95%
Operating temperature	$-40^{\circ}\text{C} \sim +105^{\circ}\text{C}$ $-40^{\circ}\text{F} \sim +221^{\circ}\text{F}$
Storage temperature	$-40^{\circ}\text{C} \sim 125^{\circ}\text{C} / -40^{\circ}\text{F} \sim 257^{\circ}\text{F}$

Receiver	
Supports wheels	2
Transmission frequency	433.92 MHz
Display data	Pressure/Temperature
Operating voltage	DC 9V ~ 16V
Operating current	$\leq 60\text{mA}$
Operating temperature	$-20^{\circ}\text{C} \sim 70^{\circ}\text{C} / -4^{\circ}\text{F} \sim 158^{\circ}\text{F}$
Storage temperature	$-30^{\circ}\text{C} \sim 80^{\circ}\text{C} / -22^{\circ}\text{F} \sim 176^{\circ}\text{F}$
Type pressure display range	0~80 PSI(± 2 psi), 0~5.5 bar(± 0.14 bar), 0~552 Kpa(± 13.8 kPa)
Type temperature display range	$-40^{\circ}\text{C} \sim 120^{\circ}\text{C} (\pm 3^{\circ}\text{C})$ $-40^{\circ}\text{F} \sim 248^{\circ}\text{F} (\pm 5.4^{\circ}\text{F})$
Receiver dimension	106.2 x 59.8 x 22.2 mm

(VI) Package contents

Serial Number	Item	Quantity
1.	User manual	1
2.	TPMS transmitter	2
3.	TPMS receiver	1
4.	Receiver mount	1
5.	Steel strap	2
6.	Valve protector	2
7.	Power line	1

Manufacture by Mobiletron Electronics Co., Ltd.

Address: 39, Sec. 3, Chung Ching Road, TAYA, Taichung
Hsien 428 Taiwan

Website: <http://www.more.com.tw>

Tel: +886 (04) 25683366

Fax: +886 (04) 25673069

Mobiletron (UK) Ltd.

Address: Unit 80, Roman Way, Roman Way Ind, Est.
Longridge Road, Preston PR2 5BE, England, UK

Website: <http://www.more.com.tw>

Tel: +44 1772 693780

Fax: +44 1772 693790

E-mail: info@mobiletron.co.uk

40710295