




MODEL: S1333CM

Version: 2.0

USER MANUAL

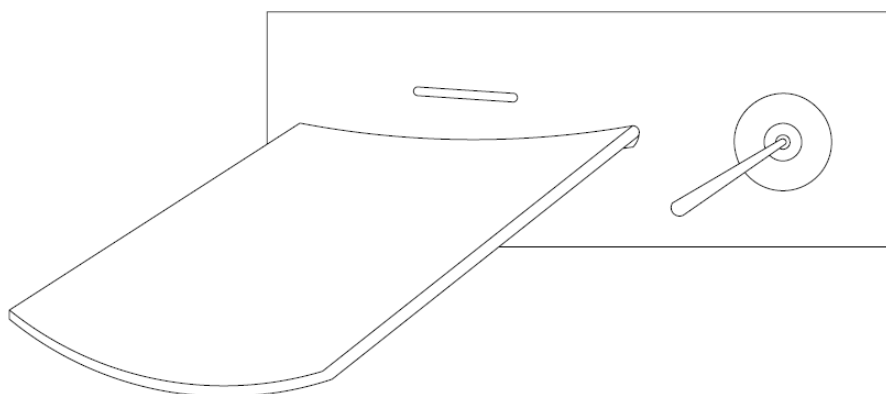

WALLMOUNT LED THERMAL WATERFALL FAUCET

THANK YOU

Dear Valued Customer,

SUMERAIN would like to take this opportunity to thank you for purchasing SUMERAIN products. It is our sincere hope that you are completely satisfied with your new purchase. We welcome any questions or comments you may have and look forward to assisting you in the future.

Sincerely,

SUMERAIN customer service department

PRIOR TO INSTALLATION STEPS

1. Unpack your new product and ensure that all the parts are contained in the packaging. Keep the product in its original box until you ready to install it.
2. Shut off the water supply if replacing a previously-installed faucet.
3. Observe all plumbing and building codes in your area.
4. It is recommended that installation of the product be done by a professional plumber.

Tools you may need when installing the faucet



wrench



Flexible rule



Sealant Tape



Pencil





Screwdriver

Specification


| | | |
|-----------------------|-----------------------------------|-------------------|
| Function | Bathroom Sink Faucets | |
| Feature | LED, Waterfall, Wall mount | |
| Style | Contemporary | |
| Finish | Chrome | |
| Installation Holes | One Hole | |
| Number of Handles | Single Handle | |
| Faucet Total Height | Adjustable | |
| Spout Spread | 180mm | [7.1 Inch] |
| Spout Width | 130mm | [5.1 Inch] |
| Spout Height | Adjustable | |
| Valve Type | Ceramic Valve | |
| Faucet Body Material | Brass | |
| Faucet Spout Material | Stainless steel | |
| Net Weight | 1.8 KG | |
| Gross Weight | 2.2 KG | |
| Working water press | 0.2 ~0.8 Mpa | |
| LED power supply | Water flow generator | |
| LED Color changing | | |
| Water temperature | < 28 °C | Blue color |
| Water temperature | 28 °C~ 38 °C | Green color |
| Water temperature | > 38 °C | Red color |
| Packing box size | 305mm x 220mm x 155mm | |

Dimension

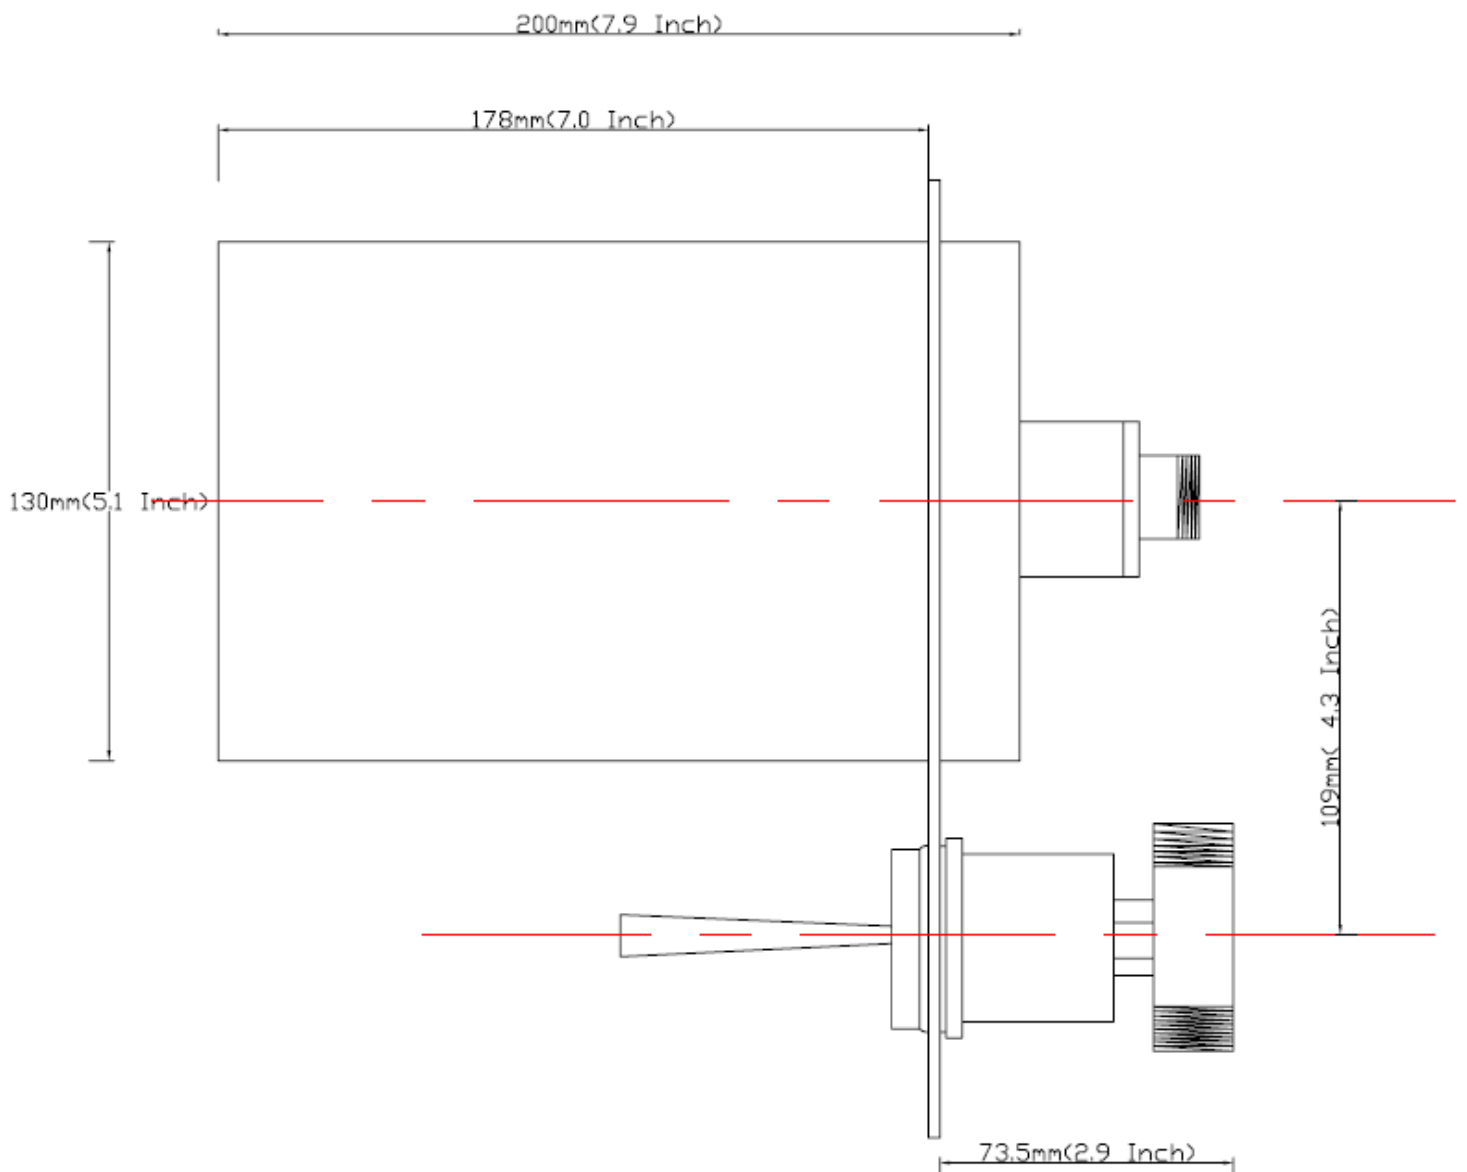

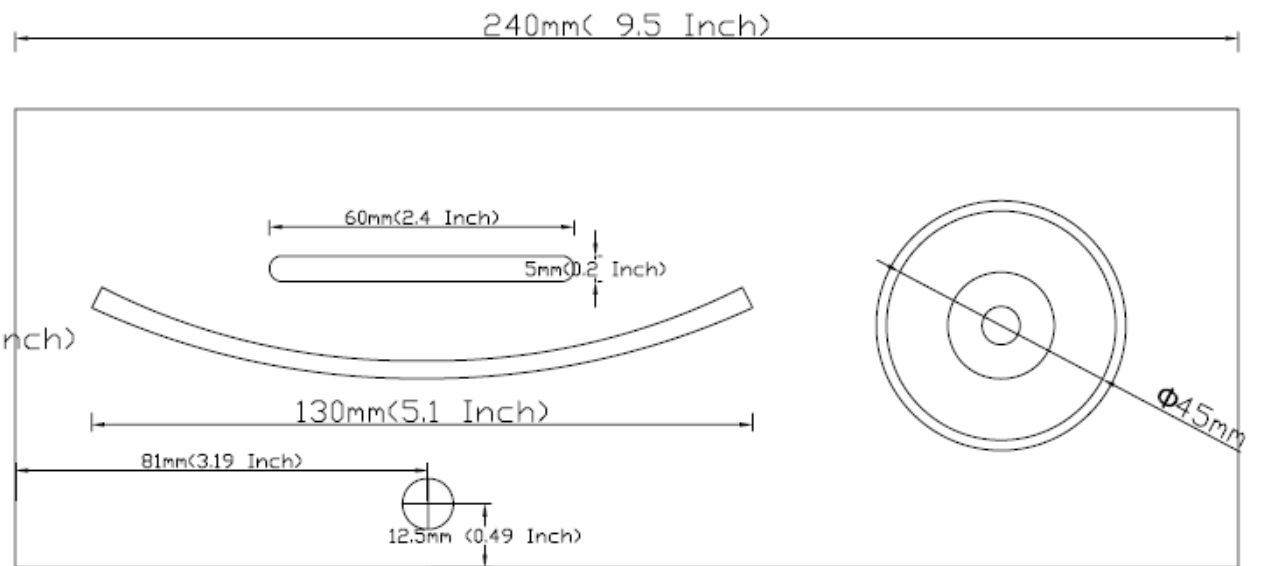

Packing list

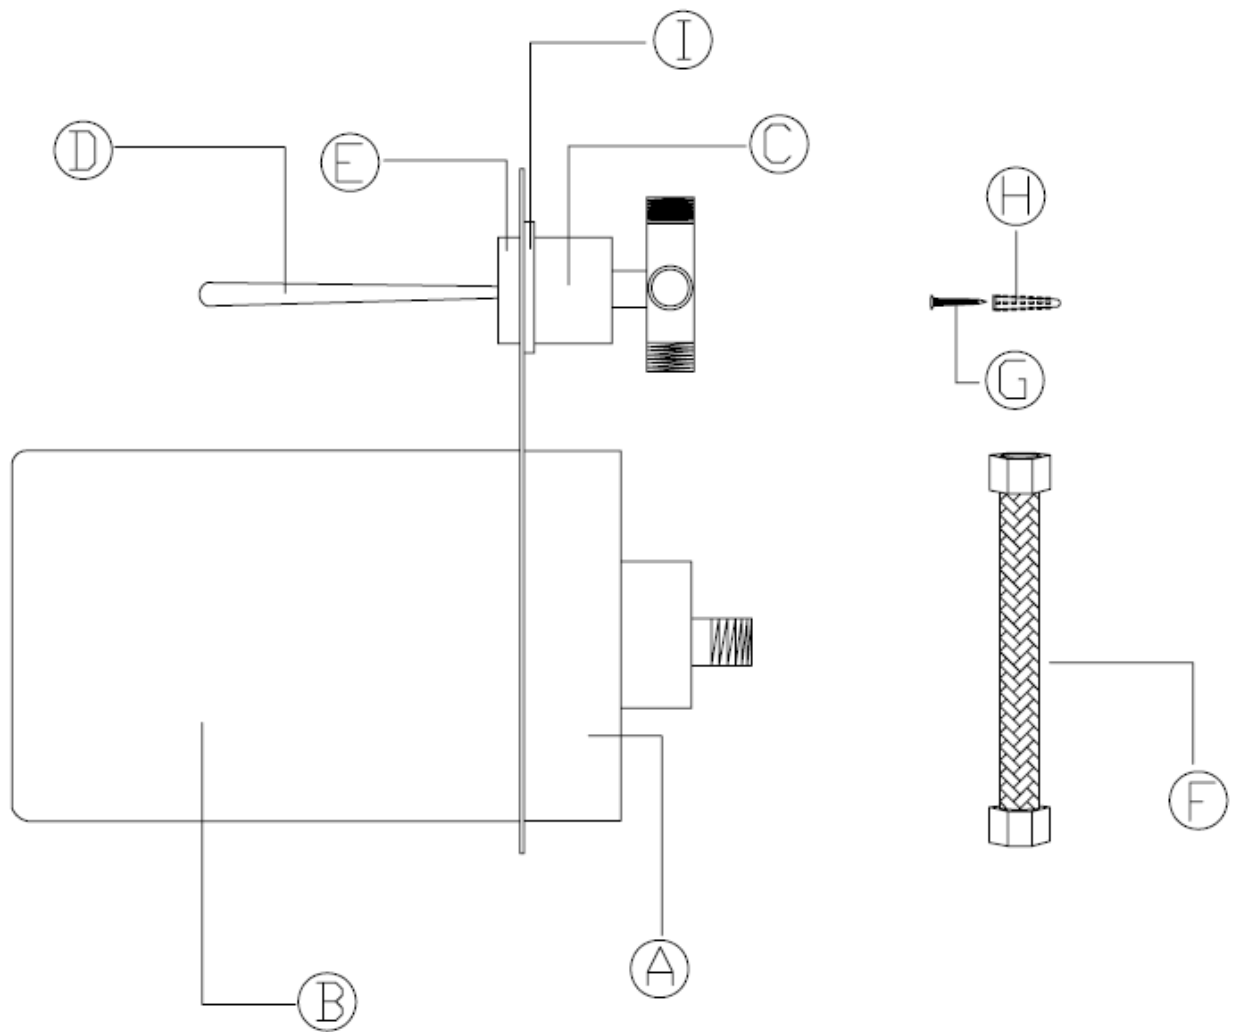

| CODE | ITEM NAME | QTY | CODE | ITEM NAME | QTY |
|------|-------------------------|-------|------|-----------|-------|
| A | Faucet Body with panel | 1 PCS | B | spout | 1 PCS |
| C | Thermostatic valve | 1 PCS | D | Handle | 1 PCS |
| E | Escutcheon | 1 PCS | F | Hoses | 1 PCS |
| G | Screw | 1 PCS | I | Nut | 1 PCS |
| H | Plastic Expansion Nails | 1 PCS | | | |

FAUCET INSTALLATION STEPS

Step 1:

Draw the straight line of position where need to install the faucet according to below dimension



Image 1: Front view

Step 2:

Dig hole "A" , hole "B" and hole "C" according to below dimension.


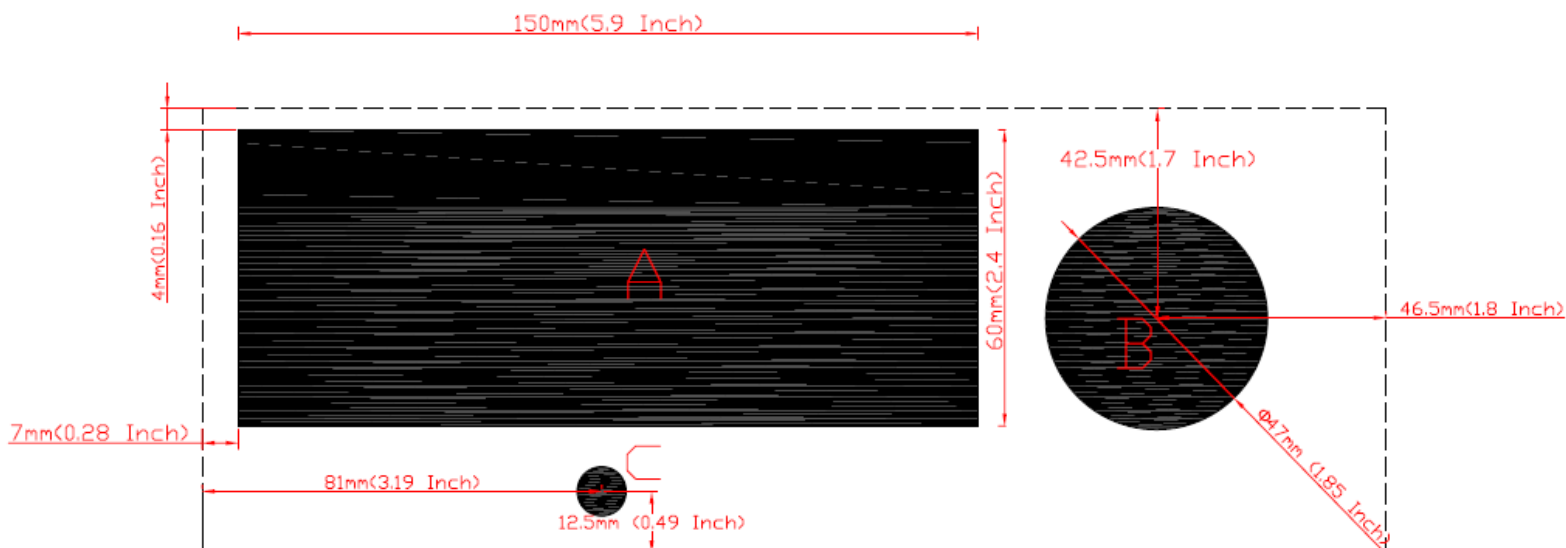


Image 2: Front view of digging hole


Step 3:

Beat the Plastic Expansion Nails into the hole "C" of wall

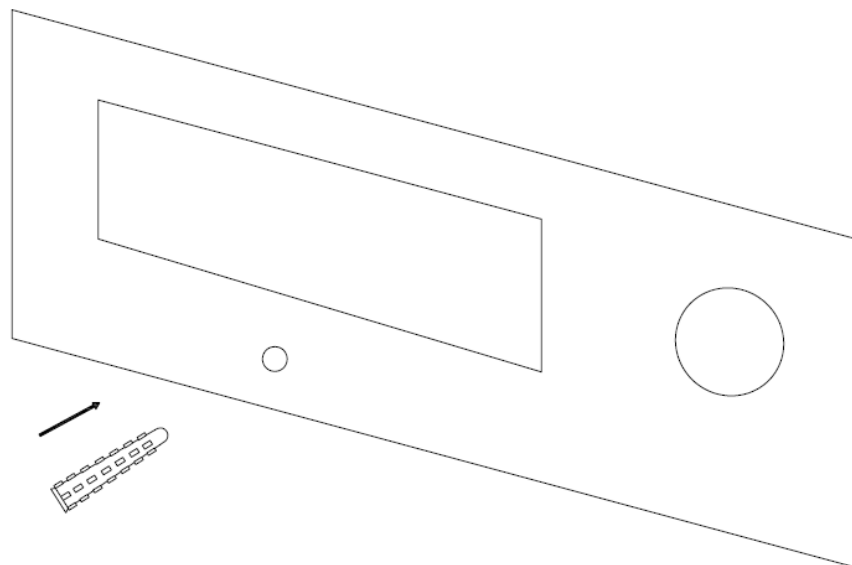


Step 4:


Rollback the Escutcheon and dismounting the Thermostatic valve "C" from assembled front panel.

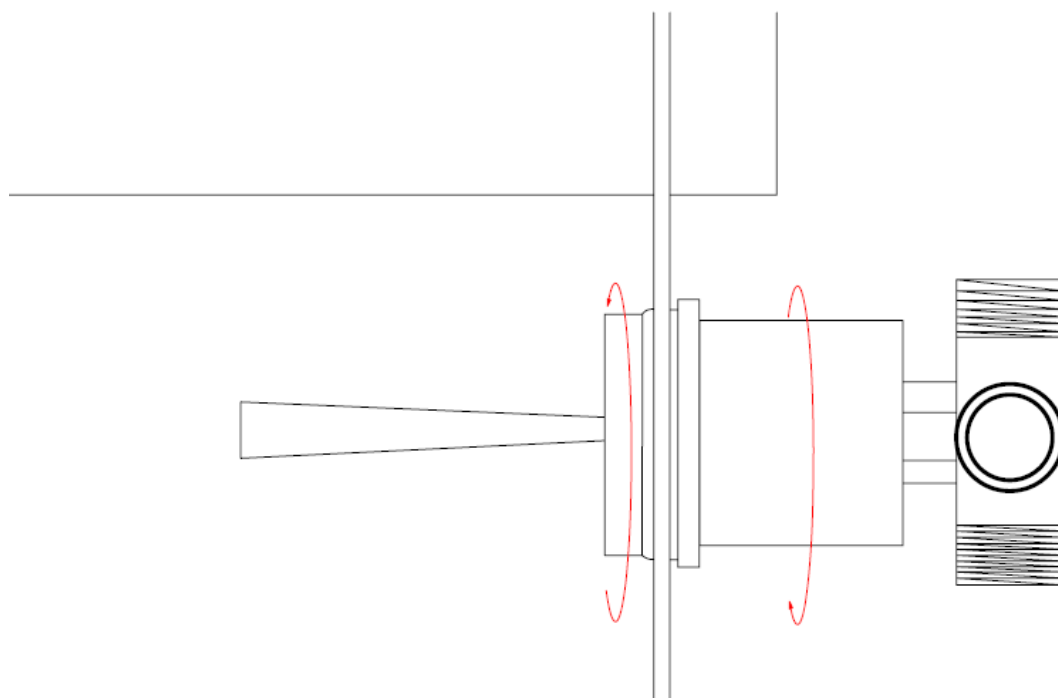

Step 5:


Put the rubber ring into the handle hole of front panel and make it close with the panel.

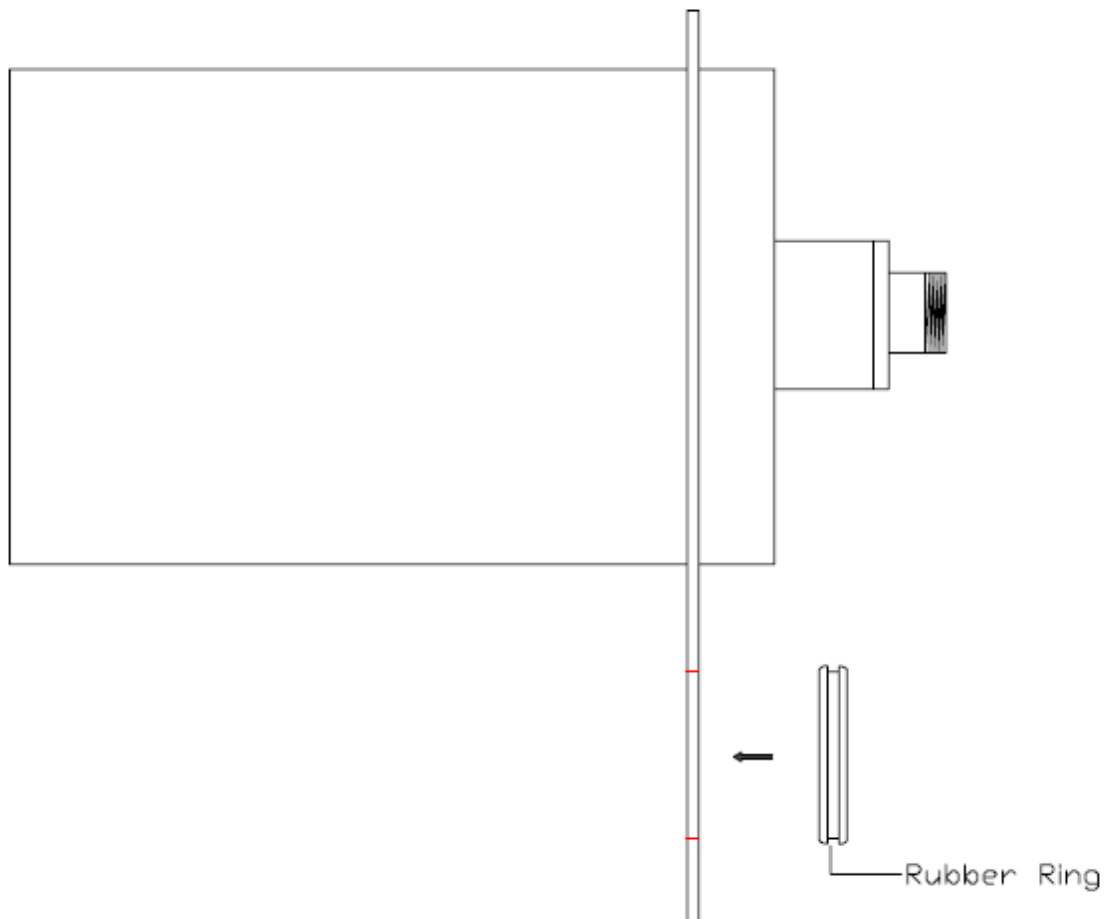


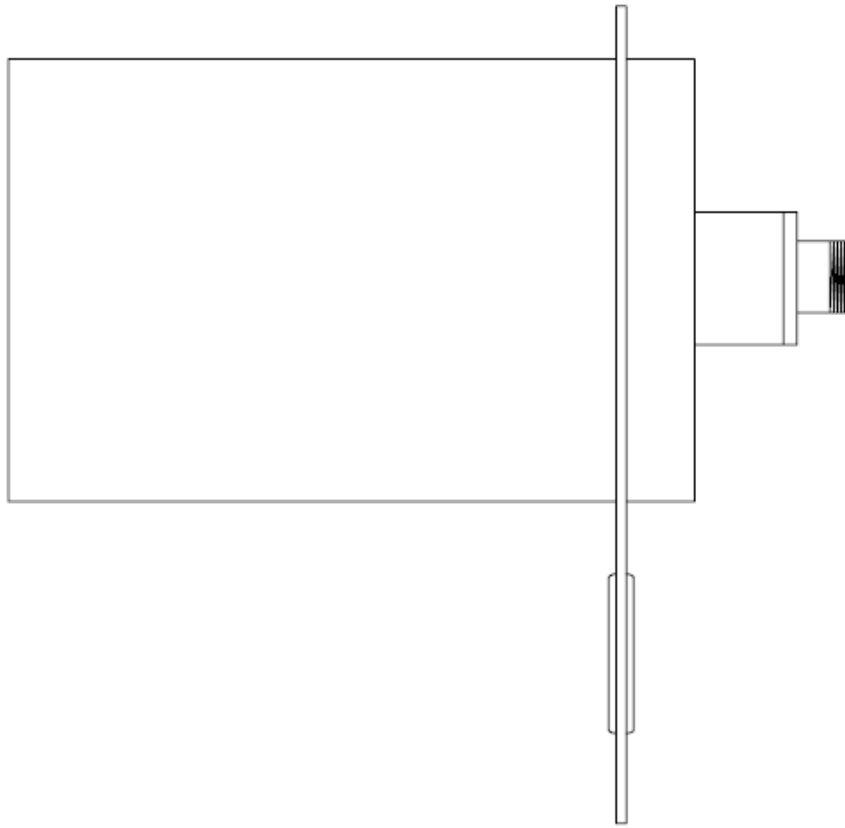

Step 6:


Put the spout with front panel into digged hole of wall exactly and fasten it by screw.

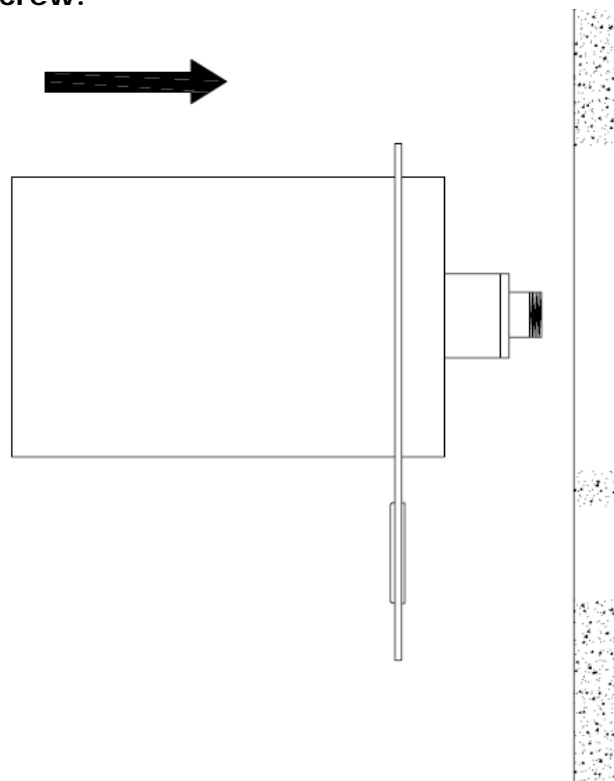

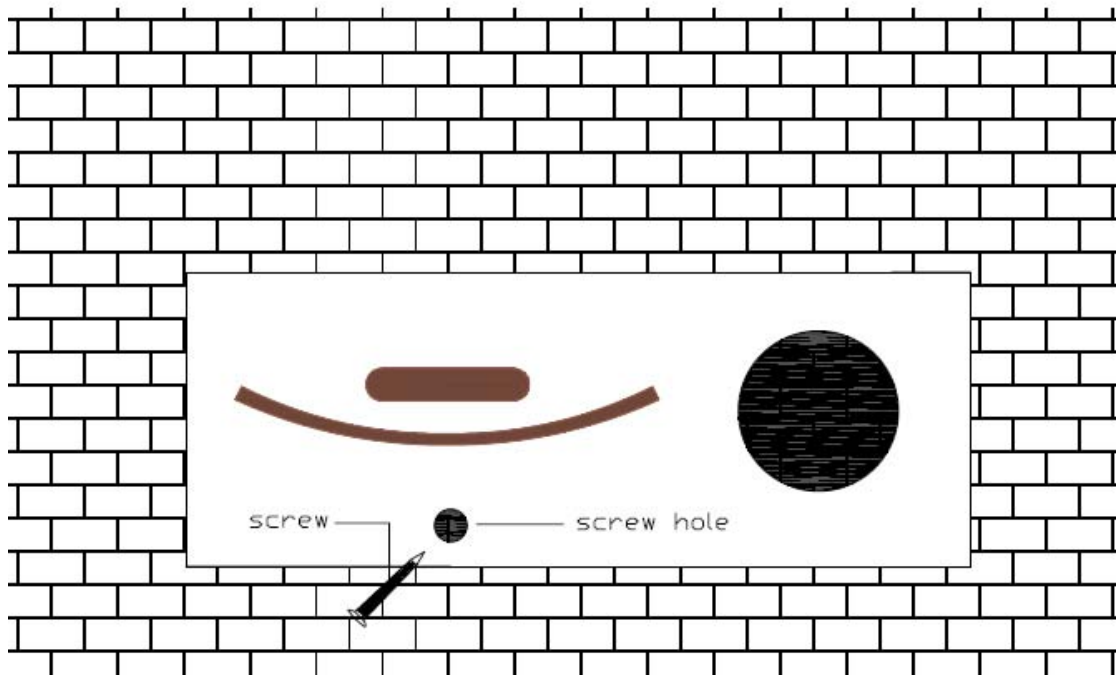


Step 7:

Through the Thermostatic valve in the hole of wall and clockwise rotation into the rubber ring, adjust the escutcheon and nut to fasten the Thermostatic valve body with panel and wall.

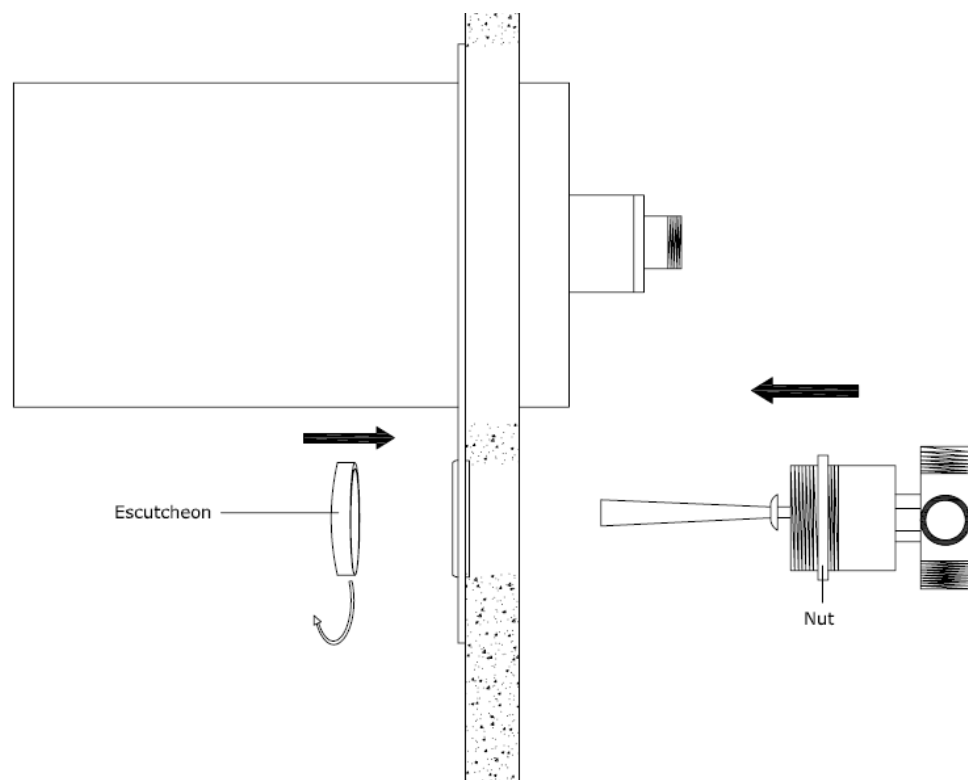

Step 8:

Connect spout water inlet connector with Thermostatic valve's water outlet connector as below:

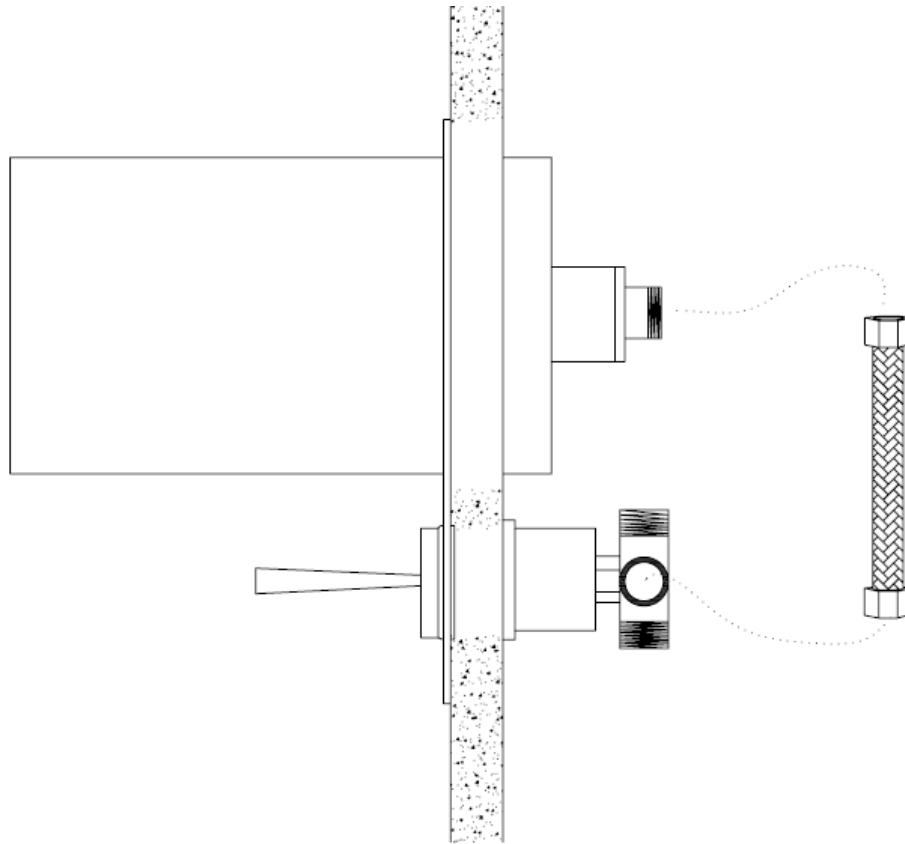



Step 9:

Inspect hot and cool water tube, please clean it at first if necessary.

Step 10:

Connect your house hot water supply tube and cool water supply tube with Thermostatic valve body's hot water inlet connector and cold water inlet connector separately.

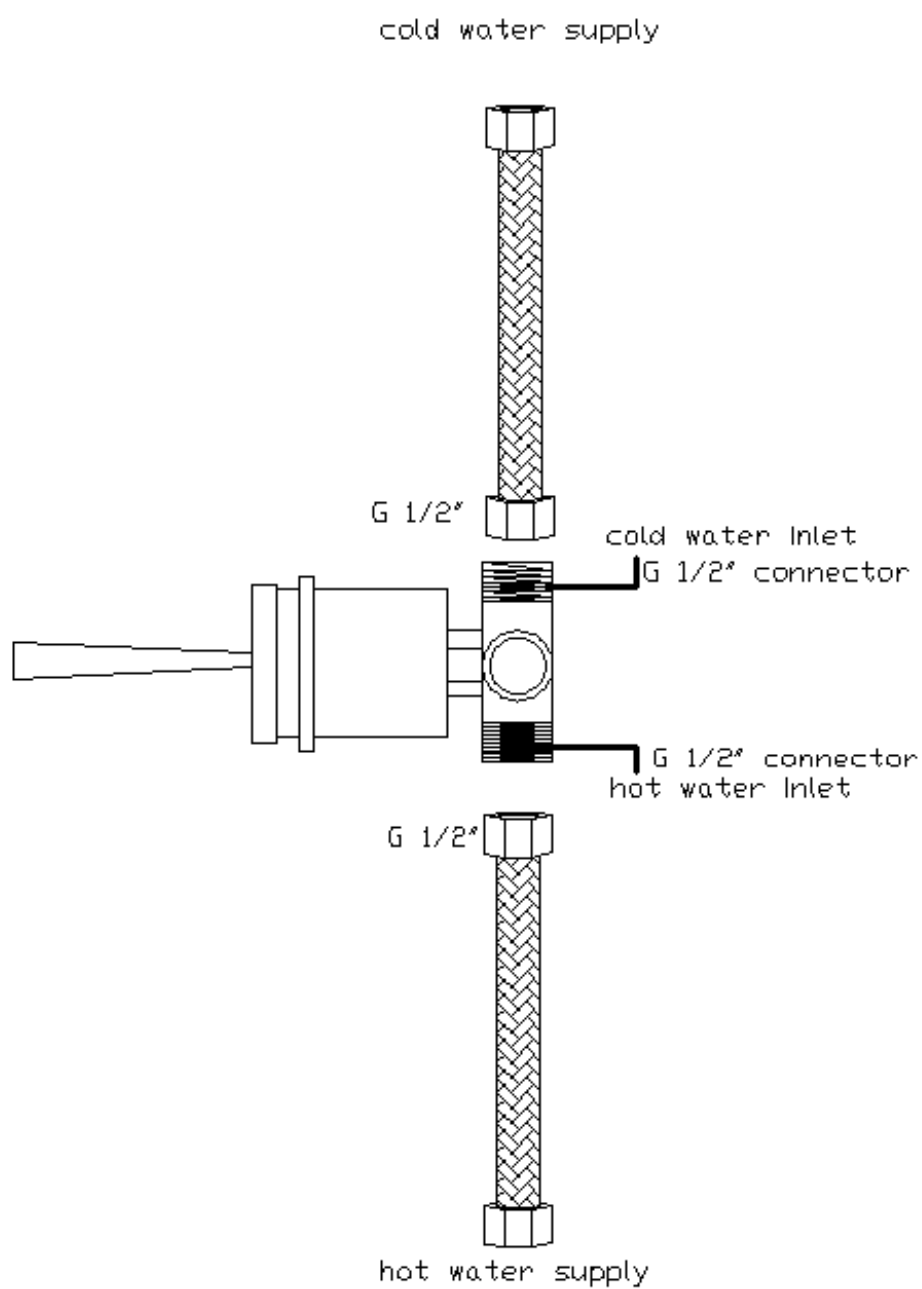

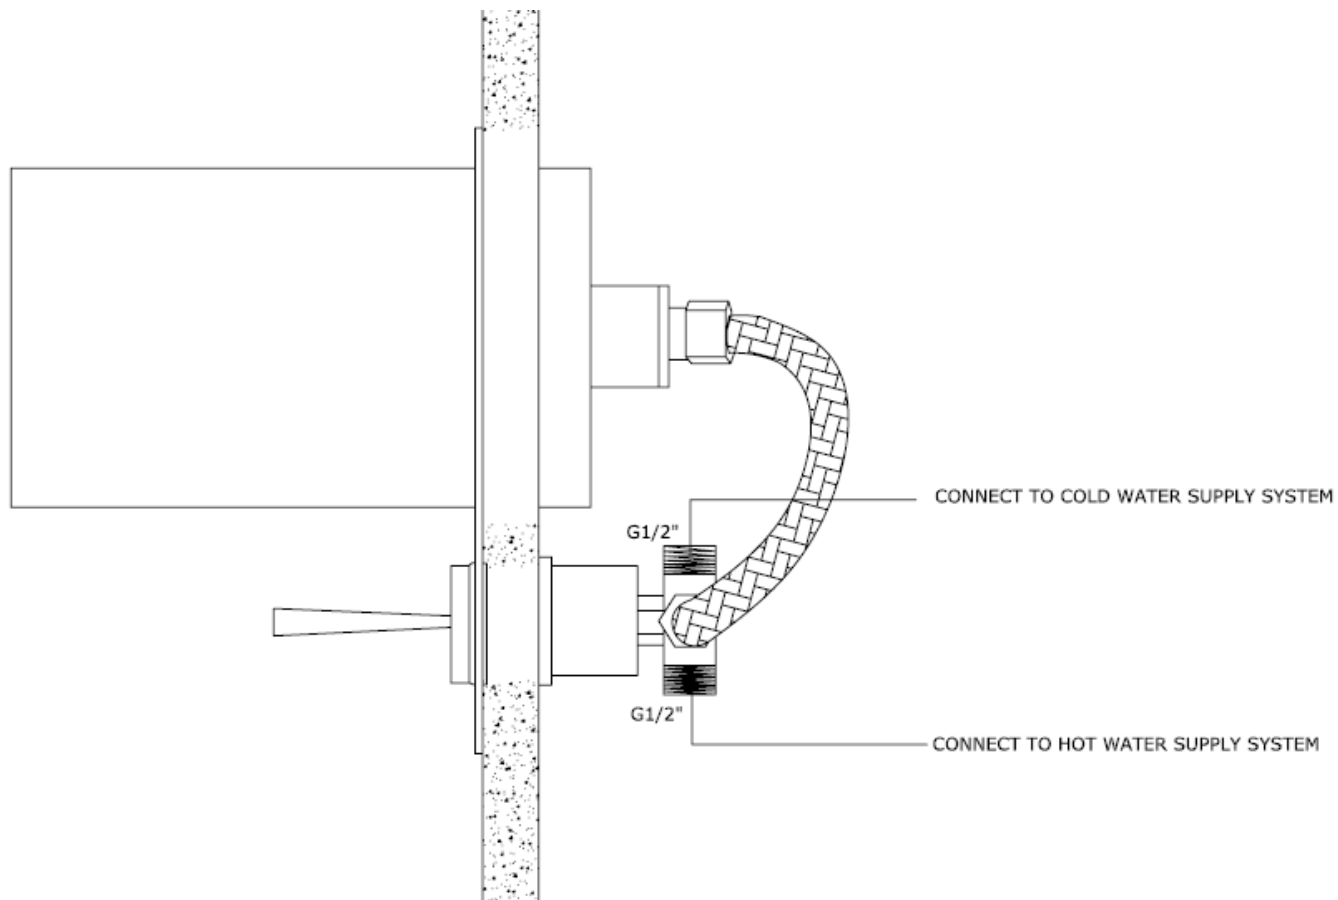

USAGE CLEANING & MAINTENANCE

- Clean the faucets and showers as and when required. Regular cleaning can prevent calcification.
- Never use cleaning materials contain hydrochloric, formic, phosphoric or acetic acid, which may cause considerable damage.
- Never use cleaning materials or appliances with an abrasive effect, such as unsuitable cleaning powders, sponge pads, or micro fiber cloths.
- After cleaning, rinse thoroughly the faucet with clean water to remove any cleaner residue.
- Unscrew and clean the aerator regularly.

TROUBLESHOOTING

| Symptom | Solution |
|---|--|
| Faucet leaks from the handle | A. Tighten the packing nut B. Replace the "O" ring or packing |
| The water pressure is too low | A. Make sure the water supply valves under the sink are turned on all the way B. Clean or replace the aerator C. Check plumbing system for water pressure problems |
| The spout sprays water all over | A. Clean or replace the aerator B. Replace the aerator washer |
| Water is leaking from the faucet under the sink | A. Check the water supply connections to the faucet B. Inspect the water supply lines or hoses for leaks |
| Handle is loose | A. Remove the cap and tighten the screw B. Locate and tighten the hex set screw C. Remove the handle and check for stripped teeth on the stem. |
| LED does not illuminate | A. Increase the water press B. Clean the strainer of hot and cold water inlet |



HONGKONG SUMERAIN SANITARY INDUSTRY CO.,LIMITED

Address: ROOM 1018, HOLLYWOOD PLAZA 610 NATHAN ROAD MONGKOK, KL
Factory Address: Shuikou Industrial Park, Kaiping City, Guangdong Province,
China (Mainland)
Tel: +86-750-2731579
Toll Free: 400-0999-075 (China mainland)
Fax: +86-750-2715258
E-mail: hk@sumerain.com

SUMERAIN INTERNATIONAL GROUP – AMERICA Branch

Address: 13455 Harper Dr.
Saratoga, CA 95070
USA
Tel: +1-408-867-8884
FAX: +1-408-867-4272
E-mail: us@sumerain.com