
FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1). This device may not cause harmful interference, and
- (2). This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Product Information

1. Product design and specifications are subject to change without notice. This includes primary product specifications, software, software drivers, and user's manual. This User Manual is a general reference guide for the product.

2. The product and accessories that come with your camera may be different from those described in this manual. This is due to the fact that different retailers often specify slightly different product inclusions and accessories to suit their market requirements, customer demographics, and geographical preferences. Products very often vary between retailers especially with accessories such as batteries, chargers, AC adapters, memory cards, cables, carrying cases/pouches, and language support. Occasionally a retailer will specify a unique product color, appearance, and internal memory capacity. Contact your dealer for precise product definition and included accessories.
3. The illustrations in this manual are for the purpose of explanation and may differ from the actual design of your camera.
4. The manufacturer assumes no liability for any errors or discrepancies in this user manual.
5. For driver updates, you can check the "Download" section of our website, www.geniusnet.com.tw.

SAFETY INSTRUCTIONS

Read and understand all **Warnings** and **Cautions** before using this product.

Warnings

- **If foreign objects or water have entered the camera, turn the power OFF and remove the batteries and the AC power adapter.**

Continued use in this state might cause fire or electric shock. Check with your retailer.



- **If the camera has fallen or its case has been damaged, turn the power OFF and remove the batteries and the AC power adapter.**

Continued use in this state might cause fire or electric shock. Check with your retailer.



- **Do not disassemble, change or repair the camera.**

This might cause fire or electric shock. For repair or internal inspection, ask your retailer.





- **Use the supplied AC adapter only with the indicated power supply voltage.**


Use with any other power supply voltage might cause fire or electric




shock.


- **Do not use the camera in areas near water.**
This might cause fire or electric shock. Take special care during rain, snow, on the beach, or near the shore. 


 - **Do not place the camera on inclined or unstable surfaces.**
This might cause the camera to fall or tilt over, causing injury. 


 - **Keep the batteries out of the reach of children.**
Swallowing batteries might cause poisoning. If the battery is accidentally swallowed, immediately consult a physician. 


 - **Do not use the camera while you are walking, driving or riding a motorcycle.**
This might cause you to fall over or result in a traffic accident. 
-


Cautions

- **Insert the batteries paying careful attention to the polarity (+ or -) of the terminals.**
Inserting the batteries with its polarities inverted might cause fire and injury, or damage to the surrounding areas due to the battery rupturing or leaking. 

 - **Do not fire the flash close to anyone's eyes.**
This might cause damage to the person's eyesight. 

 - **Do not subject the LCD monitor to impact.**
This might damage the glass on the screen or cause the internal fluid to leak. If the internal fluid enters your eyes or comes into contact with your body or clothes, rinse with fresh water.
If the internal fluid has entered your eyes, consult a physician to receive treatment. 

 - **A camera is a precision instrument. Do not drop it, strike it or use excessive force when handling the camera.**
This might cause damage to the camera. 

 - **Do not use the camera in humid, steamy, smoky, or dusty places.**
This might cause fire or electric shock. 
-

-
- **Do not remove the battery immediately after long periods of continuous use.**
The battery becomes hot during use. Touching a hot battery might cause burns. ⊘

 - **Do not wrap the camera or place it in cloth or blankets.**
This might cause heat to build up and deform the case, resulting in fire. Use the camera in a well-ventilated place. ⊘

 - **Do not leave the camera in places where the temperature may rise significantly, such as inside a car.**
This might adversely affect the case or the parts inside, resulting in fire. ⊘

 - **Before you move the camera, disconnect cords and cables.**
Failure to do this might damage cords and cables, resulting in fire and electric shock. ⊘
-

Notes on Battery Usage

When you use the battery, carefully read and strictly observe the **Safety Instructions** and the notes described below:

- Different battery types and surrounding temperatures may affect the battery performance.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce camera performance.
- If you are using the new rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) might affect the number of pictures that can be taken. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
- The battery may feel warm when using the camera for an extended period of time or using the flash continuously. This is normal and not a malfunction.
- The camera may feel warm when being used continuously or for an extended period of time. This is normal and not a malfunction.
- If you will not be using the batteries for an extended period of time, remove them from the camera to prevent leakage or corrosion.
- Always keep the terminals in a clean state.

CONTENTS

INTRODUCTION7-8

Overview
Package contents

GETTING TO KNOW THE**CAMERA9-13**

Front view
Rear view
Control Buttons
Top View of Docking Cradle
LCD monitor information

PREPARING THE**CAMERA14-17**

Inserting the Battery
Docking Cradle
Charging the Battery
Using the AC Power Adapter
Attaching the Camera Strap
Inserting and Removing an SD Memory Card

GETTING STARTED18-21

Turning the Power On/Off
Entering the Main Menu
Setting the Date and Time
Choosing the Screen Language
Formatting an SD Memory Card or Internal Memory
Setting Image Resolution and Quality
Using the LCD Monitor

CAMERA MODE21-28

Shooting Images
Useful Scene Mode
Reviewing the Last Image
Using the Zoom Function
Using the Macro (Close-UP) Mode
Using the Flash
Using the Self-Timer
Adjusting the Exposure
Setting White Balance

ADVANCED SHOOTING ...28-31

Continuous Shooting
Auto Exposure Bracketing (AEB)
Adjust White Balance Manually

PLAY MODE-**THE BASICS31-35**

Viewing Images
Magnifying Images
Thumbnail Display (Index Playback)
Slideshow Display
Resizing an Image

MOVIE MODE35-36

Recording Video Clips
Playing Back Video Clips

PLAY MODE-ADVANCED**FUNCTIONS36-48**

Playing Back Images/Video Clips on TV
Rotating Images in the Display
Deleting Images/Video Clips

Protecting Images/Video Clips
Setting the DPOF
Connecting to a PictBridge Compliant
Printer
Changing the Camera Startup Logo

AUDIO MODE48-50

Recording Voice Clips
Playing Back a Voice Recording File
Deleting a Voice Recording File

**TRANSFERRING FILES FROM
YOUR DIGITAL STILL CAMERA
TO A COMPUTER51-53**

Step 1: Installing the USB Driver (Windows
98/98SE users only)
Step 2: Connecting the digital still Camera
to your computer
Step 3: Downloading Images, video clips
or voice recording files

**INSTALLING THE EDIT
SOFTWARE53-54**

Installing Photo Explorer
Installing Photo Express

**USING THE DIGITAL STILL
CAMERA AS A**

PC CAMERA55-57

Step 1: Installing the PC camera Driver
(same as USB driver)
Step 2: Connecting the digital still Camera
to your computer
Step 3: Run your application software (i.e.
Windows NetMeeting)

MENU OPTIONS57-65

Camera Menu
Movie Menu
Play Menu
Setup Menu

**CONNECTING YOUR
CAMERA TO OTHER
DEVICES66**

SPECIFICATIONS67

APPENDIX68-70

Troubleshooting Guide
Possible Number of Recordable Image
Approximate Duration of Recording Time

INTRODUCTION

Overview

Thank you for purchasing this new digital still camera!

Equipped with a 5.0 Mega pixels CCD sensor, your camera delivers good quality, 2560 x 1920 resolution images.

Other features provided by the camera include the following:

- **5.0 Mega pixels**

A high-resolution CCD sensor provides 5.0 mega pixels for good quality of images.

- **USB connection (USB 2.0 compliant)**

Still images, video clips, or voice recording files that you have recorded can be downloaded to your computer using the USB cable (A USB driver is required for Win 98 and Win98SE).

- **Auto flash**

An auto flash sensor automatically detects the shooting (lighting) conditions and determines whether the flash should be used.

- **2.0" LTPS color image LCD monitor DPOF functionality**

DPOF can be used to print your images on a DPOF compatible printer by simply inserting the memory card.

- **Optical zoom: 3x**

- **Digital zoom**

Preview mode: 4x / Playback mode: 8x

- **10MB internal (built-in) memory**

Images can be captured without using a memory card.

- **PictBridge support**

You can connect the camera directly to a printer that supports PictBridge and perform image selection and printing using the camera monitor screen and controls.

■ **Support for SD memory card for memory expansion**

You may wish to expand the memory capacity (up to 512MB capacity) by using an external memory card.

■ **Camcorder, PC Camera and voice recorder support provided editing software: Photo Explorer / Photo Express**

You can enhance and retouch your images on your computer by using the provided editing software.

Package contents

Carefully unpack your package and make sure that you have the following items. In the event that any item is missing or if you find any mismatch or damage, promptly contact your dealer.

- | | |
|--------------------------------|--|
| ■ Digital still camera | ■ USB cable |
| ■ AV cable | ■ Software CD-ROM |
| ■ User's manual | ■ Camera strap |
| ■ Quick guide | ■ Camera pouch |
| ■ Docking Cradle | ■ AC Power Adapter |
| ■ AC Plug Adaptor for EU to US | ■ One Rechargeable Lithium Ion Battery |


 **NOTE**

- Accessory and components may vary by different retailer.

GETTING TO KNOW THE CAMERA


Front view

1. Self-timer LED
2. Shutter button
3. Power button
4. Strap eyelet
5. Battery/SD memory card cover
6. Lens
7. Auto-Focus auxiliary LED
8. Flash
9. Microphone

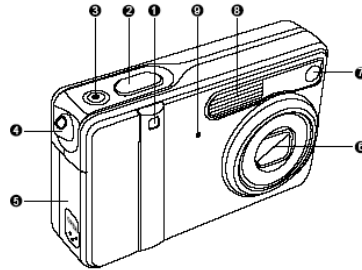






Rear view

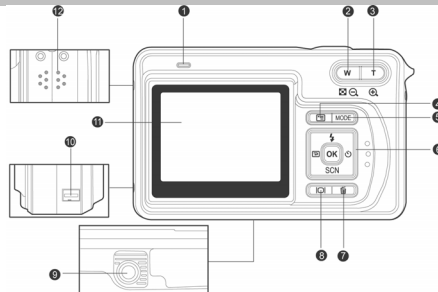 1. LED indicator
2. **W** / Zoom out (Wide-angle) button
Thumbnail button
3. **T** / Zoom in (Telephoto) button
4. Menu button
5. **MODE** button
6. Control buttons
7. Delete button
8. Display (LCD on/off) button
9. Tripod socket
10. Docking station terminal
11. LCD monitor (DC IN 5V port/USB port)
12. Speaker




Control Buttons

 1.  Flash button
2.  Quick View button
3. **SCN**  Scene Mode button
4.  Self-Timer button
5. **OK** button

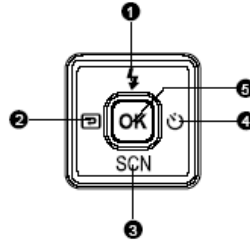

Top View of Docking Cradle


1. Cradle
2. USB port
3. AV-OUT port
4. DC IN 5V port
5. Cradle plug

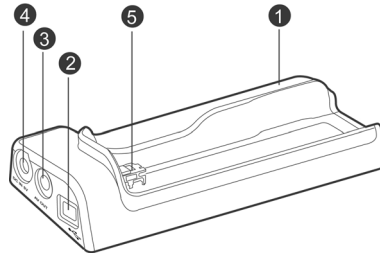

LCD Monitor Icons


Camera mode

1. Camera mode
2. Image quality
 - [★★] Super Fine
 - [★] Fine
 - [★] Normal
3. Image size
 - [5M] 2560 x 1920
 - [3M] 2048 x 1536
 - [1.7] 1280 x 960
 - [0.7] 640 x 480
 - [OFF] TIFF IMAGE
4. Possible number of shots
5. Memory card indicator
6. Remaining battery status
 - [Full] Full battery power
 - [Medium] Medium battery power
 - [Low] Low battery power
 - [Empty] No battery power
7. Scene mode
 - [AUTO] Auto Mode
 - [Backlight] Backlight Mode
 - [Landscape] Landscape Mode
 - [Macro] Macro Mode
 - [Night Scene] Night Scene Mode
 - [Portrait] Portrait Mode
 - [Sports] Sports Mode
8. Flash mode
 - [Red eye] Red eye
 - [No flash] No flash
 - [Auto flash] Auto flash
9. Self-timer mode
 - [3] 3 sec. delay
 - [10] 10 sec. Delay
 - Off
10. White balance
 - [AUTO] Auto
 - [Daylight] Daylight
 - [Cloudy] Cloudy
 - [Sunset] Sunset
 - [Tungsten] Tungsten
 - [Fluorescent] Fluorescent
11. Capture mode
 - [S] Single
 - [Continuous] Continuous
 - [AEB] AEB
12. Time
13. Date
14. Focus area
15. Zoom state

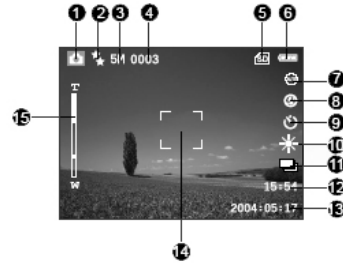

Movie mode

1. Movie mode
2. Recordable movie time available
3. SD memory card indicator (if present)
4. Battery power indicator
5. Time
6. Date
7. Zoom state

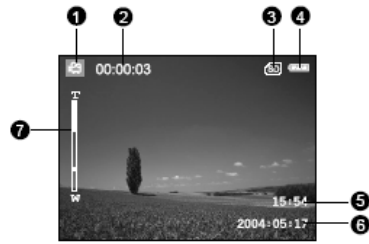

Audio mode

1. Audio mode
2. Current file/ total number of audio files
3. SD memory card indicator (if present)
4. Battery power indicator
5. Sound level (speaker volume)
6. Audio file name

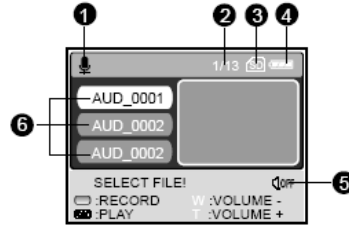



Image Playback

1. Play mode
2. Playback frame number
3. SD memory card indicator (if present)
4. Battery power indicator
5. Image size
6. Camera mode




Video Playback

1. Play mode
2. Playback frame number
3. SD memory card indicator (if present)
4. Battery power indicator
5. Fast reverse playback indicator
6. Fast forward playback indicator
7. Movie mode

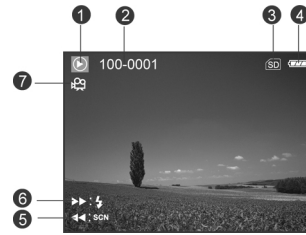

Audio Playback

1. Audio mode
2. Current file/ total number of audio files
3. SD memory card indicator (if present)
4. Battery power indicator
5. Sound level (speaker volume)
6. Audio file name

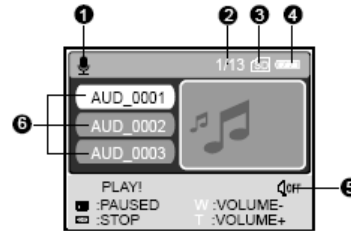

LED Indicators


Indicator	State	Description/Activity
LED indicator	Solid red	1. The digital still camera is powering up. 2. The battery is being charged.
LED indicator	Solid green	USB communication is in progress.
	Blinking green	USB transfer is in progress.
Self-timer indicator	Blinking blue	The self-timer function is activated.

PREPARING THE CAMERA

Installing the Battery

We highly recommend you to use the specified rechargeable lithium-ion battery to realize the full capability of your digital still camera before initial use. Make sure that the power of the digital still camera is off before inserting or removing the battery.

1. Slide the battery cover in the direction of the [OPEN] arrow.
2. Insert the battery in the correct orientation as shown in the illustration.
3. Close the battery cover.

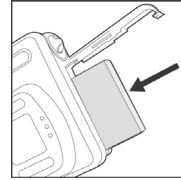

To remove the batteries

Hold the camera with the battery cover facing upward, then open the battery cover and remove the batteries.


NOTE

- Be careful not to drop the batteries when opening or closing the battery cover.

Docking Cradle


With the docking cradle, you can position your digital still camera and connect it to other media devices to play back your images, video clips, or voice recording files (output to a TV monitor or another recorder recording device, for example) on your desktop. The cradle will facilitate the battery charge of the camera in conjunction with an AC power adapter.

1. Position the camera on the cradle.
2. Match the docking connectors and carefully insert the camera until it fits in place.

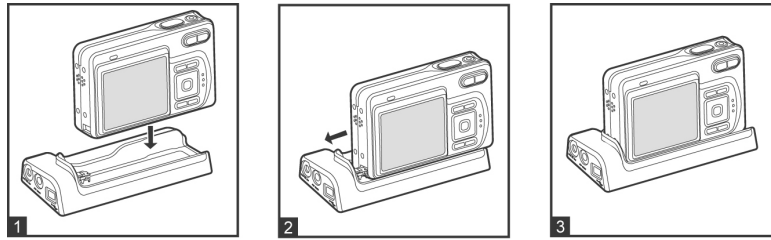

Charging the Battery

The status of the battery will affect the performance of the digital still camera. To maximize battery performance and lifetime, it is recommended that you fully charge the battery using the optional AC power adapter and then fully discharge it (through normal use) at least one time. Please note that the digital still camera must be powered off before charging the battery. Otherwise, the power will be provided only to the digital still camera.

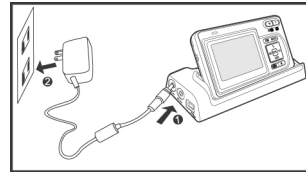

1. Place the camera on the cradle. Connect the AC power adapter to the jack on the cradle labeled "DC IN 5V".
2. Connect the other end of the AC power adapter to a wall outlet.
 - Charging time differs depending on the ambient temperature and the status of battery.




NOTE

- The digital still camera must be used with the specified AC power adapter. Damage caused by the use of an incorrect adapter is not covered under the warranty.
- Always make sure that the digital still camera is off before removing the battery.
- The battery may feel warm after it has been charged or immediately after being used. This is normal and not a malfunction.
- When using the digital still camera in cold environments, keep the digital still camera and its battery warm by holding it inside your jacket or other warm protective environment.
- The battery is not fully charged at shipment and must be fully charged before being used.

Using the AC Power Adapter

1. Make sure the camera is turned off.
2. Connect one end of the AC power adapter to the jack on the cradle labeled "DC IN 5V".
3. Connect the other end to an electrical outlet.

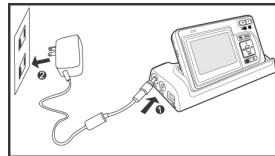


NOTE

- Make sure to use the specified AC power adapter or the camera. Damage caused by the use of an incorrect adapter is not covered under the warranty.
- To prevent unexpected auto power off resulting from no battery power left during the process of transferring your images to the computer, use the AC power adapter as a power supply.

Attaching the Camera Strap


Attach the strap as shown in the illustration.

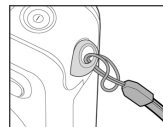

Inserting and Removing an SD Memory Card (Optional Accessory)

The digital still camera comes with 10MB of internal memory, allowing you to store video clips, captured images, or voice recording files in the digital still camera. However, you can also expand the memory capacity by using an optional SD (Secure Digital) memory card so that you can store more files.

1. Always make sure the digital still camera is turned off before inserting or removing a memory card.

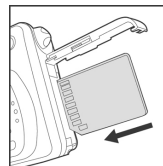


2. Insert an SD memory card in the correct orientation as shown in the illustration.
3. Close the battery/SD memory card cover.
 - To remove the SD memory card, make sure the camera is turned off. Press lightly on the edge of the memory card and it will eject.

Removing the SD card

Open the battery/SD card cover, press lightly on the edge of the SD card and it will eject.



 NOTE


- Be sure to format an SD memory card with this digital still camera before using it. Refer to section in the manual titled “**Formatting an SD Memory Card or Internal Memory**” for further details.
- To prevent valuable data from being accidentally erased from an SD card, you can slide the write protect tab (on the side of the SD memory card) to “LOCK”.
- To save, edit, or erase data on an SD memory card, you must unlock the card.



GETTING STARTED

Turning the Power On/Off


1. Press the  button until the digital still camera turns on.
2. To turn the power off, press and hold the  button again.

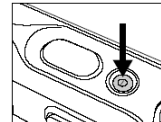


Entering the Main Menu

After turning on the digital still camera, the Main Menu screen appears.

Follow the steps below to select the desired mode:

1. Press the  button to turn on the power.
2. Press the **MODE** button to access in Main Menu screen

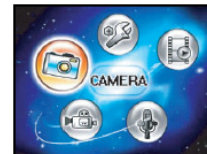


- Use ◀, ▼, ▲ or ▶ to choose the desired mode, then press the **OK** button.
- For returning to Main Menu from each mode, press the **MODE** button again.


Setting the Date and Time

The date/time setting screen will automatically appear:

When first turning the camera on.

When turning the power on after leaving the camera without battery for an extended period of time.


- Press the **ⓘ** button to turn on the camera.
- Press the **MODE** button to access in [ (SETUP)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
- Press ▶ to select the [CUSTOM] menu.
- Use ◀, ▼, ▲ or ▶ to select [DATE SETUP], then press the **OK** button.
- Press ◀ or ▶ to select the Year, Month, Day and Time fields.
 - To increase a value, press the ▲ button.
 - To decrease a value, press the ▼ button.
 - The time is displayed in 24-hours format.
- Press the **OK** button after all fields are set.

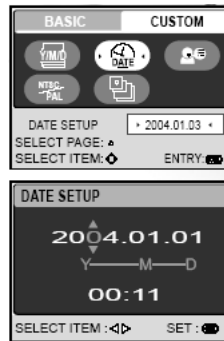

Choosing the Language

Follow the steps below to specify in which language menus and messages are to be displayed on the LCD monitor from the following: 日本語, ENGLISH, 繁體中文, 简体中文, FRANÇAIS, DEUTSCH, ITALIANO and ESPAÑOL.



- Press the **ⓘ** button to turn on the camera.


2. Press the **MODE** button to access [ (SETUP)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
3. Press ▶ to select the [CUSTOM] menu.
4. Use ◀, ▼, ▲ or ▶ to select [LANGUAGE], then press the **OK** button.
5. Use ▲ or ▼ to select the language you want.
6. Press the **OK** button to confirm.



Formatting an SD Memory Card or Internal Memory

The term "Formatting" means preparing an "SD Memory Card" to record images; this process is also called "initialization". This utility formats the internal memory (or memory card) and erases all stored images and data.

1. Press the  button to turn on the camera.
2. Press the **MODE** button to access [ (SETUP)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
 - The [BASIC] menu is displayed.
3. Use ◀, ▼, ▲ or ▶ to select [FORMAT], then press the **OK** button.
4. Use ▲ or ▼ to select [YES], then press the **OK** button to confirm.

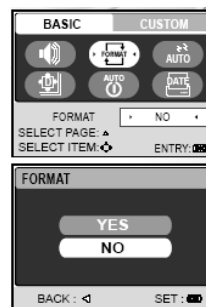

NOTE

- When you format an SD memory card, be aware that all data will be permanently erased. Protected images are also erased.

- To format the internal memory, do not insert a memory card into the camera. Otherwise, you will format the memory card.
- Formatting is an irreversible action and data cannot be recovered at a later time.
- An SD memory card having any problem cannot be properly formatted.



Setting Image Resolution and Quality



As you get to know the digital still camera, you can set the image resolution (number of vertical and horizontal pixels) and image quality (compression ratio) based on the types of images you want to shoot.

These settings affect the number of images that can be stored in memory, or on a memory card.

Higher resolution and higher quality images provide finer detail but cause the images file size to be larger.

To change image resolution or image quality, perform these steps below:

1. Press the **ⓘ** button to turn on the camera.
2. Press the **MODE** button to access in [ (CAMERA)] mode with **◀**, **▼**, **▲** or **▶**, then press the **OK** button.
3. Press the  button.
 - The [PICTURE] menu is displayed.
4. Use **◀**, **▼**, **▲** or **▶** to select [SIZE], then press the **OK** button.
5. Use **▲** or **▼** to select the desired setting, then press the **OK** button.
6. Follow steps 4 and 5 above to set the [QUALITY].

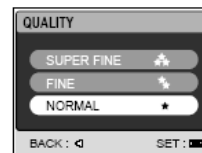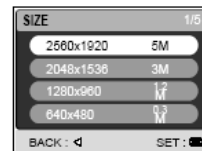


NOTE

- The possible number of shots and recording time depend on the storage size, resolution and quality settings and the subject of the image to be captured. Check the Appendix.
- You can resize the images later. (Please refer to section in this manual titled "**Resizing an Image**" for further detail.

Using the LCD Monitor

Your camera is equipped with a 2.0" full color TFT LCD monitor to help you compose images, replay recorded images/video clips or adjust menu settings. The mode icons, text and numbers displayed on the monitor may vary according to the current settings.

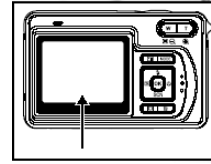


1. Press the **ⓘ** button to turn on the camera.
2. Compose your scene on the LCD monitor.
3. Press the shutter button.

NOTE

- The LCD monitor darkens in strong sunlight or bright light. This is not a malfunction.
- To prevent your images from being blurred while pressing the shutter button, always hold it carefully. This is especially important when you are shooting under low lighting conditions, which your camera may decelerate the shutter speed to ensure your images are properly exposed.


 
CAMERA MODE

Shooting Images

1. Press the **ⓘ** button to turn on the power.
2. Press the **MODE** button to access [] (CAMERA) mode with **◀**, **▼**, **▲** or **▶**, then press the **OK** button.
3. Compose the image on the monitor screen so that the main subject is within the focus frame.
4. Press the shutter button down half way to focus the image.
 - When you press the shutter button down half way, the camera's Auto Focus feature automatically focuses the image and exposure.
5. Press the shutter button the rest of the way down to capture the image.




NOTE





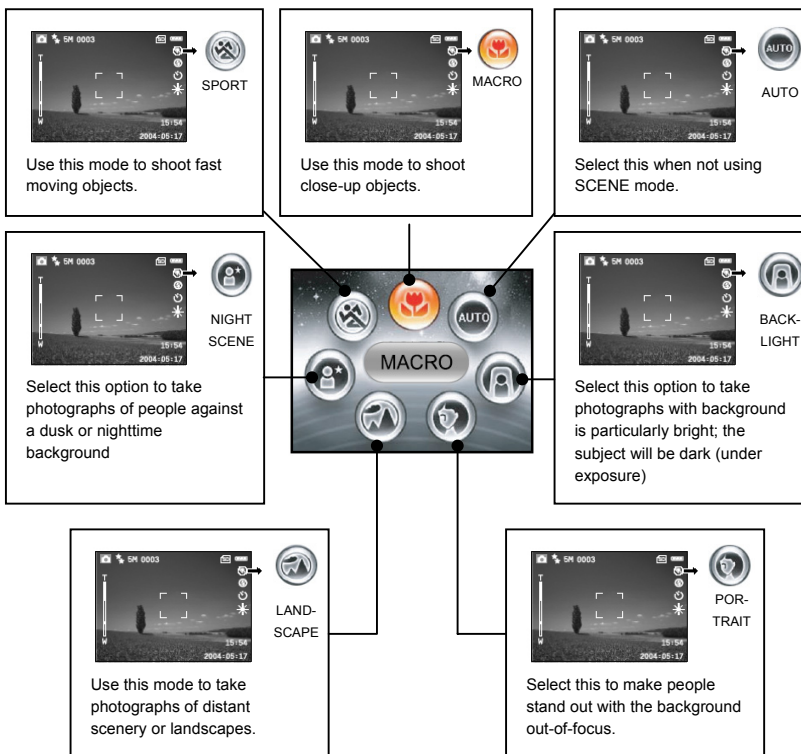

- The captured image appears to be larger than the one on the LCD after image captured.
- Pressing the  button switches the LCD monitor display mode. Each time you press the  button, the display changes in the following order: Standard Display → Simplified Display.

Useful Scene Mode

Your digital still camera offers you seven types of scene modes to capture images easily in a situation that is programmed to handle all adjustments for you by selecting the following shooting conditions.











To use the SCENE mode, follow the steps below:

1. Press the  button to turn on the camera.
2. Press  / **SCN** to access [SCENE] mode.
3. Use , ,  or  to select the desired scene mode, then press the **OK** button to confirm.
4. Compose the image and then press the shutter button.





Note for the following functions according to the desired scene from a menu:


 AUTO	The camera will automatically adjust the focus and exposure depending on the settings of ISO sensitivity and White Balance.
 BACKLIGHT	In this mode, Flash mode will be set to  (Forced Flash) automatically.
 LANDSCAPE	The Flash mode will be set to  (Flash Off).
 SPORT	In this mode, the low limit of shutter speed is 1/125.
 MACRO	The Flash mode will be set to  (Flash Off).

Reviewing the Last Image

The camera is equipped with the  button, allowing the most recent image to be displayed on the LCD monitor in the  /  mode.

 Use the following procedure to preview the last image captured.

1. Press  to display the last image captured. The last image displays on the LCD monitor.
 - Press  again to return to the normal shooting mode.
 - You can only view the last image with this function. To view all your recorded images, press the **MODE** button to access in PLAY mode to playback the still images. Refer to the section in this manual titled “PLAYBACK MODE—THE BASICS” for further details.

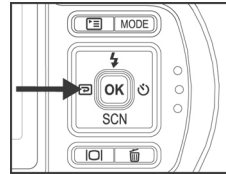


Using the Zoom Function

This camera is equipped with 3x optical zoom. The lens moves during the optical zoom photography, allowing you to capture telephoto and wide-angle shots. By using the optical zoom function; images appear closer by pressing the **T** button, or smaller away by pressing the **W** button.

Moreover, you can further enlarge the subjects with 4x digital zoom by pressing continuously the **T** button. It is activated after your camera reaches its maximum optical zoom factor (3x). A useful feature as it is, however, the more the image is magnified, the grainer the image may become.

To capture a zoomed image, perform the following steps:

1. Adjust the magnification ratio by using the **T/W** button.
 - To access the optical zoom function, press the **T** button as far as it can go. Press it again to activate the digital zoom.
2. Compose your scene and press the shutter button.
 - To exit the zoom photography, press continuously the **W** button.

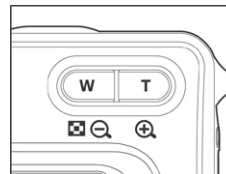
 

 
 





NOTE







- The digital magnification ranges from 1.5x to 4x (within 6 stages: 1.5x, 2x, 2.5x, 3x, 3.5x, 4x).
- While recording video clips, the zoom function cannot be activated.

Using the Macro (Close-Up) Mode

With this mode, the camera's lens switches the auto focus system to focus on subjects that are much closer to the lens. This feature allows you to shoot close-up objects, such as small insects or flowers to get the smallest detail.

1. Press the  button to turn on the camera.
2. Press  / **SCN** to access [SCENE] mode.
3. Use , ,  or  to choose [ (MACRO)], then press the **OK** button.
 - The  icon appears on the LCD monitor.
4. Compose your scene and press the shutter button.



- When not using MACRO mode at any time, press  / **SCN** again to choose  with , ,  or  and then press the **OK** button.


NOTE







- After a macro shot is taken **DO NOT FORGET** to reset the lens to the normal position.

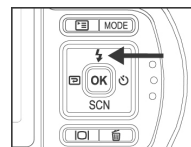Using the Flash





The flash is designed to function automatically when lighting conditions warrant the use of flash. You can take an image using a desired flash mode to suit your circumstances.

1. Press the  button to turn on the camera.





2. Press the  /  button to access [FLASH] mode.
3. Use , ,  or  to select the desired flash mode, then press the **OK** button.
 - The flash mode you set will be displayed on the LCD monitor.
4. Compose your scene and press the shutter button.

The camera has four flash modes: Red Eye, No Flash (default), Auto Flash and Forced Flash. The table below will help you to choose the appropriate flash mode:


Flash mode	Description
 RED EYE	Use this mode to reduce the red-eye phenomenon when you want to take natural-looking photographs of people and animals in low-light conditions. When taking photographs, the red-eye phenomenon can be reduced by asking the subject (person) to look at the digital still camera or get as close to the digital still camera as possible.
 NO FLASH	Use this mode in an environment that the flash use is prohibited or under the situation that the distance to the subject is too far away for the flash to have any effect.
 AUTO FLASH	The flash fires automatically according to suit the photographic conditions.
 FORCED FLASH	The flash will always fire regardless of the surrounding brightness. Select this mode for recording images with high contrast (backlighting) and deep shadows.

Using the Self-Timer


The self-timer can be set in [ (CAMERA)] mode. This feature is used in situations such as group shots.

1. Secure the camera to a tripod or place it on a stable surface.
2. Press the  button to turn on the power.

 3. Toggle / to select the desired self-timer mode.



4. Compose your scene and press the shutter button.
- The self-timer function is activated and the status of countdown will be displayed on the LCD monitor.
 - The photography is then taken after the preset time.
 - To cancel the self-timer at any time, press to disrupt the sequence.

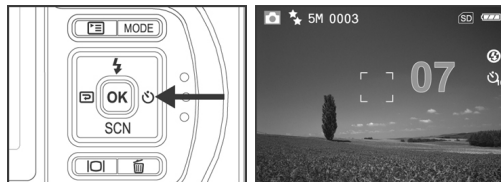


NOTE



 

 

 
 

- After one shot is taken, the self-timer mode is turned off.
- If you wish to take another image using the self-timer, repeat these steps.

Adjusting the Exposure

You can manually adjust the exposure determined by the digital still camera. Use this mode when the proper exposure cannot be obtained, for example, when the contrast (difference between light and dark) between the subject and the background is extremely large. The EV compensation value can be set in the range from -2.0EV to $+2.0\text{EV}$.

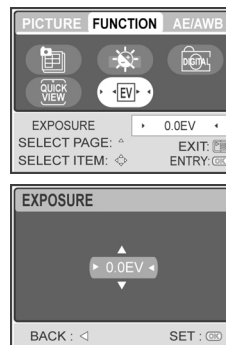






 



1. Press the **MODE** button to access [] (CAMERA)] mode with , , or , then press the **OK** button.




2. Press , then use  to select the [FUNCTION] menu.
3. Use , ,  or  to select [EXPOSURE], then press the **OK** button.
4. You can use  or  to set the range of EV compensation values from -2.0EV to $+2.0\text{EV}$, then press the **OK** button.
 - To reactive auto exposure, select [0EV] in step 4.
5. To exit from the menu, press the  button.

Setting White Balance

This feature lets you make adjustments to compensate for different lighting types according to your shooting conditions.



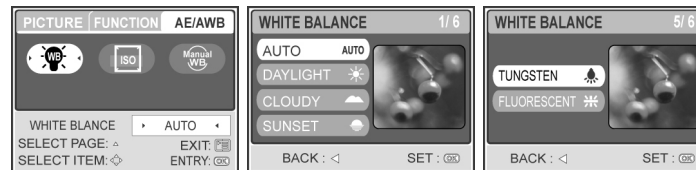

1. Press the **MODE** button to access [ (CAMERA)] mode with , ,  or , then press the **OK** button.
2. Press , then toggle  to select the [AE/AWB] menu.
3. Use  to select [WHITE BALANCE], then press the **OK** button.
4. Use  or  to select the desired setting.
5. To exit from the menu, press the  button.




ADVANCED SHOOTING

Continuous Shooting

This mode is used for continuous shooting. Pictures are taken continuously while the shutter release button is pressed.

1. Press the **MODE** button to access [CAMERA] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. Press , then use ▶ to select the [FUNCTION] menu.
3. Use ▼ to select [CAPTURE MODE], then press the **OK** button.
4. Use ▲ or ▼ to select [CONTINUOUS , then press the **OK** button.
5. To exit from the menu, press the  button.
 - The  indicator is displayed on the monitor screen.
6. Press the shutter button halfway to lock the focus.
7. Press the shutter button all the way to shoot.
 - Shooting will stop when the shutter button is released.

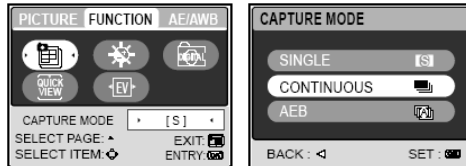





NOTE


- Maximum number of continuous shots: 10.
- In Continuous mode, the flash mode will be set to **OFF** automatically.

Auto Exposure Bracketing (AEB)

In this mode, the camera automatically changes the exposure within a set range to take three shots after you press the shutter button once. AEB settings can be combined with exposure compensation settings to extend the adjustment range.

1. Press the **MODE** button to access [CAMERA] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. Press , then use ▶ to select the [FUNCTION] menu.

3. Use ▼ to select [CAPTURE MODE], then press the **OK** button.
4. Use ▲ or ▼ to select [AEB ], then press the **OK** button.
5. To exit from the menu, press the  button.
 - The  indicator is displayed on the monitor screen.
6. Press the shutter button to shoot.

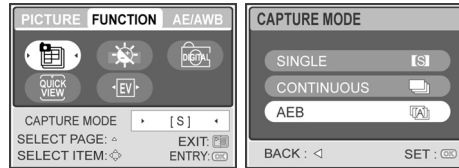




NOTE


- In AEB mode, the flash mode will be set to **OFF** automatically.

Adjust White Balance Manually


Manual white balance lets you configure the digital still camera for a particular light source and other conditions. Note that you must perform manual white balance under the same conditions you will be shooting under. You must also have a white piece of paper or other similar object on hand in order to perform this function.

1. Press the **MODE** button to access [ (CAMERA)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. Press , then toggle ▶ to select the [AE/AWB] menu.
3. Use ▼ and ▲ to select [MANUAL WB], then press the **OK** button.

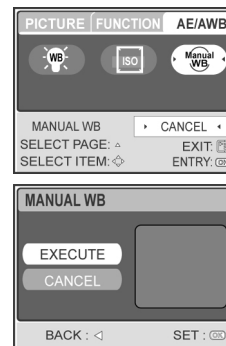




4. Point the camera at an enclosed gray card for which you can set the white balance.
 - This starts the white balance adjustment procedure.
5. Use ▲ or ▼ to select [EXECUTE], then press the **OK** button to confirm.
 - The procedure of manual white balance is complete.
 - If you wish to cancel [MANUAL WB] setting, press ▲ or ▼ to select [CANCEL].
6. To exit from the menu, press the  button.
7. Press the shutter button to shoot.

PLAY MODE - THE BASICS



In the  (PLAY) mode, you can view, magnify, delete images or play video clips back. This mode also provides thumbnail images display and slide show, allowing you to quickly search for the desired image.

Viewing Images

1. Press the  button to turn on the power.
2. Press the **MODE** button to access  (PLAY) mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
3. In the  (PLAY) mode, use ◀ or ▶ to select the desired images.
 - To view the previous image, press the ◀ button.
 - To view the next image, press the ▶ button.

















NOTE

- If there is no image stored in the internal memory or on the memory card. [NO PICTURE] message will appear on the monitor.
- Pressing  switches the LCD monitor display mode. Each time you press , the display changes in the following order: Standard display → Detailed display → No information.

Magnifying Images

While reviewing your images, you may enlarge a selected portion of an image. This magnification allows you to view the details. The zoom factor is displayed on the screen, showing the current magnification ratio. Images that are being played back can be enlarged in 14 levels of 8 times enlargement.

1. Press the **MODE** button to access [ (PLAY)] mode with , ,  or , then press the **OK** button.
2. In the [ (PLAY)] mode, use  or  to select the desired images.
 - To view the previous image, press the  button.
 - To view the next image, press the  button.
3. Adjust the zoom ration by using the **T/W** button.
 - To enlarge the selected image, press the **T** button.
 - To return to the normal image, press the **W** button.
 - The magnification factor is displayed on the LCD monitor.
4. To view different portion of the images, press , ,  or  to adjust the display area.
 - The displayed image is enlarged; you will see a white frame with a pink box inside.






 
 
The white frame indicates the entire image, while the pink box shows the location of the currently enlarged area.


NOTE

- The magnification factors range from 1.5x to 8x within 14 stages: 1.5x, 2.0x, 2.5x, 3.0x, 3.5x, 4.0x, 4.5x, 5.0x, 5.5x, 6.0x, 6.5x, 7.0x, 7.5x and 8.0x.

Thumbnail Display (Index Playback)

This function allows you to view four or nine thumbnail images on the LCD monitor simultaneously so you may search for a particular image.

1. Press the **MODE** button to access [ (PLAY)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. In the [ (PLAY)] mode, press to select [THUMBNAIL] with the ◀, ▼, ▲ or ▶ button, then press the **OK** button.
3. Use ▲ or ▼ to choose the desired number of thumbnail images to be displayed, then press the **OK** button.
 - Press the  button to exit from the menu.
4. In the [ (PLAY)] mode, press the **W** /  button.
 - Four or nine thumbnail images are displayed simultaneously.
5. Use ◀, ▼, ▲ or ▶ to select the image to be displayed at regular size, then press the **OK** button to display the selected image on full screen.

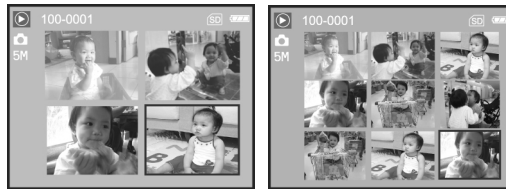


NOTE

- A [] or [] icon will be displayed in a thumbnail display

Slideshow Display

The slide show function enables you to play your images back automatically in sequential order. This is very useful and entertaining feature for reviewing recorded images and for presentations.

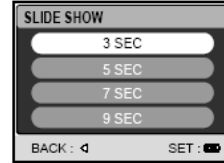


1. Press the **MODE** button to access in [] (PLAY) mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. In the [] (PLAY) mode, press [] to select [SLIDE SHOW] with ◀, ▼, ▲ or ▶, then press the **OK** button.
3. Use ▲ or ▼ to set the slideshow interval, then press the **OK** button.
 - The slide show starts.
 - The video clips are displayed in the first frame image, and not played back.
 - To stop slide show, press the **OK** button.

Resizing an Image

You can follow the steps below to set an image to one of the four sizes.

You can change the image size of a captured image to one of the following sizes: 2560x1920 pixel, 2048x1536 pixel, 1280x960 pixel and 640x480 pixel. The original image is retained even after resizing.

1. Press the **MODE** button to access [] (PLAY) mode with ◀, ▼, ▲ or ▶, then press the **OK** button.

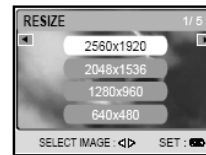

2. In the [⏪] (PLAY) mode, use ◀ or ▶ to select the desired image you want to resize.
3. Press [⏏] to select [RESIZE] with the ◀, ▼, ▲ or ▶ button, then press the **OK** button.
4. Use ▲ or ▼ to select the desired setting, then press the **OK** button to confirm.

MOVIE MODE

Recording Video Clips



1. Press the [⏻] button to turn on the power.
2. Press the **MODE** button to access [⏪] (MOVIE) mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
3. Press the shutter button to start recording.
4. Press the shutter button again to stop recording.



NOTE

- The function of optical zoom (3x) can be activated before you start to record video clips.
- Pressing the [⏏] button switches the LCD monitor display mode. Each time you press the [⏏] button, the display changes in the following order: Standard Display → Simplified Display.

Playing Back Video Clips

1. Press the **MODE** button to access [ (PLAY)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. In the [ (PLAY)] mode, use ◀ or ▶ to go through the images until the video clip you want to play back is displayed.
 - To view the previous image, press the ◀ button.
 - To view the next image, press the ▶ button.
3. Press the shutter button to start playing back the video clips.
 - To pause or resume video playback, press the shutter button.
 - To stop playback, press the **OK** button.
 - Use ⏪ to start fast reverse playback.
 - Use **SCN** to start fast forward playback.



NOTE


- The zoom function cannot be activated while playing the video clips back.
- To playback the video clips on the computer, we recommend you to use Windows Media Player 9.0 (WMP 9.0). You can download WMP version from the website at www.microsoft.com.

PLAY MODE - ADVANCED FUNCTIONS

Playing Back Images/Video Clips on TV


You can also playback your images on a TV screen. Before connecting to any device, make sure to select NTSC/PAL system to match the video output system of the video equipment you are going to connect to the digital still camera, then turn all connected devices off.


1. Position the camera on the cradle.
2. Match the docking connectors and carefully insert the camera until it fits in place.
3. Connect one end of the A/V cable to the A/V terminal of the cradle.
4. Connect the other end to the A/V input socket of the TV set.
5. Turn the TV and digital still camera on.
6. Playback the still images/video clips.
 - The method of operation is the same as playing back still images and video clips on the digital still camera.

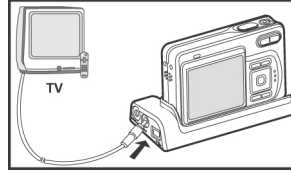

Rotating Images in the Display

This function lets you rotate images so that the images are played back with the correct orientation. You can rotate image 90 degrees clockwise or counterclockwise.


1. Press the **MODE** button to access [ (PLAY)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. In the [ (PLAY)] mode, use ◀ or ▶ to display the image you want to rotate.
3. Press ▲ or ▼ to rotate the selected image +90° or -90°.

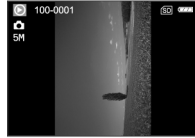

90° Counterclockwise



0° (Original)

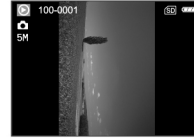

90° Clockwise

NOTE



- You cannot rotate video clips.
- Rotated images can be magnified.

Deleting Images/Video Clips

Use this function to delete one or all images/video clips stored in the internal memory or memory card.




Please note that the deleted images or video clips cannot be recovered. Exercise caution before deleting a file.

To delete a single image/video clip

1. Press the **MODE** button to access [ (PLAY)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. Use ◀ or ▶ to select the image you want to delete.
3. Press  to delete the file.
4. When the delete message appears, use ◀ or ▶ to select [YES], then press the **OK** button.
 - If you wish to cancel the deletion, select [NO].




To delete all images/video clips at once

1. Press the **MODE** button to access [ (PLAY)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. In the [ (PLAY)] mode, press  to select [DELETE ALL] with ◀, ▼, ▲ or ▶, then press the **OK** button.
3. To confirm the deletion of all images, use ▲ or ▼ to select [YES], then press the **OK** button.




 
 

 

 
 
 

 
 

 



 
- The message “NO PICTURE” appears on the LCD screen.

NOTE

- You cannot delete protected images.
- Pressing the  button in the playback mode allows you to quickly delete the selected image, sparing you the requisites of accessing the menu mode.

Protecting Images/Video Clips

Set the data to read-only to prevent images from being erased by mistake.








1. Press the **MODE** button to access [ (PLAY)] mode with , ,  or , then press the **OK** button.
2. In the [ (PLAY)] mode, press  to select [PROTECT] with the , ,  or  button, then press the **OK** button.
3. Use  or  to choose the desired setting, then press the **OK** button.
 - [ONE IMAGE]: Protect one image/movie.
 - [ALL IMAGES]: Protect all images/movies (at once).
 - [EXIT]: Exit from this menu.
4. Use  or  to select [LOCK], then press the **OK** button.
 - Press  to return to the [ PLAY] mode. The  indicator appears on the selected image.
 - If you wish to cancel the protect function, select [UNLOCK].


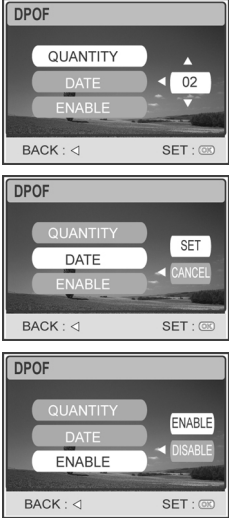




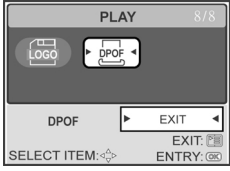


 

Setting the DPOF

DPOF (Digital Print Order Format) allows you to embed printing information on your memory card. By using DPOF, you can select an image to be printed and then specify how many prints or which image you would like. Take your memory card to a DPOF enabled printer that accepts memory cards. The DPOF/card-compatible printer will read the embedded information on the memory card and print your images as specified.














To configure print settings for a single image.


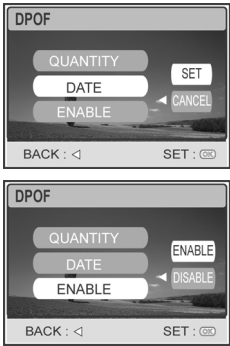



Step	Figure	Procedure
1		Press the MODE button to access [ (PLAY)] mode, then press the OK button.
2		In the [ (PLAY)] mode, press  to select [DPOF] with ◀, ▼, ▲ or ▶, then press the OK button.
3		Use ◀ or ▶ to select the desired image you want to mark  .


Step	Figure	Procedure
4		<p>Use ▲ or ▼ to select [ONE IMAGE], then press the OK button.</p> <p>[ONE IMAGE]: To configure print settings for a single image.</p> <p>[ALL IMAGES]: To configure print settings for all images.</p> <p>[RESET]: Returns all basic settings to the digital still camera's default settings.</p> <p>[EXIT]: To exit the mark function, use ▲ or ▼ to select [EXIT].</p>
5		<p>Use ▲ or ▼ to select [QUANTITY], [DATE] and [ENABLE], then press the OK button to configure the settings.</p> <p>[QUANTITY]: Allows you to select image quantity (0~99). Use ▲ or ▼ to set the image quantity and press the OK button.</p> <p>[DATE]: The date of recording can be printed directly on the images. Press the OK button to choose [SET] or [CANCEL] with ▲ or ▼.</p> <p>[ENABLE]: Allows you to confirm your setting which will be saved in the SD card. Press the OK button to choose [ENABLE] or [DISABLE] with ▲ or ▼.</p>

6		<p>Press  to return to the image playback mode.</p> <p>* The  is marked on the displayed image.</p>
		<p>To unmark the  mark, go back to step 4 to select [RESET] with  or .</p>


To configure print settings for all images.

Step	Figure	Procedure
1		<p>Press the MODE button to access [ (PLAY)] mode, then press the OK button.</p>
2		<p>In the [ (PLAY)] mode, press  to select [DPOF] with , ,  or , then press the OK button.</p>
3		<p>Use  or  to select the desired image you want to mark .</p>

Step	Figure	Procedure
4		<p>Use ▲ or ▼ to select [ALL IMAGES], then press the OK button.</p> <p>[ONE IMAGE]: To configure print settings for a single image.</p> <p>[ALL IMAGES]: To configure print settings for all images.</p> <p>[RESET]: Returns all basic settings to the digital still camera's default settings.</p> <p>[EXIT]: To exit the mark function, use ▲ or ▼ to select [EXIT].</p>
5		<p>Use ▲ or ▼ to select [DATE] and [ENABLE], then press the OK button to configure the settings.</p> <p>[DATE]: The date of recording can be printed directly on the images. Press the OK button to choose [SET] or [CANCEL] with ▲ or ▼.</p> <p>[ENABLE]: Allows you to confirm your setting which will be saved in the SD card. Press the OK button to choose [ENABLE] or [DISABLE] with ▲ or ▼.</p>
6		<p>Press  to return to the image playback mode.</p> <p>* The  is marked on the displayed image.</p>

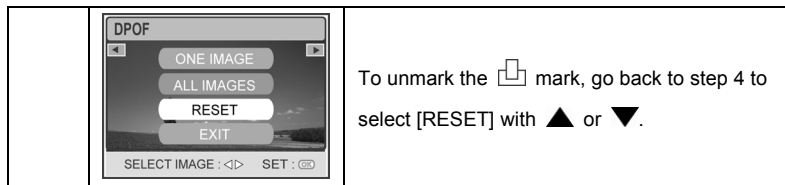

NOTE

- Before you perform the DPOF settings on your camera, always remember to copy your images from the internal memory to an SD memory card first.
- The  print icon will appear on the monitor indicating images selected for printing.
- You cannot print movies.

Connecting to a PictBridge Compliant Printer

Even if you do not have a computer, you can connect the camera directly to a printer that supports PictBridge to perform image selection and printing using the camera monitor screen and controls. DPOF support also lets you specify which images you want to print and how many copies of each should be printed.

Connecting the camera to the printer


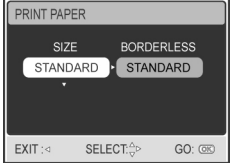


1. Connect the USB port on the cradle and the USB jack on the printer with the supplied USB cable, then turn on your camera and the printer.
 - The camera turns on automatically and the screen for selecting the USB mode is displayed.
2. Use ▲ or ▼ to select [PRINTER], then press the OK button.


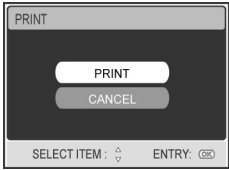
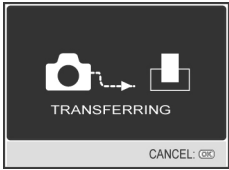
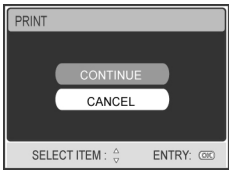


Printing images





When the camera is properly connected to a PictBridge compliant printer, the [PRINT MODE SELECT] screen is displayed on the monitor. Use ▲ or ▼ to select the print mode.


■ In [PRINT] Mode: Lets you print the specified image with PictBridge.

Step	Figure	Procedure
1		<p>Use ▲ or ▼ to select the [PRINT] mode, then press the OK button.</p> <p>* The [PRINT PAPER] screen is displayed.</p>
2		<p>Use ► to access in the selection of paper setting, then press the OK button to confirm.</p> <p>[SIZE]: You may select the desired item depending on the type of printer being used.</p> <p>[BORDERLESS]: You may select the desired item depending on the type of printer being used.</p>
3		<p>Use ◀ or ▶ to select the image you want to print, then press ▼ to set MORE print reservations.</p> <p>* The [PRINT INFO] screen is displayed.</p>
4		<p>Use ▲ or ▼ to select the desired item, then press the OK button.</p> <p>* Use ▲ or ▼ to change the setting, then press the OK button to confirm.</p> <p>[X]: Specifies the number of prints. You can select the number up to 10.</p> <p>[DATE]: If you select WITH, images are printed with the date.</p>

		<p>[FILE NAME]: If you select WITH, images are printed with the file name.</p> <p>[EXIT]: To cancel the print settings, use ▲ or ▼ to select [EXIT].</p>
5		<p>After step 4 is finished, you can still use ◀ or ▶ to change the image to print by your preference. Then, press the OK button to print.</p>
6		<p>Use ▲ or ▼ to select [PRINT], then press the OK button to confirm.</p> <p>* The TRANSFERRING screen is displayed.</p>
7		<p>This starts printing and displays the message "TRANSFERRING" on the monitor screen. The message will disappear after the printing is finished.</p>
		<p>* To cancel printing: Pressing the OK button during print data transfer displays the screen for selecting whether to [CONTINUE] or [CANCEL] printing.</p>


 
 


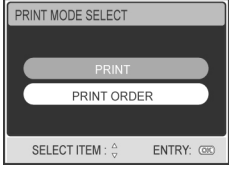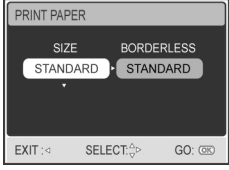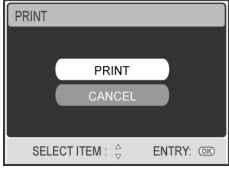

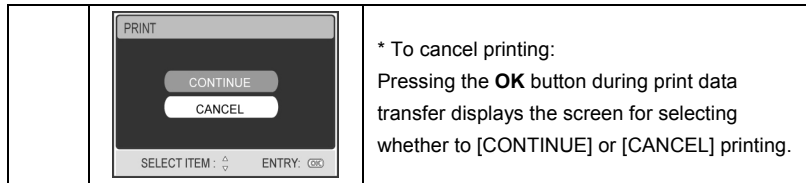




 
■ In **[PRINT ORDER] Mode**: This function only lets you print the specified image based on the previous


Step	Figure	Procedure
1		<p>Use ▲ or ▼ to select the [PRINT ORDER] mode, then press the OK button.</p> <p>* The [PRINT PAPER] screen is displayed.</p>
2		<p>Use ► to access in the selection of paper setting, then press the OK button to print.</p> <p>[SIZE]: You may select the desired item depending on the type of printer being used.</p> <p>[BORDERLESS]: You may select the desired item depending on the type of printer being used.</p>
3		<p>Use ▲ or ▼ to select [PRINT], then press the OK button to confirm.</p> <p>* The TRANSFERRING screen is displayed.</p>
4		<p>This starts printing and displays the message "TRANSFERRING" on the monitor screen. The message will disappear after the printing finished.</p>



Changing the Camera Startup Logo

This feature lets you specify one of your recorded images as your setup screen image, which will be displayed on the monitor whenever you press the button to turn on the camera.



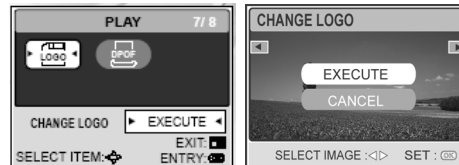





1. Press the **MODE** button to access [ (PLAY)] mode with , ,  or , then press the **OK** button.
2. In the [ (PLAY)] mode, press  to access the [PLAY] menu.
3. Use , ,  or  to select [CHANGE LOGO], then press the **OK** button.
4. Use  or  to select [EXECUTE], then press the **OK** button to confirm.
 - The new logo will be activated the next time you turn on the camera.



AUDIO MODE










The digital still camera enables you to record and playback voice files anytime and anywhere.

Recording Voice Files

1. Press the  button to turn on the camera.
2. Press the **MODE** button to access [ (AUDIO)] mode with , ,  or , then press the **OK** button.
3. In the [ (AUDIO)] mode, use the shutter button to start voice recording.
 - A  indicator is displayed on the screen.
 - Recording stops when you press the shutter button again.








Playing Back a Voice Recording File

1. Press the **MODE** button to access [ (AUDIO)] mode with , ,  or , then press the **OK** button.
2. Voice playlist appears on the screen.
3. In the [ (AUDIO)] mode, use  or  to select the voice-recording file you want to play.
4. Press the **OK** button to start playback of the voice-recording file through the camera's speaker.
 - To pause playback, press the  button.
 - To resume playback, press the **OK** button.
 - To stop playback, press the **OK** button again.



Deleting a Voice Recording File

1. Press the **MODE** button to access [ (AUDIO)] mode with , ,  or , then press the **OK** button.

2. In the [AUDIO] mode, use ▲ or ▼ to select the voice file you want to delete.
3. Press [trash] to delete the selected voice file.
4. When the delete message appears, use ◀ or ▶ to select [YES], and then press the **OK** button.
 - If you wish to cancel the deletion, select [NO].



■ Button operations

To	Press	Functional Description
Power on/off	ⓘ	Press the ⓘ button to turn on/off the camera.
Start/stop voice recording	Shutter Button	Press the shutter button to start or stop voice recording.
Choose previous/next voice recording file	▲ / ▼	Use ▲ or ▼ to choose previous or next voice-recording file and then press the OK button to play.
Start/stop playback of a voice recording file	OK	Press the OK button to start or stop playback of a voice-recording file.
Adjust audio volume	T / W	Press T or W to increase or decrease audio volume.
Pause playback of a voice-recording file	[pause]	Press [pause] to pause playback of a voice-recording file.
Delete a voice recording file	[trash]	Press the [trash] button to delete voice-recording files.
Enter the Main Menu	MODE	Press the MODE button to return to one of the following modes: [SETUP], [CAMERA], [MOVIE], [AUDIO], or [PLAY].

📖 NOTE

- Audio volume can be adjusted only when playback is being performed or is paused.

TRANSFERRING RECORDED IMAGES TO YOUR COMPUTER

You need to use the USB cable to establish a USB connection between the camera and your computer, then you can use your computer to share recorded images/video clips/voice-recording files with your family or friends via e-mail or post them on the Web. In order to do this, you must install the USB driver onto your computer first. Note that before you begin to install the software, you need to check your system according to the table as shown below.

	System requirements (Windows)	System requirements (Macintosh)
CPU	Pentium 166 MHz processor or higher	PowerPC G3/G4
OS	Windows 98/98SE/Me/2000/XP	OS 9.0 or later
Memory	64MB RAM	64MB RAM
Free Space on Hard Disk	128MB hard disk space	128MB hard disk space
Required Devices	A CD-ROM drive, An available USB port	A CD-ROM drive, An available USB port
Display	Color monitor (800x600, 24-bit or higher recommended)	Color monitor (800x600, 24-bit or higher recommended)

Step 1: Installing the USB driver on Windows computers

The USB driver on the supplied CD-ROM is exclusively for Windows 98 and 98SE. Windows 2000/ME/XP users need not install the USB driver.

1. Insert the enclosed CD-ROM into your CD-ROM drive.
2. When the welcome screen appears, click "**Install USB/PC-Cam driver**". Follow the on-screen instructions to complete the installation.
3. After the USB driver has been installed, restart your computer.

Installing the USB driver on Macintosh computers



Mac OS 8.6 users must install a USB driver. For Mac OS 9.0 or higher, the computer will automatically recognize the camera and load its own USB drivers.

1. Insert the CD-ROM packaged with the camera into the CD-ROM drive.

2. Select and double-click "Digital Camera Driver Installer".
3. Select "Install Location" and click "Install".
4. Follow the on-screen instructions to complete the installation and restart your computer.

Step 2: Connecting the digital still camera to your computer

1. Position the camera on the cradle.
2. Connect one end of the USB cable to the USB connector on the cradle.
3. Connect the other end of the USB cable to an available USB port on your computer.
4. Turn the camera on.
 - [USB Mode] screen is displayed.
5. Use ▲ or ▼ to select [PC], then press the OK button.
6. There will be a new "Removable Disk" icon detected in "My Computer", in which contains your recorded images/video clips/audio files.

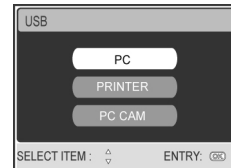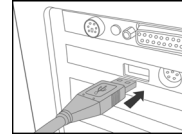

Mac users: Double-click the "untitled" or "unlabeled" disk drive icon on our desktop. iPhoto may automatically launch.

NOTE

- When connecting to the computer, it is necessary to install the battery into the digital still camera.
- While transferring images to your computer, the other buttons on your digital still camera will not perform the functions.

Step 3: Downloading images/video clips

When the camera is turned on and connected to your computer, it is considered as a disk drive, just like a floppy disk or CD. You can download (transfer) images/video clips by copying them from the "removable disk" ("untitled" disk on a Macintosh) to your computer hard drive or to another kind of disk.

For computers running Windows

Open the “removable disk” by double-clicking on it. Double-click on the folder that contains your recorded images/video clips. Select the images/video clips that you prefer and choose “Copy” from the “Edit” menu. After that, open the destination location and choose “Paste” from the “Edit” menu.

For computers running Mac OS

Open the “untitled” disk window and the hard disk or the destination location. Drag and drop from the camera disk to the desired destination.



NOTE

- Memory card users may prefer to use a memory card reader (highly recommended).
- Video playback application is not included with the package. Make sure that video playback application has been installed in your computer.

INSTALLING THE EDIT SOFTWARE

Installing Photo Explorer

Ulead® Photo Explorer provides a simple and efficient way to transfer, browse, modify and distribute digital media. Acquire photos, video or sound clips from various digital device types and easily browse or add personal descriptions; make timely modifications; or distribute the media through the medium of your choice: E-mail, Print, Slideshow Presentations. It is an indispensable all-in-one tool for owners of digital cameras, WebCams, DV camcorders, scanners, or anyone who strives to effectively organize a large collection of digital media.

1. Insert the enclosed CD-ROM into your CD-ROM drive.
2. When the welcome screen appears, click “**Install Ulead® Photo Explorer**”. Follow the on-screen instructions to complete the installation.

 **NOTE**

- For more information about the operation of Photo Explorer application software, refer to its respective help documentation.
- For Windows 2000/XP users, please make sure to install and use the Photo Explorer in “Administrator” mode.
- Photo Explorer is not supported on the Mac. iPhoto or iPhoto2 is recommended.

Installing Photo Express

Ulead® Photo Express is complete photo project software for digital images. The step-by-step workflow, visual program interface, and in-program help assist users in creating exciting photo projects. Acquire digital photos effortlessly from digital cameras or scanners. Organize them conveniently with the Visual Browse mode. Use hundreds of ready-to-use templates such as albums, cards, posters, slideshows, and more. Edit and enhance images with photo editing tools, photographic filters, and special effects. Embellish projects by adding creative design elements such as frames, callouts, and stamp objects.

Share results with family and friends via e-mail and multiple print options.

1. Insert the enclosed CD-ROM into your CD-ROM drive.
2. When the welcome screen appears, click “**Install Ulead® Photo Express**”. Follow the on-screen instructions to complete the installation.

 **NOTE**

- For information on how to use Photo Express to edit and retouch your recorded images, please refer to its online help.
- For Windows 2000/XP users, make sure to install and use the Photo Express while logged in as a user with an Administrator account.
- Photo Express is not supported on the Mac.

USING THE DIGITAL STILL CAMERA AS A PC CAMERA

Your digital still camera can act as a PC camera, which allows you to videoconference with business associates, or have a real-time conversation with friends or family. To use the digital still camera for videoconferencing, your computer system must include the items as below:

- Microphone
- Sound card
- Speakers or headphones
- Network or Internet connection



NOTE

- Video conferencing (or video editing) software is not included with the digital still camera.
- This mode is not supported for Mac.

Step 1: Install the PC camera driver (same as USB driver)

The PC-camera driver included in the CD-ROM is exclusively for Windows. The PC camera function is not supported in Mac platforms.

1. Insert the enclosed CD-ROM into your CD-ROM drive.
2. When the welcome screen appears, click “ **Install USB/PC-Cam driver** “. Follow the on-screen instructions to complete the installation.
3. After the driver installation is completed, restart your computer.




NOTE

- The USB driver that is bundled inside the CD-ROM is designed in a form 2 in 1 (USB & PC camera driver).
 - a) In Windows 98, the Windows OS will install both USB & PC camera drivers.
 - b) In Windows 2000/ME/XP, it will only install the PC camera driver.

Step 2: Connect the digital still camera to your computer.

1. Position the camera on the cradle.
2. Connect one end of the USB cable to the USB port on the cradle.
3. Connect the other end of the USB cable to an available USB port on your computer.
4. Turn on the power.
 - [USB Mode] screen is displayed.
5. Use ▲ or ▼ to select [PC CAM], then press the **OK** button.
6. Position the digital still camera steadily on top of your computer monitor or use a tripod.

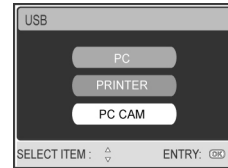

NOTE

- When using this digital still camera as a PC camera, it is necessary to install the battery into the digital still camera.

Step 3: Run your application software (i.e. Windows NetMeeting)

To use Windows NetMeeting for videoconferencing:

1. Go to **Start** → **Programs** → **Accessories** → **Communications** → **NetMeeting** to launch the NetMeeting program.
2. Click the **Start Video** button to view live video.
3. Click the **Place Call** button.
4. Type the e-mail address or the network address of the computer that you are calling.
5. Click **Call**. The person that you are calling must also have Windows NetMeeting running and be willing accept your call to start the videoconference.



 **NOTE**


- The video resolution for videoconferencing applications is generally 320 x 240.
- For more information about the operation of videoconference application software, refer to its respective help documentation.

MENU OPTIONS







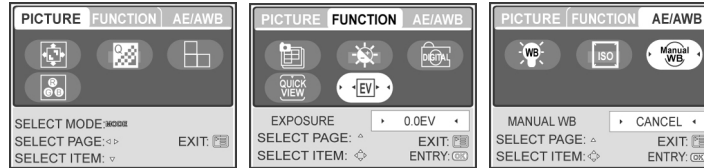








Camera Menu

This menu is for the basic settings to be used when capturing still images in camera mode.









1. Press the **MODE** button to access [CAMERA] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
2. Press  to access in [CAMERA] menu, then use ◀ or ▶ to select [PICTURE] / [FUNCTION] / [AE / AWB] menu.
3. Use ◀, ▼, ▲ or ▶ to select the desired option item in [PICTURE] / [FUNCTION] / [AE / AWB] menu, then press the **OK** button.
4. To exit from the menu, press the  button.








 


■ PICTURE Settings

Option	Functional Descriptior
SIZE 	Sets the size of the image that will be captured.  2560 x 1920  2048 x 1536  1280 x 960  640 x 480  TIFF IMAGE
QUALITY 	Sets the quality (compression rate) at which the image is captured.  Super Fine  Fine  Normal
SHARPNESS 	Sets the quality (compression rate) at which the image is captured.  HIGH  NORMAL  LOW
COLOR 	Sets the color of the image that will be captured. * NORMAL * B&W * SEPIA

■ FUNCTION Settings


Item	Functional Descriptor
CAPTURE MODE 	Sets the recording method at the time of taking pictures.  SINGLE  CONTINUOUS  AEB
LCD BRIGHT 	Sets whether or not to use digital zoom at the time of photography. The adjustment range is from -5 to +5.
DIGITAL ZOOM 	Sets whether or not to use digital zoom at the time of photography. * ON/OFF
QUICK VIEW 	Sets to display a captured image on LCD monitor immediately after you have taken the shot. * ON/OFF
EXPOSURE 	Sets to obtain the correct exposure when the subject is much brighter or darker than the background. The EV compensation value can be set in the range from -2.0EV to +2.0EV.


■ AE/AWB Settings







Item	Functional Descriptor
WHITE BALANCE 	Sets the white balance photographing under a variety of lighting conditions and permits photographs to be taken that approach the conditions that are seen by the human eye. [AUTO] Auto [] Daylight [] Cloudy [] Sunset [] Tungsten [] Fluorescent
ISO 	Sets the sensitivity for taking pictures. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixilated (grainer) the image will appear. *AUTO/100/200
MANUAL WB 	Manually sets the white balance and stores it. Use of this is convenient when the white balance does not offer a good match. Before you select [EXECUTE], determine the subject (such as a white paper) that will be used to set the white balance. *EXECUTE/CANCEL

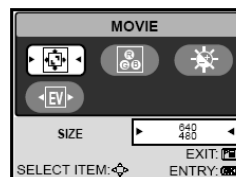



Movie Menu

This menu is for the basic settings to be used when recording video clips.

1. Press the **MODE** button to access [ (MOVIE)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.





 
 

 

2. Press  to access [MOVIE] menu.
3. Use , ,  or  to select the desired setting, then press the **OK** button.
4. To exit from the menu, press the  button.


Item	Functional Descriptor
SIZE 	Sets the size of the image that will be recorded. * 640X480 * 320X240
COLOR 	Refer to "Camera Menu - PICTURE Settings" in LIST OF MENU OPTION.
LCD BRIGHT 	Refer to "Camera Menu - FUNCTION settings" in LIST OF MENU OPTIONS.
EXPOSURE 	Refer to "Camera Menu - FUNCTION settings" in LIST OF MENU OPTIONS.





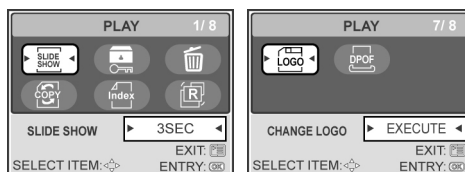

Play Menu



In the [PLAY] menu, set which settings are to be used for playback.



1. Press the **MODE** button to access [ (PLAY)] mode with , ,  or , then press the **OK** button.
2. Press  to access in [PLAY] menu.


3. Use ◀, ▼, ▲ or ▶ to select the desired setting, then press the **OK** button.
4. To exit from the playback menu, press the  button.


Item	Functional Descriptor
SLIDE SHOW 	You can play back recorded images in order with a selected interval time. This function is useful for checking your images or for presentations, etc. Refer to section in this manual titled "Slideshow Display" for further details. * 3SEC/5SEC/7SEC/9SEC
PROTECT 	Set the data to read-only to prevent images from being erased by mistake. Refer to the section in this manual titled "Protecting Images/Video Clips" for further details.
DELETE ALL 	Delete all files. * YES/NO
COPY TO CARD 	Allows you to copy your files from the digital still camera's internal memory to a memory card. Of course, you can only do this if you have a memory card installed and some files in internal memory. * YES/NO
THUMBNAIL 	Allows you to view 4 or 9 thumbnail images on the LCD monitor at the same time, where you can quickly search for the image that you want. * 4/9
RESIZE 	Changes the size of a recorded image. * 2560 x 1920 * 2048 x 1536 * 1280 x 960 * 640 x 480 * EXIT

Item	Functional Descriptor
CHANGE LOGO 	Allows you to specify one of your recorded images as your setup screen image, which will be displayed on the monitor whenever you press the button to turn on the camera. * EXECUTE/CANCEL
DPOF 	Allows you to select the desired pictures to be printed and set the number of prints and date displayed in DPOF format. You can print images easily just by inserting the memory card to a DPOF-compatible printer or a print shop. Refer to section in this manual titled "Setting the DPOF" for further details.





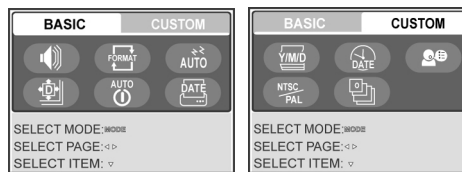

Setup Menu

You can select your preferences on the camera settings in the mode.








1. Press the **MODE** button to access [ (SETUP)] mode with ◀, ▼, ▲ or ▶, then press the **OK** button.
1. The [SETUP] menu is displayed.
2. Press ◀ or ▶ to select the [BASIC] / [CUSTOM] menu.
3. Use ◀, ▼, ▲ or ▶ to select the desired option item, then press the **OK** button.
4. Press the **MODE** button to return to Main Menu and select the desired mode.


■ BASIC Settings

Item	Functional Descriptor
SPEAKER 	Sets whether or not to mute the startup sound, and the camera sound each time you press the camera button. * ON/OFF
FORMAT 	Erases all images and reformats the SD card loaded in your camera. Protected images are also erased. SD card cannot be formatted if it is write-protected. Refer to section in this manual titled "Formatting an SD Memory Card or Internal Memory" for further details. * YES/NO
SLEEP  AUTO	Allows you to adjust the time delay for power savings. If no operation is performed for a specific period of time, the status of LCD monitor will turn into idle mode (also known as power save mode) and the LCD monitor will turn off. You can press any button to resume the operation. * OFF / 30SEC / 1MIN. / 2MIN.
RESET 	Returns all basic settings to the digital still camera's default settings. The time setting will not be reset. * YES/NO
POWER OFF AUTO 	If no operation is performed for a specific period of time, the power to the camera is automatically turned off. This feature is useful to reduce battery wear. * OFF / 3MIN. / 5MIN. / 10MIN.
DATE PRINT 	The date of recording can be printed directly on the still images. This function must be activated before the image is captured. * ON/OFF

■ CUSTOM Settings

Item	Functional Descriptor
DATE TYPE 	Sets the displayed type of date and time on the screen. * [Y/M/D]: Year/Month/Day * [D/M/Y]: Day/Month/Year * [M/D/Y]: Month/Day/Year
DATE SETUP 	Sets the date and the time. Refer to section in this manual titled “Setting the Date and Time” for further details.
LANGUAGE 	Sets the language that is displayed on the LCD monitor. Refer to section in this manual titled “Choosing the Screen Language” for further details. * 日本語 / ENGLISH / 繁體中文 / 简体中文 / FRANÇAIS / DEUTSCH / ITALIANO / ESPAÑOL
VIDEO OUT 	Sets video output system of the video equipment that you are going to connect to the camera. *PAL / NTSC
VERSION 	Displays the firmware version of the camera.

CONNECTING THE CAMERA TO OTHER DEVICES

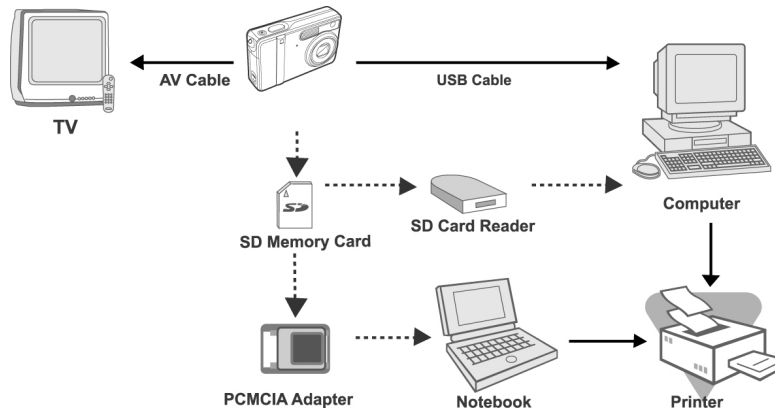

CAMERA SPECIFICATIONS

Item	Description
Image Sensor	CCD
Effective pixels	5.0 Mega pixels
Image size	Still image: 2560 x 1920, 2048 x 1536, 1280 x 960, 640 x 480 Video clip: 640 x 480, 320 x 240
Image quality	Still image: Super fine, Fine, Normal
Recording media	10MB internal memory SD memory card (optional, up to 512MB)
Compression format	MPEG 4 SP (Video), IMA-ADPCM (Audio)
File format	JPEG, TIFF, ASF (Video)
Lens	F-no.: Wide: 2.8 / Tele: 4.9 Focal length: 5.4mm-16.2mm
Focus range	Normal: 0.5m-infinity Wide: 0.06m-0.4m Tele: 0.35m-0.5m
LCD monitor	2.0" LTPS color LCD
Self-timer	3 sec delay, 10sec delay
Exposure compensation	-2.0EV- +2.0EV (in 0.5EV increments)
White balance	Auto, Daylight, Cloudy, Sunset, Tungsten, Fluorescent
ISO	Auto, 100, 200
Interface	DC-IN jack, USB connector, A/V terminal
Power	Lithium-ion rechargeable battery (650mAh) One AC-DC Adapter
Dimension	Approx. 91 x 58 x 27 mm (* Max. 30mm / excluding protruding parts)
Weight	Approx. 120g (without batteries and the SD memory card)

* Design and specifications are subject to change without notice.

APPENDIX

■ Troubleshooting Guide

Symptom	Possible causes	Solutions / Corrective Actions
Power does not turn on.	<ul style="list-style-type: none"> ■ The battery has run out. ■ The battery is not oriented correctly. ■ The battery cover is not closed properly. ■ The AC power adapter (optional) is disconnected. 	<ul style="list-style-type: none"> ■ Load new or fully charged battery. ■ Load the battery in the correct direction. ■ Close the battery cover correctly. ■ Properly connect the AC power adapter.
Camera suddenly powers down.	<ul style="list-style-type: none"> ■ [SLEEP] in BASIC menu of SETUP mode activated. ■ The battery has run out. 	<ul style="list-style-type: none"> ■ Turn the power back on. ■ Charge the battery.
Image is not captured when the shutter button is pressed.	<ul style="list-style-type: none"> ■ The camera is in PLAY mode. ■ Memory is full. 	<ul style="list-style-type: none"> ■ Select the CAMERA mode in main menu screen. ■ Transfer the desired files to your computer and then delete unnecessary files, or use a different memory card.
Cannot use the flash to capture images.	<ul style="list-style-type: none"> ■ NO FLASH is selected in flash mode. ■ The camera is in Continuous/AEB/ Movie mode. 	<ul style="list-style-type: none"> ■ Select a different flash mode. ■ Select [SINGLE] in the capture mode of CAMERA menu.
Continuous shooting is not possible.	<ul style="list-style-type: none"> ■ The capacity of the built-in memory or SD memory card is full. 	<ul style="list-style-type: none"> ■ Insert a new SD memory card.

Cannot transfer files over a USB connection.	<ul style="list-style-type: none"> ■ USB cable is not connected securely. ■ USB driver is not installed. ■ Camera is turned off. 	<ul style="list-style-type: none"> ■ Check all connections. ■ Install the USB driver on your computer. ■ Turn on the camera.
--	---	---

■ Possible Number of Recordable Images

The frame counter indicates the approximate number of images that can be stored on the SD memory card. The number of recordable images may vary depending on the recorded subject, the capacity of the memory card, there are files other than images or when the recording is made while switching the picture quality or resolution.

Resolution	Quality (Compression Ratio)	SD Memory Card						
		8MB	16MB	32MB	64MB	128MB	256MB	512MB
[5M] 2560 x 1920	★★ Super Fine	1	4	9	19	40	79	161
	★ Fine	3	8	19	39	79	158	320
	★ Normal	5	13	28	59	120	239	483
[3M] 2048 x 1536	★★ Super Fine	3	7	14	30	62	124	251
	★ Fine	6	13	29	61	123	247	498
	★ Normal	9	20	44	91	185	370	747
[1M] 1280 x 960	★★ Super Fine	7	17	38	78	159	317	641
	★ Fine	15	35	74	153	312	623	1256
	★ Normal	23	51	109	226	459	916	1847
[0.5M] 640 x 480	★★ Super Fine	30	67	143	295	600	1198	2416
	★ Fine	58	125	266	549	1114	2225	4487
	★ Normal	84	175	373	769	1560	3115	6282

[TIFF]		0	0	2	4	8	17	34
TIFF IMAGE								

* The data shows the standard testing results. The actual capacity varies according to the shooting conditions and settings.

■ **Approximate Duration of Recording Time**

The table below indicates the approximate duration of recording time depending on the capacity of the SD memory card.

Image size	SD memory card						
	8MB	16MB	32MB	64MB	128MB	256MB	512MB
640 x 480	0:18	0:47	1:46	3:42	7:36	15:14	30:48
320 x 240	1:13	3:08	6:58	14:38	29:58	1:00:05	2:01:25

* The data shows the standard testing results. The actual capacity varies according to the shooting conditions and settings.