

6027M Controller User manual

Version 1.01

Copyright ©2009-2010

by

Leadingtouch Technology Co., Ltd

HuiLongGuan LongXiang industrial center, ChangPing, Beijing, China

Tel: +86-51090978 <http://www.leadingtouch.com>

Fax: +86-51090979 E-mail: info@leadingtouch.com

Content

CONTENT	2
1 PRECAUTIONS	3
2 PACKAGE CONTENTS	3
3 INSTALLING AND CONNECTING.....	5
USB CABLE CONNECTING.....	5
4 PHYSICAL CHARACTERISTICS.....	6
CONSTRUCTION	6
DIMENSIONS	6
5 ELECTRICAL.....	7
SUPPLY VOLTAGE AND CURRENT	7
SERIAL INTERFACE	7
BAUD RATE	7
USB INTERFACE	7
OPERATING MODES	7
TOUCH RESOLUTION	7
CONVERSION TIME	7
RELIABILITY	7
6 ENVIRONMENTAL.....	8
TEMPERATURE.....	8
HUMIDITY	8
OPERATING ALTITUDE	8
SHOCK AND VIBRATION.....	8
ESD: CONTROLLER ALONE	8
FLAMMABILITY	9
7 LED INDICATORS.....	9
8 CONNECTORS AND SIGNAL DESCRIPTIONS.....	9
9 AGENCY APPROVALS	12
10 JUMP SETTING	13
11 FAQ.....	13

1 PRECAUTIONS

Touchscreen is made of glass material. It's easily breakable from dropping or impact, please handle it with care.

Please pull the plug and contact the sales dealer immediately when you smell a bit of unpleasant odor out of touchscreen.

Please do not plug-in and plug-out frequently when the computer is on.

Please clean the front and rear surface of touchscreen in order to make it best performance.

Please do not screw it tight when mounting the touchscreen (i.e. it is desirably fixed up) for fear of deformation.

Please contact the sales dealer if there are not adequate components to your touchscreen.

New touch screen system comprising of: package contents including touchscreen and PC connection cables, control card, quality-assured card, installation disc including driver and manual.


2 Package contents

Touchscreen


PC connection cables

Control card


(USB, serial or Comb cable, depending on the model you chose)

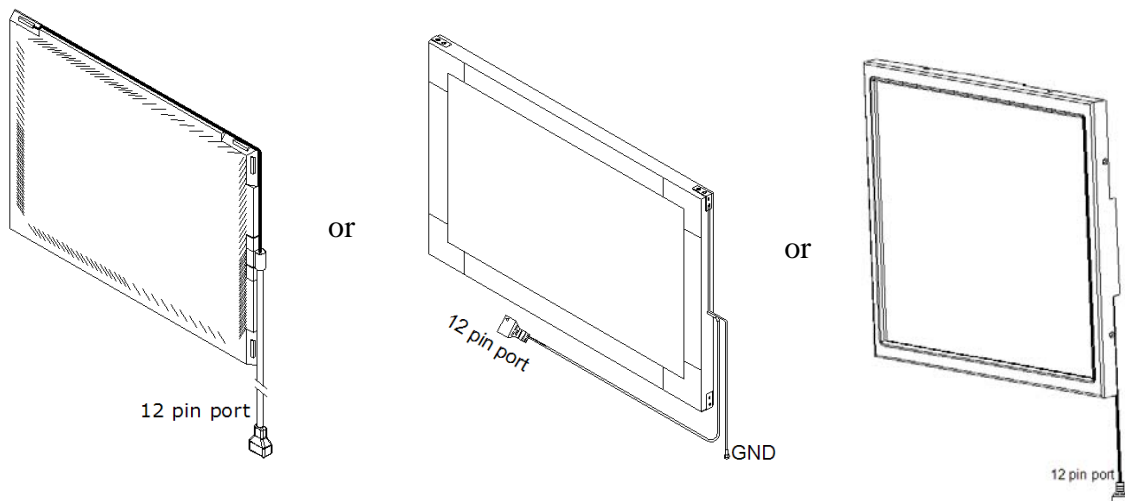


Touchsreen

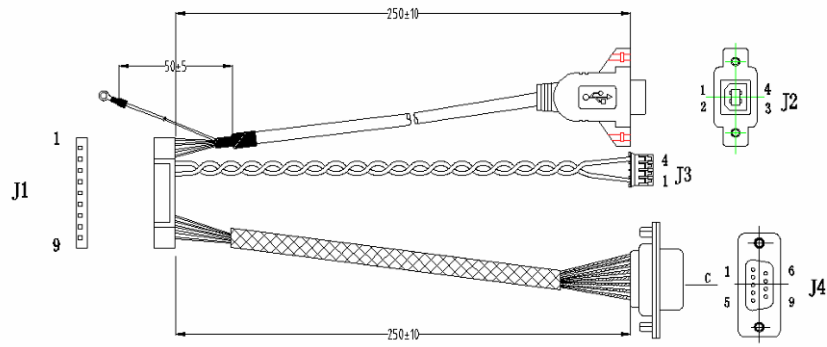


Dual connector cable 14-835-025

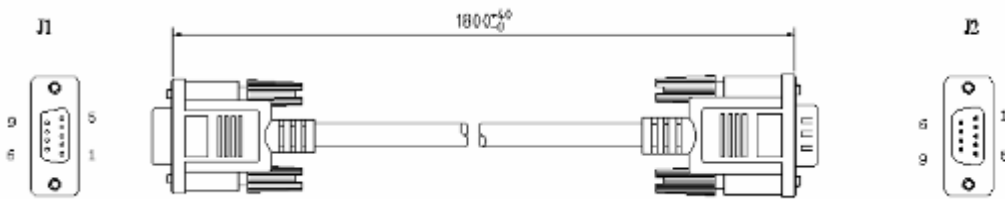

Serial extending cable 14-113-180

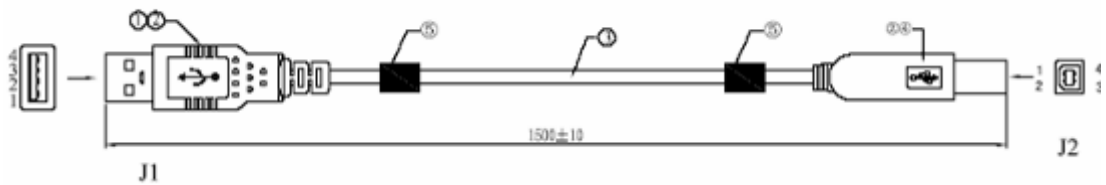

USB extending cable 14-219-150

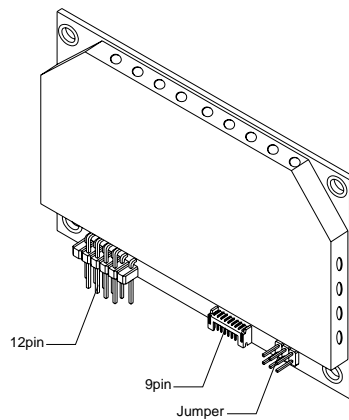


Control card 6027M

3 Installing and connecting

Mount touchscreen on monitor and then connect it to PC with cable and control card as following steps

Serial cable connecting


- 1 · Connect touchscreen 12pin port to 12pin connector of control card.
- 2 · Connect dual connector cable 14-835-025 12 pin connector to 12pin connector of control card.
- 3 · Connect serial extending cable 14-113-180 DB9 male connector to DB9 female connector of dual connector cable 14-835-025.
- 4 · Connect serial extending cable 14-113-180 DB9 male connector to PC DB9 female port.
- 5 · Connect dual connector cable 14-835-025 4pin connector to 5V power supply
- 6 · Connect dual connector cable 14-835-025 GND connector to ground

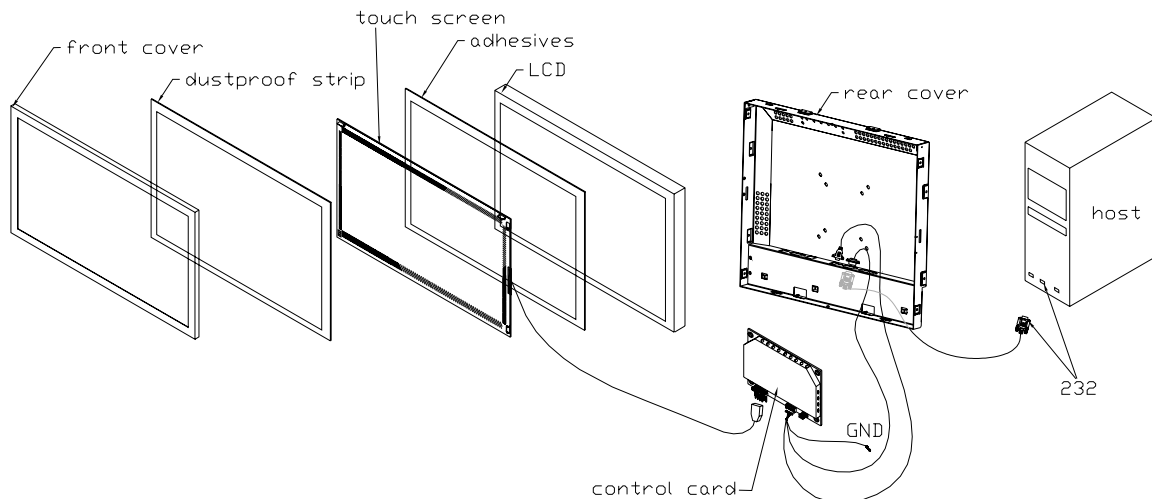

232 cable connecting

USB cable connecting

- 1 · Connect touchscreen 12pin port to 12pin connector of control card.
- 2 · Connect dual connector cable 14-835-025 9 pin connector to 9pin connector of control card.
- 3 · Connect USB extending cable 14-219-150 male USB connector to female USB connector of dual connector cable 14-835-025.
- 4 · Connect USB extending cable 14-219-150 USB connector to PC USB port.
- 5 · Connect dual connector cable 14-835-025 4pin connector to 5V power supply
- 6 · Connect dual connector cable 14-835-025 GND connector to ground

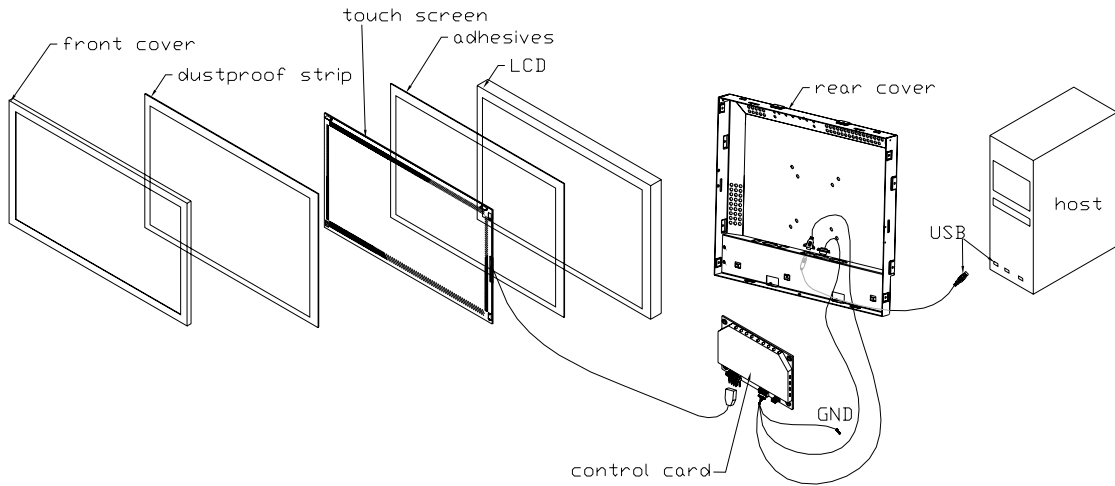

USB cable connecting


4 Physical Characteristics

Construction


- Four-layer surface-mount design with internal ground plane for EMI suppression.

Dimensions

- Total width: 2.46 inches (62.5 mm), including connectors
- Total length: 3.30 inches (85 mm)
- Total height: 0.43 inches (11 mm)
- All mounting holes are plated through for chassis ground connection.

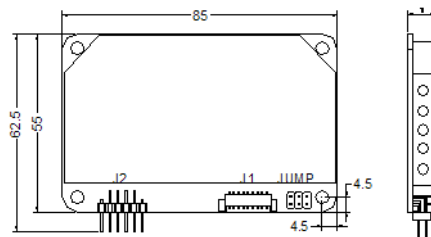

Top and Side View

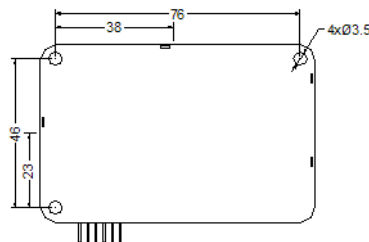

Bottom View

5 Electrical

Supply Voltage and Current

- +5 VDC, nominal (+4.75 to +5.25 VDC)
- 85mA typical, 105mA maximum at +5 VDC. Typical power dissipation is 425mW at 5V.
- Minimum power-supply 200 mA.
- Inrush current of up to 600mA for 50mS.
- Total noise and ripple must be less than 100 mV (p-p) for frequencies below 1 MHz, and less than 50 mV (p-p) for frequencies above 1 MHz.

Serial Interface

- EIA 232E (Serial RS-232), DCE configuration. 8 Data Bits, 1 Stop Bit, No Parity, Full Duplex
- Hardware handshaking: RTS/CTS
- DSR is pulled HIGH (>+3V) by the 6020D when connected and powered. DTR can be asserted by the host to interrupt the flow of data from the controller.

Baud Rate

- 9600

USB Interface

- The 6027M controller is an interrupt-type, full-speed USB device.

Operating Modes

- Leadingtouch protocol
- Customer specific protocol
- Initial/ Stream/ Untouch Modes

Touch Resolution

- 4096x4096, size independent

Conversion Time

- Approximately 10 ms per coordinate set

Reliability

- MTBF greater than 1,543,000 hours per MIL-HDBK-217-F2 calculated by parts stress method in ambient environment.

6 Environmental

Temperature

- Operating: 0°C to 65°C
- Storage: -25°C to 85°C

Humidity

- Operating: 10% to 90% RH, noncondensing
- Storage: 10% to 90% RH, noncondensing

Operating Altitude

- 10,000 feet

Shock and Vibration

- The controllers, with Leadingtouch standard container, can meet International Safe Transit Association project 2A test procedure.

ESD: Controller Alone

- Per EN 6100-4-2 1995. Level 4
- Contact Discharge - 8kV
- Air Discharge - 15kV positive and negative polarity
- Applied directly to J2 and J1 Serial port via a 560 ohm resistor and a 10" wire
- J1 USB pins 6,7 and 8 are tested using an ESD generator equipped with a standard finger probe and set to 15kV. The ESD generator is applied to the series A receptacle at the host end of a 1m USB cable, which is plugged into the controller USB series B receptacle. The controller is powered up and grounded.

Table 1 J1 Pins for ESD Testing

J1 Pin	Signal Name	Signal Function	J1 Pin	Signal Name	Signal Function
2	CTS	Serial Port	4	TxD	Serial Port
3	RxD	Serial Port	5	GND	Ground

The controller may not function correctly after test, however, it should work normally after reset or recycle of the supply. The ESD tests will be conducted with the controller integrated into a monitor with the controller and the ESD generator grounded to the monitor chassis.


Flammability

- The PCB substrate is rated 94V0. All plastic components, such as headers and connectors, are also rated 94V0.

7 LED Indicators

The 6027M controller has one LED status indicators. When 6027M controller initially connects to host, the LED will be constantly on. Then when touchscreen connects to 6027M, the LED will snuff out after 3 seconds and be constantly on during touch.

8 Connectors and Signal Descriptions

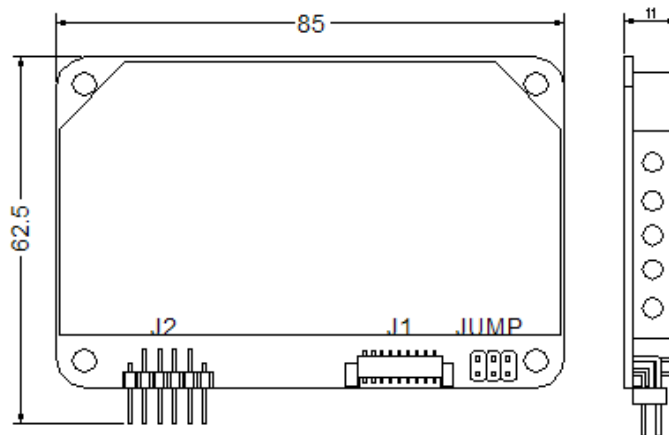

CONNECTOR PIN DEFINITION

J1		J2 (SENSOR)	
PIN #	SIGNAL NAME	PIN #	SIGNAL NAME
1	GND	1	GND
2	CTS	2	NC
3	RXD	3	Y-R
4	TXD	4	Y-T
5	GND	5	Y-R'
6	N.C	6	GND
7	N.C	7	GND
8	5V	8	GND
9	N.C	9	X-R
		10	X-T
		11	X-R'
		12	NC

All connectors are located along one side of the controller. Connector descriptions and pin definition are as following sections.

Power/Interface Connector

The power/interface connector, J1, is a 2.0mm pitch 9 pin connector, intended to be used with single wired pins in a 9 pin header. The pins definitions are shown in Table 2.

Table 2 Power/Interface Connector J1 Pin definition

J1 Pin	Signal Name	Signal Function	J1 Pin	Signal Name	Signal Function
1	GND	Ground	2	CTS	Serial Port
3	RxD	Serial Port	4	TxD	Serial Port
5	GND	Ground	6	D-	USB D-
7	D+	USB D+	8	Vcc	+5V Power
9	-	Reserved			

Table 3 USB Interface on Connector J1, Pin definition

Signal Name	USB pin	J1 pin	Signal Function
Vbus	1	8	USB Power
D-	2	6	USB D-
D+	3	7	USB D+
GND	4	5	Ground

Table 4. Serial Interface on Connector J1, Pin definition

Signal Name	DB-9 pin	J1 pin	Sourced by	Signal Function
RxD	2	3	ctrl	serial data from controller to host
TxD	3	4	host	serial data from host to controller
CTS	8	2	ctrl	used as "ready to receive", handshake = '0' (POSITIVE) when host may send
SG	5	4	com	signal ground

Signal electrical characteristics are as below.

Table 5 Serial Signal and LED Electrical Characteristics

Parameter	Value	Signals
Minimum ON state input volts ¹	+3 volts	TxD
Minimum OFF state input volts ¹	-3 volts	TxD
DC Load Resistance	5 k Ω \pm 2 k Ω	TxD
Source Impedance (Power Off)	> 300 Ω	RxD
Output Voltage, Open Circuit	25 volts, max. ²	RxD, CTS
Output Voltage into test load ³	>5, <15 volts ²	RxD, CTS
Short Circuit Current	<100 mA	RxD, CTS
Transition Characteristics	per EIA-232-E ⁴	RxD, CTS
External LED short circuit current ⁵	0.5mA nominal	LED

¹ Measured with respect to circuit AB, Signal Ground.

² Absolute magnitude.

³ Output voltage measured over the entire range of test load from 3000 ohms to 7000 ohms.

⁴ The transition characteristics comply with ANSI EIA/TIA-232-E while the controller is powered on; during power up and power down some of the criteria will not be met.

⁵ LED cathode drive is through 1kOhm to ground. Connect the anode to controller +5V supply.

Touchscreen Connectors, J2, and Signal Descriptions

The touchscreen connector, J2, is a dual row by six position header with 0.025 inch square pins spaced on 0.100 centers.

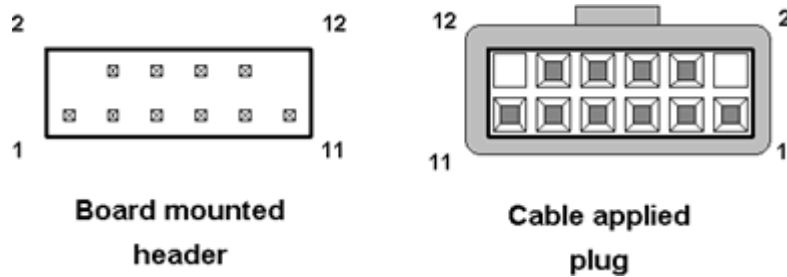


Figure 1 Pin Diagram for Touchscreen Connector, J2

Table 6 Touchscreen Connectors, J2, Pins definition

Signal name	J2 pin	Signal function
Chassis	1	frame ground for cable shield
none	2	connector key
Y rcv +	3	Y+ receiver
Y xmt +	4	Y+ emitter
Y rcv -	5	Y- receiver
Y xmt -	6	Y- emitter
analog gnd	7	analog ground
X xmt -	8	X- emitter
X rcv -	9	X- receiver
X xmt +	10	X+ emitter
X rcv +	11	X+ receiver
none	12	connector key


9 Agency Approvals

The touch system including 6027M controller, touchscreen and connection cable has certified with FCC Part 15.

The touch system including 6027M controller, touchscreen and connection cable is compatible with EN55022 and EN55024 standards and is certified with CE.

10 Jump Setting

6027M has 3 jumps, enabled by placing shorting jumpers on specific jumper headers as shown below or disabled by leaving the locations open to support different driver mode and touchscreen sizes:

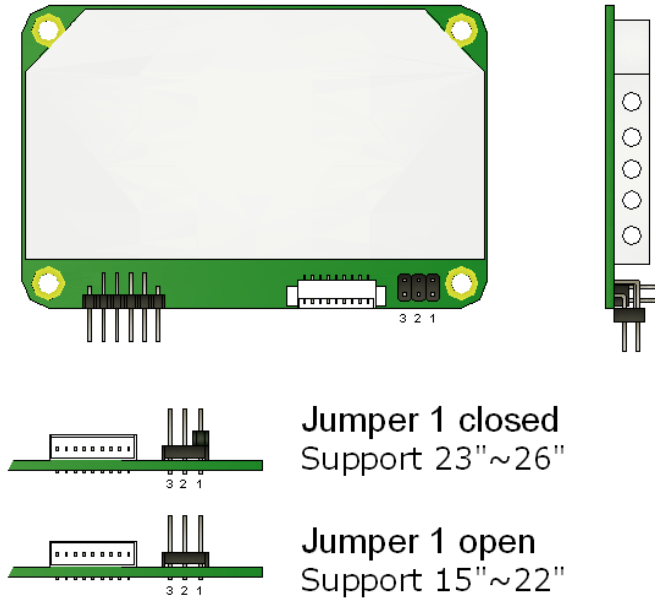

LeadingTouch 6027M Controller Jump Setting		
JMP1 Control Touch Panel Size	Open	Support 15"~22"
	close	Support 23"~26"
JMP2 Control Touch Panel Size	Open	Reserved
JMP3 Control Drivers supports	Open	Support Window 7, plug-play
	close	Reserved

11 FAQ

Q: Touchscreen no reaction. LED on control card is constantly on for 3 seconds, then snuff out and be constantly on during touch.

A: Phenomenon below indicates touchscreen and control card are in good condition, you can find out problem as below method.

- 1 : If COM port selected in program is the right one in use.
- 2 : If Jumper on control card is setting right.
- 3 : If COM port of computer can work normally.
- 4 : If computer COM port is in use by other device.

5 : If there is any mistake information from operating system.

Solution:

- 1 : Set program COM port as the one in use.
- 2 : Install a right driver. For jumpers and driver corresponding relationship please refer to Jumper setting description.
- 3 : Inspect if Serial or USB port is open in mainboard bios file, if there is any hardware problem(can inspect by serial or USB interface mouth).
- 4 : Change to another serial port or uninstall other device.
- 5 : Change another host or re-install operating system.

Q: Touch no action and LED constantly on.

A: This indicate touchscreen and control card are not in good preparation, please check following below steps

- 1 : If space in monitor or cabinet for touchscreen is enough, transducers on touchscreen may be crushed.
- 2 : If protected film is tear off
- 3 : If reflection texture in touchscreen is dirty.
- 4 : If adopts wrong dust-proof strips or assemble it too tight.
- 5 : If Control card temperature is too high.
- 6 : If 12pin cable, signal cable on touchscreen, or control card is broken.

Solution

- 1 : Change another monitor, cabinet or touchscreen.
- 2 : Tear off protected film
- 3 : Clean touchscreen
- 4 : Adopts right dust-proof strips and assemble them not too tight.
- 5 : Remove control card to ventilated environment
- 6 : Change another touchscreen or control card.

Q: Touch no reaction, LED flickers.

A: That indicate a communication mistake between touchscreen and control card. Please settle it as following steps

- 1 : Check if power supply for control card is unstable.
- 2 : Check if there is water or other dirty on touchscreen.
- 3 : Check if cable connected to touchscreen and control card is loosing.
- 4 : Check if touchscreen and control card is broken.

Solution :

- 1 : Change another host or adopt a stable power.
- 2 : Clean touchscreen and restart computer.
- 3 : Re-connect touchscreen and control card.
- 4 : Change another touchscreen or control card

Q: Touch no reaction, LED is off constantly.

A: That indicate there is no current through control card. Please check as following steps.

- 1 : Check if 232 or USB cable is not in good condition or connection.
- 2 : Check if power cable is not in good condition.
- 3 : Check if control card is not in good condition.

Solution

- 1 : Re-connect cable or change another cable
- 2 : Change another power cable
- 3 : Change another control card

Q: Cursor not move with finger or has deviation.

A: This is caused by inaccurate calibration, please check according to following directions.

- 1 : Check if jumper setting on control card meets current driver
- 2 : Check if touchscreen is dirty
- 3 : Check if control card temperature is too high to work normal, and if there is influence from other high frequency device.
- 4 : Check if touchscreen and control card is in good condition

Solution

- 1 : Setup right jumper and driver and redo calibration
- 2 : Clean touchscreen
- 3 : Remove control card to low temperature and influence place
- 4 : Change another touchscreen or control card

Q: Cursor jump all around during touch, LED flickers

A: The phenomenon seldom happen, you can follow below steps to solve it.

- 1 : Check if use unqualified dust-proof strips to crush touchscreen reflection texture too tightly
- 2 : Check if there is water or other contamination on touchscreen surface.

3 : Check if control card temperature is too high to work normal, and if there is influence from other high frequency device.

4 : Check if control card power supply is unstable

5 : Check if touchscreen or control card is defective

Solution

1 : Use qualified dust-proof strips and don't assemble it too tight

2 : Clean touchscreen

3 : Remove control card to low temperature and influence place

4 : Change another host or provide a stable power supply

5 : Change another touchscreen or control card

Q: Cursor can't move, LED flickers

A: This usually caused by software mistakes, please solve it as following instructions

1 : Check if jumper setting on control card meets current driver

2 : Check if there is water or other contamination on touchscreen surface, or host is hang over

3 : Check if adopt unqualified dust-proof strips or assemble touchscreen uncorrectly.

Solution:

1 : Make certain driver is correct installed and redo calibration

2 : Clean touchscreen and restart computer

3 : Adopt qualified dust-proof strips and assemble it not too tight

Q: A band area in screen is no touch action or must touch with great stress.

A: That is a signal attenuation phenomenon in that area, may caused by improper assembly or dust.

1 Check if touchscreen and monitor front frame is separated by our dust-proof strips

2 Check if there is dust accumulated on touchscreen reflection texture

3 Check if touchscreen assembly is too tight to transmit signal

Solution

1 Adopt our dust-proof strips to separate touchscreen and monitor front frame

2 Clean touchscreen reflection texture

3 Loosing touchscreen and monitor front frame

All the rights reserved by Leadingtouch