

Always there to help you

Register your product and get support at
www.philips.com/welcome

HMP7100



User manual

PHILIPS

Contents

1 Trademark notice	4
<hr/>	
2 Safety and notice	6
Safety	6
Compliance	7
Copyright	8
Care of the environment	8
Warranty	9
<hr/>	
3 Basics	10
Connect	10
Switch on or off	10
Auto standby	11
Screen saver	11
Use the remote control	12
Enter text	13
Use the onscreen keyboard	13
Use the alphanumeric buttons	14
<hr/>	
4 First-time setup	15
Connect to your home network	15
Connect wirelessly	16
Connect through an Ethernet cable	18

5 Play	20
Play from online services	20
Play from the Smart TV portal	20
Play from your home network	21
Play media from an iOS device or Philips Android device	22
Play media files from a computer (DLNA)	25
Play from a USB storage device	26
Select play options	27

6 Setup	29
Video	29
Audio	29
Network	30
Preference	30
Advanced	31

7 EasyLink	32
-------------------	-----------

8 Update the firmware of HMP7100	33
Update the firmware online	33
Update the firmware through a USB storage device	33

9 Troubleshooting	35
--------------------------	-----------

10 Specification	36
-------------------------	-----------

1 Trademark notice



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



DivX®, DivX Certified®, DivX Plus® HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX PLUS® HD: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video, including DivX® Plus HD video (H.264/MKV) up to 1080p and premium content. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

2 Safety and notice

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Safety



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering.



The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

- Only use attachments/accessories specified by the manufacturer.
- Use only power supplies listed in the user manual.
- The product shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Modification of the product could result in hazardous radiation of EMC or other unsafe operation.



Warning

- Never remove the casing of this product.
- Never lubricate any part of this product.
- Never place this product on other electrical equipment.
- Keep this product away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the product from the power.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Compliance



This product complies with the radio interference requirements of the European Community.

CE 0700										R&TTE Directive 1999/5/EC					
AT	✓	BE	✓	CY	✓	CZ	✓	DK	✓	EE	✓	FI	✓	FR*	✓
DE	✓	GR	✓	HU	✓	IE	✓	IT*	✓	LV	✓	LT	✓	LU	✓
MT	✓	NL	✓	PL	✓	PT	✓	SK	✓	SI	✓	ES	✓	SE	✓
GB	✓	IS	✓	LI	✓	NO	✓	CH	✓	BG	✓	RO	✓	TR	✓

This product complies with the requirement of the 1999/5/EC directive.

Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

Any changes or modifications made to this product that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



Note

- The type plate is located on the bottom of the product.

Copyright



Be responsible
Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

Care of the environment

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, and old equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.


Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Warranty

- Never attempt to repair the product, this could lead to the risk of injury, damage to the product and will void your warranty.
- Use the product and accessories only as intended by the manufacturer. The caution sign printed on the back of the product indicates risk of electric shock.
- Never remove the cover of the product. Always contact Philips Customer Support for service or repairs.
- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorized in this manual shall void the warranty.


3 Basics

Connect

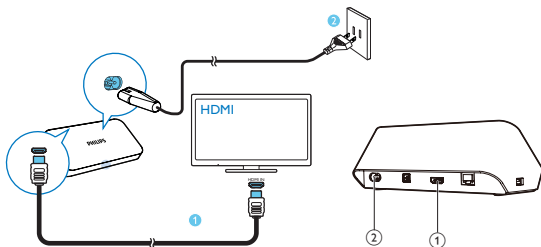


- ① **HDMI connector for audio/ video output**
 - Connects to a high-definition TV (HDTV) through an HDMI cable
- ② **Power connector**
 - Connects to power supply through the AC power cord

For high quality audio

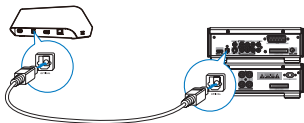

- Through **OPTICAL**, use a fiber optical cable to connect **HMP7100** to the **OPTICAL** or **SPDIF** input connector on an audio/video system.

Switch on or off



- 1 On **HMP7100**, press  on the remote control to switch on.

↳ The power indicator lights up white.



2 On the TV, switch to the input source of **HMP7100**:


- On the remote control of your TV, use the source button to select the input connector of **HMP7100**.

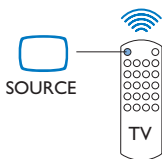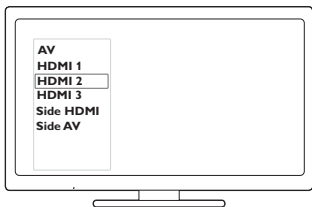

3 To switch **HMP7100** to standby mode, press  again on the remote control.

↳ The power indicator lights up red.

Auto standby

From the Home screen, switch on **[Auto standby]** in  **[Setup]** > **[Preference]** .
If there is no button press or media play on **HMP7100** for 30 minutes, **HMP7100** switches to standby mode automatically.

Screen saver

From the Home screen, go to  **[Setup]** > **[Preference]** to switch on **[Screen saver]** .

If there is no button press or media play on **HMP7100** for 10 minutes, the screen saver is activated. To exit the screen saver, press any button on the remote control.

Use the remote control

Switch HMP7100 on or to standby mode

- Press 

Navigate between screens or through options



- Return to the Home screen



- Navigate through options

OK

- Confirm the option



- Back one level

View options menu for media play or file navigation

- Press 

Connect to online TV services

- Press **SMART TV** to go to the **SMART TV** portal

Color buttons (Red, Green, Yellow, Blue)

- Functional buttons in the **SMART TV** portal

Enter text or numbers

- Press the alphanumeric buttons repeatedly to enter numbers or letters
- Alternatively, press the text box to show the onscreen keyboard

Control the play



- Start or resume the play



- Pause the play



- Stop the play



- Skip to the previous/ next media file



- Press repeatedly to select a search speed



- Rotate a photo

INFO

- Display the information about current file during play

SUBTITLE

- Access subtitle options

AUDIO

- Access the options of audio languages
- Access the options of audio tracks

Enter text

Use the onscreen keyboard

With the onscreen keyboard, use the remote control to enter text.



Select input modes

- Press **◀** / **▶** on the remote control.
↳ On the onscreen keyboard, current input mode is highlighted.

ABC : English input in the upper case

abc : English input in the lower case


E@ : symbols

Enter text

- 1 On the remote control, press **▲**, **▼**, **◀**, **▶** to move to a key, press **OK** to select the letter or symbol.
- 2 On the onscreen keyboard, select the input options by using the remote control:
◀ / **▶** : Move the cursor to the left or right.
<X> : Delete the entry before the cursor.
- 3 When the text entry is complete, select **DONE** on the onscreen keyboard to exit.



Tip

- To use the onscreen keyboard of different languages, go to  [Setup] > [Preference] > [Keyboard layout] from the Home screen. You can select a language for the onscreen keyboard.

Use the alphanumeric buttons

- On the remote control, press the alphanumeric buttons repeatedly to enter text or numbers.

4 First-time setup

The first time you use **HMP7100**, do the following setup:

- Select the menu language on **HMP7100**;
- Select your country for the **SMART TV** portal;
- Connect **HMP7100** to your home network through Wi-Fi or an Ethernet cable.

To change your setup options,


- From the Home screen, go to  [Setup].

Connect to your home network


Connect **HMP7100** to a router (Access Point) wirelessly or through an Ethernet cable. You can connect **HMP7100** to the network that is built around the router. To connect to the Internet, make sure that the router connects to the Internet directly and no dial-up is required on the computer.







Note

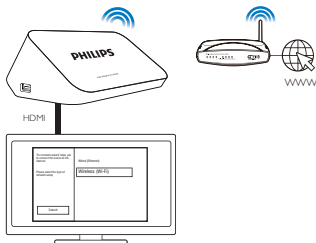- If MAC address filtering is enabled on your router, add the MAC address of **HMP7100** to the list of allowed devices. To find the MAC address, go to  > [Advanced]> [Version information] from the Home screen.

Connect wirelessly



- 1 The first time you connect **HMP7100** to power, select **[Wireless (Wi-Fi)]** on the first-time setup page.
 - ↳ A pop-up screen is displayed for you to select connection options.
- 2 On the pop-up screen, select **[Scan]**.
 - ↳ You can find a list of networks in range.
 - To refresh the list of networks, select **[Rescan]**.
 - To manually enter the name and password of the network, select **[Manual entry]**.
- 3 Select your network.
- 4 Select your connection option: **PIN**, **PBC**, or **[Standard]**.
 - ↳ A message is displayed when the connection is complete.
 - ↳ Next time you switch on **HMP7100**, **HMP7100** connects to the previously connected network automatically.
 - ↳ When **HMP7100** is connected to Wi-Fi,  changes to , and  changes to  on the Home screen.

One-touch Wi-Fi Protected Setup (WPS)

HMP7100 supports Wi-Fi Protected Setup (WPS). You can quickly and securely connect **HMP7100** to a wireless router that also supports the WPS.


You can select one of the two setup methods: **PBC (Push Button Configuration)**, or **PIN (Personal Identification Number)**.



Tip

- Wi-Fi Protected Setup(WPS) is a standard created by Wi-Fi Alliance for easy establishment of secure wireless home network.

PBC

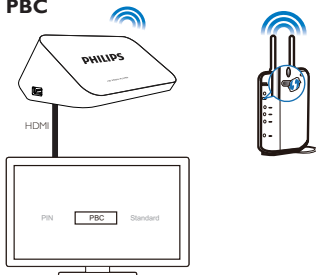

- 1 On the router, add **HMP7100**:
 - Consult the user manual of the router to learn how to add a WPS device to the router. For example:
press and hold the WPS push button.
↳ The router starts to search for **HMP7100**.
- 2 On **HMP7100**, select **PBC**.
↳ On **HMP7100**, a message is displayed when the connection is complete.

PIN

- 1 Write down the PIN that is displayed on **HMP7100**.
- 2 On your PC, enter the PIN on the router setup page:
 - Consult the user manual of the router to learn how to enter the PIN of the router.
- 3 On **HMP7100**, select **PIN**.

Standard connection

- 1 On **HMP7100**, select [**Standard**].
- 2 On the pop-up screen, enter the password to the network (see 'Enter text' on page 13).

Use an IP address that the router assigns automatically

- Select **[Auto (recommended)]**.
 - ↳ **HMP7100** starts to acquire an IP address.
 - ↳ A message is displayed when the connection is complete.



Tip

 
- If the DHCP (Dynamic Host Configuration Protocol) is unavailable or disabled on the router, manually enter the IP address of the player.

Enter the IP address manually

- 1 Get the IP address of the router:
 - Consult the user manual of the router; or
 - To check for the settings of the router, enter the IP address (for example, 192.168.1.1) in the web browser (for example, Internet Explorer) of the computer. Get the information in the setup page.
- 2 On **HMP7100**, select **[Manual (advanced)]**, and assign the IP address manually:
 - On the player, enter an IP address that allows the player to be in the same subnet as the router.
For example, if the router has
IP address: 192.168.1.1, Subnet mask: 255.255.255.000;
Then, enter the following on the player:
IP address: 192.168.1.XX (where XX denotes a number), Subnet mask: 255.255.255.000.
 - On the remote control, press ◀▶ to select the entry location; Press ▲ ▼ repeatedly to enter digits.

Connect through an Ethernet cable

- 1 Use an Ethernet cable to connect **HMP7100** to the router.



- 2 The first time you connect **HMP7100** to power, select **[Wired (Ethernet)]** on the first-time setup page.
↳ A pop-up screen is displayed for you to select connection options.
- 3 Select **[Auto (recommended)]** or **[Manual (advanced)]** to use auto IP or enter the IP address manually.
 - Refer to the standard wireless connection (see 'Standard connection' on page 17).

5 Play

On the HDTV, enjoy media play from

- the online services (through the **SMART TV** portal),
- a DLNA-compliant device on your home network, or
- a USB mass storage device.

Play from online services

Connect **HMP7100** to the Internet. You can enjoy online services on the HDTV.




Note


- Koninklijke Philips Electronics N.V. bears no responsibility for content provided by online service providers.

Play from the Smart TV portal

From the **SMART TV** portal, you can do the following:

- Access online services;
- Download apps from **App Gallery**;
- Browse Web pages through the web browser.

- 1 From the Home screen, go to .
↳ The **SMART TV** portal is displayed.

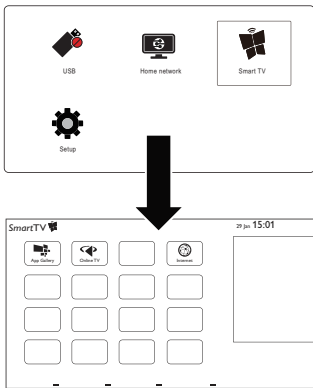

- 2 To navigate on the portal,
 - press ▲, ▼, ◀, ▶ and OK to select options;
 - press ↶ to go back one level;
 - press 🏠 to go to the Home screen.
- 3 To remove, move or lock apps on the portal,
 - use the color buttons on the remote control as instructed at the base of the screen.

Set parental control to apps

In the SMART TV portal, you can do the following to lock apps:


- use the color buttons on the remote control as instructed at the base of the screen;
- The first time you launch the SMART TV portal, follow the onscreen instructions to set password to the apps with the rating of 18+.

Play from your home network


Connect HMP7100 to your home network through Wi-Fi or an Ethernet cable (see 'First-time setup' on page 15).



With **HMP7100**, you can play media from a DLNA-compliant device on the same network. In this way, you can enjoy the media play through the HDTV that you connect to **HMP7100**.


The DLNA-compliant device can be:

- an iOS device or Philips Android device that runs  **MyRemote**, such as iPhone, iPod touch, iPad, and Philips Android tablet;
- a computer or device that runs the software of DLNA media server, such as Windows Media Player 11 or later.

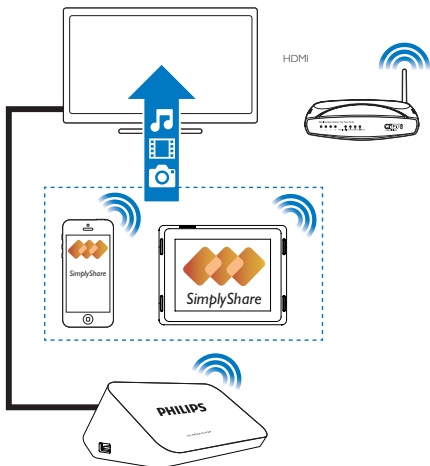
Play media from an iOS device or Philips Android device




- 1 Make sure that you have connected your iOS device or Philips Android device to the same Wi-Fi network as **HMP7100**.
- 2 On your iOS device or Philips Android device, download  **MyRemote** from **App Store** or **Google Play**.
- 3 In  **MyRemote**, tap to select **SimplyShare**.

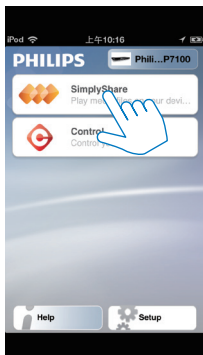

- 4 Select the source of media:
- Select a connected device on your home network.

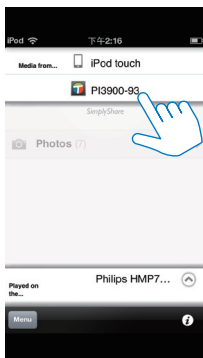

- ↳ You can find the music, photos, and videos that you store under the following folders on your Philips Android device: **Music**, **Pictures**, and **Videos**.
- ↳ You can also find the photos and videos that you take or record on the device.

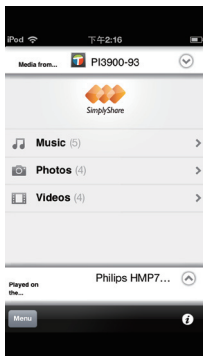


5 Select a media file to start play.

Use the iOS or Android device as remote control

With your iOS or Android device, you can control the media play on HMP7100.

1 In  MyRemote, select Control.

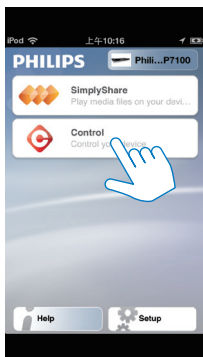


↳ The remote control buttons are displayed

2 Swipe left/ right to move to other pages of buttons.



Play media files from a computer (DLNA)

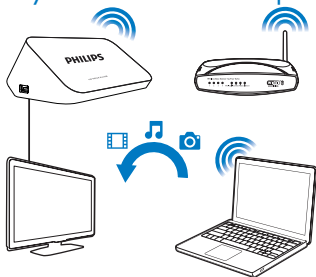

- 1 Make sure that you have connected **HMP7100** and the PC to the same network.
 - Make sure that the UPnP (Universal Play and Plug) function is enabled on the router.
- 2 On the PC, launch the software of DLNA media server. Enable the media sharing function.
For example, in Windows Media Player 11, do the following:
 - ① Select Library > Media Sharing ...

- ② Select the check box next to **Share my media** to:
- ↳ If **HMP7100** is detected, you can find the name of **HMP7100** in the device list.

- ③ If necessary, select the player and click **Allow**.


- 3 On the Home screen of **HMP7100**, select .

- Find media files on the servers.



- 4 Use the remote control to search for and play media files on **HMP7100**.

Play from a USB storage device

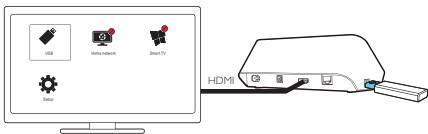Through the HDTV, play media from a USB mass storage device that you connect to **HMP7100**.







- 1 Connect your USB mass storage device to  on **HMP7100**.


- ↳ When the USB device is recognized by **HMP7100**,  changes to  on the Home screen.

- 2 Select .

- ↳ Media files are sorted as follows:

- : Display all the file folders.
- : Display music files
- : Display video files
- : Display photo files

- 3 Select a file to start play.

- To play DivX videos on this player, rent or purchase the DivX videos by using the DivX® registration code of this player. Go to  [Setup] > [Advanced] > [DivX® VOD Code] to get the code.
- To use a separate subtitle file for DivX video play, do the following:

- ① Name the subtitle file in the same way as you do with the DivX video file, with file extension names unchanged.
- ② Save the subtitle file under the same directory as the DivX video file on the mass storage device.

Select play options

- 1 During play, press **≡ OPTIONS** on the remote control.
- 2 Press **▲▼◀▶** to select an option. Press **OK** to confirm.

For videos,

[Info]: Display file information.

[Audio language]: Select an audio language.

[Subtitle language]: Select a subtitle language.

[Auto subtitle shift]: Allow to relocate the subtitles on TVs that support the function.

[Titles]: Search within the video by title.

[Chapters]: Search within the video by chapter.

[Time search]: Search within the video by elapsed time.

[Zoom]: Zoom in the scene. Press **◀▶** to select your zoom options. To pan through the enlarged scene, press

▲, ▼, ◀, ▶.

[Repeat] > [File]: Repeat current file.

[Repeat] > [Folder]: Repeat all the files in current folder.

[Repeat] > [Off]: Switch off the repeat mode.

[Repeat A-B]: Repeat the selected section. During video play, select **[Repeat A-B]** at the start point A, and then, select **[Repeat A-B]** again at the end point B. The selected section start to play repeatedly.

[Picture settings]: Select color settings for the video display.

For photo slideshow,

[Info]: Display file information.

[Rotate +90]: Rotate the photo clockwise by 90 degrees.

[Rotate -90]: Rotate the photo counter-clockwise by 90 degrees.

[Zoom]: Zoom in the scene. Press **◀▶** to select your zoom options. To pan through the enlarged scene, press

▲, ▼, ◀, ▶.

[Duration per slide]: Select the play speed of photo slideshow.

[Slide animation]: Select the transition effects between photos.


[Picture settings]: Select color settings for the images.

[Repeat] > [Off]: Switch off the repeat mode.

[Repeat] > [Folder]: Repeat all the files in current folder.

For music,

During music play, press  **OPTIONS** repeatedly to select play options:

: Repeat current file.

: Repeat all the files in current folder.

: Play all the files in random order.

6 Setup

You can change the setup options of **HMP7100**.

- 1 On the Home screen, select *** [Setup]**.
 - If necessary, press **⬆** on the remote control to go to the Home screen.
↳ The setup menu is displayed.
- 2 Press **▲, ▼, ◀, ▶** to select an option. Press **OK** to confirm the option.
 - Press **↶** to return to the upper-level menu.

Video

[TV display]: Select display aspect ratio

***[HDMI video]**: Select the video resolution that your TV supports. See your TV manual for details.

[HDMI Deep Color]: Display colors with more shades and hues when the video content is recorded in Deep Color mode and the TV supports this feature.

[Picture settings]: Select color settings for the video display.

[Watch 3D video]: Set the HDMI video output to 3D or 2D.



Note

- *If the video resolution is incompatible with your TV, you can see a blank screen. To recover the display, wait for 10 seconds.

Audio

[Night mode]: Equalize loud and soft sounds to play media at night (for Dolby Digital-encoded files).

[HDMI audio]: Select audio output for the HDMI connector.

[Digital audio]: Select audio output for the **OPTICAL** connector.

[PCM downsampling]: Set the sampling rate of the PCM audio from the OPTICAL connector.

Network

- In [Network installation], connect **HMP7100** to your home network.
[Wired (Ethernet)]: Connect to the network through an Ethernet cable.
[Wireless (Wi-Fi)]: Connect to a Wi-Fi network.
- In [View network settings], find the information about current network , such as the MAC address, and current IP address and subnet mask.
- In [View wireless settings], find the status of current Wi-Fi network.
- In [Clear Smart TV memory], clear the temporary files from the web browser of SMART TV.
- In [Name your Product:], edit how **HMP7100** is discovered by name in your home network.

Preference

[Menu language]: Select the language for onscreen menus.

[Keyboard layout]: Select the standard keyboard for the language that you use to enter text.

[Audio]: Select the audio language for videos.

[Subtitle]: Select the language for video subtitles.

[Screen saver]: Enable the screen saver when **HMP7100** is in the idle mode for 10 minutes, for example, in pause or stop mode. To exit the screen saver mode, press any key.

[Auto subtitle shift]: Allow to relocate the subtitles on TVs that support the function.

[Auto standby]: Switch **HMP7100** to standby mode when there is no button press or media play on **HMP7100** for 30 minutes.

[Fast wake up]: Start up **HMP7100** after a short time duration.

Advanced

[Downmix mode]: Select options for the two-channel audio output.

[DivX® VOD Code]: Find the DivX® Video-on-Demand code of **HMP7100** to register with DivX®.

[Netflix ESN]: Find the Electronic Serial Number (ESN) of **HMP7100** to register with Netflix.

[Deactivation]: Deactivate online services.

[Version information]: Find the information about the product, such as product name, software version, MAC address, **SimplyShare** activation code, and support site.

[Restore default settings]: Restore factory settings.

7 EasyLink

HMP7100 supports Philips EasyLink which uses the HDMI CEC (Consumer Electronics Control) protocol. You can use a single remote control to control EasyLink compliant devices that are connected through HDMI.

- 1 Through HDMI, connect **HMP7100** to a TV compliant with the HDMI CEC protocol.
- 2 On the TV, switch on the functions to allow HDMI CEC operations (Consult the user manual of the TV).
- 3 On **HMP7100**, switch on **[EasyLink]**.
 - On the Home screen, select **[Setup]** > **[EasyLink]**. Select **[On]**.
- 4 In **[EasyLink]**, you can select the following options:

[One Touch Play]

When you start play on **HMP7100**, the TV switches to the HDMI input channel automatically.

[One Touch Standby]


When you switch the TV to the standby mode, **HMP7100** switches to the standby mode automatically.



Note


- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

8 Update the firmware of HMP7100

From the Home screen, go to . In the **SMART TV** portal, you can register with Club Philips. By doing so, you can get information about the product and software updates.

Before you update the firmware, check current the firmware version of **HMP7100**. Go to  [Setup] > [Advanced] > [Version information].

Update the firmware online

- 1 Connect **HMP7100** to the Internet.
- 2 On the Home screen of **HMP7100**, go to  > [Advanced]. Select [Software update] > [Network].
 - ↳ If a firmware update is detected, you are prompted to start the update.
- 3 Follow onscreen instructions to complete the update.
 - ↳ When the update is complete, **HMP7100** switches off automatically, and then switches on again.



Note

- Keep **HMP7100** powered on before the firmware update is complete.

Update the firmware through a USB storage device

- 1 On your computer, do the following:
 - ① Go to www.philips.com/support to find the latest firmware.
 - ② Search for your model and click on "Software and drivers".

- ③ Download the firmware update and save the file to the root directory of a USB storage device.

2 On **HMP7100**, do the following:

- ① Connect the USB storage device.
- ② On the Home screen, go to * > [Advanced]. Select [Software update]> [USB].
 - ↳ If a firmware update is detected, you are prompted to start the update.

3 Follow onscreen instructions to complete the update.

- ↳ When the update is complete, **HMP7100** switches off automatically, and then switches on again.



Caution

- Keep **HMP7100** powered on and the storage device mounted before the firmware update is complete.

9 Troubleshooting

If you contact Philips, you will be asked for the model and serial number of this player. The model number and serial number are at the bottom of this player.

Write the numbers here:

Model No. _____

Serial No. _____

No picture.

- Refer to the TV user manual for how to select the correct video input channel

The contents of the USB storage device cannot be read.

- The format of this USB storage device is not supported.
- The supported memory size is 1TB maximum.
- Make sure that this player supports these files. (Refer to "Specifications" > "Playable media").

Subtitles are not displayed or not properly displayed.

- Make sure that the player supports the formats of the subtitles. (Refer to "Specifications" > "Subtitle support")
- To use a separate subtitle file for DivX video play, do the following:
 - ① Name the subtitle file in the same way as you do with the DivX video file, with file extension names unchanged.
 - ② Save the subtitle file under the same directory as the DivX video file on the mass storage device.
 - ③ Through the player, play the DivX video from a mass storage device.
- If you stream DivX video files through DLNA, the separate subtitle files are not supported.

10 Specification



Note

- Specification and design are subject to change without notice.

AC Power

- Input: 230V~50 Hz, 10 W
- Power consumption: < 10 W
- Power consumption in standby mode: < 0.5 W

USB connector

- Output: DC 5V, 500 mA

Supported formats:

- Video: MPEG 1/2/4(MPEG 4 Part 2), H.264, VC-1, WMV9, Divx HD, Divx Plus HD, Xvid, MKV, MPG, AVCHD, AVI, TS, M2TS, TP, VOB, DAT, MP4, MPEG, MOV (MPEG 4, H.264), ASF, FLV(640 × 480)
- Audio: Dolby digital, DTS, MPEG Audio, AAC, RA, OGG, MKA, ADPCM, AC3, WMA (V9), MP3, PCM, LPCM
- Picture: .JPEG, .JPG, .PNG, .GIF (unanimated GIF), .JPEG in HD resolution

HDD & USB support

- Compatibility: Hi-Speed USB (2.0)
- NTFS, FAT32, FAT, EXT-3
- USB MTP support, USB PTP support, USB MSC support

Subtitle support

- .srt, .sub, .smi, .ssa, .idx+.sub, ANSI

Video

- HDMI output: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p/24 Hz, 1080p/50 Hz, 1080p/60 Hz

Audio

- HDMI output
- Optical output

Main Unit

- Dimensions (L × W × H): 178 × 57.5 × 91 mm
- Net Weight: 0.34 Kg

11 Written Offer

Philips Electronics Hong Kong Ltd. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands." If you do not receive timely confirmation of your letter, please email to the email address above.

