

# JetSet™

## PRODUCT SPECIFICATIONS

### FEATURES

- 2.0 Megapixel Camera/Camcorder
  - Picture ID
  - Picture Messaging
  - Video Messaging
  - MMS Length (15-second clips)
  - Normal Length (available memory dependent)
- Music Player with external touch key controls
- External Memory Support (microSD™)
- Bluetooth® Wireless Technology\*\*
- Mobile Web Ready
  - Downloadable Content (ringtones, wallpapers)
  - Games & Apps
  - IM Capable\*
- 4 Preloaded Game Demos
  - Are You Smarter than a Fifth Grader
  - Resident Evil: Genesis
  - Street Fighter
  - Who Wants to be a Millionaire
- Bilingual User Interface (Spanish, English)
- Speakerphone
- Voice Commands
- T9™ Text Input for easy text entry
- Any Answer Key
- Personal Tools: Memo Pad, Alarm Clock, World Time, Calculator, Stop Watch, Converter, Tip Calculator
- GPS/E911 Enabled\*
- Quick Search
- Airplane Mode

### TECHNICAL SPECIFICATIONS

- CDMA 1x EVDO, 800 MHz/1900MHz, AWS Band 1700/2100 MHz
- Dimensions: 3.64" x 1.85" x .69" (standard battery)
- Weight: 3.32 ounces

- Main Display: 2.1" QCIF (240x320), 262k Color TFT Display
- External Display: 1.0" (96x96), 65k Color TFT
- Standard Battery: 3.7 Volt Lithium Ion, 800 mAh
- Talk Time: 3.5 hours
- Standby Time: 250 hours
- Hearing Aid Compatibility: M4

### MEMORY

- Internal Phone Book
  - Up to 500 entries with multiple contacts
  - Can store one picture with each entry
  - One-, Two- and Three-Touch Dialing
- Last 30 Incoming, Outgoing and Missed Call Logs
- microSD™ Memory Card Slot
- Internal Memory:
  - Up to 50MB User Memory

### CALL MANAGEMENT AND SERVICES

- Picture ID\*
- Voice Mail\*
- Caller ID\*
- Call Forwarding\*
- Call Waiting\*
- Three-Way Calling\*

### CAMERA FEATURES

- 2.0 Megapixel Camera
- Picture Messaging
- Picture ID
- Multi-Shot Settings: Single-Shot, Multi-Shot, Mosaic-Shot, Frames
- Resolution Settings: High (1600x1200) and (1280x960) Med (1024x768) and (640x480), Low (320x240)

- Night Shot
- Self-Timer: Off, 3 Sec., 5 Sec., 10 Sec.
- White Balance Settings: Auto, Daylight, Cloudy, Tungsten, Fluorescent
- Camera Effects: No Effect, Green, Negative, Sepia, Black & White, Aqua
- Camera Key Shortcuts: (1) Mode, (2) Shooting Mode, (3) Timer, (\*) Night-shot, (#) Viewfinder Mode
- Camera Settings: Default Storage, Quality, ISO, Exposure Metering, Viewfinder Mode, Shutter Sound, Auto Save

### ACCESSORIES

- Standard Lithium Ion Battery
- Car Power Charger
- Travel Charger
- 5 in 1 Mobile Reader (microSD™/Trans-Flash)
- 1GB microSD™/Trans-Flash with adapter
- Mono Hands-Free Headset
- Stereo Hands-Free Headset
- Mono Bluetooth® Headset Kit
- Stereo Bluetooth® Headset Kit

### ORDER

Genuine Samsung Accessories  
[samsungmobileusa.com/accessories](http://samsungmobileusa.com/accessories)  
 1-800-SAMSUNG

### STANDARD PACKAGE CONTENTS

- Samsung JetSet
- Standard Lithium Ion Battery
- Travel Charger
- User Manual
- Quick Start Guide
- Enhancement Brochure



Samsung mobile phones have been rated number one in brand loyalty by consumers seven years in a row, according to Brand Keys, a leading independent authority on brand loyalty.

“number one in brand loyalty seven years in a row”

\*Many of the services and features described above are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Other conditions and restrictions apply. See carrier for more information. All talk and standby times are approximate. Battery performance depends on network configuration, signal strength, operating temperature, features selected, and voice, data, and other application usage patterns. Internet content/services designed for mobile devices.

\*\*The JetSet™ supports Bluetooth® Profiles for wireless handsets, hands-free accessories, and object exchange. Both devices must be compatible with object exchange profile. Copyrighted material cannot be transferred.

© 2008 Samsung Telecommunications America, LLC ("Samsung"). Samsung is a registered trademark and JetSet™ is a trademark of Samsung Electronics America, Inc. and its related entities. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated.



# JetSet™

## SCH-r550

### INFORMATION GUIDE

#### 2.0 MEGAPIXEL CAMERA/CAMCORDER

Go digital. Now you can capture still photos, short and long video right from your JetSet.

#### MP3 PLAYER

The JetSet's built-in MP3 featuring external touch key controls let you access your favorite tunes with ease.

#### EXTERNAL MEMORY SUPPORT (microSD™)

The JetSet can hold microSD™ memory cards of up to 16GB for extra storage.

#### MOBILE WEB READY

With faster speeds (EVDO) - access your favorite sites and download the latest wallpapers, ringtones, games and other fun applications.

#### MESSAGING SERVICES

Share your favorite pics and MMS length video with friends and family or simply stay in touch with text messaging.



SAMSUNG TELECOMMUNICATIONS AMERICA  
 1301 E. Lookout Drive | Richardson, TX 75082 | 1.800.SAMSUNG

[www.samsungmobileusa.com](http://www.samsungmobileusa.com)

<https://training.samsungtelecom.com>

Carrier password: leap



“number one in brand loyalty seven years in a row”

## 1. RECENT CALLS

- 1: Outgoing Calls
- 2: Incoming Calls
- 3: Missed Calls
- 4: All Calls
- 5: Call Timer
- 6: Data Counter

## 2. MESSAGES

- 1: Send Message
  - 1: Text Message
  - 2: Picture Message
  - 3: Video Message
- 2: Inbox
- 3: Outbox
- 4: Drafts
- 5: Voice Mail
- 6: Erase Messages
- 7: Message Settings

## 3. CONTACTS

- 1: Find
- 2: Add New Entry
- 3: Speed Dial
- 4: Group
  - 1: No Group
  - 2: Business
  - 3: Colleague
  - 4: Family
  - 5: Friends
- 5: Memory Info

## 4. MULTIMEDIA

- 1: Camera (2.0 Megapixel)
- 2: Camcorder
- 3: Music Player
- 4: My Images
- 5: My Videos
- 6: My Ringtones
- 7: My Sounds
- 8: Ringback Tones

## 5. BROWSER

- 1: Go to Web

## 6. GAMES & APPS

- 1: Games & Apps

## 7. TOOLS/UTILITIES

- 1: Bluetooth®
  - 1: Registered List
  - 2: Bluetooth® Settings
- 2: Calendar
- 3: Memo Pad
- 4: Alarm Clock
  - 1: Alarm 1
  - 2: Alarm 2
  - 3: Alarm 3
- 5: World Time
- 6: Calculator
- 7: Stop Watch
- 8: Converter
  - 1: Currency
  - 2: Length
  - 3: Weight
  - 4: Volume
  - 5: Area
  - 6: Temperature
- 9: Tip Calculator

## 8. VOICE SERVICE

- 1: Voice Commands
- 2: Voice Settings
  - 1: Choice Lists
  - 2: Sensitivity
  - 3: Digit Dialing
  - 4: Sound
  - 5: Voice Launch
  - 6: About

## 9. SETTINGS

- 1: Location
- 2: Display Settings
  - 1: Menu Style
  - 2: Wallpaper
  - 3: Clock Format
  - 4: Theme
  - 5: Dialing Font
  - 6: Banner
  - 7: Backlight
  - 8: Front Contrast
- 3: Sounds Settings
  - 1: Volume
  - 2: Ringer Type
  - 3: Alerts
  - 4: Key Tone
- 4: Call Settings
  - 1: Call Answer
  - 2: Call Alert
  - 3: Auto Answer
  - 4: Auto Retry
  - 5: TTY Mode
  - 6: Voice Privacy
- 5: Phone Settings
  - 1: Airplane Mode
  - 2: Language
  - 3: Security
  - 4: System Select
  - 5: Set Time
  - 6: Quick Search
- 6: Memory Manager
  - 1: Save Options
  - 2: Phone Memory
  - 3: Card Memory
- 7: Phone Info
  - 1: Phone Number
  - 2: Icon Glossary
  - 3: Version
  - 4: ESN/MEID
  - 5: Warranty Date Code
  - 6: Refurbish

# Get to know the JetSet™

## MUSIC PLAYER WITH MICROSD™ SUPPORT

### Installing the microSD™ Card

1. Insert microSD™ in the memory card slot located on the left side of the phone, labeled microSD™.
2. Insert memory card label side up and smaller end toward phone.
3. Press card into slot until it locks in place.
4. Press the **Menu soft key**, then **Select Settings**.
5. Press **Memory Manager**, then press **Card Memory**.
6. Select **Format card**. “**Format Card?**” will display. Press **Yes**. The card will proceed to format. You are now ready to load MP3 files onto your microSD™ for use with the JetSet.

### Transfer Music from PC to the microSD™

1. On PC, find folder containing desired song.
2. Connect the JetSet to the PC using the USB cable via the phone charging slot.
3. The JetSet will display “**Use Mobile Phone as Mass Storage Device?**” message. Press **1** for **Yes**.
4. On the PC, a “**Removable Disk**” will appear in the “**My Computer**” folder. “**Open folder to view all files.**”
5. Drag and drop song file from PC to the “**My Music**” folder on card.
6. Press the **Done soft key**. “**Exit Mass Storage Mode?**” will display, press **OK key** for **Yes** and disconnect USB cable.

### Listen to Music

1. In Menu mode, press **4** for **Multimedia**.
2. Press **3** for **Music Player**.
3. Press the **left soft key** for **Library**. To choose the set of songs you would like to play, scroll to each song you want to play and press the **OK key** after each selection.
4. When you are finished selecting your songs, press the **left soft key** for **Play**.

## TAKE A PICTURE USING THE 2.0 MEGAPIXEL CAMERA

1. From Standby mode, press the **Camera key** on the right upper side of the JetSet.
2. Press the **Options soft key** to choose the specific camera settings.
3. Scroll left and right to each option. Use the **up** and **down Navigation keys** to select each setting, and press the **OK key**.
4. Press the **OK key** for **Take**. You now have the choice to **Save**, **Send**, or **Erase** your picture.

## ACTIVATE BLUETOOTH® WIRELESS TECHNOLOGY

1. In the MENU mode, press **7** for **Tools/Utilities**.
2. Press **1** for **Bluetooth**.
3. Press **1** for **Registered List**. Then choose **Add New Device**. You will be prompted to place the pairing devices near each other. Press **OK**.
4. In the **Add New Device** screen, you will see a list of compatible devices. Highlight the one you wish to communicate with and press the **OK key** to **PAIR**.
5. Enter the Passkey for the new device and press the **OK soft key** on the JetSet. These two devices will then be paired and able to wirelessly communicate.

## MESSAGING

### Sending a Simple Text Message or MMS

1. From the Standby mode, press the **left soft key** for **MENU**.
2. Press **2** for **Messages**.
3. Press **1** for **Send Message** and **1** for **Text Message**.
4. In the **Create Text Msg** screen, enter the recipient's number and press the **OK key**.
5. Enter the text message using the keypad. You can access different text modes by pressing the **left soft key**. Press the **OK key** for **SEND**.

### Sending a Multimedia Message or MMS

1. Press the **left soft key** for **MENU**.
2. Press **2** for **Messages**.
3. Press **1** for **Send Message** and **2** for **Picture Message**.
4. In the **Create Pic Msg** screen, enter the recipient's number and press the **OK key**.
5. Using the keypad, enter Subject and press the **down Navigation key** to enter Text.
6. Press the **down Navigation key** for **Pictures** and press the **left soft key** for **Images**.
7. Scroll to highlight the desired picture and press the **OK key**.
8. Press **left soft key** for **Sounds**.
9. Scroll to highlight the desired sound clip and press the **OK key**.
10. Press **OK key** for **SEND**.