

# User's manual



# LED Par 26x3W RGB IP65



# Table of content

1.	Safe	ety instructions	3
1	.1.	FOR SAFE AND EFFICIENT OPERATION	3
2.	Ope	erating Manual	4
2	.1.	Description and advantages	4
3.	Insta	allation	4
3	.1.	DMX cable	4
3	.2.	Connect a DMX line	5
4.	Fun	ctions	
4	.1.	Automatic mode	5
4	.2.	Stand-alone mode	6
4	.3.	Master/Slave mode	6
5.	DM)	X mode	7
6.	DM)	X channels	7
7.	Tec	hnical data	7



## 1. Safety instructions





- All modifications to the device will void the warranty.
- Repairs are to carry out by skilled personnel only.
- Use only fuses of the same type and original parts as spare parts.
- Protect the unit from rain and humidity to avoid fire and electric shocks.
- Make sure to unplug the power supply before opening the housing.

#### 1.1. FOR SAFE AND EFFICIENT OPERATION

#### Be careful with heat and extreme temperature

Avoid exposing it to direct rays of the sun or near a heating appliance.

Not put it in a temperature bellow 32°F / 0°C, or exceeding 131°F / 55°C.

#### Keep away from humidity, water and dust

Do not place the set in a location with high humidity or lots of dust.

Containers with water should not be placed on the set.

#### Keep away from sources of hum and noise

Such as transformer motor, tuner, TV set and amplifier.

#### To avoid placing on un-stable location

Select a level and stable location to avoid vibration.

## Do not use chemicals or volatile liquids for cleaning

Use a clean dry cloth to wipe off the dust, or a wet soft cloth for stubborn dirt.

#### If out of work, contact sales agency immediately

Any troubles arose, remove the power plug soon, and contact with an engineer for repairing, do not open the cabinet by yourself, it might result a danger of electric shock.

#### Take care with the power cable



Never pull the power cable to remove the plug from the receptacle, be sure to hold the plug. When not using the device for an extended period of time, be sure to disconnect the plug from the receptacle.

Important: Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Make sure the electrical connection is carried out by qualified personnel. All electrical and mechanical connections have to be carried out according to the European safety standards.

# 2. Operating Manual

## 2.1. Description and advantages

- 36 LEDs 3W 15° (12 red, 12 green and 12 blue)
- DMX 512 with 8 DMX channels
- Master dimmer
- RGB color changing
- Strobe effect
- Auto play with internal programs
- Master/Slave function
- Stand alone mode

#### 3. Installation

Connect the device with the power supply system.

Know your device is ready to receive control signals like DMX 512 or automatic signals.

Disconnect the device from the power supply system when you don't want to use it for a longer time.

#### 3.1. DMX cable

For DMX control please use a commercial DMX XLR 3-Pin cable.

The pin assignment is as follows:





- 1 Shield
- 2 Signal (-)
- 3 Signal (+)
- 4 Not connected
- 5 Not connected







In the graphic you can see how you can 'make adapters from 3 to 5 pins.

#### 3.2. Connect a DMX line

If you want to control several devices you have to connect them with a DMX cable. You are not allowed to use more than 32 devices in one line and distance has to be below 500m. In practice it is useful to use not more than 12 devices in one line and to use a pull-up resistor.

Connect the male end of the cable to the DMX controller and the female end to the device. Like this you have to connect all devices.

### 4. Functions

The device can be controlled by different possibilities: DMX 512, automatic mode, stand-alone mode or master/slave mode.

Push the MENU button.

With the UP/DOWN buttons you can go through the menu.

#### 4.1. Automatic mode

#### **RGB Flash**

- Press the UP/DOWN buttons until you can read FLAS on the display. Press ENTER.
- Now you can read FLXX
- Press UP to raise the value and DOWN to lower it.
- You have 16 possible speeds, the higher the value is, the faster.

#### **Fade Function**

- Press the UP/DOWN buttons until you can read FAdE on the display. Press ENTER.
- Now you can read FAXX
- Press UP to raise the value and DOWN to lower it.
- You have 16 possible speeds, the higher the value is, the faster.

#### 7 color run

- Press the UP/DOWN buttons until you can read ASC- on the display. Press ENTER.
- Now you can read ASXX
- Press UP to raise the value and DOWN to lower it.



- You have 16 possible speeds, the higher the value is, the faster.

#### Chaser 1

- Press the UP/DOWN buttons until you can read CE-- on the display. Press ENTER.
- Now you can read CEXX
- Press UP to raise the value and DOWN to lower it.
- You have 16 possible speeds, the higher the value is, the faster.

#### Chaser 2

- Press the UP/DOWN buttons until you can read CS-- on the display. Press ENTER.
- Now you can read CSXX
- Press UP to raise the value and DOWN to lower it.
- You have 16 possible speeds, the higher the value is, the faster.

#### 4.2. Stand-alone mode

You can set you color mixing in 16 steps, to mix your required color.

#### Red

- Press the UP/DOWN buttons until you can read rL-- on the display. Press ENTER.
- Now you can read rLXX
- Press UP to raise the value and DOWN to lower it.
- You have 16 possible dimming steps, the higher the value is, the brighter the color.

#### Green

- Press the UP/DOWN buttons until you can read gL-- on the display. Press ENTER.
- Now you can read gLXX
- Press UP to raise the value and DOWN to lower it.
- You have 16 possible dimming steps, the higher the value is, the brighter the color.

#### Blue

- Press the UP/DOWN buttons until you can read bL-- on the display. Press ENTER.
- Now you can read bLXX
- Press UP to raise the value and DOWN to lower it.
- You have 16 possible dimming steps, the higher the value is, the brighter the color.

#### 4.3. Master/Slave mode

If you want to use the Master/Slave mode you have to set the master device to the required automatic program, the Slave devices you have to set to DMX address 1.



# 5. DMX mode

You can control the device with a commercial DMX controller. It uses 8 channels.

- Press the UP/DOWN buttons until you can read Addr on the display. Press ENTER.
- Now you can read AXXX
- Press UP to raise the value and DOWN to lower it.
- You can set the value from A001 to A512

# 6. DMX channels

CH1	0-255	Main dimmer
CH2	0-255	Red dimmer
CH3	0-255	Green dimmer
CH4	0-255	Blue dimmer
CH5	15-255	colour preset
CH6	15-239	sections combination
	240-255	all off
CH7	0-255	strobe peed from slow to fast
	6-140	gradual change speed from slow to
	0-140	fast;
	141-154	seven color run
	155-161	run way 1
	162-168	run way 2
	169-175	run way 3
	176-182	run way 4
	183-189	run way 5
CH8	190-196	run way 6
	197-203	run way 7
	204-210	run way 8
	211-217	run way 9
	218-224	run way10
	225-231	run way 11
	232-238	run way 12
	239-245	run way 13
	246-255	off

## 7. Technical data

Power supply 220V 50Hz (up to 30 devices)

110V 60HZ (up to 15 devices)

- Power consumption 115W

- IP class IP65

# **VARYTEC**

- Weight 3kg

- Measures 245x245x350mm

- Radiation 15°

- LED 38x3W

- Work temperature -20°C to +45°

- Ambient humidity 0% to 90%



# Importeur:

B & K Braun GmbH Industriestraße 1
D-76307 Karlsbad

www.bkbraun.com

info@bkbraun.com





