


SETTING UP FOR WEIGHING AND DATA ENTRY, USING EID

These instructions describe how to set up the indicator for entering animal data during a weighing session. EIDs are entered during the weighing process. The system may be optimised for weighing sheep or cattle.

STEP 1:

If required, set up a field for data entry in the Life Data or File Data screens.

To set up a data field, press , **LIFEDATA** or **FILEDATA**.


Set up field options, as required.

For more information about setting up data fields, see the XR3000 User Manual.

The example opposite shows a field set up to record condition score as a File Data field. File Data is used when the information changes regularly, Life Data is used when the information stays the same through out the life of the animal.

File Data Setup		FILE : 1		
GROUP WEIGHING : X		CARCASS WEIGHT : X		
DATE STAMPING : X		TIME STAMPING : X		
LABEL	ON/OFF	TYPE	FORMAT OR LENGTH	REPEAT
COND SC	✓	Number	#	X
Code2	X	Text	4	X
Code3	X	Text	4	X
CUSTOM				

STEP 2:

Press  and set up the screen as shown:

Weighing Screen Setup		FILE : 1	
Tick the items you want on the main weighing screen.			
LHS (FOR VIEWING)		RHS (FOR DATA ENTRY)	
✓ Prompt message		✓ FID	
X Draft range		✓ EID	
X Carcass weight		• LID	
X Value		• Mob	
X Weight gain		• Class	
X Prediction		• Breed	
X Days		• DOB	
-----		• SPARE	
X FID		-----	
X EID		✓ COND SC	
LIFEDATA FILEDATA		DRAFT W.GAIN SYSTEM	

STEP 3:

To select a file, press **FILES** then scroll to the new file.

Note: It is good practice to start a new file each time a new session is started. You should name the file relevant to the job you are doing. This is good practice for record keeping.

List of Files			
FILE	FILE NAME	RECORDS	START DATE
▲ 12		0	
13	HEIFER COND SCORE	0	
14		0	
15		0	
16		0	
17		0	
18		0	
19		0	
20		0	
21		0	
▼ 22		0	
TOP BOTTOM SORT FIND FILEDATA			


SETTING UP FOR WEIGHING AND DATA ENTRY, USING EID

STEP 4:

Optimise the system for the species of animal you are weighing.

Press , **SYSTEM**.

Set Damp System to **Superdamp III (Cattle)** or **Superdamp III (Sheep)**, as required.

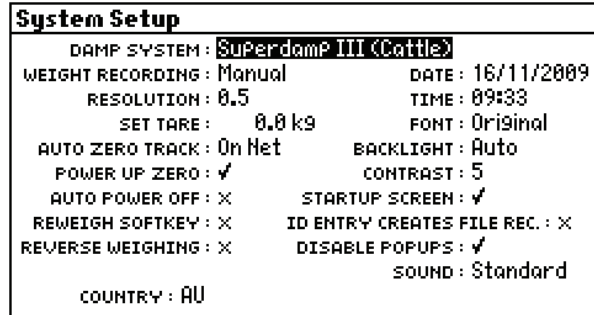


STEP 5:

Set up the EID device.

Ensure the EID reader is plugged into CON 2.

Press , , **SERIAL**.

Set up the screen as shown:

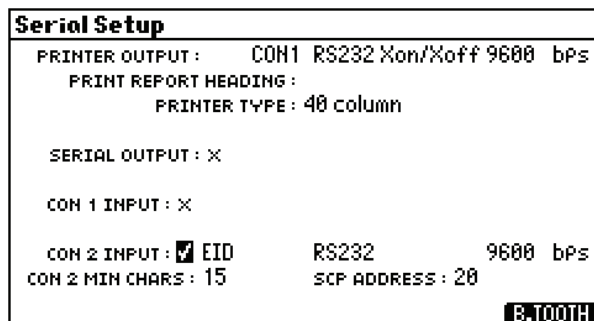

STEP 6:

The main Weighing screen should be displayed as shown:

You are now ready to weigh.

