



## INSTALLATION AND USER INSTRUCTION GUIDE

# Inspire

Model No (s)

FWR\*\*0R\*

FWR\*\*ER\*

\*\* Denotes fuel effect type and trim colour

\* Denotes trim type

0 Denotes UK model

E denotes European model

Electric Heater



**This guide should be used to install and care for your Flavel Electric heater.**

**Read all information carefully prior to installation and use.**

## **Installation**

**IMPORTANT** Please read the instructions below before installation or use of this Flavel Electric Heater.

**NEVER** use this heater where it may come into contact with water i.e. bathroom, shower room, kitchen.

**NEVER** leave unsupervised children where the heater is left switched ON or is left unguarded.

**NEVER** use this heater beneath a fixed socket outlet.

**NEVER** cover or obstruct the fan outlet, as this will cause the appliance to overheat.

**NEVER** install the heater close to combustible materials i.e. curtains or similar. Allow a minimum of one metre around the heater.

**NEVER** route the mains cable beneath carpet.

**NEVER** use aerosols or similar close to the heater.

**NEVER** use the heater to dry clothes or similar.

**NEVER** use the heater by means of an automatic control or timer, as this may cause risk of fire if the heater is moved or covered.

**NEVER** fit the heater directly onto carpet or similar material. It should be fitted onto a suitable non-combustible hearth

The appliance **MUST** be disconnected from the mains supply before commencing cleaning, or maintenance.

Ensure the heater is firmly secured to the fixing plain to prevent it from falling forward.

Use a suitable fireguard to protect both the infirm and young children who could come into contact with the heater.



DO NOT COVER

## **Appliance Data**

Supply Voltage	230V ac, 50Hz
Fuse Rating	13 Amp
Heating Element	2 x 500W
Mains Cable	1 x 1.8M PVC 1mm <sup>2</sup>
Illumination	2 x 20W Low Energy Bulb

### **The Flavel Electric Heater is manufactured by: -**

CFM Europe Limited  
Trentham Lakes  
Stoke on Trent  
Staffordshire ST4 4TJ

## **Installation Requirements**

The Flavel Electric heater is supplied with a moulded three-pin plug (13 Amp) and approximately 1.8 metres of flexible mains cable (1mm<sup>2</sup>). The appliance and surround should therefore be located close to a suitable mains socket to enable connection. The electrical socket MUST be easily accessible to allow disconnection. This heater MUST be earthed. If in any doubt consult a suitable competent person.

### **Connections**

L = Brown    N = Blue        E = Green / Yellow


Replacement fuses should be approved and conform to BS 1362.

The rating plate is located at the bottom of the product, alongside the on / off switch. The model number and serial number of the product will be required when booking a service visit.

Before use ensure that the supply voltage matches that marked on the appliance.

The mains cable should be routed from the heater to the socket connection without being trapped or being liable to damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

The heater is suitable for fixing directly onto a wall by using the supplied hanger.

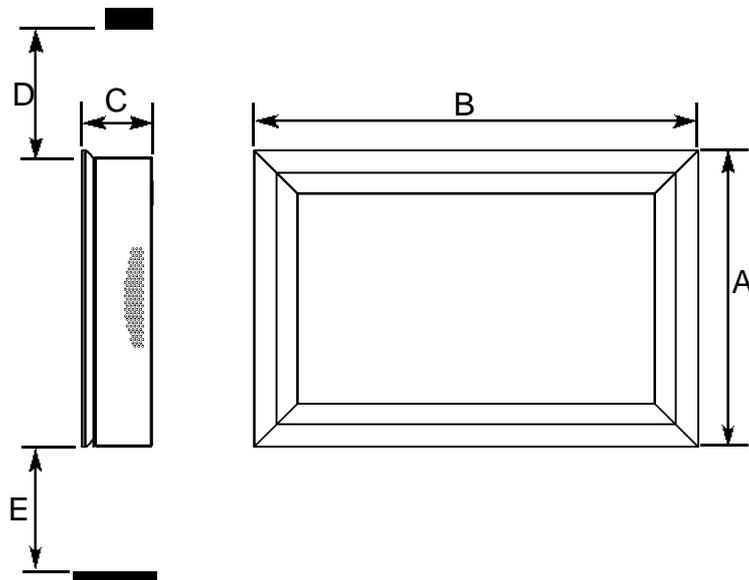

### **Dimensions**

- A 615
- B 910
- C 145
- D 300 min shelf height
- E 250 min from floor

## **Unpacking The Appliance**

The Flavel Electric heater is supplied in a single pack carton. All Instructions should be read prior to unpacking or installing the appliance. Ensure all parts including loose items have been removed prior to discarding the packaging.

## **Product Checklist**

1 off	Flavel Electric Heater Main Body
1 off	Remote Control Handset with Battery
1 off	Trim Assembly (in polythene bag)
1 off	Mounting Hanger
1 off	Fixing Kit
1 off	Instruction / Guarantee Literature
2 off	Pebble Pack
2 off	Infill Panels (supplied with 4 off fixing screws)

## **Appliance Fixing**

The heater must be fixed to a suitable wall using the mounting hanger provided.


## **Heater Assembly**

### **Laying the Pebbles**

Before assembling the trim to the appliance, lay the pebbles onto the plastic front form, to give the best decorative effect.


### Trim Assembly

Locate the hooks on the trim to the hook bracket on the top front of the appliance. Place the 6 magnets onto the base section of the trim as shown below :-

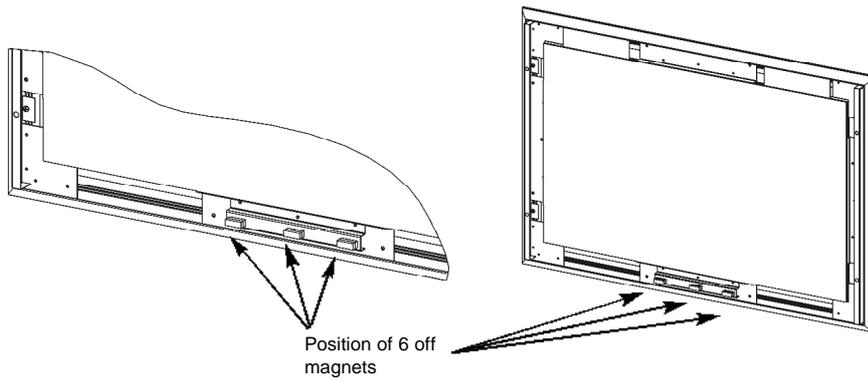


### Fitting the Trim Infill Panels

Locate the trim infill panels to the left hand and right hand sides of the trim and secure to the trim with the screws provided (2 off screws to left hand side and 2 off screws to right hand side)

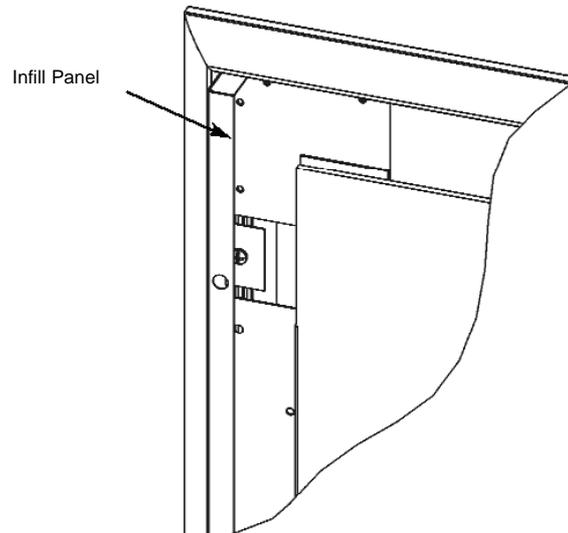

## Operation Of The Heater

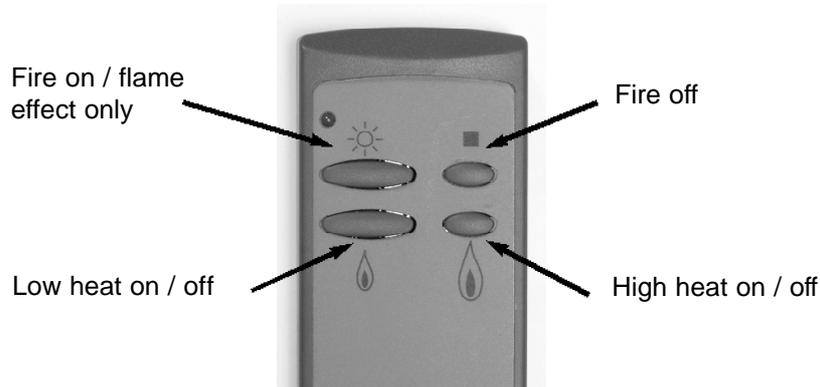

The heater is operated via the use of a remote control handset. A master ON / OFF switch is situated underneath the appliance on the left hand side. This is used to turn the appliance completely off.

Switch	Marking	Operation
Master ON /OFF	O I	On / Off. Depress to I, this supplies power to the appliance and places it in a standby mode.

**All further operations are carried out by using the remote control handset.**

- Ensure that the appliance is plugged in and switched on.
- To turn fire on press the fire on / flame effect button.
- For low heat, ensure that the flame effect is on and then press the low heat button once. To turn the low heat off, press the low heat button a second time. The fire will now be running with flame effect only.
- For high heat, ensure that the flame effect and low heat settings have been switched on then press the high heat button. The high heat button will only work if the flame effect and low heat have already been switched on. To turn high heat off, press the high heat button a second time. The fire will now be running with low heat.
- To place the fire in a standby mode at any time, press the fire off button.

### **IMPORTANT :    Safety Cut Out**

This appliance is fitted with an automatic safety cut out. This operates if the air outlet at the top of the product becomes covered or blocked. This will prevent the fan heater from operating.

In order to RESET the appliance the following procedure should be followed:-

Switch OFF the appliance and disconnect the appliance from the mains supply

Leave the appliance disconnected for a MINIMUM of 10mins  
Check the appliance is free from all obstructions and remove safely

Switch ON the appliance at the mains supply socket

Operate the appliance as shown on the previous page

If the appliance fails to operate, repeat the above procedure ENSURING the appliance is disconnected from the mains supply at the wall socket. If after repeating this procedure the appliance fails to operate CHECK the fuse within the wall socket / plug. If after carrying out both of the above procedures the appliance still fails to operate, then call a suitably qualified person or CFM Europe Ltd. Service Centre on the number shown on the rear cover of this booklet.

### **Care and Cleaning**

Always disconnect the appliance from mains supply and allow to cool before any cleaning operation begins.

Metal painted parts may be cleaned using a clean, damp cloth.  
Never use any abrasive cleaners and chemical agents as damage may occur to the paint finish.

## **Maintenance**


### **WARNING**

**BEFORE CARRYING OUT ANY MAINTENANCE, ENSURE THAT THE APPLIANCE IS DISCONNECTED FROM THE MAINS ELECTRICAL SUPPLY. IF IN DOUBT SEEK THE ASSISTANCE OF A SUITABLY QUALIFIED PERSON.**

It is advisable to use genuine Flavel replacement parts available from your supplier or direct from CFM Europe Ltd. (Contact details on the rear of this booklet)

### **Bulb Replacement**

Disconnect the appliance from the mains supply.  
Remove the decorative trim assembly.  
Remove the pebble and emberbed.

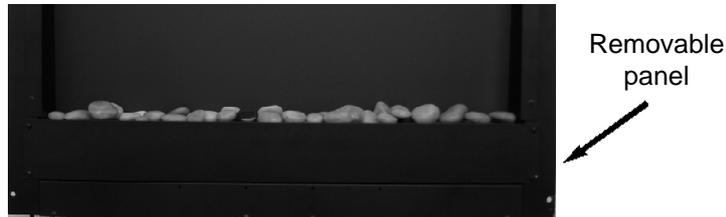

Remove the removable panel by unscrewing the 4 screws.  
Remove the coloured filter from the bulb and release the bulb from its housing  
Re-assemble in reverse order.

### **Spare Parts List**

20W energy saving bulb	B-62450
Pebble pack	B-81770
Coloured filter	B-84560

## **CONTACT INFORMATION**

Technical Queries  
01782 339000

Service / Fault Enquires  
08700 101187

The Following Information May Be Required When Contacting Flavel For Advice :-

Address  
Postcode  
Model No.  
Serial No  
Fault

The products serial number and model number can be found on the rating plate which is affixed to the bottom L/H side of the front panel, behind the ashpan cover.

Due to our policy of continual improvement and development the exact accuracy of descriptions and illustrations cannot be guaranteed.

Part No. B-94650  
Issue 2



CFM Europe Ltd  
Trentham Lakes  
Stoke-on-Trent  
Staffordshire  
ST4 4TJ  
Telephone 01782 339000  
[www.cfm-europe.com](http://www.cfm-europe.com)









