 


Your phone displays the following status indicators on the top of the screen:


Icon	Description
	Signal strength
	Call in progress
	Call diverting activated
	Roaming (outside of normal service area)
	Alarm activated
	FM radio on
	New text message
	Normal profile activated
	Silent profile activated
	Battery power level

Install the SIM card and battery

- Remove the back cover and battery, and then insert the SIM card.

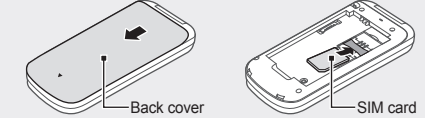


 - Insert the battery and replace the back cover.

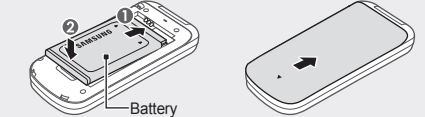

Charge the battery

 - Plug a travel adapter into the multifunction jack.
- When charging is finished, unplug the travel adapter.

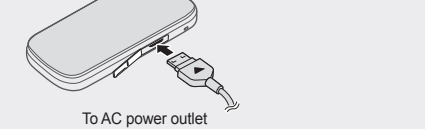

- Do not remove the battery while the device is connected to the travel adapter. Doing this may cause damage to the device.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create new message (represents Messages , followed by Create new message)
	Square brackets: phone keys; for example: [*☎] (represents the Power/End key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

To turn your phone on,

- Press and hold [***☎**].
- Enter your PIN and press **<OK>** (if necessary).
- When the setup wizard opens, customize your phone as desired by following the screen.



If the battery is removed for more than a few minutes, the time and date will be reset.

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

- In Idle mode, press **<Menu>** to access Menu mode.



You may need to press the Confirm key to access Menu mode depending on your region or service provider.

- Use the Navigation key to scroll to a menu or option.
- Press **<Select>**, **<Save>**, or the Confirm key to confirm the highlighted option.
- Press **<Back>** to move up one level; Press [***☎**] to return to Idle mode.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

- In Menu mode, select **Settings** → **Profiles**.
- Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone.

- Press **<Options>** → **Edit**.
- Select **Voice call ringtone**.
- Select a ringtone.

To switch to another profile, select it from the list.

Call a recently dialled number

- In Idle mode, press [**↵**] to display a list of recent numbers.
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [**↵**] to dial the number.

Use the shortcut toolbar

You can use the shortcut toolbar to access your favourite menus.

To add menus on the shortcut toolbar

- In Menu mode, select **Settings** → **Display** → **Shortcuts toolbar**.
- Select an empty location and press **<Options>** → **Edit**.
- Select your favourite menus. Press the navigation key right to select submenus (if necessary).
- Press **<Save>**.

To access a menu from the shortcut toolbar

In Idle mode, scroll left or right to the menu you want and press the Confirm key.



When the shortcut toolbar is activated, the Navigation key does not work as shortcuts depending on your region.

Lock your phone

- In Menu mode, select **Settings** → **Security** → **Phone lock** → **On** → **Yes**.
- Enter a new 4- to 8-digit password and press **<OK>**.
- Enter the new password again and press **<OK>**.

Lock your SIM card

You can lock your SIM card to allow the phone to use only the SIM card and to prevent other people from using the SIM card.

To allow the phone to use only your SIM card

- In Menu mode, select **Settings** → **Security** → **SIM lock** → **On**.
- Enter a new 4- to 8-digit password and press **<OK>**.
- Enter the new password again and press **<OK>**.

To prevent others from using the SIM card

- In Menu mode, select **Settings** → **Security** → **PIN lock** → **On**.
- Enter the 4-digit PIN supplied with the SIM card and press **<OK>**.

Enter text

To change the text input mode

- Press **<Options>** → **Predictive text on** to switch to T9 mode; Press **<Options>** → **Predictive text off** to switch to ABC mode.

- Press [**#**] to switch between Chinese, English, and Number input modes.

- Press and hold [**#**] to change case in English input modes or switch between Pinyin and Stroke modes in Chinese input modes.

- Press [*****] to switch to Symbol mode.

- Press and hold [*****] and select **Input method** to select an input mode.

Pinyin mode

- Press appropriate alphanumeric keys to enter pinyins.
- Scroll left or right to a pinyin.
- Press the Confirm key.
- Scroll up or down to find the character you want.
- Press an alphanumeric key to enter the corresponding character.

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [**↵**] to dial the number.
- To end the call, press [***☎**].

Answer a call

- When a call comes in, press [**↵**].
- To end the call, press [***☎**].

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Profiles**.
- Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

- Press **<Options>** → **Edit**.
- Select **Volume** and scroll to **Call alert**.
- Scroll left or right to adjust the volume level.
- Press **<Save>**.

S stroke mode

- Press [**1**] through [**5**] to enter strokes. Press [**6**] when you are unsure which stroke to enter. This will insert a placeholder.
- Press the Confirm key.
- Scroll up or down to find the character you want.
- Press an alphanumeric key to enter the corresponding character.

T stroke mode

- Press [**1**] through [**5**] to enter strokes. Press [**6**] when you are unsure which stroke to enter. This will insert a placeholder.
- Press the Confirm key.
- Scroll up or down to find the character you want.
- Press an alphanumeric key to enter the corresponding character.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [**0**] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

To use other features for text input

- To move the cursor, press the Navigation key.
- To delete characters one by one, press **<Clear>**. To delete all of the characters, press and hold **<Clear>**.
- To insert a space between characters, press [**0**].
- To enter punctuation marks, press [**1**].

Add a new contact



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **Management** → **Save new contact to** → a memory location.

- In Idle mode, enter a phone number and press **<Options>**.
- Select **Create contact** → a memory location (if necessary).
- Select a number type (if necessary).
- Enter contact information.
- Press the Confirm key to add the contact to memory.

Send and view messages

To send a text message

- In Menu mode, select **Messages** → **Create new message**.
- Enter a destination number and scroll down.
- Enter the message text. *See "Enter text."*
- Press the Confirm key to send the message.

To view text messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key** → **On**.

To make a fake call

In Idle mode, press and hold the Navigation key down.

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone.

To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
- Enter your password and press **<OK>**.



The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

- Scroll left or right to **On**.
- Scroll down and press the Confirm key to open the recipient list.
- Press **<Options>** → **Contact list** to open your contact list.
- Select a contact.
- Select a number (if necessary).
- Press the Confirm key to save the recipients.
- Scroll down and enter the sender's name.
- Press the Confirm key → **<Accept>**.

Listen to the FM radio



To listen to the FM radio, you must connect a headset which is compatible to your phone.

- Plug a headset into the phone.
- In Menu mode, select **FM radio**.
- Press the Confirm key to start the FM radio.
- Press **<Yes>** to start automatic tuning. The radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	• Left/Right: Tune a radio station • Up/Down: Adjust the volume

Set and use alarms

To set a new alarm

- In Menu mode, select **Alarms**.
- Select an empty alarm location.
- Set alarm details.
- Press **<Save>**, or press **<Options>** → **Save**.

To stop an alarm

When the alarm sounds,

- Press **<OK>** or the Confirm key to stop the alarm.
- Press **<Snooze>** to silence the alarm for the snooze period.

To deactivate an alarm

- In Menu mode, select **Alarms**.
- Select the alarm you want to deactivate.
- Scroll left or right to **Off**.
- Press **<Save>**.

Activate the torch light

The torch light feature helps you see in dark places by making the display backlight as bright as possible.

In Idle mode, press and hold the Navigation key up to turn on the display backlight. You can also select **Applications** → **Torch light** → **<On>**.

To turn off the display backlight, press **<Off>**.