 


Multifunctional camcorder with music player

User Manual

1、 Product instruction

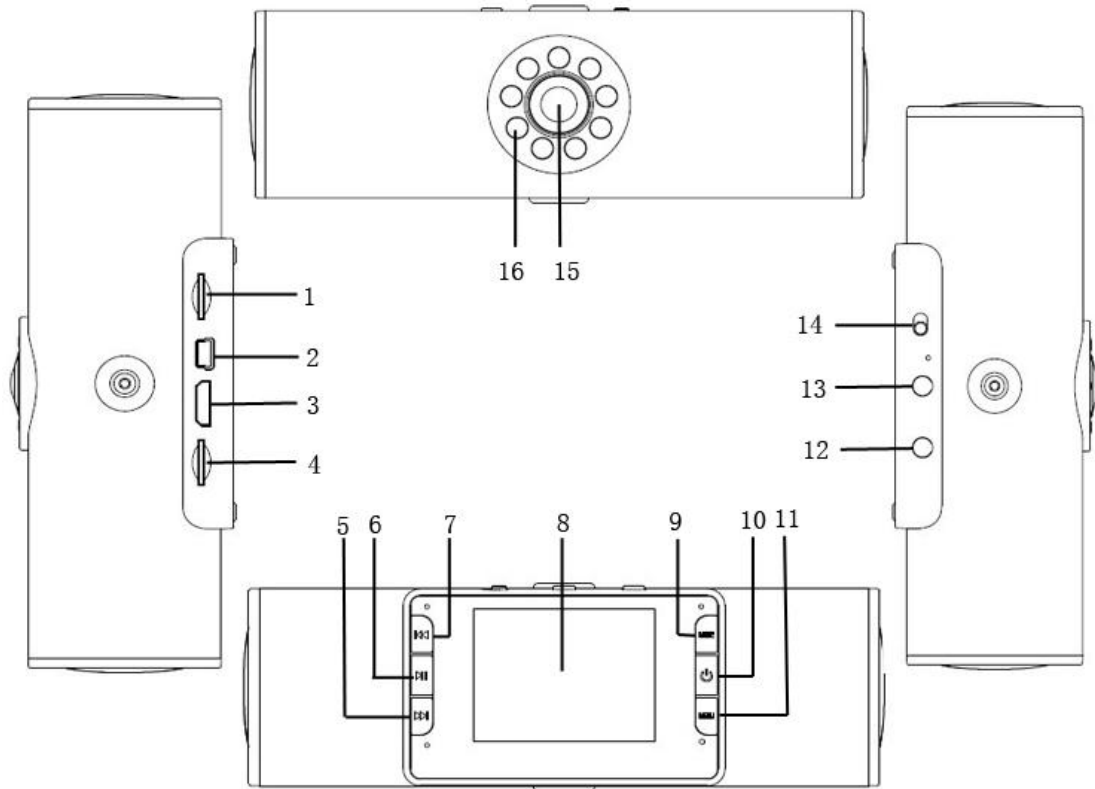


- | | | |
|-----------------------------------|-----------------------|-------------------------------|
| 1) music memory card | 2) USB data interface | 3) HDMI output interface |
| 4) video memory card | 5) next song button | 6) play / pause button |
| 7) a button | 8) viewfinder display | 9) MODE button |
| 10) the power switch press button | 11) button | 12) MENU OK button |
| 13) flashlight switch | 14) switch | 15) music player viewing lens |
| 16) illumination LED | | |

2、 Camera / photo of the basic instructions

Press  The power button first boot, the blue indicator light lights up at boot time

Again press  the power button is shut down, the blue light goes out.

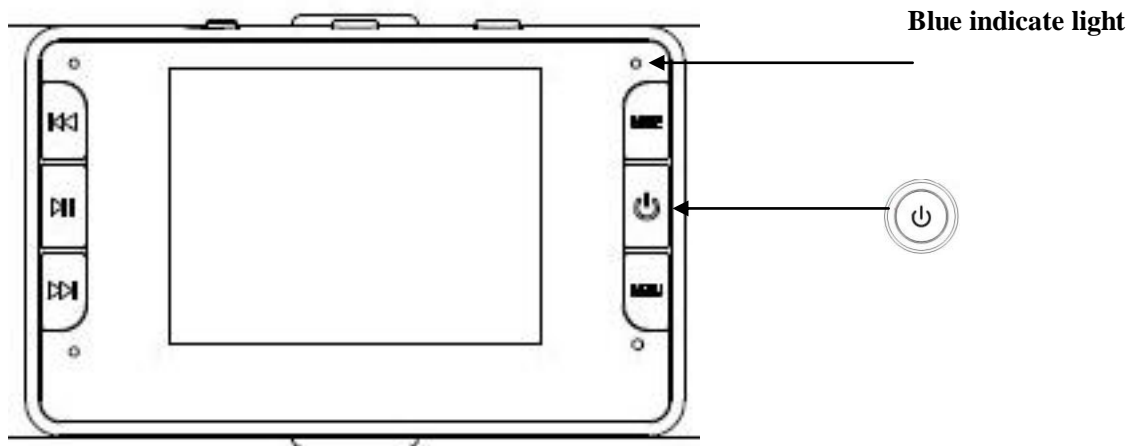

Note: The recording instrument will be prompted to low battery voltage automatic shutdown when battery is low

- **Movie mode**

Long press **MODE** button to switch to camera mode, the upper-left corner of the screen displays a camera icon;

Press **OK** to start recording, the camera icon will appear next to the flashing red dot, indicating the video work.

Note: The long press means the press and hold the button for two seconds and release.

- **Camera mode**

Long press **MODE** button to switch to camera mode, the upper-left corner of the screen displays the camera icon;

Press the **OK** button to take pictures, take pictures of the screen flashes once said camera to complete.

Note: The long press means the press and hold the button for two seconds and release.

- **Video/photo/playback**

Long press **MODE** button to switch to playback mode, the upper-left corner of the screen to display the playback icon;

Press the **MODE** button up to select the file;

Short press the **MENU** key down to select the file;

Short press the **OK** button to play the selected video files.

Note: The long press means the press and hold the button for two seconds and release.

- **Digital zoom**

Continuous Short press **MODE** button or the **MENU** framing objects zoom in or out (4X)

- **Menu settings**

Long press the **MENU** button click, enter the state of the video settings, then the "video icon" field is a yellow background; again, long press the **MENU** switch to set the "Settings icon" field a yellow background, long Press the **MODE** button to exit the set state.

 
Long press **MENU** key to bring up the settings menu, press the **MODE** button or short press the **MENU** button up and down to select the settings;

Short press the **OK** button to enter the settings again, press the **MODE** button or the **MENU** button up and down the need to change the settings, press **OK** to confirm changes.

Note: The long press means the press and hold the button for two seconds and release.

3、Music features basic instructions

- **Music switch**

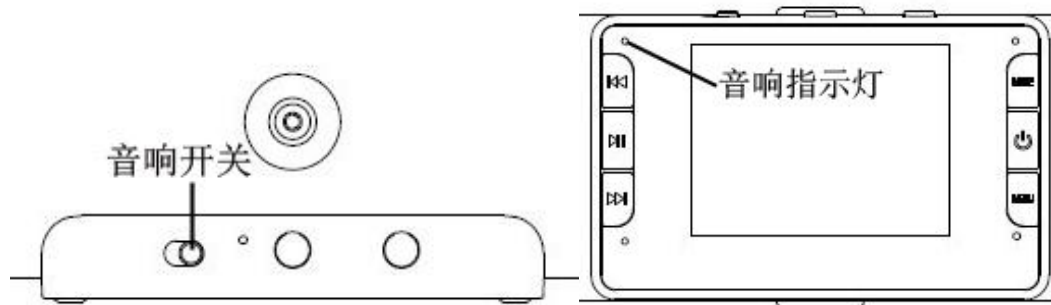

The music player switch to the **ON** position, audio indicator lights, random music to start playing.

- **On one / under one**

Press on the control panel on one or a button, be able to choose the music player.

- **Music pause / play**

 
Press the play button on the control panel, you can pause music playback, press again to cancel pause.

- **Volume addition and subtraction**

Long on one or the next one on the control panel, you can increase or decrease the volume

4、Flashlight instructions

- **Flashing switch**

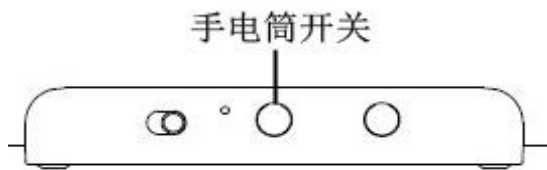

Press the flashlight switch, turn on the flashlight again short, turn off the flashlight

The USB cable connected to the computer, press the power button, the tachograph will automatically pop up the USB menu. There are the following two modes to choose from:

1: Memory

In this mode, the video file or photo file access

2: The camera


Select this mode will bring up the USB video device, real-time taking pictures or video chat

Note: Connect the USB functions operate only on the camera memory card.


5、 Battery charging instructions

There are two ways to charge the battery, the red charging indicator light will be lit in the charging process, the charging time is about 180 minutes, the red charging indicator light will automatically switch off after the charging is finished.

1: Use the power adapter to charge

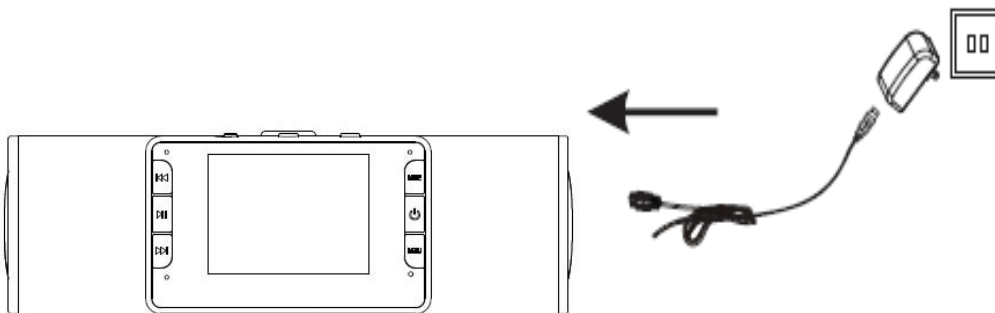

2 Use the PC-USB to charge

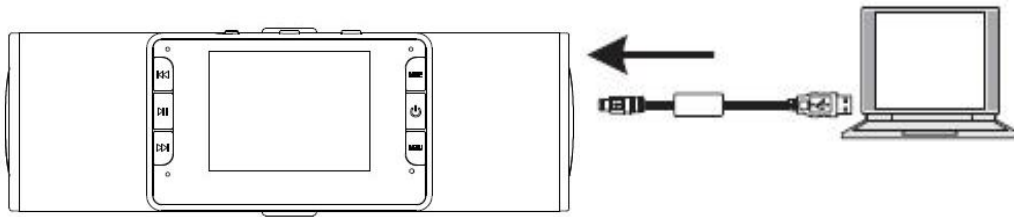

Note: When using this product due to improper operation caused by the phenomenon of crash, you can disconnect the battery or press the reset button before turning on power, you can return to normal.

6、 Product Feature

- ◆ Support for music playback
- ◆ Do not drain seconds
- ◆ 1080P HD
- ◆ HDMI HD output interface
- ◆ Automatic ambient light and balance
- ◆ High-speed lens, image stabilization design
- ◆ Built-in low-light high-quality sensory components, and can capture clear images in a variety of occasions
- ◆ Flashlight
- ◆ Built-in microphone
- ◆ Support high-capacity TF card
- ◆ Support while charging video
- ◆ Loop recording function automatically delete old files recorded in a new file

7、 Product specification

Size of the LCD	2.0LTIPS
Camera	140 A + grade high-resolution ultra-wide-angle lens
Image stabilization technology	support
Digital magnification	4

Language	Multilingual
Video solution	1920×1080 pixels 1280×720 pixels
Video format	H.264, Audio: PCM
White balance	Automatic
Color effects	standard
Continuous loop video	Support
Off file recovery	Support
Motion detection	Support
Year/month/day/hour/min	Support
Carrier media	uilt-in memory(canbeused:21.1MB,total:32MB)
The camera mode	5million
Photo format	JPEG
Memory card	TF (max32GB)
Microphone	Support
Built in speaker	Support
Infrared night vision	Support
Video output	HDMI
Video Format	PAL/NTSC
Current frequency	50HZ/60HZ
USB function	1. Memory card 2. PC camera
Power interface	5V 800ma
Battery	Bulit- in 2400mah
Music player	Support
Flashing light	Support