 


2CT™ too cool toys

USER MANUAL

Recreational Golf Bag

Model TCT6EU
V29T

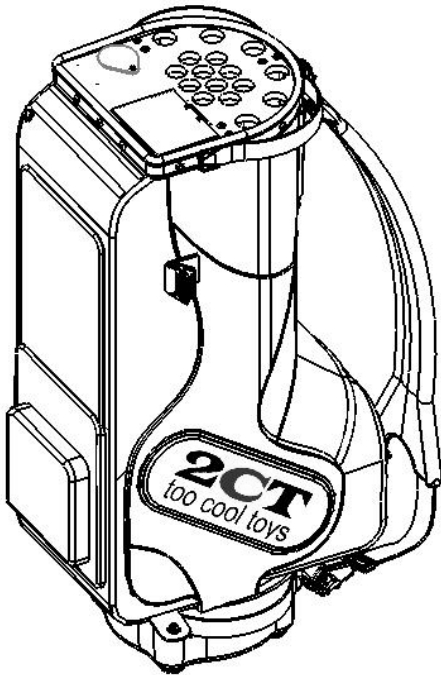

SAVE THESE INSTRUCTIONS

For service or more details about this product visit our website at www.toocooltoys.net

THIS PRODUCT IS COVERED BY ONE OR MORE U.S. PATENTS OR OTHER PATENTS PENDING.



All information, illustrations and specifications in this manual are based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice.

Copyright © 2006 TOO COOL TOYS, INC., All Rights Reserved.

Table of Contents

Service Information.....	1
Rules for Safe Operation.....	2
Know Your Unit.....	3
Assembly Instructions.....	3
Charging Instructions.....	4
Powering On the Unit.....	4
Remote Battery Replacement.....	4
Main Battery Information & Replacement.....	4
Securing Unit on Golf Cart.....	5
Removing or Replacing Logo Patch.....	5
Ejecting Golf Clubs.....	6
Preparing Beverage Dispenser for use.....	6
Operating the Beverage Dispenser.....	7
Keeping Beverages Cold.....	7
Cleaning the Beverage Dispenser.....	7
Using Umbrella Pocket.....	8
Using TV Antenna and Stereo Antenna.....	8
Using the Stereo/DVD/CD/TV and Monitor.....	9
Care and Cleaning of Unit.....	10
Technical Specifications.....	10
Warranty.....	10



READ ALL INSTRUCTIONS BEFORE OPERATING

- Read the instructions carefully. Be familiar with the controls and proper use of the unit.
- Children must not use the unit, except teens guided by an adult.
- Do not place head over top of unit when ejecting Golf Club – Be aware of the risk of injury to head or face.
- Always make sure area around bag is clear when ejecting a golf club.
- High wind may carry golf club when ejected from unit.

ELECTRICAL SAFETY WARNINGS

DANGER! RISK OF ELECTRICAL AND FIRE HAZARD. MAY RESULT IN DEATH, SERIOUS INJURY, SHOCK OR BURNS.



TO HELP REDUCE THIS RISK:

- Unit is an electrical device - care must be taken when charging the battery. Follow all battery charging instructions.
- DO NOT short-circuit or disassemble the battery. A short-circuit may cause severe damage to the battery.
- DO NOT drop, hit or otherwise abuse the battery. This behavior may result in the exposure of the cell contents, which are corrosive.
- DO NOT expose the battery to moisture or rain. Keep battery away from fire or from other sources of extreme heat. Do not incinerate. Exposure of battery to extreme heat may result in an explosion.
- DO NOT disassemble charger. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- DO NOT expose charger to rain, snow, water, gas, oil, etc.
- DO NOT operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified service person.
- DO NOT block air holes in top or bottom of charger.
- Charger MUST be grounded to reduce risk of electric shock.
- The plug MUST be plugged into an outlet that is properly installed and GROUNDED in accordance with all local codes and ordinances.

AUDIO AND VIDEO SAFETY WARNINGS:

- Mobile DVD Player is a class I laser product. However this mobile DVD player uses a visible/invisible laser beam which could cause hazardous radiation exposure if directed.
- Be sure to operate the mobile DVD player correctly as instructed.
- Do not open covers and - DO NOT repair yourself. Refer servicing to qualified personnel.
- To reduce the risk of fire or electric shock, DO NOT expose this equipment to rain or moisture.
- This device is intended for continuous operation.

 
 
 
 
OTHER SAFETY WARNINGS:

- Store the unit in a dry place.
- Store the unit in an upright position.
- Secure the unit properly on any golf cart – follow ALL instructions.
- Use caution when lifting the unit.
- Keep these instructions. Refer to them often and use them to instruct other users.
- Save these instructions.

FCC SAFETY NOTICE:

- This device complies with Part 15 of the FCC Rules. Operation of this device is subject to the following two conditions:
 - This device may not cause harmful interference, and
 - this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This equipment has been certified to comply with the limits for a Class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

KNOW YOUR UNIT

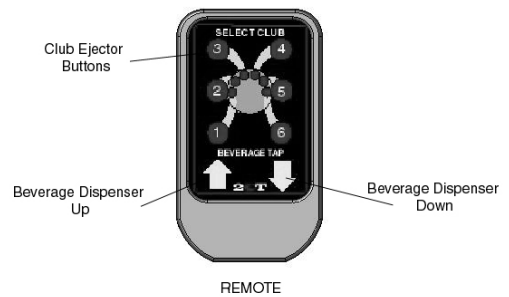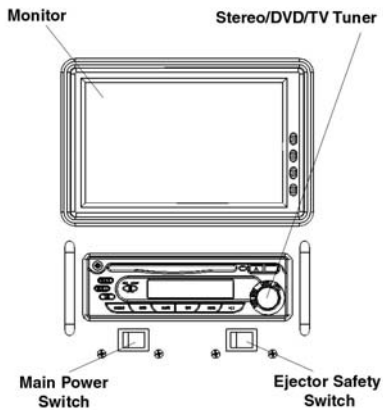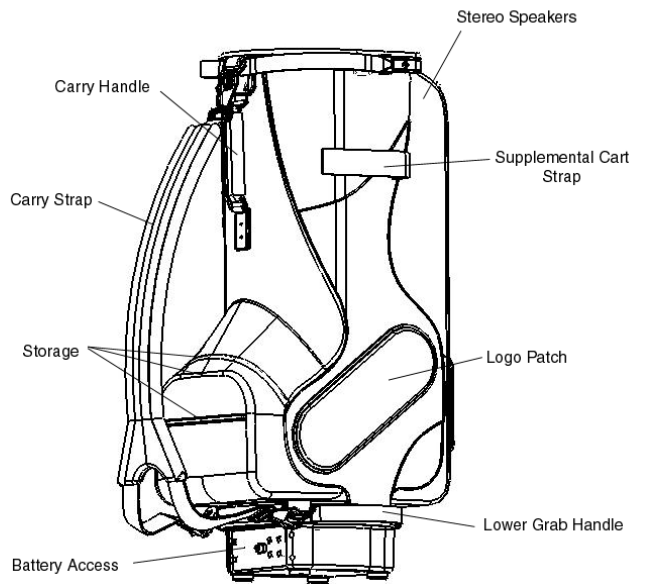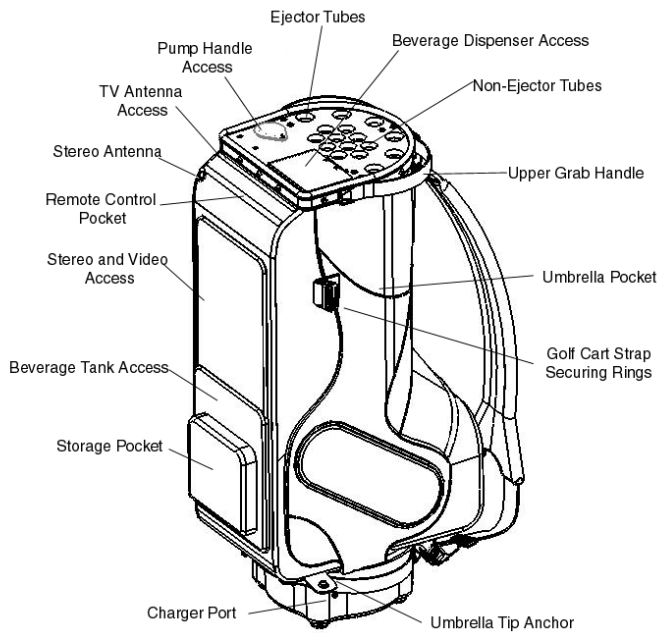

ASSEMBLY INSTRUCTIONS

 
Step 1

Install the Carry Strap by attaching the single quick clip to the top ring and attaching the two lower quick clips to the bottom anchor rings.




Step 2

Open the battery door by sliding the latch. Swing open.

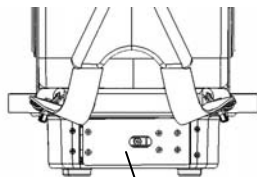


Step 3

 Orient the battery with spring contacts toward the top of the battery.

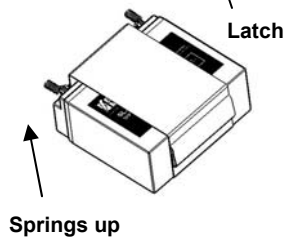


Step 4

 Install the battery, springs first and up, into the access door.

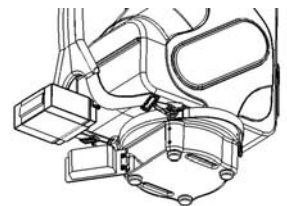

Step 5

 
Plug battery charger into Charger Port.

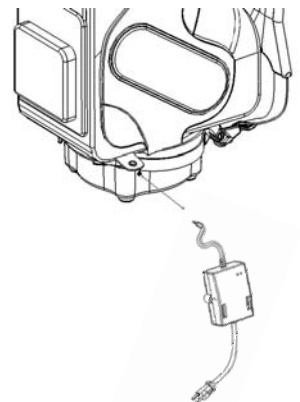


Step 6

Plug Charger into wall outlet and charge for 12 hours.

 CHARGING INFORMATION

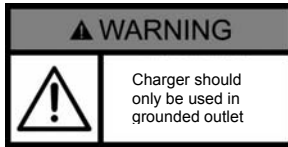

 - Charger should only be used in grounded outlet.
- When the Charger is plugged in to a wall outlet the Green light will illuminate.
- A completed charge cycle is indicated by the red LED.
- The charger can be left on the battery without damage, and keeps the battery fully charged, ready for use at all times.

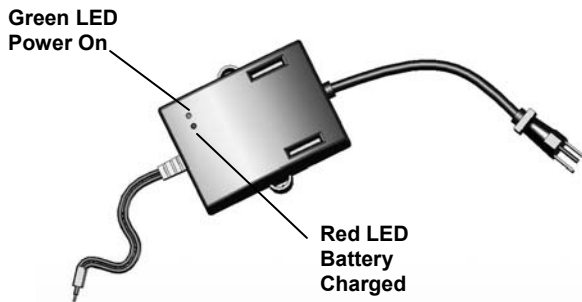

REMOTE BATTERY REPLACEMENT

The remote unit utilizes a standard CR2032 lithium button cell. In normal use, it will provide 1 to 2 years of operation. To replace the battery, remove the access cover by pressing down firmly on the label area and sliding it off. Once the unit is open, remove the battery by sliding it from beneath the holder.



There may be the risk of explosion if the battery is replaced by the wrong type. Replace it with the same type of battery while observing the polarity shown in the adjacent figure.

POWERING ON THE UNIT

Step 1

In order to provide power to the unit it is necessary to activate the Main Power Switch. Locate the switch beneath the Stereo and Video Access Zipper and just below the stereo on the left side.

Step 2

 
Press switch to ON position.

Step 3

In order to allow the remote control to function, it is necessary to activate the Ejector Safety Switch. Locate the switch to the right of the Main Power Switch.

Step 4


Press switch to ON position.

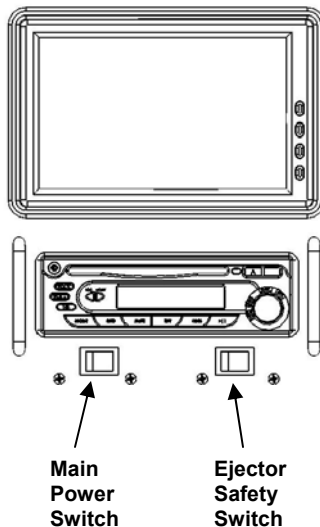

MAIN BATTERY INFORMATION & REPLACEMENT

- Under normal operating conditions, four or five years of dependable service life can be expected in stand-by applications, or between 200 and 1000 charge/discharge cycles depending on the average depth of discharge.

 
- To replace battery:

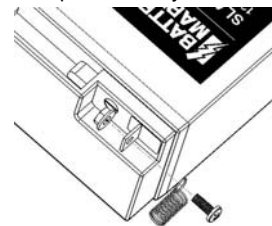

1. Remove from unit

2. Remove springs.

 3. Slip pull tab off of the battery

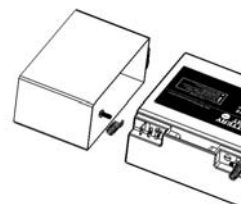


4. Reverse to reinstall

Replacement batteries are available at www.toocooltoys.net or your local battery retailer. Replace only with exact size battery.

INSTALL UNIT ONLY ON DRIVER SIDE OF GOLF CART


STEP 1

 Lift unit onto DRIVER SIDE of golf cart.

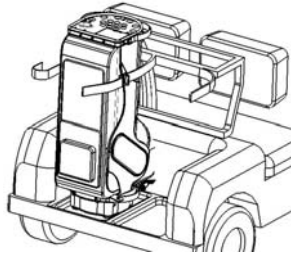


STEP 2

 Locate Golf Cart Strap Securing Rings on the right side of unit. Feed golf cart strap through openings of both Securing Rings.

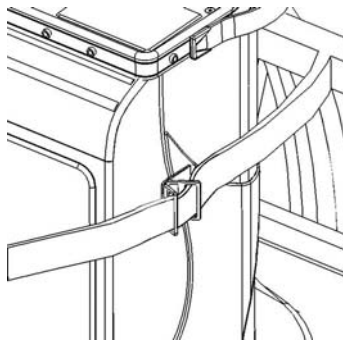


STEP 3

 Loop strap back through opening of rear Securing Ring and pull tightly.

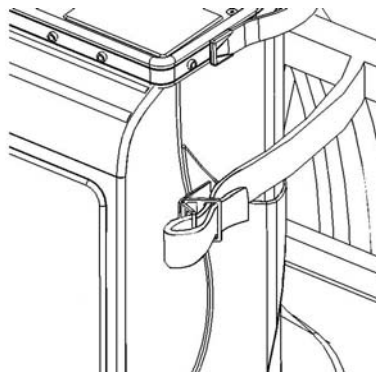


STEP 4

 Open the cam buckle on golf cart.

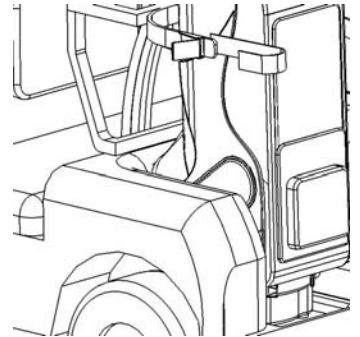


STEP 5

 Locate the Supplemental Cart Strap on left side of unit. Pass the Strap through the cam buckle on the golf cart.

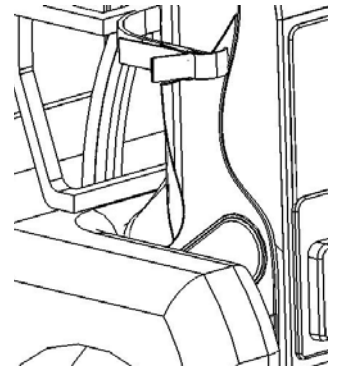


STEP 6

 Pull the Strap tightly and close cam buckle.

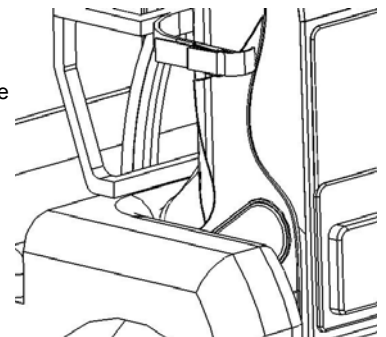

REMOVING AND REPLACING LOGO PATCH

 - Logo Patch is attached to unit with velcro material and can be removed or replaced as needed.
- To remove Logo Patch:

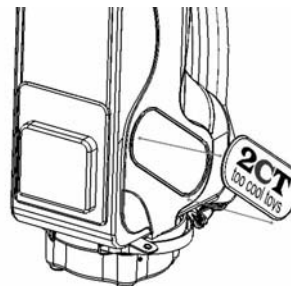

1. Pull up one end of Logo Patch and pull gently

2. To install, place patch in position and tuck under flap

Replacement or custom Logo Patches are available at www.toocooltoys.net.

EJECTING GOLF CLUBS

▲ WARNING



Use Caution
when ejecting
Golf Clubs

 
▲ WARNING



Do place head
over ejector tubes
when operating


STEP 1

Insert club shaft into ejection tube and press down until the spring latches

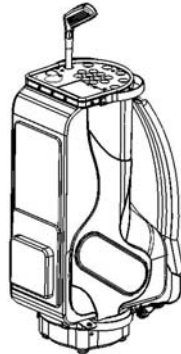

STEP 2

 Identify ejection tube of selected club.

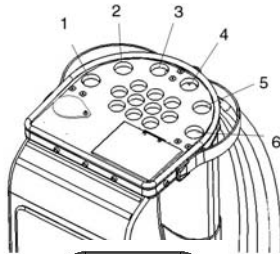

STEP 3

Press appropriate button on remote.



STEP 4

Prepare to catch club as it is ejected.

 


PREPARING BEVERAGE DISPENSER FOR USE

BEVERAGE DISPENSER CAN BE USED WITH ALL BEVERAGE TYPES – DO NOT USE ICE INSIDE BEVERAGE TANK


STEP 1

Open zipper access to Beverage Tank and remove tank.

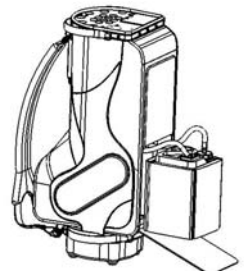

STEP 2

 Press quick disconnects to remove hoses.

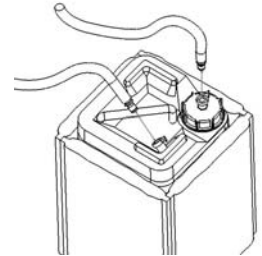

STEP 3

 
Remove cap and fill tank to no more than 2" from top. Close cap tightly.

MAX FILL LINE




STEP 4

Reconnect color coded hoses. Connect black fitting on hose to black fitting on tank. Connect red fitting on hose to red fitting on tank. Close zipper access.

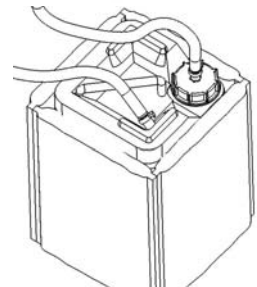


STEP 5

 Slide pump handle access door open and pull up the pump handle.

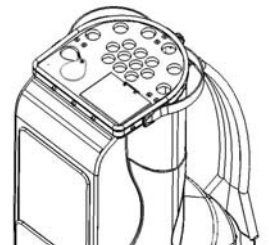

STEP 6

 Pump the handle until the tank is pressurized. Store handle in the down position and replace the access door.

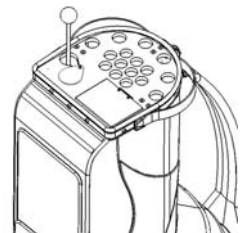

OPERATING THE BEVERAGE DISPENSER

STEP 1

Depress and hold the UP button on the remote control.

 
Press and hold




STEP 2

Press button until tap dispenser is fully extended.

WRONG

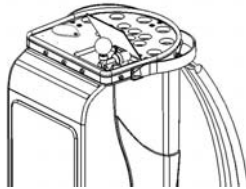

RIGHT

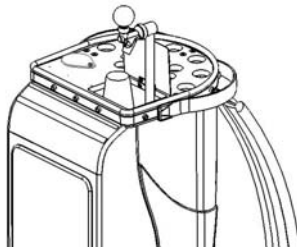 


STEP 4

Pull tap handle forward to dispense beverage




STEP 5

 Depress and hold the DOWN button on the remote control until tap dispenser is fully stowed.

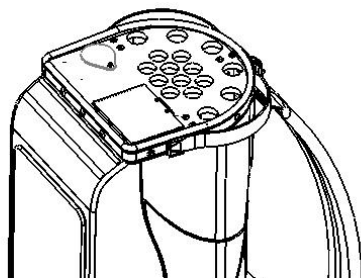

KEEPING BEVERAGES COLD

 - Your unit comes with a Cool Jacket for the Beverage Tank.
- The Cool Jacket will keep beverages cold – there is no need for ice in the Beverage Tank.
- Prepare the Cool Jacket in advance of using your unit. Place it in a freezer overnight to ensure best results.
- To remove the Cool Jacket

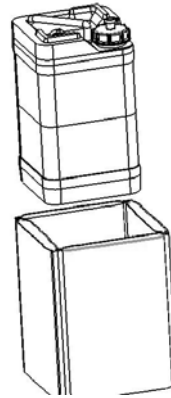

1. Remove Tank from unit according to the directions in Section: **Preparing Beverage Dispenser For Use** – page 5

 
2. Slide Tank out of Cool Jacket.

3. Place Cool Jacket in Freezer.

4. When Cool Jacket is frozen, replace over tank.


Replacement or Cool Jackets are available at: www.toocooltoys.net.

CLEANING THE BEVERAGE DISPENSER

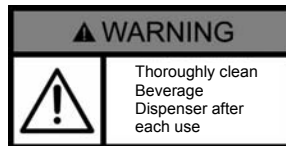

STEP 1

 Remove Beverage Tank from unit and disconnect the RED pressure hose fitting only.

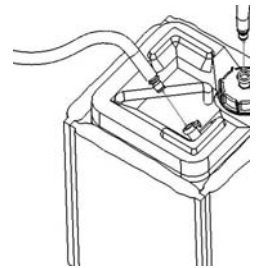


STEP 2

Open Dispenser Tap Handle to allow Supply Tube to drain back into tank.



STEP 3

 
Disconnect BLACK supply hose fitting and empty Beverage Tank.

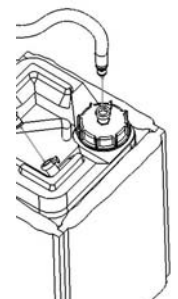

CLEANING THE BEVERAGE DISPENSER Cont

STEP 4

 Fill bottom two inches of tank with warm soapy water.

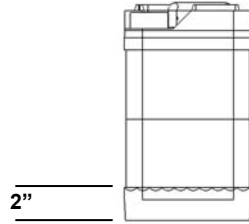


STEP 5

Follow directions in section: **Preparing the Beverage Dispenser for Use** – page 5, to reconnect the Beverage Tank.

STEP 6

 Pressurize the system and flush out all the soapy water.

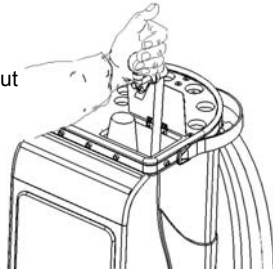

STEP 7

Refill bottom two inches of tank with clear water and repeat steps 5 and 6.

STEP 8

 
Allow tank to dry before closing cap for storage.

USING TV ANTENNA AND STEREO ANTENNA

STEP 1


Locate Stereo Antenna on front of unit.

Stereo Antenna

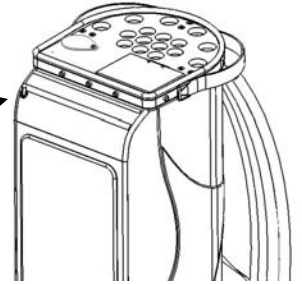

STEP 2

 
Pull up on Stereo Antenna and raise to full height.

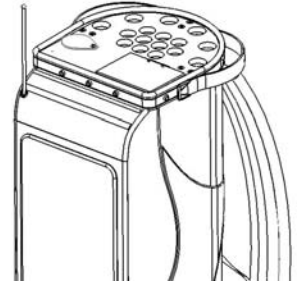

STEP 3


Locate TV Antenna Pocket and open the zipper.

 TV Antenna Pocket Zipper

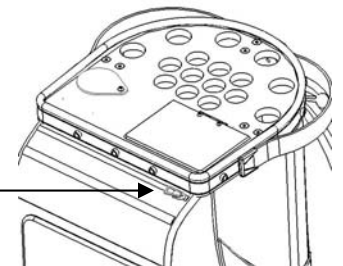


STEP 4

 Remove both TV Antennae and adjust to obtain best picture quality.

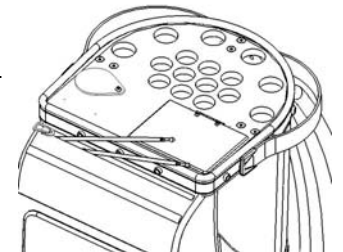

USING UMBRELLA POCKET

 - Your unit comes with a pocket for carrying an umbrella.

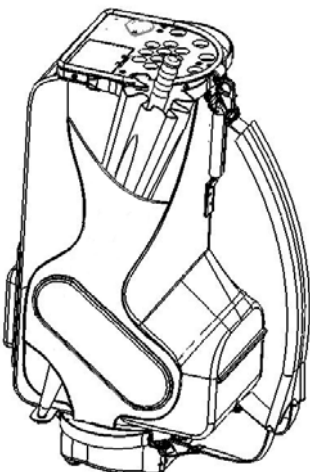

1. Insert umbrella in the Umbrella Pocket located above the Logo Patch.

2. Slide umbrella through pocket and place the tip in the Umbrella Tip Anchor.

NOTE: Television reception will vary greatly by location and signal strength.

USING THE STEREO/DVD/CD/TV AND MONITOR

Refer to Stereo and Monitor instructions for complete information regarding the operation of these units.

Refer to diagrams at right for Stereo and Stereo Remote button identification.

- **To use the Radio**
- Power on the Stereo by pressing the **POWER** button (#1) or use Stereo Remote button #1
- Switch to Radio Mode by pressing the **POWER** button (#1) repeatedly (until selected) or use Stereo Remote button #6
- Select AM or FM band by pressing the **BAND** button (#17) or use Stereo Remote button #7
- Tune to desired frequency using the **▲ Up ▼ Down** buttons (#15 and #16) or use Stereo Remote buttons #5 and 25)

Refer to diagrams at the lower right for Monitor and Monitor Remote button identification.

- **To use the DVD Player**
- Power on the Stereo by pressing the **POWER** button (#1) or use Stereo Remote button #1
- Power on the Monitor by pressing the monitor **POWER** button or use Power button on the Monitor Remote
- Switch to DVD Mode by pressing the **POWER** button (#1) on the stereo repeatedly (until selected) or use Stereo Remote button #22
- Insert DVD Disc. Play will begin automatically. Use **▲▼◀▶** and **ENTER** buttons on Stereo Remote to make DVD menu selections. #5,25,6,24 and 7 respectively.

- **To use the TV**
- Power on the Stereo by pressing the **POWER** button (#1) or use Stereo Remote button #1
- Power on the Monitor by pressing the Monitor **POWER** button or use Power button on the Monitor Remote
- Switch to TV Mode by pressing the **POWER** button (#1) on the stereo repeatedly (until selected) or use Stereo Remote button #22

 
IMPORTANT FOR FIRST USE

Raise the TV Antenna. Press the **AST/RDM** (#14) button on the Stereo This will scan and store available TV Stations for viewing.


Selecting Channels

Press **▲ Up ▼ Down** buttons on the Stereo (#15 and #16) to select from scanned stations. To use the Stereo Remote to change channels press the **▲ ▼** buttons (#6 and #25) to select from scanned stations

- **To use the CD Player**
- Power on the Stereo by pressing the **POWER** button (#1) or use Stereo Remote button #1
- Switch to CD Mode by pressing the **POWER** button (#1) on the stereo repeatedly (until selected) or use Stereo Remote button #22
- Insert CD Disc and play will begin automatically.

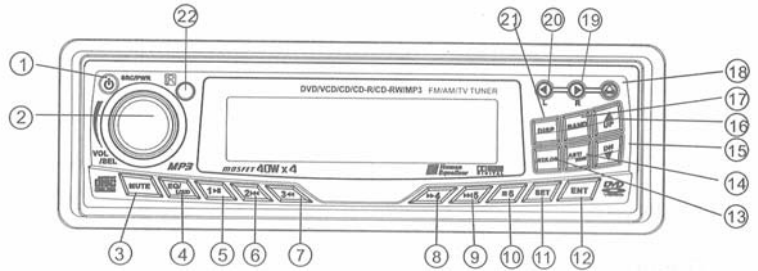

Stereo

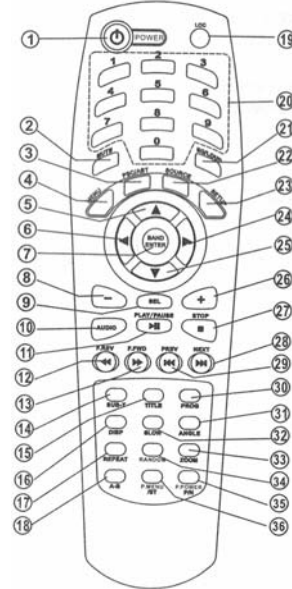 


Stereo Remote

Power



Monitor

 Power

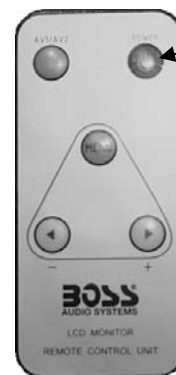

Monitor Remote

CARE AND CLEANING OF UNIT

- Clean the exterior your unit with a damp soft cotton cloth.
- A general purpose vinyl cleaner can also be used.
- Use a general purpose vinyl protectant can be used after cleaning to keep the unit looking new.
- DO NOT use ammonia based products to clean the Monitor.
- Clean the Beverage Tank and Beverage Dispenser according to the directions on page 7.
- Do Not store unit outside.
- Avoid exposure to rain or other precipitation. In cases where this cannot be avoided, ensure that the Beverage Dispenser and Pump Handle Access doors are closed. Also close the Stereo and Video Access zipper.
- Maintain a charged battery according to steps 2 through 6 of the assembly instructions found on page 3.
- DO NOT place debris into the ejector tubes.
- Remove Battery when transporting unit to decrease lifting weight. Use care when lifting the unit.
- Transport the unit on it's side. Remove Beverage Tank before transporting.

View the Too Cool Toys web site for other care related questions: www.toocooltoys.net.

TECHNICAL SPECIFICATIONS

Specifications of Unit:

13" W x 21.5" D x 40.75" H
 Dry Transporting Weight: 68 lbs.
 Dry Weight w/o Battery: 71 lbs.
 Overall Dry Weight: 86lbs.
 Beverage Tank Capacity: 2.5 Gal
 Beverage Tank size: 8" W x 8" D x 13.25" H
 Beverage Tank Material: High density polyethylene meets FDA standards.
 Golf Club Capacity: 16
 # Ejector Tubes: 6
 Battery discharge duration: Approximately 6.5 hours (varies)

Battery Specifications:

Voltage: 12V
 Amp Hours: 18AH
 Length 7.13 in, Width 2.99 in., Height 6.57 in.
 1 Year Warranty

Remote Specifications:

315 or 418MHz

Parameter	Designation	Min.	Typical	Max.	Units	Notes
POWER SUPPLY						
Operating Voltage	V _{DC}	2.1	3.0	3.6	VDC	-
Supply Current	I _{CC}	-	3.4	-	mA	-
Power-Down Current	I _{POW}	-	5.0	-	nA	1
TRANSMITTER SECTION						
Transmit Frequency Range:	F _C	-	-	-	-	-
CMD-HHCP-315	-	-	315	-	MHz	-
CMD-HHCP-418	-	-	418	-	MHz	-
CMD-HHCP-433	-	-	433.92	-	MHz	-
Center Frequency Accuracy	-	-50	-	+50	KHz	-
ENVIRONMENTAL						
Operating Temperature Range	-	-40	-	+85	°C	1

Charger Specifications:

1.5 Amp
 12 Volt
 Input 0.4 A 60 Hz 120 VAC
 Output: 1.5 A 12 VDC
 3.5" H, 4.75" W, 1.75" D

TECHNICAL SPECIFICATIONS Cont.

Stereo Specifications:

Power Supply Requirements : 12V DC (11V-15V), test voltage 14.4V, negative ground
 Chassis Dimensions : 178 (W) x 160 (D) x 50 (H)
 Tone Controls
 - Bass (at 100 Hz) : ± 10 dB
 - Treble (at 10 KHz) : ± 10 dB
 Maximum Output Power : 4 x 60 watts
 Current Drain : 5 Ampere (max.)

Monitor Specifications:

Screen Size: 7" (16:9)
 Resolution 1440 x234
 Brightness: 300cd/m² (Nit)

WARRANTY

Limited Warranty

What Does This Warranty Cover? This warranty covers any defects or malfunctions in your new Too Cool Toys Golf Bag.

How Long Does The Coverage Last? This warranty lasts for one year from date of purchase. Coverage terminates if you sell or otherwise transfer the unit.

What Will Too Cool Toys Do? Too Cool Toys will repair or replace any defective or malfunctioning part at no charge. You must pay any shipping charges.

What Does This Warranty Not Cover? Batteries, or any problem that is caused by abuse, misuse, or an act of God (such as a lightning) are not covered. Also, consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How Do You Get Service? In order to be eligible for service under this warranty you must return the warranty registration card within 30 days of purchasing the unit.

If something goes wrong with your unit, contact Too Cool Toys for shipping instructions. You will be asked to describe the problem:

Too Cool Toys, Inc..
 14592 S Twilight Lane
 Olathe, KS 66062
www.toocooltoys.net
 888-891-1171

We will inspect your unit and contact you within 72 hours to give the results of our inspection and an estimate of the time required to fix the unit. You will be responsible for any shipping charges upon receipt of the repaired unit.

If you inform us that you wish us to provide necessary parts to you but you wish to have repairs performed elsewhere, we will send you the replacement parts at no charge and you will not be responsible for shipping.

There is no charge for inspection.

How Does State Law Apply? This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.