



Phantom 300 Spot

ORDERCODE 40170



SHOWELECTRONICS FOR PROFESSIONALS

Congratulations!

You have bought a great, innovative product from Showtec.

The Showtec Phantom brings excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product provides the effect you need.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: iwant@showtec.info

You can get some of the best quality, best priced products on the market from Showtec.

So next time, turn to Showtec for more great lighting equipment.

Always get the best -- with Showtec !

Thank you!



Warning	2
Safety-instructions.....	2
Operating Determinations.....	4
Rigging.....	4
Return Procedure.....	5
Claims.....	5
Description	6
Features and Overview	6
Backside.....	7
Installation	7
Installing the Lamp	7
Set Up and Operation	8
One / Multiple Phantom DMX Control.....	8
DMX-Protocol	9
Fixture Linking.....	9
Data Cabling.....	9
Control Panel.....	10
Control Mode.....	10
MENU OVERVIEW	11
Control panel functions.....	12
DMX addressing.....	12
Motor half-step Functions.....	12
Motor / Adjustment Functions.....	13
DMX Channels.....	14
15 Channels (BASIC)	14
22 Channels (ADVANCED).....	18
Channel settings.....	22
Maintenance	22
Changing the Lamp.....	22
Replacing the Fuse.....	22
Replacing a Gobo from the Gobo-wheel	23
Colorwheel and Static Gobowheel.....	24
Troubleshooting	24
No Light, No Movement - All Products.....	24
No Response to DMX	24
Product Specifications	26

WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- Showtec Phantom 300 Spot with powercon cable 1,25m
- Quick-lock brackets and M8 nuts
- User manual



CAUTION!
Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!



SAFETY INSTRUCTIONS

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



CAUTION! Be careful with your operations.
With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never run the device without lamp!
- Never ignite the lamp if the objective-lens or any housing-cover is open, as discharge lamps may expose and emit a high ultraviolet radiation, which may cause burns.

- Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged. Always hold the fixture at the transport handles.
- Never place any material over the lens.
- Never look directly into the light source.
- Never leave any cables lying around.
- Never unscrew the screws of the rotating gobo, as the ball bearing will otherwise be opened.
- Do not insert objects into air vents.
- Do not connect this device to a dimmerpack.
- Do not switch the device on and off in short intervals, as this would reduce the lamp's life.
- Do not touch the device's housing bare-handed during its operation (housing becomes very hot). Allow the fixture to cool for at least 5 minutes before handling.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only use device indoor, avoid contact with water or other liquids.
- Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always replace the lamp, when it is damaged or deformed due to the heat.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used, before cleaning or when replacing lamp! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- To ensure the longest and most efficient use of the lamp always wait 15 minutes before re-applying power after a shutdown. Failure to do so could result in premature aging of the lamp and failure to the electronics that drive it.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- If the lens is obviously damaged, it has to be replaced. So that its functions are not impaired, due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Movinghead must be installed out of the reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement use lamps and fuses of same type and rating only.
- Replace the lamp if it becomes defective or worn out, or before usage exceeds the maximum service life.
- Allow the fixture to cool down for 15 minutes, before opening the fixture and replacing lamp. Protect your hands and eyes with gloves and safety glasses.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



CAUTION ! EYEDAMAGES !
Avoid looking directly into the light source.
(meant especially for epileptics) !



OPERATING DETERMINATIONS

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light-output and the illuminated surface must be more than 1 meter.
- The maximum ambient temperature $t_a = 45^\circ\text{C}$ must never be exceeded.
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, lamp explosion, crash etc.

You endanger your own safety and the safety of others!

Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

Procedure:

- If the projector is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the projector, with the mounting-bracket, to the trussing system.
- The projector must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the projector, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

The Phantom can be placed on a flat stage floor or mounted to any kind of truss by a clamp.

Mounting a clamp to the underside of the Phantom moving head




Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NUL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!



Return Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail aftersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any short-comings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

Description of the device

Features

The Showtec Phantom 300 Spot is a moving-head with high output and great effects.
Power consumption: 400W

- Colorwheel 1: with 7 vivid colours, white and Rainbow-effect
- Colorwheel 2: with 5 single filter, 2 color correction filters, white and Rainbow-effect
- Gobo-wheel 1: 7 static gobo (with gobo shake), open and Rainbow-effect
- Gobo-wheel 2: 7 rotating gobo (6 metal +1 glass), open and Rainbow-effect
- Effect wheel: 3-face prism (controllable rotating speed, adjustable positive & negative)
- Interchangeable colors
- 8bit / 16bit PAN/TILT movement resolution
- Stylish housing
- Sharp optics
- Automatic Pan/Tilt correction
- Interchangeable Gobosystem
- Gobo Shake Function
- DMX-control via standard DMX-controller
- 3 and 5 pin XLR connectors
- Bright LCD display
- User selectable pan/tilt ranges
- Basic(15CH) or Advanced (22CH) operating modes
- Lamp on/off via DMX
- Electronic Ballast
- Mounting System: Quick-lock brackets and M8 nuts
- Mechanical Dimmer/Shutter/Strobe
- Strobe-effect with adjustable speed (1 - 10 flashes/sec.)
- Pan 0° -- 540°
- Tilt 0° -- 270°
- Lamp GE CSR-300 (ordercode 80933)
- Fuse T7A / 250V

Overview



Fig. 1

1) Lens

Backside

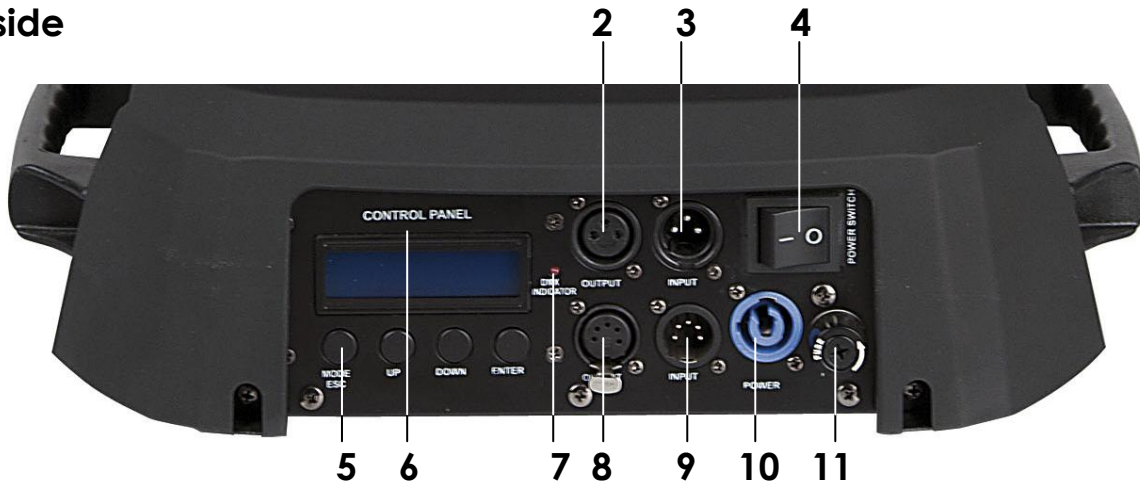


Fig. 2

- 2) DMX signal connector (OUT) 3-pin
- 3) DMX signal connector (IN) 3-pin
- 4) ON/OFF
- 5) Menu Buttons
- 6) LCD Display
- 7) DMX LED
- 8) DMX signal connector (OUT) 5-pin
- 9) DMX signal connector (IN) 5-pin
- 10) Powercable
- 11) Fuse T7A / 250V

Installation

Installing the Lamp

The Showtec Phantom uses the CSR-300 / MSR 300 (ordercode 80933 / 80851) bulb as manufactured by all popular manufacturers. Use only the appropriate lamp for your unit.

Note that, product versions that use other lamps, may be offered in the future. Check your product specification label for information.

Always disconnect from electric mains power supply before changing lamps.

The lamp has to be replaced when it is damaged or deformed due to the heat.

Do not install lamps with a higher wattage! Lamps with a higher wattage generate temperatures the device was not designed for.

Damages caused by non-observance are not subject to warranty.

Procedure :

1. Loosen the 2 screws on the back of the housing.
2. Turn the backside of the lamp counter-clockwise.
3. Gently pull out the lamp. Read lamp instructions. Do not touch the lamp bulb glass. (See Figure 3.)
Oil on hands shortens the lamp life. (If you touch the bulb glass, wipe off the glass with a clean, lint-free towel and rubbing alcohol.).
4. Gently insert the new lamp with its metal pins into the lamp socket and turn the new lamp Clockwise.
5. Put the lamp cover back and fasten the screws snugly.



Fig. 3

Set Up and Operation


Follow the directions below, as they pertain to your preferred operation mode.

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.


One / Multiple Phantom(s) DMX Control

1. Fasten the effect light onto firm trussing (Use a 30-kg rated or stronger C-clamp fastened onto the Phantom). Leave at least 1 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. Use a 3-p or 5-p XLR cable to connect the Phantoms and other devices.

Occupation of the XLR-connection:

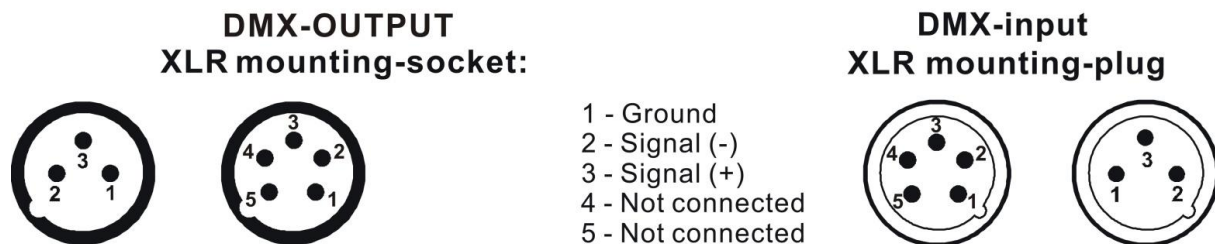

The transformation of the controller line of 3 pins and 5 pins (plug and socket)

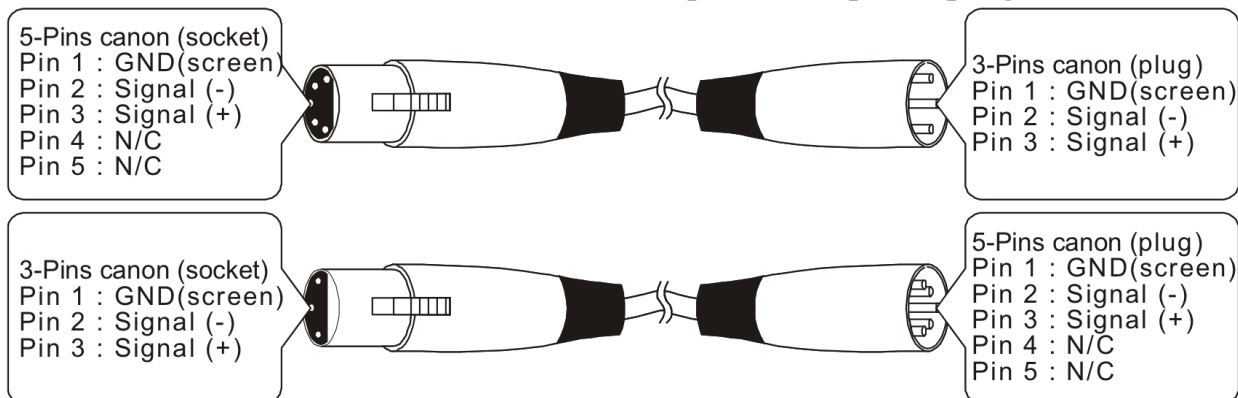

4. Link the units as shown in (figure 4), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
5. Supply electric power: Plug electric mains power cords into each unit's Powercon socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

Multiple Phantoms DMX Set Up



Fig. 4

Note : Link all cables before connecting electric power

Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Important: Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.



Maximum recommended DMX data link distance: 100 meters
Maximum recommended number of Phantoms on a DMX data link: 30 fixtures

Data Cabling

To link fixtures together you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

DAP Audio Certified DMX Data Cables

- DAP Audio Basic microphone cable for allround use. bal. XLR/M 3 p. > XLR/F 3 p.
Ordercode FL01150 (1,5m.), FL013 (3m.), FL016 (6m.), FL0110 (10m.), FL0115 (15m.), FL0120 (20m.).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5m.), FL713 (3m.), FL716 (6m.), FL7110 (10m.).

The Phantom can be operated with a controller in **control mode** or without the controller in **stand-alone mode**.

Control Panel

When the indicator light is on, means the Phantom is working

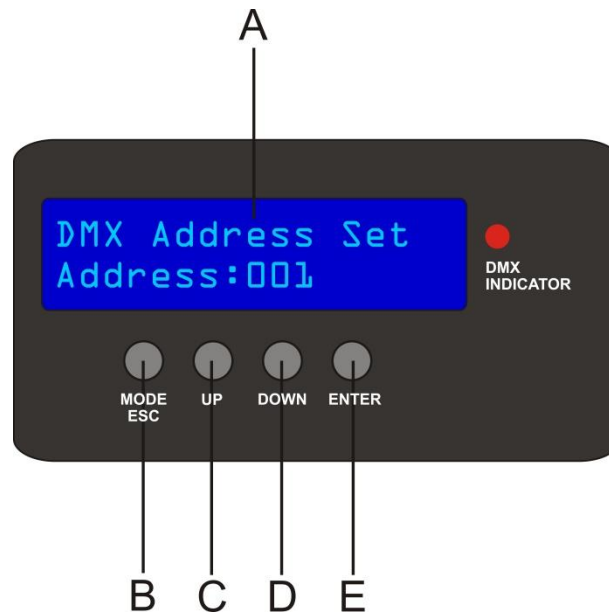


Fig. 5

A. LCD Display
B. MODE button
C. Up Button

D. Down Button
E. ENTER Button

Control Mode

The fixtures are individually addressed on a data-link and connected to the controller. The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address the next time.)

DMX Addressing

The control panel on the front side of the base allows you to assign the DMX fixture address, which is the first channel from which the Phantom will respond to the controller.

Please note when you use the controller, the unit has **22** channels.

When using multiple Phantoms, make sure you set the DMX addresses right.

Therefore, the DMX address of the first Phantom should be **1(001)**; the DMX address of the second Phantom

should be **1+22=23 (023)**; the DMX address of the third Phantom should be **23+22=45 (045)**, etc.

Please, be sure that you don't have any overlapping channels in order to control each Phantom correctly.

If two or more Phantoms are addressed similarly, they will work similarly.

For address settings, please refer to the instructions under "Addressing"

Controlling:

After having addressed all Phantom fixtures, you may now start operating these via your lighting controller.

Note: After switching on, the Phantom will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "LED " on the control panel will not flash.

The problem may be:

- The XLR cable from the controller is not connected with the input of the Phantom.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

Note: It's necessary to insert a XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.

Menu Overview



Control Panel Functions

For synchronous operation of multiple fixtures the fixtures must all be connected on a data-link.

Note: Disconnect the fixtures from the DMX controller before operating, otherwise data collisions can occur and the fixtures will not work properly!

It's necessary to insert the XLR termination plug (with 120 Ohm) into the input of the first fixture and into the output of the last fixture in the data-link, in order to ensure proper transmission on the data link.

DMX Addressing

With this menu you can set the DMX address.

1) Press Mode/Esc, until the display shows

```
1. DMX Address <
2. Pan Set
```

2) Press Enter to confirm, the display will show

```
DMX Address
Set Address:001 <
```

(with actually stored address).

3) You can choose 512 different DMX addresses.

```
DMX Address      DMX Address
Set Address:000 <  Set Address:511 <
```

Use the Up / Down buttons to select the required address from 000 – 511.

Motor half-step Functions

With this you can set the motor half-step.

1) Press Mode/Esc for 10 seconds, until the display shows:

```
Please input
password:
```

2) Enter the Password : **2322**.

3) Press Enter to confirm your choice.

If there is no change or confirmation within 60 seconds, the fixture will automatically exit this function.

```
Strobe1 Half <
Strobe2 Half
```

< ENTER >

```
Strobe1 Half
Select:128
```

No.1 half-step Shutter
Value Modification

```
Strobe2 Half <
Focus Half
```

< ENTER >

```
Strobe2 Half
Select:128
```

No.2 half-step Shutter
Value Modification

```
Frost Half <
Strobe1 Half
```

< ENTER >

```
Frost Half
Select:128
```

Half-step Frost
Value Modification

Motor / Adjustment Functions

1) Press Mode/Esc for 10 seconds, until the display shows:

Please input
password:

2) Enter the Password : **2323**.

3) Press Enter to confirm your choice.

If there is no change or confirmation within 60 seconds, the fixture will automatically exit this function.

Pan Init Tilt Init	<	< ENTER>	Pan Init Select:128	Pan Adjustment Value Modification
Tilt Init Strobe1 Init	<	< ENTER>	Tilt Init Select:128	Tilt Adjustment Value Modification
Strobe1 Init Strobe2 Init	<	< ENTER>	Strobe1 Init Select:128	No.1 Shutter Adjustment Value Modification
Strobe2 Init Color1 Init	<	< ENTER>	Strobe2 Init Select:128	No.2 Shutter Adjustment Value Modification
Color1 Init Color2 Init	<	< ENTER>	Color1 Init Select:128	No.1 Color Adjustment Value Modification
Color2 Init Gobo1 Init	<	< ENTER>	Color2 Init Select:128	No.2 Color Adjustment Value Modification
Gobo1 Init Gobo2 Init	<	< ENTER>	Gobo1 Init Select:128	Static Gobo Adjustment Value Modification
Gobo2 Init Gobo1 Rota Init	<	< ENTER>	Gobo2 Init Select:128	Rotated Gobo Adjustment Value Modification
Gobo1 Rota Init Focus Init	<	< ENTER>	Gobo1 Rota Init Select:128	Gobo Rotation Adjustment Value Modification
Focus Init Iris Init	<	< ENTER>	Focus Init Select:128	Focus Adjustment Value Modification
Iris Init Frost Init	<	< ENTER>	Iris Init Select:128	Iris Adjustment Value Modification
Frost Init Prism Init	<	< ENTER>	Frost Init Select:128	Forst Adjustment Value Modification
Prism Init Pan Init	<	< ENTER>	Prism Init Select:128	Prism Adjustment Value Modification

DMX Protocol 15 Channels (BASIC)

Channel 1 - Horizontal movement (Pan)

Push the slider up, in order to move head horizontally (PAN).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 540° and stopped at any position you wish.

Channel 2 - Vertical movement (Tilt)

Push the slider, up in order to move head vertically (TILT).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 270° and stopped at any position you wish.

Channel 3 – Shutter / Strobe (Dimmer must be open)

0-3	Shutter closed / Blackout
4-7	Shutter open
8-127	Strobe effect, from slow to fast (0-10 flashes/sec.)
128-191	Pulse-effect, in sequences from slow to fast
192-223	Shutter Effect
224-251	Random strobe effect, from slow to fast
252-255	Shutter open

Channel 4 – Dimmer intensity

0-255	From black to brightest
-------	-------------------------

Channel 5 – Colourwheel 1

Linear color change following the movement of the slider. Between 154 - 255, the color-wheel rotates continuously the so-called "Rainbow" effect.

0-8	Open / White
9-17	Blue
18-26	Yellow
27-35	Light Blue
36-44	Green
45-53	Orange
54-62	Peachblow
63-71	UV
72-81	Open / White
82-90	From White to Blue
91-99	From Blue to Yellow
100-108	From Yellow to Light Blue
109-117	From Light blue to Green
118-126	From Green to Orange
127-135	From Orange to Peachblow
136-144	From Peachblow to UV
145-153	From UV to White
154-204	Forwards rainbow effect from fast to slow
205-255	Backwards rainbow effect from fast to slow

Channel 6– Colourwheel 2

Linear color change following the movement of the slider. Between 154 - 255, the color-wheel rotates continuously the so-called "Rainbow" effect.

0-8	Open / White
9-17	Red
18-26	Orange
27-35	Light Green
36-44	Color correction filter 5600 °K
45-53	Color correction filter 3200 °K
54-62	Pink
63-71	Dark Blue
72-81	Open / White
82-90	From White to Red
91-99	From Red to Orange
100-108	From Orange to Light Green
109-117	From Light Green to Color correction filter 5600 °K
118-126	From Color correction filter 5600 °K to Color correction filter 3200 °K
127-135	From Color correction filter 3200 °K to Pink
136-144	From Pink to Dark Blue
145-153	From Dark Blue to White
154-204	Forwards rainbow effect from fast to slow
205-255	Backwards rainbow effect from fast to slow

Channel 7 – Static Gobo-wheel 1 + Gobo Shake

0-7	Open / White
8-15	Gobo 1
16-23	Gobo 2
24-31	Gobo 3
32-39	Gobo 4
40-47	Gobo 5
48-55	Gobo 6
56-63	Gobo 7
64-71	Open / White
72-79	Gobo Shake 1 from slow to fast
80-87	Gobo Shake 2 from slow to fast
88-95	Gobo Shake 3 from slow to fast
96-103	Gobo Shake 4 from slow to fast
104-111	Gobo Shake 5 from slow to fast
112-119	Gobo Shake 6 from slow to fast
120-127	Gobo Shake 7 from slow to fast
128-191	Forwards rainbow effect from slow to fast
192-255	Backwards rainbow effect from fast to slow

Channel 8 – Rotating Gobo-wheel 2 + Gobo Shake

0-7	Open / White
8-15	Glass Gobo 1
16-23	Metal Gobo 1
24-31	Metal Gobo 2
32-39	Metal Gobo 3
40-47	Metal Gobo 4
48-55	Metal Gobo 5
56-63	Metal Gobo 6
64-71	Open / White
72-79	Gobo Shake 1 from slow to fast
80-87	Gobo Shake 2 from slow to fast
88-95	Gobo Shake 3 from slow to fast
96-103	Gobo Shake 4 from slow to fast
104-111	Gobo Shake 5 from slow to fast
112-119	Gobo Shake 6 from slow to fast
120-127	Gobo Shake 7 from slow to fast
128-191	Forwards rainbow effect from slow to fast
192-255	Backwards rainbow effect from fast to slow

Channel 9 – Rotation Gobo

0-95	Gobo-indexing
96-103	90° Gobo Rotation from slow to fast positive + negative
104-111	180° Gobo Rotation from slow to fast positive + negative
112-119	270° Gobo Rotation from slow to fast positive + negative
120-127	360° Gobo Rotation from slow to fast positive + negative
128-191	Forwards rotation from slow to fast
192-255	Backwards rotation from slow to fast

Channel 10 – Focus

0-255	Continuous adjustment from far to near
-------	--

Channel 11 – Iris

0-63	Iris zoom out to zoom in
64-127	Auto Zoom from slow to fast
128-191	Zoom in slowly and zoom out fast
192-255	Zoom in fast and zoom out slow

Channel 12 – Frost

0-7	Open
8-128	Frost Gradual Change
129-169	Frost Macro 1 from slow to fast
170-210	Frost Macro 2 from slow to fast
211-251	Frost Macro 3 from slow to fast
252-255	Frost

Channel 13 – Prism rotating control

0-7	Open
8-71	Static 3-facet Prism Effect
72-135	Static 4-facet Prism Effect
136-199	Static 3D facet Prism Effect
200-255	Prism rotation from slow to fast Positive and negative

Channel 14 – Prism rotating control

0-7	Open / White
8-127	Forwards rotation from slow to fast
128-247	Backwards rotation from slow to fast
248-255	White

Channel 15 – Function

0-151	No function
152-167	Highest Fan Speed
168-183	Auto Adjust fan speed according to temperature
184-199	Lowest Fan Speed
200-215	No Function
216-231	Lamp Off
232-247	Reset
248-255	Lamp On

DMX Protocol 22 Channels (ADVANCED)

Channel 1 - Horizontal movement (Pan)

Push the slider up, in order to move head horizontally (PAN).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 540° and stopped at any position you wish.

Channel 2 - Pan fine 16 bit

Channel 3 - Vertical movement (Tilt)

Push the slider, up in order to move head vertically (TILT).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 270° and stopped at any position you wish.

Channel 4 - Tilt fine 16 bit

Channel 5 –PAN/TILT Speed

0-255	From Max Speed (0) to Min. Speed (255)
-------	--

Channel 6 –PAN/TILT Macro

0-15	No Function
16-45	Pan/Tilt Macro 1 (fast)
46-75	Pan/Tilt Macro 2 (fast)
76-105	Pan/Tilt Macro 3 (fast)
106-135	Pan/Tilt Macro 4 (fast)
136-165	Pan/Tilt Macro 5 (slow)
166-195	Pan/Tilt Macro 6 (slow)
196-225	Pan/Tilt Macro 7 (slow)
226-255	Pan/Tilt Macro 8 (slow)

Channel 7 – Shutter / Strobe (Dimmer must be open)

0-3	Shutter closed / Blackout
4-7	Shutter open
8-127	Strobe effect, from slow to fast (0-10 flashes/sec.)
128-191	Pulse-effect, in sequences from slow to fast
192-223	Shutter Effect
224-251	Random strobe effect, from slow to fast
252-255	Shutter open

Channel 8 – Shutter Macro

0-31	No Function
32-59	Blackout during Pan/Tilt movement
60-87	Blackout during Static Gobowheel movement
88-115	Blackout during Pan/Tilt or Static Gobowheel movement
116-143	Blackout during Colorwheel movement
144-171	Blackout during Pan/Tilt or Colorwheel movement
172-199	Blackout during Static Gobowheel or Colorwheel movement
200-227	Blackout during Prism movement
227-255	Blackout during Pan/Tilt, Static/Rot. Gobowheel, Colorwheel or Prism

Channel 9 – Dimmer intensity

0-255	From black to brightest
-------	-------------------------

Channel 10 – Dimmer Fine

Channel 11 – Colourwheel 1

Linear color change following the movement of the slider. Between 154 - 255, the color-wheel rotates continuously the so-called "Rainbow" effect.

0-8	Open / White
9-17	Blue
18-26	Yellow
27-35	Light Blue
36-44	Green
45-53	Orange
54-62	Peachblow
63-71	UV
72-81	Open / White
82-90	From White to Blue
91-99	From Blue to Yellow
100-108	From Yellow to Light Blue
109-117	From Light blue to Green
118-126	From Green to Orange
127-135	From Orange to Peachblow
136-144	From Peachblow to UV
145-153	From UV to White
154-204	Forwards rainbow effect from fast to slow
205-255	Backwards rainbow effect from fast to slow

Channel 12 – Colourwheel 2

Linear color change following the movement of the slider. Between 154 - 255, the color-wheel rotates continuously the so-called "Rainbow" effect.

0-8	Open / White
9-17	Red
18-26	Orange
27-35	Light Green
36-44	Color correction filer 5600 °K
45-53	Color correction filer 3200 °K
54-62	Pink
63-71	Dark Blue
72-81	Open / White
82-90	From White to Red
91-99	From Red to Orange
100-108	From Orange to Light Green
109-117	From Light Green to Color correction filer 5600 °K
118-126	From Color correction filer 5600 °K to Color correction filer 3200 °K
127-135	From Color correction filer 3200 °K to Pink
136-144	From Pink to Dark Blue
145-153	From Dark Blue to White
154-204	Forwards rainbow effect from fast to slow
205-255	Backwards rainbow effect from fast to slow

Channel 13 – Static Gobo-wheel 1 + Gobo Shake

0-7	Open / White
8-15	Gobo 1
16-23	Gobo 2
24-31	Gobo 3
32-39	Gobo 4
40-47	Gobo 5
48-55	Gobo 6
56-63	Gobo 7
64-71	Open / White
72-79	Gobo Shake 1 from slow to fast
80-87	Gobo Shake 2 from slow to fast
88-95	Gobo Shake 3 from slow to fast
96-103	Gobo Shake 4 from slow to fast
104-111	Gobo Shake 5 from slow to fast
112-119	Gobo Shake 6 from slow to fast
120-127	Gobo Shake 7 from slow to fast
128-191	Forwards rainbow effect from slow to fast
192-255	Backwards rainbow effect from fast to slow

Channel 14 – Rotating Gobo-wheel 2 + Gobo Shake

0-7	Open / White
8-15	Glass Gobo 1
16-23	Metal Gobo 1
24-31	Metal Gobo 2
32-39	Metal Gobo 3
40-47	Metal Gobo 4
48-55	Metal Gobo 5
56-63	Metal Gobo 6
64-71	Open / White
72-79	Gobo Shake 1 from slow to fast
80-87	Gobo Shake 2 from slow to fast
88-95	Gobo Shake 3 from slow to fast
96-103	Gobo Shake 4 from slow to fast
104-111	Gobo Shake 5 from slow to fast
112-119	Gobo Shake 6 from slow to fast
120-127	Gobo Shake 7 from slow to fast
128-191	Forwards rainbow effect from slow to fast
192-255	Backwards rainbow effect from fast to slow

Channel 15 – Rotation Gobo

0-95	Gobo-indexing
96-103	90° Gobo Rotation from slow to fast positive + negative
104-111	180° Gobo Rotation from slow to fast positive + negative
112-119	270° Gobo Rotation from slow to fast positive + negative
120-127	360° Gobo Rotation from slow to fast positive + negative
128-191	Forwards rotation from slow to fast
192-255	Backwards rotation from slow to fast

Channel 16 – Rotation Gobo Fine

Channel 17 – Focus

0-255	Continuous adjustment from far to near
-------	--

Channel 18 – Iris

0-63	Iris zoom out to zoom in
64-127	Auto Zoom from slow to fast
128-191	Zoom in slowly and zoom out fast
192-255	Zoom in fast and zoom out slow

Channel 19 – Frost

0-7	Open
8-128	Frost Gradual Change
129-169	Frost Macro 1 from slow to fast
170-210	Frost Macro 2 from slow to fast
211-251	Frost Macro 3 from slow to fast
252-255	Frost

Channel 20 – Prism rotating control

0-7	Open
8-71	Static 3-facet Prism Effect
72-135	Static 4-facet Prism Effect
136-199	Static 3D facet Prism Effect
200-255	Prism rotation from slow to fast Positive and negative

Channel 21 – Prism rotating control

0-7	Open / White
8-127	Forwards rotation from slow to fast
128-247	Backwards rotation from slow to fast
248-255	White

Channel 22 – Function

0-151	No function
152-167	Highest Fan Speed
168-183	Auto Adjust fan speed according to temperature
184-199	Lowest Fan Speed
200-215	No Function
216-231	Lamp Off
232-247	Reset
248-255	Lamp On

Channel settings

40170 Phantom 300 Spot Fixture-settings																						
Channel Function	1 Pan	2 Pan-Fine	3 Tilt	4 Tilt-Fine	5 Pan/Tilt Speed	6 Pan/Tilt Macro	7 Shutter Strobe	8 Shutter Macro	9 Dimmer	10 Dimmer Fine	11 Colorwheel	12 Colorwheel	13 Static Gobowheel	14 Rotating Gobowheel	15 Gobo Rotation	16 Gobo Rotation Fine	17 Focus	18 Iris	19 Frost	20 Prism	21 Prism Rotation	22 Lamp on/off & reset
255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255	255
128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fig. 6

Maintenance

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every year in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

1. All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
2. There may not be any deformations on housings, fixations and installation spots.
3. Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
4. The electric power supply cables must not show any damages or material fatigue.

The Showtec Phantom requires almost no maintenance. However, you should keep the unit clean.

Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents.

The front lens will require weekly cleaning, as smoke-fluid tends to build up residues, reducing the light-output very quickly.

The cooling-fans, colour-filters, the gobowheel, the gobos and the internal lenses should be cleaned monthly with a soft brush.

Please clean internal components once a year with a light brush and vacuum cleaner.

Keep connections clean. Disconnect electric power, and then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Changing the Lamp

1. Disconnect mains power supply. Loosen the 2 screws on the back of the housing
2. Follow directions for installing a new lamp, page 7.

Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

1. Unplug the unit from electric power source.
2. Insert a flat-head screwdriver into a slot in the fuse cover. Turn the screwdriver to the left, at the same time gently push a bit (Turn and Push). The fuse will come out.
3. Remove the used fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Replacing a Gobo

Gobo-wheel with rotating gobo's

1. Disconnect mains power supply and set the switch to OFF.
2. Make sure that the gobo you want to insert has the same size. For the right size, see below.

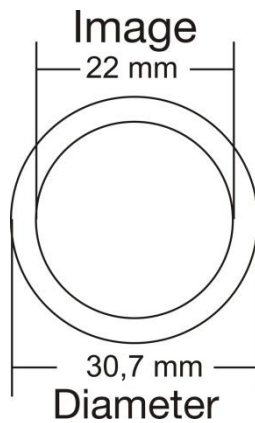


Fig. 7

3. Loosen the 4 screws on top of the housing. Remove the maintenance cap.
4. Turn the gobo wheel, with the gobo you want to remove, to the upside.
5. Gently lift up the gobo 10° and then gently pull out the gobo from its position.
6. Gently place the new gobo in its position with a pressing snap and push it back.
7. Replace the maintenance cap and fasten all screws.

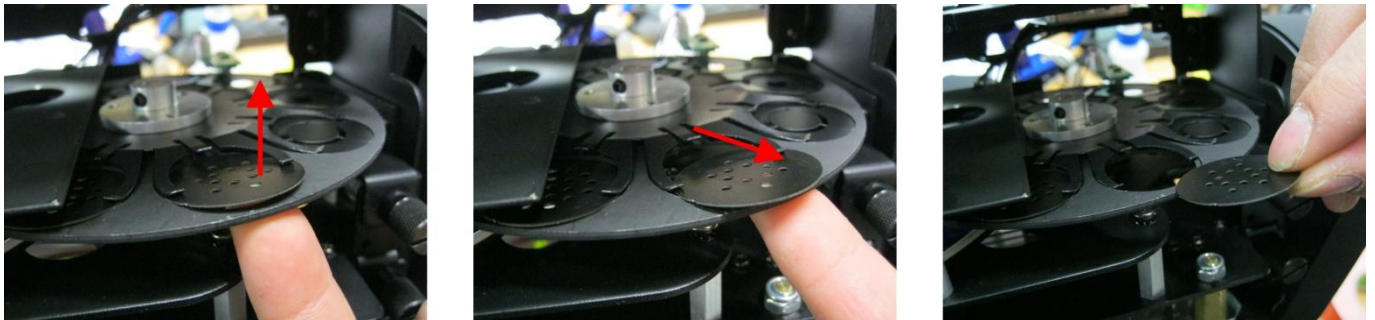


Fig. 8


Static Gobo-wheel 1



Rotating Gobo-wheel 2



Color-wheel 1

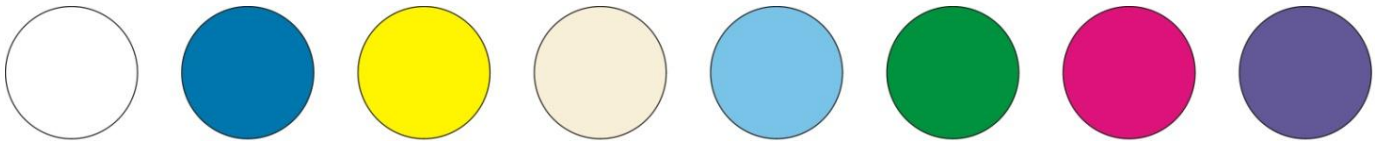

Color-wheel 2

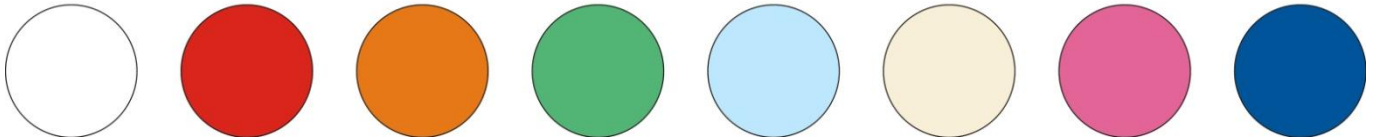


Fig. 9

Troubleshooting

No Light, No Movement - All Products

This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect three potential problem areas: the power supply, the lamp, the fuse.

1. Power supply. Check that the unit is plugged into an appropriate power supply.
2. The lamp. Replace the old lamp with a new one with the same specifications. See page 7 for replacing lamps.
3. The fuse. Replace the fuse. See page 22 for replacing the fuse.

No Response to DMX

Response: Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

1. Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
2. Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

See next page for more problem solving.

Problem	Probable cause(s)	Remedy
One or more fixtures are completely dead.	No power to the fixture	· Check that power is switched on and cables are plugged in.
	Primary fuse blown.	· Replace fuse.
Fixtures reset correctly, but all respond erratically or not at all to the controller.	The controller is not connected.	· Connect controller.
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed).	· Install a phase reversing cable between the controller and the first fixture on the link.
Fixtures reset correctly, but some respond erratically or not at all to the controller.	Poor data quality	· Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link.
	Bad data link connection	· Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	Data link not terminated with 120 Ohm termination plug.	· Insert termination plug in output jack of the last fixture on the link.
	Incorrect addressing of the fixtures.	· Check address setting.
	One of the fixtures is defective and disturbs data transmission on the link.	· Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together. · Have the defective fixture serviced by a qualified technician.
	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed).	· Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.
Shutter closes suddenly	The color wheel, gobo wheel, or a gobo has lost its index position and the fixture is resetting the effect.	· Contact a technician for servicing if the problem persists.
No light	The power supply settings do not match local AC voltage and frequency.	· Disconnect fixture. Check settings and correct if necessary.
	Lamp missing or blown	· Disconnect fixture and replace lamp.
Lamp cuts out intermittently.	Fixture is too hot.	· Allow fixture to cool. · Clean fan. · Make sure air vents at control panel and front lens are not blocked. · Turn up the air conditioning.
	The power supply settings do not match local AC voltage and frequency.	· Disconnect fixture. Check settings and correct if necessary.

Product Specification

Model: Showtec Phantom 300 Spot

Voltage: 240V-50Hz (CE)

Fuse: 6A / 250V

Dimensions: 410x357x660mm (LxWxH)

Weight: 26,12 kg

Operation and Programming

Signal pin OUT: pin 1 earth, pin 2 (-), pin 3 (+)

Set Up and Addressing: LED control panel

DMX Channels: 15 or 22

Signal input 3-pin + 5-pin XLR male

Signal output 3-pin + 5-pin XLR female

Lamp

Allowed lamp models*:

GE CSR-300 TAL/2 (7800k, 750hr) ordercode 80933

Philips MSR Gold 300/2 mini fast fit (8000K, 750h) ordercode 80851

Control: Automatic and DMX remote ON / OFF

Electro-mechanical effects

Automatic Pan/Tilt correction

Colorwheel 1: with 7 vivid colours, white and Rainbow-effect

Colorwheel 2: with 5 single filter, 2 color correction filters, white and Rainbow-effect

Gobo-wheel 1: 7 static gobo (with gobo shake), open and Rainbow-effect

Gobo-wheel 2: 7 rotating gobo (6 metal + 1 glass), open and Rainbow-effect

Effect wheel: 3-face prism (controllable rotating speed,
adjustable positive & negative)

Interchangeable Gobosystem

Gobo Shake Function

Bright LCD display

User selectable pan/tilt ranges

Lamp on/off via DMX

Mechanical Dimmer/Shutter/Strobe

Strobe-effect with adjustable speed (1 - 10 flashes/sec.)

Pan 0° -- 540°

Tilt 0° -- 270°

Gobos

Colourwheel: heat-resistant and intensify glass; dichroic glass coating

Max. ambient temperature t_a : 40°C; Max. housing temperature t_b : 80°C

Cooling: 5 axial fans - 4 fans in the projector and 1 in the base

1x Base-Fan : 80x80x25 12VDC 0.30A,

2x Fans : 80x80x25 12VDC 0.17A

2x Fans : 60x60x10 12VDC 0.17A

Motor: high quality stepping-motor controlled by microprocessors

Minimum distance:

Minimum distance from flammable surfaces: 0.5m

Minimum distance to lighted object: 1.3m

*: Versions for other lamps may be produced. Please check the specification label on your product.

Design and product specifications are subject to change without prior notice.



Website: www.Showtec.info

Email: service@highlite.nl





© 2011 Showtec.