

Flashlight User Manual

I. Product's picture



1 Bright LED Light 2 Low LED Light 3

 
Charging Jack 4 Screen 5 Keys 6 LED ON/OFF 7 Horn


II. Technical parameter:


Size	222MM*60MM*60MM
Weight	Net weight: 490G
Light source	3*CREE Q5 LED
Music format	MP3 WMA
Power	Lithium battery: 5000MAh
Housing material	Aluminum alloy housing
Finish	hard anodizing
Charge voltage	DC5V
Play duration	Play hours: 50 hours; lighting hours: over 6 hours
Characteristics	1)long-distance lighting; 2)non-slip, waterproof structure; 3) overcharge protection is free from over discharge,

	overcharge damaging your flashlight; 4) built-in 50MM Hi-fi tweeter; 5) large battery volume, without positive and negative, free from the wrong way round.
--	---

III. Keys Operation:

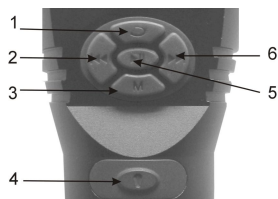


 
1. Repeat mode key : Three different repeat modes: single repeat, all repeat and random repeat, each single press switches the repeat mode, 1- single repeat, A- all repeat, R - random repeat.

2. Press  to play previous song or decrease the volume : short press to play previous song,

long press to fast backward at the PLAY mode; short press to decrease one level volume, long press to fast decrease volume at the volume adjust mode.

 
3. Operation mode switch **M**, default MP3 operation mode: short press **M** to switch to volume operation mode, speaker icon flashing indicates adjustable volume, short press once again back to MP3 operation mode.

4. LED Light ON/OFF , four different statuses: when off, single short press to turn on right LED light, short press once again to turn off bright LED light and turn on red low LED light; Short press once again, low red LED light sends out SOS flashing signal; Short press once again, LED power off; Keep pressing this key to repeat the above status.

5. ON/OFF and PLAY/PAUSE button  : Long press to turn on at the status of OFF; Short press to play, short press once again to pause; Long press to turn off at the status of ON.。

6. Press ►► to play next song or increase the volume: short press to play next song, long press to fast forward at PLAY mode; short press to increase one level volume, long press to fast increase volume at the volume adjust mode.

IV. Screen:

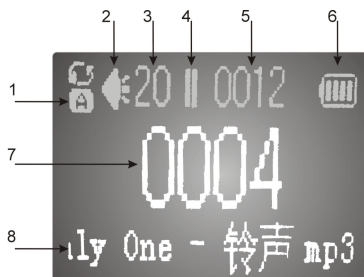

1. Repeat mode: 1-single repeat; A-all repeat; R-Random play
2. Volume control indicator : flashing icon indicates adjustable volume.
3. Volume level: default volume is 20 level, volume range is 0-30 level.
4. PLAY/PAUSE indicator: Current PAUSE indicator.

5. Total number of songs on TF card

6. Battery Level Indicator

7. Song Number

8. Current playing song name: scrolling display the song name.

V. Introduction of Operation:

1. Turn on:

Turn the flashlight body counterclockwise to find the TF card socket, insert TF card and install battery (battery without positive and negative), then fasten the flashlight body clockwise. Long press PLAY/PAUSE button to turn on the machine, press PLAY/PAUSE to play songs.

(Display shows “card out” if without inserting TF card, long press PLAY/PAUSE button to turn off the machine.)

2. Turn off:

Long press PLAY/PAUSE button to turn off the machine at the status of POWER on.

The machine turns off by itself without operation for 3 minutes after pressing PAUSE button at the status of playing.

3. LED Light Switch:

Each single press switches the status of LED light followed in following succession when the machine is off. First bright Led light is red, then LED light is red, finally LED light turns off after sending out SOS signal. Repeat this mode.

4. Charging the battery

The display shows the power level of battery when the power becomes low. Recharge your battery immediately. Plug the charger into DC outlet at the back side of the flashlight, the indicator light of charger is red when charging and turns green when the battery is fully charged.

VI. Operational Cautions:

Thank you for your choice of HG-701 flashlight. To ensure that your flashlight can be used for a longer time, please pay attention to the following notes before using.

1. Do not directly expose the bright light to eyesight, bright light can do damage to eyesight, especially children

2. Do not disassembly the light socket to avoid the damage of the accessories and mirror.

3. Do not place the lithium battery in fire, lithium battery is recyclable. Please properly handle the disused battery in accordance with the relevant regulations.

4. The self-discharge rate of lithium battery is about 1% or less when not in use. Please fully charge the battery for long storage, normally, charge and discharge the battery every three months.

5. Guard against water, damp, drop, etc.

VII. Terms of Warranty Policy:

1. The warranty is for one year (Damage due to the defect of product itself).

2. Damage due to operator's misuse, physical damage to surface of the housing are not covered by this warranty policy.

3. Damage due to the unauthorized disassembly is not covered by this warranty policy.