

Troubleshooting

If the unit doesn't operate...	Check that the batteries are installed correctly or install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the unit malfunctions...	Install new batteries.

Important Information

Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.
- Do not insert any other cards other than the ones supplied with the Picture Perfect, and do not try to insert anything else (paper, etc) into the Picture Perfect.

This product complies with the essential requirements of European directives 88/378/EEC, directives 89/336/EEC, 92/31/EC, 93/68/EEC, 2004/108/EC, 2002/96/EC and 2003/108/EC, 2002/95/EC

InspirationWorks UK Ltd

Prudence Place
Proctor Way
LUTON
Bedfordshire
LU2 9PE
UK



www.inspirationworks.co.uk

© 2010 CIDE Toys

©Disney
Visit the Disney website at www.DisneyPrincess.com

Warranty:

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

V00
May 2010
Printed in China
Made in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE




Picture Perfect

A magical picture frame

4+

Instruction manual

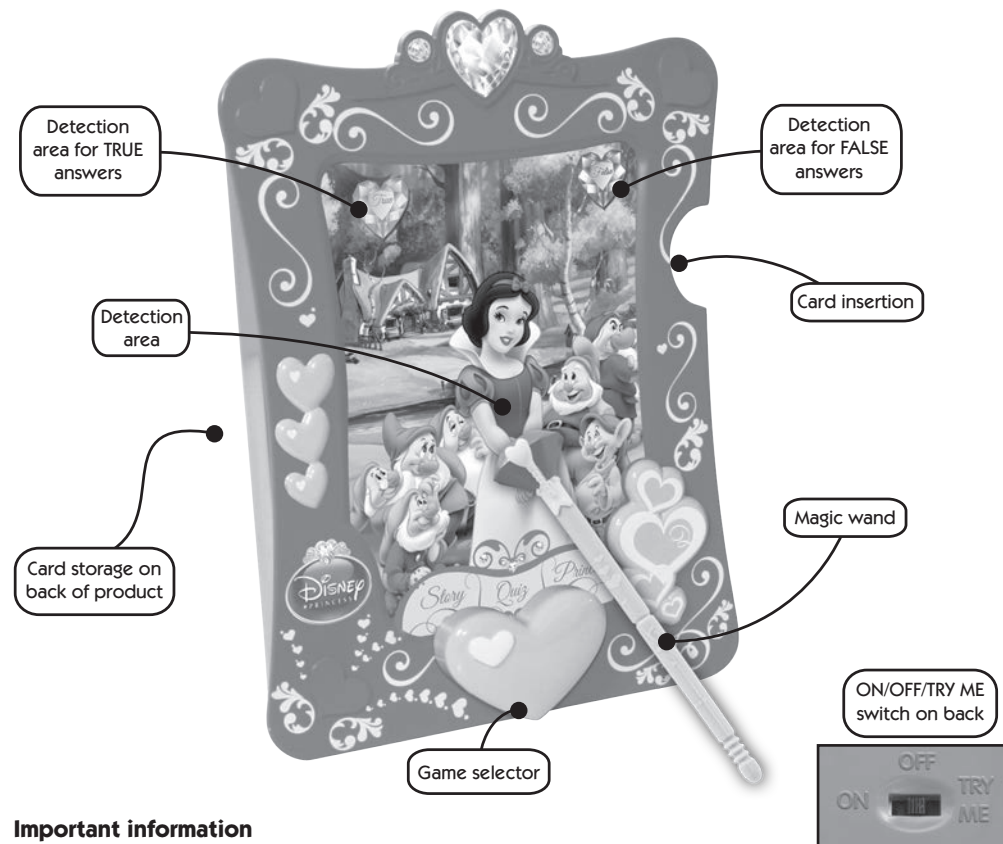

Important information

- This toy is suitable for children aged 4 years & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.
- Not suitable for children under 36 months. Presence of small parts which can be swallowed.
- We advise customers to keep magnets away from magnetic media e.g. computer floppy discs, cassette tapes, credit cards, television etc...

S1097

inspiration works

Content

- Picture Perfect.
- 2 double sided cards.
- Magic wand.

How to play

To start playing with Picture Perfect, please ensure that the switch on the back of the unit is in the ON position.



Move the game selector to select one of 3 games
To play the games, simply use your magic wand
By waving your magic wand in front of the picture (in front of the 3 detection areas) it will react.
No need to touch the picture, just wave your magic wand! It's magical!

Game 1 – Story

Select one of the Disney Princess pictures and insert it into your Picture Perfect
Wave your magic wand in front of the picture and listen to the story, it's magical!

Game 2 – Quiz

Test your knowledge on the Princess stories and play this quiz game!
Insert a Disney Princess picture into your Picture Perfect.
Listen to the part of the story, and guess if it is true or false.
You think it is true? Then wave your magic wand in front of the green heart
You think it is false? Then wave your magic wand in front of the red heart.

Game 3 – Princess

Insert any Disney Princess card and wave your magic wand in front of the picture to listen to cute Princess sentences.




Personalise a card with your own picture and join the Disney Princesses.

Stick your photo onto the card and when you wave the magic wand in front of it, Picture Perfect will tell you how beautiful a Princess you are.

How to change batteries

1. This product requires 3 x AA-LR6-AM3 batteries.
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 3 x AA-LR6-AM3 batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not over tighten.

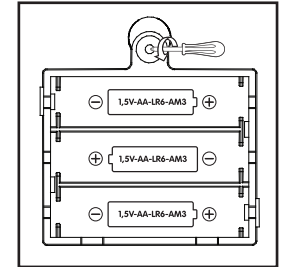

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
 - Rechargeable batteries shall be charged only under the supervision of an adult.
 - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.