

 
PRODUCT MODEL NUMBERS

ET1CHKXX	ET8MTEXK
ET1CHMXK	ET8RHMXX
ET1FTEXL	ET8WTEXK
ET1FTKXX	ET8WTKXX
ET1FTTXK	ET8WTMXX
ET1LFKXX	ET9CHKXX
ET1MTEXL	ET9FTKXX
ET1MTKXX	ET9FTTXL
ET1RHMXX	ET9LFKXX
ET1WTKXX	GR9SHKXX
ET8CHKXX	GT1SHTXL
ET8CHMXK	GT2SHKXL
ET8FTEXK	GT2SHKXM
ET8FTKXX	GT2SHMXX
ET8LFKXX	GT9SHKXX

Electrical: A 115 Volt, 60 Hz., AC only 15 or 20 ampere fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


Water: Connect the ice maker to a cold water line with water pressure between 30 and 120 psi.

OVERALL DIMENSIONS

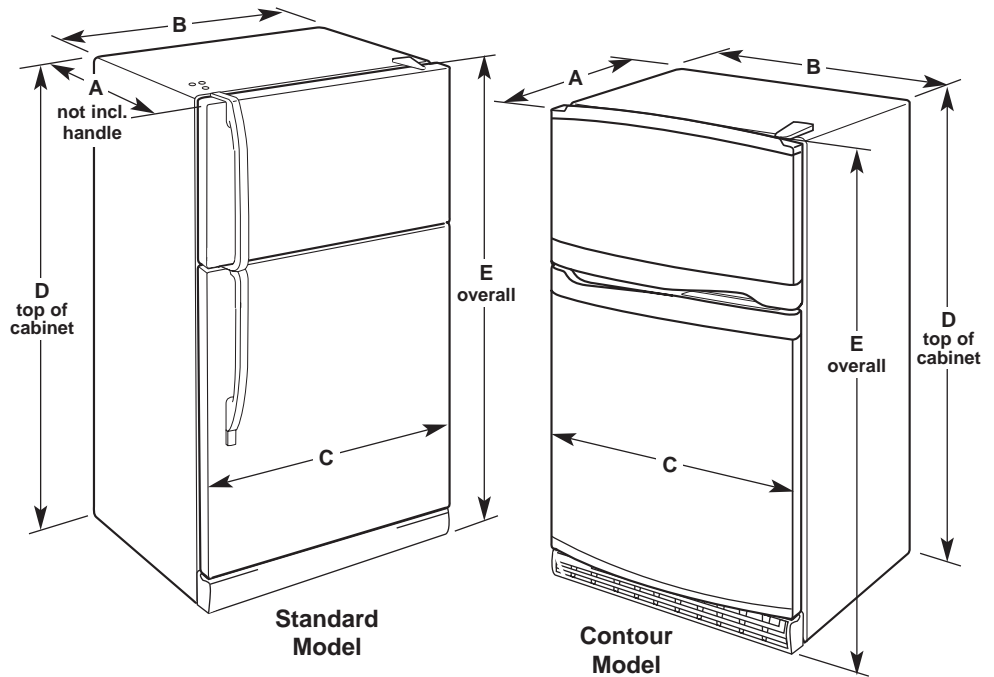

Model size	Depth "A"	Cab. Width "B"	Door Width "C"	Cab. Height "D"	Overall Height "E"
STANDARD MODELS					
18 cu.ft.	29 3/8"	29 1/2"	29 3/4"	65 1/2"	66 1/4"
19 cu.ft.	30 3/4"	29 1/2"	29 3/4"	65 1/2"	66 1/4"
21 cu.ft.	29 3/8"	32 1/2"	32 3/4"	65 1/2"	66 1/4"
22 cu.ft.	30 3/4"	32 1/2"	32 3/4"	65 1/2"	66 1/4"
CONTOUR MODELS					
19 cu.ft.	31 1/2"	29 1/2"	30 1/8"	65 1/2"	66 1/2"

 LOCATION REQUIREMENTS

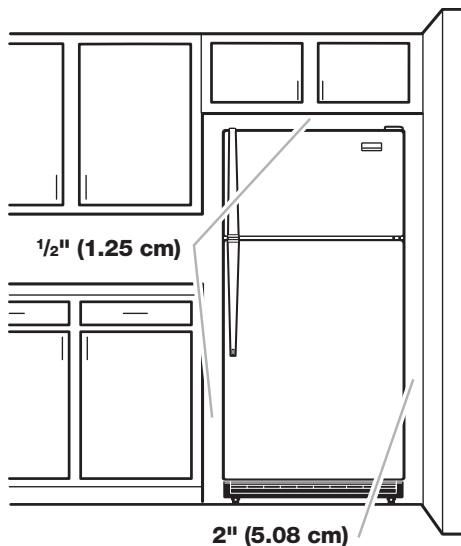

To ensure proper ventilation for your refrigerator, allow for 1/2 in. (1.25 cm) space on each side and at the top. (At the top, when using half depth cabinet, use top of cabinet height "D" dimension. When using full depth cabinet, use overall "E" dimension.) When installing your refrigerator next to a fixed wall, leave 2 in. (5.08 cm) minimum on each side (depending on your model) to allow for the door to swing open. If your refrigerator has an ice maker, allow extra space at the back for the water line connections.

NOTE: Do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 55°F (13°C).