

Instructions to printer
DO NOT PRINT THIS PAGE

This document is intended to be printed in **color** as a 5.9 × 5.9 inch (150 mm square) booklet with saddle-stitched (stapled) binding.
Use high-quality, glossy 20 lb (75 g/m²) paper.

GE
Intelligent Platforms

Programmable Control Products

PACSystems* RX3i
Genius* Communications Gateway, IC695GCG001

Quick Start Guide, GFK-2891A
April 2014



Contents


1. User Features	1
1.1. Ethernet Ports	1
1.2. Genius Serial Bus Connectors	2
1.3. Power Connector	3
1.4. Rear of Module Features	3
1.5. Light-Emitting Diode Indicators (LEDs).....	4
2. Hardware Installation.....	6
2.1. Initial Checks	6
2.2. Installation Location	6
2.3. Installation in Hazardous Areas.....	7
2.4. Module Installation	8
3. Configuration	10
3.1. You Will Need:	10
3.2. Basic Configuration Steps	10
4. Additional Information	13

1. User Features

The RX3i Genius Communications Gateway, IC695GCG001, or **GCG001**, interfaces Genius IO devices on a Simplex Genius serial bus to a GE Intelligent Platforms PROFINET IO Controller†. The GCG001 operates as a Genius Bus Controller on a Genius network. It scans the Genius IO devices configured to it, retrieving input data and providing output data, and exchanges that data with its configured PROFINET IO Controller over its Ethernet interfaces at the configured production rate. If the Ethernet network or Genius serial bus communications are lost, the GCG001 manages IO states according to the individual module configurations. The GCG001 can manage communications for up to 31 Genius IO devices on a single Genius Serial Bus.

1.1. Ethernet Ports

The GCG001 provides two RJ-45 Ethernet ports for connection to a GE PROFINET controller. Although the hardware supports the 10/100BASE TX Ethernet standard, PROFINET IO over wired infrastructure must be 100Mbps full-duplex or faster. 10Mbps should not be used

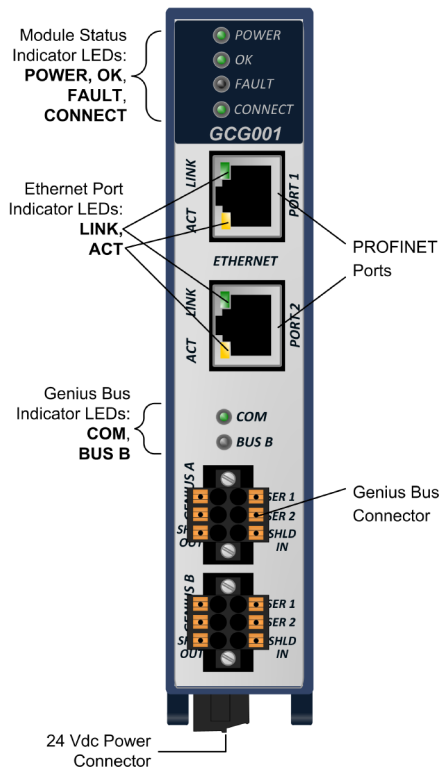


† No other PROFINET controllers are supported.

for PROFINET. Each port automatically detects the attached cable and functions properly with either straight-through or crossover cables.


Each port on the GCG001 operates independently through an embedded Ethernet switch. The switch permits the network to be daisy-chained through the GCG001 to other IO devices.

1.2. Genius Serial Bus Connectors

The GCG module is equipped with one active six-terminal Genius Serial Bus connector (GENIUS A). Two terminals each are provided on a removable terminal block connector for Serial 1, Serial 2, and Shield connections. When the bus is terminated at the GCG001, a bus termination resistor should connect Serial 1 to Serial 2, with SHLD IN unterminated.

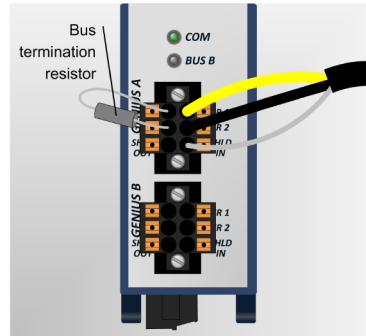


When the GCG001 is not at the end of the bus, the two sets of terminals accommodate two bus cables as shown at right. The Genius bus will continue to operate even in the absence of power to the GCG001.

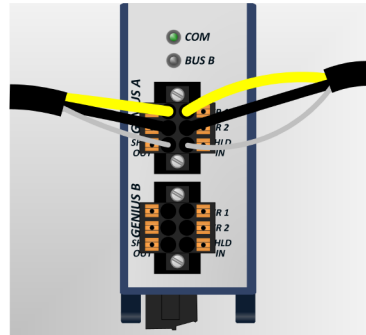


1.3. Power Connector

The module requires a user-supplied 24 Vdc ($\pm 10\%$) power source wired to a removable screw-terminal block located on the bottom of the module. The module draws 0.2 A maximum current.

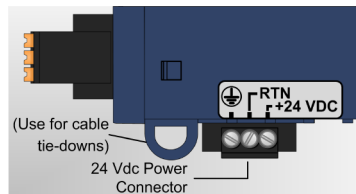

1.4. Rear of Module Features

Two seldom-needed features are accessed from the rear of the module: an SD card slot and a firmware load pushbutton. These are described in the following paragraphs.

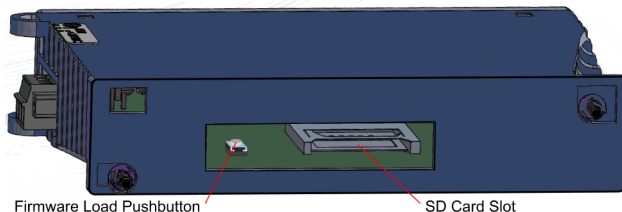

Secure Digital (SD) Card Slot

The SD card slot is designed to support a Secure Digital (SD) non-volatile memory card in standard capacity format. This optional card has two distinct uses: (1) backup storage of some key PROFINET configuration data and (2) loading new module firmware.

Backup Storage

For use as configuration back-up storage, a small SD card is inserted and left in place. The module will detect the card automatically store on it a small amount of configuration data. If the GCG001 must be replaced in the event of a failure, remove the SD card from the failed unit and install it in the replacement prior to mounting. All PROFINET configuration data will then be transferred to the replacement module.

Note: SD cards larger than 2 GB are not supported for use with with the GCG001. SDHC and SDXC formats are **not** supported.

PACSystems* RX3i Genius* Communications Gateway

Firmware Load Pushbutton



The Firmware Load Pushbutton is used to initiate loading of module firmware from the SD card as described in the next section.

Loading New Firmware





To load new GCG001 firmware, the SD card must be moved to a computer. Copy the firmware image to the card, then re-insert the card into the unpowered GCG001's SD slot. Next, while holding down the Firmware Load Pushbutton, apply power to the module. Continue holding the pushbutton until the **OK** LED turns amber, then release the pushbutton. When the **OK** LED turns green, the firmware is loaded. Finally, cycle power on the module and wait for the **OK** LED to turn green and steady.

1.5. Light-Emitting Diode Indicators (LEDs)



POWER – indicates the presence of power to the module.

	Green, ON steady	Power supply is good.
	OFF	Power supply is off or not good.




OK – indicates module readiness to perform normal operations.

	Green, ON steady	Module able to perform normal operations.
	Green/Amber, blinking	Module loading main operating system
	Amber, ON steady	Module loading bootloader operating system
	OFF	Module has an unrecoverable fault or power is not applied.



FAULT – indicates the detection of faults by the module.

	OFF	No faults present.
	Red, ON	A fault or other PROFINET diagnostic data exists on the Gateway



CONNECT – indicates a connection to a PROFINET controller.

 OFF	One or more connections with GE Intelligent Platforms PROFINET Controllers have been established to this device.
 Red, blinking	Device trying to connect to a controller. Continuous if device has not been assigned a valid station name.
 Red, ON	No PROFINET Controller connection

 


PORT 1, PORT 2 LINK – indicates connection status on Ethernet ports.

 Green, ON steady	Ethernet connection established
 OFF	No Ethernet connection



 PORT 1, PORT 2 ACT – indicates activity on PROFINET ports.

 Amber, blinking	Communications occurring on port
 OFF	No communication

COM – indicates the status of Genius Bus communications.

 Green, ON steady	The Genius Bus is configured and operating properly.
 Green, blinking	A Genius Bus error has been detected.
 OFF	The Genius Bus has failed or no Genius Bus configuration has been received.

BUS B – indicates activity on the Genius B port.

 Green, blinking	Genius B port activity (not expected)
 OFF	No Genius B port activity

2. Hardware Installation

2.1. Initial Checks

Upon receiving your RX3i equipment, carefully inspect all shipping containers for damage. If any part of the system is damaged, notify the carrier immediately. The damaged shipping container should be saved as evidence for inspection by the carrier.

As the consignee, it is your responsibility to register a claim with the carrier for damage incurred during shipment. GE Intelligent Platforms will fully cooperate with you, however, should such action be necessary.

After unpacking the RX3i equipment, record all serial numbers. Serial numbers are required if you should need to contact Customer Care during the warranty period. All shipping containers and all packing material should be saved should it be necessary to transport or ship any part of the system.

Verify that all components of the system have been received and that they agree with your order. If the system received does not agree with your order, contact Customer Care.

2.2. Installation Location

This product is intended for use with the RX3i system. Its components are considered open equipment (having live electrical parts that may be accessible to users) and must be installed in an ultimate enclosure that is manufactured to provide safety. As a minimum, the enclosure shall provide a degree of protection against solid objects as small as 12mm (e.g. fingers). This equates to a NEMA/UL Type 1 enclosure or an IEC60529 IP20 rating providing at least a pollution degree 2 environment. For details about installing RX3i rack systems, refer to GFK-2314.

If you need technical help, contact Technical Support. For phone numbers and email addresses, see the back cover of this Guide.

2.3. Installation in Hazardous Areas

The following information is for products bearing the UL marking for Hazardous Areas or ATEX marking for explosive atmospheres:

CLASS 1 DIVISION 2 GROUPS ABCD

- This equipment is an open-type device and is meant to be installed in an enclosure suitable for the environment that is only accessible with the use of a tool.
- Suitable for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations, or nonhazardous locations only.



Warning – EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.



Warning – WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND



Warning – DO NOT CONNECT OR DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.



Warning – EXPLOSION HAZARD - USB PORT IS ONLY FOR USE IN NONHAZARDOUS LOCATIONS, DO NOT USE UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

ATEX Zone 2

The GCG001 must be mounted in an enclosure certified in accordance with EN60079-15 for use in Zone 2, Group IIC and rated IP54. The enclosure shall only be able to be opened with the use of a tool.

2.4. Module Installation

The GCG001 is designed to mount over the expansion slot of an RX3i Universal Backplane. It may alternately be mounted directly on a panel. In both cases, at least 75 mm (3 in.) must remain clear above and below the module to allow for convection cooling.

Backplane Mounting

The two captive M3 screws at the rear of the GCG001 align with mating tapped holes on the right side of the Universal Backplane (above and below the expansion connector), providing a convenient mounting location.

Note: External power must be supplied to the module—it does not draw power from the RX3i Universal Backplane.



Panel Mounting

For applications requiring more than one GCG001 or when locating the module away from a backplane, panel-mounting is also possible. The GCG001's two captive machine screws can be used for attaching the unit to a panel.


Note: The panel must have a minimum thickness of 2.4mm (0.094in). Leave a minimum of 75 mm (3 in.) open above and below the module to allow for ventilation and connector access.

1. Drill two mounting holes using the spacing shown in the following drawing and tap M3 (3 × 0.5 mm).
2. Align the module's two mounting screws with the mounting holes in the panel.
3. Using a Philips screwdriver, tighten the two screws to a maximum torque of 0.5 Nm (4.4 in/lbs).

Grounding

The GCG001 module provides a grounding connection on the power plug. The panel in which the GCG001 module or RX3i Universal Backplane is mounted to must have a safety ground connection to protective earth. This ground wire must be at least 1.5 mm² (16 AWG).

- Connect the frame ground connection on the power plug to protective earth.
- Terminate all ground wires at the same grounding point.
- Make all ground wires as short as possible.

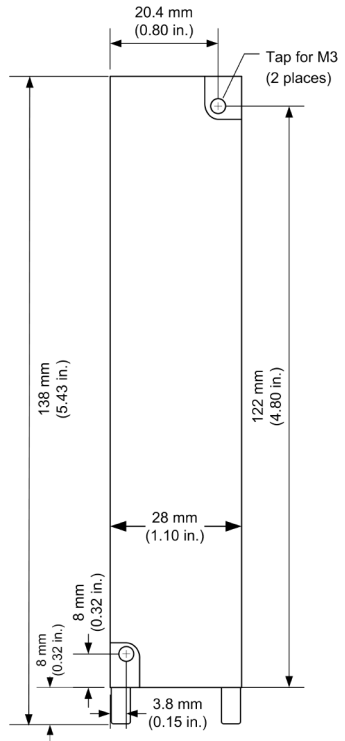

- Where the grounding terminal contacts a painted enclosure panel, scrape the paint away down to clean, bare metal to ensure a good contact.

3. Configuration

3.1. You Will Need:

- PACSystems RX3i CPU Firmware 8.00 or later.
- Proficy Machine Edition configuration and programming software, version 8.0 or later.
- Serial or Ethernet cable for connecting the Proficy Machine Edition programmer computer to the RX3i CPU.
- General Station Description Markup Language (GSDML) file for the GCG001, available from GE Intelligent Platforms support website, <http://www.ge-ip.com/support>.
- *PACSystems RX3i Genius Communications Gateway Module User Manual*, GFK-2892, also available from the support website. You will need to refer to this manual to fully configure and commission the GCG001.


3.2. Basic Configuration Steps

The full configuration of the GCG001 is beyond the scope of this Guide, but is covered in detail in the User Manual, GFK-2892, referenced in section 4. In brief, the steps are the following:

1. If you haven't already done so, use Machine Edition to add a PROFINET IO-Controller (IC695PNC001, or PNC001) to the Target's Hardware Configuration.
2. Select the PNC001 in the **Navigator** window, then browse the module and the Local Area Network (LAN) configuration in the **Inspector** window, changing parameters as necessary for your system. In most cases, the defaults will work, **except** for **Network**

Speed, which must be changed from its default of **1 Gbps** to **100 Mbps** to work with the GCG001.

3. Right-click the PNC001, then select **Add IO-Device** to add the GCG001 to the PROFINET LAN. In the PROFINET Device Catalog dialog that appears, select **Have GSDML...**, then browse to the location on your computer where the file is located, select it, and **Open**.
4. **GENIUSGateway...** appears in the Device Catalog tree expanded to show **GENIUS COMMUNICATIONS GATEWAY (IC695GCG001)** below it. Select that, then **OK**.
5. **geniusgateway...** now appears as an IO device in the Hardware Configuration tree under the PNC001 with the Gateway itself appearing under it as a daughter device (see figure below).

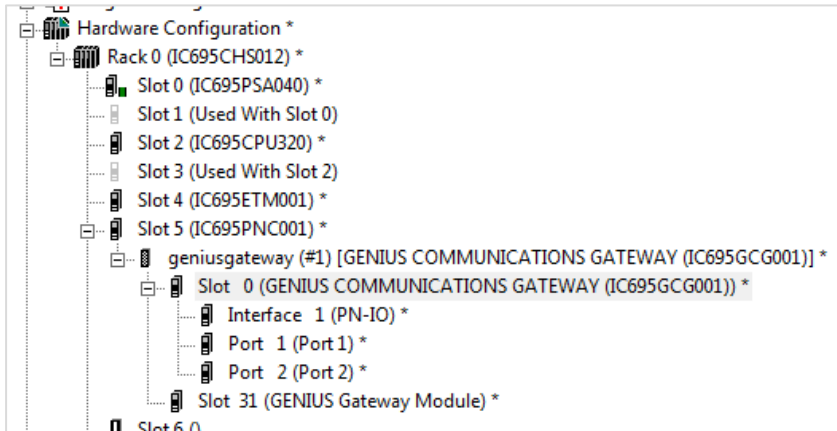

Note: **geniusgateway...** is the default PROFINET **Device Name** that Machine Edition gives to a GCG001 in the Hardware Configuration under a PNC001. This **Device Name** *must match* that given to the module itself using the **PROFINET/DCP** (Discovery and Configuration Protocol) tool (see below). If there are multiple GCG001s on a PROFINET bus, each of the modules' **Device Names** must be unique. You can change it by selecting the device in the Navigator, then typing in a new name in the Inspector.

6. Add Genius I/O devices to the Genius Bus by right-clicking **geniusgateway...** and selecting **Change Module List...** If the application is a retrofit of an existing Genius solution, be sure to set all I/O reference addresses to match those of the Genius configuration being replaced.
7. Store the Hardware Configuration to the RX3i CPU, which also stores the configuration data to the PNC001.
8. Use Machine Edition's **PROFINET/DCP** tool to assign a name to the GCG001 so that the PROFINET Controller can connect to it and send its configuration: right-click the PNC001, then select **Launch Discovery Tool**. The tool will appear in a new InfoViewer tab entitled **PROFINET DCP – Direct Connection**.

Note: This tool can also be activated from the **Utilities** tab in the **Navigation** pane by selecting **Profinet DCP**.

9. With the GCG001 connected to the PNC001 with Ethernet cables and both the RX3i rack and the GCG001 powered up, select **Refresh Device List**. Find the GCG001 in the list. If its **Device Name** does not match the one with which the PNC001 is configured, select it, then select **Edit Device**, change the **Device Name**, then **Exit**.
10. Edit any existing ladder logic to accommodate the GCG001. Specifically, any COMREQ instructions targeted at a Genius Bus Controller must be modified to work with the GCG001.

4. Additional Information

PACSystems RX3i and RX7i CPU Reference Manual, GFK-2222

PACSystems RX3i System Manual, GFK-2314

PACSystems RX3i PROFINET IO-Controller Manual, GFK-2571

PACSystems RX3i Genius Communications Gateway Module User Manual, GFK-2892

PACSystems RX3i Genius Communications Gateway Module Important Product Information, GFK-2900

Genius I/O System and Communications User's Manual, GEK-90486F-1

User manuals, product updates and other information sources are available on the Support website, <http://www.ge-ip.com/support>, under *Controllers and IO, RX3i Controllers*.

GE Intelligent Platforms

Contact Information

Americas: 1-800-433-2682 or 1-434-978-5100

Global regional phone numbers are available on our web site

www.ge-ip.com



Copyright © 2014 General Electric Company. All Rights Reserved.

* Trademark of General Electric Company and/or its subsidiaries.

All other trademarks are property of their respective holders

GFK-2891A