

## GETTING STARTED

**BOOST** - To set up the Level Boost, plug your instrument into the Input Jack (5), and connect the Output Jack (6) to your amplifier, after connecting a +9/+12VDC to the DC IN (7) or powering the pedal with a standard 9V battery. Turn the boost on using the right footswitch (3), making sure the LED on the Level Boost slider is ON (this indicates that the effect is active). Next, adjust the Level Boost slider while toggling the footswitch (3) on and off, comparing the volume of the direct signal with the boosted signal. Match the gain level as closely as you can to the direct signal, then adjust the Level Boost slider to the desired amount of added gain or cut. A suggested use of the boost is to leave it turned off until it's time to solo, then switch it on (3) for a quick level boost when you begin your solo. You can easily apply this to ANY situation where you need two different, quickly accessible playing volumes.

**7-BAND GRAPHIC EQ** - To audition the EQ, first step on the left footswitch (4), making sure the LEDs on the EQ sections are ON (this indicates that the effect is active) and with the EQ sliders (2) in flat position (0 dB). Next, dial them in gradually one slider at a time to discover how they affect your sound EQ, and taylor your guitar tone.

## TECHNICAL SPECS

### INPUT IMPEDANCE:

1Mohm / 6 Vpp

### OUTPUT IMPEDANCE:

470 ohm / 6 Vpp

### BOOSTER:

0 to +20 dB

### GRAPHIC EQ:

Freq. (Hz): 50, 100, 250, 400, 800, 1600, 4000

Level (-16dB, +16dB)

### POWER REQUIREMENTS- DC INPUT:

+9/+12VDC or standard 9-volt battery


### DIMENSIONS:

98.8 x 38.3 x 124.2 mm / 3.89" x 1.51" x 4.92"

### WEIGHT:

420 g / 0.93 lbs

## BLOCK DIAGRAM

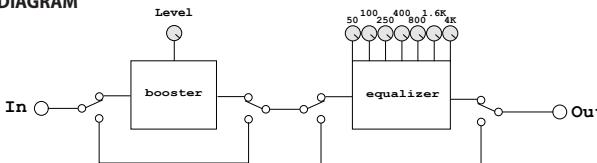

**LIMITED WARRANTY**  
DV Mark offers an international limited warranty on DV Mark products purchased from any authorized DV Mark dealer, effective from the day of purchase. The terms of this warranty vary from country to country; please contact the DV Mark distributor in your country for details.

Please register this product online at [www.dvmark.it](http://www.dvmark.it) to establish the date of purchase. However, please note that you are required to retain a copy of your receipt as proof of purchase in order to receive warranty service.

This warranty does not apply to any damage to the product caused by misuse, mishandling, accident, abuse, alteration, modification or unauthorized repairs. Product appearance and normal wear and tear (worn paint, scratches, etc.) are not covered by this warranty. DV Mark reserves the right to be the sole arbiter regarding the misuse or abuse of this product.

DV Mark assumes no liability for any incidental or consequential damages, which may result from the failure of this product. Any warranties implied in fact or by law are limited to the duration of this express limited warranty. Your legal rights related to the warranty will vary depending on the country of purchase.

## WARRANTY CARD

This product is guaranteed by the warranty provided in the country of purchase, under the following conditions:

A - The DV Mark warranty is only applicable if this document been properly completed (here or online) and if the original invoice/bill of sale, mentioning model, serial number and purchase date, is presented together with this document.

B - The obligations of DV Mark are limited to the repair of defects. Warranty repair eligibility will be decided at the sole discretion of DV Mark or its representatives. Freight, freight insurance costs, and any other costs related to the repair of this product are not covered by this warranty.

C - All warranty repairs must be made by DV Mark or an authorized DV Mark (PARSEK) service center.

D - This warranty does not apply in the following instances:

- if the damage was caused by accident, negligence or modifications; use of non DV Mark spare parts; or improper use, installation or packing;
- if the serial number on the equipment is illegible;
- if the damage was caused by lightning, water, fire, incorrect main voltage, insufficient ventilation or any other cause beyond the control of DV Mark.

E - DV Mark reserves the right to redesign or improve/modify its product at any time without any obligation to modify previously manufactured products.



# DV7 BOOSTER OWNER'S MANUAL

## 1. IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions;
- 2) Keep these instructions;
- 3) Heed all warnings;
- 4) Follow all instructions;
- 5) Do not use this apparatus near water;
- 6) Clean only with dry cloth;
- 7) Install in accordance with the manufacturer's instructions;
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat;
- 9) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus;
- 10) Only use attachments/accessories specified by the manufacturer;
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time;
- 12) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped;
- 13) "Warning: to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture; and objects filled with liquids, such as vases, should not be placed on this apparatus";
- 14) The socket outlet shall be installed near the equipment and shall be easily accessible;
- 15) The power cord must be unplugged prior to servicing.



"The Lightning Flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons."

## 1. PRÉCAUTIONS D'EMPLOI

- 1) Lire ces instructions;
- 2) Conserver ces instructions;
- 3) Suivre tous les conseils d'utilisations;
- 4) Suivre toutes les instructions;
- 5) Ne pas utiliser cet appareil au bord de l'eau;
- 6) Nettoyer uniquement avec un chiffon humide;
- 7) Ne pas bloquer le système de ventilation. Installer conformément aux instructions du fabricant;
- 8) Ne pas installer l'appareil près d'une source de chaleur tel qu'un radiateur, un fourneau, ou bien un autre appareil qui produit de la chaleur;
- 9) Protéger le cordon d'alimentation afin qu'il ne soit pas piétiné ou écrasé tout particulièrement au niveau des fiches, des prises de courant femelles, et des parties qui sortent de l'appareil;
- 10) Utiliser uniquement les accessoires recommandés par le fabricant;
- 11) Ne pas branché l'appareil en cas d'orage accompagné d'éclairs. Le débrancher en cas de non utilisation prolongée;
- 12) S'adresser à un service assistance agréé si l'appareil a subi des dommages, si le cordon d'alimentation ou la fiche a été endommagé, si un liquide a été renversé sur l'appareil ou bien si un objet est tombé dans l'appareil, si ce dernier a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas correctement ou s'il est tombé;
- 13) "Avertissement: pour réduire le risque du feu ou de décharge électrique, n'exposez pas cet appareil à la pluie ou l'humidité et les objets remplis de liquides; tels que des vases, ne devraient pas être placés sur cet appareil";
- 14) La prise de courant doit être installée près de l'appareil et doit être facilement accessible;
- 15) La fiche principale doit être débranchée avant toute opération d'entretien.

## MORE INFORMATION

For warranty and service information, please contact your local DV Mark distributor (contact information available at [www.dvmark.it](http://www.dvmark.it)). For more technical information, please visit us at [www.dvmark.it](http://www.dvmark.it) and fill out the form on the Contact Us page. We hope you enjoy your effect pedal and use it to make great music!



"The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product."

## FUNCTIONS OVERVIEW


**LEVEL BOOST (1)** - This control increases your instrument's volume without changing its sound (from 0dB to 20dB).

**7-BAND GRAPHIC EQ SECTION (2)** - The 7 frequency bands were specifically chosen because they are the most used for tailoring guitar tone:

- 50Hz for drop-D tuning
- 100Hz for heavy rhythm
- 250 Hz and 400 Hz shape the lower mids to give body and depth to the sound
- 800 Hz can be used for boosting for solos and/or power chord rhythms, or cutting for scooped tone and/or heavy rhythm
- 1.6 kHz can help you cut through the mix or cut for high-end scooped tone
- 4 kHz is for more presence and touch dynamics.

Each band can be boosted or cut over a +/-16dB range.

EQ can be very useful to eliminate feedback on your acoustic instruments.

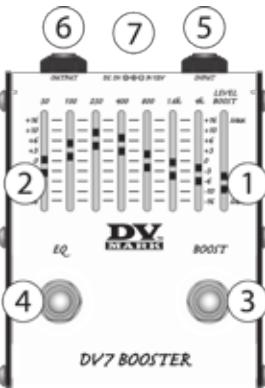

**BOOST SWITCH\* (3)** - The LED on the slider level indicates that the boost is engaged.

**EQ SWITCH\* (4)** - The LEDs on sliders indicates that the EQ is activated.

## \*TRUE BYPASS

**TRUE BYPASS** - When the pedal's controls are 'off', your signal goes directly from the input jack to the output jack without any degradation of audio quality.

## CONNECTIONS

**1/4" INPUT JACK - (connects to your instrument) (6)** - Make sure that your amp is off and the volume is turned down before making connections. Connect your instrument to the input of the DV7 Booster and the output of the DV7 Booster to your amplifier.

**1/4" OUTPUT JACK - (connects to your amplifier) (7)**

**DC IN (8)** - External power supply connection: +9/+12VDC

**STANDARD 9V BATTERY COMPARTMENT (9)** - Use a Phillips screwdriver to remove the two screws to access the 9V battery compartment on the bottom side of the pedal.

## WARRANTY CARD

Wed like to thank you for choosing a DV Mark product. If any problem occurs, please don't hesitate to contact our support team at [service@dvmark.it](mailto:service@dvmark.it). You can fill out this form and send a copy to DV Mark (Parsesk srl, Via Po 52, 66020 San Giovanni Teatino, CHIETI ITALY) or, even better, you can now register your warranty online in a matter of minutes, using our online registration form at [www.dvmark.it](http://www.dvmark.it). Simply point, click and type in your information...and you're done!

Registering your warranty identifies you and your product, in case you are ever in need of warranty service. Please note that in order to qualify for warranty service, you must retain a copy of the sales receipt or bill of delivery as proof of purchase. The information that you provide here will not be shared with any third parties and will be used for DV Mark internal business purposes only.

## PRODUCT INFORMATION

Model \_\_\_\_\_

Date of Purchase \_\_\_\_\_ (mm/dd/yyyy)

## DEALER INFORMATION

Dealer \_\_\_\_\_

Dealer Country \_\_\_\_\_ Dealer City \_\_\_\_\_

## PERSONAL INFORMATION

Purchased by:

First Name \_\_\_\_\_

Your Email Address \_\_\_\_\_

City \_\_\_\_\_

Zip \_\_\_\_\_

Country \_\_\_\_\_

Do you want to join our mailing list?

YES  NO

## MORE INFO (\* not mandatory)

\*Age \_\_\_\_\_

\*Occupation \_\_\_\_\_

\*Sex \_\_\_\_\_

## WHERE DO YOU PLAY YOUR INSTRUMENT?

Stage / Performing Musician

Classroom / Educator

School / Student

Studio Recording

Amateur

Semi-Professional

Professional

## WHAT LEVEL OF PLAYER ARE YOU?

Beginner

Professional

## PRODUCT PURCHASED VIA:

Internet

Retail Store

## WHAT MOST INFLUENCED YOUR BUYING DECISION?