



Connect. Accelerate. Outperform.™

Mellanox FlexBoot

User Manual

Rev 2.3

www.mellanox.com

NOTE:

THIS HARDWARE, SOFTWARE OR TEST SUITE PRODUCT (“PRODUCT(S)”) AND ITS RELATED DOCUMENTATION ARE PROVIDED BY MELLANOX TECHNOLOGIES “AS-IS” WITH ALL FAULTS OF ANY KIND AND SOLELY FOR THE PURPOSE OF AIDING THE CUSTOMER IN TESTING APPLICATIONS THAT USE THE PRODUCTS IN DESIGNATED SOLUTIONS. THE CUSTOMER’S MANUFACTURING TEST ENVIRONMENT HAS NOT MET THE STANDARDS SET BY MELLANOX TECHNOLOGIES TO FULLY QUALIFY THE PRODUCT(S) AND/OR THE SYSTEM USING IT. THEREFORE, MELLANOX TECHNOLOGIES CANNOT AND DOES NOT GUARANTEE OR WARRANT THAT THE PRODUCTS WILL OPERATE WITH THE HIGHEST QUALITY. ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT ARE DISCLAIMED. IN NO EVENT SHALL MELLANOX BE LIABLE TO CUSTOMER OR ANY THIRD PARTIES FOR ANY DIRECT, INDIRECT, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING, BUT NOT LIMITED TO, PAYMENT FOR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY FROM THE USE OF THE PRODUCT(S) AND RELATED DOCUMENTATION EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Mellanox Technologies
350 Oakmead Parkway Suite 100
Sunnyvale, CA 94085
U.S.A.
www.mellanox.com
Tel: (408) 970-3400
Fax: (408) 970-3403

© Copyright 2015. Mellanox Technologies. All Rights Reserved.

Mellanox®, Mellanox logo, BridgeX®, ConnectIX®, Connect-IB®, CoolBox®, CORE-Direct®, GPUDirect®, InfiniBridge®, InfiniHost®, InfiniScale®, Kotura®, Kotura logo, Mellanox Connect. Accelerate. Outperform logo, Mellanox Federal Systems® Mellanox Open Ethernet®, Mellanox Virtual Modular Switch®, MetroDX®, MetroX®, MLNX-OS®, Open Ethernet logo, PhyX®, ScalableHPC®, SwitchX®, TestX®, The Generation of Open Ethernet logo, UFM®, Virtual Protocol Interconnect®, Voltaire® and Voltaire logo are registered trademarks of Mellanox Technologies, Ltd.

CyPUT™, ExtendXTM, FabricIT™, FPGADirect™, HPC-X™, Mellanox Care™, Mellanox CloudX™, Mellanox NEO™, Mellanox Open Ethernet™, Mellanox PeerDirect™, NVMeDirect™, StPUT™, Spectrum™, Switch-IB™, Unbreakable-Link™ are trademarks of Mellanox Technologies, Ltd.

All other trademarks are property of their respective owners.

Table of Contents

Document Revision History.....	8
1 Mellanox FlexBoot (PXE).....	10
1.1 Overview.....	10
1.2 Supported Mellanox Adapter Devices and Firmware.....	10
2 Burning the Expansion ROM Image.....	11
2.1 Burning the Image on ConnectX® Family Devices	11
2.1.1 Prerequisites	11
2.1.2 Image Burning Procedure	11
2.2 Removing the Expansion ROM Image.....	11
3 Preparing the DHCP Server in Linux	12
3.1 Case I: InfiniBand Ports	12
3.1.1 Installing DHCP	12
3.1.2 Configuring the DHCP Server.....	12
3.1.3 Running the DHCP Server.....	14
3.1.4 Adding Device Driver Support in Linux Kernels/Initrd	14
3.2 Case II: Ethernet Ports	14
3.2.1 Extracting the MAC Address – Method I	14
3.2.2 Extracting the MAC Address – Method II	15
3.2.3 Extracting the MAC Address – Method III	15
3.2.4 Placing MAC Addresses in /etc/dhcpd.conf.....	15
4 Subnet Manager – OpenSM	16
5 BIOS Configuration	17
6 Flexboot User Interface	18
6.1 Skipping FlexBoot, FlexBoot User Interface and FlexBoot Port.....	18
6.2 Invoking the User Interface.....	18
6.2.1 Browsing the User Interface Menu	18
6.2.2 Accessing FlexBoot Sub Menus	19
6.3 Configuring System Settings	19
6.3.1 Editing the Parameters using Free Text.....	19
6.3.2 Editing the Parameters using Set Values	20
6.3.3 Deleting Configurable Settings	20
6.3.4 Restoring Default Configurations.....	20
6.4 Exiting FlexBoot User Interface	21
7 System Settings Configuration Options.....	22
7.1 System Setup	22
7.1.1 Bus:Device:Function.....	22

7.1.2	Chip Type.....	23
7.1.3	Device Name	23
7.1.4	PCI Device ID	23
7.1.5	Banner Menu Timeout	23
7.1.6	Virtualization Mode	23
7.1.7	Number of Virtual Functions	23
7.2	Firmware Image Properties	24
7.2.1	Flexboot Version.....	24
7.2.2	Family Firmware Version	24
7.3	Main Configuration	25
7.3.1	Blink LEDs	25
7.3.2	MAC Address.....	26
7.4	NIC Configuration	26
7.4.1	Legacy Boot Protocol.....	27
7.4.2	PKey Value	27
7.4.3	Boot Retry Count	27
7.4.4	Wake on LAN.....	28
7.4.5	Option ROM.....	28
7.4.6	Virtual LAN ID	28
7.4.7	Virtual LAN Mode.....	29
7.5	iSCSI General Parameters	29
7.5.1	DHCP IP	30
7.5.2	DHCP Parameters	30
7.5.3	IP Version	30
7.5.4	CHAP Authentication	30
7.5.5	CHAP Mutual Authentication	30
7.6	iSCSI Initiator Parameters	31
7.6.1	CHAP ID	31
7.6.2	CHAP Secret	32
7.6.3	IPv4 Address	32
7.6.4	IPv4 Primary DNS.....	32
7.6.5	IPv4 Default Gateway	32
7.6.6	iSCSI Name	33
7.6.7	Subnet Mask.....	33
7.7	iSCSI First Target Parameters	34
7.7.1	Boot LUN	34
7.7.2	Connect.....	35
7.7.3	iSCSI Name	35

7.7.4	CHAP ID	35
7.7.5	CHAP Secret	35
7.7.6	IP Address	36
7.7.7	TCP Port	36
8	How to Boot.....	37
8.1	PXE Boot	37
8.1.1	Prerequisites	37
8.1.2	Starting Boot	37
8.1.3	How to Boot to ESXi	38
8.1.4	How to Boot Using HTTP Script	38
8.2	iSCSI.....	38
8.2.1	Installing to iSCSI Target.....	38
8.2.2	Configuring an iSCSI Target in Linux Environment.....	39
8.3	Legacy Boot Priority Behavior	40
8.3.1	Legacy Boot Protocol PXE	40
8.3.2	Legacy Boot Protocol iSCSI	40
8.3.3	CHAP Authentication and CHAP Mutual Authentication	41
9	UEFI PXE Boot.....	41
Appendix A:	Diskless Machines.....	42
A.1	Case I: InfiniBand Ports	42
A.1.1	Example: Adding an IB Driver to initrd (Linux)	43

List of Figures

Figure 1: NIC Label	14
Figure 2: Main Menu Window.....	19
Figure 3: Free Text Editing Example.....	20
Figure 4: Exit Menu	21
Figure 5: System Setup Menu.....	22
Figure 6: Firmware Image Properties Menu.....	24
Figure 7: Main Configuration	25
Figure 8: Ethernet NIC Configuration	26
Figure 9: InfiniBand NIC Configuration.....	27
Figure 10: iSCSI General Parameters.....	29
Figure 11: iSCSI Initiator Parameters.....	31

List of Tables

Table 1: Document Revision History	8
Table 2: Supported Mellanox Adapter Devices and Firmware	10
Table 3: PXE Browsing Keys.....	18

Document Revision History

Table 1: Document Revision History

Revision	Date	Description
2.3	September 10 th , 2015	<ul style="list-style-type: none"> Added the following sections: <ul style="list-style-type: none"> Banner Menu Timeout PKey Value Updated the following sections: <ul style="list-style-type: none"> Supported Mellanox Adapter Devices and Firmware Main Configuration Blink LEDs NIC Configuration Prerequisites Removed the following section: <ul style="list-style-type: none"> FlexBoot Package
2.2	July 08, 2015	<ul style="list-style-type: none"> Added UEFI PXE Boot
	June 23, 2015	<ul style="list-style-type: none"> Updated the “Value restrictions” description in section Number of Virtual Functions
	May 15, 2015	<ul style="list-style-type: none"> Added the following sections: <ul style="list-style-type: none"> DHCP IP DHCP Parameters IP Version CHAP Authentication CHAP Mutual Authentication Legacy Boot Protocol PXE Legacy Boot Protocol iSCSI CHAP Authentication and CHAP Mutual Authentication Updated the following sections: <ul style="list-style-type: none"> Invoking the User Interface CHAP ID CHAP Secret Removed the following sections: <ul style="list-style-type: none"> Max Number of VFs Supported Virtual MAC Address
2.1	February 09, 2015	<ul style="list-style-type: none"> Updated the note in section Running the DHCP Server Removed sections: <ul style="list-style-type: none"> iSCSI General Parameters DHCP Parameters DHCP IP DHCP Parameters IP Version

Revision	Date	Description
2.0	January 15, 2015	Initial release of the restructured new User Manual.

1 Mellanox FlexBoot (PXE)

1.1 Overview

Mellanox FlexBoot is a multiprotocol remote boot technology. FlexBoot supports remote Boot over InfiniBand (BoIB) and over Ethernet.

Using Mellanox Virtual Protocol Interconnect (VPI) technologies available in ConnectX® adapters, FlexBoot gives IT Managers' the choice to boot from a remote storage target (iSCSI target) or a LAN target (Ethernet Remote Boot Server) using a single ROM image on Mellanox ConnectX products.

FlexBoot is based on the open source project iPXE available at <http://www.ipxe.org>.

FlexBoot first initializes the adapter device, senses the port protocol – Ethernet or InfiniBand, and brings up the port. Then it connects to a DHCP server to obtain its assigned IP address and network parameters, and also to obtain the source location of the kernel/OS to boot from. The DHCP server instructs FlexBoot to access the kernel/OS through a TFTP server, an iSCSI target, or some other service.

For an InfiniBand port, Mellanox FlexBoot implements a network driver with IP over IB acting as the transport layer. IP over IB is part of the Mellanox OFED for Linux software package (see www.mellanox.com → Products → InfiniBand/VPI Drivers → FlexBoot).

1.2 Supported Mellanox Adapter Devices and Firmware

The package supports the following HCA and firmware versions:

Table 2: Supported Mellanox Adapter Devices and Firmware

HCAs	Firmware Version	FlexBoot Version
ConnectX®-3	2.35.5000	3.4.648
ConnectX®-3 Pro	2.35.5000	3.4.648
ConnectX®-4	12.12.xxxx	3.4.650
ConnectX®-4 Lx	14.12.xxxx	3.4.650
Connect-IB®	10.12.xxxx	3.4.650

2 Burning the Expansion ROM Image

2.1 Burning the Image on ConnectX® Family Devices

2.1.1 Prerequisites

- Expansion ROM Image

The expansion ROM images can be compiled using the Mellanox FlexBoot code source available in the FlexBoot webpage on www.mellanox.com.

For further information on how to compile the code source, please refer to the pxebuild.py file inside the code source.

- Firmware Burning Tools

You need to install the Mellanox Firmware Tools (MFT) package (version 4.1.0 or later) in order to burn the PXE ROM image. To download MFT, see Firmware Tools under www.mellanox.com > Products > InfiniBand/VPI Drivers > Firmware Tools.

2.1.2 Image Burning Procedure

➤ *To burn the composite image, perform the following steps:*

1. Obtain the MST device name. Run:

```
# mst start
```

The device name will be of the form: `mt<dev_id>_pci{_cr0|conf0}`.¹

2. Create and burn the composite image. Run:

```
flint -d <mst device name> brom <expansion ROM image>
```

Example on Linux:

```
flint -d /dev/mst/mt4103_pci_cr0 brom FlexBoot-3.4.644_4103.mrom
```

Example on Windows:

```
flint -d mt4103_pci_cr0 brom FlexBoot-3.4.644_4103.mrom
```

2.2 Removing the Expansion ROM Image

- Remove the expansion ROM image. Run:

```
flint -d <mst device name> drom
```



NOTE: When removing the expansion ROM image, you also remove Flexboot from the boot device list.

¹ Depending on the OS, the device name may be superseded with a prefix.

3 Preparing the DHCP Server in Linux

When the boot session starts, the PXE firmware attempts to bring up an adapter network link (port). If it succeeds to bring up a connected link, the PXE firmware communicates with the DHCP server. The DHCP server assigns an IP address to the PXE client and provides it with the location of the boot program.

3.1 Case I: InfiniBand Ports

3.1.1 Installing DHCP

FlexBoot requires that the DHCP server runs on a machine which supports IP over IB.

1. Prior to installing DHCP, make sure that Mellanox OFED for Linux is already installed on your DHCP server – see www.mellanox.com.
2. ISC DHCP of versions above 3.1.3 have native support for IPoIB clients. If using DHCP v3.1.3, the provided patch must be deployed. Newer versions do not require patching.
3. To download and install other supported DHCP server versions, please download Mellanox OFED from www.mellanox.com → Products → InfiniBand/VPI Drivers → Linux SW/Drivers and refer to docs/dhcp/README.

Standard DHCP fields holding MAC addresses are not large enough to contain an IPoIB hardware address. To overcome this problem, DHCP over InfiniBand messages convey a client identifier field (in DHCP option 61) used to identify the DHCP session. This client identifier field can be used to associate an IP address with a client identifier value, such that the DHCP server will grant the same IP address to any client that conveys this client identifier.



NOTE: In the DHCP discover packets, flexboot sends "hlen" 6 rather than 0.

"chaddr" will be the ethernet mac address rather than zeros.

In the DHCP server, the GUID in the client identifier can still be used to identify clients.

3.1.2 Configuring the DHCP Server

3.1.2.1 For ConnectX Family Devices

When a FlexBoot client boots, it sends the DHCP server various information including its DHCP client identifier. This identifier is used to distinguish between the various DHCP sessions. The value of the client identifier is composed of a prefix — ff:00:00:00:00:02:00:00:02:c9:00 — and an 8-byte port GUID (all separated by colons and represented in hexadecimal digits).

3.1.2.2 Extracting the Port GUID – Method I

➤ *To obtain the port GUID:*

1. Start mst.

```
host1# mst start
host1# mst status
```

The following MFT commands assume that the Mellanox Firmware Tools (MFT) package has been installed on the client machine.

2. Obtain the Port GUID using the device name. The device name will be of the form: /dev/mst/ mt<dev_id>_pci{_cr0|conf0}.

```
flint -d <MST_DEVICE_NAME> q
```

Assuming that FlexBoot is connected via Port 1, then the Port GUID is 00:02:c9:03:00:00:10:39

3.1.2.3 Extracting the Port GUID – Method II

An alternative method for obtaining the port GUID involves booting the client machine via Flex- Boot. This requires having a Subnet Manager running on one of the machines in the InfiniBand subnet. The 8 bytes can be captured from the boot session as shown in the figure below.

```
MLNX FlexBoot 3.4.454 (PCI 07:00.0) starting execution...ok
MLNX FlexBoot 3.4.454 initialising devices...
Initialising completed.

Mellanox FlexBoot v3.4.454
iPXE 1.0.0+ (53438) -- Open Source Network Boot Firmware -- http://ipxe.org
Features: VLAN HTTP iSCSI DNS TFTP bzImage COMBOOT ELF MBOOT PXE PXEXT Menu

net0: GUID f4:52:14:03:00:6e:ea:f1 - MAC f4:52:14:6e:ea:f1
Using ConnectX3-Pro on PCI07:00.0 (open)
[Link:down, TX:0 RX:0 RXE:0]
[Link status: The socket is not connected (http://ipxe.org/38136001)]
Waiting for link-up on net0..._
```

3.1.2.4 Placing Client Identifiers in /etc/dhcpd.conf

The following is an excerpt of a /etc/dhcpd.conf example file showing the format of representing a client machine for the DHCP server

```
host host1 {
next-server 11.4.3.7; filename "pxelinux.0"; fixed-address 11.4.3.130;
option dhcp-client-identifier =
ff:00:00:00:00:00:02:00:00:02:c9:00:00:02:c9:03:00:0c:78:11;
}
```

3.1.3 Running the DHCP Server



NOTE: This section is applicable only when the Initiator's IP address is empty.

In order for the DHCP server to provide configuration records for clients, an appropriate configuration file needs to be created. By default, the DHCP server looks for a configuration file called `dhcpd.conf` under `/etc`. You can either edit this file or create a new one and provide its full path to the DHCP server using the `-cf` flag. See a file example at `docs/dhcpd.conf` of this package.

The DHCP server must run on a machine which has loaded the IPoIB module.

To run the DHCP server from the command line, enter:

```
dhcpd <IB network interface name> -d
```

Example:

```
host1# dhcpd ib0 -d
```

3.1.4 Adding Device Driver Support in Linux Kernels/Initrd



NOTE: A DHCP client can be used if you need to prepare a diskless machine with an IB driver. See Step 11 under [Example: Adding an IB Driver to initrd \(Linux\)](#).


3.2 Case II: Ethernet Ports

When a FlexBoot client boots, it sends the DHCP server various information, including its DHCP hardware Ethernet address (MAC). The MAC address is 6 bytes long, and it is used to distinguish between the various DHCP sessions.

3.2.1 Extracting the MAC Address – Method I

All Mellanox Ethernet NICs have a label on the printed side of the adapter card that has the card serial number and the card MAC address.

Figure 1: NIC Label

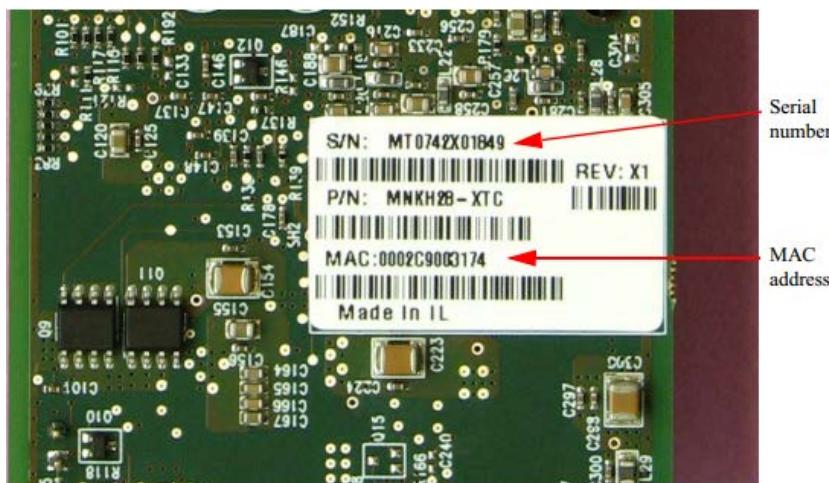

3.2.2 Extracting the MAC Address – Method II

The six bytes of MAC address can be captured from the display upon the boot of the ConnectX device session as shown in the figure below.

```
FlexBoot v3.4.637 (PCI 00:03.0) starting execution...ok
FlexBoot initialising devices...
Initialising completed.

FlexBoot v3.4.637
FlexBoot http://mellanox.com
Features: DNS HTTP iSCSI TFTP VLAN ELF MBOOT PXE bzImage COMBOOT Menu PXEXT
net0: f4:52:14:05:1a:d2
Using ConnectX-3 on PCI00:03.0 (open)
  [Link:down, TX:0 RX:0 RXE:0]
  [Link status: Unknown (http://ipxe.org/1a086101)]
Waiting for link-up on net0...
```

3.2.3 Extracting the MAC Address – Method III

➤ *In case the previous methods fail to work, perform the following as a last resort:*

1. Start mst.

```
host1# mst start
host1# mst status
```

The following MFT commands assume that the Mellanox Firmware Tools (MFT) package has been installed on the client machine.

2. Obtain the MAC using the device name. The device name will be of the form: /dev/mst/mt<dev_id>_pci{__cr0|conf0}.

```
flint -d <MST_DEVICE_NAME> q
```

Assuming that FlexBoot is connected via Port 1, then the MAC address is 00:02:c9:0c:7c:11.

3.2.4 Placing MAC Addresses in /etc/dhcpd.conf

The following is an excerpt of a /etc/dhcpd.conf example file showing the format of representing a client machine for the DHCP server running on a Linux machine.

```
host host1 {
next-server 11.4.3.7; filename "pxelinux.0"; fixed-address 11.4.3.130;
hardware ethernet 00:02:c9:0c:7c:12;
}
```

4 Subnet Manager – OpenSM



NOTE: This section applies to ports configured as InfiniBand only.

FlexBoot requires a Subnet Manager to be running on one of the machines in the IB network. OpenSM is part of the *Mellanox OFED for Linux* software package and can be used to accomplish this. Note that OpenSM may be run on the same host running the DHCP server but it is not mandatory.

For large InfiniBand clusters (> 100 nodes), it is recommended to use OpenSM caching. For further information, please refer to the Mellanox OFED User Manual.

5 BIOS Configuration

The expansion ROM image presents itself to the BIOS as a boot device. As a result, the BIOS will add to the list of boot devices “MLNX FlexBoot <ver>” for a ConnectX family device. The priority of this list can be modified through BIOS setup.

6 Flexboot User Interface



NOTE: Boot menu is displayed as READ ONLY if the HCA card does not support flash configuration.

6.1 Skipping FlexBoot, FlexBoot User Interface and FlexBoot Port

You can skip FlexBoot in any of the given options below:

- Following system POST, when a FlexBoot advertisement banner and configuration prompt is displayed, Press any key other than CTRL-B.
- When FlexBoot execution starts (as depicted in the "Initializing Devices" screen output), a UI prompt for escaping shortly follows.
- After the BIOS called BEV_ENTRY: Press ESC when prompted (2-3 seconds)
- Skip a specific port when booting starts: Press CTRL-C

6.2 Invoking the User Interface

Shortly after completion of the POST (Power-On-Self-Test sequence of the computer), the user will be prompted to press CTRL-B to invoke Mellanox FlexBoot User Interface. The user has few seconds to press CTRL-B before the message disappears.

```
Mellanox FlexBoot v3.4.435
iPXE (http://ipxe.org) 05:00.0 D300 PCI3.00 PnP PMM+002676C0+002816C0 D300
Press Ctrl-B to configure MLNX FlexBoot 3.4.435 (PCI 05:00.0)...
```

6.2.1 Browsing the User Interface Menu

To browse the menu, use the following keys:


Table 3: PXE Browsing Keys

Key	Operation
Arrows ↑↓	Browse options (Highlighted option is current)
Enter	On forms – to enter menu On configurable settings – edit configuration
Esc	Exit current menu

6.2.2 Accessing FlexBoot Sub Menus

To enter the required menu, press Enter while the option is highlighted.

Figure 2: Main Menu Window

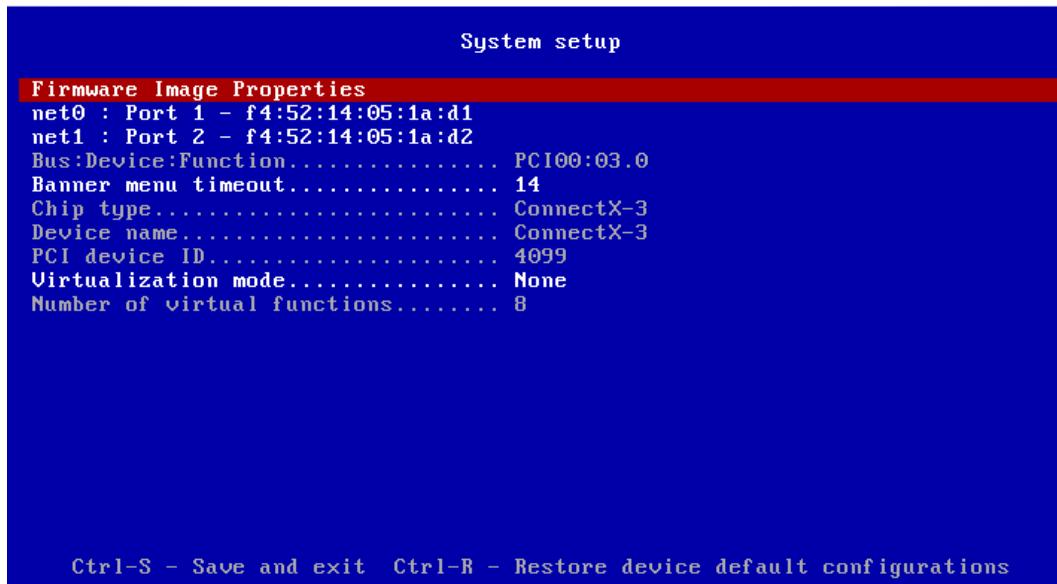

For further information on FlexBoot varies menus, and the configuration options they provide, please refer to section [Configuring System Settings](#) and its subsections.

6.3 Configuring System Settings



NOTE: It is possible to save the changes made and exit the menu at any given time by pressing Ctrl+S.

6.3.1 Editing the Parameters using Free Text

When a configurable setting is highlighted, the instructions to edit it will be shown on screen. If the setting is configurable via input, the description will show the input restrictions.

➤ **To change the configuration:**


1. Press Enter or start typing while the setting is highlighted.
2. [Optional] To discard the input while editing, press Ctrl+C.
3. Press Enter and wait to verify the new value is accepted and shown.

In case the value entered is invalid, an alert will be shown and the new value won't be accepted.



NOTE: Although numeric values are shown in decimal base, it is possible to insert values in different bases:

- For hexadecimal base type “0x” before the number
- For octal base type “0” before the number
- For decimal base type the number as is

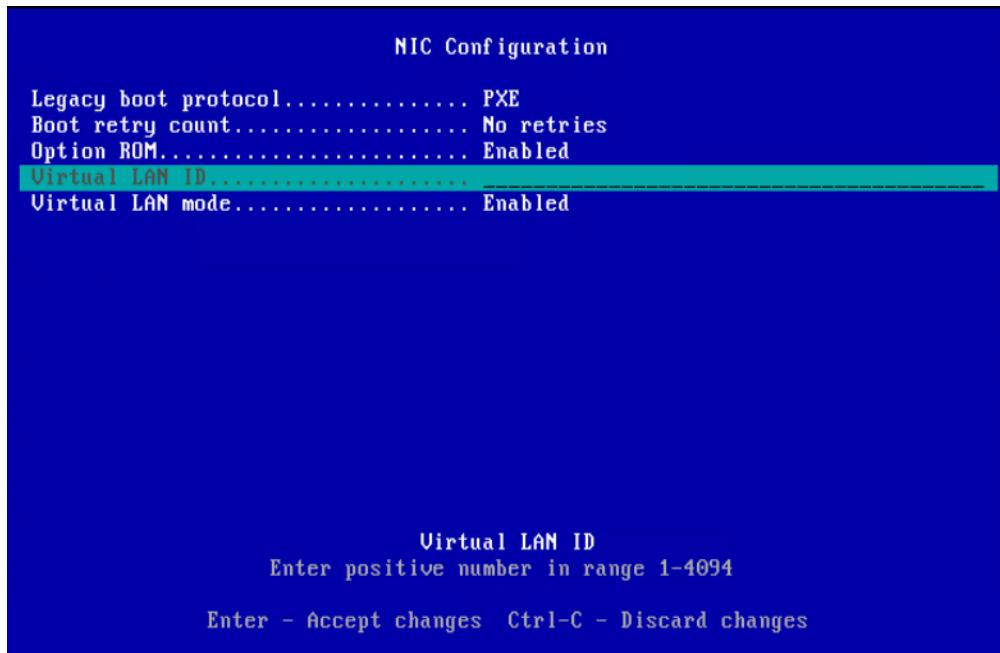Figure 3: Free Text Editing Example

6.3.2 Editing the Parameters using Set Values

When a configurable setting is highlighted, the instructions to edit it will be shown on screen. If the setting is configurable with built-in options, the description will be “Select to change value”.

➤ **To change the configuration:**

1. Press Enter while setting is highlighted.
2. Keep pressing Enter to choose the desired value

6.3.3 Deleting Configurable Settings

Configurable settings can be deleted. Value will only be deleted from the current configuration and not from the flash. If the configuration has a default value, it will be set when deleting the current value.

➤ **To delete a configurable setting:**

1. Press Ctrl+D while setting is highlighted.

6.3.4 Restoring Default Configurations

All configurations can be restored to the default values set in the device. All configurable values will be modified to “default” or “deleted” if there is no default value in the device.

➤ **To restore defaults per port:**

- Press Ctrl+R on the main menu of the port only when applicable


➤ **To restore defaults per device:**

- Press Ctrl+R on “System setup” menu when applicable

6.4 Exiting FlexBoot User Interface

To exit FlexBoot User Interface press ESC from the System Setup menu.

Figure 4: Exit Menu

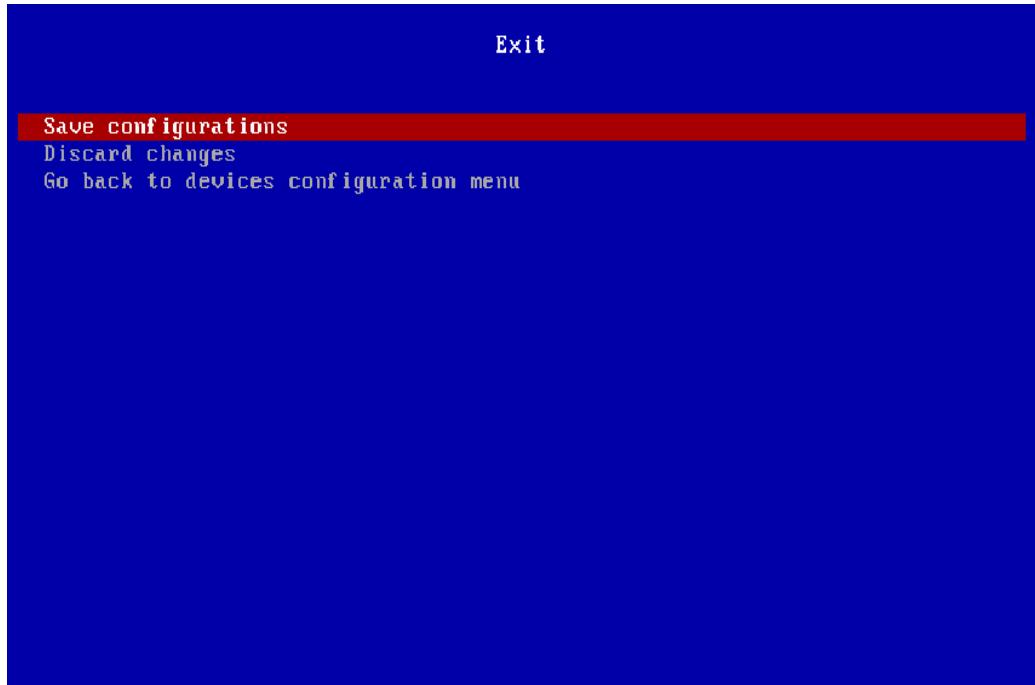

7 System Settings Configuration Options


Below are listed the attributes shown in varies FlexBoot User Interface menus.

7.1 System Setup

In the following menu, you can set the following options:

- [Bus:Device:Function](#)
- [Chip Type](#)
- [Device Name](#)
- [PCI Device ID](#)
- [Banner Menu Timeout](#)
- [Virtualization Mode](#)
- [Number of Virtual Functions](#)

Figure 5: System Setup Menu

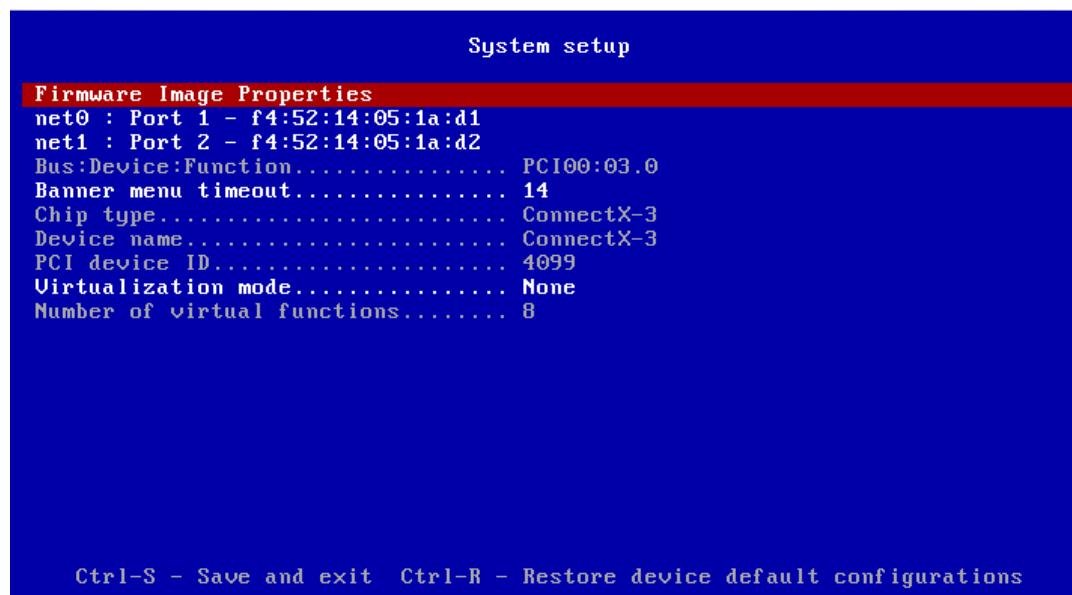

7.1.1 Bus:Device:Function

Location:	System setup
Description:	Specifies the BIOS assigned PCI Bus:Device:Function identifier of the card
Configurable:	No

7.1.2 Chip Type

Location:	System setup
Description:	Specifies the chip type
Configurable:	No

7.1.3 Device Name

Location:	System setup
Description:	The device's product name
Configurable:	No

7.1.4 PCI Device ID

Location:	System setup
Description:	The PCI Device ID of the controller
Configurable:	No

7.1.5 Banner Menu Timeout

Location:	System setup
Description:	Defines the Banner's timeout
Configurable:	Yes – via input – If virtualization mode is SR-IOV
Persistency:	Persistent through AC cycle
Reboot required:	Yes – reboot is needed in order for this change to apply
Available options:	1-14 sec

7.1.6 Virtualization Mode

Location:	System setup
Description:	Specifies the type of virtualization used by the controller on all ports. Only valid for adapters that support SR-IOV virtualization mode.
Configurable:	Yes – built-in options
Persistency:	Persistent through AC cycle
Reboot required:	Yes – reboot is needed in order for this change to apply
Available options:	1. None 2. SR-IOV

7.1.7 Number of Virtual Functions

Location:	System setup
Description:	The number of virtual functions advertised and usable by the driver. Only valid for adapters that support SR-IOV virtualization mode.
Configurable:	Yes – via input – If virtualization mode is SR-IOV


Persistency:	Persistent through AC cycle
Reboot required:	Yes – reboot is needed in order for this change to apply
Value restrictions:	Minimum integer value is 0. Maximum integer value is the value supported by the firmware installed.

7.2 Firmware Image Properties

In the following menu, you can set the following options:

- [Flexboot Version](#)
- [Family Firmware Version](#)

Figure 6: Firmware Image Properties Menu

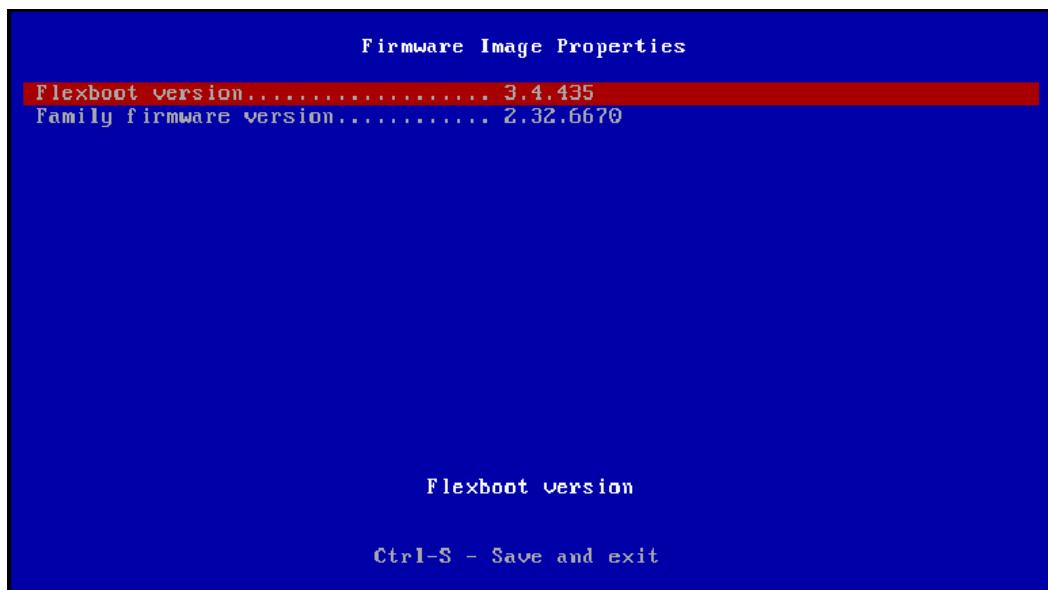

7.2.1 Flexboot Version

Location:	System setup /Firmware Image Properties
Description:	Flexboot driver version information
Configurable:	No

7.2.2 Family Firmware Version

Location:	System setup /Firmware Image Properties
Description:	Device's firmware version information.
Configurable:	No

7.3 Main Configuration



NOTE: *iSCSI Configuration* menu and all its sub-menus ([iSCSI General Parameters/iSCSI Initiator Parameters/iSCSI First Target Parameters](#)) are applicable to ConnectX®-3/ConnectX®-3 Pro adapter cards only.

In the following menu, you can set the following options:

- [Blink LEDs](#)
- [MAC Address](#)

Figure 7: Main Configuration

```
net0 : Port 1 - f4:52:14:05:1a:d1

NIC Configuration
iSCSI Configuration
Blink leds..... 0
Virtual MAC Address..... f4:52:14:05:1a:d1
Physical MAC Address..... f4:52:14:05:1a:d1

Ctrl-S - Save and exit Ctrl-R - Restore port default configurations
```

7.3.1 Blink LEDs



NOTE: Blink LEDs will not appear in the boot menu if the feature is not supported by the firmware.



NOTE: This configuration is applied when pressing Enter, so it may take longer time to save than other configurations.

Location:	System setup/Port main configurations
Description:	Specifies the number of seconds the LEDs on physical network port should blink to assist with port identification. Only valid for adapters with blink LEDs.
Configurable:	Yes – via input
Persistency:	Valid only for current cycle
Effects:	Blink LEDs duration value of the port will be as set in the current cycle

Value restrictions:	The minimum integer value is 0 and the maximum is 15.
----------------------------	---

7.3.2 MAC Address

Location:	System setup/Port main configurations
Description:	Permanent MAC address assigned during manufacturing
Configurable:	No

7.4 NIC Configuration

In the following menu, you can set the following options:

- [Legacy Boot Protocol](#)
- [Boot Retry Count](#)
- [PKey Value](#)
- [Wake on LAN](#)
- [Option ROM](#)
- [Virtual LAN ID](#)
- [Virtual LAN Mode](#)

Figure 8: Ethernet NIC Configuration

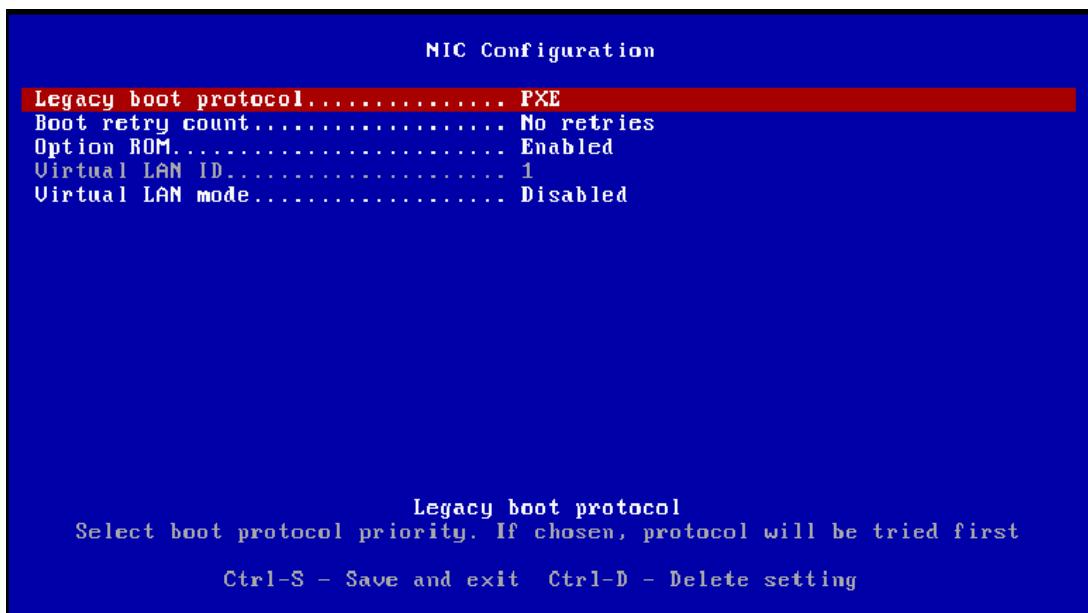
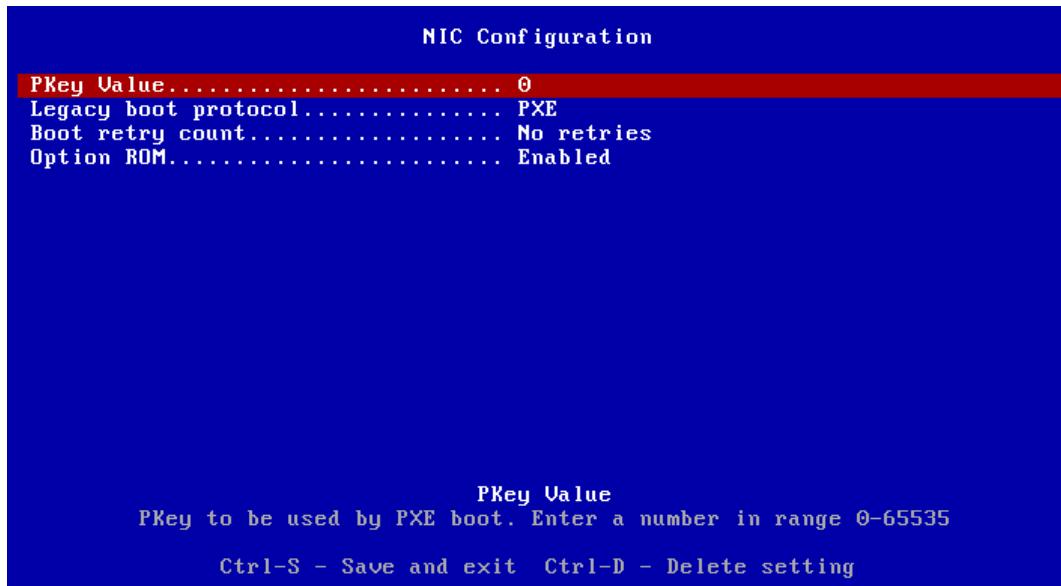


Figure 9: InfiniBand NIC Configuration

7.4.1 Legacy Boot Protocol

Location:	System setup/Port main configurations/NIC Configuration
Description:	Use a non-UEFI network boot protocol. The chosen protocol is tried first; if boot fails the other protocol will be used. Notes: 1. If set to NONE, the boot will be skipped on this port. 2. IF all the ports are set as NONE, a BEV entry is not registered.
Configurable:	Yes – built-in options
Persistency:	Persistent through AC cycle
Available options:	1. None – no PXE boot, no iSCSI boot 2. PXE – PXE first and if failed try iSCSI 3. iSCSI – iSCSI first and if failed try PXE

7.4.2 PKey Value

Location:	System setup/Port main configurations/NIC Configuration
Description:	PKey value to be used when booting IPoIB
Configurable:	Yes
Persistency:	Persistent through AC cycle
Available options:	0-65535 0 – the default PKey value

7.4.3 Boot Retry Count

Location:	System setup/Port main configurations/NIC Configuration
Description:	The number of retries to attempt in case of a boot failure.

Configurable:	Yes – built-in options
Persistency:	Persistent through AC cycle
Available options:	0. No retries 1. Retry 2. Retries 3. Retries 4. Retries 5. Retries 6. Retries 7. Indefinite Retries

7.4.4 Wake on LAN

Location:	System setup/Port main configurations/NIC Configuration
Description:	Status of Wake on LAN feature. When set, it enables the server to be powered using an in-band magic packet. Only valid for adapters that support Wake on LAN.
Configurable:	Yes – built-in options
Persistency:	Persistent through AC cycle
Available options:	1. Enabled 2. Disabled

7.4.5 Option ROM



NOTE: *Option ROM* menu is applicable to ConnectX®-3/ConnectX®-3 Pro adapter cards only.

Location:	System setup/Port main configurations/NIC Configuration
Description:	Controls the enablement of legacy Boot Protocols in the boot legacy pro. If disabled, no legacy boot protocol is chosen. When set, the boot protocol will be chosen by “legacy boot protocol” attribute.
Configurable:	Yes – built-in options
Persistency:	Persistent through AC cycle
Reboot required:	Yes – reboot is needed in order for this change to apply
Available options:	1. Enabled 2. Disabled

7.4.6 Virtual LAN ID

Location:	System setup/Port main configurations/NIC Configuration
Description:	Uses the VLAN tag with the selected boot protocol.
Configurable:	Yes – via input – If virtual LAN mode is enabled

Value restrictions:	The minimum integer value is 1 and Maximum integer value is 4094.
----------------------------	---

7.4.7 Virtual LAN Mode

Location:	System setup/Port main configurations/NIC Configuration
Description:	Enable/Disable VLAN tagging on the selected boot protocol.
Configurable:	Yes – built-in options
Persistency:	Persistent through AC cycle
Available options:	1. Enabled 2. Disabled

7.5 iSCSI General Parameters




NOTE: *iSCSI General Parameters* menu is applicable to ConnectX®-3/ConnectX®-3 Pro adapter cards only.

In the following menu, you can set the following options:

- [DHCP IP](#)
- [DHCP Parameters](#)
- [IP Version](#)
- [CHAP Authentication](#)
- [CHAP Mutual Authentication](#)

Figure 10: iSCSI General Parameters

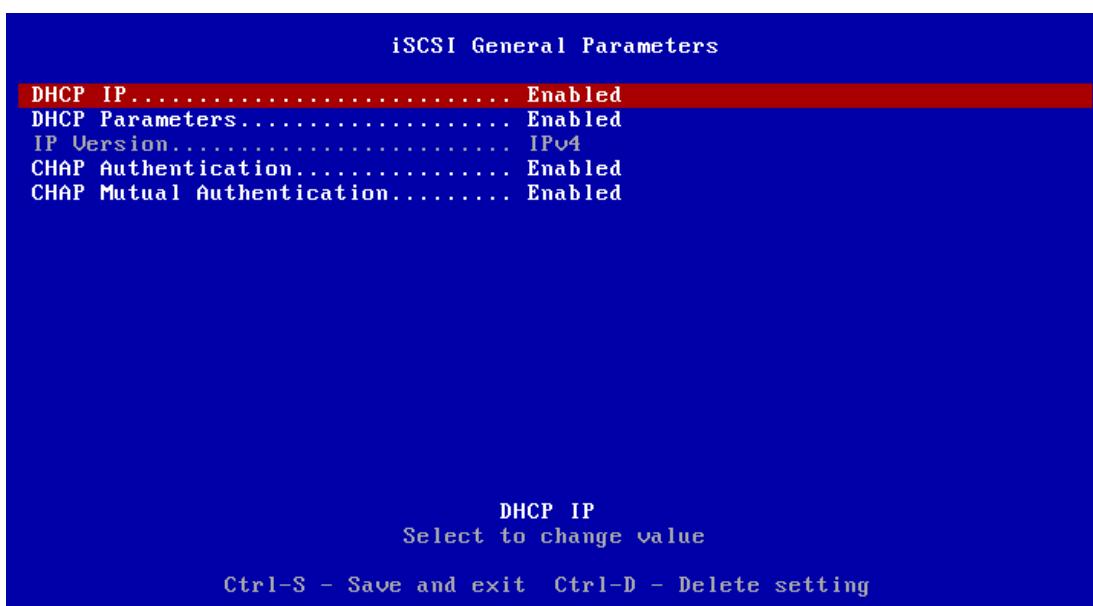

7.5.1 DHCP IP

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI General Parameters
Description:	When the DHCP IP is enabled, the initiator and target's IP, netmask, gateway and DNS will be taken from DHCP instead of from the menu.
Configurable:	Yes

7.5.2 DHCP Parameters

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI General Parameters
Description:	When the DHCP IP and DHCP Parameters are enabled, all the initiator and target's parameters are taken from DHCP instead of from the menu.
Configurable:	Yes

7.5.3 IP Version

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI General Parameters
Description:	Specifies whether IPv4 or IPv6 network addressing will be used for iSCSI initiator and targets
Configurable:	No

7.5.4 CHAP Authentication

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI General Parameters
Description:	Enables CHAP Authentication for iSCSI initiator.
Configurable:	Yes

7.5.5 CHAP Mutual Authentication

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI General Parameters
Description:	Enables mutual CHAP authentication between the iSCSI initiator and target
Configurable:	Yes

7.6 iSCSI Initiator Parameters



NOTE: *iSCSI Initiator Parameters* menu is applicable to ConnectX®-3/ConnectX®-3 Pro adapter cards only.

In the following menu, you can set the following options:

- [CHAP ID](#)
- [CHAP Secret](#)
- [IPv4 Address](#)
- [IPv4 Primary DNS](#)
- [IPv4 Default Gateway](#)
- [iSCSI Name](#)
- [Subnet Mask](#)

Figure 11: iSCSI Initiator Parameters

```

iSCSI Initiator Parameters

CHAP ID.....<not specified>
CHAP Secret.....<not specified>
IPv4 Address.....<not specified>
IPv4 Primary DNS.....<not specified>
IPv4 Default Gateway.....<not specified>
iSCSI Name.....<not specified>
Subnet mask.....<not specified>

CHAP ID
iSCSI initiator reverse CHAP ID. Maximum length is 128
Ctrl-S - Save and exit Ctrl-D - Delete setting

```

7.6.1 CHAP ID

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI Initiator Parameters
Description:	The iSCSI initiator Challenge-Handshake Authentication Protocol (CHAP) ID
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the Connect and the CHAP Mutual Authentication are enabled – This will be the reverse username used for the iSCSI initiator Challenge-Handshake Authentication Protocol.
Value restrictions:	Maximum string length is 128.

7.6.2 CHAP Secret

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI Initiator Parameters
Description:	The iSCSI initiator Challenge-Handshake Authentication Protocol (CHAP) secret (password).
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the Connect and the CHAP Mutual Authentication are enabled – This will be the reverse password used for the iSCSI initiator Challenge-Handshake Authentication Protocol.
Value restrictions:	String length should be 0 or 12 to 16

7.6.3 IPv4 Address

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI Initiator Parameters
Description:	iSCSI initiator's IPv4 address
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI – This will be set as the IP address of the initiator.
Value restrictions:	Should be in IPv4 format

7.6.4 IPv4 Primary DNS

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI Initiator Parameters
Description:	The iSCSI initiator Primary DNS IP Address.
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI – This will be set as the DNS for the IP address of the initiator.
Value restrictions:	Should be in IPv4 format

7.6.5 IPv4 Default Gateway

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI Initiator Parameters
Description:	The iSCSI initiator default Gateway IP address.
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI – This will be set as the default gateway IP address of the initiator.

Value restrictions:	Should be in IPv4 format
----------------------------	--------------------------

7.6.6 iSCSI Name

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI Initiator Parameters
Description:	The initiator's iSCSI Qualified Name (IQN).
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI – This will be set as the iSCSI Qualified Name of the initiator.
Value restrictions:	Maximum string length is 223

7.6.7 Subnet Mask

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI Initiator Parameters
Description:	The iSCSI initiator Subnet Mask for an IPv4 initiator configuration.
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI – This will be set as the subnet mask for the IP address of the initiator.
Value restrictions:	Should be in IPv4 format

7.7 iSCSI First Target Parameters



NOTE: *iSCSI First Target Parameters* menu is applicable to ConnectX®-3/ConnectX®-3 Pro adapter cards only.

In the following menu, you can set the following options:

- [Boot LUN](#)
- [Connect](#)
- [iSCSI Name](#)
- [CHAP ID](#)
- [CHAP Secret](#)
- [IP Address](#)
- [TCP Port](#)

```

iSCSI First target Parameters

Boot LUN..... 0
Connect..... Disabled
iSCSI Name..... <not specified>
CHAP ID..... <not specified> CHAP ID
CHAP Secret..... <not specified>
IP Address..... <not specified>
TCP Port..... 3261

First iSCSI storage target CHAP ID. Maximum length is 128
Ctrl-S - Save and exit Ctrl-D - Delete setting

```

7.7.1 Boot LUN

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI First target Parameters
Description:	The boot Logical Unit Number (LUN) on the first iSCSI storage target.
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI and Connect is enabled – This will be the boot LUN in the root path for the first target.
Value restrictions:	The minimum integer value is 0 and the maximum is 18446744073709551615.

7.7.2 Connect

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI First target Parameters
Description:	Enable/Disable connecting to the first iSCSI target. This will be ignored if both DHCP IP and DHCP Parameters are enabled in iSCSI general parameters.
Configurable:	Yes – built-in options
Persistency:	Persistent through AC cycle
Available options:	<ul style="list-style-type: none"> 1. Enabled 2. Disabled

7.7.3 iSCSI Name

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI First target Parameters
Description:	The iSCSI Qualified Name (IQN) of the first target
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI and Connect is enabled – This will be the iSCSI Qualified name in the root path for the first target.
Value restrictions:	Maximum string length is 223

7.7.4 CHAP ID

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI First target Parameters
Description:	The first iSCSI storage target Challenge-Handshake Authentication Protocol (CHAP) ID.
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the Connect and the CHAP Authentication are enabled – This will be the username used for the first target Challenge-Handshake Authentication Protocol.
Value restrictions:	Maximum string length is 128.

7.7.5 CHAP Secret

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI First target Parameters
Description:	The Challenge-Handshake Authentication Protocol secret (CHAP password) of the first iSCSI storage target.
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the Connect and the CHAP Authentication are enabled – This will be the

	password used for the first target Challenge-Handshake Authentication Protocol.
Value restrictions:	String length should be 0 or 12 to 16

7.7.6 IP Address

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI First target Parameters
Description:	The IP address of the first iSCSI target
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI and Connect is enabled – This will be the IP address in the root path for the first target.
Value restrictions:	Should be in IPv4 format

7.7.7 TCP Port

Location:	System setup/Port main configurations/iSCSI Configuration/iSCSI First target Parameters
Description:	TCP Port number of first iSCSI target
Configurable:	Yes – via input
Persistency:	Persistent through AC cycle
Effects:	If the legacy boot protocol is iSCSI and Connect is enabled – This will be the TCP Port in the root path for the first target.
Value restrictions:	The minimum integer value is 1, and the maximum is 65535.

8 How to Boot

8.1 PXE Boot

8.1.1 Prerequisites

- Make sure that your client is connected physically and logically to the server(s)
- The FlexBoot image is already programmed on the adapter card
- For InfiniBand ports only: Start the Subnet Manager
- Configure and start the DHCP server
- Configure and start at least one of the services such as: iSCSI

8.1.2 Starting Boot

Boot the client machine and enter BIOS setup to configure “MLNX FlexBoot” to be the first on the boot device priority list.



NOTE: On dual-port network adapters, the client first attempts to boot from Port 1. If this fails, it switches to boot from Port 2. Note also that the driver waits up to 10 seconds for port come up and up to 90 seconds to assign an IP from the DHCP server.

If MLNX FlexBoot was selected through BIOS setup, the client will boot from FlexBoot. The client will display FlexBoot attributes, sense the port protocol – Ethernet or InfiniBand. The port sensing occurs only when the port is connected to a QSFP connector. In case of an InfiniBand port, the client will also wait for port configuration by the Subnet Manager. If auto-sensing proto- col fails, the port will be configured as an InfiniBand port.

After configuring the IB/ETH port, the client attempts to connect to the DHCP server to obtain an IP address and the source location of the kernel/OS to boot from.

For ConnectX (InfiniBand):

```
Mellanox FlexBoot v3.4.400
iPXE 1.0.0+ (9ae6) -- Open Source Network Boot Firmware -- http://ipxe.org
Features: HTTP iSCSI DNS TFTP VLAN bzImage COMBOOT ELF MBOOT PXE PXEXT Menu

net0: GUID 00:02:c9:03:00:b7:10:a0 - MAC 02:02:c9:b7:10:a0
Using ConnectIB on PCI00:05.0 (open)
[Link:down, TX:0 RX:0 RXE:0]
[Link status: The socket is not connected (http://ipxe.org/38136001)]
Waiting for link-up on net0..... ok
Configuring (net0 02:02:c9:b7:10:a0)..... ok
net0: 31.134.38.52/255.255.0.0
Next server: 31.134.38.7
Filename: pxelinux.0
Root path: /var/lib/tftpboot
tftp://31.134.38.7/pxelinux.0... ok
```

Next, FlexBoot attempts to boot as directed by the DHCP server.

8.1.3 How to Boot to ESXi

For instructions on booting to ESXi, refer to the ESXi Installation Guide on VMWare site:
<http://pubs.vmware.com/vsphere-55/index.jsp#com.vmware.vsphere.upgrade.doc/GUID-B9DB94CA-4857-458B-B6F1-6A688726AED0.html>

8.1.4 How to Boot Using HTTP Script

After performing basic HTTP configuration, add the following lines to the dhcp server configuration file:

```
host uefi24-1 {  
hardware ethernet F4:52:14:7A:56:F1 ;  
fixed-address 14.7.6.24;  
filename "pxe_script_linux";  
option vendor-class-identifier "PXEClient";  
}  
  
"pxe_script_linux" file:  
#!ipxe  
dhcp net0  
kernel -n vmlinuz http://14.7.6.30/RHEL6.4-x86_64-DVD1/images/pxeboot/vmlinuz  
initrd http://14.7.6.30/RHEL6.4-x86_64-DVD1/images/pxeboot/initrd.img  
boot
```

8.2 iSCSI

Mellanox FlexBoot enables an iSCSI-boot of an OS located on a remote iSCSI target. It has a built-in iSCSI initiator which can connect to the remote iSCSI target and load from it the kernel and initrd. There are two instances of connection to the remote iSCSI target: the first is for getting the kernel and initrd via FlexBoot, and the second is for loading other parts of the OS via initrd.

If you choose to continue loading the OS (after boot) through the HCA device driver, please verify that the initrd image includes the HCA driver.



NOTE: To boot via iSCSI, Flexboot must be selected from the BIOS boot menu (it will be shown as a BEV entry). Do not look for the entry in the BVC table.

8.2.1 Installing to iSCSI Target

It is recommended to install to an iSCSI target using the same port performing the following:

1. Connect to the iSCSI target to retrieve various information from it.

Due to the step above, FlexBoot will register the remote target by hooking BIOS interrupt 13.

2. Download the installation image using the same port by supplying the file name in the client's DHCP configuration file along with the root path.

8.2.2 Configuring an iSCSI Target in Linux Environment

8.2.2.1 Prerequisites

- Make sure that an iSCSI Target is installed on your server side.

You can download and install an iSCSI Target from the following location:

<http://sourceforge.net/projects/iscsitarget/files/iscsitarget/>

- Dedicate a partition on your iSCSI Target on which you will later install the operating system
- Configure your iSCSI Target to work with the partition you dedicated. If, for example, you choose partition /dev/sda5, then edit the iSCSI Target configuration file /etc/ietd.conf to include the following line under the iSCSI Target iqn line:

```
Lun 0 Path=/dev/sda5,Type=fileio
```

Example of an iSCSI Target iqn line:

```
Target iqn.2007-08.7.3.4.10:iscsiboot
```

- Start your iSCSI Target.

Example:

```
host1# /etc/init.d/iscsitarget start
```

8.2.2.2 Configuring the DHCP Server to Boot From an iSCSI Target

1. Configure DHCP as described in section “[Preparing the DHCP Server in Linux](#)”.
2. Edit your DHCP configuration file (/etc/dhcpd.conf) and add the following lines for the machine(s) you wish to boot from the iSCSI target:

```
filename "";
option root-path "iscsi:iscsi_target_ip::::iscsi_target_iqn";
```

The following is an example for configuring an IB/ETH device to boot from an iSCSI target:

```
host host1{ filename "";
option root-path "iscsi:iscsi_target_ip::::iscsi_target_iqn";
# For a ConnectX device with ports configured as InfiniBand, comment out# the
# following line
# option dhcp-client-identifier =
ff:00:00:00:00:00:02:00:00:02:c9:00:00:02:c9:03:00:00:10:39;

# For a ConnectX device with ports configured as Ethernet, comment out# the
# following line
# hardware ethernet 00:02:c9:00:00:bb;
}
```

8.3 Legacy Boot Priority Behavior

The sections below describe various legacy boot priority behaviors based on the protocol used.

8.3.1 Legacy Boot Protocol PXE

The client first tries to perform PXE boot and if that fails, it tries iSCSI boot. The client goes to the DHCP to get an IP address. The DHCP server might supply filename (for PXE boot) and root-path (for iSCSI boot) if set by the user.

- If the iSCSI target parameters are taken from the flash, then the root-path retrieved from the DHCP is deleted, and if the ‘Connect’ is set as “**Enable**” then the values stored in the flash are used (DHCP IP = Enable, DHCP Parameters = Disable).
- If a root-path is supplied from either the DHCP or the flash, the client is connected to the iSCSI target but no boot is performed.
- If a filename is supplied, a PXE boot is performed on the Operating System.
- If PXE boot failed or no filename was supplied, an iSCSI boot is performed to the connected target.

When the legacy boot protocol PXE is selected, the following are not supported:

- DHCP IP = disable
- iSCSI boot with static configurations after PXE boot – Setting all iSCSI parameters from the flash (including IP address)

8.3.2 Legacy Boot Protocol iSCSI

The client first tries to perform iSCSI boot and if that fails, it tries PXE boot. Upon iSCSI boot one of the following flows occurs:

- If all iSCSI configuration is taken from the flash, the client waits 25 seconds for the switches to be configured, and then tries to perform an iSCSI boot (hook to target and then boot). If the boot fails, the client exits. (DHCP IP = disable)

Or

1. If only the TCP parameters need to be retrieved from the DHCP (DHCP IP = enable, DHCP Parameters = disable), then the IP address is taken from the DHCP, the root-path retrieved from the DHCP is deleted and if the ‘Connect’ is set as “**Enable**” then the values stored in the flash are used.
2. Hook to the iSCSI target.
3. Try to boot to the iSCSI target.
4. If iSCSI boot failed and DHCP supplied a filename, try to PXE boot.
5. If PXE boot failed, exit.

When the legacy boot protocol iSCSI is selected, the following is not supported:

- PXE boot after iSCSI boot with static configurations – Setting all iSCSI parameters from the flash (including IP address)

8.3.3 CHAP Authentication and CHAP Mutual Authentication

iSCSI boot allows CHAP security option if the following conditions are met:

- If ‘Connect’ = disable or ‘CHAP Authentication’ = disable, the server ignores both the CHAP Authentication and CHAP Mutual Authentication
- If ‘Connect’ = enable and ‘CHAP Authentication’ = enable, the target CHAP parameters are used
- If ‘CHAP Mutual Authentication’ = enable, the Initiator CHAP parameters are used

9 UEFI PXE Boot

The main differences in UEFI PXE booting is determining the .efi boot file, editing the grub.cfg and dhcpcd.conf files, and setting the ‘Boot Mode’ to ‘UEFI Mode’ in the BIOS.

For further information, please refer to the “*HowTo Configure PXE Server in UEFI Mode for IPoIB Network*” post in the Mellanox Community (<https://community.mellanox.com> → Places → Solutions → PXE)

Appendix A: Diskless Machines

Mellanox FlexBoot supports booting diskless machines.



NOTE: The following configuration instructions apply only to operating systems which do not include an inbox driver, and should be skipped in case an OS with an inbox driver is used.

To enable using an IB/ETH driver, the initrd image must include a device driver module and be configured to load that driver. This can be achieved by adding the device driver module into the initrd image and loading it.

The ‘initrd’ image of some Linux distributions such as SuSE Linux Enterprise Server and Red Hat Enterprise Linux, cannot be edited prior or during the installation process.

If you need to install Linux distributions over Flexboot, please replace your ‘initrd’ images with the images found at: www.mellanox.com → Products → InfiniBand/VPI Drivers → FlexBoot (Download Tab).

All OSes which don’t include inbox driver should do the following.
OSes which include the inbox driver should skip these configurations

A.1 Case I: InfiniBand Ports

The IB driver requires loading the following modules in the specified:

- ib_addr.ko
- ib_core.ko
- ib_mad.ko
- ib_sa.ko
- ib_cm.ko
- ib_uverbs.ko
- ib_ucm.ko
- ib_umad.ko
- iw_cm.ko
- rdma_cm.ko
- rdma_ucm.ko
- mlx4_core.ko
- mlx4_ib.ko
- ib_mthca.ko
- ipoib_helper.ko – this module is *not* required for all OS kernels. Please check the release notes.
- ib_ipoib.ko

A.1.1 Example: Adding an IB Driver to initrd (Linux)

A.1.1.1 Prerequisites

- The FlexBoot image is already programmed on the HCA card
- The DHCP server is installed, configured and connected to the client machine
- An `initrd` file.
- To add an IB driver into `initrd`, you need to copy the IB modules to the diskless image. Your machine needs to be pre-installed with a Mellanox OFED for Linux ISO image (available for download from www.mellanox.com → Products → InfiniBand/VPI Drivers → Linux SW/ Drivers) that is appropriate for the kernel version the diskless image will run.

The remainder of this section assumes that Mellanox OFED has been installed on your machine.

A.1.1.2 Adding the IB Driver to the initrd File



NOTE: The following procedure modifies critical files used in the boot procedure. It must be executed by users with expertise in the boot process. Improper application of this procedure may prevent the diskless machine from booting.

1. Back up your current `initrd` file.
2. Make a new working directory and change to it.

```
host1$ mkdir /tmp/initrd_ib
host1$ cd /tmp/initrd_ib
```

3. Extract the `initrd`.

```
host1$ gzip -dc <initrd image> | cpio -id
```

The `initrd` files are now located at: `/tmp/initrd_ib`

4. Create a directory for the InfiniBand modules and copy them.

```
host1$ mkdir -p /tmp/initrd_ib/lib/modules/ib
host1$ cd /lib/modules/`uname -r`/updates/kernel/drivers
host1$ cp infiniband/core/ib_addr.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/ib_core.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/ib_mad.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/ib_sa.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/ib_cm.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/ib_uverbs.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/ib_ucm.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/ib_umad.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/iw_cm.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/rdma_cm.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/core/rdma_ucm.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp net/mlx4/mlx4_core.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/hw/mlx4/mlx4_ib.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/hw/mthca/ib_mthca.ko /tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/ulp/ipoib/ipoib_helper.ko
/tmp/initrd_ib/lib/modules/ib
host1$ cp infiniband/ulp/ipoib/ib_ipoib.ko /tmp/initrd_ib/lib/modules/ib
```

5. Load the IPv6 module. If you do not have it in your `initrd`, add it using the following command.

```
host1$ cp /lib/modules/`uname -r`/kernel/net/ipv6/ipv6.ko
```

```
/tmp/initrd_ib/lib/modules
```

6. Load the modules using the insmod executable. If you do not have it in your initrd, add it using the following command.

```
host1$ cp /sbin/insmod /tmp/initrd_ib/sbin/
```

7. [Optional] Give your IB device a static IP address.

```
host1$ cp /sbin/ifconfig /tmp/initrd_ib/sbin
```

8. [Optional] Obtain an IP address for the IB device through DHCP. Copy the DHCP client which was compiled specifically to support IB.

To continue with this step, DHCP client needs to be already installed on the machine you are working with.

Copy the DHCP client file and all the relevant files as described below.

```
host1# cp <path to DHCP client>/dhclient /tmp/initrd_ib/sbin
host1# cp <path to DHCP client>/dhclient-script /tmp/initrd_ib/sbin
host1# mkdir -p /tmp/initrd_ib/var/state/dhcp
host1# touch /tmp/initrd_ib/var/state/dhcp/dhclient.leases
host1# cp /bin/ uname /tmp/initrd_ib/bin
host1# cp /usr/bin/expr /tmp/initrd_ib/bin
host1# cp /sbin/ifconfig /tmp/initrd_ib/bin
host1# cp /bin/hostname /tmp/initrd_ib/bin
```

9. Create a configuration file for the DHCP client and place it under /tmp/initrd_ib/sbin.

Example of the dhclient.conf

```
# The value indicates a hexadecimal number
# For a ConnectX® device interface "ib0" {send dhcp-client-identifier
ff:00:00:00:00:00:02:00:00:02:c9:00:00:02:c9:03:00:00:10:39;
}
```

10. Add the commands for loading the copied modules into the file init at the point you wish the IB driver to be loaded.

Please pay attention to the following commands order (for loading modules) as it is critical.

Loading "ipoib_helper.ko" is not required for all OS kernels.

```
echo "loading ipv6"
/sbin/insmod /lib/modules/ipv6.ko echo "loading IB driver"
/sbin/insmod /lib/modules/ib/ib_addr.ko
/sbin/insmod /lib/modules/ib/ib_core.ko
/sbin/insmod /lib/modules/ib/ib_mad.ko
/sbin/insmod /lib/modules/ib/ib_sa.ko
/sbin/insmod /lib/modules/ib/ib_cm.ko
/sbin/insmod /lib/modules/ib/ib_uverbs.ko
/sbin/insmod /lib/modules/ib/ib_ucm.ko
/sbin/insmod /lib/modules/ib/ib_umad.ko
/sbin/insmod /lib/modules/ib/iw_cm.ko
/sbin/insmod /lib/modules/ib/rdma_cm.ko
/sbin/insmod /lib/modules/ib/rdma_ucm.ko
/sbin/insmod /lib/modules/ib/mlx4_core.ko
/sbin/insmod /lib/modules/ib/mlx4_ib.ko
/sbin/insmod /lib/modules/ib/ib_mthca.ko
```

In case of interoperability issues between iSCSI and Large Receive Offload (LRO), set the "ib_ipoib.ko lro" to "0" to disable LRO.

```
/sbin/insmod /lib/modules/ib/ib_ipoib.ko lro=0
```

11. Assign an IP address to the IB device. Add either a call to `ifconfig` or to the DHCP client in the `init` file after loading the modules. If you want to use the DHCP client, then you need to add a call to the DHCP client in the `init` file after loading the IB modules.

For example:

```
/sbin/dhclient -cf /sbin/dhclient.conf ib1
```

12. Save the `init` file.

13. Close `initrd`.

```
host1$ cd /tmp/initrd_ib  
host1$ find . | cpio -H newc -o > /tmp/new_initrd_ib.img  
host1$ gzip /tmp/new_init_ib.img
```

14. Copy the modified `initrd` (including the IB driver) which is located at `/tmp/new_init_ib.img.gz` and rename it properly.

1. Back up your current `initrd` file.
2. Make a new working directory and change to it.
3. Extract the `initrd` image.
4. Create a directory for the ConnectX EN modules and copy them.
5. Load the modules using the `insmod` executable. If you do not have it in your `initrd`, add it using the following command.
6. Give your Ethernet device a static IP address.
7. Add the commands for loading the copied modules into the file `init` at the point you wish the Ethernet driver to be loaded.
8. Assign an IP address to the ConnectX EB network interface.
9. Save the `init` file.

10. Close `initrd`.

11. Copy the modified `initrd` (including the Ethernet driver) which is located at `/tmp/new_init_en.img.gz` and rename it properly.