



**IRoAM**

**WIRELESS MUSIC REMOTE FOR IPOD**

**USER MANUAL**

ARWR1



# IMPORTANT INFORMATION

## CAUTION

RISK OF ELECTRIC SHOCK.  
DO NOT OPEN.

**Caution:** To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### FCC Information

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RF Exposure Warning:** This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

### Industry Canada Regulatory Information

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

The user is cautioned that this device should be used only as specified within this manual to meet RF exposure requirements. Use of this device in a manner inconsistent with this manual could lead to excessive RF exposure conditions.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## PRODUCT INFORMATION

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the model number in case you need it. These numbers are located on the product.

 
Model No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

## STEP 1: UNPACKING

Make sure you find the following pieces in your iRoam package:

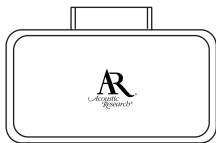



the iRoam transmitter



the iRoam  
receiver

### PLUS:

  
- Combo USB/standard power adapter cable
- 3.5mm stereo audio cable

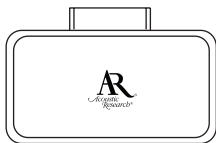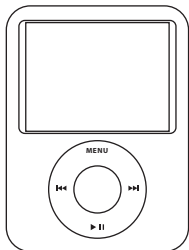

## STEP 2: DOCKING


Plug the iRoam transmitter's dock connector into your iPod's 30-pin connector.
 
## STEP 3: CONNECTING TO YOUR STEREO

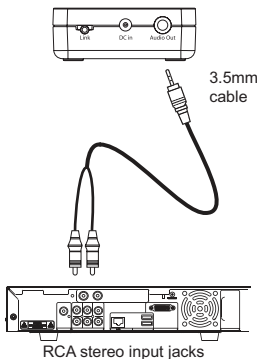

1. Connect the provided 3.5mm stereo cable to the Audio Out jack on the iRoam receiver.
2. Connect the red and white plugs on the other end of the 3.5mm stereo cable to your stereo's audio input jacks—make sure you match the plug colors with the jack colors (red to red, white to white).

## STEP 4: POWERING THE RECEIVER

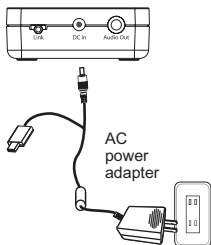 

1. Connect the AC power adapter to the DC IN power supply jack on the receiver's back panel.
2. Plug the adapter into an electrical outlet.


Important: This power unit is intended to be correctly oriented in a vertical or floor mount position.

## STEP 5: LINKING

 
The iRoam dock and receiver usually link automatically once you've docked your iPod and plugged in the receiver. A solid blue LED on the dock and the receiver indicates that the two pieces are linked.

If you get a blinking blue LED on the dock and/or receiver, try the following steps to link the two manually:

1. Take the iRoam dock and iPod next to the receiver—keep the dock and iPod connected.
2. Find the LINK buttons on the back panel of the receiver and on the side of the dock.



iRoam dock, side view

 


iRoam receiver, back panel

3. Press and hold the LINK buttons on the receiver and dock for 5 seconds. The blue LEDs on each blink while the two pieces are linking. These LEDs stay solid blue when the two have linked.

Now you're ready to enjoy music from your iPod over your home stereo with no wires attached! Just use your iPod like you normally would to select songs, playlists, etc. And enjoy!

## STEP 6: POWERING YOUR IPOD (OPTIONAL)

 


You can use the iRoam's transmitter to charge your iPod. Just connect the USB mini-connector end of the provided USB adapter cable to the USB jack on the side of the dock. Connect the other end of the cable to a USB power adapter (not provided). Then, plug the USB power adapter into a wall outlet.

## iRoam Buttons and Jacks

 ---

### Dock Buttons and Jacks


iRoam dock: connects to iPod models with 30-pin dock connector

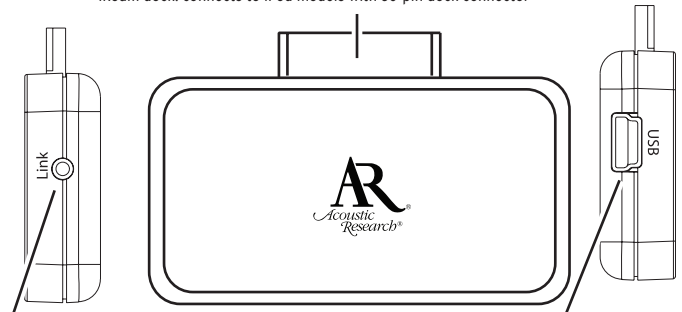

Link button: manually links the dock to the receiver

USB jack: connects to a USB power adapter to charge your iPod

### Receiver Buttons and Jacks

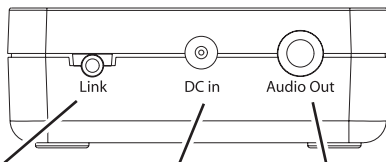 

Link button: manually links the receiver to the dock

DC In jack: connects to the provided AC adapter to power the receiver

Audio Out jack: connects to the provided 3.5mm stereo audio cable to output audio from your iPod to your stereo

## TROUBLESHOOTING

The following troubleshooting guide takes you through some of the more common problems associated with installation and/or operation. If a problem persists, please call toll-free 1-800-732-6866 or visit [www.araccessories.com](http://www.araccessories.com).

No sound	<ul style="list-style-type: none"> <li>• Make sure the iRoam receiver's AC adapter is fully inserted into the wall outlet and the power cord from the AC adapter is firmly connected to the receiver's power input jack.</li> <li>• Check that your iPod is playing music as it normally should—plug in your headphones to make sure.</li> <li>• Confirm that the receiver LED is solid blue. If the receiver LED is flashing blue, the receiver is not tuned to the dock. Press the link key on the dock and on the receiver's back panel to link them.</li> <li>• Check that your stereo's volume is turned up.</li> <li>• Make sure your iPod's volume is set high enough for the dock to detect.</li> </ul>
Interrupted sound	<ul style="list-style-type: none"> <li>• Move closer to the receiver with the dock and iPod in your hand. Sending the signal through certain materials, such as glass, tile, and metal, can decrease the effective transmitting distance of the system.</li> </ul>
LEDs fail to light up	<ul style="list-style-type: none"> <li>• Make sure the dock is properly connected to your iPod. Then, move closer to the receiver and see if the dock and receiver link. If they don't, press the link key on both simultaneously.</li> </ul>
Sound stops automatically	<ul style="list-style-type: none"> <li>• Check the LED the dock. If it's blinking, the receiver has lost the dock's signal. Move closer to the receiver. If you don't see the LED, you need to charge your iPod using the USB power adapter.</li> </ul>

## CARE AND MAINTENANCE

Do not open the dock or receiver. There are no user-servicable parts inside. Do not allow moisture to enter either unit. Moisture will corrode the inner electronics. To clean the dock or receiver, wipe gently with a dry cloth.

## 12 MONTH LIMITED WARRANTY

Audiovox Electronics Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the Retailer.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product. The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product, or by leaving non-rechargeable batteries in the product while plugged into an AC outlet.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

**USA:** Audiovox Electronics Corporation, 150 Marcus Blvd., Hauppauge, NY 11788

**CANADA:** Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Door 16, Mississauga, Ontario L5T 3A5