

*User*  
***Manual***

S751DA – S7751DA  
Fiber Optic Transmission System



***GE Interlogix***  
*Video Systems Group*



© 2003 GE Interlogix, Video Systems Group

**All Rights Reserved.**

Any GE Interlogix, Video Systems Group, software supplied with GE Interlogix, Video Systems Group, products is proprietary and furnished under license and can be used or copied only in accordance with the terms of such license.

This document contains proprietary information that is protected by copyright. No part of this document may be reproduced or transmitted in any form or by any means without the prior written permission of GE Interlogix, Video Systems Group.

The information contained in this document is subject to change without notice. GE Interlogix, Video Systems Group, in keeping pace with technological advances, is a company of product innovation. Therefore, it is difficult to ensure that all information provided is entirely accurate and up-to-date. GE Interlogix, Video Systems Group, accepts no responsibility for inaccuracies or omissions and specifically disclaims any liabilities, losses, or risks, personal or otherwise, incurred as a consequence, directly or indirectly, of the use or application of any of the contents of this document.

For the latest product specifications, visit GE Interlogix, Video Systems Group, online at [www.GE-Interlogix.com](http://www.GE-Interlogix.com) or contact your GE Interlogix, Video Systems Group, sales representative.

**For technical support before and after installation, call 800-469-1676.**

*Technical support is available 24 hours a day, 7 days a week.*

Call:     **Tech Support**   800-469-1676 (6 A.M. – 5 P.M. PST Monday through Friday)  
          **Tech Support**   541-740-3589 (all other times)  
          **Main**           800-343-3358 or 541-754-9133  
Fax:     **Tech Support**   541-752-9096 (available 24 hours a day)  
          **Main**           541-754-7162  
Web:     [www.GE-Interlogix.com](http://www.GE-Interlogix.com)

11-0751DA-A / December 2003

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## TABLE OF CONTENTS

<b>BEFORE YOU BEGIN</b> .....	<b>5</b>
<b>1 INTRODUCTION</b> .....	<b>7</b>
<b>2 MODULE SETUP</b> .....	<b>8</b>
2.1 UNPACKING THE UNIT .....	8
2.2 DATA TRANSLATION .....	8
2.3 INPUT/OUTPUT DATA FORMAT .....	8
2.3.1 MANUAL DATA SELECTION .....	9
2.3.2 AUTO DATA CONFIGURATION .....	10
2.4 OPTICAL ALARM .....	10
2.5 AUDIO LEVEL .....	11
2.6 INPUT IMPEDANCE .....	11
<b>3 INSTALLATION</b> .....	<b>12</b>
3.1 RACK CARDS .....	12
3.2 501R RACK CARD ENCLOSURES .....	12
3.3 CONNECTIONS .....	13
3.3.1 BACK PANEL CONNECTIONS .....	14
3.3.2 INTERFACE BOARD CONNECTIONS .....	15
3.3.3 BUILT-IN TERMINATION .....	18
3.3.4 AUDIO CONNECTIONS .....	19
3.3.5 FIBER OPTIC CABLE CONNECTIONS .....	19
3.3.6 STANDALONE MODULE POWER CONNECTIONS .....	19
3.3.7 RACK MODULE POWER CONNECTIONS .....	20
<b>4 OPERATION</b> .....	<b>21</b>
4.1 NORMAL OPERATION .....	21
4.2 LED OPERATION .....	21
4.2.1 LASER (LS) INDICATOR .....	21
4.2.2 LEVEL/LOSS (LL) INDICATOR .....	22
4.2.3 AUDIO (A) IN/OUT INDICATORS .....	22
4.2.4 DATA (D) IN/OUT INDICATORS .....	22
4.2.5 CONTACT (C) IN/OUT INDICATORS .....	22
4.2.6 ENABLED (ENA) INDICATOR .....	22

4.3 TEST MODE .....	23
<b>5 TROUBLESHOOTING .....</b>	<b>24</b>
<b>APPENDIX A: RS485 APPLICATION NOTES .....</b>	<b>25</b>
A.1 INTRODUCTION .....	25
A.2 CONNECTION .....	25
A.3 CONFIGURATION .....	25
A.3 TERMINATION.....	25

## BEFORE YOU BEGIN

Read these instructions before installing or operating this product.

**Note:** This installation should be made by a qualified service person and should conform to local codes.

This manual provides installation and operation information. To use this document, you must have the following minimum qualifications:

- A basic knowledge of CCTV systems and components
- A basic knowledge of electrical wiring and low-voltage electrical hookups

### Intended use

Use this product only for the purpose for which it was designed; refer to the product specification and user documentation.

### Customer Support

For assistance in installing, operating, maintaining, and troubleshooting this product, refer to this document and any other documentation provided. If you still have questions, please contact Technical Support and Sales:

**GE Interlogix, Video Systems Group**

Call: 800-469-1676

Fax: 541-752-9096

**Note:** You should be at the equipment and ready with details before calling Technical Support.

### Conventions Used in this Manual

**Boldface** or button icons highlight command entries. The following **WARNING**, **CAUTION**, and **Note** statements identify potential hazards that can occur if the equipment is handled improperly:



**\* WARNING:**

Improper use of this equipment can cause severe bodily injury or equipment damage.

---



**\*\* CAUTION:**

Improper use of this equipment can cause equipment damage.

---

**Note:** Notes contain important information about a product or procedure.

\* This symbol indicates electrical warnings and cautions.

\*\* This symbol indicates general warnings and cautions.



# 1 INTRODUCTION

This is a guide to the installation and operation of the S751DA and S7751DA series fiber optic audio, data, and contact closure transmission system. Please read the entire manual before installing the equipment.

**NOTE:** The series numbers S751DAT and S751DAR are used to describe all models of transmitters and receivers unless noted otherwise.

The Series S751DA and S7751DA transmission systems offer simultaneous real-time transmission of:

- One channel of two-way high quality audio (HQA)
- One channel of two-way multi-protocol data (MPD)
- One channel of two-way relay/contact closure

The S751DA system operates over one or two multimode fibers and the S7751DA uses one or two single-mode fibers. A complete system consists of an S751DAT transmitter and an S751DAR receiver. Units are designed for installation in the 515R1 or 517R1 Card Cages or in the 501R rack card enclosure. Figure 1 shows a basic system diagram.

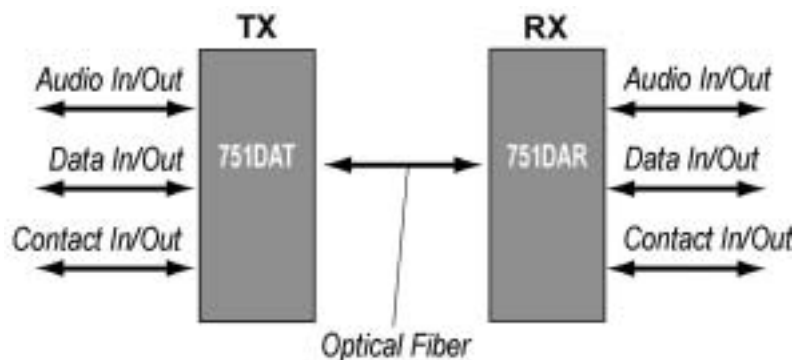


Figure 1. S751DA System Diagram

## 2 MODULE SETUP

### 2.1 UNPACKING THE UNIT

In the event that anything is missing from the following list, contact your authorized dealer or representative.

- S751DAT (S7751DAT) Transmitter or S7751DAR (S7751DAR) Receiver
- User Manual

Save the original packing materials in case it becomes necessary to return the unit.



**CAUTION:**

Take all necessary precautions to protect the unit from static electricity during the following procedures. Equipment damage may result.

### 2.2 DATA TRANSLATION

The data translation capability of the S751DA series is unique in the industry. It enables translation from one data format to another and eliminates the need for external translation devices.

The translation is in the physical layer only; it cannot interpret specific protocols or translate commands. Due to the encoding schemes utilized in Manchester and Biphase, these formats are exempt from translation. Data translation examples are shown in Table 1.

Table 1. Data Translations

Translation	TX Switch Setting	RX Switch Setting	Comments
TTL to RS232 three-wire	3	1	Signal level conversion
RS232, three-wire to TTL	1	3	Signal level conversion
TTL to RS422	3	4	Single ended to differential conversion
RS422 to TTL	4	3	Differential to single ended conversion
RS232, three-wire to RS422	1	4	Single ended to differential conversion
RS422 to RS232, three -wire	4	1	Differential to single ended conversion
RS232, five-wire to RS485	2	7 - A	RS232 handshaking bit is used to indicate tri-state
RS485 to RS232, five-wire	7 - A	2	Tri-State detection circuitry activates handshaking bit

### 2.3 INPUT/OUTPUT DATA FORMAT

Determine the data formats required for input and output for both data channels. The data formats may be the same or different for each channel. The data format can also differ from input to output on the same data channel.



### 2.3.1 MANUAL DATA SELECTION

To set the data format for channel 1, see Figure 2, Figure 3, Table 2 and perform the following.

- 1) Select a data format on the transmitter using DATA SELECT switch SW1.
- 2) Select a data format on the receiver using DATA SELECT switch SW1.

**NOTE:** The DATA SELECT switch SW1 on the audio/data card is shipped in the Auto Configure setting (position 0).

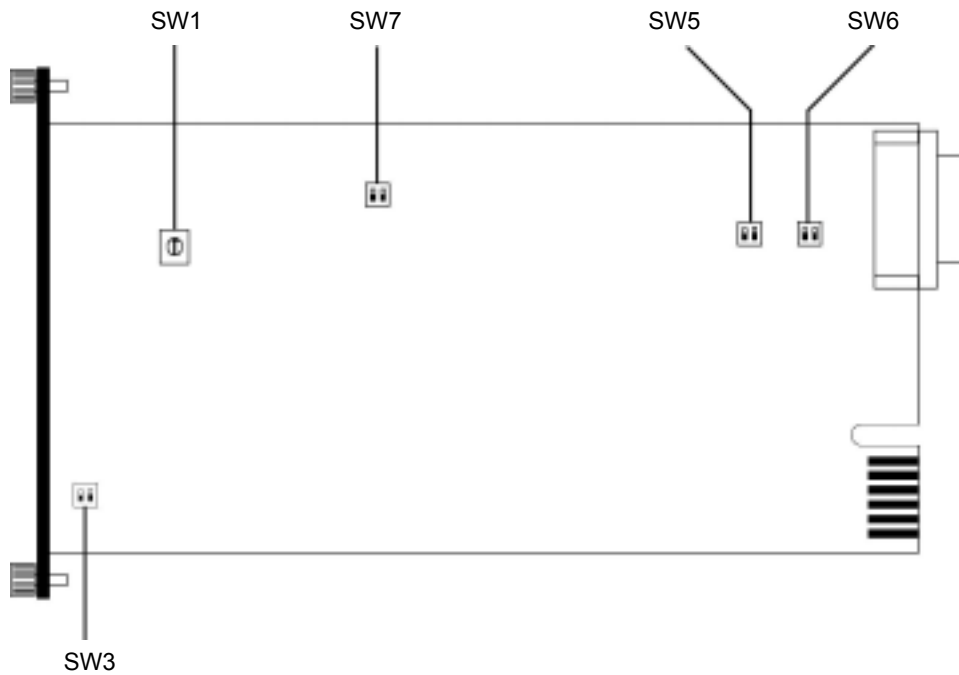


Figure 2. S751DA Location of Switches

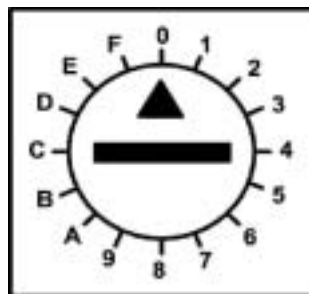


Figure 3. DATA SELECT Switch SW1

Table 2. DATA SELECT SW1 Settings

Setting	Data Mode	Setting	Data Mode
0	Not Configured or Auto Configuration	8	RS485 two -wire, 2V offset
1	RS232	9	RS485 four-wire standard
2	RS232 with handshake	A	RS485 four-wire, 1V offset
3	TTL	B	RS485 four-wire, 2V offset
4	RS422 two-wire	C	Not used
5	Manchester/Biphase	D	Not used
6	RS485 two-wire Standard or SensorNet	E	Receiver Test mode
7	RS485 two -wire, 1V offset	F	Transmitter Test mode

### 2.3.2 AUTO DATA CONFIGURATION

The S751DA modules can be set for Auto Data Configuration, where the format of the data on channel 1 is controlled from one unit, either the transmitter or the receiver. To use the Auto Data Configuration feature, perform the following.

- 1) Set the DATA SELECT switch SW1 on one unit to position 0 (default setting).
- 2) Set the DATA SELECT switch SW1 on the other unit to the desired format.
- 3) If the data format needs to be changed for a particular channel, only the DATA SELECT switch on one unit need to be changed. The other unit remains in position 0 and will auto-configure according to the selected data format.

### 2.4 OPTICAL ALARM

Rack cards are supplied with an alarm function that activates if the optical signal input to the module fails. This alarm can be output to the rack power supply, where an audible alarm and alarm output contact closure can be activated. The optical alarm is controlled using DIP switch SW3 on the data card. To set the optical alarm, see Figure 2 and Figure 4 and perform the following.

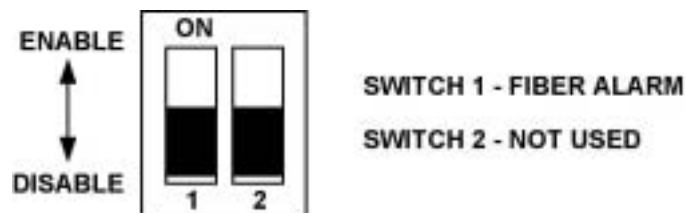


Figure 4. ALARM Switch SW3

- 1) Set switch SW3-1 to the ON position to enable the FIBER (optical) alarm.
- 2) Set the switch SW3-1 to the OFF position to disable the alarm.

**NOTE:** Setting ALARM switch SW3-1 to the OFF position does not affect the operation of the LEVEL/LOSS LED. A red LED always indicates signal loss.

## 2.5 AUDIO LEVEL

The S751DA system features dual audio level operation to meet the system requirements of -10 dBu audio reference and 0 dBu/+4 dBu audio reference level. All units are shipped with the audio level switches set to 18 dBu (0 dBu audio reference level). At this setting, the 18 dB of operating range will support maximum audio levels of +18 dBu. Switches SW5 and SW7 on the audio/data card select the audio input and output levels. To set the audio levels, see Figure 2 and Figure 5 and perform the following.

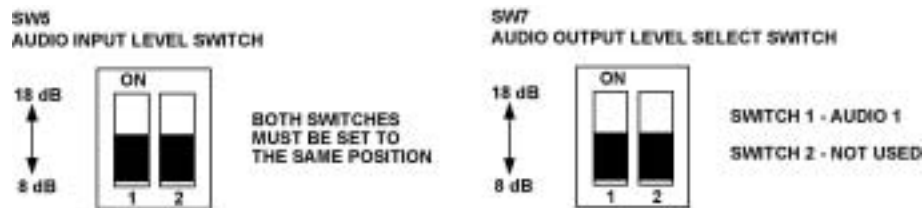


Figure 5. AUDIO LEVEL Switches SW5 and SW7

- 1) If a low audio input level causes the output audio signal to degrade, the input sensitivity of the S751DA can be increased by switching to the 8 dBu maximum scale.
- 2) For systems running at -10 dBu, typical for VCRs and DVD players, switches SW5 and SW7 should be set to 8 dB.
- 3) You can set the transmitter input to 8 dBu and the receiver output to 18 dBu to add 10 dB of gain to the system, however, this also increases system signal-to-noise ratio (S/N).

## 2.6 INPUT IMPEDANCE

The S751DA units are shipped with the input impedance set at high impedance (high-Z). To select a 600Ω input impedance in place of the high-Z input, set switch SW6 on the audio/data card to 600. See Figure 2 and Figure 6.

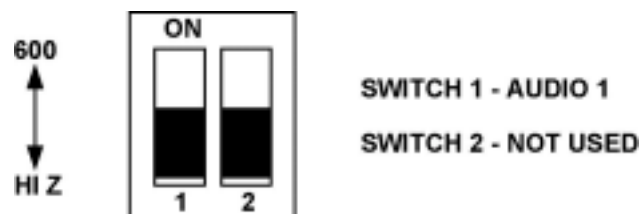


Figure 6. IMPEDANCE Switch SW6

### 3 INSTALLATION

This fiber-optic link is supplied as a rack card. The rack cards can also be used in a standalone configuration if placed in a 501R rack card enclosure.

Units should be installed in dry locations protected from extremes of temperature and humidity.

#### 3.1 RACK CARDS

Rack cards are installed in a 19-inch (483-mm), EIA standard card-cage rack, either the 515R1 or the 517R1. Follow these guidelines to install rack cards.

**CAUTION:**

Although rack cards are hot-swappable and can be installed without turning off power to the rack, the power switch on the rack power supply should be turned off and the rack power supply disconnected from any power source before installing rack cards.

---

- 1) Make sure that the card is oriented right-side up, and slide it into the card guides in the rack until the edge connector at the back of the card seats in the corresponding slot in the rack's connector panel. Seating may require thumb pressure on the top and bottom of the card's front panel.
- 

**CAUTION:**

Do not press on any of the LEDs when installing cards into the rack. Equipment damage may result.

---

- 2) Tighten the two thumbscrews on the card until the front panel of the card is seated against the front of the rack.
- 

#### 3.2 501R RACK CARD ENCLOSURES

Follow these guidelines to install rack cards in the 501R rack card enclosure.

**CAUTION:**

The rack card module can be powered only by 13.5 - 16 VDC. AC power must not be used. It is recommended that the 613P power adapter be used to supply power to the module. Damage to the equipment may result if AC power is used.

---

**CAUTION:**

Complete all instruction steps before supplying power to the unit.

---

- 1) Look inside the enclosure to determine the location of the socket for the edge connector on the card. Orient the card so that it will seat in the socket, and slide it into the card guides in the enclosure until the edge connector at the back of the card seats in the socket. Seating may require thumb pressure on the top and bottom of the card's front panel.

**CAUTION:**

Do not press on any of the LEDs when installing cards into the enclosure. Equipment damage may result.

- 2) Tighten the two thumbscrews on the card until the front panel of the card is seated against the front of the enclosure.
- 3) Determine where the module will be installed, and ensure that there is adequate space for making the various cable connections and for reading the diagnostic LEDs. See Figure 7.

**NOTE:** The type of screws chosen must be suitable for the surface on which the module is to be mounted.

- 4) Standalone modules can be attached to suitable flat surfaces with four No. 6 (3 mm) screws. After the enclosure is securely attached to a flat surface, the cable connections can be made.

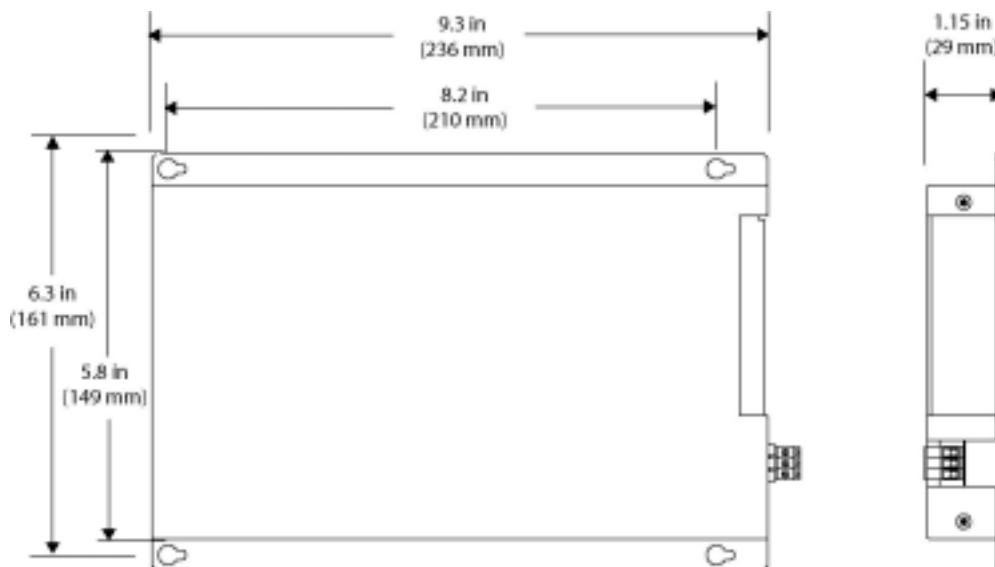


Figure 7. 501R Rack Card Enclosure Mounting Data

### 3.3 CONNECTIONS

All audio, data, contact, and fiber connections are made to the back panel of the S751DA module. When connecting audio, data, or contact signals, always wire the signal OUT pins on the audio/data equipment to the signal IN pins on the fiber links, and the signal IN pins on the audio/data equipment to the signal OUT pins on the fiber links. See Figure 8.


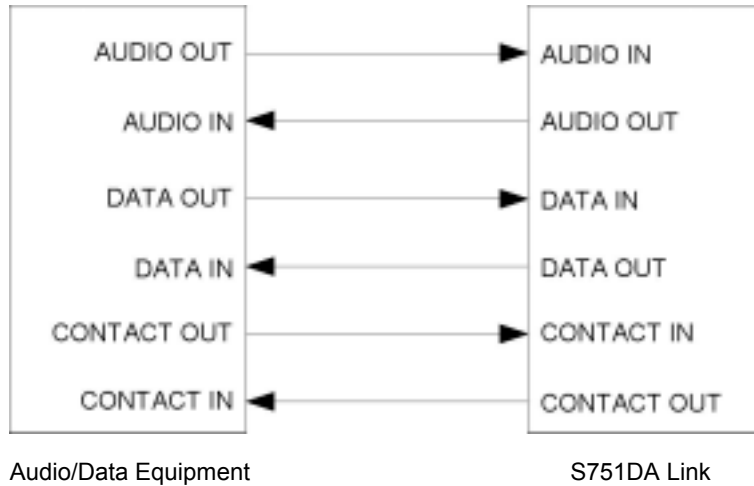


Figure 8. S751DA Fiber Link Audio – Data – Contact Connections

### 3.3.1 BACK PANEL CONNECTIONS

Audio, data, and contact signals can be connected directly to the unit by wiring a 26-pin male D-connector (AMP plug part number 748474-1, pin part number 748333-4) and attaching it to audio/data connector J4 on the back panel of the unit. See Figure 9. Table 3 lists the signal and pin information.

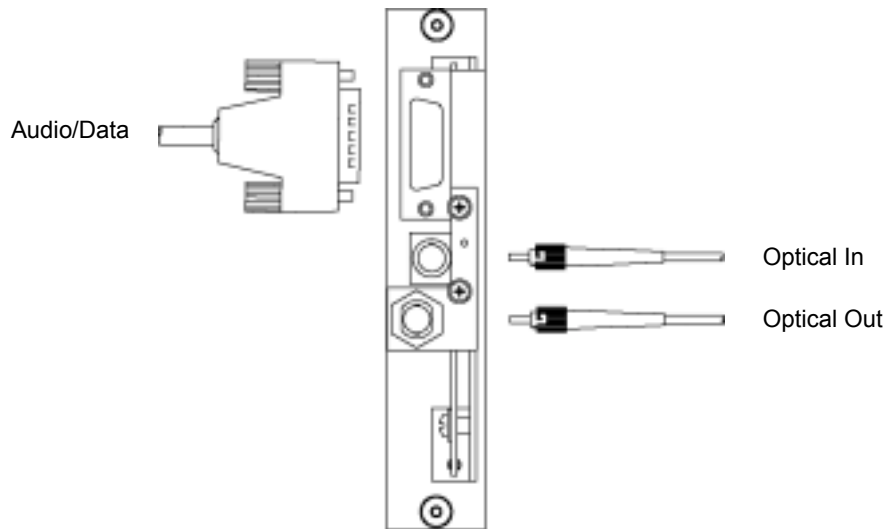

**Note:** Optical In connector is not present on 1-Fiber models.

Figure 9. S751DA 2-Fiber Module Back Panel Connections

Table 3. J4 Audio/Data Connections

Pin	Signal	Pin	Signal
1	AUDIO OUT +	14	AUDIO IN -
2	GROUND	15	NO CONNECTION
3	NO CONNECTION	16	GROUND
4	CONTACT IN +	17	DATA OUT -
5	AUDIO IN +	18	DATA IN -
6	NO CONNECTION	19	NO CONNECTION
7	DATA OUT +	20	CONTACT OUT +
8	DATA IN +	21	CONTACT OUT -
9	NO CONNECTION	22	+5 VDC BIAS
10	NO CONNECTION	23	GROUND
11	AUDIO OUT -	24	NO CONNECTION
12	NO CONNECTION	25	NO CONNECTION
13	NO CONNECTION	26	NO CONNECTION

### 3.3.2 INTERFACE BOARD CONNECTIONS

The S751DA units are also supplied with an interface board that attaches directly to the back of the module. The interface board contains screw terminal connectors for the audio, data, and contact inputs and outputs. Refer to Figure 10 and Table 4 through Table 14 for interface board wiring information.

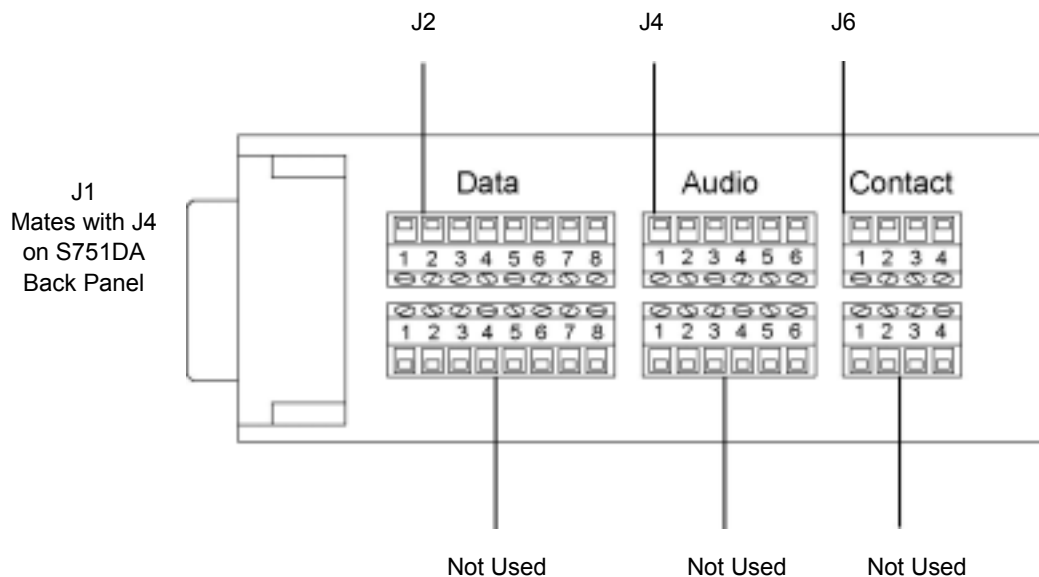


Figure 10. S751DA Interface Board

Table 4. Interface Board Connections

Pin	Signal
<b>Connector J2</b>	
1	GROUND
2	DATA CHANNEL 1 OUT +
3	DATA CHANNEL 1 OUT -
4	+5 VDC BIAS
5	DATA CHANNEL 1 IN +
6	DATA CHANNEL 1 IN -
7	TERMINATION
8	GROUND
<b>Connector J4</b>	
1	AUDIO CHANNEL 1 IN +
2	AUDIO CHANNEL 1 IN -
3	GROUND
4	AUDIO CHANNEL 1 OUT +
5	AUDIO CHANNEL 1 OUT -
6	GROUND
<b>Connector J6</b>	
1	CONTACT CHANNEL 1 IN +
2	CONTACT CHANNEL 1 IN -
3	CONTACT CHANNEL 1 OUT +
4	CONTACT CHANNEL 1 OUT -

Table 5. J2 Connections for RS232 Data

<b>SW1 – Position 1</b>	
Pin	Signal
1	GROUND/SHIELD
2	RS232 OUT
3	NO CONNECTION
4	NO CONNECTION
5	RS232 IN
6	NO CONNECTION
7	NO CONNECTION
8	GROUND

Table 6. J2 Connections for RS232 Data with Handshaking

<b>SW1 – Position 2</b>	
Pin	Signal
1	GROUND/SHIELD
2	RS232 OUT
3	RTS/CTS OUT
4	NO CONNECTION
5	RS232 IN
6	RTS/CTS IN
7	NO CONNECTION
8	GROUND



Table 7. J2 Connections for TTL Data

<b>SW1 – Position 3</b>	
Pin	Signal
1	GROUND/SHIELD
2	NO CONNECTION
3	TTL OUT
4	NO CONNECTION
5	TIE TO PIN 1
6	TTL IN
7	NO CONNECTION
8	GROUND

Table 8. J2 Connections for RS422 Data

<b>SW1 – Position 4</b>	
Pin	Signal
1	GROUND/SHIELD
2	RS422 OUT -
3	RS422 OUT +
4	NO CONNECTION
5	RS422 IN -
6	RS422 IN +
7	NO CONNECTION
8	GROUND

Table 9. J2 Connections for Manchester/Biphase Data

<b>SW1 – Position 5</b>	
Pin	Signal
1	MANCHESTER/BIPHASE OUT -
2	MANCHESTER/BIPHASE OUT +
3	NO CONNECTION
4	NO CONNECTION
5	MANCHESTER/BIPHASE IN -
6	MANCHESTER/BIPHASE IN +
7	NO CONNECTION
8	GROUND

Table 10. J2 Connections for Manchester/Biphase Termination Unit Data

<b>SW1 – Position 5</b>	
Pin	Signal
1	MANCHESTER/BIPHASE OUT -
2	MANCHESTER/BIPHASE OUT +
3	NO CONNECTION
4	NO CONNECTION
5	MANCHESTER/BIPHASE IN -
6	MANCHESTER/BIPHASE IN +
7	TERMINATION - TIE TO PIN 5
8	GROUND

Table 11. J2 Connections for RS485 2-Wire Data

<b>SW1 – Position 6 (standard offset) Position 7 (1V offset) Position 8 (2V offset)</b>	
<b>Pin</b>	<b>Signal</b>
1	GROUND/SHIELD
2	NO CONNECTION
3	NO CONNECTION
4	+5 VDC BIAS OUT
5	RS485 -
6	RS485 +
7	TERMINATION – TIE TO PIN 5
8	GROUND

Table 12. J2 Connections for RS485 4-Wire Data

<b>SW1 – Position 9 (standard offset) Position A (1V offset) Position B (2V offset)</b>	
<b>Pin</b>	<b>Signal</b>
1	GROUND/SHIELD
2	RS485 OUT -
3	RS485 OUT +
4	+5 VDC BIAS OUT
5	RS485 IN -
6	RS485 IN +
7	TERMINATION – TIE TO PIN 5
8	GROUND

Table 13. J2 Connections for SensorNet Data

<b>SW1 – Position 6</b>	
<b>Pin</b>	<b>Signal</b>
1	GROUND/SHIELD
2	NO CONNECTION
3	NO CONNECTION
4	+5 VDC BIAS OUT
5	SENSORNET -
6	SENSORNET +
7	TERMINATION – TIE TO PIN 5
8	GROUND

Table 14. J2 Connections for Test Mode Loopback

<b>SW1 – Position F</b>	
<b>Pin</b>	<b>Signal</b>
1	NO CONNECTION
2	TIE TO PIN 5
3	TIE TO PIN 6
4	NO CONNECTION
5	TIE TO PIN 2
6	TIE TO PIN 3
7	NO CONNECTION
8	GROUND

### 3.3.3 BUILT-IN TERMINATION

The S751DA features a built-in termination on the Interface Board for RS485, Manchester, Biphasic, and SensorNet installations. Refer to Table 4, and Table 10 through Table 13.

### 3.3.4 AUDIO CONNECTIONS

Audio input and output signals are connected to the 26-pin connector located on the back of the module, or to the screw terminal connectors on the Interface board supplied with the unit. See Figure 9 and Figure 10. Refer to Table 3 and Table 4 for wiring information.

**NOTE:** Signal strength remains the same regardless of type of connection.

Audio connection options include:

- Balanced transmitter input to balanced receiver output
  - Balanced transmitter input to unbalanced receiver output
  - Unbalanced transmitter input to unbalanced receiver output
  - Unbalanced transmitter input to balanced receiver output
- 1) For a balanced connection, connect the external equipment to the (+) and (-) pins of the desired channel.
  - 2) For an unbalanced connection, add a short jumper between the (-) pin and the ground pin.

### 3.3.5 FIBER OPTIC CABLE CONNECTIONS

Most cable manufacturers identify the individual fibers in the cable. Select appropriately terminated fiber and mark both ends with a unique identification label (e.g. for cable no. 03, fiber no. 08) to ensure that the fiber connected to the near end is the same as the one connected to the far end.

The proper optical connection will link the transmitter's TRANSMIT (OUT) port to the receiver's RECEIVE (IN) port. See Figure 9.

- 1) Wipe the inside of the port's sleeve with a lint-free pipe cleaner moistened with reagent-grade isopropyl alcohol. Blow dry with dry air.
- 2) Clean the connector using a lint-free cloth dampened with reagent-grade isopropyl alcohol. Thoroughly wipe the side and end of the ferrule. Blow the ferrule dry with dry air. Visually inspect the ferrule for lint.
- 3) Fasten the fiber optic cable to the port.

### 3.3.6 STANDALONE MODULE POWER CONNECTIONS



**CAUTION:**

Standalone modules can be powered only by 13.5 - 16 VDC. AC power must not be used. Damage to the equipment will result.

---

The 501R rack card enclosure has a removable screw terminal connector for the electrical input connection. Pin 1 of this connector is the GROUND terminal, pin 2 is not used, and pin 3 is the +DC terminal as marked on the enclosure. Connect the input power as follows.

- 1) Identify the power connector and remove it from the module.

- 2) Make sure the power supply is not connected to any power source, and strip approximately 0.25 inches (6 mm) of insulation from the ends of the cable.
- 3) Taking care to observe the correct polarization of the cable, insert one lead into one of the screw sockets and tighten the screw. Confirm the security of the connection with a light pull on the cable.
- 4) Repeat step 3 for the other conductor.
- 5) Seat the connector in its position in the fiber unit.
- 6) Plug the power supply into a suitable outlet.
- 7) Power up the peripheral equipment and verify system operation by observing video on the monitor at the receiver end.

### 3.3.7 RACK MODULE POWER CONNECTIONS

Power connections are made automatically when the card is installed. To supply power to the rack, connect the rack power supply to an AC outlet and set the power switch to ON.

## 4 OPERATION

### 4.1 NORMAL OPERATION

S751DA fiber links operate automatically after installation. Refer to paragraph 4.4 for details on how to execute the test mode. For description of LED color codes and an explanation of how to diagnose system faults using the LEDs built into the units, refer to section 5, Troubleshooting.

### 4.2 LED OPERATION

The S751DA modules have built-in Status Monitoring And Reliability Test System (SMARTS™) diagnostic capabilities that include LED indicators for monitoring data and optical status. The S751DA fiber units have LED indicators that describe the current state of operation; the current status of audio and data signals; and fiber optic signal strength.

These indicator pairs are LASER (LS) and LEVEL/LOSS (LL), AUDIO IN/OUT, DATA IN/OUT, CONTACT IN/OUT, and ENABLED (ENA). See Figure 11. The operation of the front panel LEDs is described in the following paragraphs.

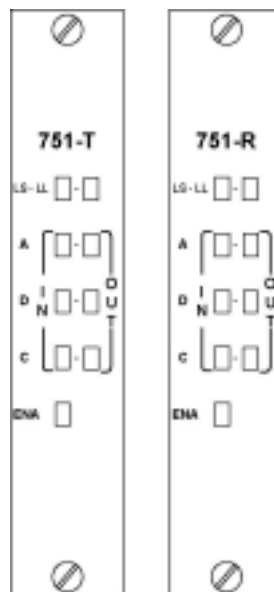


Figure 11. Front Panel LEDs

#### 4.2.1 LASER (LS) INDICATOR

A green LASER LED indicates the laser is operating normally. A red LASER LED indicates the laser is malfunctioning.

#### 4.2.2 LEVEL/LOSS (LL) INDICATOR

This LED indicates the relative optical signal strength received at the module. When sufficient optical power is being received, the LED is green. As the optical power decreases, as happens through long fiber runs, splices or connections, the LEVEL/LOSS LED stays green until the optical power drops below the minimum level.

The LEVEL/LOSS LED will turn bright red to indicate an insufficient amount of optical power is being received. All data will default to its failure state level to eliminate bus contention.

#### 4.2.3 AUDIO (A) IN/OUT INDICATORS

The AUDIO IN (or OUT) LED indicates the strength of the audio signal by varying in intensity. The AUDIO IN LED remains green as long as an adequate audio signal level is being input to the module.

If the audio input becomes too weak, the LED will turn off. The LED will be red when the audio level is clipped.

The AUDIO OUT LED performs a similar function, except that it refers to the audio output from the module.

#### 4.2.4 DATA (D) IN/OUT INDICATORS

The DATA IN LED indicates the level of the data signal being input to the S751DA over copper. A green DATA IN LED indicates a logic HIGH is present on the data inputs.

An amber DATA IN LED indicates a logic LOW is present on the copper. No color (OFF) indicates a tri-state or high impedance input.

This LED can be used to determine the resting state of your equipment and, in the RS485 states, verify that a tri-state is being detected properly.

The S751DA has special circuitry to capture data transitions and make them visible on the LEDs. High-speed bursts of activity, previously undetectable by standard LED circuits, are easily seen by this special circuitry.

The DATA OUT LED functions identically to the DATA IN LED except that the LED represents data that is being output from the unit. This LED has the same high-speed capture circuitry as the DATA IN LED.

#### 4.2.5 CONTACT (C) IN/OUT INDICATORS

The CONTACT IN/OUT LEDs indicate the presence of relay/contact closure signals. A green CONTACT IN/OUT LED indicates a closed relay contact, and a red LED indicates an open relay contact.

#### 4.2.6 ENABLED (ENA) INDICATOR

The ENABLED LED monitors the selected mode of the Data channel. It has five states as follows:

- Green indicates a valid mode has been selected.
- Red indicates an invalid mode (spare or TEST mode) has been selected.
- Flashing red/green indicates that no mode has been selected.

- Flashing green/off indicates a valid mode is configured remotely.
- Flashing red/off indicates either an invalid mode or the Test mode is configured remotely.

### 4.3 TEST MODE

The Test mode enables you to verify the operation of the audio, and data circuits in the S751DA units, as well as the fiber connection from the S751DA transmitter to the S751DA receiver. To execute the test mode, perform the following.

**Note:** DATA SELECT switch SW-1 can be set to position F to enable the 1 kHz test tone generator to verify and audio operation.

- 1) Set the DATA SELECT switch on the S751DA you are testing to F (TX Test Mode). At this end only, wire the data connections as follows (refer to Table 14):
  - Connect the DATA IN+ pin to the DATA OUT+ pin.
  - Connect the DATA IN- pin to the DATA OUT- pin.
- 2) At the opposite end, set the DATA SELECT switch on the S751DA to E (RX Test Mode).
- 3) The transmitting unit should operate as follows:
  - ENABLED LED is RED, indicating that a valid data format has not been selected.
  - DATA OUT LED is slowly flashing between amber, green, and off. This indicates that the test mode is generating an output pattern and sending it out on copper.
  - DATA IN LED should mimic the DATA OUT LED. This indicates a good, proper loopback connection, and proves that the data transmit/receive circuitry is working properly.
  - LEVEL/LOSS might be red or green indicating received fiber signal strength.
- 4) The receiving unit should operate as follows:
  - ENABLED LED is GREEN indicating a valid data format is selected.
  - DATA OUT LED should slowly flash amber, green, off. This indicates that the fiber path from the unit set for Test mode is reliable.
  - DATA IN LED should be OFF indicating there is no input copper connection made.
  - LEVEL/LOSS LED should be green to off (but not red), indicating that sufficient optical power is being received.
  - The AUDIO OUT LEDs should be green indicating sufficient audio output signal level.
- 5) In addition to the LED operation described above, verify a 1 kHz test tone is emitted on the audio system connected to the receiving unit

After the test has been performed at one end, swap switch positions and connectors to perform the test on the other end. If the test is successful, the copper-in-to-fiber-to-copper-out conversion is working in both directions.

## 5 TROUBLESHOOTING

Table 15 contains troubleshooting information for the S751DA units.

*Table 15. Troubleshooting*

<b>Problem</b>	<b>Probable Cause</b>	<b>Solution</b>
Red LASER LED	Laser is malfunctioning	Replace module
Red LEVEL/LOSS LED	Fiber not connected	Connect fiber to receiver and transmitter
	Transmitter/Receiver not powered up	Connect and apply power to module
AUDIO IN/OUT LED is OFF	Audio input not connected to module	Connect audio input to module
	Audio source not powered up	Apply power to audio source
	Audio source not transmitting	Check audio source and cabling
DATA IN LED is OFF	Tri-state condition	No action required
	Data input not connected to module	Connect data input to module
	Data source not powered up	Apply power to data source
	Data source not transmitting	Check data source and cabling
Red ENA LED	Test or invalid mode selected	Set DATA SELECT switch to valid format
ENA LED flashing red/green	Both Transmitter and Receiver set to Auto Configure mode	Set Transmitter or Receiver DATA SELECT switch to valid format
ENA LED flashing red/off	Invalid or Test mode configured remotely	Set DATA SELECT switch to valid format if not in Test mode



## APPENDIX A: RS485 APPLICATION NOTES

### A.1 INTRODUCTION

The S751DA is configurable for both full-duplex (four-wire) and half-duplex (two-wire) operation. It can be used for interfacing to systems adhering strictly to the RS-485 specification and for use with systems that use a modified, "fail-safe biased" RS-485 bus.

### A.2 CONNECTION

Use high-quality twisted-pair wiring, and make sure all connection points are clean and tight. A loose connection on one of the wires can appear to function, yet cause intermittent errors: DATA LEDs may be flashing as signals pass through the system, but those signals will be corrupt.

### A.3 CONFIGURATION

The S751DA multi-protocol data (MPD) units are designed to work with virtually any RS485 system. Unfortunately, some systems operate on a "modified" version of RS485 that use a fail-safe biasing to pull up/down their bus during a tri-state condition. In a standard RS485 system, when a driver on a properly terminated bus goes into tri-state, the voltage between the differential outputs should be less than 200 mv.

(This is considered "standard offset" in the product instruction manuals.) A differential output tri-state voltage this small can cause some non-standard systems to latch up, because they are designed for much larger, "fail-safe," offsets.

To be able to interface to such equipment, the S751DA MPD units offer two more "offset" level modes. In most cases, the S751DA unit should be configured for "standard offset" operation.

When the system is operating properly, the DATA IN and DATA OUT LEDs are off when there is no communication (tri-state) and flash when data is being sent or received. If the link is not functioning properly (LEDs will most likely not turn off), change the DATA SELECT switch on the unit to a higher offset mode.

First try 1 V, then 2 V. If switching the mode switch does not prove effective, the offset level may have to be emulated at one end of the system by using pull-up/down resistors on the data connector. The S751DA has a +5 V bias pin and ground pins on the connector for this purpose. Contact the equipment manufacturer's technical support for recommended resistor values and configuration.

### A.3 TERMINATION

RS485 systems need to be properly terminated in order to work reliably. Two terminating resistors are used on each RS485 bus, at the farthest ends of the link.

These resistors should be attached to the data/audio connector on the back of the unit if the S751DA link is at one end of the bus. If the terminating resistors are left out, the tri-state condition will not be detected, and the bus might lock up. If there are too many terminations on the bus, signal levels might drop too low, or driver circuitry might fail. The standard value of terminating resistors for RS485 is 120Ω.

