

User Manual



1305 Adjustable Frequency AC Drive

0.37 ... 4 kW (0.5 ... 5 Hp), Firmware 4.01 and Up



Please read the **Attention Statement** on page 2-18 and 2-21 before installing the drive.

Important User Information

Read this document and the documents listed in the Additional Resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited. Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

Labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

Document Update

Electronic Motor Overload Protection

This product does not offer speed-sensitive overload protection, thermal memory retention or provisions to act upon motor over-temperature sensing in motors. If such protection is needed in the end-use product, it needs to be provided by additional means.

Notes:

Summary of Changes

The information below summarizes the changes to the 1305 User Manual, publication 1305-5.1 since the last release.

Description of New or Updated Information	Page
Added the document update concerning Electronic Motor Overload Protection.	Beginning of manual

Notes:

Table of Contents

Chapter 1 – Information and Precautions	
Chapter Objectives	1-1
Manual Objectives	1-1
Receiving, Unpacking, Inspection, Storing	1-2
General Precautions	1-2
Conventions Used In This Manual	1-3
Nameplate Location	1-4
Firmware Compatibility	1-4
Catalog Number Code Explanation	1-5
Chapter 2 – Installation/Wiring	
Chapter Objectives	2-1
Mounting Requirements	2-1
Dimensions	2-2
Terminal Block Access	2-3
Input Devices	2-5
Starting and Stopping the Motor	2-5
Repeated Application/Removal of Input Power	2-5
Input Contactor	2-5
Bypass Contactors	2-5
Input Power Conditioning	2-6
Input Fusing	2-6
Electrical Interference – EMI/RFI	2-7
Immunity	2-7
Emission	2-7
RFI Filtering	2-8
RFI Filter Leakage Current	2-8
CE Conformity	2-8
Grounding	2-9
Sensitive Currents	2-9
Motor Cable	2-9
Discrete Control and Signal Wiring	2-9
Safety Ground	2-9
RFI Filter	2-9
Power Wiring	2-11
Motor Cables	2-12
Shielded Cable	2-12
Conduit	2-13
Motor Lead Lengths	2-13
Drive Operation Without A HIM	2-17
Frequency Source	2-17
Control Wiring	2-17
Three Wire Control	2-18
Two Wire “Run Forward/Run Reverse” Control	2-18
3W/2nd Acc and Run F/R 2nd A Control	2-18
MOP Function	2-18
Output Devices	2-22
Drive Output Disconnection	2-22
Cable Termination	2-22
Optional Cable Terminator	2-22
Optional Output Reactor	2-22
Output Contactor	2-22

Table of Contents

Adapters	2-23
Adapter Mounting Distance	2-23
Adapter Mounting Distance & Cable Connections	2-24
Chapter 3 – Human Interface Module (HIM)	
Chapter Objectives	3-1
HIM Description	3-1
HIM Operation	3-1
Display Panel Descriptions	3-2
Control Panel Descriptions	3-2
HIM Removal And Installation	3-4
HIM Modes	3-5
Password	3-5
HIM Programming Steps	3-6
Program And Display Modes	3-7
Process Mode	3-10
EEProm Mode	3-12
Search Mode	3-15
Control Status Mode	3-16
Password Mode	3-18
Chapter 4 – Start-Up	
Chapter Objectives	4-1
Start-Up Procedure	4-1
Initial Operation - Motor Disconnected	4-2
Chapter 5 – Programming	
Chapter Objectives	5-1
Chapter Conventions	5-1
Function Index	5-1
Parameter Flow Chart	5-1
Programming Example	5-4
Metering Group	5-5
Set Up Group	5-8
Single Phase Input Ratings	5-14
Advanced Setup Group	5-15
Frequency Set Group	5-25
Frequency Source Selection	5-29
Accel/Decel Selection	5-30
MOP Frequency Source and Accel/Decel Selection ..	5-30
Feature Select Group	5-32
Output Configuration Group	5-37
Faults Group	5-39
Diagnostics Group	5-42
Masks Group	5-47
Owners Group	5-50
Adapter I/O Group	5-54
Process Display Group	5-56
Linear List	5-57

Chapter 6 – Troubleshooting and Fault Information	
Chapter Objectives	6-1
Fault Information	6-1
Fault LED	6-1
Diagnostics	6-1
How To Clear a Fault	6-1
Fault Code Cross Reference	6-2
Bulletin 1305 Fault Descriptions	6-3
Troubleshooting	6-9
Appendix A – Block Diagram and Specifications	
Block Diagram	A-1
Specifications	A-2
Output Ratings	A-2
Input Ratings	A-2
Environmental Specifications	A-3
Control Inputs	A-3
Control Outputs	A-4
Control Features	A-4
Protective Features	A-5
Programming/Communications	A-6
Monitoring	A-6
Appendix B – Serial Communications	
Communications Using Bulletin 1203 Communication Modules	B-1
Logic Control Data	B-3
Drive Status Data	B-4
Parameter Grouping/User Settings	B-5
Metering Group	B-5
Set Up Group	B-6
Advanced Set Up Group	B-7
Frequency Set Group	B-8
Feature Select Group	B-9
Output Set Up Group	B-9
Faults Group	B-9
Diagnostics Group	B-10
Masks Group	B-10
Owners Group	B-11
Adapter I/O Group	B-11
Process Display Group	B-12
“Display Units” Equivalent to Parameter Text Descriptions	B-5
Appendix C – Accessories	
Accessories	C-1
Appendix D – CE Conformity	
EMC Directive	D-1
Requirements For Conforming Installation	D-1
Filter	D-2
RFI Filter Installation	D-2
Electrical Configuration	D-3
Grounding	D-3
RFI Filter Grounding	D-3
RFI Filter Leakage Current	D-3

Table of Contents

Mechanical Configuration D-4

Index

Index I-1

Notes

Notes N-1

Information and Precautions

Chapter 1

CHAPTER OBJECTIVES

Chapter 1 provides information on the general intent of this manual, gives an overall description of the Bulletin 1305 Adjustable Frequency AC Drive (herein called “the drive”) and provides a listing of key drive options. Additionally, this chapter provides information on receiving and handling the drive.

1. MANUAL OBJECTIVES

The purpose of this manual is to provide the user with the necessary information to install, program, start up and maintain the Bulletin 1305 drive. To assure successful installation and operation, the material presented must be thoroughly read and understood before proceeding. Particular attention must be directed to the **ATTENTION** and **IMPORTANT** statements contained within.

Chapter 2 provides instructions on how to mount and wire the drive. It also describes how to operate the drive without a Human Interface Module. Read the Motor Cable Length section on pages 2-13 – 2-16, and the contact closure inputs information in the Control Terminal Block descriptions on pages 2-19 – 2-21.

Chapter 3 defines the display and control panel keys on the optional Human Interface Module. A flowchart is provided to guide the user through the key strokes of the various menu levels.

Chapter 4 describes the steps to start up the drive. It includes a typical start up routine defining the adjustments and checks to assure proper operation.

Chapter 5 outlines the parameter information of the drive such as description, number, type, units, factory default, minimum and maximum settings.

Chapter 6 defines the various drive faults and the appropriate action to take as well as general troubleshooting information.

Appendix A contains a block diagram and general specifications of the drive.

Appendix B provides the necessary information for drive set up using a PLC®, SLC™ or other logic controller. A table is provided that lists each parameter by parameter group with space for the user to record any custom parameter settings.

Appendix C lists the accessories and their catalog number.

Appendix D lists requirements for CE conformity.

Index – A comprehensive index is provided to assist the user in locating specific information. All parameters and fault information are listed alphabetically under parameters and faults respectively.

*PLC is a registered trademark of Allen-Bradley Company.
SLC is a trademark of Allen-Bradley Company.*

2.Receiving – It is the responsibility of the user to thoroughly inspect the equipment before accepting the shipment from the freight company. Check the item(s) received against the purchase order. If any items are obviously damaged, it is the responsibility of the user not to accept delivery until the freight agent has noted the damage on the freight bill. Should any concealed damage be found during unpacking, it is again the responsibility of the user to notify the freight agent. The shipping container must be left intact and the freight agent should be requested to make a visual inspection of the equipment.

Unpacking – Remove all packing material from within and around the drive.

IMPORTANT: Before the installation and start-up of the drive, a general inspection of the mechanical integrity (i.e. loose parts, wires, connections, etc.) should be made.

Inspection – After unpacking, check the item(s) nameplate catalog number against the purchase order. An explanation of the catalog numbering system for the Bulletin 1305 drive is included as an aid for nameplate interpretation. Refer to the following pages for complete nomenclature.

Storing – The drive should remain in its shipping container prior to installation. If the equipment is not to be used for a period of time, it must be stored according to the following instructions in order to maintain warranty coverage:

- Store in a clean, dry location.
- Store within an ambient temperature range of -40° to $+70^{\circ}\text{C}$.
- Store within a relative humidity range of 0% to 95%, noncondensing.
- Do not store equipment where it could be exposed to a corrosive atmosphere.
- Do not store equipment in a construction area.

3.GENERAL PRECAUTIONS

In addition to the precautions listed throughout this manual, the following statements which are general to the system must be read and understood.

The DC Bus Charge Indicator is a neon bulb that will be illuminated when power is applied to the drive.



ATTENTION: This drive contains ESD (Electrostatic Discharge) sensitive parts and assemblies. Static control precautions are required when installing, testing, or servicing this assembly. Component damage may result if ESD control procedures are not followed. If you are not familiar with static control procedures, reference A-B publication 8000-4.5.2, “*Guarding Against Electrostatic Damage*” or any other applicable ESD protection handbook.



ATTENTION: An incorrectly applied or installed drive can result in component damage or a reduction in product life. Wiring or application errors, such as, undersizing the motor, incorrect or inadequate AC supply, or excessive ambient temperatures may result in malfunction of the system.



ATTENTION: Only personnel familiar with the drive and associated machinery should plan or implement the installation, start-up and subsequent maintenance of the system. Failure to comply may result in personal injury and/or equipment damage.

CONVENTIONS USED IN THIS MANUAL

Programmer Terminal will appear as Human Interface Module or HIM.

To help differentiate parameter names, display text, and control keys from other text in this manual, the following conventions will be used:

Parameter Names	will appear in [brackets]
Display Text	will appear in “quotes”.
Control Key Names	will appear as depicted on the control key, if the key is labeled with letters or numbers (i.e., JOG, SEL) or if the key depicts an icon, its operative term appear with initial capitalization (i.e., Stop, Increment, Enter).

4. NAMEPLATE LOCATION

Figure 1.1 Bulletin 1305 Nameplate Location


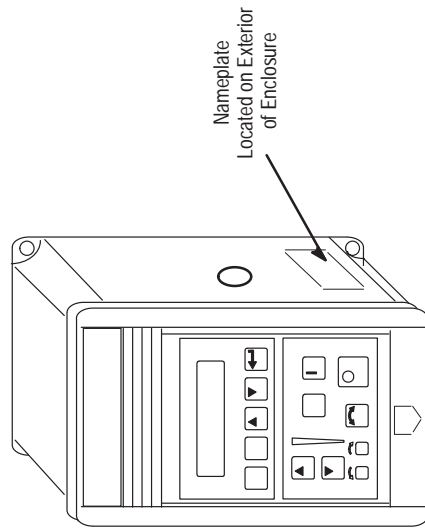


Figure 1.2 Nameplate Information

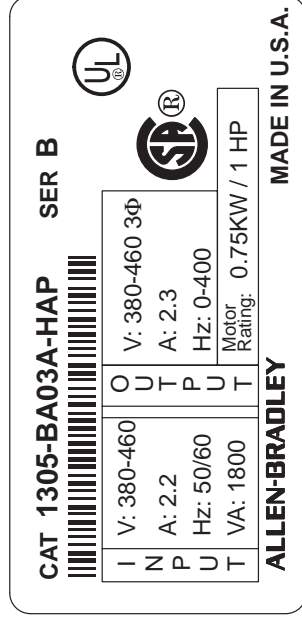

FIRMWARE COMPATIBILITY^①

Drive:	Series A, FRN 4.01 Series B, FRN 5.01, FRN 5.02, and up
HIM:	Series A, FRN 1.0 through 3.0 Series B, FRN 1.0

^① Specific Firmware versions are identified by digits to the right/left of decimal.
Example 1.01, 2.01.

Firmware version can be found on the drive carton label, on integrated circuits found on the Control Board (see Figure 2.3), or can be viewed in Drive Diagnostics (see Chapter 5).

5. CATALOG NUMBER CODE EXPLANATION

1305 - 6. First Position	A Second Position	A02 Third Position	A Fourth Position	-DE Fifth Position	-HA1 Sixth Position
Bulletin Number	Rating A 200-240V 1Ø 200-230V 3Ø B 380-460V 3Ø	Nominal Current Rating A01 A02 A03 A04 A06 A08 A09 A12	Enclosure Type Letter A Enclosure Type NEMA Type 1 (IP 30)	Options	
<p>Language Code (English language is included in base catalog number. To order a second language, add the appropriate suffix to the drive catalog number.)</p> <p>DE German ES Spanish IT Italian FR French</p>					
<p>Human Interface Modules, NEMA Type 1 (IP 30) To order installed in the drive, add the appropriate suffix to the drive catalog number.</p> <p>HAP Programmer Only HA1 HIM with Analog Speed Pot HA2 HIM with Digital Up-Down Keys</p>					

Table 1.A 7. Drive Rating and Derating Guidelines

Voltage Rating	Catalog Number IP30	Motor Rating								
		3 Ø		1 Ø		3 Ø		1 Ø		
		HP	kW	Output Current (A) ①②	HP	kW	Output Current (A) ①②	HP	kW	
200-230V 50/60 Hz	1305-AA02A	1/2	0.37	2.3	1/4	0.19	1.2	1/4	0.19	1.2
	1305-AA03A	3/4	0.55	3	1/2	0.37	2.3	1/2	0.37	2.3
	1305-AA04A	1	0.75	4.5	3/4	0.55	3	3/4	0.55	3
	1305-AA08A	2	1.5	8	1	0.75	4.5	1	0.75	4.5
	1305-AA12A	3	2.2	12 ③	2	1.5	8 ③	2	1.5	8 ③
380-460V 50/60 Hz	1305-BA01A	1/2	0.37	1.3	Not Available					1.3
	1305-BA02A	3/4	0.55	1.6	Not Available					1.6
	1305-BA03A	1	0.75	2.3	Not Available					2.3
	1305-BA04A	2	1.5	4	Not Available					4
	1305-BA06A	3	2.2	6 ④	Not Available					6 ④
	1305-BA09A	5	4.0	9 ⑤	Not Available					9 ⑤

In general:

- ① Motor Full Load Amps (FLA) should not exceed the drive output current rating.
- ② If the [PWM Frequency] is set above 4kHz, the output current must be derated per the chart on page 5-19.

When operating the drive in an ambient temperature at or near the maximum operating temperature (50°C), the following derating guidelines are recommended to guard against overheating depending on application and operating conditions. For derating guidelines at ambient temperatures between 40°C and 50°C, consult Allen-Bradley.

- ③ Output current value listed for 200V input voltage. At 230V input voltage, output current is 9.6A for 3 phase and 6.8A for single phase.
- ④ Output current value listed for 380V input voltage. At 415V input voltage, output current is 5.3A. At 460V input voltage, output current is 4.8A.
- ⑤ Output current value listed for 380V input voltage. At 415V input voltage, output current is 8.4A. At 460V input voltage, output current is 7.6A.


CHAPTER OBJECTIVES

Chapter 2 provides the information needed to properly mount and wire the drive. Since most start-up difficulties are the result of incorrect wiring, every precaution must be taken to assure that the wiring is done as instructed. All items must be read and understood before the actual installation begins.



ATTENTION: The following information is merely a guide for proper installation. The National Electrical Code and any other governing regional or local code will overrule this information. The Allen-Bradley Company cannot assume responsibility for the compliance or the noncompliance to any code, national, local or otherwise for the proper installation of this drive or associated equipment. A hazard of personal injury and/or equipment damage exists if codes are ignored during installation.

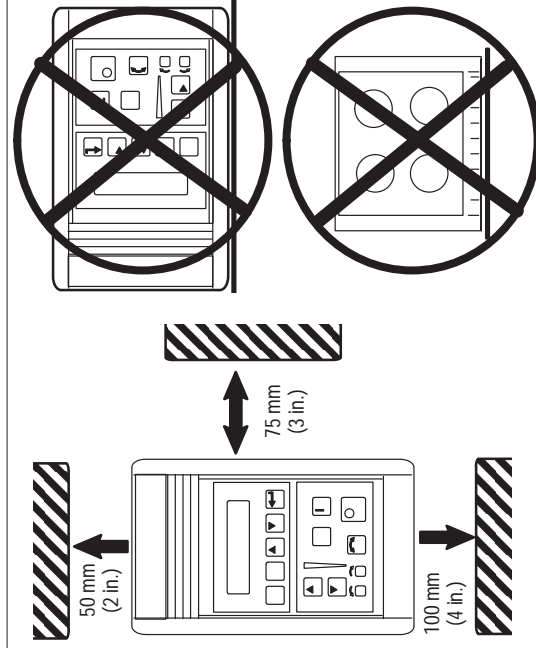
Figure 2.1 Mounting Requirements



IMPORTANT: The drive must be mounted to a metallic surface.

Figure 2.2 Bulletin 1305 Approximate Dimensions

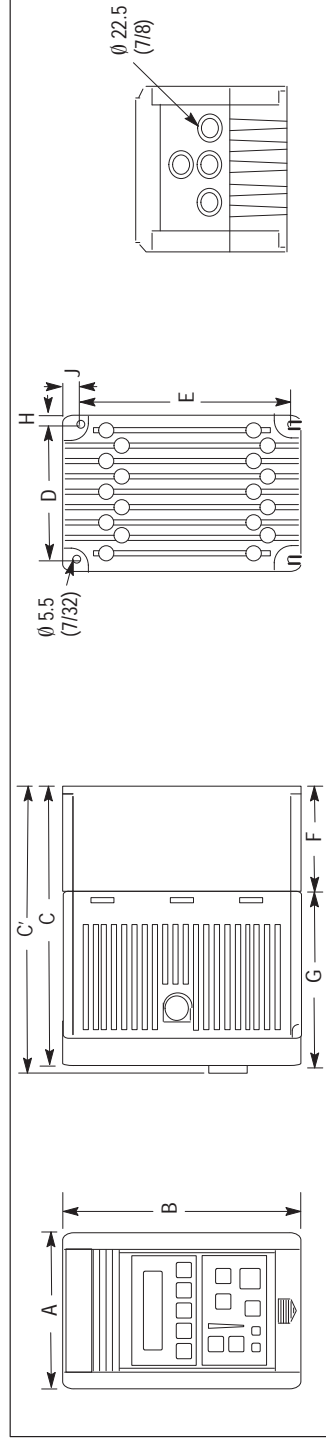Dimensions shown in millimeters (inches). Shipping weights shown in kilograms (pounds).




200/230 V Cat. No. 1305-	380/460 V Cat. No. 1305-	A Width	B Height	C Depth w/o Pot	C' Depth w/ Pot	D	E	F	G	H	J	Approx. Ship Wt.
AA02A AA03A		120 (4-23/32)	195 (7-11/16)	122 (4-13/16)	127.1 (5)	110 (4-11/32)	180 (7-1/16)	9 (11/32)	113 (4-7/16)	5 (7/32)	7.5 (5/16)	1.6 (3.5)
AA04A		120 (4-23/32)	195 (7-11/16)	140 (5-1/2)	145.1 (5-23/32)	110 (4-11/32)	180 (7-1/16)	27 (1-1/16)	113 (4-7/16)	5 (7/32)	7.5 (5/16)	1.9 (4.2)
AA08A	BA01A BA02A BA03A BA04A BA06A	170 (6-11/16)	195 (7-11/16)	179 (7-1/16)	184.1 (7-1/4)	160 (6-5/16)	180 (7-1/16)	66 (2-19/32)	113 (4-7/16)	5 (7/32)	7.5 (5/16)	3.6 (8.0)
AA12A	BA09A	210 (8-1/4)	195 (7-11/16)	179 (7-1/16)	184.1 (7-1/4)	200 (7-7/8)	180 (7-1/16)	66 (2-19/32)	113 (4-7/16)	5 (7/32)	7.5 (5/16)	4.2 (9.2)

TERMINAL BLOCK ACCESS

To access the power and control terminal blocks, perform the following procedure:


1. Remove power from the drive.
2. Lower the hinged panel located below the HIM or blank front panel.
3. For drives equipped with a blank front panel, slide the panel downward and remove it from the drive. Skip to Step 5.
4. For drives equipped with a HIM, press the retaining lever directly beneath the HIM and slide the HIM downward to remove it from drive.
5. Remove the front cover by grasping the upper corners of the cover and pulling the cover to a 90-degree angle to the drive. Lift the cover off.

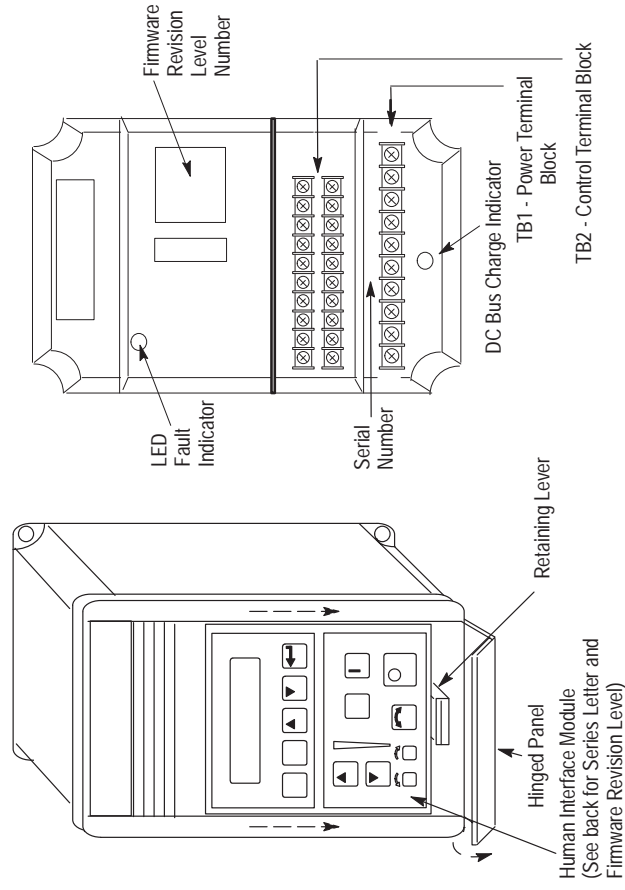Figure 2.3 Terminal Block Access



ATTENTION: Proceed with caution. A DC Bus Voltage may be present at the Power Terminal Block (TB1) even when power is removed from the drive.

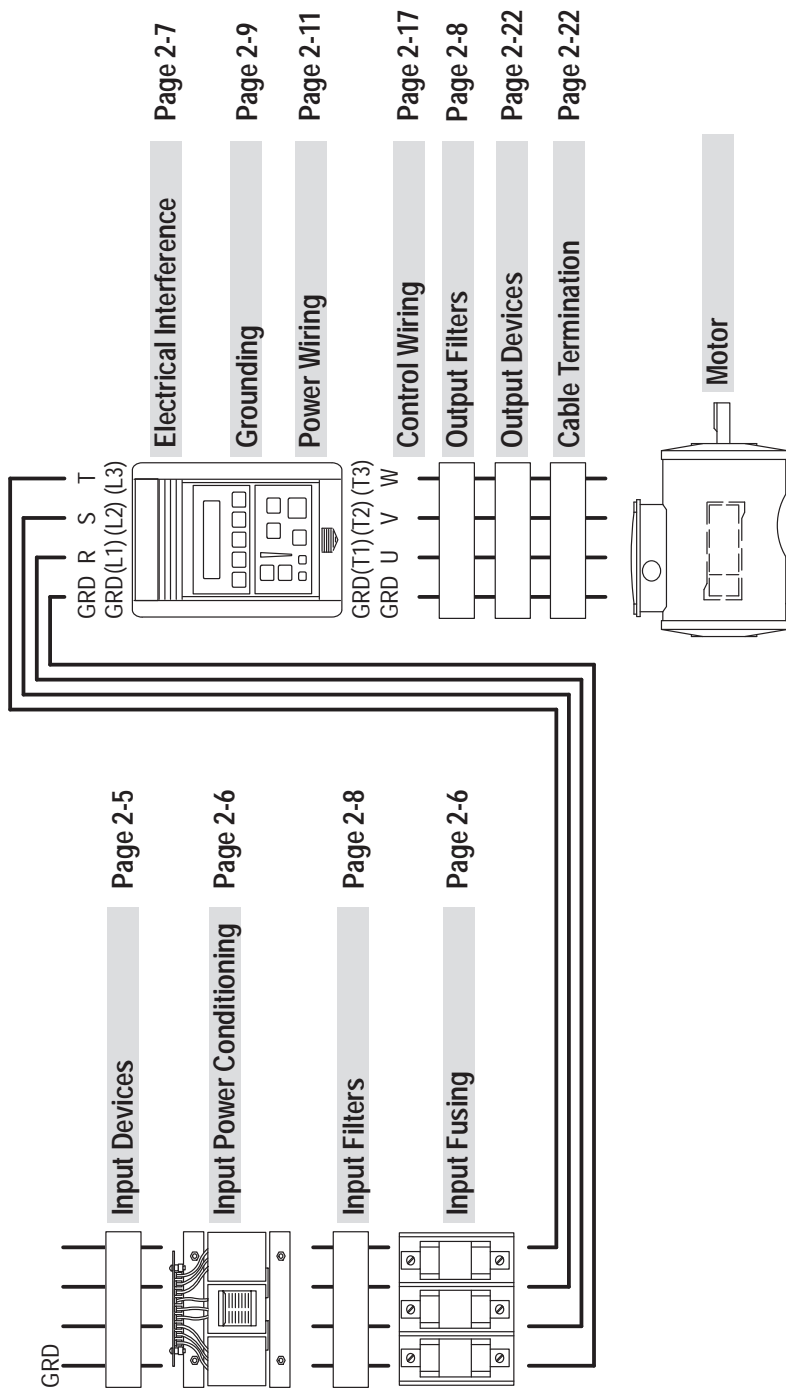Figure 2.4 Installation Guidelines



AB0515A

INPUT DEVICES

Starting and Stopping the Motor



ATTENTION: The drive start/stop control circuitry includes solid-state components. If hazards due to accidental contact with moving machinery or unintentional flow of liquid, gas or solids exist, an additional hardwired stop circuit is required to remove AC line power to the drive. When AC input power is removed, there will be a loss of inherent regenerative braking effect and the motor will coast to a stop. An auxiliary braking method may be required.

Repeated Application/Removal of Input Power



ATTENTION: The drive is intended to be controlled by control input signals that will start and stop the motor. A device that routinely disconnects then reapplies line power to the drive (input contactor, etc.) for the purpose of starting and stopping the motor should not be used. If it is necessary to use this method for starting and stopping or if frequent cycling of power is unavoidable, make sure that it does not occur more than once a minute.

Input Contactor



ATTENTION: An incorrectly applied or installed system can result in component damage or reduction in product life. Follow these recommendations for application of an input contactor to a 1305 drive.

Normal Operation: After the input contactor is closed, the enable, start, and stop signals may be applied. These control signals must be removed before opening the input contactor. The input contactor must not be opened and closed more than once a minute.

Bypass Contactors



ATTENTION: An incorrectly applied or installed system can result in component damage or reduction in product life. The most common causes are:

- Wiring AC line to drive output or control terminals.
- Improper voltage placed on control terminals.
- Improper bypass or output circuits not approved by Allen-Bradley.
- Output circuits which do not connect directly to the motor.
- Incorrect or inadequate AC supply.
- Excessive ambient temperature.

Contact Allen-Bradley for assistance with application or wiring.

INPUT POWER CONDITIONING

The drive is suitable for direct connection to a correct voltage, single phase or three-phase, AC power line. However, there are certain power line conditions which may introduce the possibility of drive input power component malfunction. To reduce the possibility of these malfunctions, a line reactor or isolation type transformer with an input impedance of 3% of the drive input VA rating may be required.

The basic rules for determining if a line reactor or isolation type transformer is required are as follows:

1. If the AC line supplying the drive has power factor correction capacitors that are switched in and out, installing an AC line reactor or isolation type transformer between the capacitor bank and the drive input may be required. Damage to drives can occur from the extreme current spikes caused by capacitor switching.
2. If the AC line frequently experiences transient power interruptions or significant voltage spikes, an AC line reactor or isolation type transformer may be required. Damage to drives can occur from extreme current spikes.

INPUT FUSING



ATTENTION: The drive does not provide branch circuit protection. Specifications for the recommended fuse size and type which provide branch circuit protection against short circuits are provided in Table 2.A. Branch circuit breakers or disconnect switches cannot provide this level of protection for drive components.

Table 2.A Maximum Recommended AC Input Line Fuse UL Class J, T, CC, or BS88 (or equivalent)

3Ø Rating kW (HP)	1Ø Rating kW (HP)	Fuse 200-230V Rating	Fuse 380-460V Rating
.37 (1/2)	.19 (1/4)	6	3 ^①
.55 (3/4)	.37 (1/2)	6	3 ^①
.75 (1)	.55 (3/4)	10	6 ^②
1.5 (2)	.75 (1)	15	10 ^②
2.2 (3)	1.5 (2)	25	15 ^②
4.0 (5)	---	---	20 ^②

① Must be dual element time delay, Bussmann LPJ or equivalent.

② If fuse blowing is a problem, use dual element type fuses.

ELECTRICAL INTERFERENCE – EMI/RFI

Immunity

The 1305 drive is designed for immunity to most externally generated interference. Usually, no special precautions are required beyond the installation practices provided in this publication.

It is recommended that the coils of DC energized contactors associated with drives be suppressed with a diode or similar device, since they can generate severe electrical transients.

In areas subject to frequent lightning strikes, additional surge suppression is advisable.

Emission

Careful attention must be given to the arrangement of power and ground connections to the drive to avoid interference with nearby sensitive equipment. The cable to the motor carries switched voltages and should be routed well away from sensitive equipment.

The ground conductor of the motor cable should be connected to the drive ground (GRD) terminal directly. Connecting this ground conductor to a cabinet ground point or ground bus bar may cause high frequency current to circulate in the ground system of the enclosure. The motor end of this ground conductor must be solidly connected to the motor case ground.

Shielded or armored cable may be used to guard against radiated emissions from the motor cable. The shield or armor should be connected to the drive ground terminal and the motor ground as outlined in the Grounding section of this Installation chapter.

Common mode chokes are recommended at the drive output to reduce the common mode noise.

An RFI filter can be used and in most situations provides an effective reduction of RFI emissions that may be conducted into the main supply lines.

If the installation combines a drive with sensitive devices or circuits, it is recommended that the lowest possible drive PWM frequency be programmed.

RFI FILTERING

1305 drives can be installed with an RFI filter, which controls radio-frequency conducted emissions into the main supply lines and ground wiring.

If the cabling and installation recommendation precautions described in this manual are adhered to, it is unlikely that interference problems will occur when the drive is used with conventional industrial electronic circuits and systems.

However, a filter is recommended if there is a likelihood of sensitive devices or circuits being installed on the same AC supply or if the motor cable exceeds 75 meters (250 feet). Beyond this length, capacitance to ground will increase the supply emissions.

Where it is essential that very low emission levels must be achieved or if conformity with standards is required the optional RFI filter should be used. Refer to Appendix D and instructions included with the filter for installation and grounding information.

RFI Filter Leakage Current

The optional RFI filter may cause ground leakage currents. Therefore a solid ground connection must be provided.



ATTENTION: To guard against possible equipment damage, RFI filters can only be used with AC supplies that are nominally balanced with respect to ground. In some installations, three-phase supplies are occasionally connected in a 3-wire configuration with one phase grounded (Grounded Delta). The filter must not be used in Grounded Delta supplies.

CE Conformity

Refer to Appendix D.

GROUNDING

Refer to the grounding diagram on the following page. The drive must be connected to system ground at the power ground (GRD) terminal provided on the power terminal block (TB1). Ground impedance must conform to the requirements of national and local industrial safety regulations (NEC, VDE 0160, BSI, etc.) and should be inspected and tested at appropriate and regular intervals. In any cabinet, a single, low-impedance ground point or ground bus bar should be used. All circuits should be grounded independently and directly. The AC supply ground conductor should also be connected directly to this ground point or bus bar.

Sensitive Currents

It is essential to define the paths through which the high frequency ground currents flow. This will assure that sensitive circuits do not share a path with such current, and to minimize the area enclosed by these paths. Current carrying ground conductors must be separated. Control and signal ground conductors should not run near or parallel to a power ground conductor.

Motor Cable

The ground conductor of the motor cable (drive end) must be connected directly to the ground terminal, not to the enclosure bus bar. Grounding directly to the drive (and filter, if installed) provides a direct route for high frequency current returning from the motor frame and ground conductor. At the motor end,

the ground conductor should also be connected to the motor case ground. If shielded or armored cables are used, the same grounding methods should be used for the shield/armor as well.

Discrete Control and Signal Wiring

DO NOT connect drive Common terminals (TB2) to ground. DO NOT switch these inputs using non-isolated TTL type circuits. Use dry relay contacts to switch signal inputs to Common. Only isolated 4-20mA sources are recommended. There must be no ground potential difference between source and drive.


Safety Ground

This is the safety ground required by code. The ground bus can be connected to adjacent building steel (girder, joist) or a floor ground loop, provided grounding points comply with NEC regulations.

RFI Filter

IMPORTANT: Using an optional RFI filter may result in relatively high ground leakage currents. The filter must be permanently installed and solidly grounded. Grounding must not rely on flexible cables and should not include any form of plug or socket that would permit inadvertent disconnection. The integrity of this connection should be periodically checked.

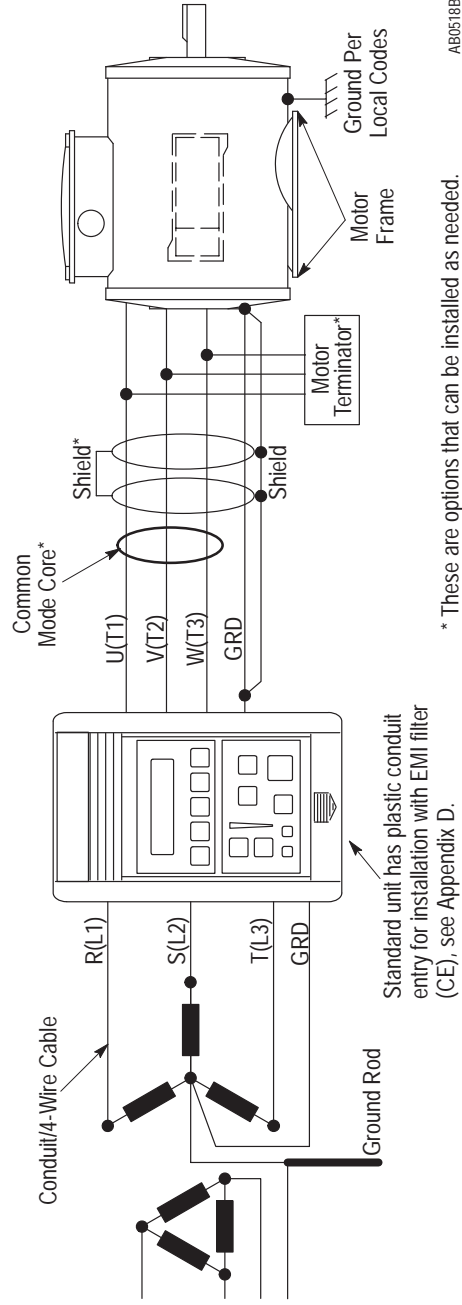Figure 2.5 Recommended 1305 Grounding for Installation Without EMI Filter (Non-CE)




* These are options that can be installed as needed.

AB0518B

POWER WIRING

Input and output power connections are performed through a ten position terminal block, TB1 (see page 2-3 for location).

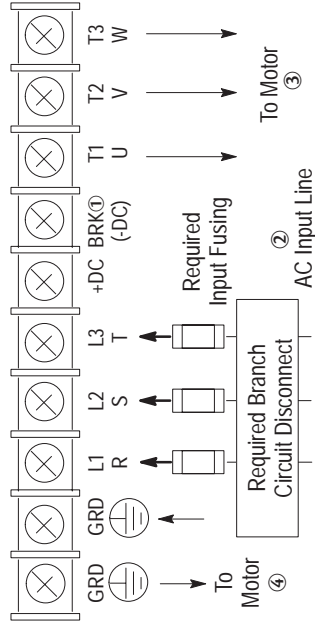Figure 2.6 Power Terminal Block Designations (TB1)



- ① Connection for Dynamic Brake Resistors for all models except the 200-230 Volt, 0.37 to 0.75 kW (1/2 to 1 HP) drive. **IMPORTANT:** The [DB Enable] parameter must be enabled for proper operation.
- ② For single phase applications, the AC input line can be connected to any two of the three input terminals R, S, T (L1, L2, L3).
- ③ Bulletin 1305 drives are UL and cUL listed, and CSA certified as a motor overload protective device. An external overload relay is not required for single motor applications. **IMPORTANT:** This drive is not intended for use with single phase motors.
- ④ Ground from drive to motor frame must be an independent continuous insulated wire run.

Table 2.B Power Block Terminal (TB1)

Terminals	Description
GRD	Earth Ground
R, S, T (L1, L2, L3)	AC Input Line Terminals
+DC, BRK (or -DC)	Dynamic Brake Option - Refer to instructions included with option
U, V, W (T1, T2, T3)	Motor Connection

Table 2.C Screw Size, Wire Size and Torque Specifications

Terminal	Screw Size	Max./Min. Wire Size mm ² (AWG)	Maximum Torque N-m (lb-ins.)
TB1 (0.37 to 0.75kW/1/2 to 1 HP)	M4	3.5/0.75 (12/18)	0.90 (8)
TB1 (All except above)	M4	4/0.75 (10/18)	1.81 (16)
TB2 (All)	M3.5	1.5/0.20 (14/24)	0.90 (8)

Motor Cables

A variety of cable types are acceptable for drive installations. For many installations, unshielded cable is adequate, provided it can be separated from sensitive circuits. As an approximate guide, allow a spacing of 1 meter (3.3 feet) for every 10 meters (33 feet) of length. In all cases, long parallel runs must be avoided.

The cable should be 4-conductor with the ground lead being connected directly to the drive ground terminal (GRD) and the motor frame ground terminal.

Shielded Cable

Shielded cable is recommended if sensitive circuits or devices are connected or mounted to the machinery driven by the motor. The shield must be connected to the drive ground and motor frame ground. The connection must be made at both ends to minimize the external magnetic field.

If cable trays or large conduits are to be used to distribute the motor leads for multiple drives, shielded cable is recommended to reduce or capture the noise from the motor leads and minimize “cross coupling” of noise between leads of different drives. The shield should be connected to the ground connections at both the motor and drive end.

Armored cable also provides effective shielding. Ideally, it should be grounded only at the drive (GRD) and motor frame. Some armored cable has a PVC coating over the armor to prevent incidental contact with grounded structure. If, due to the type of connector, the armor must be grounded at the cabinet entrance, shielded cable should be used within the cabinet to continue as far as possible to the coaxial arrangement of power cable and ground.

In some hazardous environments it is not permissible to ground both ends of the cable armor. This is because of the possibility of high current circulating at the input frequency if the ground loop is cut by a strong magnetic field. This only applies in the proximity of powerful electrical machines. In such case, the ground connection at one end may be made through a capacitance, which will block the frequency current but present a low impedance to RF. Because of the highly pulsed nature of the circulating current, the capacitor type used must be rated for AC-to-ground voltage. Consult factory for specific guidelines.

Conduit

If metal conduit is preferred for cable distribution, the following guidelines must be followed.

1. Drives are normally mounted in cabinets and ground connections are made at a common ground point in the cabinet. If the conduit is connected to the motor junction box and at the drive end, no further conduit connections are necessary.
2. No more than three sets of motor leads can be routed through a single conduit. This will minimize “cross talk” that could reduce the effectiveness of the noise reduction methods described. If more than three drive/motor connections per conduit are required, shielded cable as described above must be used. If practical, each conduit should contain only one set of motor leads.



ATTENTION: To avoid a possible shock hazard caused by induced voltages, unused wires in the conduit must be grounded at both ends. For the same reason, if a drive sharing a conduit is being serviced or installed, all drives using this conduit should be disabled. This will eliminate the possible shock hazard from “cross coupled” drive motor leads.

Motor Lead Lengths

Installations with long cable lengths between the 1305 drive and motor may require the use of an output reactor or Terminator. The following guidelines allow for selection of the appropriate drive HP rating (and output reactor or Terminator, if required) to work with an existing motor, and provide motor-lead length solutions for new installations.

Voltage doubling at motor terminals, known as reflected wave phenomenon, standing wave or transmission line effect, can occur when using long motor cables with drives. Long motor cables can cause capacitive charging current in excess of the rating of a smaller drive. To ensure proper installation, follow the guidelines provided.

All cabling and distances are based on using 14 AWG, 4-conductor type cabling.

In general, motors designed and built without phase separating insulation paper between motor windings should be classified as 1000Vp-P insulation design.

Section A: No Output Reactor or Terminator

Table 2.D lists the maximum cable lengths permitted when applying a 460V, 1305 drive to a 460V motor for motor insulation ratings of 1000V, 1200V, and 1600V without an output reactor or Terminator. Shielded and unshielded maximum cable lengths also are listed. Tables are based on operation at nominal line condition (480V).

1000V and 1200V Motor Insulation Ratings: Cable lengths listed in Table 2.D are for operating the 1305 drive at a maximum carrier frequency of 4 kHz on motor insulation ratings of 1000V and 1200V. Consult the factory regarding operation above 4 kHz carrier frequency. Multiply listed distances by 0.85 for operation at high line conditions (above 480V). If the maximum cable length used exceeds the distances indicated, refer to Section B.

1600V Motor Insulation Ratings: Cable lengths listed in Table 2.D are based on operating the 1305 drive at a maximum carrier frequency of 2 kHz on motor insulation ratings of 1600V. Consult the factory regarding operation above 2 kHz carrier frequency. Multiply listed distances by 0.55 for operation at high line conditions (above 480V). If the maximum cable length used exceeds the distances indicated, refer to Section B.

The Allen-Bradley 1329-HR is representative of 1600VPP insulation rating designs and is recommended in applications where long cable lengths are required.

Table 2.D Maximum Motor Cable Length Restrictions

Drive HP (460V)	Motor HP (460V)	No External Devices or Reactor at the Motor			
		Using a Motor with Insulation V _{FP} P			
		1000 Volt	1200 Volt	1600 Volt 1329 HR	
		Any Cable	Any Cable	Shielded Cable	Unshielded Cable
	Maximum Carrier Frequency	4 kHz	4 kHz	2 kHz	2 kHz
	High-Line Derate Multiplier	0.85	0.85	0.55	0.55
5	5	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	3	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	2	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	1	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	0.5	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
3	3	9m (30ft)	30m (100ft)	91m (300ft)	121m (400ft)
	2	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	1	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	0.5	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	2	9m (30ft)	30m (100ft)	76m (250ft)	121m (400ft)
2	2	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	0.5	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	1	9m (30ft)	30m (100ft)	68m (225ft)	121m (400ft)
	0.5	9m (30ft)	30m (100ft)	121m (400ft)	121m (400ft)
	0.5	9m (30ft)	30m (100ft)	45m (150ft)	106m (350ft)

Section B: Use of Output Reactor or Terminator

For longer motor-lead length applications, an output reactor or Terminator is required to ensure proper drive operation, and for the motor to operate within its specified insulation rating. The guidelines in Table 2.E are required for proper drive and motor operation, or motor designs without phase-separating insulation paper between motor windings.

Applications with non-inverter duty rated motors, with long lead lengths, require an output reactor or Terminator. An output reactor or Terminator helps reduce voltage reflection to the motor to levels which are less than the motor insulation rating.

Table 2.E lists maximum cable lengths that can be run when using an output reactor, or one of two available Terminators, for motor insulation ratings of 1000V, 1200V, and 1600V. Shielded and unshielded maximum cable lengths also are listed.

When an output reactor is required, locate the reactor at the drive if possible. Consult the factory for applications which require mounting the reactor at the motor.

1000V and 1200V Motor Insulation Ratings: Cable lengths listed in Table 2.E are for operating the 1305 drive at a maximum carrier frequency of 2 kHz on motor insulation ratings of 1000V and 1200V when used with an output reactor or Terminator. Consult the factory regarding operation above 2 kHz carrier frequency. Multiply listed distances by 0.85 for operation at high line conditions (above 480V).

1600V Motor Insulation Ratings: Cable lengths listed in Table 2.E are based on operating the 1305 drive at a maximum carrier frequency of 2 kHz on motor insulation ratings of 1600V. Consult the factory regarding operation above 2 kHz carrier frequency.

The Allen-Bradley 1329-HR is representative of 1600V_{P-P} insulation rating designs and is recommended in applications where long cable lengths are required.

Example: An existing installation includes a 2 HP, 1200V motor with a 84-meter (275-foot) cable-length requirement between the 1305 drive and the motor. What are the possible solutions to this installation?

1. Table 2.D indicates that either an output reactor or a Terminator is required for this installation example. Consult Table 2.E for output reactor, Terminator, and cable types.
2. Table 2.E suggests these possible solutions:
 - Install a 1305 2-HP drive with an output reactor installed at the drive, and use unshielded cable.
 - Install a 1305 3-HP drive with an output reactor installed at the drive, and use shielded or unshielded cable.
 - Install a 1305 2-HP drive with a 1204-TFA1 Terminator, and use shielded or unshielded cable.

Contact Allen-Bradley for further assistance if required.

Table 2.E Maximum Motor Cable Length

Drive HP (460V)	Motor HP (460V)	Reactor ^① at the Drive				With 1204-TFB2 Terminator		With 1204-TFA1 Terminator				
		Using a Motor with Insulation Vp-p 1200 Volt or 1600 Volt		Using a Motor with Insulation Vp-p 1000 Volt or 1200 Volt		Using a Motor with Insulation Vp-p 1000 Volt		Using a Motor with Insulation Vp-p 1200 Volt				
		Any Cable	Shielded	Unshielded	Shielded	Unshielded	Shielded	Unshielded	Shielded	Unshielded	Shielded	Unshielded
Maximum Carrier Frequency		2 kHz	2 kHz	2 kHz	2 kHz	2 kHz	2 kHz	2 kHz	2 kHz	2 kHz	2 kHz	2 kHz
	High-Line Derating Multiplier	0.85	0.85	0.85	0.85	0.85	0.85	0.85	0.85	0.85	0.85	0.85
5	5	15m (50ft)	182m (600ft)	182m (600ft)	NR	NR	NR	91m (300ft)	61m (200ft)	91m (300ft)	61m (200ft)	121m (400ft)
	3	15m (50ft)	182m (600ft)	182m (600ft)	91m (300ft)	121m (400ft)	121m (400ft)	99m (325ft)	61m (200ft)	152m (500ft)	152m (500ft)	121m (400ft)
	2	15m (50ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	99m (325ft)	61m (200ft)	182m (600ft)	182m (600ft)	121m (400ft)
	1	15m (50ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	99m (325ft)	61m (200ft)	182m (600ft)	182m (600ft)	121m (400ft)
3	0.5	15m (50ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	99m (325ft)	61m (200ft)	182m (600ft)	182m (600ft)	121m (400ft)
	3	15m (50ft)	91m (300ft)	182m (600ft)	NR	NR	NR	91m (300ft)	61m (200ft)	91m (300ft)	61m (200ft)	121m (400ft)
	2	15m (50ft)	182m (600ft)	182m (600ft)	182m (600ft)	121m (400ft)	121m (400ft)	99m (325ft)	61m (200ft)	152m (500ft)	152m (500ft)	121m (400ft)
	1	15m (50ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	182m (600ft)	99m (325ft)	61m (200ft)	182m (600ft)	182m (600ft)	121m (400ft)
2	0.5	15m (50ft)	182m (600ft)	182m (600ft)	121m (400ft)	182m (600ft)	182m (600ft)	99m (325ft)	61m (200ft)	182m (600ft)	182m (600ft)	121m (400ft)
	2	15m (50ft)	76m (250ft)	167m (550ft)	NR	NR	NR	91m (300ft)	61m (200ft)	91m (300ft)	61m (200ft)	121m (400ft)
	1	15m (50ft)	182m (600ft)	182m (600ft)	61m (200ft)	61m (200ft)	61m (200ft)	99m (325ft)	61m (200ft)	121m (400ft)	121m (400ft)	121m (400ft)
	0.5	15m (50ft)	182m (600ft)	182m (600ft)	91m (300ft)	121m (400ft)	121m (400ft)	99m (325ft)	61m (200ft)	152m (500ft)	152m (500ft)	121m (400ft)
1	1	15m (50ft)	68m (225ft)	152m (500ft)	NR	NR	NR	45m (150ft)	61m (200ft)	45m (150ft)	61m (200ft)	76m (250ft)
	0.5	15m (50ft)	121m (400ft)	182m (600ft)	NR	NR	NR	76m (250ft)	61m (200ft)	76m (250ft)	61m (200ft)	121m (400ft)
0.5	0.5	15m (50ft)	45m (150ft)	106m (350ft)	NR	NR	NR	NR	NR	NR	NR	NR

NR = Not Recommended.

① **IMPORTANT:** A 3% reactor reduces motor stress but may cause a degradation of motor waveform quality. Reactors must have a turn-to-turn insulating rating of 2100 volts or higher. Reactors are not recommended for lightly loaded applications because overvoltage trips may result at low output frequencies.

DRIVE OPERATION WITHOUT A HUMAN INTERFACE MODULE (HIM)

Bulletin 1305 drives are functional without the use of the Human Interface Module (HIM). All control functions can be performed from the control terminal block (TB2). See Figure 2.5 for control descriptions. Programming must be performed using a HIM or PLC Remote I/O function. If operating without a HIM, you must use an external Frequency Source on TB2.

Frequency Source

To control frequency from the control terminal block (TB2) an input is required to SW3 at TB2. The input to SW3 changes the frequency source from **[Freq Select 1]** to **[Freq Select 2]**. The factory default setting for **[Freq Select 2]** is the “Remote Pot”. If a 0 – 10 Volt or 4 – 20mA frequency source is required, then the **[Freq Select 1]** or **[Freq Select 2]** parameters must be programmed to select that source. These parameters can be programmed using the optional Human Interface Module or through serial communications when using an optional Bulletin 1203 Communication Module. See Appendix C for catalog numbers of these accessories.

Refer to Chapter 5 for the factory default settings for all parameters. Special attention should be paid to Table 5.A on page 5-29 and Table 5.B on page 5-30. These tables demonstrate what frequency source and accel and decel parameters can be selected based on the inputs to SW1, SW2 and SW3 at TB2.

CONTROL WIRING

IMPORTANT: All common terminals are tied together within the drive and internally connected to chassis ground. Recommended practice is to run all signal wiring in separate steel conduit.



ATTENTION: Drive can be permanently damaged if any EXTERNAL control voltage is applied to terminals 5 – 8 and 11 – 18. DO NOT connect drive Common terminals (TB2) to ground. DO NOT switch these inputs using non-isolated TTL type circuits. Use dry relay contacts to switch signal inputs to Common. Only isolated 4-20mA sources are recommended. There must be no ground potential difference between source and drive.

The factory default control wire scheme is “3 Wire” control. The **[Input Mode]** parameter can be used to program the drive to operate using a two wire “Run Forward/Run Reverse” control wire scheme. Refer to Chapter 4, Step 10 for programming instructions. Figures 2.7 through 2.10 show the wiring diagrams for the different input modes.

IMPORTANT: If the **[Input Mode]** is changed, power must be cycled to the drive for the change to take effect. The Start and Reverse functions operate differently for the two different modes.

Three Wire Control

When using this control scheme, the factory default for the reverse function is controlled from TB2. To enable Reverse operation from the HIM or other serial communication adapters, Bit 0 of the **[Direction Mask]** parameter must be changed from “1” to a “0”. See page 5-48. See Chapter 5 for general programming instructions.

Two Wire “Run Forward/Run Reverse” Control

To use a two wire “Run Forward/Run Reverse” control scheme, Bit 0 of the **[Direction Mask]** must be set to a “1.” For proper operation of the “Run Forward/Run Reverse” mode, install a jumper across terminals 7 and 8 (Stop) and terminals 11 and 12 (Enable).

3W/2nd Acc and Run F/R 2nd A Control

The HIM module is limited in the number of characters in the LCD display. Definitions of these functions are as follows. Refer to Chapter 5, Table 5.A for configuration of switches or inputs to TB2.

3w/2nd Acc = Three Wire, 2nd Acceleration

Run F/R 2nd A = Run Forward/Reverse, 2nd Acceleration

MOP Function

The MOP function is a digital solid-state circuit that produces the same effect as rotating a speed reference potentiometer with a small DC motor. This permits local (HIM) or remote (TB2) control of the command frequency.

IMPORTANT: The drive can still be started from any adapter (HIM or a serial device) and will run at the last commanded direction unless the start, jog and reverse functions of that adapter have been disabled (See **[Start Mask]**, **[Direction Mask]** and **[Jog Mask]**). See page 5-48 and 5-49.

IMPORTANT:A stop command can be issued from any adapter at all times.

IMPORTANT:If a Jog is initiated, the drive will Jog in the direction last traveled.



ATTENTION: Use of the JOG terminal requires a Bulletin 1201 Human Interface Module or other Device connection to a drive port, otherwise, improper operation will occur with Bulletin 1305 firmware FRN 2.01 or lower.

Figure 2.7 Terminal Block (TB2) Designations
 [Input Mode] = “Three Wire” or [Input Mode]=“3 w/2nd Acc.”


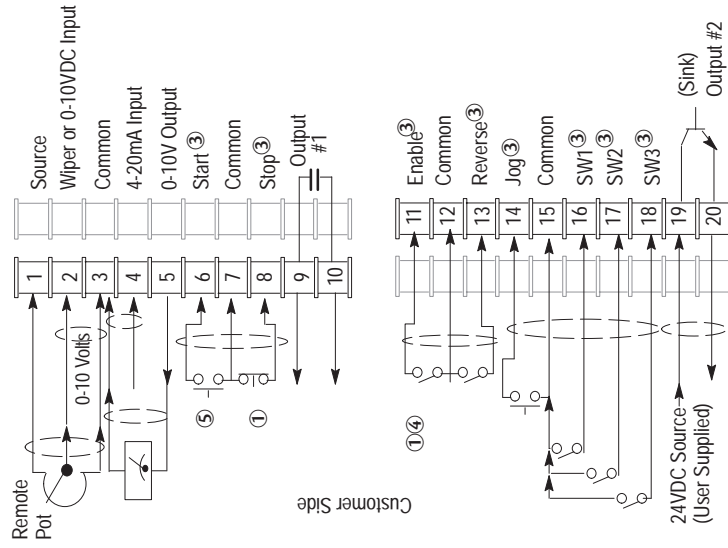


Figure 2.8 Terminal Block (TB2) Designations – Two Wire
 Control Operation
 [Input Mode]=“Run Fwd/Rev” or [Input Mode]=“Run F/R 2nd A”

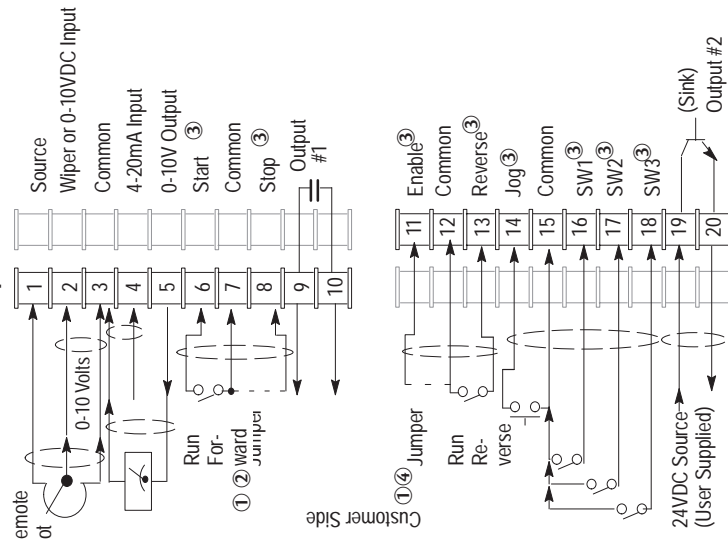

See Table 2.F and notes on page 2-21.

Figure 2.9 Terminal Block (TB2) Designations [Input Model] = “3 Wire/MOP”


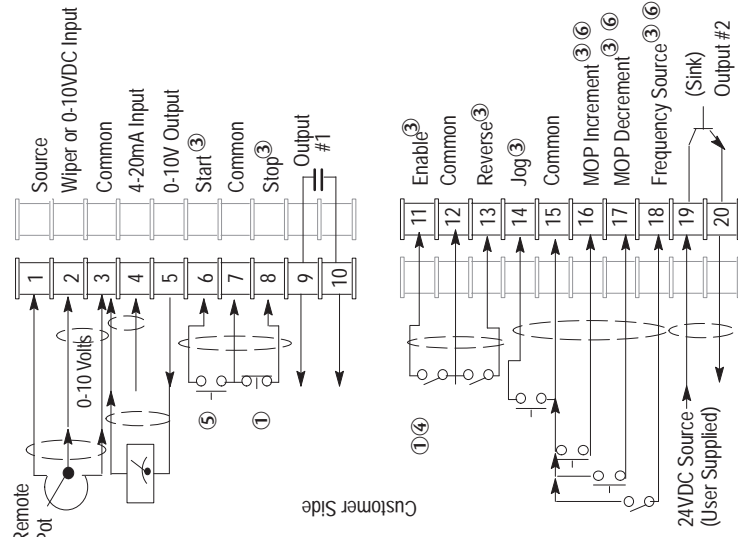


Figure 2.10 Terminal Block (TB2) Designations – Two Wire Control Operation [Input Model] = “Run F/R MOP”

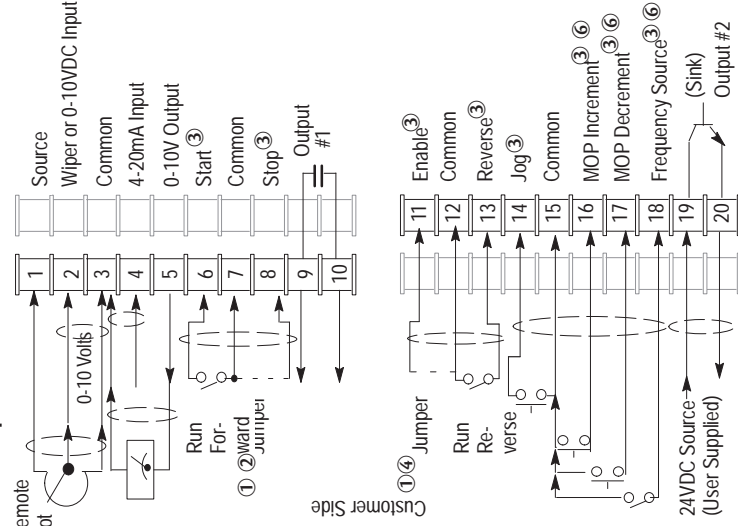

See Table 2.F and notes on page 2-21.

Table 2.F Control Terminal Block (TB2) Descriptions

Terminal No(s)	Signal	Specification
1, 2, 3	External Speed Pot	10 k Ω Potentiometer, 2 Watts
2,3	0-10V Analog Input	Drive Input Impedance = 100 k Ω
4,3	4-20mA Analog Input	Drive Input Impedance = 250 Ω
5, 3	0-10V Analog Output	Meter Impedance \geq 4 k Ω
6, 7	Start	Contact Closure Input ③
8, 7	Stop	Contact Closure Input ③
9, 10	Programmable Output 1	Resistive Rating = 115 VAC/30 VDC, 5A Inductive Rating = 115 VAC/30 VDC, 2A
11, 12	Drive Enable	Contact Closure Input ③④
13, 12	Reverse	Contact Closure Input ③
14, 15	Jog	Contact Closure Input ③
16, 15	SW1	Contact Closure Input ③
17, 15	SW2	Contact Closure Input ③
18, 15	SW3	Contact Closure Input ③
19, 20	Programmable Output 2	24V DC \pm 20%, 50 mAmps Max. (Sink)

The recommended control signal wire is:

- Belden 8760 (or equiv.) - 18 AWG (0.750 mm²), twisted pair, shielded.
- Belden 8770 (or equiv.) - 18 AWG (0.750 mm²), 3 conductor, shielded.
- Belden 9460 (or equiv.) - 18 AWG (0.750 mm²), twisted pair, shielded.

IMPORTANT: Control inputs to two or more drives should NOT be connected in parallel.

Recommended practice is to run all signal wiring in a separate steel conduit. The shield wire must only be connected at the drive.



ATTENTION: Use of the JOG terminal requires a Bulletin 1201 Human Interface Module or other Device connection to a drive port, otherwise, improper operation will occur with Bulletin 1305 firmware FRN 2.01 or lower.



ATTENTION: Signal common is internally connected to chassis ground. Do not use cable shields as signal current paths.

Notes:

- ① Required to operate drive. STOP also used to clear a fault.
- ② Use HIM Stop button to clear faults.
- ③ Contact Closure Input. Internal 5V supply. DO NOT apply external voltage.
- ④ When the ENABLE signal is lost, the drive output immediately shuts off and the motor will coast to a stop.
- ⑤ A Start command will override any Jog command.
- ⑥ See Table 5.C on Page 5-32 for more information.

OUTPUT DEVICES

Drive Output Disconnection



ATTENTION: Any disconnecting means wired to drive output terminals U, V and W must be capable of disabling the drive if opened during drive operation. If opened during drive operation, the drive will continue to produce output voltage between U, V, W. An auxiliary contact must be used to simultaneously disable the drive or output component damage may occur.

CABLE TERMINATION

Optional Cable Terminator

Voltage doubling at motor terminals, known as reflected wave phenomenon, standing wave or transmission line effect, can occur when using drives with long motor cables.

Inverter duty motors with phase-to-phase insulation ratings of 1600 volts or higher should be used to minimize effects of reflected wave on motor insulation life.

Applications with non-inverter duty motors or any motor with exceptionally long leads may require an output inductor or cable terminator. An inductor or terminator will help limit reflection to the motor, to levels which are less than the motor insulation value.

Table 2.D lists the maximum recommended cable length for unterminated cables, since the voltage doubling phenomenon occurs at different lengths for different drive ratings. If your installation requires longer motor cable lengths, a reactor or cable terminator is recommended.

Optional Output Reactor

The reactors listed in Catalog A111 can be used for the drive input and output. These reactors are specifically constructed to accommodate IGBT inverter applications with switching frequencies up to 20 kHz. They have a UL-approved dielectric strength of 4000 volts, opposed to a normal rating of 2500 volts. The first two and last two turns of each coil are triple insulated to guard against insulation breakdown resulting from high dv/dt. When using output line reactors, it is recommended that the drive PWM frequency be set to its lowest value to minimize losses in the reactors. See Table 2.E.

IMPORTANT: By using an output reactor the effective motor voltage will be lower because of the voltage drop across the reactor – this may also mean a reduction of the motor torque.

Output Contactor

For application of an output contactor to a 1305 drive, please contact Allen-Bradley.

ADAPTERS

An adapter is any device connected to the drive's serial port. Typical devices include:

- Human Interface Modules
- Communication Modules
- Future adapter devices

IMPORTANT: A maximum of five adapters can communicate to the drive.

The total current draw of all adapters should not exceed 250mA. Refer to the data sheet or nameplate of each adapter for the amount of current needed for the adapter to operate.


The Adapter address is determined as follows:

- Port 1 equals Adapter 1.
- Port 2 equals Adapter 2. However, if a splitter is used to expand the number of Adapters to 3, 4 or 5 the splitter will be marked with the appropriate Adapter numbers.

Adapter Mounting Distance

The maximum mounting distance between any two adapters connected to the drive is 10 meters. Refer to Figure 2.11.

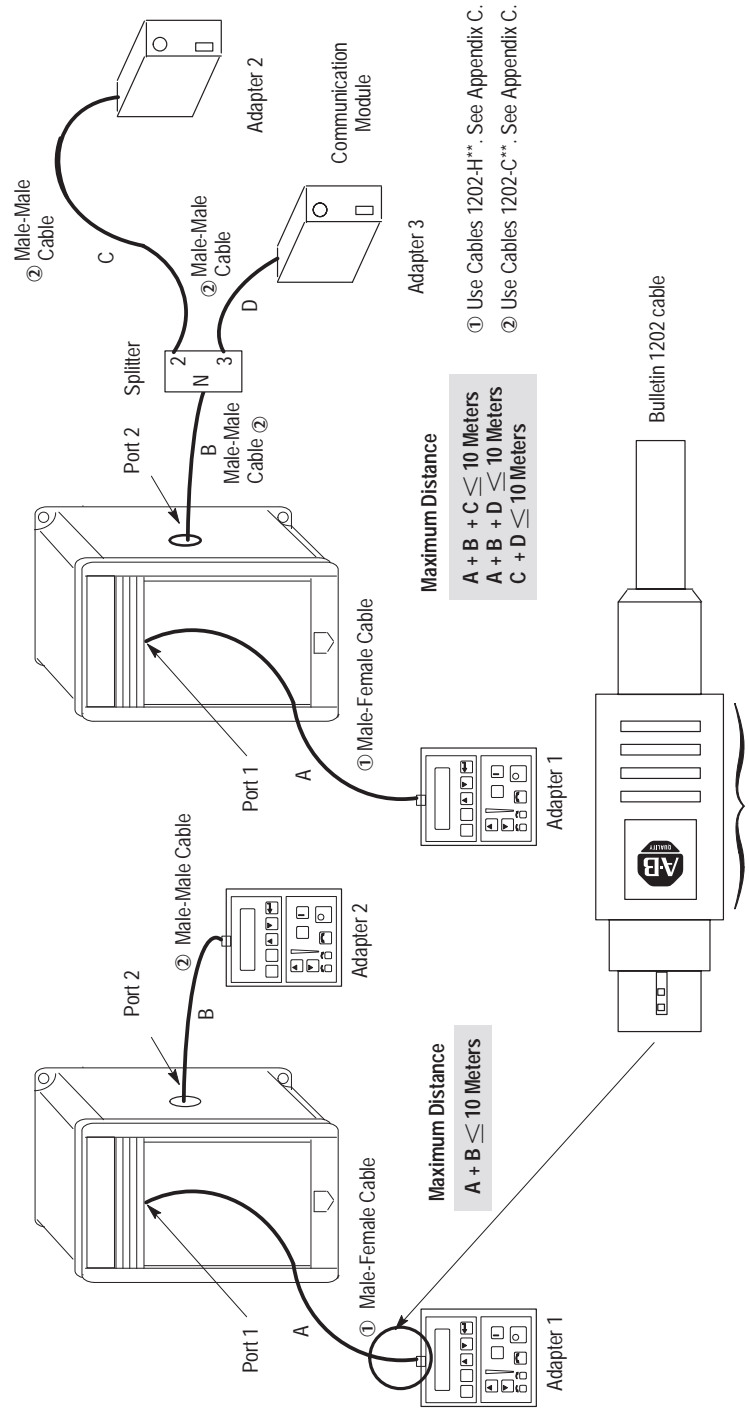Figure 2.11 Adapter Mounting Distance and Cable Connections



Human Interface Module

Chapter 3

Chapter Objectives

Chapter 3 describes the various controls and indicators found on the optional Human Interface Module (HIM) of the Bulletin 1305 AC Drive. The material presented in this chapter must be understood to perform the start-up procedure in Chapter 4.

HIM DESCRIPTION

When the drive mounted HIM is supplied, it will be connected as Adapter 1 (see *Adapter* in Chapter 2) and visible from the front of the drive. The HIM can be divided into two sections; Display Panel and Control Panel. The Display Panel provides a means of programming the drive and viewing the various operating parameters. The Control Panel allows different drive functions to be controlled. Refer to Figure 3.1 and the sections that follow for a description of the panels.


IMPORTANT: The operation of some HIM functions will depend upon drive parameter settings. The default parameter values allow full HIM functionality.

HIM OPERATION

When power is first applied to the drive, the HIM will cycle through a series of displays. These displays will show drive name, HIM ID number and communication status. Upon completion, the Status Display will be shown. This display shows the current status of the drive (i.e. “Stopped,” “Running,” etc.) or any faults that may be present (“Serial Fault,” etc.). If the HIM software is Series A version 3.00 and

above or Series B version 1.01 and above (see back of HIM), the Status Display, Process Display or Password Login menu can be selected as the power-up display or menu. See appropriate sections on the following pages for more information.

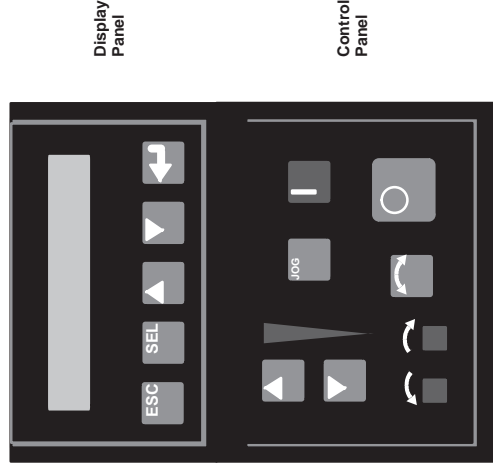Figure 3.1 Human Interface Module



From this display, pressing any one of the five Display Panel keys will cause “Choose Mode” to be displayed. Pressing the Increment or Decrement keys will allow different modes shown in Figure 3.3.

Display Panel Descriptions

ESC

Escape

When pressed, the ESC key will cause the programming system to go back one level in the menu structure.

SEL

Select

Pressing the SEL key alternately moves the cursor to the next active area. A flashing first character indicates which line is active.



Increment/Decrement

These keys are used to increment and decrement a value or scroll through different groups or parameters.



Enter

When pressed, a group or parameter will be selected or a parameter value will be entered into memory. After a parameter has been entered into memory, the top line of the display will automatically become active, allowing another parameter (or group) to be chosen.



Start

The Start key will initiate drive operation if no other control devices are sending a Stop command. This key can be disabled by the **[Logic Mask]** or **[Start Mask]**.



Stop

If the drive is running, pressing the Stop key will cause the drive to stop, using the selected stop mode. Refer to the **[Stop Select]** in Chapter 5.

If the drive has stopped due to a fault, pressing this key will clear the fault and reset the drive. Refer to the **[Fit Clear Mode]**, **[Logic Mask]** and **[Fault Mask]** parameters.



Jog

When pressed, jog will be initiated at the frequency set by the **[Jog Frequency]** parameter, if no other control devices are sending a Stop command. Releasing the key will cause the drive to stop, using the selected stop mode. Refer to **[Stop Select]**, **[Logic Mask]** and **[Jog Mask]**.

IMPORTANT:If the drive is running prior to issuing a jog command, the jog command will be ignored.

IMPORTANT:A start command from another source will override the jog command.

Control Panel Descriptions

IMPORTANT:The following information is correct as shipped from the factory. Reprogramming of mask parameters can mask out control of some of these functions.

Control Panel Descriptions (continued)



Change Direction

Pressing this key will cause the drive to ramp down to 0 Hz and then ramp up to set speed in the opposite direction. The appropriate Direction Indicator will illuminate to indicate the direction of motor rotation. Refer to **[Logic Mask]** and **[Direction Mask]**. Note that the factory default for control of the reverse function is the reverse input at the TB2 control terminal block. To enable the HIM control of the reverse function, change Bit 0 of the **[Direction Mask]** parameter to “0” to disable the reverse function at TB2.



Direction LEDs (Indicators)

These LEDs illuminate to indicate the direction of motor rotation.

	OFF		Rotating "Forward"
	Steady ON		Rotating "Reverse"
	Flashing		Changing Direction, Decelerating "Reverse", Will Begin to Accelerate "Forward"
	Steady ON		Changing Direction, Decelerating "Forward", Will Begin to Accelerate "Reverse"



Increment/Decrement Arrows

(only available with digital speed control)

Pressing these keys will increase or decrease the HIM frequency command. An indication of this command will be shown on the visual Speed Indicator LEDs. The drive will run at this command if the HIM is the selected frequency reference. See **[Freq Select 1/2]**.



Pressing both keys simultaneously stores the current HIM frequency command in HIM memory. The Speed Indicator LEDs will flash momentarily to indicate a successful save (if speed is above 20 percent). Cycling power or connecting the HIM to the drive will set the frequency command to the value stored in HIM memory.



If the Analog Speed Potentiometer option has been ordered, the Increment/Decrement keys and Speed Indicator will be replaced by the pot.



Speed Indicator LEDs

(only available with digital speed control)

Illuminates in steps to give an approximate visual indication of the commanded speed.

If the Analog Speed Potentiometer option has been ordered, the Increment/Decrement keys and Speed Indicator LEDs will be replaced by the pot.

HIM REMOVAL AND INSTALLATION

In addition to mounting directly on the drive, the HIM can be used as a hand held programmer or it can be mounted on the front of an enclosure. The HIM can be removed from the drive in one of two methods:


- A. Disconnect power from the drive and remove the HIM as outlined in steps 1 and 2, or
- B. Remove the HIM from the drive with the drive running, by masking out the **[Logic Mask]** bit that identifies the adapter address of the HIM. Refer to Figure 2.11 to identify the adapter address for the HIM or view the HIM ID# on the display as the unit is powered up. The ID # corresponds to the adapter address. Refer to page 5-48 for programming instructions on the **[Logic Mask]** parameter. For HIM software, Series A version 3.00 and above or Series B version 1.01 and above, you can enter the Control Status menu and Enable/Disable the Control Logic bit.

IMPORTANT: If the **[Logic Mask]** bit of the adapter is not masked out (set to “0”), and the HIM is removed, a communication fault will occur and the drive will be disabled. However, if the HIM removed is the active frequency source, the drive will issue a “Hz Error” fault (F29).

IMPORTANT: When the **[Logic Mask]** bit for an adapter is changed from “1” to “0” it disables all command functions for that adapter with the exception of the Stop command and frequency reference.

1. Lower the hinged panel located below the HIM.
2. Press the retaining lever located directly beneath the HIM, slide the HIM downward and remove it from the drive.
3. To reinsert the HIM, place the top edge of the HIM about 15 mm (1/2 in.) from the top edge of the cover. Push inward on the bottom of the HIM and slide the HIM up into position.

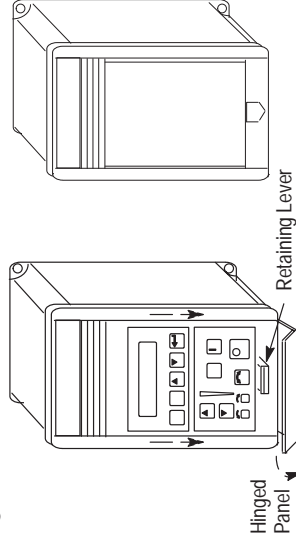Figure 3.2 HIM Removal



HIM MODES

The HIM has up to seven different modes. Refer to Figure 3.3.

Display

When selected, the Display mode allows any of the parameters to be viewed. However, parameter modifications are not allowed.

Process

The Process mode allows a “configurable” display to be programmed. One user selected parameter can be displayed with programmed text and scaling. Refer to Chapter 5 for further information.

Program

Program mode provides access to the complete listing of parameters available for programming. Refer to Chapter 5 for further parameter programming information.

EEPROM

This mode allows all parameters to be reset to the factory default settings.

For Series B HIM Software Version 1.01 and Above, uploading and downloading of drive parameters may be performed.

Search (*Series A HIM Software Version 3.00 and Above or Series B HIM Software Version 1.01 and Above Only*)

This mode will search for parameters that are not at their default values.

Control Status (*Series A HIM Software Version 3.00 and Above or Series B HIM Software Version 1.01 and Above Only*)

Permits the [Logic Mask] parameter to be disabled/enabled allowing HIM removal while drive power is applied. This menu also provides access to a fault queue which will list the last four faults that have occurred. “Trip” displayed with a fault indicates the actual fault that tripped the drive. A clear function clears the queue.


IMPORTANT: Clearing the Fault Queue will not clear an active fault.

Password

The Password mode protects the drive parameters against programming changes by unauthorized personnel. When a password has been assigned, access to the Program and EEPROM modes can only be gained when the correct password has been entered. The password can be any five digit number between 00000 and 65535. Refer to the example on page 3-18.





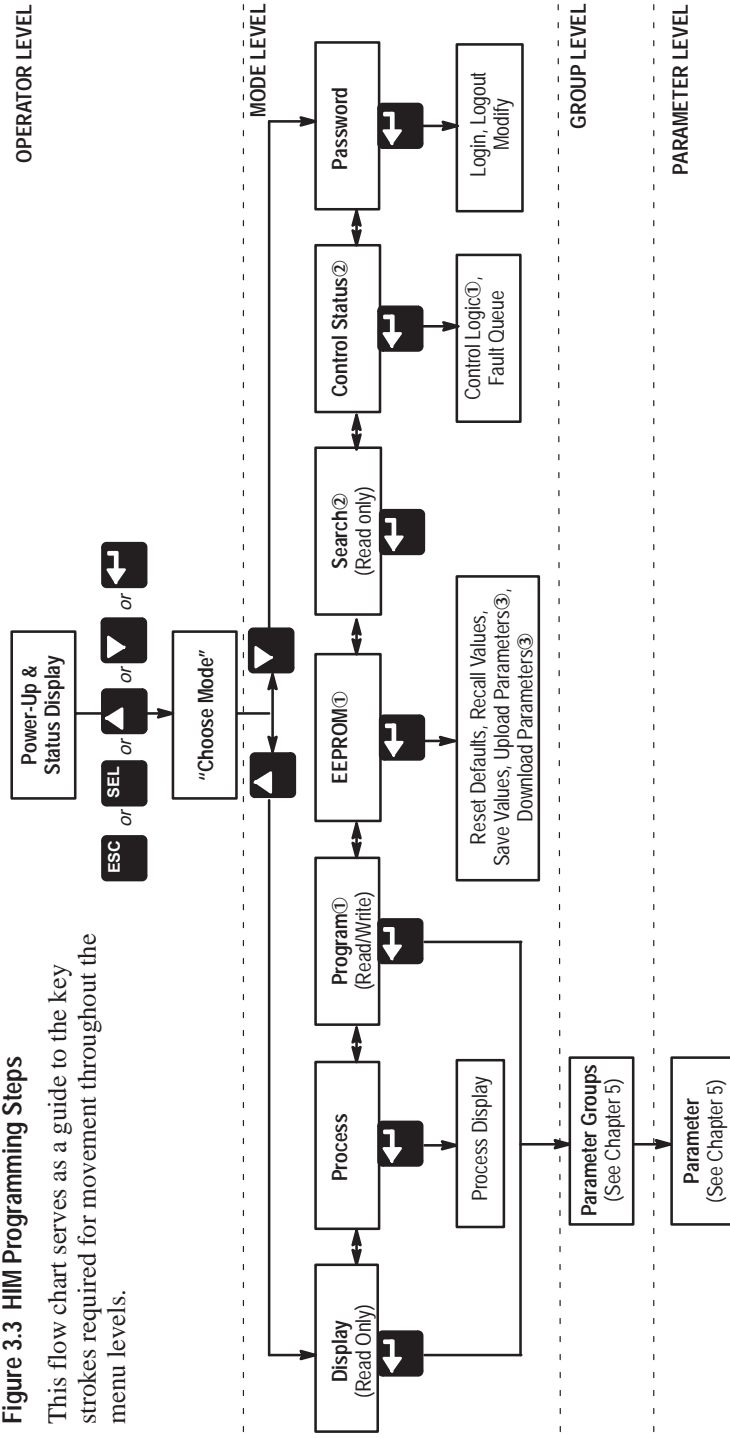







Figure 3.3 HIM Programming Steps

This flow chart serves as a guide to the key strokes required for movement throughout the menu levels.




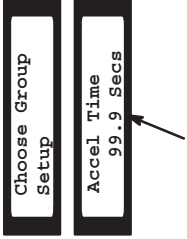


① Access to the Program and EEPROM modes, and the Control Logic and Clear Fault Queue, will be disabled if the password is Logged out.
 ② Series A HIM Software Version 3.00 and Above or Series B HIM Software Version 1.01 and Above only.
 ③ Series B HIM Software Version 1.01 and Above only.


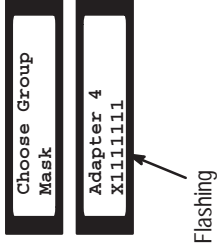
PROGRAM AND DISPLAY MODES

ACTION	DESCRIPTION	HIM DISPLAY
<p>  or   or   or   or  </p>	<p> <input type="checkbox"/> 1. The Display and Program modes allow access to the parameters for viewing or programming. <ul style="list-style-type: none"> a. From the Status Display, press Enter (or any key). “Choose Mode” will be shown. b. Press the Increment (or Decrement) key to show “Program” (or “Display”). c. Press Enter. d. Press the Increment (or Decrement) key until the desired group is displayed. e. Press Enter. f. Press the Increment (or Decrement) key to scroll to the desired parameter. </p>	<p>     </p>














PROGRAM AND DISPLAY MODES (cont.)

ACTION	DESCRIPTION	HIM DISPLAY
<p>Changing Digits</p>  or  or 	<p>□ 2. With Series A HIM software versions 3.00 and above, or Series B HIM software version 1.01 and above, you have the ability to access and modify each individual bit or digit.</p> <p>IMPORTANT: This procedure assumes the Password is not set, you have already logged in, or the device has been set to Defaults.</p> <ol style="list-style-type: none"> Select a parameter with Increment (or Decrement) keys. Press the SEL key to view the first bit. Pressing this key again will move the cursor to the left one bit or digit. <p>Individual bits of a Read/Write parameter can be changed. Pressing the SEL key will move the cursor (flashing character) one bit to the left. That bit can then be changed by pressing the Increment/Decrement keys. When the cursor is in the far right position, pressing the Increment/Decrement keys will increment or decrement the entire value.</p>	 <p>Flashing = Modify</p>











PROGRAM AND DISPLAY MODES (cont.)

ACTION	DESCRIPTION	HIM DISPLAY
<p>Bit ENUMs</p> 	<p>□ 3. With Series A HIM software versions 3.00 and above, or Series B HIM software version 1.01 and above, and Drive software 4.01 and above, bit ENUMs (16 character text strings) will be displayed to aid interpretation of bit parameters.</p> <ol style="list-style-type: none"> From the Choose Group menu, use the Increment/Decrement key to select the Masks group. Press Enter. Press the SEL key to view the ENUM of the first bit. Pressing this key again will move the cursor to the left one bit or digit and view the next bit's ENUM. 	















PROCESS MODE

ACTION	DESCRIPTION	HIM DISPLAY
<p>  or   or   or   or  </p>	<p> <input type="checkbox"/> 1. When selected, the Process mode will show a custom display consisting of information programmed with the Process Display group of parameters. a. Complete steps <i>a – c</i> on page 3-7 to access the Program mode. b. Press the Increment/Decrement key until “Process Display” is shown. Press Enter. c. Using the Increment/Decrement keys, select [Process Par] and enter the number of the parameter you wish to monitor. Press Enter. d. Select [Process Scale] using the Increment/Decrement keys. Enter the desired scaling factor. Press Enter. e. Select [Process Text 1] using the Increment/Decrement keys. Enter the desired text character. Press Enter and repeat for the remaining characters. </p>	<p>      </p>














PROCESS MODE (cont.)

ACTION	DESCRIPTION	HIM DISPLAY
  or  {  SEL   } press  	<p>f. When process programming is complete, press ESC until “Choose Mode” is displayed. Press Increment/Decrement until “Process” is displayed. Press Enter to get process value.</p> <p>g. With Series A HIM Software Versions 3.00 and above or Series B HIM Software Versions 1.01 and above, the user has the ability to save the Process Display for power up. To do this, simultaneously press Increment and Decrement keys on programming panel.</p>	 













EEPROM MODE

ACTION	DESCRIPTION	HIM DISPLAY
<p>Reset Defaults</p>   or    or    	<p>□ 1. The EEPROM mode is used to restore all settings to factory default values or to upload or download parameters between the HIM and the drive. (Parameter upload or download requires a Series B HIM).</p> <p>To restore factory defaults:</p> <ol style="list-style-type: none"> From the Status Display, press Enter (or any key). “Choose Mode” will be displayed. Press the Increment (or Decrement) key until “EEPROM” is displayed. If EEPROM is not in the menu, programming is password protected. Refer to <i>Password Mode</i> later in this section. Press Enter. Press the Increment (or Decrement) key until “Reset Defaults” is displayed. Press Enter to restore all parameters to their original factory settings. Press ESC. “Reprogram Fault” will display. Press the Stop key to reset the fault. <p>IMPORTANT: If [Input Mode] was previously set to a value other than “1,” cycle drive power to reset.</p>	    




EEPROM MODE (cont.)

ACTION	DESCRIPTION	HIM DISPLAY
<p>Drive → HIM</p> <p> or </p> <p>  or </p> <p> or </p>	<p>□ 2. To upload a parameter profile from the drive to the HIM, you must have a Series B HIM.</p> <p>a. From the EEPROM menu, press the Increment/Decrement keys until “Drive → HIM” is displayed.</p> <p>b. Press Enter. Use the Increment/Decrement keys to choose between profile 1 or profile 2.</p> <p>c. To give a profile a name, use the SEL key to move the cursor right and use the Increment/Decrement keys to change the characters. When done, press Enter to save the name.</p> <p>d. Press Enter. An informational display will be shown, indicating the drive type and firmware version.</p> <p>e. Press Enter to start the upload. The parameter number currently being uploaded will be displayed on line 1 of the HIM. Line 2 will indicate total progress. Press ESC to stop the upload.</p> <p>f. A successful upload will be indicated by “Completed” displayed on line 2 of the HIM. Press Enter. If “Error” is displayed, see Chapter 6.</p>	<p></p> <p></p> <p></p> <p></p> <p></p> <p></p>





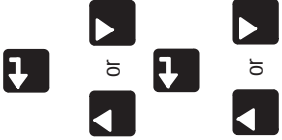









EEPROM MODE (cont.)

ACTION	DESCRIPTION	HIM DISPLAY
<p>HIM → Drive</p> <p> or </p> <p> or </p> <p></p> <p></p> <p></p>	<p><input type="checkbox"/> 3. To download a parameter profile from the HIM to the drive, you must have a Series B HIM.</p> <p>IMPORTANT: The download function will only be available when there is a valid profile stored in the HIM.</p> <p>a. From the EEPROM menu, press the Increment/Decrement keys until “HIM → Drive” is displayed.</p> <p>b. Press the Enter key. A profile name will be displayed on line 2 of the HIM. Pressing the Increment/Decrement keys will scroll the display to a second profile (if available).</p> <p>c. Once the desired profile name is displayed, press the Enter key. An informational display will be shown, indicating the version numbers of the profile and drive.</p> <p>d. Press Enter to start the download. The parameter number currently being downloaded will be displayed on line 1 of the HIM. Line 2 will indicate total progress. Press ESC to stop the download.</p> <p>e. A successful download will be indicated by “Completed” displayed on line 2 of the HIM. Press Enter. If “Error” is displayed, see Chapter 6.</p>	<p></p> <p></p> <p></p> <p></p> <p></p>



SEARCH MODE

ACTION	DESCRIPTION	HIM DISPLAY
<p>Search</p> 	<p>□ 1. The Search mode is only available with Series A HIM software version 3.00 and above or Series B HIM software version 1.01 and above.</p> <p>This mode allows you to search through the linear parameter list and display all parameters that are not at the factory default values. The Search mode is a read only function.</p> <ol style="list-style-type: none"> From the Status Display, press Enter (or any key). “Choose Mode” will be shown. Press the Increment (or Decrement) key until “Search” is displayed. Press Enter. The HIM will search through all parameters and display any parameters that are not at their factory default values. Press the Increment (or Decrement) key to scroll through the list. 	 







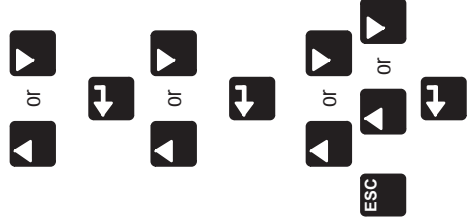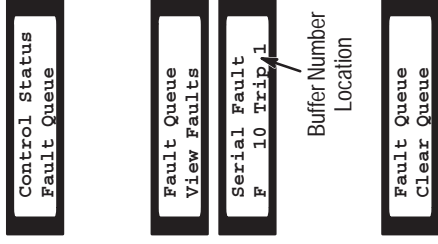


 

 
 
 
 







CONTROL STATUS MODE

ACTION	DESCRIPTION	HIM DISPLAY
<p>Control Logic</p> <p>  or   or   or   or  </p>	<p><input type="checkbox"/> 1. The Control Status mode is only available with Series A HIM software version 3.00 and above or Series B HIM software version 1.01 and above. This mode allows the drive logic mask to be disabled, thus preventing a Serial Fault when the HIM is removed with drive power applied.</p> <p>a. From the Status Display, press Enter (or any key). “Choose Mode” will be shown.</p> <p>b. Press the Increment (or Decrement) key until “Control Status” is displayed. Press Enter.</p> <p>c. Select “Control Logic” using the Increment/Decrement keys. Press Enter.</p> <p>d. Press the SEL key, then use the Increment (or Decrement) key to select “Disabled” (or “Enable”).</p> <p>e. Press Enter. The logic mask is now disabled (or enabled).</p>	<p></p> <p></p> <p></p> <p></p>

CONTROL STATUS MODE (cont.)










ACTION	DESCRIPTION	HMI DISPLAY
<p>Fault Queue/ Clear Faults</p> 	<p>□ 2. This menu provides a means to view the fault queue and clear it when desired.</p> <ol style="list-style-type: none"> From the Control Status menu, press the Increment (or Decrement) key until “Fault Queue” is displayed. Press Enter. Press Increment (or Decrement) key until “View Faults” is displayed. Press Enter. The fault queue will be displayed. “Trip” displayed with a fault will indicate the fault that tripped the drive. Use the Increment (or Decrement) key to scroll through the list. To clear the fault queue, press ESC. Then use the Increment/Decrement keys to select “Clear Queue”. Press Enter. <p>IMPORTANT: Clearing the Fault Queue will not clear an active fault.</p>	

PASSWORD MODE

ACTION	DESCRIPTION	HIM DISPLAY
<p>Setting Password</p> <p> </p> <p> or </p> <p></p> <p> or </p> <p> ^① Login Modify</p> <p> or </p> <p> or  SEL</p> <p>  </p>	<p><input type="checkbox"/> 1. The factory default password is 0 (which disables password protection). To change the password and enable password protection, perform the following steps.</p> <p>a. From the Status Display, press Enter (or any key). “Choose Mode” will be shown.</p> <p>b. Press the Increment (or Decrement) key until “Password” is displayed.</p> <p>c. Press Enter.</p> <p>d. Press the Increment (or Decrement) key until “Modify” is displayed.</p> <p>e. Press Enter. “Enter Password” will be displayed.</p> <p>f. Press the Increment (or Decrement) key to scroll to your desired new password. With Series A HIM software versions 3.00 and above or Series B HIM software version 1.01 and above, the SEL key allows each digit to be selected and changed individually.</p> <p>g. Press Enter to save your new password.</p> <p>h. Press Enter again to return to the Password Mode.</p>	<p></p> <p></p> <p></p> <p></p> <p></p> <p></p> <p></p>


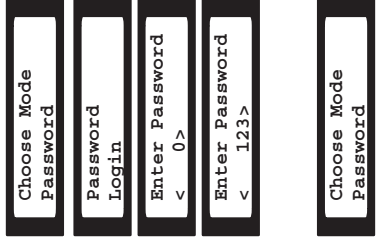
^① Login is used to enter the password for access to the Program, Control Logic, Clear Fault Queue, and EEPROM modes.

PASSWORD MODE (cont.)












 
ACTION	DESCRIPTION	HIM DISPLAY
<p>② Logout  or   Press    </p>	<p>i. Press the Increment (or Decrement) key until “Logout” is displayed.</p> <p>j. Press Enter to log out of the Password mode.</p> <p>k. With Series A HIM software versions 3.00 and above or Series B HIM software version 1.01 and above, the Password Login menu can be programmed to appear when drive power is applied. To save the Password Login menu as the power-up menu, simultaneously press the Increment and Decrement keys while the Password display is active.</p>	 

② Logout is used to disable access to the Program, Control Logic, Clear Fault Queue, and EEPROM modes.

PASSWORD MODE (cont.)

ACTION	DESCRIPTION	HIM DISPLAY
<p>Login to the Drive</p> 	<p>□ 2. The Program and EEPROM modes, and the Clear Fault Queue menu, are now password protected and will not appear in the menu. To access these modes, perform the following steps.</p> <ol style="list-style-type: none"> From the Status Display, press Enter (or any key). “Choose Mode” will be shown. Press the Increment (or Decrement) key until “Password” is displayed. Press Enter. “Login” will be displayed. Press Enter, “Enter Password” will be displayed. Press the Increment (or Decrement) key until your correct password is displayed. With Series A HIM software versions 3.00 and above or Series B HIM software version 1.01 and above, the SEL key allows each digit to be selected and changed individually. Press Enter. The Program and EEPROM modes will now be accessible. To prevent future access to program changes, Logout as described in step 3. 	

PASSWORD MODE (cont.)

ACTION	DESCRIPTION	HIM DISPLAY
<p>Logout from the Drive</p> <p>  or   or   or   or  </p>	<p>□ 3. To prevent unauthorized changes to parameters, Logout must be performed as described below.</p> <ol style="list-style-type: none"> From the Status Display, press Enter (or any key). “Choose Mode” will be shown. Press the Increment (or Decrement) key until “Password” is displayed. Press Enter. Press the Increment (or Decrement) key until “Logout” is displayed. Press Enter to log out of the Password mode. 	<p>     </p>

This Page Intentionally Left Blank.

CHAPTER OBJECTIVES

This chapter describes the steps needed to start-up the drive. Included in the procedure are typical adjustments and checks to assure proper operation. The information contained in previous chapters of this manual must be read and understood before proceeding.

IMPORTANT: The drive is designed so that start-up is simple and efficient. The programmable parameters are grouped logically so that most start-ups can be accomplished by adjusting parameters in only one group. Advanced features and adjustments are grouped separately. This eliminates having to step through unneeded parameters on initial start-up.

This start-up procedure covers only those most commonly adjusted values, all of which appear in the Setup Group.

START-UP PROCEDURE

The following start-up procedure is written for users who have a Human Interface Module (HIM) installed in the drive (Port 1). For users without a HIM, external commands and signals must be substituted.

IMPORTANT: The parameters in the Set Up Group (page 5-8) should be reviewed and reprogrammed as necessary for basic operation.



ATTENTION: Power must be applied to the drive to perform the following start-up procedure. Some of the voltages present are at incoming line potential. To avoid electric shock hazard or damage to equipment, only qualified service personnel should perform the following procedure. Thoroughly read and understand the procedure before beginning. If an event does not occur while performing this procedure, **Do Not Proceed. Remove Power** by opening the branch circuit disconnect device and correct the malfunction before continuing.

IMPORTANT:

- Power must be applied to the drive when viewing or changing parameters. Previous programming may effect the drive status when power is applied.
- Confirm that all circuits are in a de-energized state before applying power. User supplied voltages may exist at TB2 even when power is not applied to the drive.
- Refer to Chapter 6 for fault code information.

Initial Operation - Motor Disconnected

- 1. Verify that AC line power at the disconnect device is within the rated value of the drive.
- 2. Disconnect and lock-out all incoming power to the drive including incoming AC power to terminals L1, L2 and L3 (R, S and T) plus any separate control power for remote interface devices. Remove the drive cover and verify the motor leads are disconnected from the Power Terminal Block (TB1), terminals T1, T2 and T3 (U, V, W). Refer to Chapter 2 for terminal location.


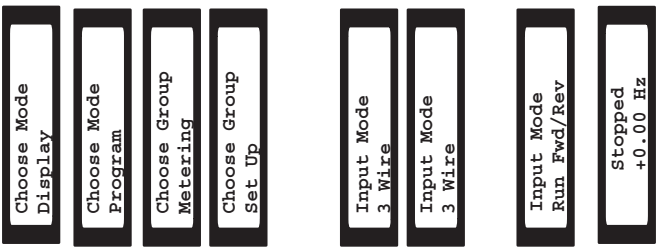




ATTENTION: Proceed with caution. A DC Bus Voltage may be present at the Power Terminal Block (TB1) even when power is removed from the drive.



- 3. Verify that the Stop and Enable inputs are connected.
- 4. Confirm that all other optional inputs are connected to the correct terminals and are secure.
- 5. If the HIM has a Control Panel, use the local controls to complete the start-up procedure. If a Control Panel is not present, remote devices must be used to operate the drive.
- 6. Replace the drive cover.






ACTION	DESCRIPTION	HIM DISPLAY
<p><input type="checkbox"/> 7. Apply Power to Drive</p>	<p>When power is first applied to the drive, the following information will be momentarily displayed:</p> <ul style="list-style-type: none"> a.) The HIM ID# (Adapter #) and firmware version number. b.) Communication status. c.) Series letter of drive is displayed. d.) The LCD Display should light and display a drive status of “Stopped” and an output frequency of “+0.00 Hz.” 	

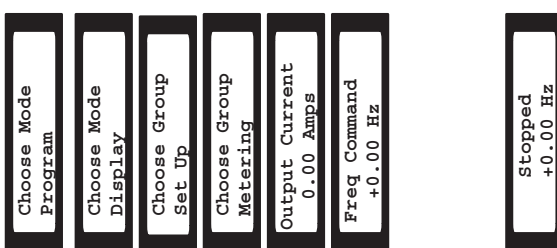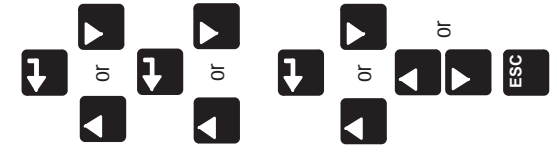	<p><input type="checkbox"/> 8. If the HIM and drive are not communicating properly, “Connection Fail” may be displayed on line 2. If this occurs remove the HIM from the drive and reinsert. See Page 3-4 for HIM Removal instructions. If this does not correct the problem or another fault message is displayed, record the information and remove all power. Determine and correct the fault source before proceeding. Refer to Chapter 6 for fault descriptions.</p>	<div style="border: 1px solid black; padding: 2px; text-align: center;"> AC DRIVE Connection Fail </div>
<p>Reset Factory Defaults</p>	<p><input type="checkbox"/> 9. IMPORTANT: The remaining steps in this procedure are based on factory default parameter settings. If the drive has been previously operated, parameter settings may have been changed and may not be compatible with this start-up procedure or application. Refer to page 3-12 to reset to factory defaults.</p>	
<p>[Input Mode] Selection</p>	<p><input type="checkbox"/> 10. The factory default [Input Mode] is “3 wire” control as described in Chapter 2. If the factory default setting is sufficient, then skip to Step 11. If another control scheme is desired, change the [Input Mode] parameter by performing the following procedure.</p>	

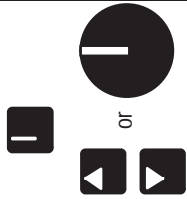	<p>□ 10. INPUT MODE SELECTION (continued)</p> <p>a.) From the Status Display, press the Enter key (or any key). “Choose Mode” will be displayed.</p> <p>b.) Press the Increment (or Decrement) key until “Program” is displayed.</p> <p>c.) Press Enter. The parameter group “Metering” will be displayed.</p> <p>d.) Press the Increment key again until the “Set Up” Group is displayed.</p> <p>e.) Press Enter.</p> <p>f.) Press the Increment or Decrement key until the [Input Mode] parameter is displayed.</p> <p>g.) Press SEL. The first character of line 2 will now flash.</p> <p>h.) Press the Increment or Decrement key until the correct mode is displayed, then press enter. The first character of line 1 should now be flashing.</p> <p>i.) Press the ESC key (3 times) to return to the Status Display.</p> <p>IMPORTANT:If the [Input Mode] is changed, power must be cycled for the change to take effect.</p>	
--	--	--

<p>□ 11. Setting Frequency Command to 0 Hz If the HIM has an analog potentiometer option, turn the potentiometer fully counter clockwise and skip to Step 12.</p> <p>If the HIM has Digital Up-Down keys for frequency control then perform the following:</p> <p>a.) From the Status Display, press the Enter key (or any key). “Choose Mode” will be displayed.</p> <p>b.) Press the Increment or Decrement key until “Display” is shown.</p> <p>c.) Press Enter.</p> <p>d.) Press the Increment or Decrement key again until “Metering” is displayed.</p> <p>e.) Press Enter.</p> <p>f.) Press the Increment or Decrement key until [Freq Command] is displayed.</p> <p>g.) If the frequency command is a value other than 0 Hz, use the speed source (digital up-down keys on Control Panel) to set the command to 0 Hz.</p> <p>h.) After the command has been set to 0 Hz, press the ESC key until the Status Display is shown.</p>	
	

	<p><input type="checkbox"/> 12. Verifying Minimum and Maximum Frequency Settings.</p> <p>a.) Press the Start key. The drive should output 0 Hz, which is the factory default value for the [Minimum Freq] parameter. The Status Display should indicate “At Speed” and the actual frequency (+0.00 Hz.).</p> <p>b.) With the drive still running, use the speed source to command maximum speed. The drive should ramp to 60 Hz, which is the factory default value for the [Maximum Freq] parameter.</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;">At Speed +0.00 Hz</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">Accelerating +29.62 Hz</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">At Speed +60.00 Hz</div>
<p>Open Enable Signal Restore Enable Signal</p> 	<p><input type="checkbox"/> 13. Enable interlock check.</p> <p>The following steps check for correct drive operation when the Enable input is removed. Refer to Chapter 2 for terminal designations.</p> <p>a.) With the drive still running, open the Enable signal. The drive should stop and indicate “Not Enabled” on the Display Panel. Restore the Enable signal.</p> <p>b.) Restart the drive by pressing the Start key.</p> <p>c.) Stop the drive.</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;">At Speed +60.00 Hz</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">Not Enabled +0.00 Hz</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">Accelerating +10.00 Hz</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">Stopped +0.00 Hz</div>

<p>Press & Hold Jog Key  Release Jog Key</p>	<p><input type="checkbox"/> 14. Jog Control Check.</p> <p>a.) With the drive stopped, press and hold the JOG key on the Control Panel. The drive should accelerate to the frequency programmed by the [Jog Frequency] parameter and remain there until the JOG key is released. When released, the drive should “Ramp to Stop” which is the factory default stopping method for the [Stop Select] parameter.</p>	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;"> At Speed +10.00 Hz </div> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> Stopped +0.00 Hz </div>
<p>Set to Maximum Frequency  or   </p>	<p><input type="checkbox"/> 15. Checking Accel and Decel Times.</p> <p>a.) Start the drive and use the speed source to command maximum frequency.</p> <p>b.) Press the Stop key and estimate the amount of time the drive takes to decelerate from 60 Hz to 0 Hz. This time should equal the time set in the [Decel Time I] parameter (default is 10 seconds). If these times are not correct for your application, refer to Chapter 5 for instructions on programming changes.</p> <p>c.) Start the drive and estimate the amount of time the drive takes to accelerate to maximum frequency. This should equal 10 seconds, which is the factory default value for the [Accel Time I] parameter.</p> <p>d.) Stop the drive.</p>	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;"> Accelerating +10.00 Hz </div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;"> At Speed +60.00 Hz </div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;"> Decelerating +30.00 Hz </div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;"> Stopped +0.00 Hz </div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;"> Accelerating +10.00 Hz </div> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> At Speed +60.00 Hz </div>










ATTENTION: Proceed with caution. A DC Bus Voltage may be present at the Power Terminal Block (TB1) even when power is removed from the drive.

<p>Remove ALL Power</p> <p>Reconnect Motor</p>	<p><input type="checkbox"/> 16. Reconnect the Motor.</p> <p>a.) Disconnect and lock-out all input and control power to the drive. When the HIM Display is no longer illuminated, remove the drive cover.</p> <p>b.) Verify that the DC Bus neon indicator is not illuminated (See Figure 2.3 for location) and wait 60 seconds. Reconnect the motor leads to the drive and replace the drive cover.</p> <p>IMPORTANT:The parameters in the Set Up Group (page 5-8) should be reviewed and reprogrammed as necessary for basic operation.</p>	
--	---	--



ATTENTION: In the following steps, rotation of the motor in an un-desired direction can occur. To guard against possible equipment damage, it is recommended that the motor be disconnected from the load before proceeding.

<p>Apply Power to Drive</p> <p>Verify Frequency Command = 0</p>  <p>Slowly Increase Speed</p>  <p>or</p>  <p>Verify Direction of Rotation</p> 	<p>□ 17. Check for Correct Motor Rotation.</p> <p>a.) Reapply power to the drive.</p> <p>b.) Verify that the frequency command is at zero Hz. Refer to step 11 for further information.</p> <p>c.) Start the drive.</p> <p>d.) <i>Slowly</i> increase the speed until the motor begins to turn. Check the direction of motor rotation.</p> <p>e.) Stop the drive. If the direction of rotation is as desired, proceed to step 18.</p> <p>If the direction of rotation is incorrect - disconnect and lock-out all input and control power to the drive. When the HIM Display is no longer illuminated, remove the drive cover. Verify that the DC Bus neon indicator is not illuminated (see Figure 2.3 for location) and wait 60 seconds. Interchange any two of the three motor leads at TB1 terminals, T1, T2 or T3. Replace the drive cover and repeat steps <i>a - e</i> to verify correct motor rotation.</p>	 
--	--	--

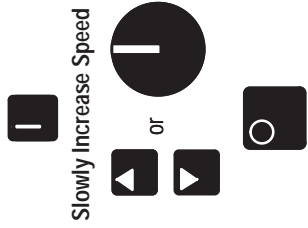 <p>Slowly Increase Speed</p>	<p><input type="checkbox"/> 18. Check for proper operation.</p> <p>a.) Start the drive.</p> <p>b.) <i>Slowly</i> increase the speed. Check for proper motor operation throughout the speed range.</p> <p>c.) Press the Stop key.</p>	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 10px;">At Speed +5.00 Hz</div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 10px;">At Speed +60.00 Hz</div> <div style="border: 1px solid black; padding: 5px; width: fit-content;">Stopped +0.00 Hz</div>
	<p><input type="checkbox"/> 19. This completes the basic start-up procedure. Depending on your application, further parameter programming may be required. Refer to Chapter 5 for information.</p> <p>IMPORTANT:The parameters in the Set Up Group (page 5-8) should be reviewed and reprogrammed as necessary for basic operation.</p>	

CHAPTER OBJECTIVES

Chapter 5 describes all parameters for Bulletin 1305 drives. Parameters are divided into groups for ease of programming and operator access. Grouping replaces a sequentially numerical parameter list with functional parameter groups that increases operator efficiency and helps to reduce programming time. For most applications, this means simplicity at startup with minimum drive tuning.

CHAPTER CONVENTIONS

1. All parameters required for any given drive function will be contained within a group, eliminating the need to change groups to complete a function.
2. To help differentiate parameter names and display text from other text in this manual, the following conventions will be used – Parameter Names will appear in **[Brackets]** – Display Text will appear in “Quotes.”
3. Parameter information in this chapter is presented for users who have a Human Interface Module (HIM) installed. For those users without a HIM installed, the drive can be operated using the factory default values for each parameter or parameter values can be changed through the serial port.

FUNCTION INDEX

The Function Index shown provides a directory of various drive functions. The Page Number will direct you to the parameters associated with each function.


Function	Page #	Function	Page #
Accel/Decel Time	5-9	MOP	5-6, 5-8, 5-28, 5-31, 5-49, 5-53
Accel/Decel Selection	5-30	Motor Unbalance ^①	5-36
Analog Invert	5-21	Output Configuration	5-37
Auto-Restart/Run On Power Up	5-33	Overload Protection	5-12
Current Limiting	5-11, 5-13	Preset Frequencies	5-27, 5-29, 5-33
Custom Volts/Hz	5-15	Process Display	5-56
DC Boost	5-16, 5-17, 5-18, 5-19	PWM Freq. Derating	5-20
		Ramp to Stop	5-11
DC Brake-to-Stop	5-11, 5-22, 5-23	S-Curve Acceleration	5-33, 5-34
Fan/Pump Volts/Hz	5-18	Skip Frequencies	5-27, 5-28
Fault Buffer History	5-41	Standard Boost V/Hz	5-18
Frequency Select	5-25	Standard Volts/Hz	5-16
Freq. Source Select	5-29	Start/Run Boost	5-19
Line Loss Fault	5-40, 5-41		
Min/Max Freq.	5-10, 5-11, 5-12		

^① FRN 4.01 and below only.

PARAMETER FLOW CHART

The chart provided on pages 5-2 and 5-3 highlights each group of parameters and lists all parameters for each of the 13 groups. Parameters that appear in more than one group are shown in bold. Parameter numbers are shown in parenthesis immediately after the parameter name. An example of how to program a parameter is shown on page 5-4.

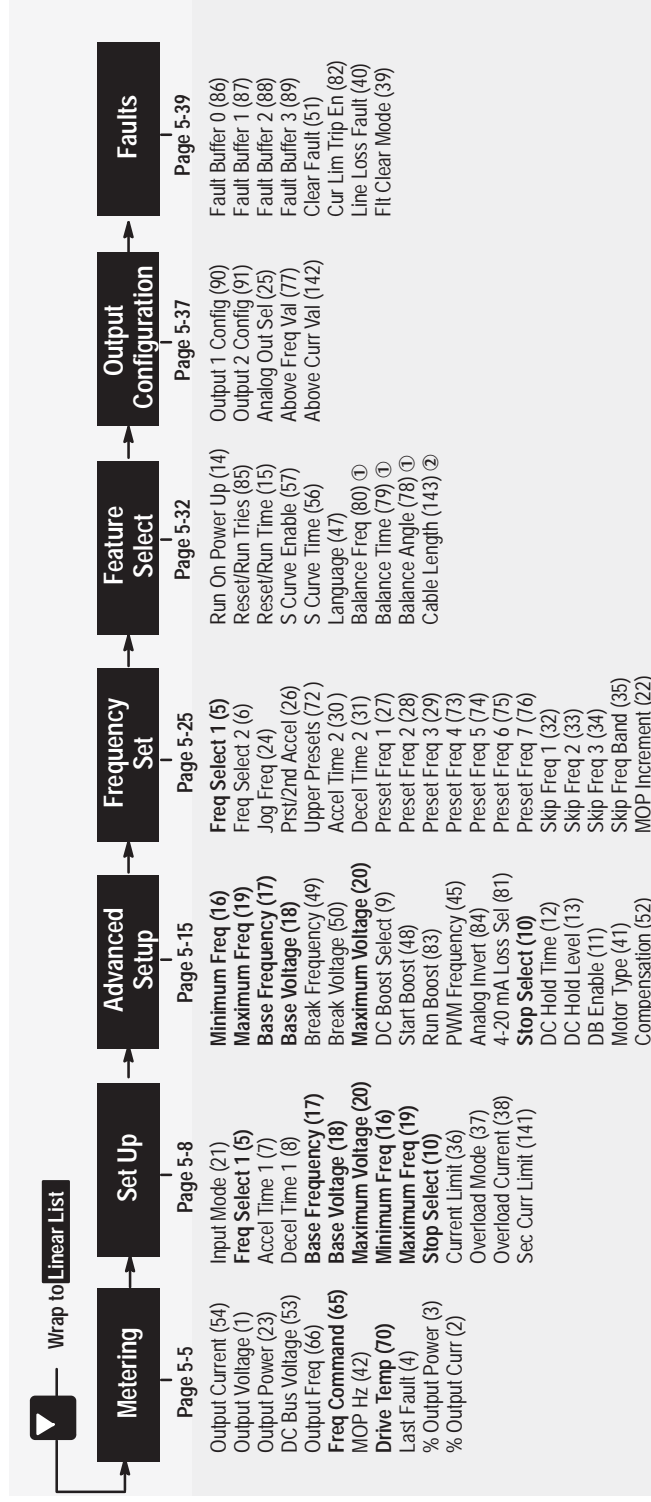
PARAMETER FLOW CHART



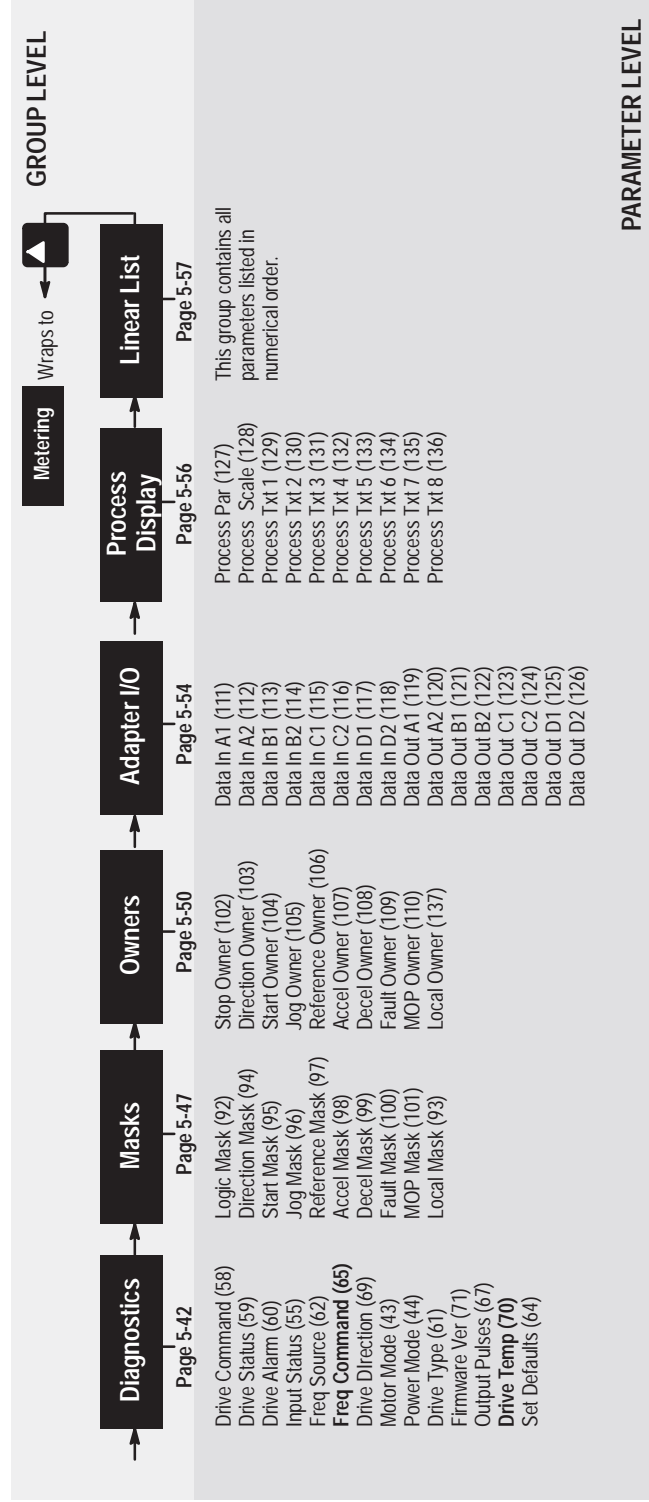Bold indicates parameters located in more than one group.





 







 









 
① FRN 4.01 and below only.

② FRN 4.01 and above only.



PROGRAMMING EXAMPLE

The following is an example of the programming steps required to change a parameter setting. In this example, the parameter [Freq Select 1] is being programmed from its' factory default setting of "Adapter 1" to a new setting, "Adapter 2".

ACTION	DESCRIPTION	HIM DISPLAY
<p>    </p> <p>To Select Mode</p> <p> or </p> <p></p>	<p><input type="checkbox"/> 1. Press any key to go from the Status Display to the "Choose Mode" menu.</p> <p><input type="checkbox"/> 2. Press the Up/Down keys until "Program" appears on the display.</p> <p><input type="checkbox"/> 3. Press the Enter key to go to the "Program" menu.</p>	
<p>To Select a Group</p> <p> or </p> <p></p>	<p><input type="checkbox"/> 4. Press the Up/Down keys until "Setup" appears on the display.</p> <p><input type="checkbox"/> 5. Press the Enter key to go to the "Setup" menu.</p>	 
<p>To Select a Parameter within a Group</p> <p> or </p> <p></p>	<p><input type="checkbox"/> 6. Press the Up/Down keys until [Freq Select 1] appears on the display.</p> <p><input type="checkbox"/> 7. Press the SEL key. The first character of line 2 will flash indicating the parameter setting/value can be changed.</p>	
<p>To Change a Parameter Setting or Enter a Value</p> <p> or </p> <p></p>	<p><input type="checkbox"/> 8. Press the Up/Down keys until "Adapter 2" appears on the display.</p> <p><input type="checkbox"/> 9. Press the Enter key to program [Freq Select 1] to "Adapter 2."</p>	 

Metering

This group of parameters consists of commonly viewed drive operating conditions such as drive output frequency, output voltage, output current and command frequency. All parameters in this group are Read Only.

[Output Current]

This parameter displays the output current present at TB1, terminals T1, T2 & T3 (U, V & W).

Parameter #	54	Factory Default	None
Parameter Type	Read Only	Minimum	0.00
Units	.01 Amps	Maximum	Two Times Drive Output Current

[Output Voltage]

This parameter displays the output voltage present at TB1, terminals T1, T2 & T3 (U, V & W)

Parameter #	1	Factory Default	None
Parameter Type	Read Only	Minimum	0
Units	1 Volt	Maximum	Maximum Voltage

[Output Power]

This parameter displays the output power present at TB1, terminals T1, T2, & T3 (U, V & W).

Parameter #	23	Factory Default	None
Parameter Type	Read Only	Minimum	0
Units	.01 kW	Maximum	Two Times Rated Drive Output Power

[DC Bus Voltage]

This parameter displays the DC bus voltage level.

Parameter #	53	Factory Default	None
Parameter Type	Read Only	Minimum	0.00
Units	1 Volt	Maximum	410 - 230V Drive 815 - 460V Drive

Metering Group (cont.)

<p>[Output Freq]</p> <p>This parameter displays the output frequency present at TB1, terminals T1, T2 & T3 (U, V & W).</p>	<p>Parameter # 66</p> <p>Parameter Type Read Only</p> <p>Units 0.01 Hz</p> <p>Factory Default None</p> <p>Minimum – [Maximum Freq]</p> <p>Maximum + [Maximum Freq]</p>
<p>[Freq Command]</p> <p>This parameter displays the frequency that the drive is commanded to output. This command may come from any one of the frequency sources selected by [Freq Select 1], [Freq Select 2] or [Preset Freq 1-7] the preset speeds 1-7 as determined by the inputs to SW1, SW2, and SW3 at TB2.</p>	<p>Parameter # 65</p> <p>Parameter Type Read Only</p> <p>Units 0.01 Hz</p> <p>Factory Default 0.00 Hz</p> <p>Minimum 0.00 Hz</p> <p>Maximum +400.00 Hz</p>
<p>[MOP Hz]</p> <p>This parameter displays the frequency reference commanded by the Motor Operated Potentiometer (MOP) function. This MOP frequency command can be adjusted from TB2-16 and TB2-17 if the appropriate [Input Mode] is selected. This MOP frequency command can also be changed through serial communication. This value is displayed regardless of whether or not this is the active frequency command.</p>	<p>Parameter # 42</p> <p>Parameter Type Read Only</p> <p>Units 0.01 Hz</p> <p>Factory Default None</p> <p>Minimum 0.00 Hz</p> <p>Maximum 400.00 Hz</p>

Metering Group (cont.)

<p>[Drive Temp]</p> <p>This parameter displays the drive internal temperature.</p>	<p>Parameter # 70 Factory Default None</p> <p>Parameter Type Read Only Minimum 0</p> <p>Units 1 °C Maximum 100 °C</p>
<p>[Last Fault]</p> <p>This parameter displays the fault code for the present drive fault. If there is no active fault, the value will be zero.</p>	<p>Parameter # 4 Factory Default None</p> <p>Parameter Type Read Only Minimum 0</p> <p>Units Numeric Maximum Max. Fault Number</p>
<p>[% Output Power]</p> <p>This parameter displays the percent of drive rated output power.</p>	<p>Parameter # 3 Factory Default None</p> <p>Parameter Type Read Only Minimum 0 %</p> <p>Units 1 % Maximum 200% Drive Rated Power</p>
<p>[% Output Curr]</p> <p>This parameter displays the percent of drive rated output current.</p>	<p>Parameter # 2 Factory Default None</p> <p>Parameter Type Read Only Minimum 0 %</p> <p>Units 1 % Maximum 200% of Rated Drive Output Current</p>

Set Up

This group of parameters defines the basic operation of the drive and should be programmed before initial operation. For advanced programming and information on specific parameters, refer to the flow chart on page 5-2 & 5-3

[Input Mode]

This parameter selects between three wire and Run Fwd/Rev control. Refer to Chapter 2, Figure 2-5.
IMPORTANT: Power must be cycled to the drive for the change to take effect.
IMPORTANT: See Frequency Set Group for MOP explanation.

Parameter #	21	Factory Default	"Three Wire"
Parameter Type	Read & Write		
Units	None		
Setting		"Three Wire"	"Run Fwd/Rev"
		"3 W/2nd Acc"	"Run FR 2nd A" (2nd Accel)
		"3 Wire/MOP"	"Run FR MOP"
		IMPORTANT: This parameter cannot be programmed while the drive is running.	

[Freq Select 1]

This parameter is the factory default parameter for selecting the frequency source that will supply the [Freq Command] to the drive. [Freq Select 2] or [Preset Freq 1-7] can be selected in place of this parameter with proper terminal block inputs. (See Chart on Page 5-31).
IMPORTANT: If an adapter that is not connected is selected as the active frequency source, the drive will fault on "Hz Sel Fault" (f-30).

Parameter #	5	Factory Default	"Adapter 1"
Parameter Type	Read & Write		
Units	None		
Settings		"Remote Pot"	"Preset 1"
		"0-10 Volt"	"Preset 2"
		"4-20 mA"	"Preset 3"
		"MOP"	"Preset 4"
		"Adapter 1"	"Preset 5"
		"Adapter 2"	"Preset 6"
		"Adapter 3"	"Preset 7"
		"Adapter 4"	
		"Adapter 5"	
		"Adapter 6"	

Set Up Group (cont.)

<p>[Accel Time 1]</p> <p>This parameter is the factory default parameter for determining the time it will take the drive to ramp from 0 Hz to [Maximum Frequency]. The rate is linear unless [S Curve] is "Enabled." It applies to any increase in command frequency. The [Accel Time 2] parameter can be selected in place of this parameter. (See Chart on Page 5-32).</p>	<p>Parameter # 7</p> <p>Factory Default 10.0 Sec</p> <p>Parameter Type Read & Write</p> <p>Units 0.1 Second</p> <p>Minimum 0.0 Sec</p> <p>Maximum 3600.0 Sec</p>
<p>[Decel Time 1]</p> <p>This parameter is the factory default parameter for determining the time it will take the drive to ramp from [Maximum Frequency] to 0 Hz. The rate is linear unless [S Curve] is "Enabled" or [Stop Select] is set to "S-Curve." It applies to any decrease in command frequency. The [Decel Time 2] parameter can be selected in place of this parameter. (See Chart on Page 5-32).</p>	<p>Parameter # 8</p> <p>Factory Default 10.0 Sec</p> <p>Parameter Type Read & Write</p> <p>Units 0.1 Second</p> <p>Minimum 0.0 Sec</p> <p>Maximum 3600.0 Sec</p>

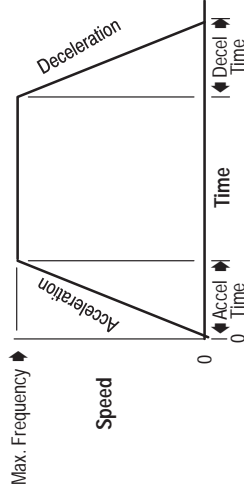


Figure 5.1 Accel/Decel Time

Set Up Group (cont.)

<p>[Base Frequency]</p> <p>This value should be set to the motor nameplate Rated Frequency.</p>	<p>Parameter # 17</p> <p>Parameter Type Read & Write</p> <p>Units 1 Hz</p> <p>Factory Default 60 Hz</p> <p>Minimum 40 Hz</p> <p>Maximum 400 Hz</p>
<p>[Base Voltage]</p> <p>This value should be set to the motor nameplate Rated Voltage.</p>	<p>Parameter # 18</p> <p>Parameter Type Read & Write</p> <p>Units 1 Volt</p> <p>Factory Default Max. Drive Rated Volts</p> <p>Minimum 25% of Max. Drive Rated Volts</p> <p>Maximum 100% of Max. Drive Rated Volts</p>
<p>[Maximum Voltage]</p> <p>This parameter sets the highest voltage the drive will output.</p>	<p>Parameter # 20</p> <p>Parameter Type Read & Write</p> <p>Units 1 Volt</p> <p>Factory Default Max. Drive Rated Volts</p> <p>Minimum 25% of Max. Drive Rated Voltage</p> <p>Maximum 100% of Max. Drive Rated Volts</p>
<p>[Minimum Freq]</p> <p>This parameter sets the lowest frequency the drive will output. IMPORTANT: All analog inputs to the drive (4-20mA, 0-10V, Remote Pot) are scaled for the range [Minimum Freq] to [Maximum Freq].</p>	<p>Parameter # 16</p> <p>Parameter Type Read & Write</p> <p>Units 1 Hz</p> <p>Factory Default 0 Hz</p> <p>Minimum 0 Hz</p> <p>Maximum 120 Hz</p> <p>IMPORTANT: This parameter can not be programmed while the drive is running.</p>

Set Up Group (cont.)

<p>[Maximum Freq]</p> <p>This parameter sets the highest frequency the drive will output. IMPORTANT: All analog inputs to the drive (4-20mA, 0-10V, Remote Pot) are scaled for the range [Minimum Freq] to [Maximum Freq]. Max hertz may be set to less than base hertz.</p>	<p>Parameter # 19</p> <p>Factory Default 60 Hz</p> <p>Read & Write</p> <p>Units 1 Hz</p> <p>Minimum 40 Hz</p> <p>Maximum 400 Hz</p> <p>IMPORTANT: This parameter can not be programmed while the drive is running.</p>
<p>[Stop Select]</p> <p>This parameter selects the stopping mode when the drive receives a valid stop command.</p>	<p>Parameter # 10</p> <p>Factory Default "Ramp"</p> <p>Read & Write</p> <p>Units None</p> <p>Settings "Coast" "Ramp" "DC Brake" "S-Curve"</p> <p>Causes the Drive to Turn Off Immediately Drive Decelerates to 0 Hz, Then Turns Off – Requires a Value In [Decel Time 1] or [Decel Time 2] Injects DC Braking Voltage Into the Motor – Requires a Value in Both [Decel Hold Time] & [Decel Hold Level]. Drive ramps to stop using 'fixed S-Curve' profile. Stop time is twice the selected decel time.</p>
<p>[Current Limit]</p> <p>This parameter sets the maximum drive output current that is allowed before current limiting occurs. IMPORTANT: If a value is programmed into the [Sec Curr Limit] parameter then that value will be the active current limit value at speeds above 1.5 times [Base Frequency]. See Fig. 5.5. [Output 1 Config] and [Output 2 Config] can be set to "alarm" to indicate an overload condition exists.</p>	<p>Parameter # 36</p> <p>Factory Default 150 % of Drive Rated Current ①</p> <p>Read & Write</p> <p>Units 1 %</p> <p>Minimum 20 % of Drive Rated Current ①</p> <p>Maximum 150% of Drive Rated Current ①</p> <p>IMPORTANT: See [Cur Lim Trip En] on page 5-40.</p>

① The Drive Rated Output Current is based on three phase input ratings. See page 5-14 for instructions for Single Phase Input Ratings.

Set Up Group (cont.)

[Overload Mode]		Parameter # 37	Factory Default	"No Derating"																																								
Parameter Type	Units	Read & Write	Settings																																									
<p>This parameter selects the derating factor for the I²t electronic overload function. Designed to meet NEC Article 430 and UL (file E59272) equivalent requirements. Additional overload devices do not need to be installed.</p>		None	<p>10:1 Speed Range – No Derating Refer to Figure 5.2</p> <p>4:1 Speed Range – Derate below 25% of Base Speed. Refer to Figure 5.3</p> <p>2:1 Speed Range – Derate below 50% of Base Speed. Refer to Figure 5.4</p>																																									
<p>Figure 5.2 No Derating</p> <table border="1"> <caption>Data for Figure 5.2: No Derating</caption> <thead> <tr> <th>% Base Speed</th> <th>% of [Overload Current] Setting</th> </tr> </thead> <tbody> <tr><td>0</td><td>100</td></tr> <tr><td>25</td><td>100</td></tr> <tr><td>50</td><td>100</td></tr> <tr><td>75</td><td>100</td></tr> <tr><td>100</td><td>100</td></tr> <tr><td>125</td><td>100</td></tr> <tr><td>150</td><td>100</td></tr> <tr><td>175</td><td>100</td></tr> <tr><td>200</td><td>100</td></tr> </tbody> </table>		% Base Speed	% of [Overload Current] Setting	0	100	25	100	50	100	75	100	100	100	125	100	150	100	175	100	200	100	<p>Figure 5.3 Min Derating</p> <table border="1"> <caption>Data for Figure 5.3: Min Derating</caption> <thead> <tr> <th>% Base Speed</th> <th>% of [Overload Current] Setting</th> </tr> </thead> <tbody> <tr><td>0</td><td>40</td></tr> <tr><td>25</td><td>40</td></tr> <tr><td>50</td><td>100</td></tr> <tr><td>75</td><td>100</td></tr> <tr><td>100</td><td>100</td></tr> <tr><td>125</td><td>100</td></tr> <tr><td>150</td><td>100</td></tr> <tr><td>175</td><td>100</td></tr> <tr><td>200</td><td>100</td></tr> </tbody> </table>		% Base Speed	% of [Overload Current] Setting	0	40	25	40	50	100	75	100	100	100	125	100	150	100	175	100	200	100	
% Base Speed	% of [Overload Current] Setting																																											
0	100																																											
25	100																																											
50	100																																											
75	100																																											
100	100																																											
125	100																																											
150	100																																											
175	100																																											
200	100																																											
% Base Speed	% of [Overload Current] Setting																																											
0	40																																											
25	40																																											
50	100																																											
75	100																																											
100	100																																											
125	100																																											
150	100																																											
175	100																																											
200	100																																											
<p>Figure 5.4 Max Derating</p> <table border="1"> <caption>Data for Figure 5.4: Max Derating</caption> <thead> <tr> <th>% Base Speed</th> <th>% of [Overload Current] Setting</th> </tr> </thead> <tbody> <tr><td>0</td><td>20</td></tr> <tr><td>50</td><td>20</td></tr> <tr><td>75</td><td>100</td></tr> <tr><td>100</td><td>100</td></tr> <tr><td>125</td><td>100</td></tr> <tr><td>150</td><td>100</td></tr> <tr><td>175</td><td>100</td></tr> <tr><td>200</td><td>100</td></tr> </tbody> </table>		% Base Speed	% of [Overload Current] Setting	0	20	50	20	75	100	100	100	125	100	150	100	175	100	200	100	<p>Parameter # 38</p> <p>Parameter Type Read & Write</p> <p>Units 0.1 Amps</p>																								
% Base Speed	% of [Overload Current] Setting																																											
0	20																																											
50	20																																											
75	100																																											
100	100																																											
125	100																																											
150	100																																											
175	100																																											
200	100																																											
<p>[Overload Current]</p> <p>This value should be set to the motor nameplate Full Load Amps (F.L.A.).</p>		<p>Factory Default</p> <p>Minimum 115% of Drive Rated Current</p> <p>Maximum 20% of Drive Rated Current</p>		<p>Displayed in Amps</p> <p>Displayed in Amps</p> <p>Displayed in Amps</p>																																								

Set Up Group (cont.)

[Sec Curr Limit] When this parameter is set to zero, the [Current Limit] setting is used throughout the frequency range. When set to a value other than zero, the [Current Limit] value will be active up to the [Base Frequency] setting, then tapers down between [Base Frequency] and 1.5 times [Base Frequency]. At frequencies above 1.5 times [Base Frequency], the [Sec Curr Limit] setting is the active current limit value.	Parameter #	141	Factory Default	0% of Drive Rated Current ②
	Parameter Type	Read & Write	Minimum	0% of Drive Rated Current ②
	Units	1%	Maximum	150% of Drive Rated Current ②

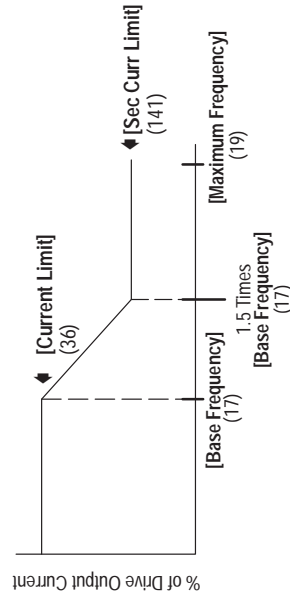


Figure 5.5 Current Limit Setting

Single Phase Input Ratings

The [**Current Limit**], [**Overload Current**] and [**Sec Curr Limit**] parameters are set based on the drive rated output current for three phase input ratings. When setting these parameters for single phase input ratings, use the following formula to determine the proper parameter setting:

$$10 \text{ Output Current} \textcircled{3} \times \text{Percent (0 to 150\%)} = \text{Parameter setting} \\ 30 \text{ Output Current} \textcircled{3} \quad \text{in percent}$$

- ② The Drive Rated Output Current is based on three phase input ratings. See **Single Phase Input Ratings** instructions.
- ③ See Table 1.A on page 1-6.

Advanced Setup

This group contains parameters that are required to setup advanced functions of the drive such as custom Volts per Hertz settings and dynamic braking.

[Minimum Freq]

This parameter sets the lowest frequency the drive will output. **IMPORTANT:** All analog inputs to the drive (4-20mA, 0-10V, Remote Pot) are scaled for the range [Minimum Freq] to [Maximum Freq].

Parameter #	16	Factory Default	0 Hz
Parameter Type	Read & Write	Minimum	0 Hz
Units	1 Hz	Maximum	120 Hz

IMPORTANT: This parameter can not be programmed while the drive is running.

[Maximum Freq]

This parameter sets the highest frequency the drive will output. **IMPORTANT:** All analog inputs to the drive (4-20mA, 0-10V, Remote Pot) are scaled for the range [Minimum Freq] to [Maximum Freq].

Parameter #	19	Factory Default	60 Hz
Parameter Type	Read & Write	Minimum	40 Hz
Units	1 Hz	Maximum	400 Hz

IMPORTANT: This parameter can not be programmed while the drive is running.

[Base Frequency]

This value should be set to the motor nameplate Rated Frequency.

Parameter #	17	Factory Default	60 Hz
Parameter Type	Read & Write	Minimum	40 Hz
Units	1 Hz	Maximum	400 Hz
Units	1 Hz	Maximum	400 Hz


Advanced Set Up Group (cont.)

[Base Voltage]

This value should be set to the motor nameplate Rated Voltage.

Parameter #	18	Factory Default	Max. Drive Rated Volts
Parameter Type	Read & Write	Minimum	25% of Max. Drive Rated Volts
Units	1 Volt	Maximum	100% of Max. Drive Rated Volts

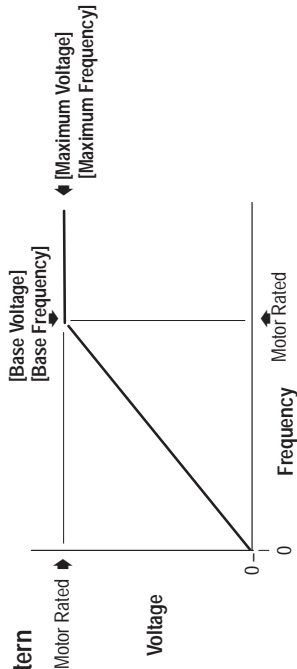Figure 5.6 Standard Volts-per-Hz Pattern



[Break Frequency]

This parameter sets a midpoint frequency on a custom Volts-per-Hz curve. Combined with [Break Voltage], this value determines the Volts-per-Hz ratio between 0 and [Break Frequency]. **IMPORTANT: [DC Boost Select]** must be set to "Break Point" for this parameter to be active.

Parameter #	49	Factory Default	4 Hz
Parameter Type	Read & Write	Minimum	0 Hz
Units	1 Hz	Maximum	120 Hz


Advanced Set Up Group (cont.)

[Break Voltage] This parameter sets the voltage the drive will output at [Break Frequency]. Combined with [Break Frequency], this value determines the Volts-per-Hz ratio between 0 and [Break Frequency]. IMPORTANT: [DC Boost Select] must be set to "Break Point" to activate this parameter.	Parameter #	50	Factory Default	See Table
	Parameter Type	Read & Write	Minimum	0 Volts
	Units	1 Volt	Maximum	50% of Max. Drive Rated Volts
			230V	
			460V	
			1/2 HP	25 Volts
			3/4 HP	30 Volts
			1 HP	28 Volts
			2 HP	25 Volts
			3 HP	22 Volts
			5 HP	N/A

[Maximum Voltage] This parameter sets the highest voltage the drive will output.	Parameter #	20	Factory Default	Max. Drive Rated Volts
	Parameter Type	Read & Write	Minimum	25% of Max. Drive Rated Volts
	Units	1 Volt	Maximum	100% of Max. Drive Rated Volts

Figure 5.7 Custom Volts-per-Hz Pattern

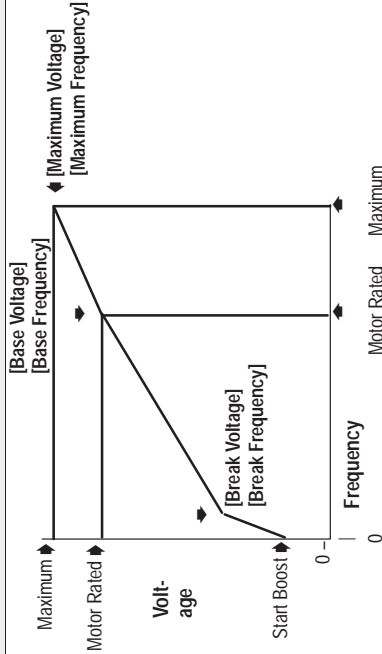This pattern is active only when [DC Boost Select] is set to "Break Point."



The following guidelines should be followed when setting up a custom Volts-per-Hz curve:

1. [Base Voltage] must be greater than [Start Boost].
2. If [DC Boost Select] is set to "Break Point" then:
 - [Base Voltage] must be greater than [Break Voltage] and
 - [Break Voltage] must be greater than [Start Boost].

IMPORTANT:[Maximum Voltage] does not have to be set greater than [Base Voltage], but the maximum drive output is limited to [Maximum Voltage].

Advanced Set Up Group (cont.)

[DC Boost Select]	
<p>This parameter sets the level of DC boost at low frequencies. It also selects special Volts-per-Hz patterns.</p>	<p>Parameter # 9</p> <p>Factory Default "Break Point"</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Settings</p> <ul style="list-style-type: none"> "No Boost" See Figure 5.8 "6 Volts" See Figure 5.8 "12 Volts" See Figure 5.8 "18 Volts" See Figure 5.8 "24 Volts" See Figure 5.8 "30 Volts" See Figure 5.8 "36 Volts" See Figure 5.8 "42 Volts" See Figure 5.8 "48 Volts" See Figure 5.8 "Break Point" See Figure 5.7 "Run Boost" See Figure 5.10 "Fan Sel #1" See Figure 5.9 "Fan Sel #2" See Figure 5.9

Figure 5.8 Standard Boost Volts-per-Hz Pattern

Active when [DC Boost Select] is set to "No Boost" or "6 Volts" through "48 Volts."


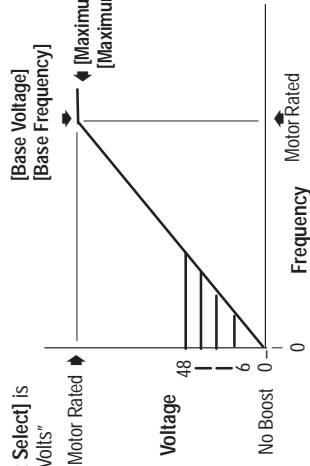


Figure 5.9 Fan/Pump Volts-per-Hz Pattern

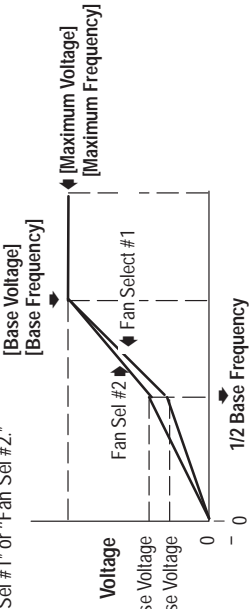
These patterns are active only when [DC Boost Select] is set to "Fan Sel #1" or "Fan Sel #2."



Advanced Set Up Group (cont.)

[Start Boost]	Parameter #	48	Factory Default	See Table
	Parameter Type	Read & Write	Minimum	0 Volts
This parameter sets the DC boost level for acceleration when [DC Boost Select] is set to "Run Boost" or "Break Point."	Units	1 Volt	Maximum	25% of Max. Drive Rated Volts
	1/2	HP	20	Volts
	3/4	HP	25	Volts
	1	HP	20	Volts
	2	HP	22	Volts
	3	HP	19	Volts
	5	HP	N/A	
	460V		31	Volts
	230V		45	Volts
			37	Volts
			33	Volts
			26	Volts

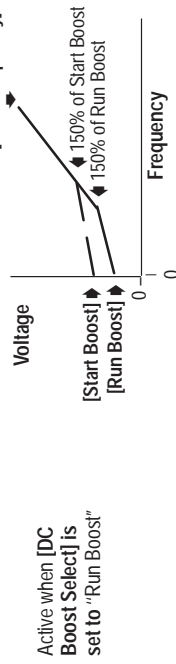Figure 5.10 Start/Run Boost



[Run Boost]	Parameter #	83	Factory Default	0 Volts
	Parameter Type	Read & Write	Minimum	0 Volts
This parameter sets the DC boost level for constant speed level when [DC Boost Select] is set to "Run Boost." [Run Boost] must be set at a value less than [Start Boost].	Units	1 Volt	Maximum	25% of Max. Drive Rated Volts


Advanced Set Up Group (cont.)

[PWM Frequency]

This parameter sets the carrier frequency for the PWM output waveform. **IMPORTANT:** Output current derating applies above 4kHz. See Fig. 5-11.

Parameter #	45	Factory Default	4.0 kHz
Parameter Type	Read & Write	Minimum	2.0 kHz
Units	0.1 kHz	Maximum	8.0 kHz

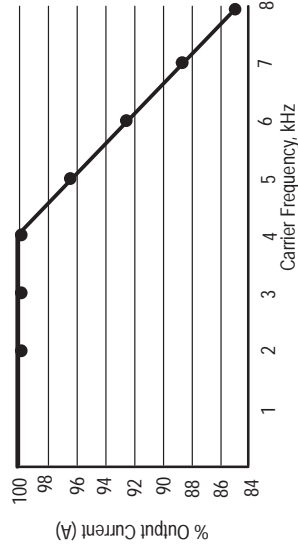Figure 5.11 PWM Frequency Derating




IMPORTANT: Ignoring derating guidelines can cause reduced drive performance.

IMPORTANT: Changing PWM carrier frequency may result in changes in Start-up and Holding current if start boost and DC Holding voltages are in effect. These parameters should be checked if the carrier frequency is changed and reprogrammed if needed.

Advanced Set Up Group (cont.)

<p>[Analog Invert]</p> <p>This parameter enables the inverting function for the 0-10 Volt and 4-20mA analog input signal at TB2.</p>	<p>Parameter # 84</p> <p>Factory Default "Disabled"</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Settings "Enabled" "Disabled"</p> <p>Maximum Input Commands [Minimum Freq] Minimum Input Commands [Maximum Freq] Maximum Input Commands [Maximum Freq] Minimum Input Commands [Minimum Freq]</p>
---	--

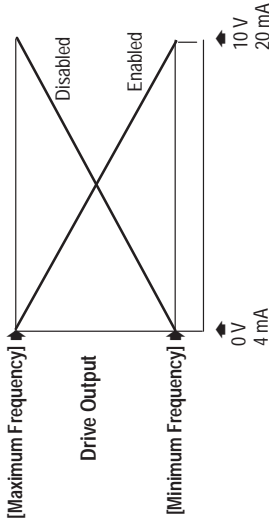Figure 5.12 Analog Invert



<p>[4-20mA Loss Sel]</p> <p>This parameter selects the drives reaction to a loss of a 4-20mA signal when the active [Frequency Source] is 4-20mA. IMPORTANT: The drive output contacts can be used to issue an alarm signal by setting [Output 1 Config] or [Output 2 Config] to "alarm". IMPORTANT: Loss of signal is defined as a signal < 3.5 mA or a signal > 20.5 mA.</p>	<p>Parameter # 81</p> <p>Factory Default "Stop/Fault"</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Settings "Stop/Fault" "Hold/Alarm" "Max/Alarm" "Pre1/Alarm" "Min/Alarm"</p> <p>Drive Stops and Issues "Hz Err Fault" (F29) Drive Maintains Last Output Freq and sets an Alarm bit Drive Outputs [Maximum Freq] and sets Alarm bit Drive Outputs [Preset Freq 1] and sets an Alarm bit Drive Outputs [Minimum Freq] and sets an Alarm bit</p>
---	--

Advanced Set Up Group (cont.)

Parameter #	Factory Default	Settings	Description
10	"Ramp"	"Coast" "Ramp" "DC Brake" "S-Curve"	Causes the Drive to Turn Off Immediately Drive Decelerates to 0 Hz, Then Turns Off – Requires a Value in [Decel Time 1] or [Decel Time 2] Injects DC Braking Voltage Into the Motor – Requires a Value in Both [Decel Hold Time] & [Decel Hold Level]. Drive ramps to stop using a fixed "S-Curve" profile. Stop time is twice the selected decel time.

[DC Hold Time]

This value sets the amount of time that the [DC Hold Level] voltage will be applied to the motor when the stop mode is set to either "DC Brake" or "Ramp." When in "Coast" mode and the drive is stopped and restarted within the [DC Hold Time] setting, the speed will resume at the output frequency prior to the stop command.

Parameter #	Factory Default	Minimum	Maximum
12	0 Sec	0 Sec	15 Sec

Figure 5.13 Ramp


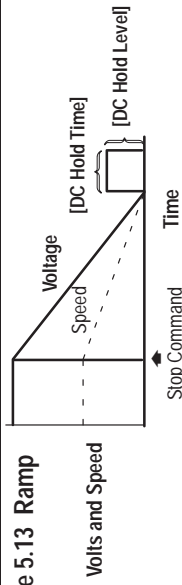


Figure 5.14 DC Brake

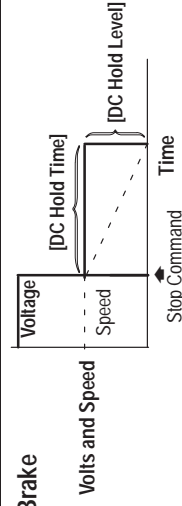

Advanced Set Up Group (cont.)

<p>[DC Hold Level]</p> <p>This parameter value sets the DC voltage applied to the motor during braking when the [Stop Select] is set to either "DC Brake" or "Ramp". IMPORTANT: When setting this parameter, begin at a low voltage and continue increasing until sufficient holding torque is achieved and the drive output current rating is not exceeded.</p>	<p>Parameter # 13</p> <p>Factory Default 0 Volts</p> <p>Parameter Type Read & Write</p> <p>Units 1 Volt</p> <p>Minimum 0 Volts</p> <p>Maximum 25% of Max. Drive Rated Volts</p>
<p>[DB Enable]</p> <p>This parameter enables the use of external dynamic brake resistors by disabling the internal ramp regulation. IMPORTANT: Dynamic braking is not available for 1/2 through 1HP (0.37 to 0.75 kW) units rated 230 Volt.</p>	<p>Parameter # 11</p> <p>Factory Default "Disabled"</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Settings "Enabled"</p> <p>"Disabled"</p> <p>Permits dynamic brake operation</p> <p>Permits Ramp Regulation</p>
<p>[Motor Type]</p> <p>This parameter should be set to match the type of motor connected to the drive.</p>	<p>Parameter # 41</p> <p>Factory Default "Induc/Reluc"</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Settings "Induc/Reluc"</p> <p>"Sync PM"</p> <p>Requires No Additional Setting for use with Induction/reluctance rated motors</p> <p>Requires [Stop Select] to be set to a selection other than "DC Brake" when used with Synchronous Permanent Magnet Motors</p>

Advanced Set Up Group (cont.)

[Compensation]

Some drive/motor combinations have inherent instabilities which are exhibited as nonsinusoidal current feedback. The compensation when enabled will correct this condition. Compensation is only active at frequencies below 50 Hertz where the problem is most pronounced.

Parameter #	Read & Write	Factory Default
52	None	"No Comp"
Parameter Type	Units	Settings
		"No Comp"
		"Comp"
		Compensation Disabled
		Compensation Enabled

Frequency Set

This group of parameters allows the user to program the frequency source, frequency settings, accel/decel times and skip frequencies of the drive.

[Freq Select 1]

This parameter is the factory default parameter for selecting the frequency source that will supply the [Freq Command] to the drive. [Freq Select 2] or [Preset Freq 1-7] can be selected in place of this parameter with proper terminal block inputs. Refer to charts on Pages 5-29 and 5-31.

Parameter #	5	Factory Default	"Adapter 1"
Parameter Type	Read & Write		
Units	None		
		Settings	"Preset 1" "Preset 2" "Preset 3" "Preset 4" "Preset 5" "Preset 6" "Preset 7"
			"Remote Pot" "0-10 Volt" "4-20 mA" "MOP" "Adapter 1" "Adapter 2" "Adapter 3" "Adapter 4" "Adapter 5" "Adapter 6"

[Freq Select 2]

This parameter controls which of the frequency sources is currently supplying the [Freq Command] to the drive unless [Freq Select 1] or [Preset Freq 1-7] are selected with proper terminal block inputs. Refer to charts on Pages 5-29 and 5-30.

Parameter #	6	Factory Default	"Remote Pot"
Parameter Type	Read & Write		
Units	None		
		Settings	"Preset 1" "Preset 2" "Preset 3" "Preset 4" "Preset 5" "Preset 6" "Preset 7"
			"Remote Pot" "0-10 Volt" "4-20 mA" "MOP" "Adapter 1" "Adapter 2" "Adapter 3" "Adapter 4" "Adapter 5" "Adapter 6"

IMPORTANT: If an adapter that is not connected is selected as the active frequency source, the drive will fault on "Hz Sel Fault" (F30).

Frequency Set Group (cont.)

<p>[Jog Frequency]</p> <p>This parameter sets the frequency the drive will output when it receives a jog command.</p>	<p>Parameter # 24</p> <p>Factory Default 10.0 Hz</p> <p>Parameter Type Read & Write</p> <p>Units 0.1 Hz</p> <p>Minimum 0.0 Hz</p> <p>Maximum 400.0 Hz</p>
<p>[Prst/2nd Accel]</p> <p>This parameter, along with the [Upper Presets] parameter, determines which frequency source and Accel/Decel parameters will be selected using the optional inputs SW1, SW2 and SW3. Refer to charts on Pages 5-29 and 5-30.</p>	<p>Parameter # 26</p> <p>Factory Default "Preset"</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Settings "Preset" "2nd Accel"</p>
<p>[Upper Presets]</p> <p>This parameter along with the [Prst/2nd Accel] parameter determines which frequency source and Accel/Decel parameters will be selected using the optional inputs SW1, SW2 and SW3. Refer to charts on Pages 5-29 and 5-30.</p>	<p>Parameter # 72</p> <p>Factory Default "Disabled"</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Settings "Enabled" "Disabled"</p>
<p>[Accel Time 2]</p> <p>This value determines the time it will take the drive to ramp from 0 Hz to [Maximum Frequency]. The rate is linear unless [S Curve] is "Enabled." It applies to any increase in command frequency unless [Accel Time 1] is selected. Refer to charts on Pages 5-29 and 5-30.</p>	<p>Parameter # 30</p> <p>Factory Default 10.0 Sec</p> <p>Parameter Type Read & Write</p> <p>Units 0.1 Second</p> <p>Minimum 0.0 Sec</p> <p>Maximum 3600.0 Sec</p>

Frequency Set Group (cont.)

<p>[Decel Time 2]</p> <p>This value determines the time it will take the drive to ramp from [Maximum Freq] to 0 Hz. The rate is linear unless [S Curve] is "Enabled" or [Stop Select] is set to "S-Curve." It applies to any decrease in command frequency unless [Decel Time 1] is selected. Refer to charts on Pages 5-29 and 5-30.</p>	<p>Parameter # 31</p> <p>Read & Write</p> <p>0.1 Second</p> <p>Factory Default 10.0 Sec</p> <p>Minimum 0.0 Sec</p> <p>Maximum 3600.0 Sec</p>
<p>[Preset Freq 1-7]</p> <p>These values set the frequencies that the drive will output when selected. Refer to charts on Pages 5-29 and 5-30.</p>	<p>Parameter # 27-29 & 73-76</p> <p>Read & Write</p> <p>0.1 Hz</p> <p>Factory Default 0.0 Hz</p> <p>Minimum 0.0 Hz</p> <p>Maximum 400.0 Hz</p>
<p>[Skip Freq 1-3]</p> <p>These values, in conjunction with [Skip Freq Band], create a range of frequencies at which the drive will not operate continuously.</p>	<p>Parameter # 32-34</p> <p>Read & Write</p> <p>1 Hz</p> <p>Factory Default 400 Hz</p> <p>Minimum 0 Hz</p> <p>Maximum 400 Hz</p>

Programming the drive for Frequency Source and Accel/Decel Control

Use Table 5.A through Table 5.C to determine which frequency source and Accel/Decel Time are suitable to your application. Switch or contact inputs at terminal TB2 are used to select functionality based on how you program parameters (26), (72), and (21).


Frequency Set Group (cont.)

[Skip Freq Band]

This parameter determines the band width around a [Skip Frequency]. The band width is $2 \times$ [Skip Freq Band] – 1/2 the band above and 1/2 the band below the [Skip Frequency] setting. "0" Disables All Skip Frequencies.

Parameter #	35	Factory Default	0 Hz
Parameter Type	Read & Write	Minimum	0 Hz
Units	1 Hz	Maximum	15 Hz

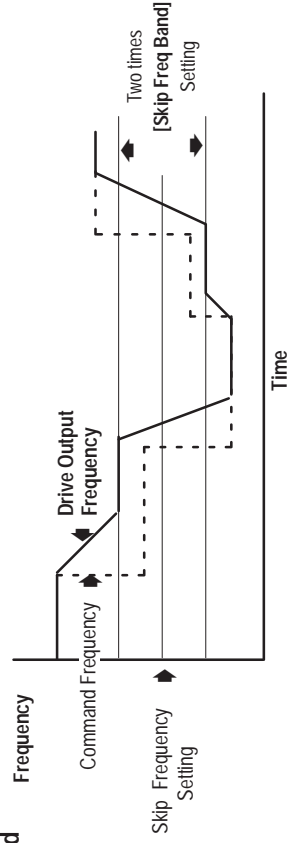Figure 5.15 Skip Frequency Band



[MOP Increment]

The MOP function is a digital solid-state circuit that produces the same effect as rotating a speed reference potentiometer with a small DC motor. This permits local (HIM) or remote (TB2) control of the command frequency. This parameter sets the rate of increase or decrease to the [MOP Hertz] command frequency for each input to the MOP Increment or MOP Decrement terminals of TB2. (Requires the proper [Input Mode] selection or serial communications.)

Parameter #	22	Factory Default	0.00 Hz/Sec
Parameter Type	Read & Write	Minimum	0.00
Units	1 Hz/Sec	Maximum	255 Hz/Sec

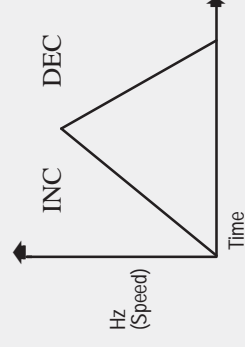


Table 5.A Frequency Source Selection

Parameter Settings	Frequency Source ①										Accel/Decel			Control Terminal Block		
	Freq Select 1 (5)	Freq Select 2 (6)	Freq 1 Preset (27)	Freq 2 Preset (28)	Freq 3 Preset (29)	Freq 4 Preset (73)	Freq 5 Preset (74)	Freq 6 Preset (75)	Freq 7 Preset (76)	Accel Time 1 (7)	Decel Time 1 (8)	Accel Time 2 (30)	Decel Time 2 (31)	SW3 TB2-18	SW2 TB2-17	SW1 TB2-16
Upper Presets (72)	•		•								•			0	0	0
Disabled ②				•							•			0	X	0
		•									•			0	X	0
					•					•③	•	■	■	0	X	0
										•③	•	■	■	X	0	X
Preset ②										•③	•	■	■	X	X	0
										•③	•	■	■	X	X	0
										•③	•	■	■	X	X	0
										•③	•	■	■	X	X	0
Enabled	•										•			0	0	0
											•			0	0	X
											•			0	X	0
											•			0	X	0
											•			0	X	X
											•			X	0	0
											•			X	0	X
										•			X	X	0	
										•			X	X	X	

① The parameter [Freq Source] indicates the active frequency source. See p. 5-45.

② Factory default settings.

③ Not valid for [Input Mode] = "3 W/2nd Acc" or [Input Mode] = "Run F/R 2nd A".

• Indicates active function/parameter. X Indicates closed switch. 0 Indicates open switch. (26) Indicates parameter number.

■ Valid for [Input Mode] = "3 W/2nd Acc" or [Input Mode] = "Run F/R 2nd A".

Table 5.B Accel/Decel Selection

Parameter Settings	Frequency Source ①										Accel/Decel			Control Terminal Block		
	Freq Select 1 (5)	Freq Select 2 (6)	Preset Freq 1 (27)	Preset Freq 2 (28)	Preset Freq 3 (29)	Preset Freq 4 (73)	Preset Freq 5 (74)	Preset Freq 6 (75)	Preset Freq 7 (76)	Accel Time 1 (7)	Decel Time 1 (8)	Accel Time 2 (30)	Decel Time 2 (31)	SW3 TB2-18	SW2 TB2-17	SW1 TB2-16
Upper Presets (72)	•									•	•			0	0	0
Disabled ②	•									•		•	•	0	X	0
	•													0	0	X
	•	•								•		•	•	X	X	0
	•	•								•		•	•	X	X	0
2nd Accel	•									•				0	0	0
	•									•		•	•	0	0	X
	•													0	X	0
	•											•	•	0	X	0
Enabled	•											•	•	0	X	X
														X	0	0
												•	•	X	0	X
												•	•	X	X	0

① The parameter [Freq Source] indicates the active frequency source. See p. 5-45.

② Factory default settings.

• Indicates active function/parameter. X Indicates closed switch. 0 Indicates open switch. (26) Indicates parameter number.

Table 5.C Motor Operated Potentiometer (MOP) Frequency Source and Accel/Decel Selection

Parameter/ 2nd Accel (26)	Parameter Settings		Frequency Source ①		Accel/Decel			Control Terminal Block		
	Upper Presets (72)	Freq Select 1 (5)	Freq Select 2 (6)	Accel Time 1 (7)	Decel Time 1 (8)	Accel Time 2 (30)	Decel Time 2 (31)	SW3 TB2-18	SW2 TB2-17	SW1 TB2-16
Preset or 2nd Accel	Disabled or Enabled	•		•	•			0	MOP② Decrement	MOP③ Increment
			•			•	•	X	MOP② Decrement	MOP③ Increment

① The parameter [Freq Source] indicates the active frequency source. See p. 5-45.

② MOP Decrement – When this switch is closed, [MOP HZ] is decreased at the rate programmed in [MOP Increment].

③ MOP Increment – When this switch is closed, [MOP HZ] is increased at the rate programmed in [MOP Increment].

• Indicates active function/parameter. X Indicates closed switch. 0 Indicates open switch. (26) Indicates parameter number.

Feature Select

This group contains the necessary parameters to activate and program advanced features of the drive.

[Run On Power Up]

This parameter enables the function that allows the drive to **automatically restart** on power up regardless of what the drive status was before power is lost. This applies only when there is a maintained input to the start and stop inputs. Refer to Chapter 2, Figure 2.5.

Parameter #	14	Factory Default	"Disabled"
Parameter Type	Read & Write	Settings	"Enabled" "Disabled"
Units	None		



ATTENTION: This parameter may only be used as outlined in NFPA 79, paragraph 6-14 (exceptions 1-3) for specialized applications. Equipment damage and/or personal injury may result if this parameter is used in an inappropriate application.

[Reset/Run Tries]

This value sets the maximum number of times the drive attempts to reset a fault and restart before the drive issues a "Max Retries Fault." Not operative for faults 9, 10, 11, 24, 25, 26, 29, 30, 32, 33, 34, 35, 38, 39, 40, 41, 42, 43 and 48. **IMPORTANT: [Reset/Run Tries]** is a cumulative count. This counter resets to zero if four (4) minutes elapses since the last fault.

Parameter #	85	Factory Default	0
Parameter Type	Read & Write	Minimum	0
Units	None	Maximum	9

Feature Select Group (cont.)

[Reset/Run Time] This value sets the time between restart attempts when [Reset/Run Tries] is a value other than zero. IMPORTANT: [Reset/Run Tries] is a cumulative count. This counter resets to zero if four (4) minutes elapses since the last fault.	Parameter #	15	Factory Default	1.0 Sec
	Parameter Type	Read & Write	Minimum	0.5 Sec
	Units	0.1 Second	Maximum	30.0 Sec


[S Curve Enable] This parameter enables a fixed shape S-Curve.	Parameter #	57	Factory Default	"Disabled"
	Parameter Type	Read & Write	Settings	"Enabled" "Disabled"
	Units	None		

Figure 5.16 S-Curve

Accel/Decel times are double the active accel/decel time settings.

IMPORTANT: The setting for [S-Curve Time] must be 0.

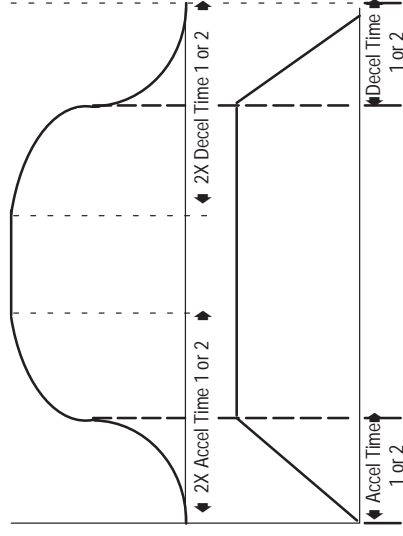IMPORTANT: If [Stop Select] is set to "S Curve" then the decel time will be double the active decel setting when a stop command is provided.



Feature Select Group (cont.)


[S Curve Time]	Parameter # 56	Factory Default 0.0 Sec
	Parameter Type Read & Write	Minimum 0.0 Sec
	Units 0.1 Second	Maximum 300.0 Sec

This parameter enables an adjustable shape S-Curve accel/decel time. **IMPORTANT:** [S-Curve Time] must be set to a value less than or equal to the Accel & Decel times.

Figure 5.17 S-Curve Time

[S-Curve Enable] must be "enabled" for this parameter to be active. The [S-Curve Time] setting is added to the active accel/decel times to form an adjustable S-Curve.

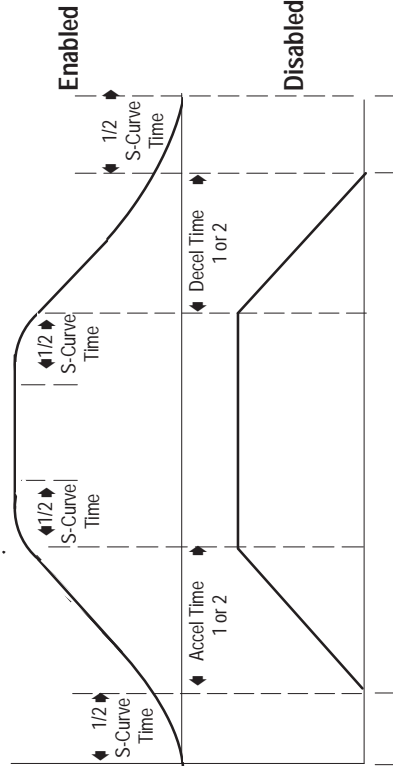IMPORTANT: If [Stop Select] is set to "S Curve" then the decel time will be double the active decel setting when a stop command is provided.



[Language]

Parameter # 47	Factory Default Alternate language in multilingual versions, English in English only versions.
----------------	--

Parameter Type Read & Write	Units None
-----------------------------	------------

This parameter selects between English and the alternate second language that can be displayed on the HIM.

Settings "English" or	"French"
"Italian"	"Spanish"
"German"	

Feature Select Group (cont.)

<p>[Balance Freq] (FRN 4.01 and below only)</p> <p>This parameter selects the frequency at which balance detection is performed.</p>	<p>Parameter # 80</p> <p>Factory Default 0 Hz</p> <p>Parameter Type Read & Write</p> <p>Units 1 Hertz</p> <p>Minimum 0 Hz</p> <p>Maximum 255 Hz</p>
<p>[Balance Time] (FRN 4.01 and below only)</p> <p>This parameter determines the amount of delay time before a valid output occurs. The delay time begins when the drive reaches [Balance Freq]. The output contact will be closed when balanced and open when unbalanced.</p>	<p>Parameter # 79</p> <p>Factory Default 0 Sec</p> <p>Parameter Type Read & Write</p> <p>Units 0.1 second</p> <p>Minimum 0 Sec</p> <p>Maximum 255 Sec</p>

Feature Select Group (cont.)

<p>[Balance Angle] (FRN 4.01 and below only)</p> <p>This parameter determines the acceptable variation in phase angle which is set between a balanced condition and an unbalanced condition. A balance condition is defined as a variation which is less than the 'Balance Angle' setting. [Output 1 Config] or [Output 2 Config] can be set to "Balance" to indicate when a balanced condition exists.</p>	<p>Parameter # 78</p> <p>Parameter Type Read & Write</p>	<p>Factory Default 0</p> <p>Minimum 0</p> <p>Maximum 255</p>
	<p>Parameter # 143</p> <p>Parameter Type Read & Write</p> <p>Units None</p>	



Figure 5.18 Motor Unbalance
(FRN 4.01 and below only)

<p>[Cable Length] (FRN 4.01 and above only)</p> <p>This parameter selects the length of cable that is connected to the motor. IMPORTANT: If "Overload Fault" (F7) occurs – choose "Long" length.</p>	<p>Parameter # 143</p> <p>Parameter Type Read & Write</p> <p>Units None</p>	<p>Factory Default "Short"</p> <p>Settings "Short" "Long"</p>
--	---	---

Output Configuration

This group of parameters contains the programming options for digital and analog drive outputs.

[Output 1 Config]

This parameter sets the condition that actuates the relay output at TB2, terminals 9 and 10.

Parameter #	Factory Default	Settings	Output
90	"Faulted"	"At Speed" "Above Freq"	Output closes when drive reaches [Freq Command]. Output closes when drive exceeds value set in [Above Freq Val].
Read & Write		"Running" "Faulted" "Alarm"	Output closes when drive is running. Output closes when drive is faulted.
Units		"Balanced" ^① "Above Curr"	Output closes when the drive reaches hardware current limit, software current limit, overvoltage, line loss or 4-20 mA loss. Output closes when a balance condition is detected. Output closes when current exceeds value set in [Above Curr Val].

① FRN 4.01 and below only.

[Output 2 Config]

This parameter sets the condition that actuates the open collector output at TB2, terminals 19 and 20.

Parameter #	Factory Default	Settings	Output
91	"Running"	"At Speed" "Above Freq"	Output closes when drive reaches [Freq Command]. Output closes when drive exceeds value set in [Above Freq Val].
Read & Write		"Running" "Faulted" "Alarm"	Output closes when drive is running. Output closes when drive is faulted.
Units		"Balanced" ^① "Above Curr"	Output closes when the drive reaches hardware current limit, software current limit, overvoltage, line loss or 4-20 mA loss. Output closes when a balance condition is detected. Output closes when current exceeds value set in [Above Curr Val].

① FRN 4.01 and below only.

Application Note: During power up of the drive, the customer programmable Outputs 1 & 2 (TB2-9 & 10, TB2- 19 & 20) are in an indeterminate state for a period of time until the internal control of the drive has initialized (3 sec. max.). Any control system connected to the programmable outputs should take this into consideration. On power down, the programmable outputs may transition in a similar way.

Output Configuration Group (cont.)

<p>[Analog Out Sel]</p> <p>This parameter selects the value to which the 0-10V DC analog output at TB2-5 is proportional to.</p>	<p>Parameter # 25</p> <p>Parameter Type Read & Write</p> <p>Units None</p>	<p>Factory Default "Frequency"</p>
	<p>Setting</p> <p>"Frequency" 0 to [Maximum Freq]</p> <p>"Current" 0 to 200% of Rated Drive Output Current</p> <p>"Bus Volts" 0 to Maximum Bus Voltage— 410V/230V Drives 815V/460V Drives</p> <p>"Power" 0 to 200% of Drive Rated Output Power</p> <p>"Output Volts" 0 to Drive Rated Voltage</p>	

<p>[Above Freq Val]</p> <p>This parameter sets the level at which Output 1 or Output 2 will transition when [Output 1 Config] or [Output 2 Config] are set to "Above Freq". This provides an indication that the drive is operating above the programmed frequency value.</p>	<p>Parameter # 77</p> <p>Parameter Type Read & Write</p> <p>Units Hertz</p>	<p>Factory Default 0 Hz</p> <p>Minimum 0 Hz</p> <p>Maximum 400 Hz</p> <p>NOTE: This parameter can not be programmed while the drive is running.</p>
--	---	--

<p>[Above Curr Val]</p> <p>This parameter sets the level at which Output 1 or Output 2 will transition when [Output 1 Config] or [Output 2 Config] are set to "Above Curr". This provides an indication that the drive output current exceeds the programmed value.</p>	<p>Parameter # 142</p> <p>Parameter Type Read & Write</p> <p>Units 1%</p>	<p>Factory Default 0 % of Drive Rated Current ①</p> <p>Minimum 0 % of Drive Rated Current ①</p> <p>Maximum 150% of Drive Rated Current ①</p>
--	---	--

① The drive rated output current is based on three phase input ratings. See page 5-14 for Single Phase Input Rating instructions.

Faults

This group of parameters provides information and programmed settings on commonly viewed drive faults.

[Fault Buffer 0-3]

These parameters store the last (4) faults that occur. If the same fault occurs multiple times in a row, it will only be stored once. **[Fault Buffer 0]** through **[Fault Buffer 3]** can only be cleared by “Reset Defaults” from EEPROM mode or **[Set Defaults]** parameter. This will leave a “F48” in **[Fault Buffer 0]** and reset all parameters to factory defaults.

Parameter #	86-89	Factory Default	None
Parameter Type	Read Only		
Units	None		
		Buffer	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> ← 0 → 1 ← 2 → 3 </div> <div> Last Fault, stored in EEPROM Fault from Buffer 0, Stored in EEPROM Fault from Buffer 1, Stored in EEPROM Fault from Buffer 2, Stored in EEPROM </div> </div>

[Clear Fault]

This parameter is used to clear a fault and return the drive to ready status if the fault condition no longer exists.
IMPORTANT: **[Clear Fault]** will stop a running drive. Also **[Clear Fault]** does not clear **[Fault Buffer 0]** through **[Fault Buffer 3]**.

Parameter #	51	Factory Default	“Ready”
Parameter Type	Read & Write		
Units	None		
		Displays	“Ready” “Clear Fault”
			Display after function has been attempted Attempts to clear fault


IMPORTANT: To clear a fault using parameter #51, press the SEL key once to select the bottom display line. Press the ▲ ▼ keys until “Clear Fault” appears on the bottom display line. Press the ↵ key. This action will attempt to clear the fault. “Ready” will be displayed. Press the ESC key several times to get back to the Status Display and check if the fault has been cleared. If the fault has not been cleared refer to the Troubleshooting section of this manual.

Faults Group (cont.)


<p>[Cur Lim Trip En]</p> <p>This setting determines whether or not exceeding the setting in [Current Limit] will cause a Diagnostic Current Limit Fault (Fault F36).</p>	<p>Parameter # 82</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Factory Default "Default Run"</p> <p>Setting "Trip @ I Lim" "Default Run"</p> <p>A Diagnostic Current Limit Fault is generated No fault generated</p>
<p>[Line Loss Fault]</p> <p>This setting determines whether a 15% drop in DC Bus voltage will have no effect on operation or cause a "Power Loss Fault" (fault F03).</p> <p>IMPORTANT: The "Line Loss" alarm bit will be set when this condition exists regardless of the parameter setting.</p>	<p>Parameter # 40</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Factory Default "F03 Enable"</p> <p>Setting "UVolt Run" "F03 Enable"</p> <p>"Power Loss Fault" Disabled Drive Trips at 85% of nominal bus voltage.</p>

Faults Group (cont.)

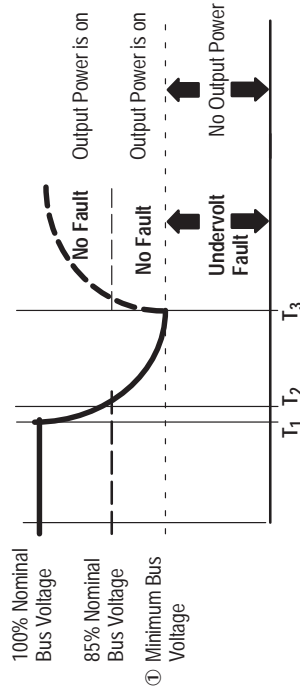Line Loss Fault “U Volt Run” (Disabled)



Line Loss Fault “F03 Enable” (Enabled)

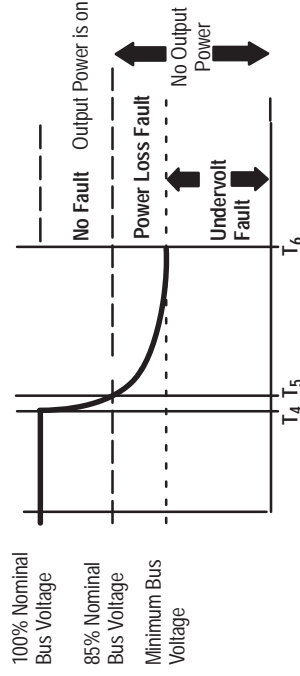

① Minimum bus voltage is approximately 70% of Line Voltage

Application Notes: If line loss is set to “U Volt Run” and [Run On Power Up] is enabled, the drive will run as long as the bus voltage is high enough to maintain logic.

To obtain longer power ride-thru, choose “U Volt Run”. This allows the output power to be on from time T₁ to T₃. To obtain a longer control ride-thru, choose “F03 Enable”. The output power devices are turned off at time T₅ but note that time T₆ – T₅ is greater than time T₃ – T₂.

[Fit Clear Mode]

This parameter controls the method for clearing faults.

Parameter #	Factory Default	Setting	Faults Cleared By Issuing a Valid Stop Command or Cycling Input Power
39	“Enabled”	“Enabled”	Faults Cleared Only By Cycling Input Power
Read & Write	None	“Disabled”	Faults Cleared Only By Cycling Input Power

Diagnostics

This group of parameters contains values that can be helpful in explaining the operation of the drive. Drive status, direction, control and alarm conditions are included.

[Drive Command]

This parameter displays the status of the drive commands in an 8-bit binary format.

Parameter #	58							
Parameter Type	Read Only							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Run
								Reverse
								Accel 2
								Decel 2
								N/A
								Not Used
								Not Used
								Not Used

Diagnostics Group (cont.)

Parameter #	59															
Parameter Type	Read Only															
Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Enabled
																Running
																Command Fwd
																Rotating Fwd
																Accel
																Decel
																Alarm
																Faulted
																At Speed
																Local 0
																Local 1
																Local 2
																Freq Ref 0
																Freq Ref 1
																Freq Ref 2
																Freq Ref 3

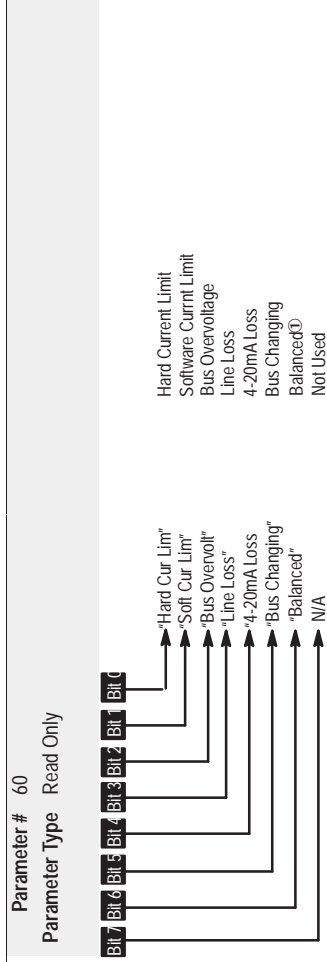
[Drive Status]

This parameter displays the actual operating condition in 16 bit binary format.

Diagnostics Group (cont.)

[Drive Alarm]


This parameter displays which alarm condition is present when bit 6 of [Drive Status] is high (set to 1)



① FRN 4.01 and below only.

[Input Status]

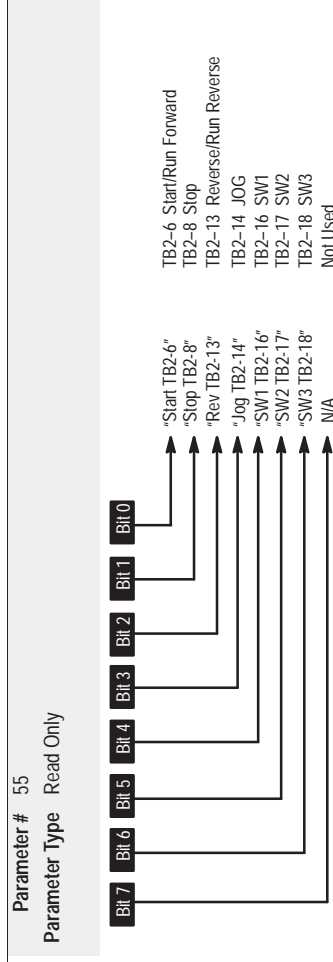This parameter displays the open (0) and closed (1) status of inputs at TB2. Refer to Figure 2.5 and Figure 2.6 for description of terminal connections.



Diagnostics Group (cont.)


<p>[Freq Source]</p> <p>This parameter displays the frequency source currently commanding the drive.</p>	<p>Parameter # 62</p> <table border="1"> <thead> <tr> <th>Parameter Type</th> <th>Read</th> <th>Units</th> <th>Displays</th> </tr> </thead> <tbody> <tr> <td></td> <td>None</td> <td></td> <td>"Remote Pot" "0-10 Volt" "4-20 mA" "MOP" "Adapter 1" "Adapter 2" "Adapter 3" "Adapter 4" "Adapter 5" "Adapter 6"</td> </tr> <tr> <td></td> <td></td> <td></td> <td>"Preset 1" "Preset 2" "Preset 3" "Preset 4" "Preset 5" "Preset 6" "Preset 7"</td> </tr> </tbody> </table>	Parameter Type	Read	Units	Displays		None		"Remote Pot" "0-10 Volt" "4-20 mA" "MOP" "Adapter 1" "Adapter 2" "Adapter 3" "Adapter 4" "Adapter 5" "Adapter 6"				"Preset 1" "Preset 2" "Preset 3" "Preset 4" "Preset 5" "Preset 6" "Preset 7"
Parameter Type	Read	Units	Displays										
	None		"Remote Pot" "0-10 Volt" "4-20 mA" "MOP" "Adapter 1" "Adapter 2" "Adapter 3" "Adapter 4" "Adapter 5" "Adapter 6"										
			"Preset 1" "Preset 2" "Preset 3" "Preset 4" "Preset 5" "Preset 6" "Preset 7"										
<p>[Freq Command]</p> <p>This parameter displays the frequency that the drive is commanded to output. This command may come from any one of the frequency sources selected by [Freq Select 1], [Freq Select 2] or [Preset Freq 1-7] as determined by inputs to SW1, SW2 and SW3 at TB2.</p>	<p>Parameter # 65</p> <table border="1"> <thead> <tr> <th>Parameter Type</th> <th>Read Only</th> <th>Units</th> <th>Factory Default</th> <th>Minimum</th> <th>Maximum</th> </tr> </thead> <tbody> <tr> <td></td> <td>Read Only</td> <td>0.01 Hz</td> <td>0.00 Hz</td> <td>0 Hz</td> <td>400.00 Hz</td> </tr> </tbody> </table>	Parameter Type	Read Only	Units	Factory Default	Minimum	Maximum		Read Only	0.01 Hz	0.00 Hz	0 Hz	400.00 Hz
Parameter Type	Read Only	Units	Factory Default	Minimum	Maximum								
	Read Only	0.01 Hz	0.00 Hz	0 Hz	400.00 Hz								
<p>[Drive Direction]</p> <p>This parameter displays the running direction of the drive.</p>	<p>Parameter # 69</p> <table border="1"> <thead> <tr> <th>Parameter Type</th> <th>Read Only</th> <th>Units</th> <th>Factory Default</th> <th>Minimum</th> <th>Displays</th> </tr> </thead> <tbody> <tr> <td></td> <td>Read Only</td> <td>None</td> <td>"Forward"</td> <td></td> <td>"Forward" "Reverse"</td> </tr> </tbody> </table>	Parameter Type	Read Only	Units	Factory Default	Minimum	Displays		Read Only	None	"Forward"		"Forward" "Reverse"
Parameter Type	Read Only	Units	Factory Default	Minimum	Displays								
	Read Only	None	"Forward"		"Forward" "Reverse"								
<p>[Motor Mode]</p> <p>This parameter is used for internal diagnostic purposes.</p>	<p>Parameter # 43</p> <table border="1"> <thead> <tr> <th>Parameter Type</th> <th>Read Only</th> </tr> </thead> <tbody> <tr> <td></td> <td>Read Only</td> </tr> </tbody> </table>	Parameter Type	Read Only		Read Only								
Parameter Type	Read Only												
	Read Only												

Diagnostics Group (cont.)

<p>[Power Mode]</p> <p>This parameter is used for internal diagnostic purposes.</p>	<p>Parameter # 44</p> <p>Parameter Type Read Only</p>
<p>[Drive Type]</p> <p>This parameter displays a decimal number that identifies the drive.</p>	<p>Parameter # 61</p> <p>Parameter Type Read Only</p> <p>Units None</p>
<p>[Drive Firmware]</p> <p>This parameter displays the version number of the drive firmware.</p>	<p>Parameter # 71</p> <p>Parameter Type Read Only</p> <p>Factory Default None</p> <p>Display 0.00</p>
<p>[Output Pulses]</p> <p>This parameter displays the number of output cycles for the PWM waveform. The count rolls over at 65535.</p>	<p>Parameter # 67</p> <p>Parameter Type Read Only</p> <p>Units Cycles</p> <p>Factory Default None</p> <p>Minimum 0</p> <p>Maximum 65535</p>
<p>[Drive Temp]</p> <p>This parameter displays the internal drive temperature.</p>	<p>Parameter # 70</p> <p>Parameter Type Read Only</p> <p>Units 1 °C</p> <p>Factory Default None</p> <p>Minimum 0 °C</p> <p>Maximum 100 °C</p>
<p>[Set Defaults]</p> <p>Setting parameter to 'Default Init' resets all parameters to their factory values. See also page 3-12 EEPROM Mode.</p>	<p>Parameter # 64</p> <p>Parameter Type Read & Write</p> <p>Units None</p> <p>Factory Default "Ready"</p> <p>Settings "Ready"</p> <p>"Store to EE"</p> <p>"Recall from EE"</p> <p>"Default Init"</p> <p>Note: This parameter can not be programmed while the drive is running.</p> <p>Display After Function Complete</p> <p>Saves parameter Ram to EEPROM</p> <p>Restores parameter Ram from EEPROM</p> <p>Resets All Parameters to Their Factory Settings</p>

Masks

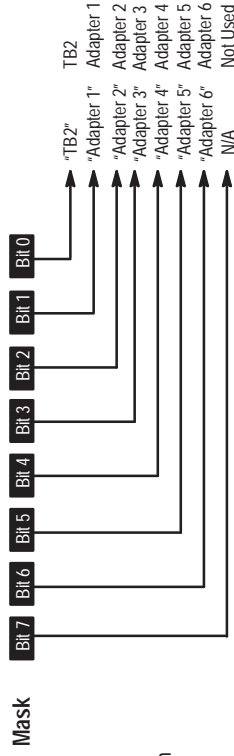This group of parameters contains binary masks for all control functions except the stop command. The masks control which adapters can issue control commands.



Each mask contains a bit for each adapter. Individual bits can be set to "0" to lockout control by an adapter or set to "1" to permit an adapter to have control.

[Logic Mask]

This parameter determines which adapters are allowed to control the drive logic commands. Setting a bit to "0" (deny control) disables all command functions except stop and frequency reference. **IMPORTANT:** In order to remove an adapter from the drive without causing a drive communications fault, the corresponding bit for that adapter must be set to zero. **IMPORTANT:** This parameter has no effect on the frequency value being sent from TB2 or any of the adapters.

Parameter #	Read & Write	Factory Default
92	Read & Write	01111111
Parameter Type	Byte	
Units		
	Settings	
	1	Permit Control
	0	Deny Control

[Direction Mask]

This parameter determines which adapters can issue forward/reverse commands. **IMPORTANT:** Terminal Block (TB2) will have control unless masked out.

Parameter #	Read & Write	Factory Default
94	Read & Write	01111111
Parameter Type	Byte	
Units		
	Settings	
	1	Permit Control
	0	Deny Control

Masks Group (cont.)


<p>[Start Mask]</p> <p>This parameter determines which adapters can issue start commands.</p>	<p>Parameter # 95 Parameter Type Read & Write Units Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>
<p>[Jog Mask]</p> <p>This parameter determines which adapters can issue jog commands.</p>	<p>Parameter # 96 Parameter Type Read & Write Units Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>
<p>[Reference Mask]</p> <p>This parameter determines which adapters can control the switching between the available freq. reference sources. IMPORTANT: Terminal Block (TB2) will have control unless masked out.</p>	<p>Parameter # 97 Parameter Type Read & Write Units Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>
<p>[Accel Mask]</p> <p>This parameter determines which adapters can switch between [Accel Time 1] and [Accel Time 2]. IMPORTANT: Terminal Block (TB2) will have control unless masked out.</p>	<p>Parameter # 98 Parameter Type Read & Write Units Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>
<p>[Decel Mask]</p> <p>This parameter determines which adapters can switch between [Decel Time 1] and [Decel Time 2]. IMPORTANT: Terminal Block (TB2) will have control unless masked out.</p>	<p>Parameter # 99 Parameter Type Read & Write Units Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>

Masks Group (cont.)

<p>[Fault Mask]</p> <p>This parameter determines which adapters can reset a fault using input control signals.</p>	<p>Parameter # 100 Read & Write Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>
<p>[MOP Mask]</p> <p>This parameter determines which adapters can issue MOP commands to the drive.</p>	<p>Parameter # 101 Read & Write Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>
<p>[Local Mask]</p> <p>This parameter determines which adapters can issue a Local command in order to obtain exclusive control of the drive. For safety reasons, local control can only be granted or removed while the drive is not running and in a safe state. If any adapter is in local control of the drive, all other adapters are locked out and prohibited from controlling any logic function except stop.</p> <p>IMPORTANT: The only way to obtain local control of Bulletin 1305 drives is through the serial port via a PLC command.</p> <p>IMPORTANT: This parameter has no effect on the frequency value being sent from TB2 or any of the adapters..</p>	<p>Parameter # 93 Read & Write Byte</p> <p>Factory Default 01111111</p> <p>Settings 1 0</p> <p>Permit Control Deny Control</p>

Owners

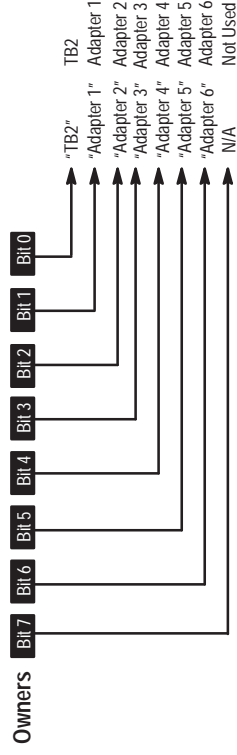This group of parameters contains binary status information to display which adapters are issuing control commands.



[Stop Owner]

This parameter displays which adapters are currently issuing a valid stop command.

Parameter #	102
Parameter Type	Read Only
Units	Byte
Settings	1 0
	Controlling Not Controlling

[Direction Owner]

This parameter displays which adapter currently has exclusive control of direction changes. When commanding the direction from an adapter, the corresponding bit is set to "1".

IMPORTANT: Only one adapter is allowed to control direction at any instance.

Parameter #	103
Parameter Type	Read Only
Units	Byte
Settings	1 0
	Controlling Not Controlling

Owners Group (cont.)

<p>[Start Owner]</p> <p>This parameter displays which adapters are currently issuing Start commands. Since Start commands are edge triggered, multiple adapters can issue the Start command simultaneously and as such are displayed. However, it is the first low to high transition of the Start (once all Stops and/or Faults are removed) that initiates the actual Start command.</p>	<p>Parameter # 104</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>
<p>[Jog Owner]</p> <p>This parameter displays which adapters are currently issuing Jog commands. Since the Jog function is momentary, multiple adapters can issue Jog commands simultaneously. This means that all adapters issuing the Jog must stop commanding the Jog before the function ceases. IMPORTANT: Stop commands will terminate Jog control and Start commands will override any Jog command.</p>	<p>Parameter # 105</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>

Owners Group (cont.)

<p>[Reference Owner]</p> <p>This parameter displays which adapter has exclusive control of selecting the [Freq Source].</p>	<p>Parameter # 106</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>
<p>[Accel Owner]</p> <p>This parameter displays which adapter currently is exclusively controlling the selection between [Accel Time 1] and [Accel Time 2].</p>	<p>Parameter # 107</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>
<p>[Decel Owner]</p> <p>This parameter displays which adapter currently is exclusively controlling the selection between [Decel Time 1] and [Decel Time 2].</p>	<p>Parameter # 108</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>
<p>[Fault Owner]</p> <p>This parameter displays which adapters are currently issuing a [Clear Faults] Command. Multiple adapters can issue simultaneous [Clear Faults] Commands.</p>	<p>Parameter # 109</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>

Owners Group (cont.)

<p>[MOP Owner]</p> <p>This parameter displays which adapters are currently issuing increases or decreases in MOP Command Frequency. Multiple adapters can issue changes simultaneously to the MOP value.</p>	<p>Parameter # 110</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>
<p>[Local Owner]</p> <p>This parameter displays which adapter currently has exclusive control of all drive logic functions by requesting a LOCAL command. If an adapter is the [Local Owner], all other functions (except stop) on all other adapters are locked out and non-functional. IMPORTANT: Local control can only be granted when the drive is in a safe state or stopped.</p>	<p>Parameter # 137</p> <p>Parameter Type Read Only</p> <p>Units Byte</p> <p>Settings 1 0</p> <p>Controlling Not Controlling</p>

Adapter I/O

This group contains the parameters needed for an optional communications adapter to communicate with the drive.

[Data In A1 through D2]

These parameters are used to write real time data values from a source controller (PLC, SLC, etc.) to the drive. This is accomplished by programming a parameter number into the [Data In] parameters. The value programmed into the source controller's output image table will be written to the drive parameter identified in the corresponding [Data In] parameter.

IMPORTANT: The drive parameter that is accessed indirectly using Data In will not be stored permanently and automatically to EEPROM (due to the high potential update rate from a PLC). A manual operation is necessary for permanent storage. The HIM EEPROM command, Save Values, or using parameter (64) [Set Defaults] will perform this task. Similarly, to restore the values to the ones the drive had before Data In was configured, the HIM Recall Values Function can be used.

IMPORTANT: [Preset Freq 1] through [Preset Freq 7] are not accessible with these parameters in firmware version FRN 4.01 and earlier.

Parameter # 111 - 118
Parameter Type Read & Write

Parameter		Bulletin 1305 drive	
111	Data In A1	↓	Controller Output Image Table (i.e. PLC, SLC, etc.)
112	Data In A2	↓	IMPORTANT: addressing information that defines which controller I/O address corresponds to a [Data In] parameter is determined by the dip switch settings on the external communication module.
113	Data In B1	↓	Refer to the appropriate Bulletin 1203 Communication Module User Manual for details.
114	Data In B2	↓	Refer to Appendix B for additional information.
115	Data In C1	↓	
116	Data In C2	↓	
117	Data In D1	↓	
118	Data In D2	↓	

[Data Out A1 through D2]

These parameters are used to write real time data values from the drive to a destination controller. This is accomplished by programming a parameter number into the **[Data Out]** parameters. The real time value of that parameter will be written to the input image table of the destination controller.

IMPORTANT: **[Preset Freq 1]** through **[Preset Freq 7]** are not accessible with these parameters in firmware version FRN 4.01 and earlier.

Parameter # 119 - 126
 Parameter Type Read & Write

Parameter	Parameter	Controller Input Image Table (i.e. PLC, SLC, etc.)
119	Data Out A1	Controller Input Image Table (i.e. PLC, SLC, etc.)
120	Data Out A2	IMPORTANT: addressing information that defines which controller I/O address corresponds to a [Data Out] parameter is determined by the dip switch settings on the external communication module. Refer to the appropriate Bulletin 1203 Communication Module User Manual for details.
121	Data Out B1	Refer to Appendix B for additional information.
122	Data Out B2	
123	Data Out C1	
124	Data Out C2	
125	Data Out D1	
126	Data Out D2	

Process Display

This group contains parameters that can be used to display a drive parameter in "User Units."

[Process Par]

This parameter should be set to the number of the parameter whose scaled value will be displayed on Line 1 of the HIM Display Panel when in process mode.

Parameter #	127	Factory Default	1
Parameter Type	Read & Write	Minimum	1
Units	Numeric	Maximum	Max. Parameter Number

[Process Scale]

This value sets the scaling multiplier for [Process Par]. The displayed value will be:

$$[\text{Process Par}] \text{ actual value} \times [\text{Process Scale}] \text{ value} = \text{Displayed Value } \textcircled{1}$$

Parameter #	128	Factory Default	+1.00
Parameter Type	Read & Write	Minimum	-327.68
Units	Numeric	Maximum	+327.67

[Process Txt 1-8]

These parameters set the "User Units" description for the value determined by [Process Par] and [Process Scale]. This text is displayed on Line 1 of the HIM.

Parameter #(s)	129-136	Factory Default	"?"
Parameter Type	Read & Write		
Units	ASCII Text Character		

^① The maximum value that can be displayed is 99,999.99. If this value is exceeded a character string of asterisks (*****) will appear on the display.

Linear List

This group lists all parameters in numerical order.

1	Output Voltage	24	Jog Frequency	47	Language	72	Upper Presets	95	Start Mask	118	Data In D2
2	% Output Curr	25	Analog Out Sel	48	Start Boost	73	Preset Freq 4	96	Jog Mask	119	Data Out A1
3	% Output Power	26	Prst/2nd Accel	49	Break Frequency	74	Preset Freq 5	97	Reference Mask	120	Data Out A2
4	Last Fault	27	Preset Freq 1	50	Break Voltage	75	Preset Freq 6	98	Accel Mask	121	Data Out B1
5	Freq Select 1	28	Preset Freq 2	51	Clear Fault	76	Preset Freq 7	99	Decel Mask	122	Data Out B2
6	Freq Select 2	29	Preset Freq 3	52	Compensation	77	Above Freq Val	100	Fault Mask	123	Data Out C1
7	Accel Time 1	30	Accel Time 2	53	DC Bus Voltage	78	Balance Angle ^①	101	MOP Mask	124	Data Out C2
8	Decel Time 1	31	Decel Time 2	54	Output Current	79	Balance Time ^①	102	Stop Owner	125	Data Out D1
9	DC Boost Select	32	Skip Freq 1	55	Input Status	80	Balance Freq ^①	103	Direction Owner	126	Data Out D2
10	Stop Select	33	Skip Freq 2	56	S Curve Time	81	4–20mA Loss Sel	104	Start Owner	127	Process Par
11	DB Enable	34	Skip Freq 3	57	S Curve Enable	82	Cur Lim Trip En	105	Jog Owner	128	Process Scale
12	DC Hold Time	35	Skip Freq/Band	58	Drive Command	83	Run Boost	106	Reference Owner	129	Process Text 1
13	DC Hold Level	36	Current Limit	59	Drive Status	84	Analog Invert	107	Accel Owner	130	Process Text 2
14	Run On Power Up	37	Overload Mode	60	Drive Alarm	85	Resel/Run Tries	108	Decel Owner	131	Process Text 3
15	Resel/Run Time	38	Overload Current	61	Drive Type	86	Fault Buffer 0	109	Fault Owner	132	Process Text 4
16	Minimum Freq	39	Flt Clear Mode	62	Freq Source	87	Fault Buffer 1	110	MOP Owner	133	Process Text 5
17	Base Frequency	40	Line Loss Fault	64	Set Defaults	88	Fault Buffer 2	111	Data In A1	134	Process Text 6
18	Base Voltage	41	Motor Type	65	Freq Command	89	Fault Buffer 3	112	Data In A2	135	Process Text 7
19	Maximum Freq	42	MOP Hertz	66	Output Freq	90	Output 1 Config	113	Data In B1	136	Process Text 8
20	Maximum Voltage	43	Motor Mode	67	Output Pulses	91	Output 2 Config	114	Data In B2	137	Local Owner
21	Input Mode	44	Power Mode	69	Drive Direction	92	Logic Mask	115	Data In C1	141	Sec Curr Limit
22	MOP Increment	45	PWM Frequency	70	Drive Temp	93	Local Mask	116	Data In C2	142	Above Curr Val
23	Output Power	46	Current Angle	71	Firmware Ver	94	Direction Mask	117	Data In D1	143	Cable Length ^②

① FRN 4.01 and below only.

② FRN 4.01 and above only.

This Page Intentionally Left Blank.

CHAPTER OBJECTIVES

Chapter 6 provides information to guide the user in understanding drive fault conditions and general troubleshooting procedures for Bulletin 1305 drives. Included is a listing and description of the various drive faults with possible solutions, when applicable. Also included is a section on general troubleshooting. (Refer to Table 6.C).

FAULT INFORMATION

Figure 6.1 Fault Display

Drives equipped with a Human Interface Module will display a brief fault message on Line 1 of the LCD display when a fault occurs. Line 2 of the display indicates the corresponding fault number. **IMPORTANT:** For Series A HIM software version 3.00 and Above or Series B HIM software version 1.01 and Above, faults are displayed as soon as they occur. Earlier HIM versions only display faults when the HIM is in the Status Display Mode. [Fault Buffer 0] through [Fault Buffer 3] display previous faults.



Fault LED

All drives come equipped with a fault LED. When the fault LED is illuminated it is an indication a fault condition exists. Refer to page 2-3 for the location of the fault LED. Once the fault is properly cleared the LED will return to an off state.

Diagnostics

As can be seen in Figure 2.3, there are two indicators provided to display the drive's status condition. The DC Bus Charge Indicator is a neon bulb that will be illuminated when power is applied to the drive. The Fault Indicator is an LED that will be illuminated if a drive fault condition exists. Refer to details on How To Clear a Fault, below.

How To Clear a Fault

IMPORTANT: Resetting a fault will not correct the cause of the fault condition. Corrective action must be taken prior to resetting the fault.

To clear a fault perform one of the following:

1. Cycle power to the drive.
2. Cycle the stop signal to the drive.
3. Cycle the [Clear Fault] parameter. See page 5-39.

IMPORTANT: The stop signal will not clear a fault if the [Logic Mask] or [Fault Mask] bit of that adapter has been disabled or the [Fault Clear Mode] parameter is disabled.

Table 6.A Fault Code Cross Reference

Fault Number	Fault Name	Page Number	Fault Number	Fault Name	Page Number
F3	Power Loss Fault	6-7	F34	Run Boost Fault	6-7
F4	Undervolt Fault	6-8	F35	Neg Slope Fault	6-5
F5	Overvolt Fault	6-6	F36	Diag C Lim Flt	6-3
F6	Motor Stall Fault	6-5	F38	Phase U Fault	6-6
F7	Overload Fault	6-6	F39	Phase V Fault	6-6
F8	Overtemp Fault	6-6	F40	Phase W Fault	6-6
F9	Open Pot Fault	6-5	F41	UV Short Fault	6-8
F10	Serial Fault	6-7	F42	UW Short Fault	6-8
F11	Op Error Fault	6-5	F43	VW Short Fault	6-8
F12	Overcurrent Flt	6-6	F44	IPM Current Fault	6-4
F22	Drive Reset Flt	6-3	F45	IPM Overtemp Fault	6-4
F24	Motor Mode Flt	6-5	F46	Power Test Fault	6-6
F25	Overspeed Flt	6-6	F48	Reprogram Fault	6-7
F26	Power Mode Fault	6-7	-	Drive → HIM ^①	6-3
F29	Hz Err Fault	6-3	-	HIM → Drive ^①	6-4
F30	Hz Sel Fault	6-3	-	Network Error * ^①	6-5
F32	EEprom Fault	6-3	-	Pin ID Error ^①	6-7
F33	Max Retries Fault	6-4			

① These faults are generated in the HIM and not stored in the drive EEPROM.

Table 6.B Bulletin 1305 Fault Descriptions

Name & Fault Number	Description	Action to Take
Diag C Lim Fault F36	The drive output current has exceeded the software [Current Limit] and the [Cur Lim Trip En] parameter was enabled.	Check programming of [Curr Lim Trip En] parameter. Check for excess load, improper DC boost setting, DC brake volts set too high or other causes of excess current.
Drive → HIM	The checksum read from the HIM's EEPROM does not match the checksum calculated from the EEPROM data.	Repeat operation. Replace HIM.
Drive Reset Fault F22	Occurs on power-up. Caused by having the Start Input (or Run Input) closed, with the Stop Input open and [Run On Power Up] = Disabled.	Check stop connection at TB2, terminal 8.
EEPROM Fault F32	EEPROM has invalid data or can not be programmed to valid data.	Check cable connection from main control board to power board. Reset to Default Parameters and Cycle power.
Hz Err Fault F29	This fault indicates that there is not a valid operating frequency. It can be caused by any of the following: 1. [Maximum Frequency] is less than [Minimum Freq.] . 2. Skip frequencies and skip bandwidth eliminate all operating frequencies. 3. 4-20mA input signal speed reference has been lost or is out of range and [4-20mA Loss Sel] is set for "Stop-Fault."	1. Check [Minimum Freq] and [Maximum Freq] parameters. 2. Check [Skip Freq 1] , [Skip Freq 2] , [Skip Freq 3] and [Skip Freq Band] parameters. 3. Check for broken wires, loose connections or transducer loss at 4-20mA input, TB2.
Hz Sel Fault F30	An adapter that is not connected has been chosen as the active frequency source.	Connect proper adapter or change active frequency source.

Table 6.B Bulletin 1305 Fault Descriptions (cont.)

Fault Name & Number	Fault Description	Action to Take
HIM → Drive	<p>Error 1 – The checksum read from the HIM's EEPROM does not match the checksum calculated from the EEPROM data.</p> <p>Error 2 – The number of parameters in saved profile does not equal master.</p> <p>Error 3 – Download was attempted to a different type drive (i.e. 1336->1305).</p> <p>Error 4 – Saved data for parameter not correct for new drive.</p> <p>Error 5 – Drive is running while attempting download.</p>	<p>Repeat operation. Old profile corrupt. Save new profile. Repeat operation.</p> <p>The last parameter programmed will be displayed on the top line. Verify that all parameters have been programmed. If not, manually program any remaining parameters.</p> <p>Download can only take place with the same type of drive.</p> <p>Capabilities of drive are different than the master drive. Press Enter to continue download. When download is complete, manually program the parameter where the error occurred.</p> <p>Stop drive, then perform download.</p>
IPM Current Fault F44	The internal power module overcurrent limit had been exceeded.	Check for short circuit at the drive output or excessive load conditions at the motor, specifically cable capacitance to ground.
IPM Overtemp Fault F45	The internal power module thermal limit has been exceeded.	Check for blocked or dirty heat sink fins. Check for proper mounting and spacing (See page 2-1). Check if the ambient temperature limit has been exceeded.
Max Retries Fault F33	Drive unsuccessfully attempted to reset a fault and resume running for the programmed number of [Reset/Run Tries] .	Check fault buffer for fault code requiring reset. Correct the cause of the fault and manually clear by cycling the stop command or cycling power.

Table 6.B Bulletin 1305 Fault Descriptions (cont.)

Fault Name & Number	Fault Description	Action to Take
Motor Mode Fit F24	Internal error.	Reset drive to factory defaults.
Motor Stall Fault F6	The motor is stalled.	If the motor is drawing excessive current, the motor load is excessive and will not allow the drive to accelerate to set speed. A longer accel time or a reduced load may be required.
Neg Slope Fault F35	Drive software detected a portion of the volts/Hz curve with a negative slope.	Check drive programming. 1. [Base Voltage] parameter must be greater than 1.5 X [Start Boost] . 2. If the [DC Boost Select] parameter is set to "Break Point," [Base Voltage] must be greater than [Break Voltage] and [Break Voltage] must be greater than [Start Boost] .
Network Error *	Network Error 0 – Error 6 Network Error 7 – Error 9 ScanPort Error Communications Error	1. Press the "UP" or "DOWN" arrow to clear the message from the HIM display. 2. Unplug the HIM from the cable or drive and re-connect. 3. Check for external noise sources.
Op Error Fault F11	[Motor Type] is set to "Sync PM" and [Stop Mode] is set to "DC Brake".	Change one of these parameters. DC Braking cannot be used with a synchronous motor.
Open Pot Fault F9	An external pot is connected and the ground lead of the pot is disconnected creating a potential drive overspeed hazard.	Check the external potentiometer circuit at TB2, terminals 1, 2 and 3 for an open circuit.

Table 6.B Bulletin 1305 Fault Descriptions (cont.)

Fault Name & Number	Fault Description	Action to Take
Overcurrent Fault F12	Overcurrent is detected in overcurrent hardware trip circuit.	Check for a short circuit at the drive output or excessive load conditions at the motor.
Overload Fault F7	Internal electronic overload trip.	An excessive motor load exists. It must be reduced such that drive output current does not exceed the % of current set by the [Overload Current] parameter. Reduce [Start Boost] if applicable. Change [Cable Length] to "Long" if applicable.
Overspeed Fault F25	Internal error.	Reset drive to factory defaults.
Overtemp Fault F8	Temperature sensor detects excessive heat.	Check for blocked or dirty heat sink fins. Check for proper mounting and spacing (See page 2-1). Check if the ambient temperature limit has been exceeded.
Overvolt Fault F5	DC bus voltage exceeded maximum value.	Monitor the AC line for high line voltage or transient conditions. Bus overvoltage can also be caused by motor regeneration. Extend the decel time or install dynamic brake option.
Phase U Fault F38	A phase to ground fault has been detected between the drive and motor in this phase.	Check the wiring between the drive and motor . Check motor for grounded phase .
Phase V Fault F39	A phase to ground fault has been detected between the drive and motor in this phase.	Check the wiring between the drive and motor . Check motor for grounded phase .
Phase W Fault F40	A phase to ground fault has been detected between the drive and motor in this phase.	Check the wiring between the drive and motor . Check motor for grounded phase .

Table 6.B Bulletin 1305 Fault Descriptions (cont.)

Fault Name & Number	Fault Description	Action to Take
Pin ID Error	Communication Hardware problem.	<ol style="list-style-type: none"> 1. Unplug the HIM from the cable or drive and re-connect. 2. Replace Communication Cable.
Power Loss Fault F3	DC bus voltage remained below 85% of nominal for longer than 0.500 sec. [Line Loss Fault] parameter is programmed to "F03 Enable".	Monitor the incoming AC line for low voltage or line power interruption.
Power Mode Fault F26	Internal error.	Reset drive to factory defaults.
Power Test Fault F46	Fault detected during initial start-up sequence.	Check drive wiring. Check motor wiring. Reset drive to factory defaults.
Reprogram Fault F48	Occurs when drive parameters are reset to defaults.	Clear fault.
Run Boost Fault F34	An attempt has been made to set the [Run Boost] parameter to a value greater than the [Start Boost] parameter.	Verify that parameter has been programmed correctly.
Serial Fault F10	An active local bus adapter is disconnected while it possesses control of a local bus function.	Check for break in communications line.

Table 6.B Bulletin 1305 Fault Descriptions (cont.)

Fault Name & Number	Fault Description	Action to Take
Undervolt Fault F4	DC Bus voltage fell below the minimum value. [Line Loss Fault] parameter is programmed to "U Volt Run".	Monitor the incoming AC line for low voltage or line power interruption.
UV Short Fault F41	Excessive current has been detected between these two drive output terminals.	Check the motor and external wiring to the drive output terminals for a shorted condition.
UW Short Fault F42	Excessive current has been detected between these two drive output terminals.	Check the motor and external wiring to the drive output terminals for a shorted condition.
VW Short Fault F43	Excessive current has been detected between these two drive output terminals.	Check the motor and external wiring to the drive output terminals for a shorted condition.

Table 6.C Troubleshooting

General Problem	Action to Take
<p>Motor does not start (No output voltage to motor) ("Stopped" is displayed on the HIM).</p>	<ol style="list-style-type: none"> (1) Check power circuit <ul style="list-style-type: none"> - Check supply voltage. - Check all fuses and disconnects. (2) Check motor <ul style="list-style-type: none"> - Verify that motor is connected properly. (3) Check control input signals. <ul style="list-style-type: none"> - Verify that Enable signal is present. ("Not Enabled" is displayed on the HIM) - Verify that Start signal is present. - Verify that Stop signal is present. - Verify that Run Forward and Run Reverse signals are NOT both active. (4) Check parameter mask settings <ul style="list-style-type: none"> - Verify that [Start Mask] is set properly. - Verify that [Logic Mask] is set properly. - Verify that [Local Mask] is set properly.
<p>Drive Started but motor NOT rotating. ("At Speed 0.00 Hz" is displayed on HIM).</p>	<ol style="list-style-type: none"> (1) Check motor <ul style="list-style-type: none"> - Verify that motor is connected properly. (2) Check Frequency Source <ul style="list-style-type: none"> - Verify that frequency signal is present at terminal block TB2. <ul style="list-style-type: none"> - 4-20mA signal - 0-10V signal - Remote Potentiometer - Verify that Adapter or Preset Frequencies are set properly. (3) Check control input signals. <ul style="list-style-type: none"> - Verify that SW1, SW2 and SW3 are in the proper state. (Refer to Table 5.A on page 5-29) (4) Check parameter settings and charts on Pages 5-29 and 5-30. <ul style="list-style-type: none"> - Verify that [Freq Source] is showing the desired frequency source. - Verify that [Freq Command] is the desired value. - Verify that [Reference Mask] is set properly.

Table 6.C Troubleshooting (cont.)


General Problem	Action to Take
Motor not accelerating properly.	(1) Check motor - Verify that motor is connected properly. - Verify that no mechanical problems exist. 2) Check control input signals - Verify that SW1, SW2, and SW3 are in the proper state to select desired Accel/Decel rates. (Refer to Table 5.A on page 5-29) (4) Check parameter settings and charts on Pages 5-29 and 5-30. - Verify that [Accel Time 1] and [Accel Time 2] are set properly. - Verify that [Current Limit] is set properly. - Verify that [DC Boost Select] is set correctly. - Verify that [Start Boost] and [Run Boost] are set properly.
Specific Problem	Action to Take
Can not Jog from Adapter.	(1) Verify that [Jog Mask] is set properly to allow jogging from that adapter. (2) Verify that [Logic Mask] is set properly to allow jogging from that adapter. (3) Is drive already running? (4) Examine [Stop Owner] to verify that a maintained Stop does not exist.
Can not change direction from Adapter.	(1) Verify that [Direction Mask] is set to allow direction changes from that adapter. (2) Verify that [Logic Mask] is set to allow direction changes from that adapter.
Can not Start from Adapter.	(1) Verify that [Start Mask] is set properly to allow starting from that adapter. (2) Verify that [Logic Mask] is set properly to allow starting from that adapter. (3) Is drive already running? (4) Examine [Stop Owner] to verify that a maintained Stop does not exist.
Display indicates "Not Enabled".	(1) Check enable signal at TB2, terminals 11 & 12.

Table 6.C Troubleshooting (cont.)

Specific Problem	Action to Take
Can not operate in "Run Fwd/Run Rev" mode.	<ol style="list-style-type: none"> (1) Verify that [Input Mode] is set correctly. (2) Has power been cycled for above change to take effect? (3) Are both Run Forward and Run Reverse switches active?
Can not change speed from Adapter.	<ol style="list-style-type: none"> (1) Verify that the speed source is the adapter in question. (examine [Freq Source] parameter).
Can not operate drive without HIM.	<ol style="list-style-type: none"> (1) Verify that SW1, SW2, and SW3 are in the proper state to select the desired speed source. (Refer to charts on Pages 5-29 and 5-30) (2) Verify that [Freq Source] and [Freq Command] are desired values.
Drive faults when Adapter is unplugged.	<ol style="list-style-type: none"> (1) Verify that [Logic Mask] is set properly to allow removal of a particular Adapter while drive is powered up. (2) Verify that the adapter being unplugged is not the active frequency source.
Pin ID Error is displayed on HIM.	<ol style="list-style-type: none"> (1) Unplug the HIM from the cable or drive and re-connect.
"Network Error *" is displayed on the HIM.	<ol style="list-style-type: none"> (1) Press the "Up" or "Down" arrow to clear the message from the HIM display. (2) Unplug the HIM from the cable or drive and re-connect.
Can not clear fault from Adapter or Terminal Block with stop command.	<ol style="list-style-type: none"> (1) Verify that [Fault Clear Mode] is set to "Enabled" (2) Verify that [Fault Mask] is set to allow clearing of faults from chosen device. (3) Verify that [Logic Mask] is set properly.

This Page Intentionally Left Blank.

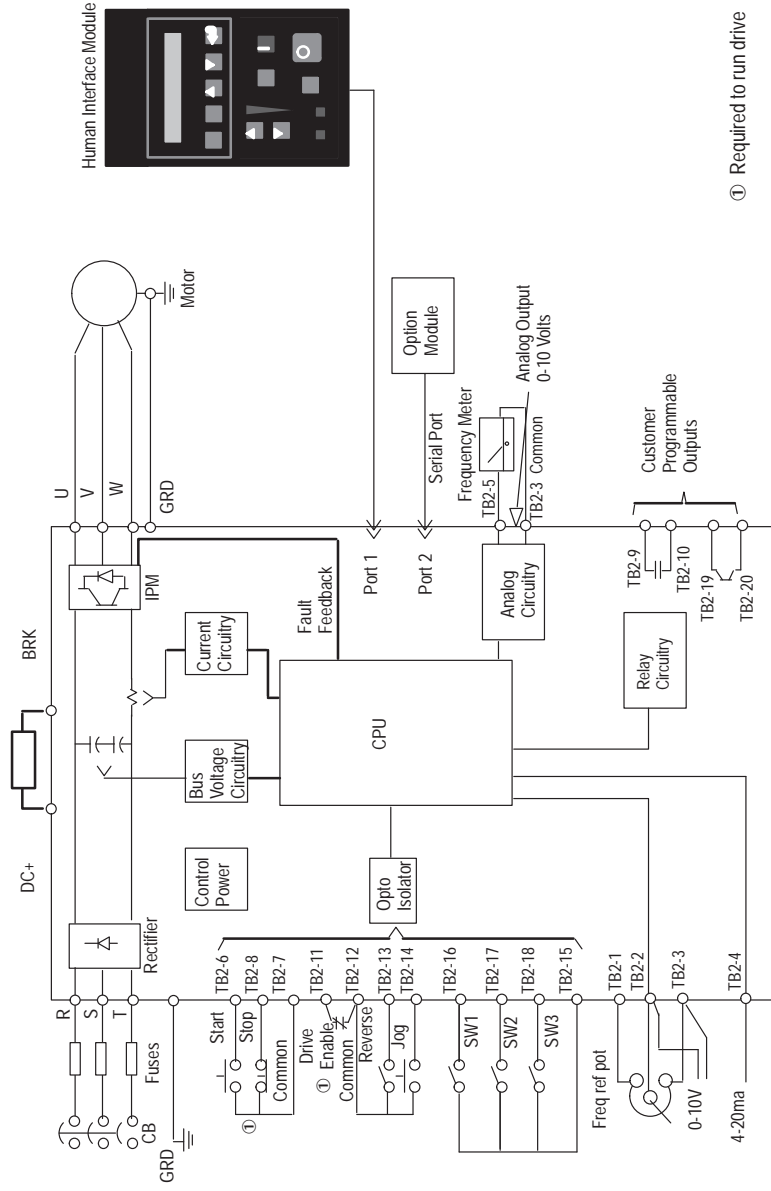BLOCK DIAGRAM



Appendix A – Block Diagram and Specifications

Table A.1 Specifications

Drive	Bulletin 1305 Drive Rated 200-230 V AC				Bulletin 1305 Drives Rated 380-460 V AC						
	-AA02A	-AA03A	-AA04A	-AA08A	-AA12A	-BA01A	-BA02A	-BA03A	-BA04A	-BA06A	-BA09A
3 Phase Motor Rating kW (HP)	0.37 (1/2)	0.55 (3/4)	0.75 (1)	1.5 (2)	2.2 (3)	0.37 (1/2)	0.55 (3/4)	0.75 (1)	1.5 (2)	2.2 (3)	4.0 (5)
Output Current (A) ①	2.3	3.0	4.5	8.0	12.0 ②	1.3	1.6	2.3	4.0	6.0 ③	9.0 ④
Output Voltage	Adjustable from 0 V to Input Voltage										
Output Frequency (Hz)	0 to 400Hz Programmable										
ScanPort Load	250 mA maximum (all adapters combined)										
INPUT RATINGS											
Input Voltage & Frequency	200/230V Three Phase, 50/60 Hz				380/460V Three Phase, 50/60 Hz						
Operational Range (V)	180-265V, 47-63 Hz				340V-500V, 47-63 Hz						
Input kVA	0.9	1.3	1.7	3.1	4.6	0.9	1.3	1.7	3.1	4.6	7.0
Power Factor (Displacement)	0.8 (Lagging)										
Efficiency (%)	97.5 % (Typical)										
Power Dissipation (W)	27	34	46	76	108	21	27	34	52	73	107

① If the **[PWM Frequency]** is set above 4kHz, the output current rating must be derated per the chart on page 5-20.

② Output current value listed for 200V input voltage. At 230V input voltage, output current is 9.6A for 3 phase.

③ Output current value listed for 380V input voltage. At 415V input voltage, output current is 5.3A. At 460V input voltage, output current is 4.8A.

④ Output current value listed for 380V input voltage. At 415V input voltage, output current is 8.4A. At 460V input voltage, output current is 7.6A.

Table A.1 Specifications (cont.)

ENVIRONMENTAL SPECIFICATIONS	
Enclosure	NEMA 1 (IP30) standard
Ambient Temperature	0 to 50° C; Optional Enclosures: 0 to 40° C
Storage Temperature	-40° C to 70° C
Relative Humidity	0 to 95% (non condensing)
Vibration	1.0 G Operational
Cooling Method	Natural Convection (no fans)
Altitude	Above 1,000 m (3,300 ft), derate at 6% of drive rated amps per 1000 m
CONTROL INPUTS	
Control Input Type	Contact closure (Internal 5V supply) DO NOT ground or apply external voltage
Start	Configurable Inputs for 2 or 3 wire control
Stop	
Forward/Reverse	Momentary (non-maintained) Input
Jog	
SW1	Configurable Inputs for control of 7 Preset speeds and 2 Accel/Decel times
SW2	
SW3	
Enable	Interlock Input to enable drive operation
External Speed Potentiometer	10 K Ohms, 1 Watt
Analog Input (4 to 20mA)	Input Impedance 250 Ohms (Non-Isolated), 10 bit resolution
Analog Input (0 to 10 V DC)	Input Impedance 100 K Ohms (Non-Isolated), 10 bit resolution

Appendix A – Block Diagram and Specifications

Table A.1 Specifications (cont.)

CONTROL OUTPUTS											
Programmable Output 1	Form A Relay Contact: Resistive Rating 115V AC/ 30V DC, 5A; Inductive Rating 115V AC/ 30V DC, 2A										
Programmable Output 2	Open Collector (Sink); 24V DC, $\pm 20\%$, 50 mA maximum (User supplied source voltage)										
Analog Output (0 to 10V DC)	Load Impedance $\geq 4,000$ Ohms, 8 bit resolution										
PWM Algorithm	Sine Weighted PWM Output										
Switching Device 3-Phase Output	IGBT Intelligent Power Module										
V/Hz Ratio	Programmable										
Carrier Frequency	Adjustable in 100Hz increments from 2 kHz to 8 kHz. Output Current Derating applies above 4 kHz.										
DC Boost	Adjustable single point or full custom – Start and Run boost available										
CONTROL FEATURES											
Drive	Bulletin 1305 Drive Rated 200-240 V AC					Bulletin 1305 Drives Rated 380-460 V AC					
	-AA02A	-AA03A	-AA04A	-AA08A	-AA12A	-BA01A	-BA02A	-BA03A	-BA04A	-BA06A	-BA09A
AC Dynamic Braking Torque - Estimated	- Actual value will depend on motor characteristics										
W/O External Resistor	100%	100%	100%	50%	50%	100%	100%	100%	50%	50%	20%
With External Resistor	N/A	N/A	N/A	150%	100%	150%	150%	150%	150%	100%	100% ^①
Current Limiting	Trip Free Operation, Co-ordinated for Drive and Motor Protection										
150% for 60 Seconds	Programmable from 20% to 150% of Drive Output Current										
200% for 2 seconds	Fixed by hardware, based on Drive Rating										

① Series B Drives only.

Table A.1 Specifications (cont.)

Motor Protection ^①	Electronic Overload Protection: Adjustable from 20% to 115% (Motor FLA)
Overload Pattern #0	Flat response over speed range (no current derating)
Overload Pattern #1	Current derating below 25% of Base Speed
Overload Pattern #2	Current derating below 50% of Base Speed
Accel/Decel Time(s)	0.1 to 3600 Seconds, independently set (2 Accel, 2 Decel)
Preset Speeds	0 to 400 Hz, 7 selections, independently set
Jog Input	0 to 400 Hz
Stopping Modes	4 modes programmable
Ramp to stop	0.1 to 3600 seconds
Coast	Stops all PWM Output
DC Brake to stop	Applies DC Voltage to the Motor for 0 to 15 seconds
S-Curve	Ramps to stop with S-Curve profile
PROTECTIVE FEATURES	
Excessive Temperature	Embedded temperature sensor trips if factory preset level is exceeded ^②
Over/Under Voltage	DC Bus voltage is monitored for safe operation
Power Ride Through	Minimum ride through 15mS under nominal conditions
Control Ride Through	Minimum ride through is 0.5 Seconds – typical value 2 seconds
Ground Short	Any output short to ground, detected prior to start
Line Voltage Transients	Inherent MOV (varistor) protection
Output Short Circuit	Inherent short circuit protection provided within IPM

^① See Page 5-12 for NEC and UL information.

^② Conditions such as ambient temperature, overload, duty cycle, etc. can affect tripping time.

Appendix A – Block Diagram and Specifications

Table A.1 Specifications (cont.)

PROGRAMMING/COMMUNICATIONS	
Adapters	The maximum current draw of all adapters connected to the drive should not exceed 250 mA
Hand Held Programming	Optional Human Interface Module (HIM) can be removed from the Drive)
Type of Annunciation	Parameters displayed in textual form, organized in logical groupings
Type of Display	16 character, 2 line LCD supertwist with backlight
Language Capability	Multiple Languages available
Local Controls	3 versions available (Digital Pol., Analog Pol. and Blank)
Communication Adapters	Optional adapters provide Remote I/O, or RS232/RS422/RS485/DF1/DH485, or DeviceNet™ capability
MONITORING	
Output Frequency (Hz)	Displayed over the entire range of operation with direction indication
Output Voltage (V)	Selectable as a displayed parameter
Output Current (A)	Selectable as a displayed parameter in % or actual value
Output Power (kW)	Selectable as a displayed parameter in % or actual value
DC Bus Voltage (V)	Selectable as a displayed parameter
Frequency Command (Hz)	Selectable as a displayed parameter
Process Parameter	Any drive variable can be scaled and definable text can be added up to 8 characters
Drive Temperature °C	Selectable as a displayed parameter
Last Fault	The previous 4 faults can be displayed for troubleshooting

COMMUNICATIONS USING BULLETIN 1203 COMMUNICATION MODULES

Bulletin 1305 drive parameter data can be programmed and displayed using PLC's, SLC's or other logic controllers using an optional Bulletin 1203 Communication Module. The amount of information that can be transferred between the drive and controller is determined by the DIP switch settings on the Communication Module.

Table B.1 illustrates the dip switch settings for Bulletin 1203-GD1 (Remote I/O) communication modules. Dip switch settings for other communication modules will be similar. Refer to the appropriate communication module user manual for details.

IMPORTANT: Bulletin 1305 drives with firmware revisions FRN1.01 and FRN1.02 are not compatible with Bulletin 1203 Communication Modules. If connected, an error message will be indicated. The red fault status and amber SCANport[®] status LED's on the front of the module will flash simultaneously.

SCANport is a trademark of Allen-Bradley Company.

Table B.1 Remote I/O Data Transfer

SW3 Settings	Type of Data Transferred	Rack Space in Words	Reference Information
No. 1	Block transfer of data	1	①
No. 2	Logic commands and Drive Status information	1	See Table B.2 & Table B.3
No. 3	Analog frequency reference	1	②
No. 4	Parameter data via Datalink A	2	See Page 5-54
No. 5	Parameter data via Datalink B	2	See Page 5-54
No. 6	Parameter data via Datalink C	2	See Page 5-54
No. 7	To transfer data via Datalink D	2	See Page 5-54
No. 8	Unused	—	—

① Refer to the Bulletin 1203 Communication Module Block Transfer User Manual.

② To enable the PLC to provide the frequency reference, Logic Bits 12 through 15 must be set to select [Freq Select 1] or [Freq Select 2] as the frequency reference (refer to Table B.2). The [Freq Select 1] or [Freq Select 2] parameters must then be set to the adapter number that the communication module is connected to. See Pages 2-24 and 5-25 for additional information on determining the Adapter number and [Freq Select 1] and [Freq Select 2] selections.

LOGIC CONTROL DATA

The information in Table B.2 provides the Logic Control information that is sent to the drive through the logic controllers output image table. When using the Bulletin 1203-GD1 communication module, this information is sent to the drive when dip switch No. 2 of SW3 is enabled.

DRIVE STATUS DATA

The information in Table B.3 provides the Drive Status information that will be sent to the logic controllers input image table from the drive. When using the Bulletin 1203-GD1 communication module this information will be sent to the PLC from the drive when switch No. 2 of SW3 is enabled.

PARAMETER GROUPS/USER SETTINGS

The information in Table B.4 provides a listing of all drive parameters.

The column entitled “Display Units” are the units that will appear on the Human Interface Module.

Since certain parameters have different resolution than others, a scale factor is required to convert the “Display Units” value to a decimal value that will be displayed in the controller’s I/O image tables. The column marked “Drive Units Scale Factor” is provided to perform this conversion.

SCALE FACTOR CONVERSION

When **Reading** parameter data in the controller’s input image table, divide this value by the “Drive Units Scale Factor” to determine the “Display Units.”

When **Writing** parameter data from the controller’s output image table to the drive, the value entered into the output image table should be the required “Display Units” value multiplied by the “Drive Units Scale Factor”.

“Display Unit” equivalent to Parameter Text Descriptions.
Some parameters use a text description in the place of numerical “Display Units”. The information in Table B.5 provides the decimal equivalent to the text descriptions.

Table B.2 Logic Control Data

This information will be displayed in the controller's output image table and will be sent to the drive when the appropriate dip switch setting on the Communication Module is enabled.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Status	Text
															X	Stop	1 = Stop, 0 = Not Stop
														X		Start	1 = Start, 0 = Not Start
												X				Jog	1 = Jog, 0 = Not Jog
												X				Clear Faults	1 = Clear Faults 0 = Not Clear Faults
										X						Direction	00 = No Command 10 = Reverse Command 01 = Forward Command 11 = Hold Direction Control
									X							Local	1 = Local Lockout, 0 = Not Local
								X								MOP Increment	1 = Increment, 0 = Not
						X										Accel Time	00 = No Command 10 = Accel Time 2 Command 01 = Accel Time 1 Command 11 = Hold Accel Time Ctrl
				X												Decel Time	00 = No Command Time 10 = Decel Time 2 Command 01 = Decel Time 1 Command 11 = Hold Time Ctrl
X	X	X														Reference Select	000 = No Command Select 001 = [Freq Select 1] (Selectable) 010 = [Freq Select 2] (Selectable) 011 = [Preset Freq 3] 100 = [Preset Freq 4] 101 = [Preset Freq 5] 110 = [Preset Freq 6] 111 = [Preset Freq 7]
X																MOP Dec	1 = Decrement, 0 = Not

Appendix B – Serial Communications

Table B.3 Drive Status Data

This information will be displayed in the controller's input image table when the appropriate dip switch setting on the Communication Module is enabled.

	Logic Bits															Status	Text	
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1			0
																X	Enabled	1 = Enabled, 0 = Not Enabled
															X		Running	1 = Running, 0 = Not Running
														X			Command Direction	1 = Forward, 0 = Reverse
												X					Rotating Direction	1 = Forward, 0 = Reverse
										X							Accel	1 = Accelerating, 0 = Not
									X								Decel	1 = Decelerating, 0 = Not
										X							Alarm	1 = Alarm, 0 = No Alarm
											X						Fault	1 = Faulted, 0 = Not Faulted
								X									At Speed	1 = At Speed, 0 = NOT at Speed
									X								Local	000 = TB2 Local 100 = Adapter 4 Local 001 = Adapter 1 Local 010 = Adapter 2 Local 011 = Adapter 3 Local 110 = No Local Control 111 = No Local Control
X	X	X	X														Frequency Reference	0000 = Freq Select 1 0001 = Preset Freq 1 0010 = Preset Freq 2 0011 = Preset Freq 3 0100 = Preset Freq 4 0101 = Preset Freq 5 0110 = Preset Freq 6 0111 = Preset Freq 7 1000 = Freq Select 2 1001 = Port 1 Adapter 1 1010 = Port 2 Adapter 2 1011 = Port 3 Adapter 3 1100 = Port 4 Adapter 4 1101 = Port 5 Adapter 5 1110 = Port 6 Adapter 6 1111 = Jog Frequency

Table B.4 Parameter Grouping/User Settings

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ②	Min	Max	Factory Setting	User's Setting
Metering	Output Current	54	Amps	100	0.00	Two times drive output current	---	
	Output Voltage	1	Volts	100	0	Maximum Voltage	---	
	Output Power	23	kW	100	0.00	Two times rated drive output power	---	
	DC Bus Voltage	53	Volts	1	0	410 - 230V Drive 815 - 460V Drive	---	
	Output Freq	66	Hz	32767 = Max. Freq	0.00	Maximum Frequency	---	
	Freq Command	65	Hz	100	0.00	400.00	0.00	
	MOP Hz	42	Hz	100	0.00	400.00	0.00	
	Drive Temp	70	° C	1	0	Drive temperature	---	
	Last Fault	4	0	1	0	Max. Fault Number	---	
	% Output Power	3	%	1	0	200% Drive Rated Power	---	
	% Output Curr	2	%	1	0	200% of Rated Drive Output Current	---	

Appendix B – Serial Communications

Table B.4 Parameter Grouping/User Settings (cont.)

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ②	Min	Max	Factory Setting	User's Setting
Set Up	Input Mode	21	Text ①	1	--	--	Three Wire	
	Freq Select 1	5	Text ①	1	--	--	Adapter 1	
	Accel Time 1	7	Seconds	10	0.0	3600.0	10.0	
	Decel Time 1	8	Seconds	10	0.0	3600.0	10.0	
	Base Frequency	17	Hz	1	40	400	60	
	Base Voltage	18	Volts	1	25% of DRV	Drive Rated Volts	Drive Rated Volts	
	Maximum Voltage	20	Volts	1	25% of DRV	Drive Rated Volts	Drive Rated Volts	
	Minimum Freq	16	Hz	1	0	120	0	
	Maximum Freq	19	Hz	1	40	400	60	
	Stop Select	10	Text ①	1	--	--	Ramp	
	Current Limit	36	%	1	20% of DRC	150% of Drive Rated Current (DRC)	150% of DRC	
	Overload Mode	37	Text ①	1	--	--	No Derauling	
	Overload Current	38	Amps	100 = DRC	20% of DRC	115% of Drive Rated Current (DRC)	115% of DRC	
	Sec Curr Limit	141	%	1	0	150% of Drive Rated Current (DRC)	0	

① Refer to Table B.5 on pages B-13, B-14 and B-15 for the numerical equivalent of the text descriptions. ② Refer to page B-2.

Table B.4 Parameter Grouping/User Settings (cont.)

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ②	Min	Max	Factory Setting	User's Setting
Advanced Set Up	Minimum Freq	16	Hz	1	0	120	0	
	Maximum Freq	19	Hz	1	40	400	60	
	Base Frequency	17	Hz	1	40	400	60	
	Base Voltage	18	Volts	1	25% of DRV	Maximum Drive Rated Volts	Maximum DRV	
	Break Frequency	49	Hz	1	0	120	4 Hz	
	Break Voltage	50	Volts	1	0	50% of Max Drive Rated Volts	Drive Size Dependent	
	Maximum Voltage	20	Volts	1	25% of DRV	Maximum Drive Rated Volts	Maximum DRV	
	DC Boost Select	9	Text ①	1	---	---	Break Point	
	Start Boost	48	Volts	1	0	25% of Max. Drive Rated Volts	Drive Size Dependent	
	Run Boost	83	Volts	1	0	25% of Max. Drive Rated Volt	0	
	PWM Frequency	45	KHz	10	2.0	8.0	4.0	
	Analog Invert	84	Text ①	1	---	---	Disabled	
	4-20 mA Loss Sel	81	Text ①	1	---	---	Stop/Fault	
	Stop Select	10	Text ①	1	---	---	Ramp	
	DC Hold Time	12	Seconds	1	0	15	0	
	DC Hold Level	13	Volts	1	0	25% of Max. Drive Rated Volt	0	
	DB Enable	11	Text ①	1	---	---	Disabled	
	Motor Type	41	Text ①	1	---	---	Induc/Reluc	
	Compensation	52	Text ①	1	---	---	No Comp	

① Refer to Table B.5 on pages B-13, B-14 and B-15 for the numerical equivalent of the text descriptions. ② Refer to page B-2.

Appendix B – Serial Communications

Table B.4 Parameter Grouping/User Settings (cont.)

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ②	Min	Max	Factory Setting	User's Setting
Frequency Set	Freq Select 1	5	Text ①	1	---	---	Adapter 1	
	Freq Select 2	6	Text ①	1	---	---	Remote Pot	
	Jog Frequency	24	Hz	100	0	400.0	10.0	
	Prst/2nd Accel	26	Text ①	1	---	---	Preset	
	Upper Presets	72	Text ①	1	---	---	Disabled	
	Accel Time 2	30	Seconds	10	0.0	3600.0	10.0	
	Decel Time 2	31	Seconds	10	0.0	3600.0	10.0	
	Preset Freq 1	27	Hz	100	0.0	400.0	0.0	
	Preset Freq 2	28	Hz	100	0.0	400.0	0.0	
	Preset Freq 3	29	Hz	100	0.0	400.0	0.0	
	Preset Freq 4	73	Hz	100	0.0	400.0	0.0	
	Preset Freq 5	74	Hz	100	0.0	400.0	0.0	
	Preset Freq 6	75	Hz	100	0.0	400.0	0.0	
	Preset Freq 7	76	Hz	100	0.0	400.0	0.0	
	Skip Freq 1	32	Hz	1	0	400	400	
	Skip Freq 2	33	Hz	1	0	400	400	
	Skip Freq 3	34	Hz	1	0	400	400	
	Skip Freq Band	35	Hz	1	0	15	0	
	MOP Increment	22	Hz/Second	1	0.00	255.00	0.00	

① Refer to Table B.6 on pages B-13, B-14 and B-15 for the numerical equivalent of the text descriptions.

② Refer to page B-2.

Table B.4 Parameter Grouping/User Settings (cont.)

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ②	Min	Max	Factory Setting	User's Setting
Feature Select	Run On Power Up	14	Text ①	1	---	---	Disabled	
	Reset/Run Tries	85	Numeric	1	0	9	0	
	Reset/Run Time	15	Seconds	100	0.5	30.0	1.0	
	S Curve Enable	57	Text ①	1	---	---	Disabled	
	S Curve Time	56	Seconds	10	0.0	300.0	0.0	
	Language	47	Text ①	1	---	---	English	
	Balance Freq ③	80	Hz	1	0	255	0	
	Balance Time ③	79	Seconds	1	0	255	0	
	Balance Angle ③	78	Numeric	1	0	255	0	
	Cable Length ④	143	Text ①	1	---	---	Short	
Output Set Up	Output Config 1	90	Text ①	1	---	---	Faulted	
	Output Config 2	91	Text ①	1	---	---	Running	
	Analog Out Sel	25	Text ①	1	---	---	Frequency	
	Above Freq Val	77	Hz	1	0	400	0	
	Fault Buffer 0	86	Numeric	1	---	---	---	
Faults	Fault Buffer 1	87	Numeric	1	---	---	---	
	Fault Buffer 2	88	Numeric	1	---	---	---	
	Fault Buffer 3	89	Numeric	1	---	---	---	
	Clear Fault	51	Text ①	1	---	---	Ready	
	Cur Lim Trip En	82	Text ①	1	---	---	Default Run	
	Line Loss Fault	40	Text ①	1	---	---	F03 Enable	
	Fault Clear Mode	39	Text ①	1	---	---	Enabled	

① Refer to Table B.5 on pages B-13, B-14 and B-15 for the numerical equivalent of the text descriptions.

② Refer to page B-2.

③ FRN 4.01 and below only.

④ FRN 4.01 and above only.

Appendix B – Serial Communications

Table B.4 Parameter Grouping/User Settings (cont.)

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ②	Min	Max	Factory Setting	User's Setting
Diagnostics	Drive Command	58	Byte	---	--	--	--	
	Drive Status	59	Word	---	--	--	--	
	Drive Alarm	60	Byte	---	--	--	--	
	Input Status	55	Byte	---	--	--	--	
	Freq Source	62	Text ①	1	--	--	--	
	Freq Command	65	Hz	100	- 0.00	400.00	0.00	
	Drive Direction	69	Text	1	--	--	Forward	
	Motor Mode	43	Text	1	--	--	--	
	Power Mode	44	Text	1	--	--	--	
	Drive Type	61	Text	1	--	--	--	
	Firmware Version	71	Numeric	1	--	--	--	
	Output Pulses	67	Cycles	256= 1 rev	0	65535	--	
	Drive Temp	70	°C	1	0	Drive Temperature	--	
	Set Defaults	64	Numeric	1	--	--	Ready	
	Logic Mask	92	Byte	---	--	--	01111111	
	Direction Mask	94	Byte	---	--	--	01111111	
	Start Mask	95	Byte	---	--	--	01111111	
Jog Mask	96	Byte	---	--	--	01111111		
Reference Mask	97	Byte	---	--	--	01111111		
Accel Mask	98	Byte	---	--	--	01111111		
Decel Mask	99	Byte	---	--	--	01111111		
Fault Mask	100	Byte	---	--	--	01111111		
MOP Mask	101	Byte	---	--	--	01111111		
Local Mask	93	Byte	---	--	--	01111111		

① Refer to Table B.5 on pages B-13, B-14 and B-15 for the numerical equivalent of the text descriptions. ② Refer to page B-2.

Table B.4 Parameter Grouping/User Settings (cont.)

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ①	Min	Max	Factory Setting	User's Setting
Owners	Stop Owner	102	Byte	---	---	---	---	---
	Direction Owner	103	Byte	---	---	---	---	---
	Start Owner	104	Byte	---	---	---	---	---
	Jog Owner	105	Byte	---	---	---	---	---
	Reference Owner	106	Byte	---	---	---	---	---
	Accel Owner	107	Byte	---	---	---	---	---
	Decel Owner	108	Byte	---	---	---	---	---
	Fault Owner	109	Byte	---	---	---	---	---
	MOP Owner	110	Byte	---	---	---	---	---
	Local Owner	137	Byte	---	---	---	---	---
	Data In A1	111	Parameter # ②	1	0	143	0	
	Data In A2	112	Parameter # ②	1	0	143	0	
	Data In B1	113	Parameter # ②	1	0	143	0	
Data In B2	114	Parameter # ②	1	0	143	0		
Data In C1	115	Parameter # ②	1	0	143	0		
Data In C2	116	Parameter # ②	1	0	143	0		
Data In D1	117	Parameter # ②	1	0	143	0		
Data In D2	118	Parameter # ②	1	0	143	0		
Data Out A1	119	Parameter # ②	1	0	143	1		
Data Out A2	120	Parameter # ②	1	0	143	1		
Data Out B1	121	Parameter # ②	1	0	143	1		
Data Out B2	122	Parameter # ②	1	0	143	1		
Data Out C1	123	Parameter # ②	1	0	143	1		
Data Out C2	124	Parameter # ②	1	0	143	1		
Data Out D1	125	Parameter # ②	1	0	143	1		
Data Out D2	126	Parameter # ②	1	0	143	1		
Adapter I/O								

① Refer to page B-2.

② [Preset Freq 1] through [Preset Freq 7] cannot be read or changed with these parameters.

Appendix B – Serial Communications

Table B.4 Parameter Grouping/User Settings (cont.)

Group	Parameter Name	Parameter #	Display Units	Drive Units Scale Factor ②	Min	Max	Factory Setting	User's Setting
Process Display	Process Par	127	Parameter #	1	1	143	1	
	Process Scale	128	Numeric	100	-327.68	+327.67	1.00	
	Process Text 1	129	ASCII Text	--	--	--	?	
	Process Text 2	130	ASCII Text	--	--	--	--	
	Process Text 3	131	ASCII Text	--	--	--	--	
	Process Text 4	132	ASCII Text	--	--	--	--	
	Process Text 5	133	ASCII Text	--	--	--	--	
	Process Text 6	134	ASCII Text	--	--	--	--	
Process Text 7	135	ASCII Text	--	--	--	--		
Process Text 8	136	ASCII Text	--	--	--	--		

① Refer to Table B.5 on pages B-13, B-14 and B-15 for the numerical equivalent of the text descriptions.

② Refer to page B-2.

Table B.5 “Display Unit” Equivalent to Parameter Text Descriptions

Parameter No.	Parameter Name	Text	Display Unit
5	Freq Select 1	"Remote Pot"	1
6	Freq Select 2	"0-10 Volt"	2
62	Freq Source	"4-20 mA"	3
		"MOP"	4
		"Adapter 1"	5
		"Adapter 2"	6
		"Adapter 3"	7
		"Adapter 4"	8
		"Adapter 5"	9
		"Adapter 6"	10
		"Preset 1"	11
		"Preset 2"	12
"Preset 3"	13		
"Preset 4"	14		
"Preset 5"	15		
"Preset 6"	16		
"Preset 7"	17		
		"Jog Sel" ^①	18

Parameter No.	Parameter Name	Text	Display Unit
9	DC Boost Select	"Fan Sel #1"	0
		"Fan Sel #2"	1
		"No Boost"	2
		"6 volts"	3
		"12 volts"	4
		"18 volts"	5
		"24 volts"	6
		"30 volts"	7
		"36 volts"	8
		"42 volts"	9
		"48 volts"	10
		"Break Point"	11
10	Stop Select	"Run Boost"	12
		"Coast"	0
		"DC Brake"	1
		"Ramp"	2
		"S-Curve"	3

① Valid for parameter (62) [Freq Source] only.

Appendix B – Serial Communications

Table B.5 "Display Unit" Equivalent to Parameter Text Descriptions (continued)

Parameter No.	Parameter Name	Text	Display Unit
11	DB Enabled	"Disabled" "Enabled"	0 1
14	Run On Power Up	Disabled Enabled	0 1
21	Input Mode	"Three Wire" "Run Fwd/Rev" "3 W/2nd Acc" "Run F/R 2nd A" "3 Wire/MOP" "Run F/R MOP"	0 1 2 3 4 5
25	Analog Out Sel	"Frequency" "Current" "BusVolts" "Power" "Output Volts"	0 1 2 3 4
26	Preset/2nd Accel	"Preset" "2nd Accel"	0 1
37	Overload Mode	"No Derating" "Min Derate" "Max Derate"	0 1 2
39	Fault Clear Mode	Disabled Enabled	0 1

Parameter No.	Parameter Name	Text	Display Unit
40	Line Loss Fault	"F03 Enable" "Uvolt Run"	0 1
41	Motor Type	"Induc/Reluc" "Sync PM"	0 1
43	Motor Mode	"Invalid" "Zero Mode" "Accel Mode" "At Hz Mode" "Decel Mode" "Coast Mode" "Braking Mode" "Faulted Mode"	0 1 2 3 4 5 6 7
44	Power Mode	"Invalid" "First Mode" "Charge Mode" "Wait Mode" "Test Mode" "Line Loss Mode" "Idle Mode" "Active Mode" "Braking Mode" "Faulted Mode"	0 1 2 3 4 5 6 7 8 9

Table B.5 “Display Unit” Equivalent to Parameter Text Descriptions (continued)

Parameter No.	Parameter Name	Text	Display Unit
47	Language	"English" "Alternate Language"	0 1
51	Clear Fault	"Ready" "Clear Fault"	0 1
52	Compensation	"No Comp." "Comp."	0 1
57	S-Curve Enable	Disabled Enabled	0 1
64	Set Defaults	"Ready" "Store to EE" "Recl frm EE" "Default Init"	0 1 2 3
69	Drive Direction	"Forward" "Reverse"	0 1
72	Upper Presets	Disabled Enabled	0 1

Parameter No.	Parameter Name	Text	Display Unit
81	4-20mA Loss Sel	"Min/Alarm" "Stop/Fault" "Hold/Alarm" "Max/Alarm" "Pre1/Alarm" "Default Run" "Trip @ 1 Lmt"	0 1 2 3 4 0 1
82	Curr Lim Trip En	Disabled Enabled	0 1
84	Analog Invert	"At Speed" "Above Freq"	0 1
90	Output Config 1	"Running" "Faulted"	2 3
91	Output Config 2	"Alarm" "Balanced" ① ② "Above Curr" ① ②	4 0
143	Cable Length	"Short" "Long"	0 1

① FRN 4.01 and below only. "Balanced" unit display is "5" and "Above Current" unit display is "6".

② FRN 5.01 and above only. "Above Current" unit display is "5".

This Page Intentionally Left Blank.

ACCESSORIES

Table C.1

Bulletin 1201 Descriptions	Use With	NEMA Type 1 IP30 Cat. No.	NEMA Type 12 IP66 (UL Type 4X Indoor) Cat. No.	NEMA Type 1/12 (Enhanced) IP30 Cat. No.	Hand Held (Enhanced) Cat. No.
Door Mount Bezel Kit		1201-DMA	-	-	-
Blank Cover		1201-HAB	-	-	-
Human Interface Module – Programmer Only	Bulletin 1305 Drives	1201-HAP	1201-HJP	1201-HJPE	1201-HHPE
Human Interface Module – Analog Speed Potentiometer		1201-HA1	-	-	-
Human Interface Module – Programmer/Run Time Functions		-	-	1201-HJ3E	1201-HH3E
Human Interface Module – Digital Up–Down Speed Control		1201-HA2	1201-HJ2	-	-
Bulletin 1202 Descriptions	Use With	Cat. No.	Cat. No.	Cat. No.	Cat. No.
1/3 Meter Communication Cable (Male-Male) for Port 2	Human Interface Module and Communications Modules	1202-C03	-	-	-
1 Meter Communication Cable (Male-Male) for Port 2		1202-C10	-	-	-
3 Meter Communication Cable (Male-Male) for Port 2		1202-C30	-	-	-
9 Meter Communication Cable (Male-Male) for Port 2		1202-C90	-	-	-
1/3 Meter Communication Cable (Male-Female) for Port 1	Human Interface Module Only	1202-H03	-	-	-
1 Meter Communication Cable (Male-Female) for Port 1		1202-H10	-	-	-
3 Meter Communication Cable (Male-Female) for Port 1		1202-H30	-	-	-
9 Meter Communication Cable (Male-Female) for Port 1		1202-H90	-	-	-
Bulletin 1203 Descriptions	Use With	Cat. No.	Cat. No.	Cat. No.	Cat. No.
Single Point Remote I/O Communication Module ①		1203-GD1/GK1	-	-	-
RS232/RS422/RS485/DF1/DH485 Serial Communication Module ①	Bulletin 1305 Drives	1203-GD2/GK2	-	-	-
DeviceNet™ Communication Module ②		1203-GK5	-	-	-

① Separately powered AC/DC. ② Separately powered DC only.

Appendix C – Drive Accessories

Table C.2 Accessories

Accessory		Specifications			
Line Reactor		Iron core, 3% impedance, 600V, Class H insulation, 115 °C rise, copper wound, 50/60 Hz, terminal blocks, UL, CSA			
Isolation Transformer		230V/230V or 460V/460V, Delta primary/Wye secondary, Class H insulation, 150 °C rise, aluminum wound, 60 Hz, ± 5% taps, (1) N.C. thermostat per coil, UL, CSA			
Terminators		NEMA 4, 460V units – Refer to "Motor Lead Lengths" for proper selection.			
Drive Output Ratings		Terminators			
HP	kW	Open Style	Input Line Reactors	Isolation Transformer	Terminators
		NEMA Type 1	NEMA Type 1	NEMA Type 1	NEMA Type 4
240V AC					
1/2	0.37	1321-3R4-A	1321-3RA4-A	1321-3T003-AA	1204-TFA1
3/4	0.55	1321-3R4-A	1321-3RA4-A	1321-3T003-AA	1204-TFA2
1	0.75	1321-3R8-A	1321-3RA8-A	1321-3T005-AA	
2	1.5	1321-3R8-A	1321-3RA8-A	1321-3T005-AA	
3	2.2	1321-3R18-A	1321-3RA18-A	1321-3T005-AA	
460V AC					
1/2	0.37	1321-3R2-B	1321-3RA2-B	1321-3T003-BB	1204-TFA1
3/4	0.55	1321-3R2-B	1321-3RA2-B	1321-3T003-BB	1204-TFA2
1	0.75	1321-3R4-B	1321-3RA4-B	1321-3T005-BB	
2	1.5	1321-3R4-B	1321-3RA4-B	1321-3T005-BB	
3	2.2	1321-3R8-B	1321-3RA8-B	1321-3T005-BB	
5	4.0	1321-3R18-B	1321-3RA18-B	1321-3T007-BB	
Communication Module		All Bulletin 1305 Drives		1203-GD1 1203-GD2	
Single Point Remote I/O					
RS232/RS422/RS485/DF1/DH485					

Drive Output Ratings		Dynamic Brake Kits ①
HP	kW	
230V AC		
2	1.5	1305-KAA12
3	2.2	1305-KAA12
460V AC		
1/2	0.37	1305-KBA03
3/4	0.55	1305-KBA03
1	0.75	1305-KBA03
2	1.5	1305-KBA06
3	2.2	1305-KBA06
5	4	1305-KBA09 ②
CE Conformance Filters	RFI Filters, Kits, and Metal Conduit Plates Required to Meet CE Directives	
Filter (RFB)	0.5 – 0.75 HP (230V)	1305-RFB-05-A 1305-IMP-05-A
Metal Plate Kit (MP)	1 HP (230V)	1305-RFB-06-A 1305-IMP-06-A
	2 HP (230V), 0.5 – 3 HP (460V)	1305-RFB-08-B 1305-IMP-08-B
	3 HP (230V), 5 HP (460V)	1305-RFB-12-C 1305-IMP-12-C

① [DB Enable] should be set to "Enable" when applying external dynamic brake kits.

② For use with Series B Drives only. DO NOT use with Series A Drives.

EMC DIRECTIVE

This apparatus is tested to meet Council Directive 89/336 Electromagnetic Compatibility (EMC) using a technical construction file and the following standards, in whole or in part:

- EN 50081-1, -2 – General Emission Standard
- EN 50082-1, -2 – General Immunity Standard

Table D.1 EMC Directives

Marked for all applicable directives	
Emissions	EN55 011/CISPR 11 Level B
Immunity	EN50 082-1:1992 (IEC 801-2, IEC 801-3, IEC 801-4) EN50 082-2:1995 (EN 61000-4-2, ENV 50140/50204, EN 61000-4-4, ENV 50141, EN 61000-4-8, IEC 801-6)



IMPORTANT: The conformity of the drive and filter to any standard does not guarantee that the entire installation will conform. Many other factors can influence the total installation and only direct measurements can verify total conformity.

REQUIREMENTS FOR CONFORMING INSTALLATION

The following six items are required for CE conformance:

1. CE marked product in NEMA Type 1 (IP30) configuration.
2. Filter and Metal Plate Kit catalog numbers are listed in Table D.2 on the following page. One Filter and one Metal Plate Kit are required. The metal bonding plate **MUST** be inserted and bonded to the drive heatsink.
3. Grounding as shown on page D-3. The Green & Yellow ground wire connects to the TBI GRD terminals and the shield terminates at the compact strain relief connector with double saddle clamp (see item 5).
4. Maximum cable length (drive to motor) of 75 meters (250 feet). For applications greater than 9 meters (30 feet), refer to recommendations tabulated in "Motor Lead Lengths" (see Chapter 2).
5. Input power (source to filter) and output power (drive to motor) wiring must be in braided shielded cable with a coverage of 75% or better, metal conduit or other with equivalent or better attenuation, mounted with appropriate connectors. For shielded cable it is recommended to use a compact strain relief connector with a double saddle clamp for filter and drive input and a compact strain relief connector with EMI protection for motor output.
6. Control (I/O) and signal wiring must be in shielded cable connected to the drive with a compact strain relief connector with EMI protection.

FILTER

Table D.2 Filter and Metal Plate Kit Selection

Filter	Metal Plate Kit	AC Drive Type
1305-RFB-5-A	1305-MP-05-A	1305-AA02 1305-AA03
	1305-MP-06-A	1305-AA04
1305-RFB-8-B	1305-MP-08-B	1305-AA08
		1305-BA01
		1305-BA02
		1305-BA03
		1305-BA04
1305-BA06		
1305-RFB-12-C	1305-MP-12-C	1305-AA12 1305-BA09

RFI Filter Installation

IMPORTANT: Refer to the instructions supplied with the filter for details.

The RFI filter must be connected between the incoming AC supply line and the drive input terminal.

RFI Filter Leakage Current


The RFI filter may cause ground leakage currents. Therefore a solid ground connection must be provided.



ATTENTION: To guard against possible equipment damage, RFI filters can only be used with AC supplies that are nominally balanced, with respect to ground. In some installations, three-phase supplies are occasionally connected in a 3-wire configuration with one phase grounded (Grounded Delta). The filter must not be used in Grounded Delta supplies, nor should they be used in single-phase input applications.

ELECTRICAL CONFIGURATION

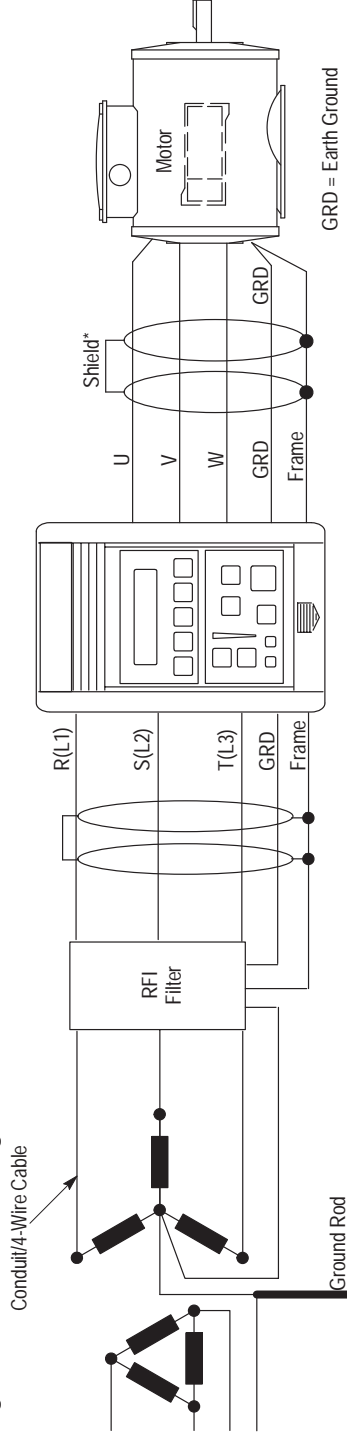Figure D.1 Electrical Configuration



GROUNDING

RFI Filter Grounding

IMPORTANT: Shield must be terminated in cable clamp to frame. Ground wire must be connected to GRD terminal.

IMPORTANT: For use with a 1305 drive with metal conduit entry panel (frame). Using an RFI filter may result in relatively high ground leakage currents. Therefore, the filter must be permanently installed and solidly grounded to the supply neutral. Grounding must not rely on flexible cables and should not include any form of plug or socket that would permit inadvertent disconnection. The integrity of this connection should be periodically checked. Refer to the instruction manual for RFI filters for CE compliance and for proper installation instructions.

MECHANICAL CONFIGURATION

Figure D.2 Mechanical Configuration


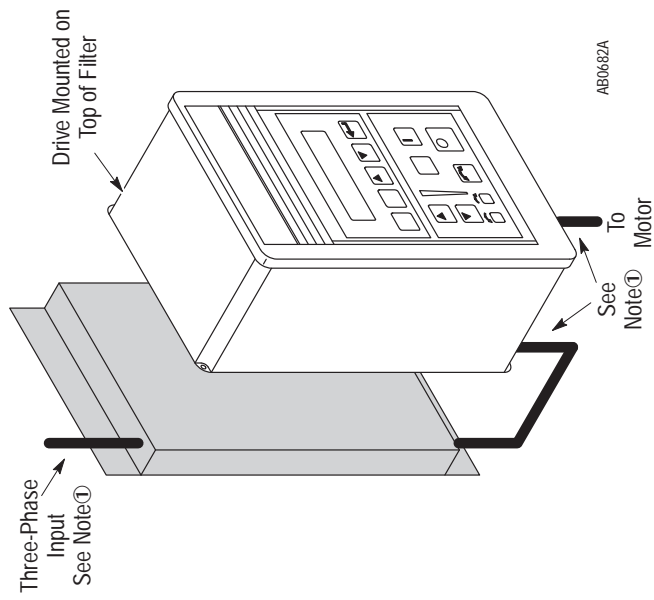


Figure D.3 Required Knockout Assignments

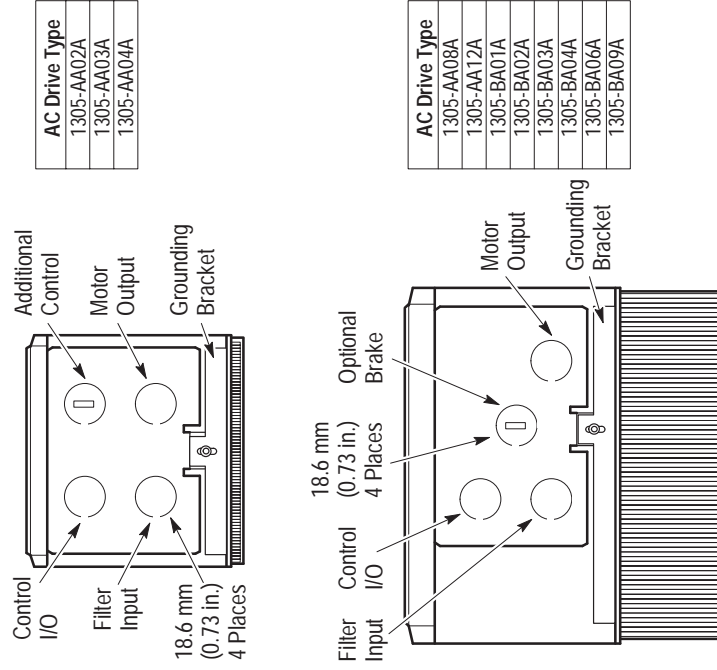

① Shielding is required. See requirement "5" and "6" on page D-1.

- Numbers**
- 2nd A, 2nd Acc, 2-18
- A**
- Accel/Decel Control, 2-18, 5-9, 5-26, 5-29, 5-30
- Accessories, C-1, D-2
- Adapters, 2-23
- Ambient Temperature, A-3
- Analog Input
 - 0-10V, A-3
 - 4-20mA, 5-21, A-3
- Analog Invert, 5-21
- Analog Output, 5-38, A-4
- Auto Restart, 5-32
- B**
- Block Diagram, A-1
- C**
- Carrier Frequency, 5-20, A-4
- Catalog Number Description, 1-5
- Choose Mode, 3-5, 3-6
- Clearing Faults, 5-39, 5-41, 6-1
- Control Panel
 - Analog Speed Potentiometer, 3-3
 - Direction Indicators (LEDs), 3-3
 - Speed Indicator, 3-3
- Control Panel Keys
 - Change Direction, 3-3
 - Increment/Decrement, 3-3
 - Jog, 3-2
 - Start, 3-2
 - Stop, 3-2
- Control Status Mode, 3-5, 3-16
- Conventions Used in Manual, 1-3
- Current Limiting, 5-12, 5-13, 5-39
- Current Rating, 1-5
- Custom Volts/Hertz Patterns, 5-16, 5-17, 5-18
- D**
- DC Brake to Stop, 5-11, 5-23
- DC Hold Level, 5-23
- Diagnostics Group, 5-42
- Dimensions, 2-2
- Display Mode, 3-5, 3-7
- Display Panel Keys
- E**
- Enter, 3-2
- Escape, 3-2
- Increment/Decrement, 3-2
- Select, 3-2
- Distances between Devices, 2-1, 2-13, 2-16, 2-23, 2-24
- Drive Temperature, 5-7, 5-46
- E**
- EEProm Mode, 3-5, 3-12
- ESD, Electrostatic Discharge, 1-1
- F**
- Fan/Pump Volts/Hz Patterns, 5-18
- Fault Buffer History, 5-39
- Faults
 - Diag C Lim Fault, 6-3, 6-4
 - Drive Reset Fault, 6-3
 - EEProm Fault, 6-3
 - Hertz Err Fault, 6-3
 - Hertz Set Fault, 6-3
 - IPM Current Fault, 6-4
 - IPM Overtemp Fault, 6-4
 - Max Retries Fault, 6-4
 - Motor Mode Fault, 6-5
 - Motor Stall Fault, 6-5

Index

- Neg Slope Fault, 6-5
- Op Error Fault, 6-5
- Open Pot Fault, 6-5
- Overcurrent Fault, 6-6
- Overload Fault, 6-6
- Overspeed Fault, 6-6
- Overtemp Fault, 6-6
- Overvoltage Fault, 6-6
- Phase U Fault, 6-6
- Phase V Fault, 6-6
- Phase W Fault, 6-6
- Power Loss Fault, 6-7
- Power Mode Fault, 6-7
- Reprogram Fault, 6-7
- Run Boost Fault, 6-7
- Serial Fault, 6-7
- Undervoltage Fault, 6-8
- UV Short Fault, 6-8
- UW Short Fault, 6-8
- VW Short Fault, 6-8
- Firmware Compatibility, 1-4
- Frequency Select, 5-25, 5-29, 5-30
- Fusing, AC Input, 2-6
- G**
- Group Level, 3-6
- H**
- HIM
- Control Panel, 3-1
- Display Panel, 3-1
- Installation, 3-4
- Key Descriptions, 3-2
- Removal, 3-4
- HIM Modes
- Control Status, 3-5, 3-16
- Display, 3-5, 3-7
- EEPROM, 3-5, 3-12
- Password, 3-5, 3-18
- Process, 3-5, 3-10, 3-11
- Program, 3-5, 3-7
- Search, 3-5, 3-15
- Human Interface Module
- See also* HIM
- Key Descriptions, 3-2
- Removal, 3-4
- Human Interface Module (HIM), Description, 3-1
- I**
- Input Mode Selection, 2-17
- Input Power Conditioning, 2-6
- Isolation Transformer, 2-6
- J**
- Jog, 5-26, 5-48
- L**
- Language, 1-5, 5-34
- LEDs
- Direction Indicators, 3-3
- Speed Indicator, 3-3
- Levels
- Group, 3-6
- Mode, 3-6
- Operator, 3-6
- Parameter, 3-6
- Line Reactor, 2-6
- Low Line Operation, 5-40, 5-41
- M**
- Min/Max Frequencies, 5-11
- Mode Level, 3-6
- Modes
- See also* HIM Modes
- Choose, 3-5, 3-6
- MOP Function, 2-18, 5-6, 5-28
- Motor Unbalance, 5-36

- Mounting, 2-1
- N**
- Nameplate Location, 1-4
- O**
- Operator Level, 3-6
- Output Contacts, 5-37, 5-38, A-5
- Output Disconnection, 2-6
- Output Ratings, 1-5, A-2
- Overload Protection, 5-12
- P**
- Parameter Level, 3-6
- Parameters
 - % Output Current, 5-7
 - % Output Power, 5-7
 - 4-20mA Loss Sel, 5-21
 - Above Curr Val, 5-38
 - Above Freq Val, 5-38
 - Accel Mask, 5-48
 - Accel Owner, 5-52
 - Accel Time 1, 5-9
 - Accel Time 2, 5-26
 - Adapter I/O, 5-54
 - Advanced Setup Group, 5-15
 - Analog Invert, 5-21
 - Analog Out Sel, 5-38
 - Balance Angle, 5-36
 - Balance Freq, 5-35
 - Balance Time, 5-35
 - Base Frequency, 5-10, 5-15
 - Base Voltage, 5-10, 5-16
 - Break Frequency, 5-16
 - Break Voltage, 5-17
 - Clear Fault, 5-39
 - Compensation, 5-24
 - Current Lim Trip En, 5-40
 - Current Limit, 5-11
 - Data In A1, 5-54
 - Data Out A1, 5-55
 - DB Enable, 5-23
 - DC Boost Select, 5-18
 - DC Bus Voltage, 5-5
 - DC Hold Level, 5-23
 - DC Hold Time, 5-22
 - Decel Mask, 5-48
 - Decel Owner, 5-52
 - Decel Time 1, 5-9
 - Decel Time 2, 5-27
 - Diagnostics Group, 5-42
 - Direction Mask, 5-47
 - Direction Owner, 5-50
 - Drive Alarm, 5-44
 - Drive Command, 5-42
 - Drive Direction, 5-45
 - Drive Status, 5-43
 - Drive Temp, 5-7, 5-46
 - Drive Type, 5-46
 - Fault Buffer 0-3, 5-39
 - Fault Clear Mode, 5-41
 - Fault Mask, 5-49
 - Fault Owner, 5-52
 - Faults Group, 5-39
 - Feature Select, 5-32
 - Firmware Ver, 5-46
 - Freq Command, 5-6, 5-45
 - Freq Select 1, 5-8, 5-25
 - Freq Select 2, 5-25
 - Freq Selection, 5-29
 - Freq Source, 5-45
 - Frequency Set Group, 5-25
 - Input Mode, 5-8
 - Input Status, 5-44
 - Jog Frequency, 5-26
 - Jog Mask, 5-48
 - Jog Owner, 5-51
 - Language, 5-34
 - Last Fault, 5-7
 - Line Loss Fault, 5-40
 - Local Mask, 5-49
 - Local Owner, 5-53
 - Logic Masks, 5-47
 - Masks Group, 5-47
 - Maximum Frequency, 5-15

Index

- Maximum Voltage, 5-10, 5-17
- Minimum Frequency, 5-10, 5-15
- MOP Hertz, 5-6
- MOP Increment, 5-28
- MOP Mask, 5-49
- MOP Owner, 5-53
- Motor Mode, 5-45
- Motor Type, 5-23
- Output 1 Config, 5-37
- Output 2 Config, 5-37
- Output Configuration Group, 5-37
- Output Current, 5-5
- Output Frequency, 5-6
- Output Power, 5-5
- Output Pulses, 5-46
- Output Voltage, 5-5
- Overload Current, 5-12
- Overload Mode, 5-12
- Owners, 5-50
- Power Mode, 5-46
- Preset Freq 1-7, 5-27
- Process 1 Par, 5-56
- Process 1 Scale, 5-56
- Process Display Group, 5-56, 5-57
- Process Txt 1-8, 5-56
- Prst/2nd Accel, 5-26
- PWM Frequency, 5-20
- Reference Mask, 5-48
- Reference Owner, 5-52
- Reset/Run Time, 5-33
- Reset/Run Tries, 5-32
- Run Boost, 5-19
- Run On Power Up, 5-32
- S Curve Enable, 5-33
- S Curve Time, 5-34
- Sec Current Limit, 5-13
- Set Defaults, 5-46
- Setup Group, 5-8
- Skip Frequency Band, 5-28
- Skip Frequency Group 1-3, 5-27
- Start Boost, 5-19
- Start Mask, 5-48
- Start Owner, 5-51
- Stop Owner, 5-50
- Stop Select, 5-11, 5-22
- Upper Presets, 5-26
- Password Mode, 3-5, 3-18
- Potentiometer Wiring, 2-21
- Power Dissipation, A-2
- Preset Frequencies, 5-26, 5-27, 5-29, 5-30
- Process Display, 5-56, 5-57
- Process Mode, 3-5, 3-10, 3-11
- Program Mode, 3-5, 3-7
- Programming
 - Function Index, 5-1
 - Using a HIM, 5-1
- Programming Steps, 5-2, 5-4
- R**
 - Reverse, 2-18
- S**
 - S-Curve, 5-33, 5-34
 - Search Mode, 3-5, 3-15
 - Set Defaults, 5-46
 - Skip Frequencies, 5-27
 - Specifications
 - Control, A-3
 - Environment, A-3
 - Input/Output Ratings, A-2
 - Protection, A-5
 - Start-Up, 4-1
 - Procedure, 4-1
 - Status Display, 3-5
 - Stopping, 5-11, 5-22
 - Storage Temperature, A-3
 - Switch Settings
 - Accel/Decel Selection, 5-30
 - Frequency Selection, 5-29

T

Three Wire (3w) Control, 2-18

Troubleshooting, 6-1

Two Wire Control, 2-17

V

Vibration, A-3

Voltage Boost, 5-18, 5-19

Voltage Rating, 1-5

W

Wiring, Control and Signal, 2-17, 2-18

This Page Intentionally Left Blank.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleeflaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 1305-5.1 - June 2013

Supersedes Publication 1305-5.1 - February 1996

Copyright © 2013 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.