

WS 8002 Manual

Instruction Manual



Technical data:

- ▶ Time and date
- ▶ Time in 12/24 hour format
- ▶ Calendar
- ▶ Date and weekday display
- ▶ Temperature display in °C or °F
- ▶ Weekday display in seven languages: English, German, Italian, French, Danish, Dutch, Spanish
- ▶ Alarm with Snooze function
- ▶ Thermometer: Indoor measurement ranges: 0°C ~ 50°C
- ▶ Battery: 1.5V "AA" size x 1 pc (not included)

Important information:

- ▶ When you insert the batteries all the symbols on the display will briefly light up and you will hear a signal tone, LCD full display for 2 seconds with beeping

Manual time setting:

- ▶ Press and hold down the "SET" button for 2 seconds, the 12/24 hour mode display starts to flash. Now use "▲" and "▼" buttons to set the correct 12/24 hour mode.
- ▶ Press "SET" to confirm your setting, the offset display starts to flash. Now use "▲" and "▼" buttons to set the correct hour.
- ▶ Press "SET" to confirm your setting, the Minute displays starts to flash. Now use "▲" and "▼" buttons to set the correct minute.
- ▶ Press "SET" to confirm your setting, the Year display 2004 starts to flash. Now use "▲" and "▼" buttons to set the correct year.
- ▶ Press SET to confirm your setting, the Month display starts to flash. Now use "▲" and "▼" buttons to set the correct month.
- ▶ Press "SET" to confirm your setting, the Date display starts to flash. Now use "▲" and "▼" buttons to set the correct date.
- ▶ Press "SET" to confirm your setting, the language selection for the Weekday displays starts to flash. Now use "▲" and "▼" buttons to select a language.
- ▶ Press "SET" to confirm your setting and to end the setting procedures, enter the clock mode.

Info:

- ▶ After 30 seconds without pressing any button, the clock switches automatically from set mode to normal time mode.

Setting the daily alarms:

- To view the set alarm times, under the clock mode, press once **ALARM** button, LCD displays the ((●)) icon.
- ▶ Press and hold down the **ALARM** button for 2 seconds until Alarm Time flashing icon is displayed. Now use the "▲"

WS 8002 Manual

and “▼” buttons to select the alarm time you require and briefly press the **ALARM** button to set this Alarm time.

- ▶ The Hour display of the Alarm time starts to flash. Use the “▲” and “▼” buttons to set the required hour. Press **ALARM** button to confirm your setting
- ▶ The Minute display of the Alarm time starts to flash. Use the “▲” and “▼” buttons to set the required minute. Press **ALARM** button to confirm your setting and to end the setting procedure.
- ▶ To activate or deactivate the daily alarms, briefly press the “**ALARM**” button once.

Info:

- ▶ After 30 seconds without pressing any button the clock switches automatically from setting mode to Normal clock mode.
- ▶ The alarm will sound for 2 minutes if you do not deactivate it by pressing any button. In this case the alarm will be repeated automatically after 24 hours.
- ▶ Rising alarm sound changes the frequency 4 times while the alarm signal is heard.

Automatic Snooze function:

- ▶ Proceed as follows to activate the automatic Snooze function: While the alarm is sounding, press the **SNOOZE** button to activate snooze function. Then Snooze function is active. The ((●)) icon appears on the display.
- ▶ This operation moves the alarm back by 5 minutes and the alarm will restart at this time.
- ▶ The Snooze function can be interrupted by pressing any button.

°C/°F temperature display:

The temperature is displayed either in °C or °F. Briefly pressing the “▼” button allows you to switch between the individual models.

Care and Maintenance:

- Extreme temperatures, vibration and shock should be avoided as these may cause damage to the unit and give inaccurate forecasts and readings.
- Precautions shall be taken when handling the batteries. Injuries, burns, or property damage may be resulted if the batteries are in contact with conducting materials, heat, corrosive materials or explosives. The batteries shall be taken out from the unit before the product is to be stored for a long period of time.
- Immediately remove all low powered batteries to avoid leakage and damage. Replace only with new batteries of the recommended type.
- When cleaning the display and casings, use a soft damp cloth only. Do not use solvents or scouring agents as they may mark the LCD and casings.
- Do not submerge the unit in water.
- Special care shall be taken when handling a damaged LCD display. The liquid crystals can be harmful to user's health.
- Do not make any repair attempts to the unit. Return them to their original point of purchase for repair by a qualified engineer. Opening and tampering with the unit may invalidate their guarantee.
- Never touch the exposed electronic circuit of the device as there is a danger of electric shock should it become exposed.
- Do not expose the units to extreme and sudden temperature changes, this may lead to rapid changes in forecasts and readings and thereby reduce their accuracy.

Liability Disclaimer

- The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment

WS 8002 Manual

- Please contact your local or/and regional authorities to retrieve the addresses of legal dumping grounds with selective collection
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
- The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
- This product must however not be thrown in general rubbish collection points.
- As stated on the gift box and labeled on the product, reading the “User manual” is highly recommended for the benefit of the user.
- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is not to be used for medical purposes or for public information.
- This product is only designed to be used in the home as indication of the future weather and is not 100% accurate. Weather forecasts given by this product should be taken only as an indication and not as being totally accurate.
- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.
- No part of this manual may be reproduced without written consent of the manufacturer.

R&TTE Directive 1999/5/EC

Summary of the Declaration of Conformity: We hereby declare that this wireless transmission device does comply with the essential requirements of R&TTE Directive 1999/5/EC.

