

*ADSL*  
*Full-Rated Router*  
**-User's Manual-**

## Copyright

Copyright © 2004 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

## Disclaimer

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

## Caution

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Per FCC 15.21, you are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

***All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.***

## Contents

<b>1</b>	<b>Introduction.....</b>	<b>1</b>
1.1	System Requirement.....	1
1.2	Package Contents .....	1
<b>2</b>	<b>Product Features .....</b>	<b>2</b>
2.1	ADSL Compliant.....	2
2.2	ATM Protocols and Encapsulations.....	2
2.3	Bridging / Routing.....	2
2.4	Security and HTTP Web-based Management.....	2
2.5	Interface .....	3
<b>3</b>	<b>Hardware Indicators and Connectors.....</b>	<b>4</b>
3.1	Front Panel Indicators and Description .....	4
3.2	Back Panel .....	5
3.3	Connect Related Devices.....	5
<b>4</b>	<b>Connecting ADSL Router via Ethernet and USB .....</b>	<b>7</b>
4.1	Setup ADSL Router via Ethernet Cable .....	7
4.2	Setup ADSL Router via USB Cable.....	7
4.3	Configure TCP/IP .....	10
<b>5</b>	<b>Configure ADSL Router via HTML Interface .....</b>	<b>18</b>
5.1	Login .....	18
5.2	Status Page.....	19
5.2.1	Home Page.....	19
5.2.2	PPP.....	20
5.2.3	ADSL Status Page .....	20
5.3	Configuration Pages.....	21
5.3.1	WAN Configuration .....	21
5.3.2	LAN Configuration .....	23
5.3.3	PPP Configuration .....	24
5.3.4	NAT Configuration.....	26
5.3.5	Virtual Server Configuration.....	28
5.3.6	Bridge Filtering.....	29
5.3.7	DNS Configuration.....	30
5.3.8	Dynamic DNS Update Configuration .....	31
5.3.9	User Level Username/Password Configuration.....	32
5.3.10	Save Settings/Reboot.....	32
<b>6</b>	<b>Admin Privilege .....</b>	<b>33</b>
6.1	WAN Status.....	33
6.2	ATM Status.....	34
6.3	ADSL Configuration.....	35
6.4	Route Table .....	36
6.5	Learned MAC Table.....	37
6.6	IP Configuration.....	37
6.7	Miscellaneous Configuration .....	40

6.8	TCP Status .....	42
6.9	Admin Level Username/Password .....	42
6.10	Reset Factory Default.....	43
6.11	Diagnostic Test.....	44
6.12	System Log .....	45
6.13	Local Code Image Update .....	46
6.14	Firewall .....	47

## **1. Introduction**

This ADSL Ethernet Router powered by Conexant ADSL Router chipset. It is featuring “always-on” function and enables high-speed broadband connection from Internet to end-users. This ADSL Ethernet Router ensures not only maximum performance, but also significantly simpler handling process. You can access Internet and provide multiple users on LAN to access Internet (WEB, E-mail, FTP) simultaneously, with one single user account via one single ADSL line.

This ADSL Ethernet Router is fully compliant with ANSI T1.413 Issue 2, ITU-T G.dmt, ITU-T G.lite standards. Using existing twisted-pair telephone lines, ADSL technology provides data rate more than 100 times faster than a traditional analog modem without interruption of telephone service.

### **1.1 System Requirements**

- Pentium III 266 MHz processor or higher
- 128 MB RAM minimum
- 20 MB of free disk space minimum
- Ethernet Network Interface Controller (NIC) RJ45 Port
- USB Port
- CD-ROM

### **1.2 Package Contents**

- ADSL Ethernet Router
- RJ-45 Cable
- RJ-11 Cable
- USB Cable (for dual mode router only)
- Power Adapter
- Software driver CD
- Quick Guide

If any of above items is missing or damaged, please contact your local dealer immediately.

## **2. Product Features**

### **2.1 ADSL Compliant**

- ANSI T1.413 issue 2
- ITU G.dmt (G.992.1)
- ITU G.lite (G.992.2)
- ADSL over POTS (Annex A) or ADSL over ISDN (Annex B/UR2)
- G.994.1 (G.hs, Multimode)
- Tone detection for low power mode
- Auto negotiating rate adaptation
- Maximum downstream rate up to 8Mbps
- Maximum upstream rate up to 1Mbps

### **2.2 ATM Protocols and Encapsulations**

- ATM Forum UNI 3.1/4.0 PVC
- Up to 10 VCs (Virtual Circuit)
- ATM SAR (Segmentation and Reassembly)
- ATM supports UBR, CBR & VBR-nrt.
- RFC 2516 (PPP over Ethernet)
- RFC 2364 (PPP over ATM)
- RFC 1577 (Classical IP over ATM)
- RFC 1483 BPDU (Bridge Ethernet over ATM)
- RFC 2684 LLC Encapsulation and VC Multiplexing over AAL5
- OAM F4 and F5 segment end-to-end loopback (F4 on all VPIs, F5 on VPI 0 only)
- 10 PVCs (simultaneous and encapsulation independent)
- AAL5 UBR & CBR
- VPI (0-255), VCI (32-65535)

### **2.3 Bridging / Routing**

- Ethernet to ADSL self-learning Transparent Bridging (IEEE 802.1D)
- Supports up to 128 MAC learning address
- IP routing-RIPv2 (backward compatible with RIPv1)
- Static IP routing
- DHCP (Dynamic Host Configuration Protocol) Server and Client
- NAPT (Network Address and Port Translation)
- NAT (Network Address Translation)
- ICMP (Internet Control Message Protocol)
- IGMP (Internet Group Management Protocol)
- Simultaneous USB and Ethernet operation

### **2.4 Security and HTTP Web-based Management**

- PAP (Password Authentication Protocol; RFC1334)
- CHAP (Challenge Authentication Protocol; RFC1994)

- User authentication for PPP
- Firewall
- Configuration of NAT/NAPT
- WAN and LAN connection statistics
- Selection of Bridge or Router Mode
- Configuration of VCs (Virtual Circuits)
- DNS Proxy
- Dynamic DNS support
- DMZ support
- MAC Filtering
- ALG supports MSN Messenger, H.323 (MS NetMeeting), Yahoo Messenger, Windows Media Player, Real Audio, CuSeeMe 5.00, DirectX 8.0, DirectPlay, IPSec, PPTP VPN pass-through, L2TP VPN pass-through, HTTPS, HTTP, FTP, ICMP, SMTP, POP3, NNTP, Telnet, Age of Empires 2, StartCraft, Diablo (Blizzard), Quake 2/ Wuake 2 Server, Quake 3, Doom, Half Life Counter Strike/ Team Fortress Classic, Return to Castle Wolfenstein, Unreal Tournament, EverQuest, Warcraft (Blizzard)

## 2.5 Interface


- Compliant with USB v1.1, full speed (12Mbps)
- One RJ45 ports compatible with IEEE 802.3/802.3u, 10/100Mbps auto selection
- One RJ11 port for ADSL connection
- One reset button for restoration of factory default setting

### 3. Hardware Indicators and Connectors

#### 3.1 Front Panel Indicators and Description

Front panel of ADSL router has LED indicators to display router's operating status.


##### Single-Port ADSL Router

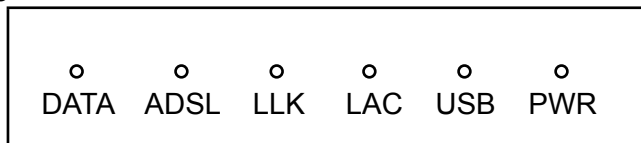

##### Descriptions of LED status

DATA	When router is transferring data between Internet and router, this LED will be flashing.
ADSL	When connection with Internet (ADSL Connected) is established, this LED will light up. When this LED is flashing: NO ADSL physical connection
LLK	When connection 10/100MB with end user is established, this LED will light up. When router is transferring data between router and end user, this LED will be flashing.
LAC	When 100MB connection to end-user is established, this LED will light up.
USB	When an active USB cable is connected with router, this LED will light up.
PWR	When an active power adapter is connected with router, this LED will light up.


##### Single-Port ADSL Router

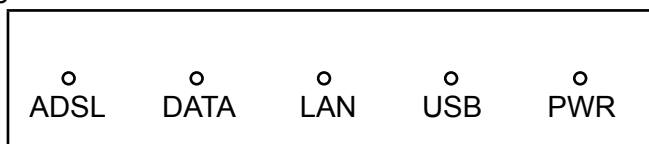

##### Descriptions of LED status

ADSL	When connection with Internet (ADSL Connected) is established, this LED will light up. When this LED is flashing: NO ADSL physical connection
DATA	When router is transferring data between Internet and router, this LED will be flashing.
LAN	When connection 10/100MB with end user is established, this LED will light up. When router is transferring data between router and end user, this LED will be flashing.
USB	When an active USB cable is connected with router, this LED will light up.
PWR	When an active power adapter is connected with router, this LED will light up.

##### Four-Port ADSL Router

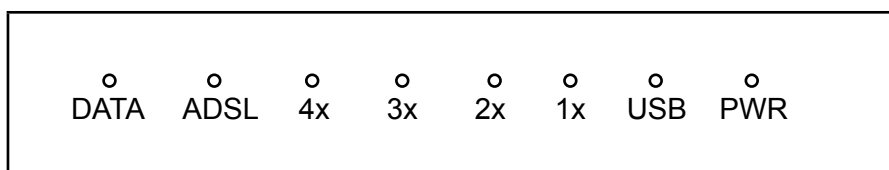


##### Descriptions of LED status

DATA	When router is transferring data between Internet and router, this LED will be flashing.
ADSL	When connection with Internet (ADSL Connected) is established, this LED will light up. When this LED is flashing: NO ADSL physical connection
4x	When port 4 connection with end user is established, this LED will light up.
3x	When port 3 connection with end user is established, this LED will light up.
2x	When port 2 connection with end user is established, this LED will light up.
1x	When port 1 connection with end user is established, this LED will light up.
USB	When an active USB cable is connected with router, this LED will light up.
PWR	When an active power adapter is connected with router, this LED will light up.



## Four-Port ADSL Router

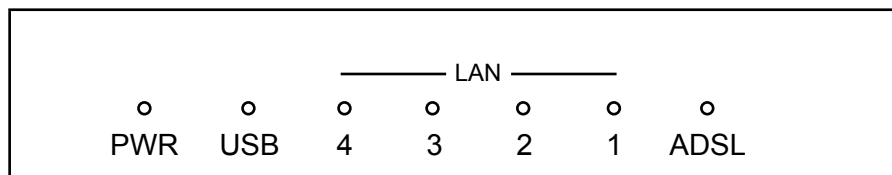


### Descriptions of LED status

PWR	When an active power adapter is connected with router, this LED will light up.
USB	When an active USB cable is connected with router, this LED will light up.
4	When port 4 connection with end user is established, this LED will light up.
3	When port 3 connection with end user is established, this LED will light up.
2	When port 2 connection with end user is established, this LED will light up.
1	When port 1 connection with end user is established, this LED will light up.
ADSL	When connection with Internet (ADSL Connected) is established, this LED will light up. When this LED is flashing: NO ADSL physical connection

## 3.2 Back Panel


### Single-Port ADSL Router

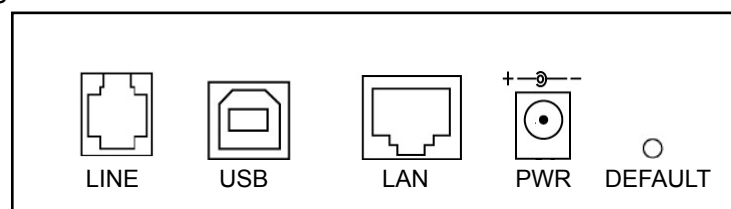

### Descriptions of All Connectors

LINE	Connect with telephone line.
USB	Connect with USB cable.
LAN	Connect with Ethernet Cable to Switch Hub or PC
PWR	Connect with power adapter
DEFAULT	Reset button.

### Four-Port ADSL Router

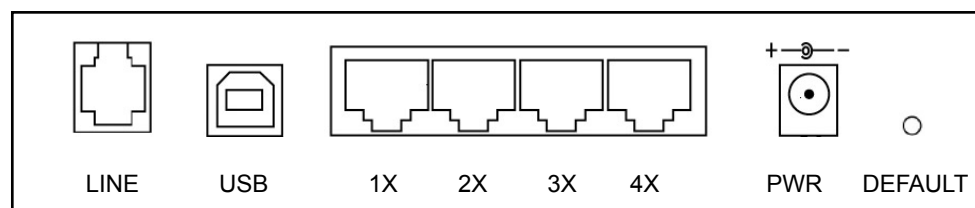

### Descriptions of All Connectors

LINE	Connect with telephone line.
USB	Connect with USB cable.
1x	Connect with Ethernet Cable to Switch Hub.
2x	Connect with Ethernet Cable to Switch Hub.
3x	Connect with Ethernet Cable to Switch Hub.
4x	Connect with Ethernet Cable to Switch Hub.
PWR	Connect with power adapter.
DEFAULT	Reset button.

## 3.3 Connect Related Devices

### 1) Connect Router to LINE

Plug the provided RJ-11 cable into LINE port on the back panel of the router and insert the other end into splitter or wall phone jack.


2) Connect Router to LAN

Plug RJ-45 Ethernet Cable into LAN port on the back panel of the router and insert the other end of the Ethernet Cable on your PC's Ethernet port or switch / hub.

3) Connect Router to Power Adapter

Plug power adapter to PWR port on the back panel of the router and the other end to a power outlet.

The diagram below illustrates a connection example,

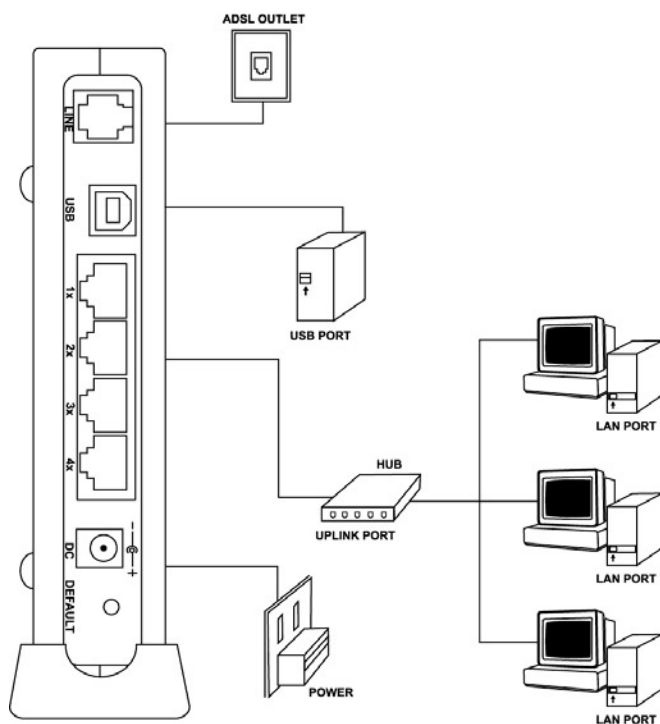

**Warning! Only use the power adapter provided in the package, otherwise it may cause hardware damage.**

## 4. Connecting ADSL Router via Ethernet and USB

You can connect ADSL router with PC through either Ethernet cable or USB cable. After connection is established, you can configure the host PC to be a DHCP client. You have to repeat the same steps for every host PC on your network if you use DHCP function on your router.

### 4.1 Setup ADSL router via Ethernet Cable

If there is an available Networking LAN card present on your PC, you just simply connect ADSL router and PC through the Ethernet cable. Once you establish Internet connection, you could browse the Web through the Ethernet cable.

### 4.2 Setup ADSL router via USB Cable

You can connect ADSL router with PC via USB cable when there is no Networking LAN Card present on your PC. USB cable acts as another LAN connection in this scenario. Once you establish Internet connection, you could browse the Web through the USB cable.

#### USB Device Driver Installation

Step1: Connect ADSL Router and PC with USB cable.

Step2: Once “**Detect New USB Device**” window pops out, click “**cancel**”:


**For windows 98SE and ME:**



**For Windows 2000 and XP:**



Step 3: Insert “**Easy Setup Software Kit**” CD then click **Install USB Driver** to install device driver. This USB installation utility automatically loads device driver.

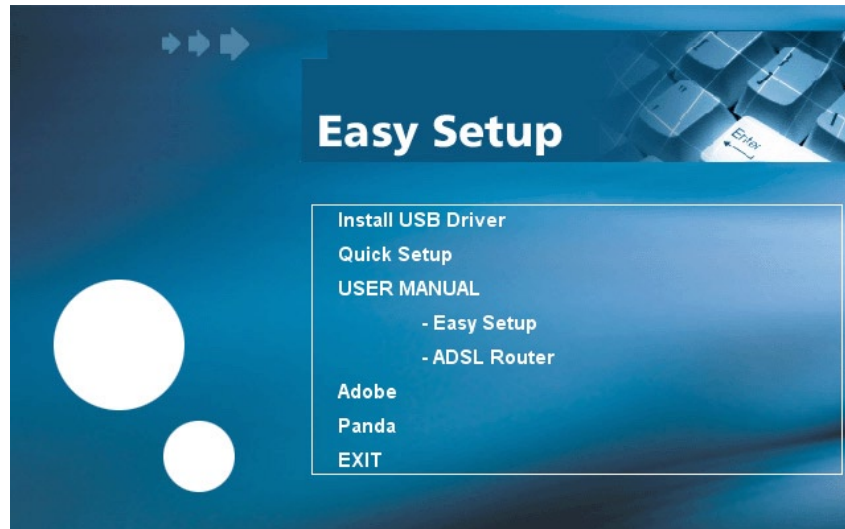

After USB device driver installation completes, the window below will appear, then press “**OK**” to reboot your computer.

**For windows 98SE and ME:**




**For Windows 2000 and XP:**



After computer reboot, follow the procedures below to check if ADSL router is properly installed.


**For Windows XP:**

Go through “**Start → Control Panel → System → Hardware → Device Manager**” to check if USB device is installed properly:

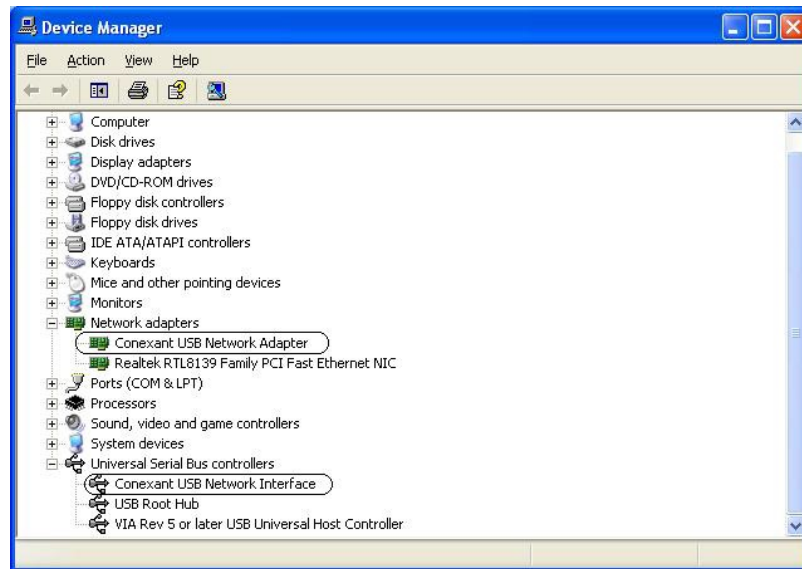


### For Windows 2000:

Go through “**Start** → **Settings** → **Control Panel** → **System** → **Hardware** → **Device Manager**” to check if USB device is installed properly:

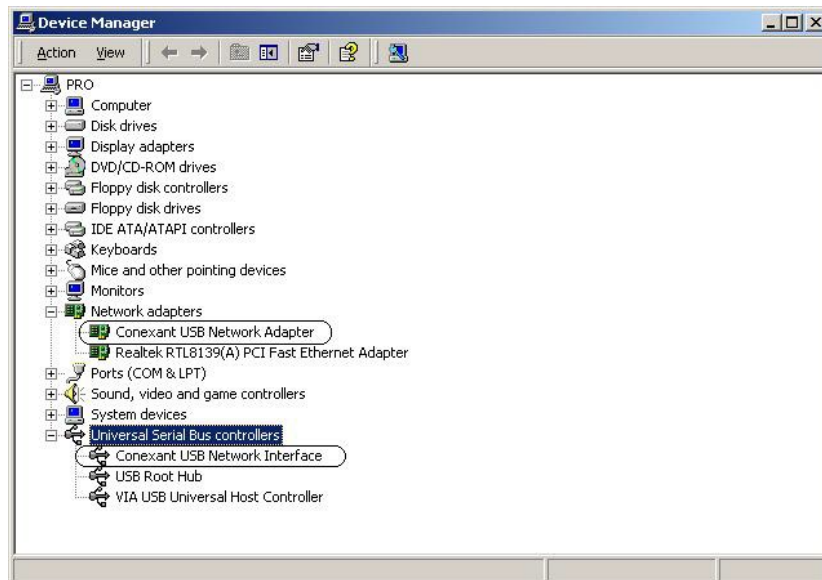

### For Windows 98SE and ME:

After OS boots up, go through “**Start** → **Settings** → **Control Panel** → **System** → **Device Manger**” to check if USB device is installed properly:

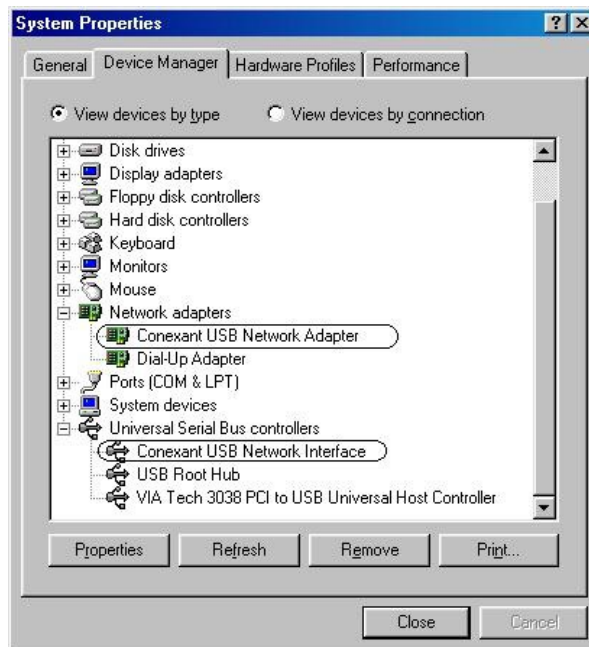

### 4.3 Configure TCP/IP


#### **For Windows 98SE and ME**

Step 1: Click **Start** then **Settings** and choose **Control Panel**

Step 2: Double click **Network** icon.


Step 3: Select **Configuration** tab, then choose **TCP/IP** from the list of installed network Components and click **Properties** button.

Step4: You can setup the following configurations in two methods:

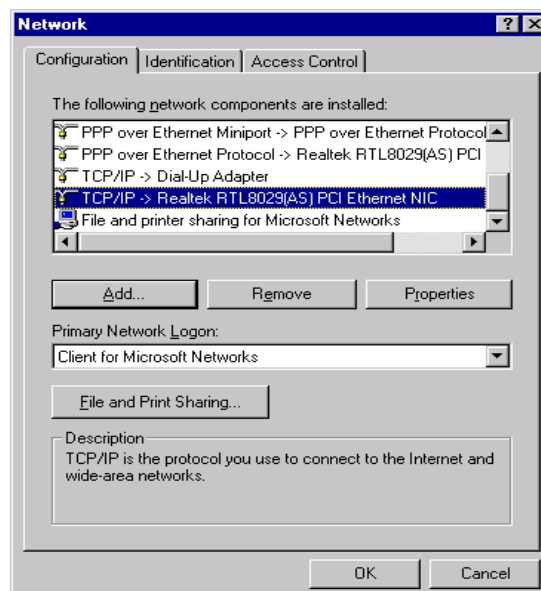

## Option1: Get an IP from Router Automatically


- 1) Choose **Obtain an IP address automatically** option in the next window

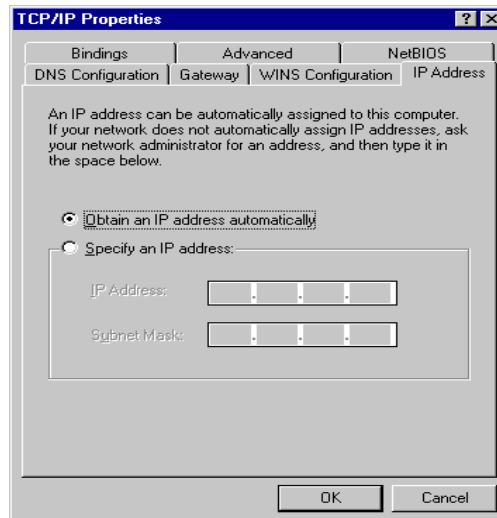

- 2) Select **Gateway** tab and click "OK"




- 3) Select **DNS Configuration** tab and select **Disable DNS** then click OK

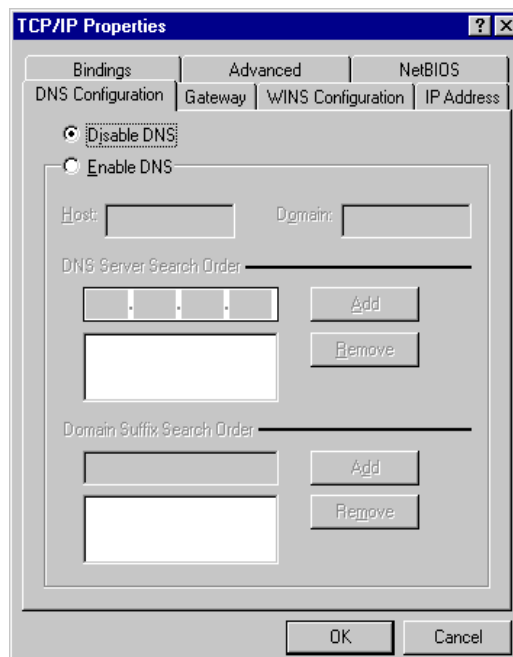


Option2: Configure IP Manually

- 1) Select **Specify an IP address**, set default IP address for the Router is **10.0.0.2**, so use **10.0.0.X** (X is a number between 4 to 15) for **IP Address** field and **255.0.0.0** for **Subnet Mask** field.

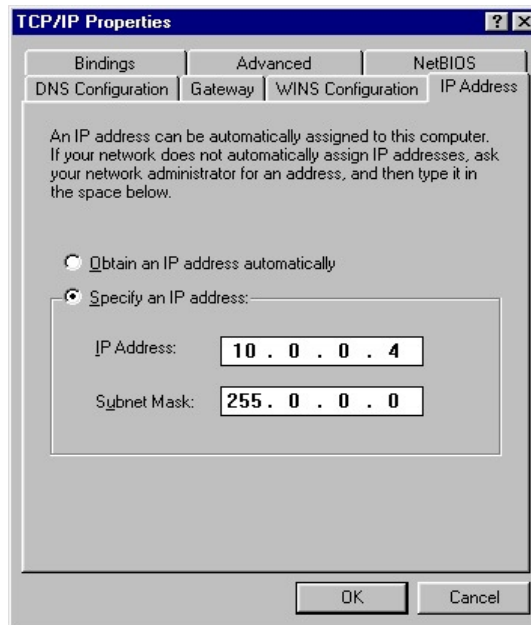


- 2) Select **Gateway** tab and add default Router IP Address (**10.0.0.2**) in the **New gateway** field and click **Add**.

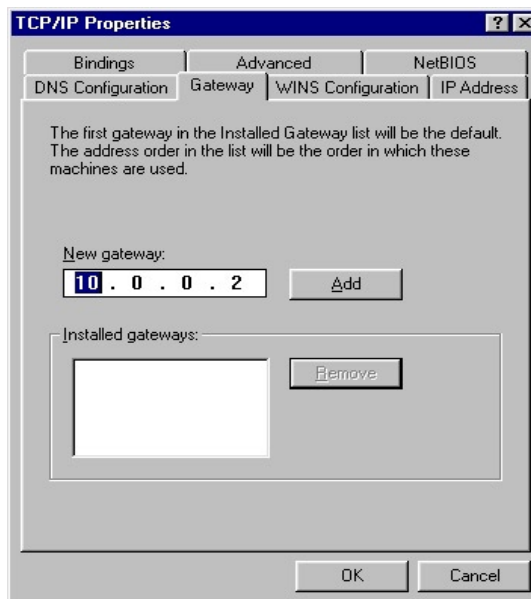

- 3) Under **DNS Configuration** tab, select **Enable DNS** and add DNS values which provides by your local ISP in **DNS Server Search Order** field then click **Add**.



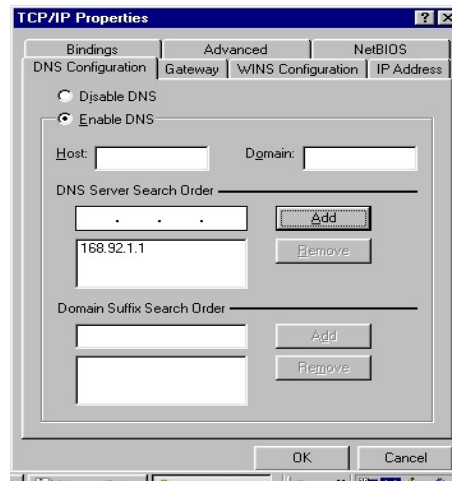


## For Windows 2000


Step 1: Right click **My Network Places** and select **Properties** in the main window screen:



Step 2: Right click **Local Area Connection** (your local network hooked up with ADSL router) and select **Properties**:

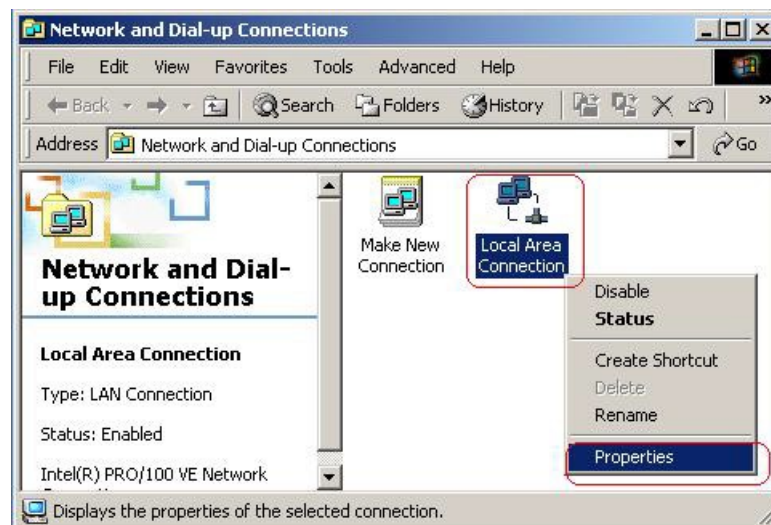


Step 3: Select **Internet Protocol (TCP/IP)** then click **Properties**:

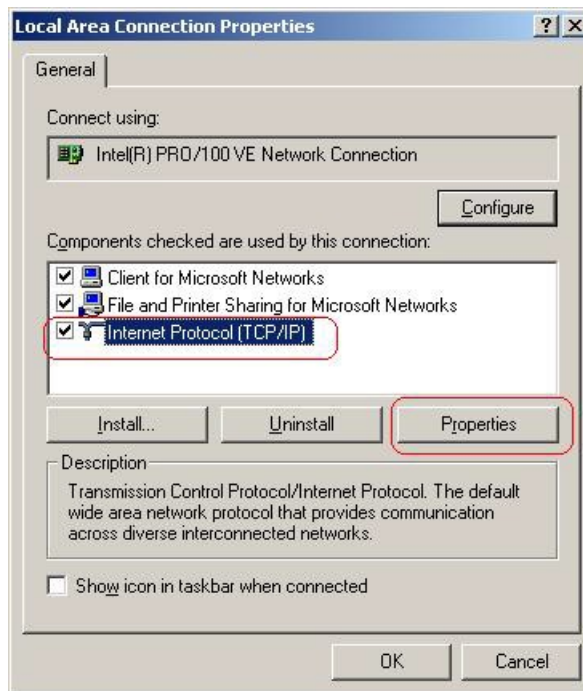

#### **Configure IP Automatically:**

Step 4: Select **Obtain an IP address automatically** and **Obtain DNS server address automatically** then click **OK** to complete IP configuring process.:

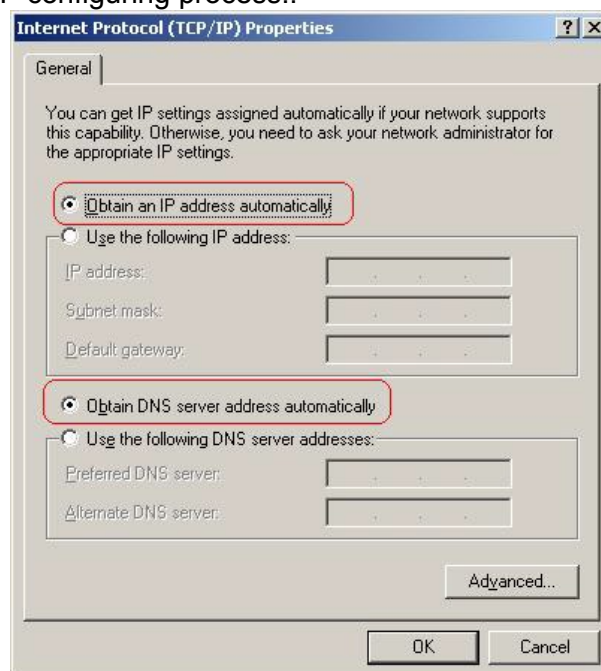

#### **Configure IP Manually:**

Step 4: Select **Use the following IP address** and **Use the following DNS server addresses**.


**IP address:** Fill in IP address 10.0.0.x (x is a number between 4 to 15).

**Subnet mask:** Default value is 255.0.0.0.

**Default gateway:** Default value is 10.0.0.2.

**Preferred DNS server:** Fill in preferred DNS server IP address.

**Alternate DNS server:** Fill in alternate DNS server IP address.

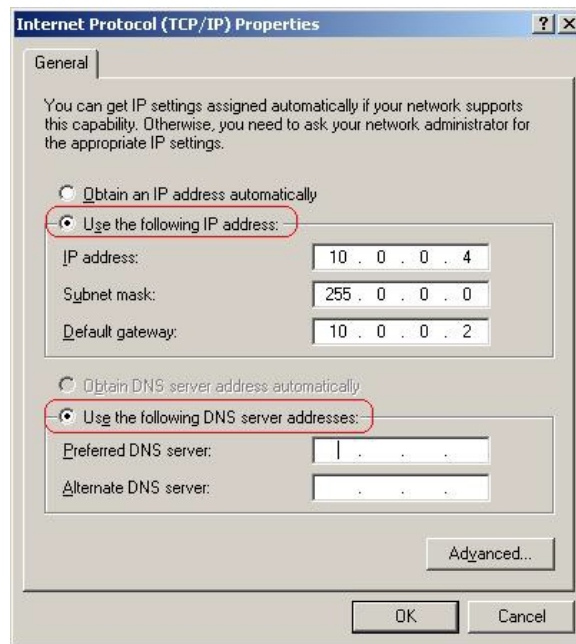


## For Windows XP

Step 1: Click **Start** then select **Control Panel** in the main window screen:




Step 2: Double click **Network Connections** icon:

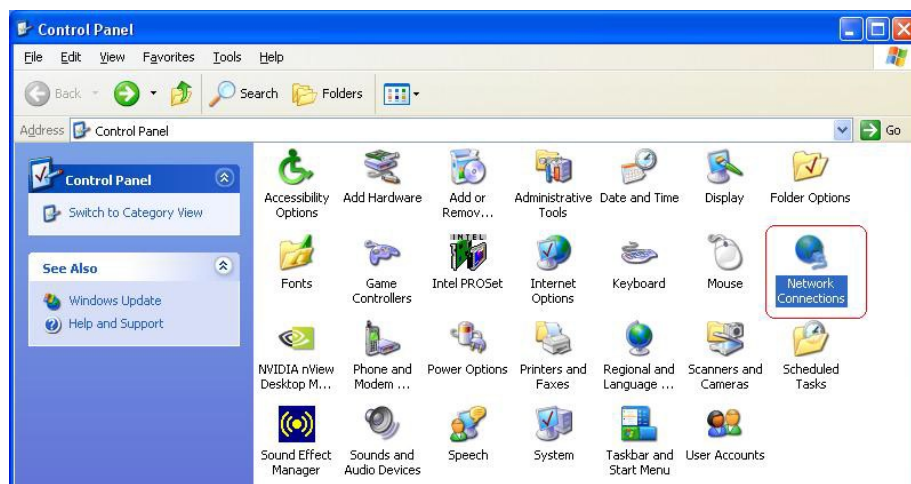


Step 3: Right click **Local Area Connection** (local network your ADSL hooked up with) then select

**Properties:**

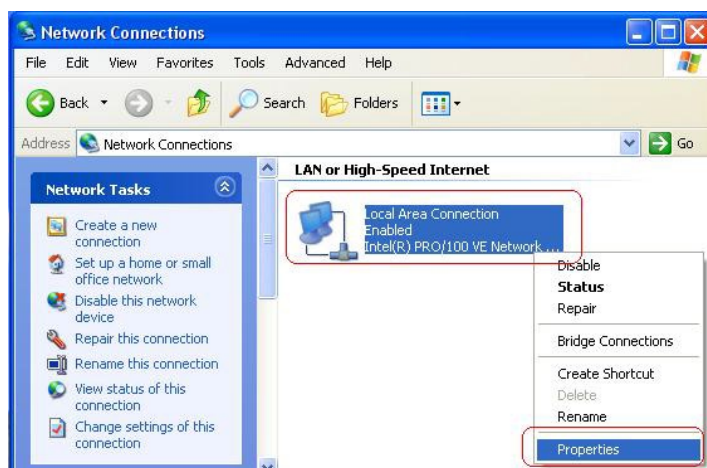


Step 4: Select **Internet Protocol (TCP/IP)** then click **Properties:**

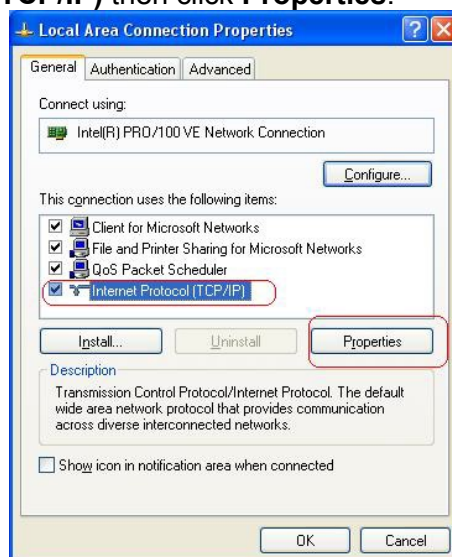


**Configure IP address Automatically:**

Step 5: Select **Obtain an IP address automatically** and **Obtain DNS server address automatically**:

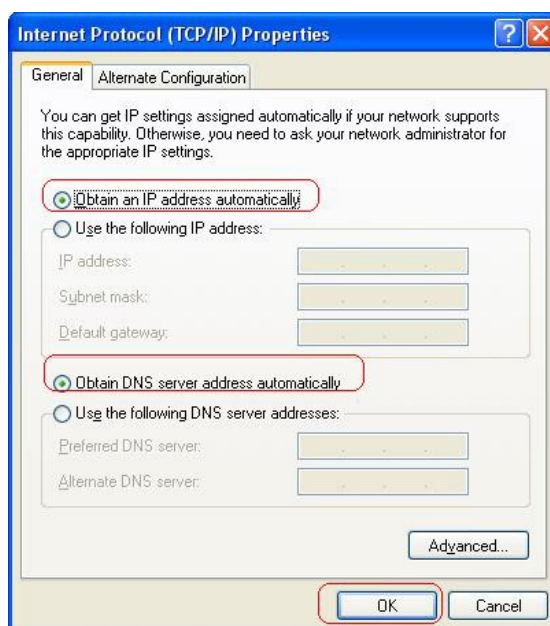

## Configure IP Address Manually:

Step 5: Select **Use the following IP address** and **Use the following DNS server addresses**.

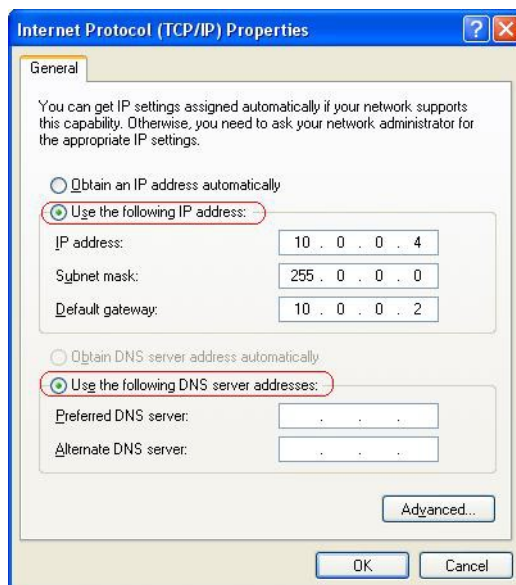

**IP address:** Fill in IP address 10.0.0.x (x is a number between 4 to 15).

**Subnet mask:** Default value is 255.0.0.0.

**Default gateway:** Default value is 10.0.0.2.

**Preferred DNS server:** Fill in preferred DNS server IP address.

**Alternate DNS server:** Fill in alternate DNS server IP address.

You can use ping command under DOS prompt to check if you have setup TCP/IP protocol correctly and if your computer has successfully connected to this router.

1) Type **ping 10.0.0.2** under DOS prompt and the following messages will appear:

Pinging 10.0.0.2 with 32 bytes of data:

Reply from 10.0.0.2 : bytes=32 times<2ms TTL=64

Reply from 10.0.0.2 : bytes=32 times<1ms TTL=64

Reply from 10.0.0.2 : bytes=32 times<10ms TTL=64

If the communication link between your computer and router is not setup correctly, after you type **ping 10.0.0.2** under DOS prompt following messages will appear:

Pinging 10.0.0.2 with 32 bytes of data:

Request timed out.

Request timed out.

Request timed out.

This failure might be caused by cable issue or something wrong in configuration procedure.

## 5. Configure ADSL Router via HTML Interface

ADSL Router supports a web-based (HTML) GUI to allow users to configure Router setting via Web browser.

### 5.1 Login

- 1) Launch the Web browser.
- 2) Enter the default IP address <http://10.0.0.2> .
- 3) Entry of the username and password will be displayed. Enter the default **login User Name** and **Password**.
  - The default login **User Name** of the administrator is **admin**, and the **default admin login password** is **conexant**.
  - The default login **User Name** for the non-administrator is **user**, and the **default user login password** is **password**.






## 5.2 Status Page

The links under the Status column are associated to the pages that represent the status of system and interfaces.

### 5.2.1 Home page

Home page shows firmware version and WAN and LAN interface status.

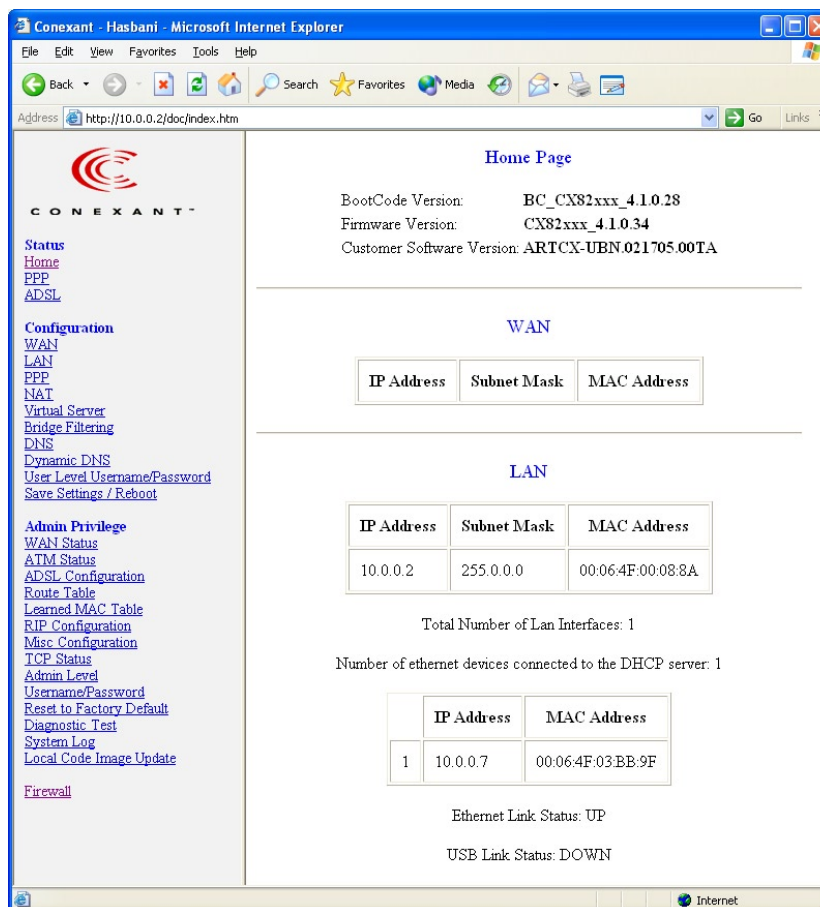

**Firmware Version:** This field displays the Conexant firmware version number.

**Customer Software Version:** This field displays the customer's own firmware version number.

**WAN:** These fields display the IP address, Subnet Mask and MAC address for the WAN (ADSL) interface.


**LAN:** These fields display the IP address, Subnet Mask and MAC address for the LAN interface.

**Total Number of LAN Interface:** This field displays the total number of available interface for the LAN interface.

**Number of Ethernet Devices Connected to the DHCP Server:** These fields display the DHCP client table with the assigned IP addresses and MAC addresses.

## 5.2.2 PPP

The **PPP Status** page shows the status of **PPP** for each **PPP** interface.

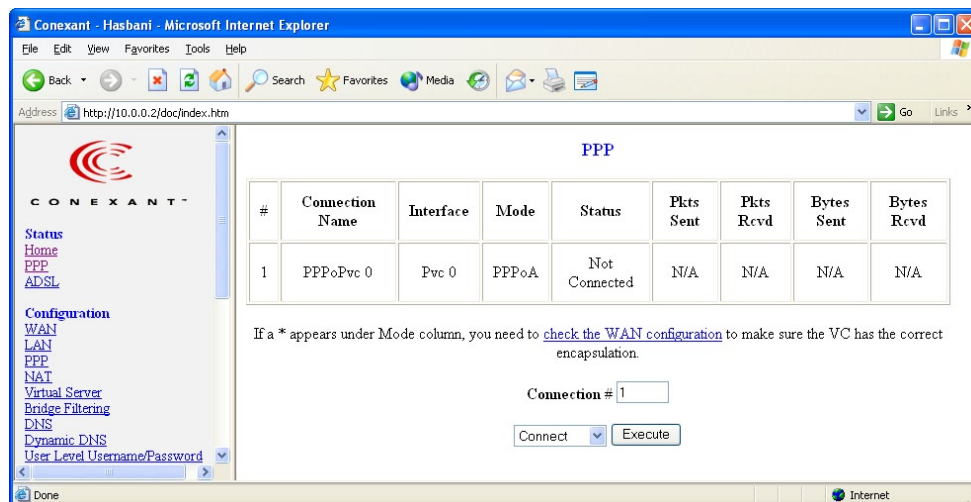


**PPP:** These fields display the Connection Name (user defined), Interface (PVC), Mode (PPPoE or PPPoA), Status (PPP connection is Connected or Not Connected), Packets Sent, Packets Received, Bytes Sent and Byte Received.

**Connect and Disconnect:** This Field allows the user to manually connect/disconnect the PPP connection for each PPP interface. In another word, each PPP session can be connected and disconnected individually.

## 5.2.3 ADSL Status Page

The **ADSL Status** page shows the ADSL physical layer status.

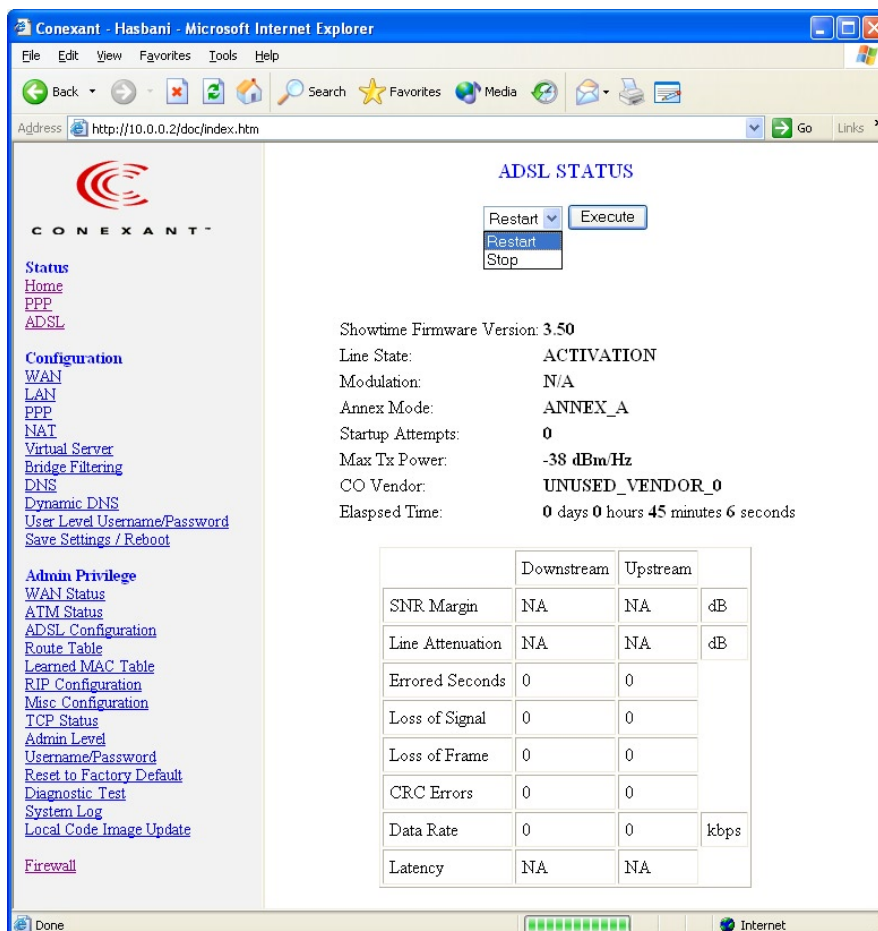



**Restart/Stop Execute:** This option allows user to stop or restart the ADSL connection.

**Showtime Firmware Version:** This field displays the Conexant ADSL data pump firmware version number.

**ADSL Line Status:** This field displays the ADSL connection process and status.

**ADSL Modulation:** This field displays the ADSL modulation status for G.dmt or T1.413.

**ADSL Annex Mode:** This field displays the ADSL annex modes for Annex A or Annex B.

**ADSL Startup Attempts:** This field displays the ADSL connection attempts after loss of showtime.

**ADSL Max Tx Power:** This field displays the transmit output power level of the CPE.

**ADSL CO Vendor:** This field displays the Central Office DSLAM vendor name, if available.

**Elapsed Time:** This field displays the time of the router has been in operation.

**SNR Margin:** Amount of increased noise that can be tolerated while maintaining the designed BER (bit error rate). The SNR Margin is set by Central Office DSLAM. If the SNR Margin is increased, bit error rate performance will improve, but the data rate will decrease. Conversely, if the SNR Margin is decreased, bit error rate performance will decrease, but the data rate will increase.

**Line Attenuation:** Attenuation is the decrease in magnitude of the ADSL line signal between the transmitter (Central Office DSLAM) and the receiver (Client ADSL Router), measured in dB. It is measured by calculating the difference in dB between the signal power level received at the Client ADSL router and the reference signal power level transmitted from the Central Office DSLAM.

**Errored Seconds:** The error during Showtime, whenever, a given sec contains CRC error, that second will be declared error second.

**Loss of Signal:** This field displays the count of event of ADSL signal loss.

**Loss of Frame:** This field displays the count of event of ADSL frame loss.

**CRC Errors:** This field displays the number of transmit data frames containing CRC errors.

**Data Rate:** This field displays the ADSL data rate.


**Latency:** This field displays the latency modes for fast or interleave.

### 5.3 Configuration Pages

The links under **Configuration** column are associated to the pages that represent the configurations of system and interfaces. When the configurations are changed, please go to the **Save Settings/Reboot** page to save the new settings and reboot the ADSL router.

#### 5.3.1 WAN Configuration

The **WAN** configuration page allows the user to select Pvc adapter then set the configuration for the WAN/ADSL ports which includes ATM, DHCP Client, MAC Spoofing, Static IP Settings and PPP.

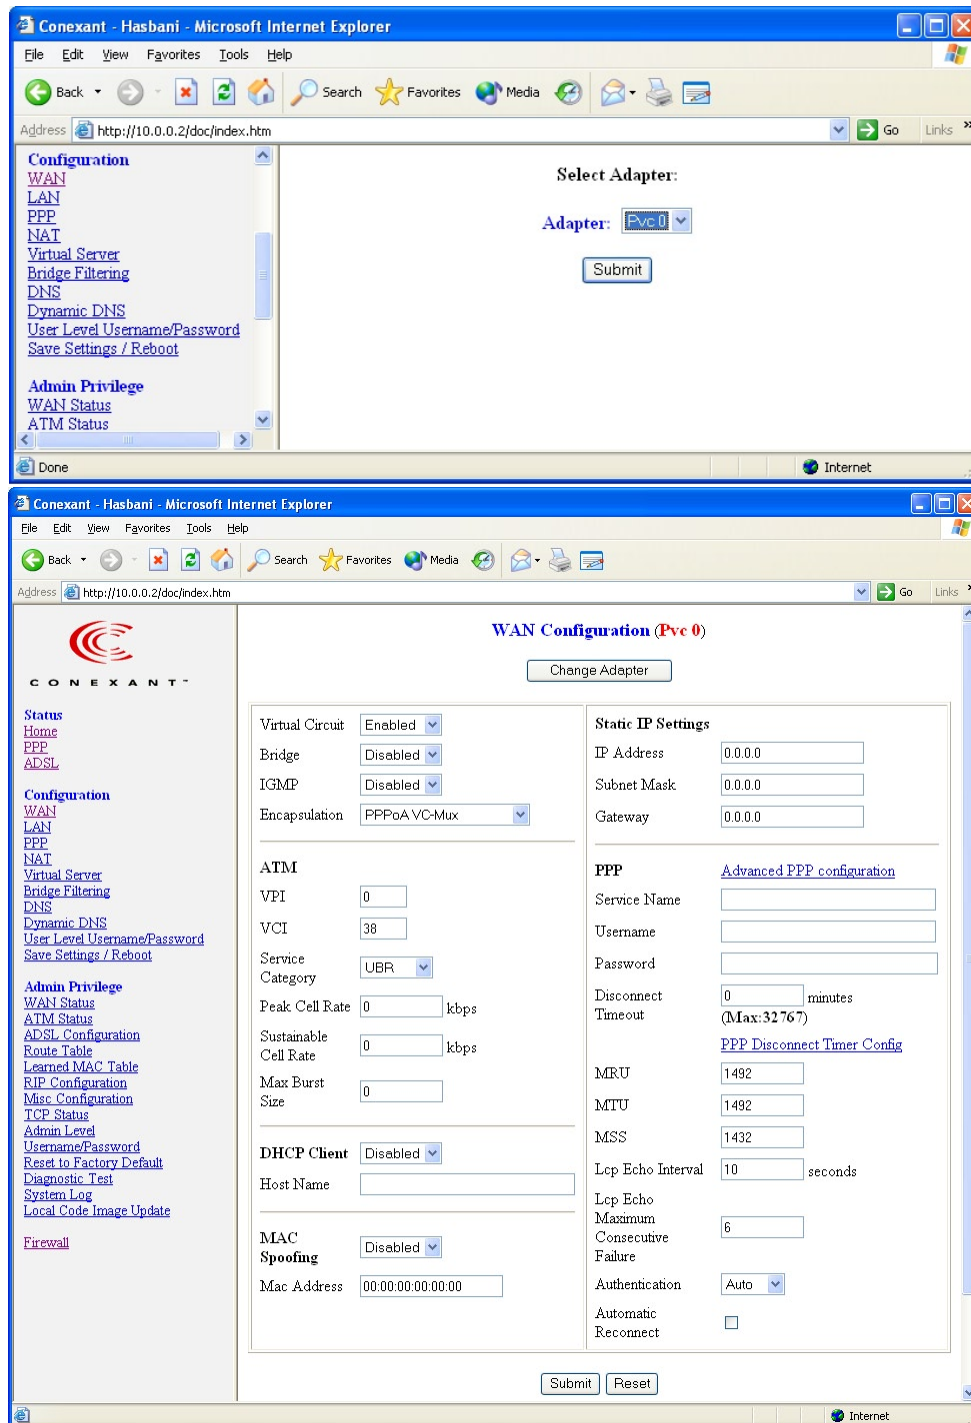

**ATM:** ATM configuration includes setting up VPI, VCI, Peak Cell Rate, Sustainable Cell Rate, Max Burst Size and Service Category of the connection.

**DHCP Client:** When enable this feature, you have to fill in DHCP Host name.

**MAC Spoofing:** The **MAC Spoofing** is developed to solve the scenario when the ISP only recognizes one MAC address. Enter the ISP recognized MAC address here.

**Static IP Settings:** You are able to fill in ADSL router IP Address, Subnet Mask and Gateway.

**PPP:** You can fill in basic and advanced PPP configurations that include user login information and router disconnection criteria.

WAN Configuration	Bridge Mode	Router Mode (PPPoA/ PPPoE)	Router Mode (Dynamic IP)	Router Mode (Static IP)
IP address	N/A	Automatically assigned by ISP	Automatically assigned by ISP	Provided by ISP
Subnet Mask	N/A	Automatically assigned by ISP	Automatically assigned by ISP	Provided by ISP

Gateway	N/A	Automatically assigned by ISP	Automatically assigned by ISP	Provided by ISP
Encapsulation	1483 Bridged IP LLC, 1483 Bridged IP VC-Mux	PPPoA LLC/VC-Mux PPPoE LLC/VC-Mux	1483 Bridged/Routed IP LLC, 1483 Bridged/Routed VC-Mux Classical IP over ATM	1483 Bridged/Routed IP LLC, 1483 Bridged/Routed VC-Mux, Classical IP over ATM
Bridge	Enabled	Disabled	Disabled	Disabled
PPP Service	N/A	Provided by ISP	N/A	N/A
PPP User name	N/A	Provided by ISP	N/A	N/A
DHCP Client enable	Unchecked	Unchecked	Checked	Unchecked

### 5.3.2 LAN Configuration

The **LAN** configuration page allows the user to set the configuration for the LAN connection.

**LAN IP Address & Subnet Mask:** The default is 10.0.0.2 and 255.0.0.0. User can change it to other private IP address, such as 192.168.1.2, and 255.255.255.0.

**DHCP Server**

**System Allocated:** The DHCP address pool is based on LAN port IP address plus 12 IP addresses. For example, the LAN IP address is 10.0.0.2; the DHCP address pool is at the range 10.0.0.3 to 10.0.0.14.

**User Defined:** The DHCP address pool is at the range of **USER Defined Start Address** and **User Defined End Address**. The maximum pool size can be 253 IP addresses: 255 total IP addresses – 1 broadcast address – 1 LAN port IP address.

**DHCP Gate Selection:** The default setting for the DHCP Gateway Selection is “**Automatic**”. The user

can select the **“User Defined”** to specify “User Defined Gateway Address”. The DHCP server will issue the “User Defined Gateway Address” to the LAN DHCP clients.

**Lease time:** The Lease time is the amount of time of a network user will be allowed to connect with DHCP server. If all fields are 0, the allocated IP addresses will be effective forever.


**DHCP Relay:** DHCP Relay feature allows you to use DHCP on a subnet that does not have DHCP server by installing DHCP Relay Agent.

**DHCP Relay Target ID:** The subnet that needs to install DHCP Relay Agent.

**User mode:** Under the **Single User** mode, the DHCP server only allocates one IP address to local PC. Under the **Multiple User** mode, the DHCP server allocates the IP addresses specified by the DHCP address pool.

### **Ethernet Mode Setting**

You are allowed to select Ethernet connection mode in this page. You can choose from AutoSense, 100 Full, 100 Half, 10 Full and 10 Half Ethernet modes.

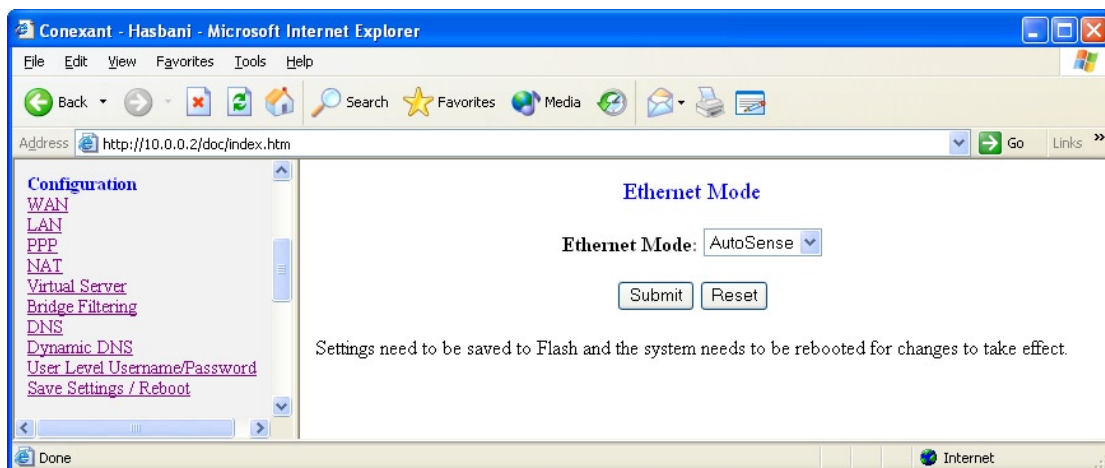

### **5.3.3 PPP Configuration**

The PPP Configuration page allows the user to configure multiple PPP sessions for each PVC. It can support up to total of 16 PPP sessions, and each PVC can support up to 8 PPP sessions. The multiple PPP sessions may be configured with any combination over 10 PVCs.

**PPP Configuration**

Session Name:

PVC:

Service Name (PPPvE only):

Account to Use:

Disconnect Timeout:  minutes (Max:32767)

[PPP Disconnect Timer Config](#)

MRU:

MTU:

MSS:

LCP Echo Interval:

Lcp Echo Maximum Consecutive Failure:

Authentication:

☐ Automatic Reconnect

#	Session Name	Adapter	Mode	Service Name	Account to Use	Disconnect Timeout (min)	MRU	MTU	MSS	LCP Echo Interval	LCP Echo Consec Failure Max	Authentication Mode	Auto Reconnect
1	PPPvPvc 0	Pvc 0	PPPvA	N/A	simple PPP account Pvc 0	0	1492	1492	1432	10	6	Auto	Disabled

The number of PPP configurations are 1

[PPP Account Configuration](#)

**Session Name:** This field allows the user to enter his/her own session Name to distinguish different session for different PPP accounts and different PVCs.

**PVC:** This field allows the user to choose the specific PVC for PPP session.

**Service Name:** The service name of PPP is required by some ISPs. If the ISP does not provide the Service Name, please leave it blank.

**Account to Use:** Choose which PVC to connect.

**Disconnect Timeout:** The Disconnect Timeout allows the user to set the specific period of time to disconnect from the ISP. The default is 0, which means never disconnect from the ISP.

**MRU:** Maximum Receive Unit indicates the peer of PPP connection the maximum size of the PPP information field this device can be received. The default value is 1492 and is used in the beginning of the PPP negotiation. In the normal negotiation, the peer will accept this MRU and will not send packet with information field larger than this value.

**MTU:** Maximum Transmission Unit indicates the network, stack of any packet is larger than this value will be fragmented before the transmission. During the PPP negotiation, the peer of the PPP connection will indicates its MRU and will be accepted. The actual MTU of the PPP connection will indicates its MRU and will be accepted. The actual MTU of the PPP connection will be set to the smaller one of MTU and the peer's MRU. The default is value 1492.

**MSS:** Maximum Segment Size is the largest size of data that TCP will send in a single IP packet. When a connection is established between a LAN client and host in the WAN side, the LAN client and the WAN host will indicate their MSS during the TCP connection handshake. The default value is 1432.

**LCP Echo Interval:** Time interval that determines when a link is functioning properly and when it is



defunct, detect a looped-back link and other common mis-configuration errors.

**LCP Echo Maximum Consecutive Failure:** The maximum number of LCP Echo failures router receives before terminate the link.

**Authentication:** When **AUTO** option is chosen, the PAP mode will run first then CHAP.

**Automatic Reconnect:** When it is checked, it will maintain the PPP connection all the time. If the ISP shut down the PPP connection, it will automatically reconnect PPP session.

### PPP Disconnect Timer Configuration

You can set PPP Disconnect Timer by selecting the criteria you desired.

The screenshot shows a web browser window titled "Conexant - Hasbani - Microsoft Internet Explorer". The address bar shows "http://10.0.0.2/doc/index.htm". The page is titled "PPP Disconnect Timer Configuration". It contains the following sections:

- CONEXANT** logo and navigation links: Status, Home, PPP, ADSL, Configuration, WAN, LAN, PPP, NAT, Virtual Server, Bridge Filtering, DNS, Dynamic DNS, User Level, Username/Password, Save Settings / Reboot, Admin Privilege, WAN Status, ATM Status, ADSL Configuration, Route Table, Learned MAC Table, RIP Configuration, Misc Configuration, TCP Status, Admin Level, Username/Password, Reset to Factory Default, Diagnostic Test, System Log.
- PPP Disconnect Timer Configuration**: The settings on this page are used to determine the traffic that will:
  - 1) Reset the PPP disconnect timer counter
  - 2) Re-establish a PPP connection (only if "PPP Reconnect on WAN Access" is enabled)
- Enable/Disable Idle Timer Filter**:
  - ☐ All Traffic will reset Idle Timer (ignore filter below)
  - ☒ Only filtered traffic will reset Idle Timer (use filter below)

execute
- Apply Filter To:**
  - ☐ Inbound Traffic Only
  - ☒ Outbound Traffic Only
  - ☐ Inbound and Outbound Traffic

execute
- Filter Details:**


Protocol #	Port #	Action
0	0	Add

Submit Reset

### 5.3.4 NAT Configuration

The **NAT Configuration** page allows the user to set the configuration for the Network Address Translation. The default setting is **Dynamic NAPT**. It provides dynamic Network Address Translation capability between LAN and multiple WAN connections, and the LAN traffic is routed to appropriate WAN connections based on the destination configuration between multiple LAN clients and multiple WAN connections.

When the Dynamic NAPT is chosen, there is not need to configure the NAT Session and NAT Session Name Configuration.

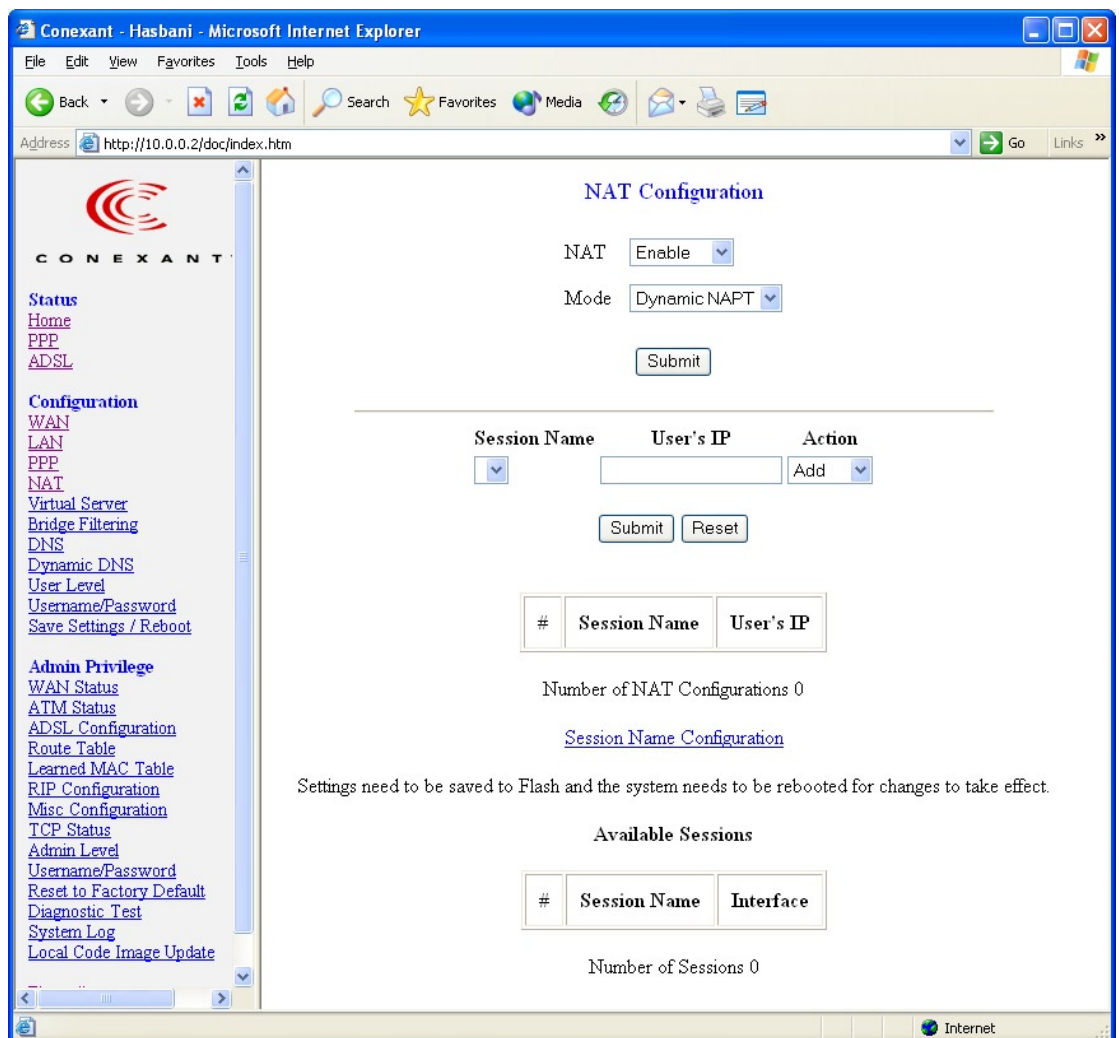

**Session Name:** This field allows the user to select the session from the configured NAT session Name Configuration.

**User's IP:** This field allows the user to assign the IP address to map the corresponding NAT/NAPT sessions.

**Session Name Status** will be displayed at the middle of this page to show the corresponding Session Name with its IP address.


**Number of NAT Configurations:** This field displays the total number of NAT Sessions is entered.

**Available Sessions Status** will be displayed at the end of this page to show all the Session Names with its WAN Interface.

**Number of Session:** This field displays the total number of NAT Sessions Name is entered.

The **NAT** option only maps single WAN IP address to the local PC IP address. It is peer-to-peer mapping. (1x1) For each WAN interface, only one local PC IP address can be associated with each WAN interface. Click the link **Session Name Configuration** to add the session name for WAN interface.

The **NAPT** option maps the single WAN IP addresses to many local PCs IP addresses. (1xN). It is the multiple-mapping mechanism. For each WAN Interface, more than one local PCs can be associated with one WAN Interface. Click the link **Session Name Configuration** to add the session name for WAN interface.

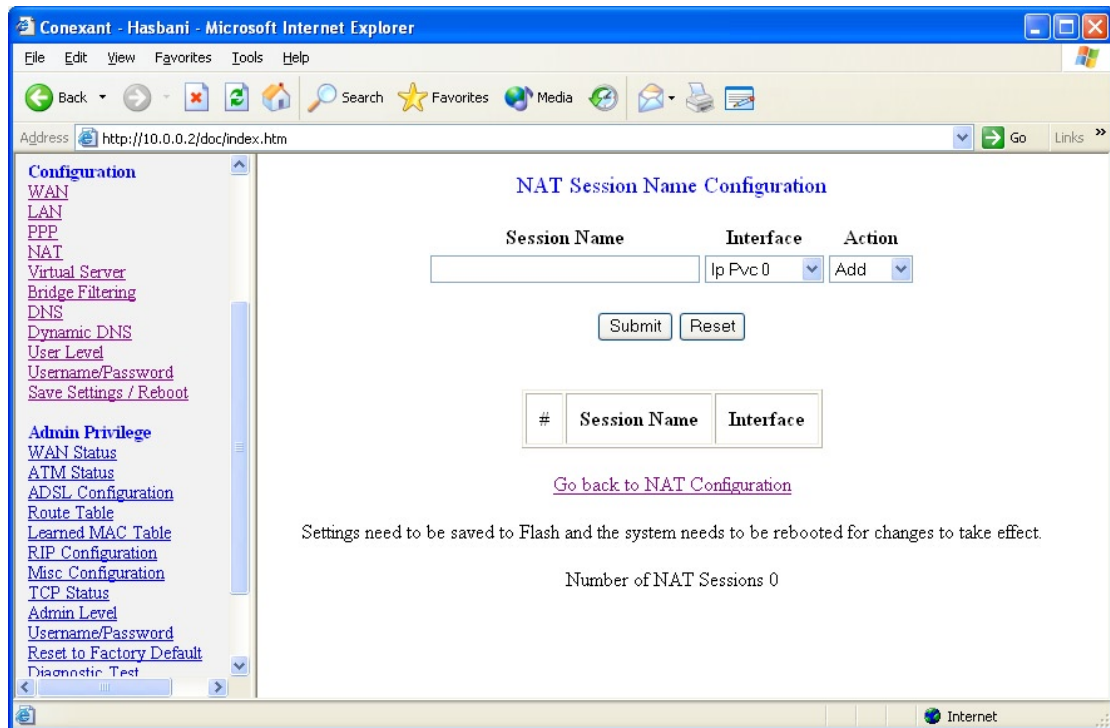

**Session Name:** This field allows the user to enter his/her own session Name to distinguish different NAT session for different interfaces among different PPP sessions and different PVCs.

**Interface:** This field allows the user to choose specific WAN Interface (PVC or PPP Session) for NAT Session.


Click the link **Go back to NAT Configuration** to the NAT configuration page. Select the **NAT** option. Select the Session Name and assign the PC IP address, and choose the **Add** action. Click the **Submit** button and go to the **Save Settings** to save this configuration.

**NAT allows only one entry (User IP) per session.** NAPT allows many entries (User IPs) per session.

### 5.3.5 Virtual Server Configuration

The Virtual Server Configuration page allows the user to set the configuration of Virtual Server. The Conexant firmware includes the Free BSD version firewall. All UDP/TCP ports are protected from intrusion. If any specific local PCs need to be mapped to the UDP/TCP port on WAN side, please input the mappings here.



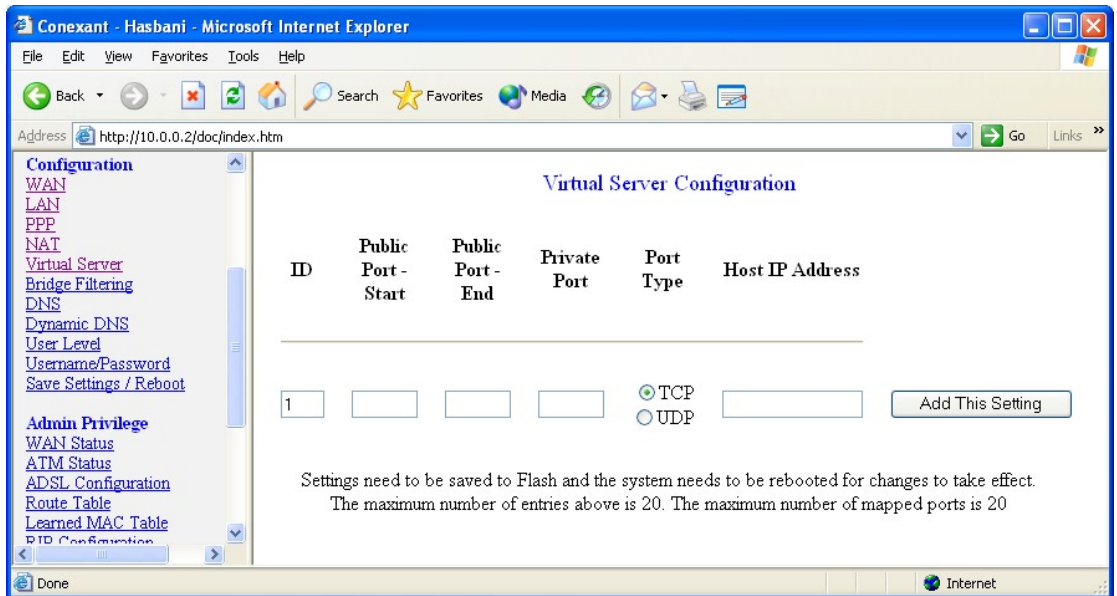

**Public Port Start:** This field allows the user to enter the start of port number for public network.

**Public Port End:** This field allows the user to enter the end of port number for public network.


**Private Port:** This field allows the user to enter the port number of the Private Network. In most cases, the private port number is same as public port number.

**Port Type:** User can choose port type between TCP and UDP.

**Host IP Address:** This field allows the user to enter the private network IP address for the particular sever.

### 5.3.6 Bridge Filtering

The **Bridge Filtering** configuration page allows the user to set the configuration of IP filtering. User can block data from the exact MAC address or forward data to the exact MAC address.

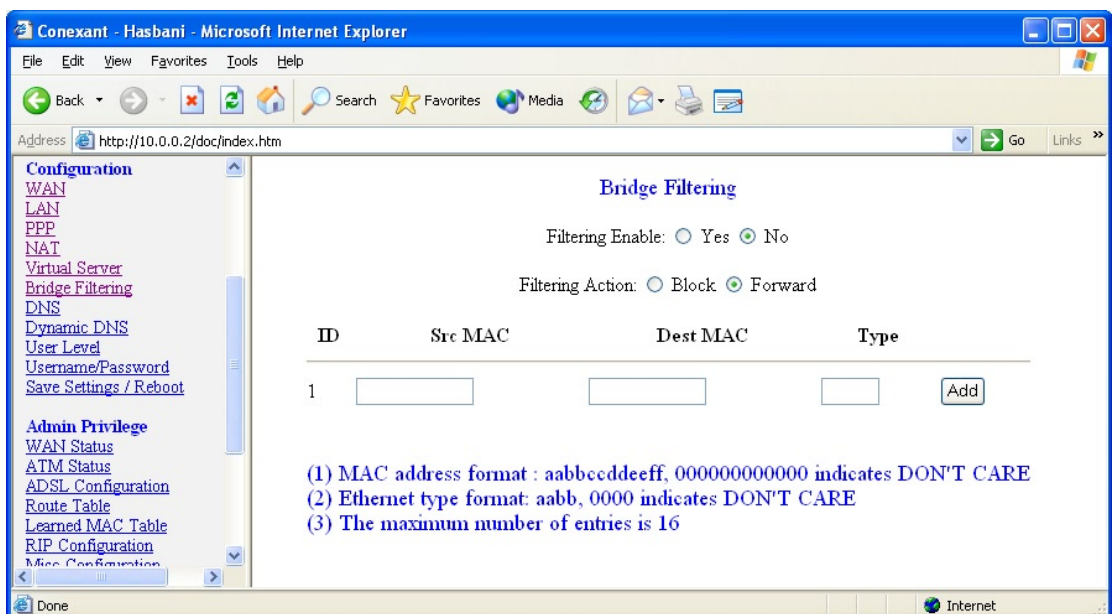

**Source MAC:** When the bridge filtering is enabled, enter the **Source MAC** address, select **Block** and click **Add**. Then all incoming WAN and LAN Ethernet packets matched with this source MAC address will be filtered out. If the **Forward** is selected, then the packets will be forwarded to the destination PC.

**Destination MAC:** When the bridge filtering is enabled, enter the **Destination MAC address**, select **Block** and click **Add**. Then all incoming WAN and LAN Ethernet packets matched with this destination MAC address will be filtered out. If the **Forward** is selected, then the packets will be forwarded to the destination PC.

**Type:** Enter the hexadecimal number for the Ethernet type field in Ethernet\_II packets. For example, 0800 is for IP protocol.

### 5.3.7 DNS Configuration

This **DNS Configuration** page allows the user to set the configuration of DNS proxy. The Conexant firmware supports the DNS proxy function. For the DHCP requests from local PCs, the DHCP server will set the LAN port first. The DNS proxy on the ADSL router recorded the available DNS servers, and forward DNS query messages to one of DNS server.

**DNS Configuration**

DNS Proxy: Enabled  
Auto Discovery: ☒  
User Configuration: ☐  
DNS Server:  Add

DNS Server: Disabled  
Url Name:   
Host Ip:  Add

Apply Reset

**DNS Proxy Setting**

#	DNS Server IP
---	---------------

**DNS Server Setting**

#	Url Name (Host.Domain)	Host IP
---	------------------------	---------

Settings take effect immediately, no system reboot is required

[Save Configuration](#)

**DNS Proxy:** User can enable or disable DNS Proxy feature. For the DHCP requests from local PCs, the DHCP server will set the user-configured preferred DNS server or alternate DNS server whichever is available as the DNS server. Then all DNS query messages will be directly sent to the DNS servers.

**Auto Discovered DNS Servers Only:** The DNS proxy will store the DNS server IP addresses obtained from DHCP client or PPP into the table. And all DNS query messages will be sent to one of the dynamically obtained DNS servers.

**User Configured DNS Servers Only:** The DNS proxy will use the user-configured DNS server and

alternate DNS server. And all DNS query message will be sent to one of DNS servers. Enter the DNS IP in the Preferred DNS Server and Alternate DNS Server fields.

**DNS Server:** User enters DNS server's name that will be deleted or added from network.

**DNS Server:** User can enable or disable DNS server here.

**URL Name:** DNS server's URL name.

**Host IP:** Host DNS server's IP.


### 5.3.8 Dynamic DNS Update Configuration

The Dynamic DNS Service allows you to alias a dynamic IP Address to a static hostname in any of the many domains, allowing your computer to be more easily accessed from various locations on the internet. We provide this service, for up to five (5) hostnames, free to the Internet community.

The screenshot shows a web browser window titled "Conexant - Hasbani - Microsoft Internet Explorer". The address bar displays "http://10.0.0.2/doc/index.htm". The page content is titled "Dynamic DNS Update Configuration". On the left, there is a navigation menu with links: Status (Home, PPP, ADSL), Configuration (WAN, LAN, PPP, NAT, Virtual Server, Bridge Filtering, DNS, Dynamic DNS, User Level, Username/Password, Save Settings / Reboot), and Admin Privilege (WAN Status, ATM Status, ADSL Configuration, Route Table, Learned MAC Table, RIP Configuration, Misc Configuration, TCP Status, Admin Level). The main content area includes a "Dynamic DNS Enabled" checkbox, a "DDNS Server" dropdown menu set to "members.dyndns.org", an "Update Type" dropdown menu set to "dyndns", and input fields for "Username" and "Password". Below these are five input fields for "Host Name 0" through "Host Name 4". An "Apply" button is located below the host name fields. At the bottom, a message states "Settings take effect immediately, no system reboot is required" and a "Save Configuration" link is provided. The browser's status bar at the bottom shows "http://10.0.0.2/doc/dyndns.htm" and "Internet".


### 5.3.9 User Level Username/Password Configuration

This page allows user to set private user's name and login password.

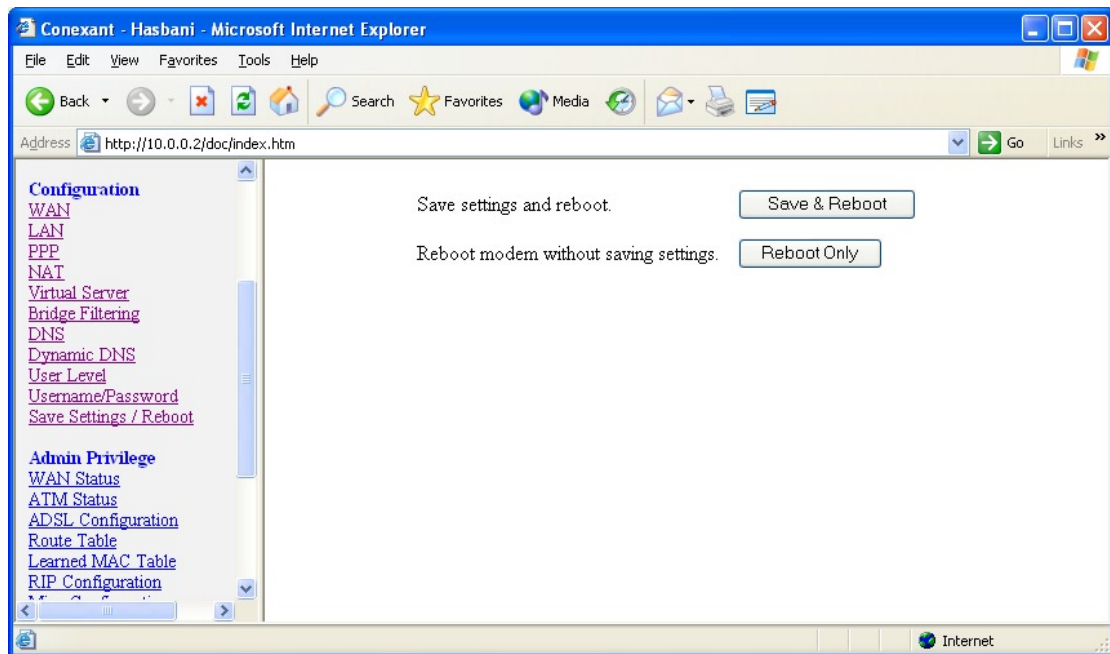

### 5.3.10 Save Settings/Reboot

After user modify ADSL router configuration settings, user can save the changes and reboot the router or ignore the changes and reboot the router.

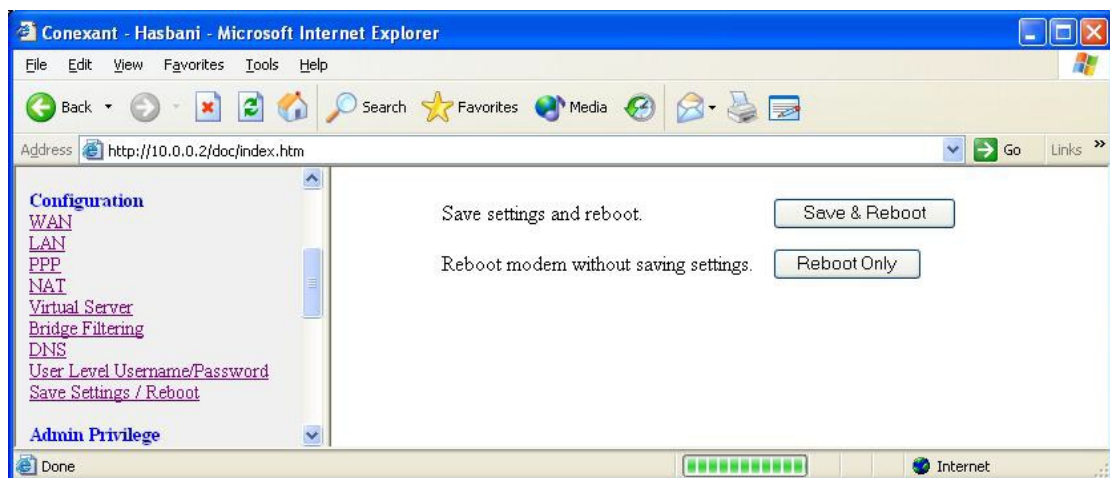


## 6. Admin Privilege

The links under **Admin Privilege** are only to be accessed and configured when user logs in with the administrator login name and password.

### 6.1 WAN Status


The **WAN Status** page shows the information and status of WAN PVCs that includes network IP Address, Subnet Mask and MAC Address.

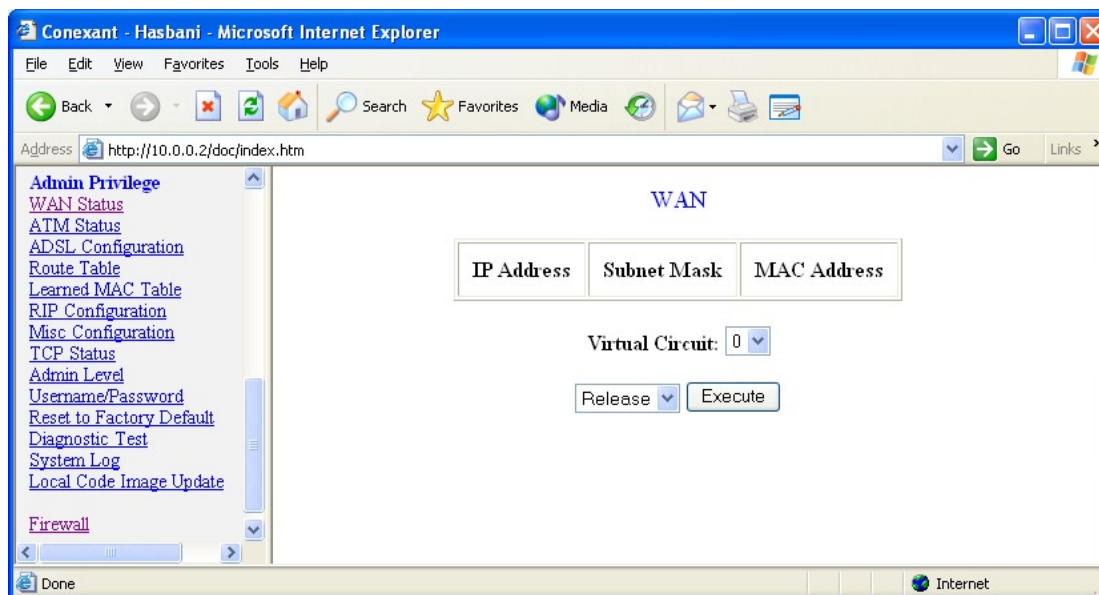

**Virtual Circuit:** ADSL router supports ten virtual circuits; user can release or add virtual circuits in the page.

## 6.2 ATM Status

The **ATM Status** page shows all the statistics information of transmit/receive cells.

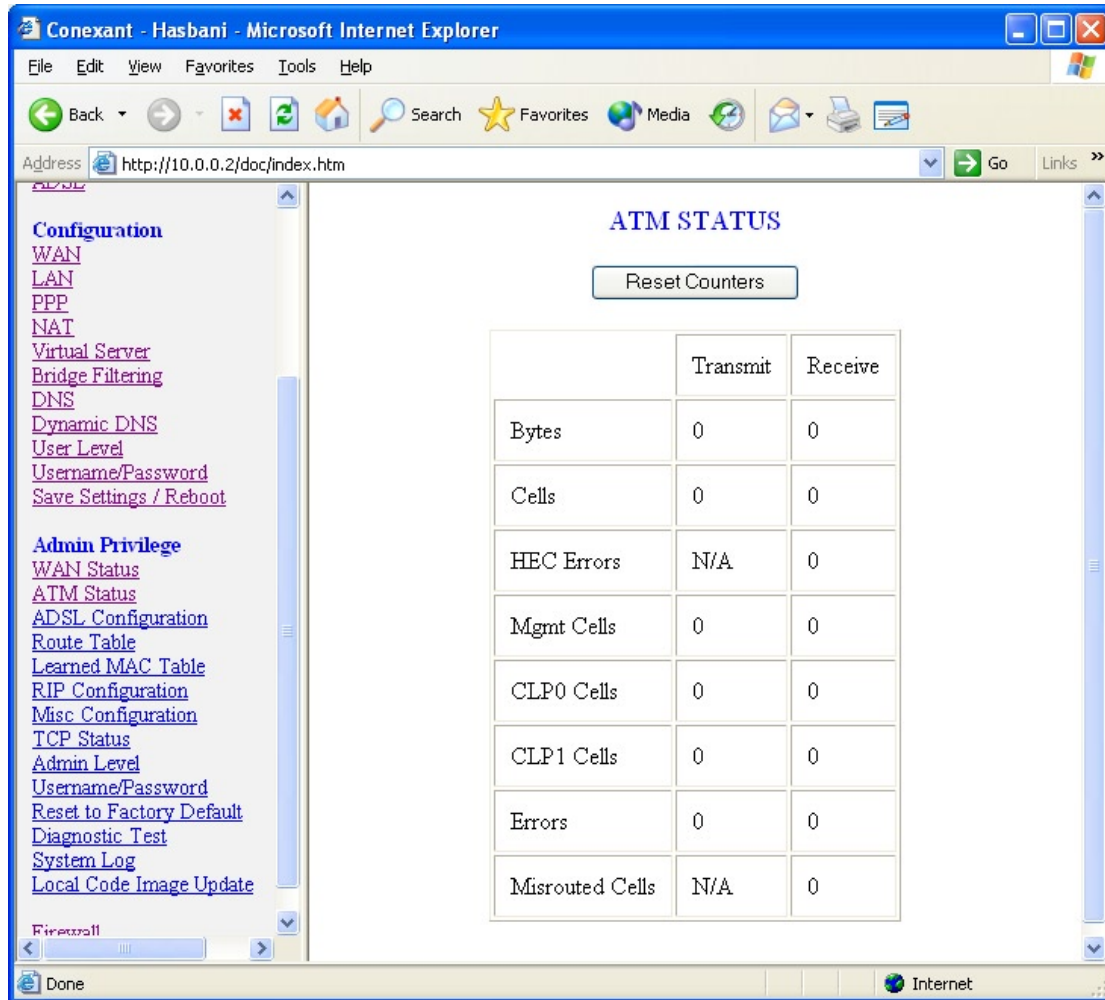

The screenshot shows a web browser window titled "Conexant - Hasbani - Microsoft Internet Explorer". The address bar displays "http://10.0.0.2/doc/index.htm". The left sidebar contains a navigation menu with links for Configuration (WAN, LAN, PPP, NAT, Virtual Server, Bridge Filtering, DNS, Dynamic DNS, User Level, Username/Password, Save Settings / Reboot), Admin Privilege (WAN Status, ATM Status, ADSL Configuration, Route Table, Learned MAC Table, RIP Configuration, Misc Configuration, TCP Status, Admin Level, Username/Password, Reset to Factory Default, Diagnostic Test, System Log, Local Code Image Update), and Firewall. The main content area is titled "ATM STATUS" and includes a "Reset Counters" button. Below the button is a table showing ATM statistics:

	Transmit	Receive
Bytes	0	0
Cells	0	0
HEC Errors	N/A	0
Mgmt Cells	0	0
CLP0 Cells	0	0
CLP1 Cells	0	0
Errors	0	0
Misrouted Cells	N/A	0

**Reset Counter:** This button allows user to reset the ATM Status counter.



### 6.3 ADSL Configuration

This page allows user to configure ADSL router Annex mode, handshaking protocol, wiring selection and bit swapping options.

**Annex Mode Config:** This option includes **User Selected** which user allows to select Annex mode and **Auto Selected** which ADSL router automatically select appropriate Annex mode.

**User Selected Annex Mode:** This feature enables when user select **User Selected mode** in **Annex Mode Config**. It has **Annex A** and **Annex B** two options.

**Trellis:** Trellis code provides a level of forward error correction to ADSL router. User can either **enable** or **disable** this function.

**Handshake Protocol:** This feature allows user to choose **Autosense-G.dmt first / Autosense-T1.413 first / G.dmt/G.lite/T1.413 / G.dmt / G.lite** communication protocols.

**Wiring Selection:** This field allows the user to enter the wiring selection for the RJ-11. Tip/Rip is the default for the board without the inner/outer pair relay. This feature allows user to choose from **Auto / Tip/Ring / A/A1** wiring selection.

**Bit Swapping:** This field allows the user to enable or disable the upstream bit swapping.

## 6.4 Route Table

The Route Table page displays routing table and allows the user to manually enter the routing entry. The routing table will display the routing status of Destination, Netmask, Gateway, and Interface. The interface br0 means the USB interface; lo0 means the loopback interface; and ppp1 means the PPP interface.

The screenshot shows a web browser window titled "Conexant - Hasbani - Microsoft Internet Explorer" with the address bar showing "http://10.0.0.2/doc/index.htm". The page content is divided into three main sections:

- Route Table:** A table with 4 columns: Destination, Netmask, Gateway, and Interface. It contains two entries:

Destination	Netmask	Gateway	Interface
10.0.0.0	255.0.0.0	10.0.0.2	br0
127.0.0.1	255.0.0.0	127.0.0.1	lo0
- System Default Gateway Configuration:** A section with radio buttons for "None", "Auto" (selected), "Select Interface" (with a dropdown menu showing "Ip Pvc 0"), and "Specify IP" (with an empty text box). An "execute" button is at the bottom.
- Route Configuration:** A section with input fields for "Destination", "Netmask", and "Gateway". It has radio buttons for "Specify IP" (selected) and "Select Interface" (with a dropdown menu showing "Ip Pvc 0"). There are "Add", "Submit", and "Reset" buttons. Below this is a note: "Note: Save changes to flash to restore on power up."

At the bottom, there is a section titled "Manually Configured Routes" with a table structure:

#	Destination	Netmask	Gateway
---	-------------	---------	---------

### Route Table

The Route Table displays existing ADSL router USB connection and Ethernet connection routing information. It includes Destination, **Netmask** and **Gateway** address.

### System Default Gateway Configuration

The system-wide Default Gateway now provides three options: None, Auto, select Interface, and Specify IP.

**None:** This field allows the user to choose whether Default Gateway in the CPE is needed.

**Auto:** This field allows the user to select the CPE to automatically decide the Default Gateway. (**System Default**)

**Select Interface:** This field allows user to select a Network Interface from a list (PVCs, PPP Sessions, USB and LAN). This option lets the user to associate the system-wide Default Gateway to a Network



Interface, static or dynamic, and provides a way to fix the Default Gateway to a dynamic Network Interface before the interface is established.


**Specify IP:** User can specify Gateway IP address.

### Route Configuration

This field allows user to add or remove specified Destination address, Netmask address, specified Gateway IP address and select connection interface.

## 6.5 Learned MAC Table


The **Learned MAC Table** page displays MAC address and expiration time.

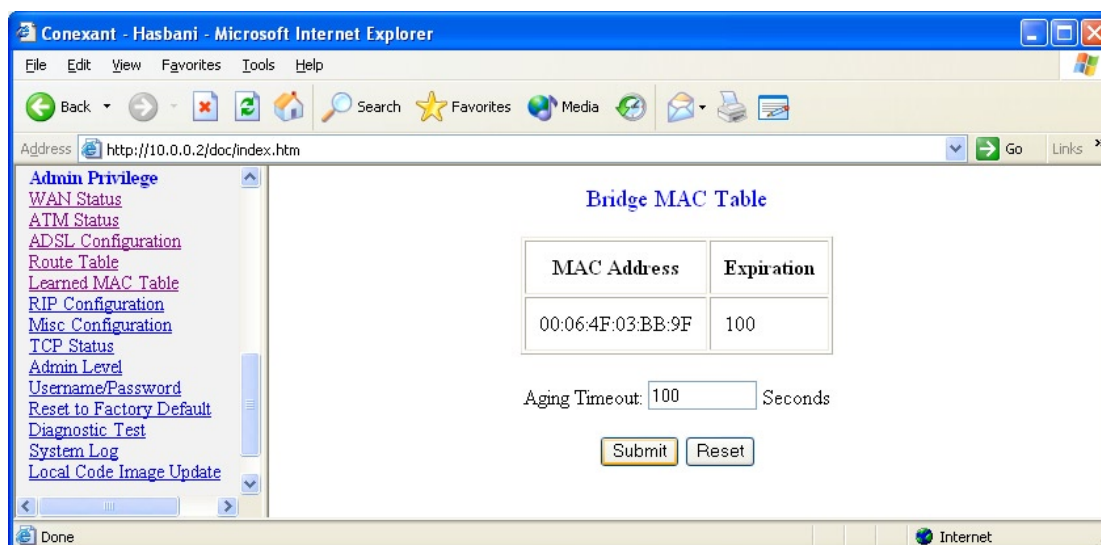

**Aging Timeout:** This field allows the user to enter the update period for the MAC table.

## 6.6 RIP Configuration

The RIP Configuration page allows the user to set the configuration for the system wide configuration of RIP. The actual RIP configuration is in the RIP per Interface Configuration.

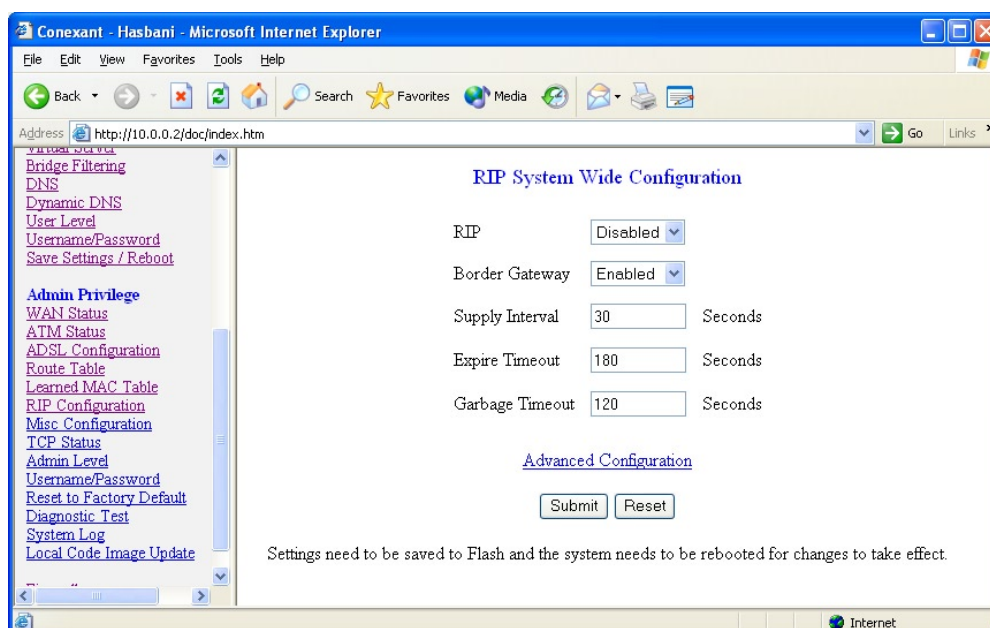

**RIP:** This field allows the user to Enable or Disable the RIP session. The resulting RIP session will monitor all network interfaces that are currently available for messages from other RIP routers.

**Border Gateway:** This field allows user to enable or disable border gateway.

**Supplier Interval:** This field allows the user to enter the Supplier Interval timer in second. This timer specifies how often RIP sends announcements as a RIP Supplier. **(Default = 30 seconds)**

**Expire Timeout:** This field allows the user to enter the Expire timer in second. This timer specifies the expiration time of a route. When a route has not been updated for more than “expire” period of time, it is removed from the Route Table. This route is invalidated and remains in the internal RIP Route Table. It will be included in the RIP announcements to let other routers know the changes. **(Default = 180 seconds)**

**Garbage Timeout:** This field allows the user to enter the Garbage timer in second. This timer specifies how long the expired and invalidated routes are kept in the Internal RIP Route Table before it is removed from it. (Default = 300 seconds)

## Advanced Configuration

The RIP Per Interface Configuration page allows the user to set the configuration for each Interface (PVCs, PPP Sessions, USB and LAN) and displays current RIP settings.

**RIP Per Interface Configuration**

Interface: Ip Pvc 0, Enabled?: No, Supplier: Disabled, Listener: V1

[Back to System Wide Configuration](#)

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

**Current RIP Settings**

#	Interface	Enabled?	Supplier Mode	Listener Mode
1	Ip Pvc 0	No	Disabled	V1+V2
2	Ip Pvc 1	No	Disabled	V1+V2
3	Ip Pvc 2	No	Disabled	V1+V2
4	Ip Pvc 3	No	Disabled	V1+V2
5	Ip Pvc 4	No	Disabled	V1+V2
6	Ip Pvc 5	No	Disabled	V1+V2
7	Ip Pvc 6	No	Disabled	V1+V2
8	Ip Pvc 7	No	Disabled	V1+V2
9	Ip Pvc 8	No	Disabled	V1+V2
10	Ip Pvc 9	No	Disabled	V1+V2
11	Ip Lan	No	V2 BC	V1+V2
12	PPPoPvc 0	No	Disabled	V1+V2

**Interface:** This field allows the user to choose the Interface (PVCs, PPP Sessions, USB and LAN), for the RIP to be configured.

**Enable?:** This field allows the user to Enable (Yes) or Disable (No) the specified interface for RIP.

**Supplier:** This field allows the user to select the Supplier Mode (RIP Transmit).

- 1) Disabled: The supplier transmit is disabled.
- 2) V1 BC: The supplier transmits in RIPv1 Broadcast.
- 3) V2 BC: The supplier transmits in RIPv2 Broadcast.
- 4) V2 MC: The supplier transmits in RIPv2 Multicast.

**Listener:** This field allows the user to select the Listener Mode (RIP Receive)

- 1) V1: The listener receives the RIPv1 only.
- 2) V2: The listener receives the RIPv2 only.
- 3) V1+V2: This listener receives the both RIPv1 and RIPv2.

Supplier and Listener are based on section 4.1 “Compatibility Switch” in RFC 1723.

**Current RIP Settings:** This field displays the each interface’s RIP status.

## 6.7 Miscellaneous Configuration

The **Miscellaneous Configuration** allows user to set all the miscellaneous configurations, which include HTTP server, FTP server, TFTP, DMZ, IGMP, PPP, and SNTP setup configuration.

The screenshot shows a web browser window displaying the 'Miscellaneous Configuration' page of a router. The browser's address bar shows 'http://10.0.0.2/doc/index.htm'. The page has a left sidebar with navigation links under 'CONEXANT' and 'Configuration'. The main content area is titled 'Miscellaneous Configuration' and contains several sections: 'HTTP server access' with radio buttons for 'All' and 'Restricted' (selected), and a checkbox for 'LAN' (checked); 'WAN' with a checkbox and input fields for 'Specify IP' (10.0.0.10) and 'Subnet Mask' (255.0.0.0); 'HTTP server port' with a text box containing '80'; 'HTTP Password Protection' with a dropdown menu set to 'Enabled'; 'FTP server' with a dropdown menu set to 'Enabled' and a checkbox for 'Disable WAN side FTP access'; 'TFTP server' with a dropdown menu set to 'Disabled'; 'DMZ' with a dropdown menu set to 'Disabled' and a text box for 'DMZ HOST IP' (0.0.0.0); 'IGMP Proxy' with a dropdown menu set to 'Disabled'; 'PPP Half Bridge' with a dropdown menu set to 'Disabled'; 'PPP Reconnect on WAN Access' with a dropdown menu set to 'Disabled'; 'Connect PPP when ADSL link is up' with a dropdown menu set to 'Enabled'; and 'SNTP' with a dropdown menu for 'Time Zone' set to '(-8) Pacific (US)' and a dropdown menu for 'Daylight Saving Time' set to 'No'.

**HTTP Server Access:** This field allows the user to configure the Web pages can be accessed from.

**ALL:** When this field is checked, it allows both WAN and LAN access to the Web pages.

**Restricted LAN:** This field allows the Web pages access from LAN side.

**Restricted WAN Specified IP & Subnet Mask:** This field allows the Web access from WAN side with a specify IP and subnet mask.


**HTTP Server Port:** This field allows the user to specify the port of the Web access. For example, when it is changed to 1001, the HTTP server address for the LAN side is <http://10.0.0.2:1001>.

**HTTP Password Protection:** This field allows user to enable or disable password protection for HTTP server.

**FTP server:** This field allows the user to enable or disable the FTP connection.

**TFTP server:** This field allows the user to enable or disable the TFTP connection.

An example for the TFTP client updating the vxworks.z product image code is:

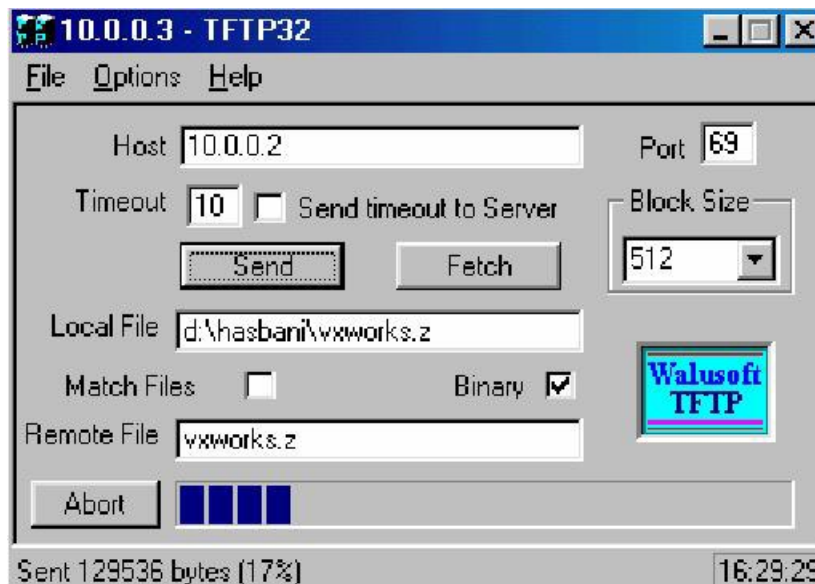

**DMZ:** A DMZ (De-Militarized Zone) is added between a protected network and an external network, in order to provide an additional layer of security. When there is a suspected packet coming from WAN, the firewall will forward this packet to the DMZ host.

**DMZ Host IP:** The IP address of the DMZ host at LAN side.

**IGMP Proxy:** Here is the global setting for IGMP Proxy. If it is enabled, then the enabled IGMP Proxy on WAN PVCs will be working. Otherwise, no WAN PVC can have IGMP Proxy working on it.

**PPP Half Bridge:** When the PPP Half Bridge is enabled, only one PC is able to access the Internet, and the DHCP server will duplicate the WAN IP address from the ISP to the local client PC. Only the PC with the WAN IP address can access the Internet.

Q: What is the difference between PPP connect on WAN access and the Automatic Reconnect?

A: Some ISPs terminated the PPP session due to the inactivity.


**PPP reconnect on WAN access:** If it is enabled, the PPP will be automatically reconnected when an URL is entered in the browser (packet interested in going out the WAN).

**Connect PPP when ADSL link is up:** If it is enabled, the PPP session will be automatically established when ADSL link is available.

**SNTP:** This field allows user to set time zone and enable/disable daylight saving time option.

## 6.8 TCP Status

The **TCP Status** page shows the statistics for all TCP connections.

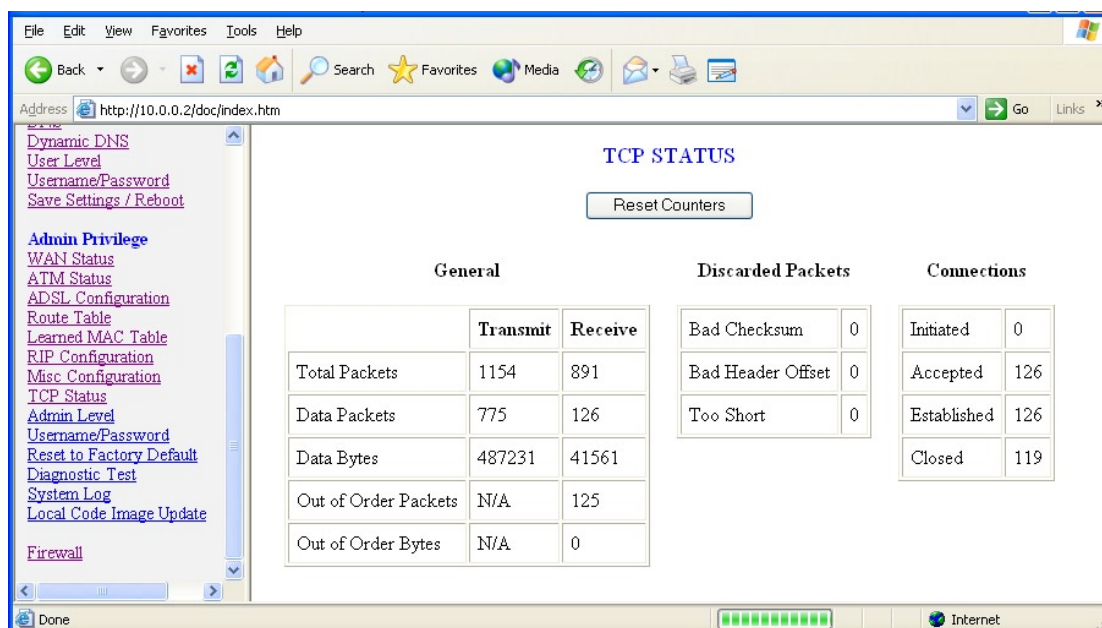

**Reset Counter:** This button allows user to reset the TCP Status counter.

## 6.9 Admin Level Username/Password

This page allows user to set administrator level user's name and password.


The screenshot shows a web browser window displaying the 'Admin Level Username/Password Configuration' page. The page has a left sidebar with a menu of links including 'Dynamic DNS', 'User Level', 'Username/Password', 'Save Settings / Reboot', 'Admin Privilege', 'WAN Status', 'ATM Status', 'ADSL Configuration', 'Route Table', 'Learned MAC Table', 'RIP Configuration', 'Misc Configuration', 'TCP Status', 'Admin Level', 'Username/Password', 'Reset to Factory Default', 'Diagnostic Test', 'System Log', 'Local Code Image Update', 'Firewall', and 'Done'. The main content area is titled 'Admin Level Username/Password Configuration' and contains a warning message: 'Do not use '&' in the password.' Below this, there are four input fields: 'Current Password', 'Select Username' (with 'admin' entered), 'Select Password', and 'Retype Password'. There are 'Submit' and 'Reset' buttons. At the bottom, a message states: 'Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.'

The Admin password must have at least 8-characters for the FTP to work




## 6.10 Reset to Factory Default


The Reset to Factory Default page allows the user to reset the router to original factory default configuration.

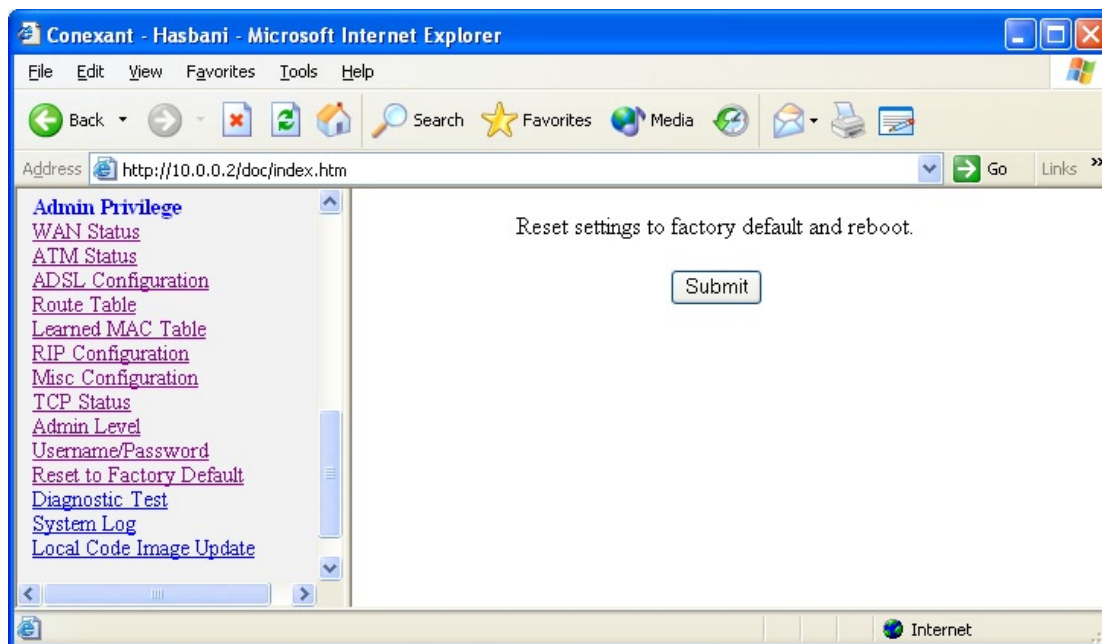

After click Submit button, ADSL router settings will be set to factory default and reboot router.

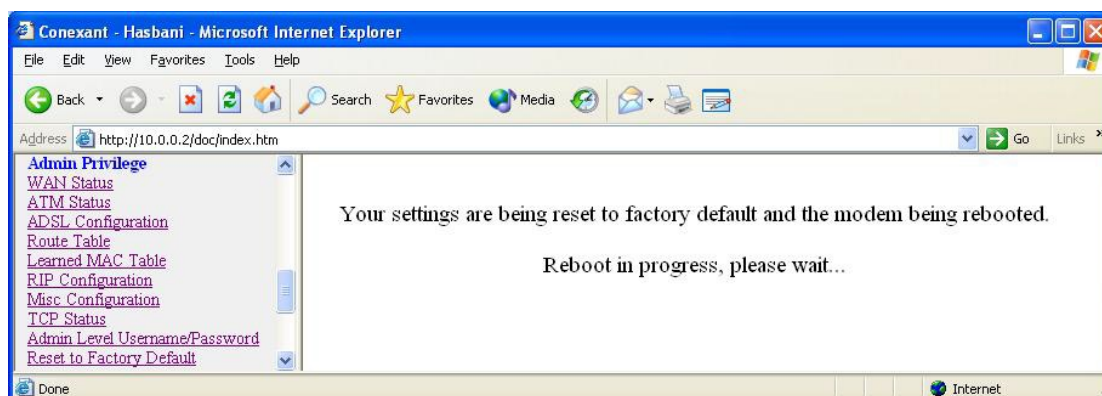


Wait for about 5 to 10 seconds, router will boot up and ready to use.

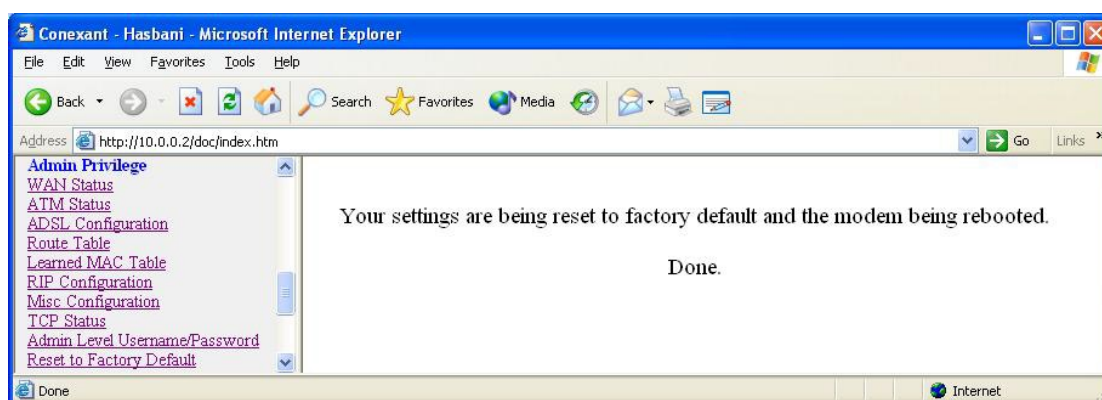



## 6.11 Diagnostic Test

The **Diagnostic Test** page shows the test results for the connectivity of the physical layer and protocol layer for both LAN and WAN sides.

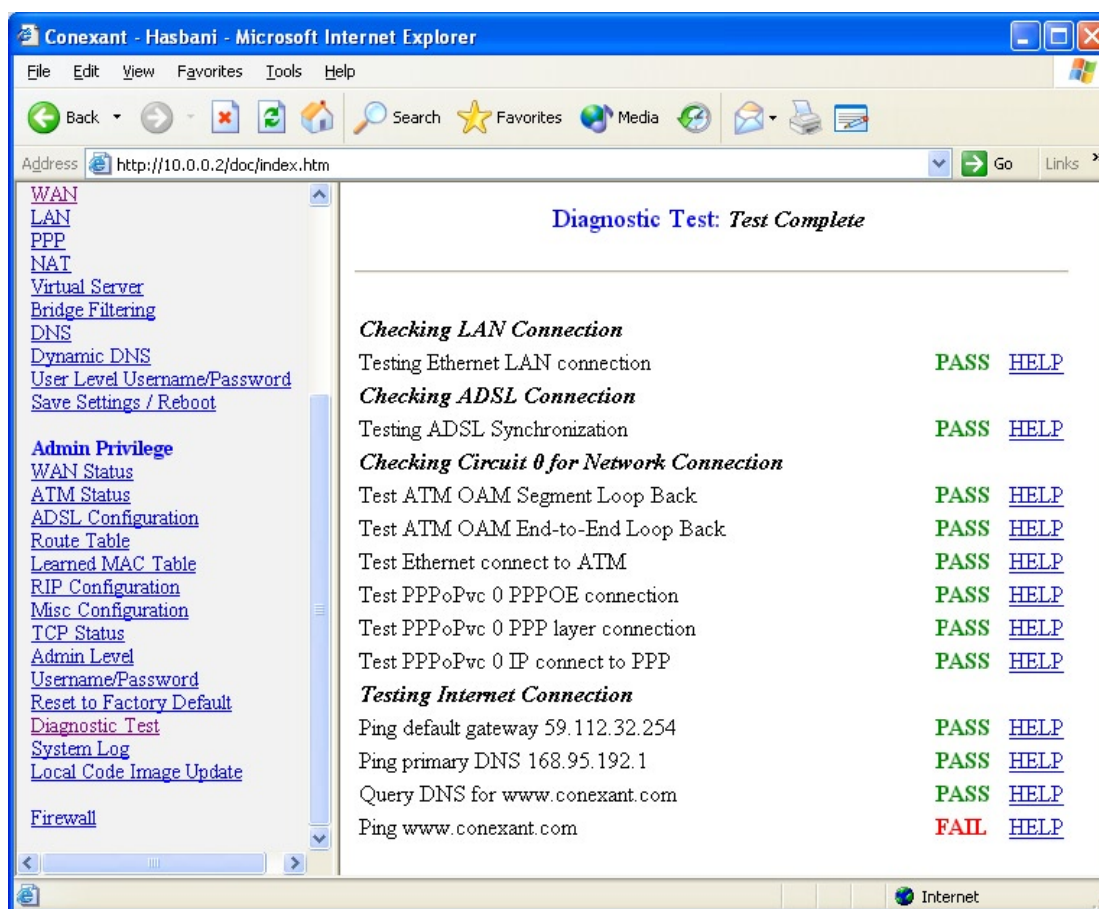

**Testing Ethernet LAN Connection:** This test checks the Ethernet LAN interface connection.

**Testing ADSL Synchronization:** This test checks the ADSL showtime. If this test returns FAIL, all other tests will be skipped.

**Test ATM OAM Segment Loop Back:** This test sends ATM OAM F5 Segment loop back request cells to the CO. This test will pass if response cell is received. Since some service providers might not support this test, it could still work even if this test fails. If this test fails consistently and the ADSL router seems not working, make sure the VPI and VCI are configured correctly.

**Test Ethernet Connect to ATM:** This test checks the ATM AAL5 module is loaded correctly.

**Test PPPoE Connection:** This test checks the PPPOE connection.

**Test PPP Layer Connection:** This test checks the PPP authentication.

**Test IP Connect to PPP:** This test checks a valid IP address assigned from the service provider.


**Ping Primary DNS:** This test checks the primary DNS can be reached through ping request.

**Query DNS for [www.conexant.com](http://www.conexant.com):** This test checks the host name can be resolved to IP address through domain name servers.

**Ping [www.conexant.com](http://www.conexant.com) :** This test checks the specified host can be reached through ping request.

## 6.12 System Log

The **System Log** page shows the events triggered by the system.

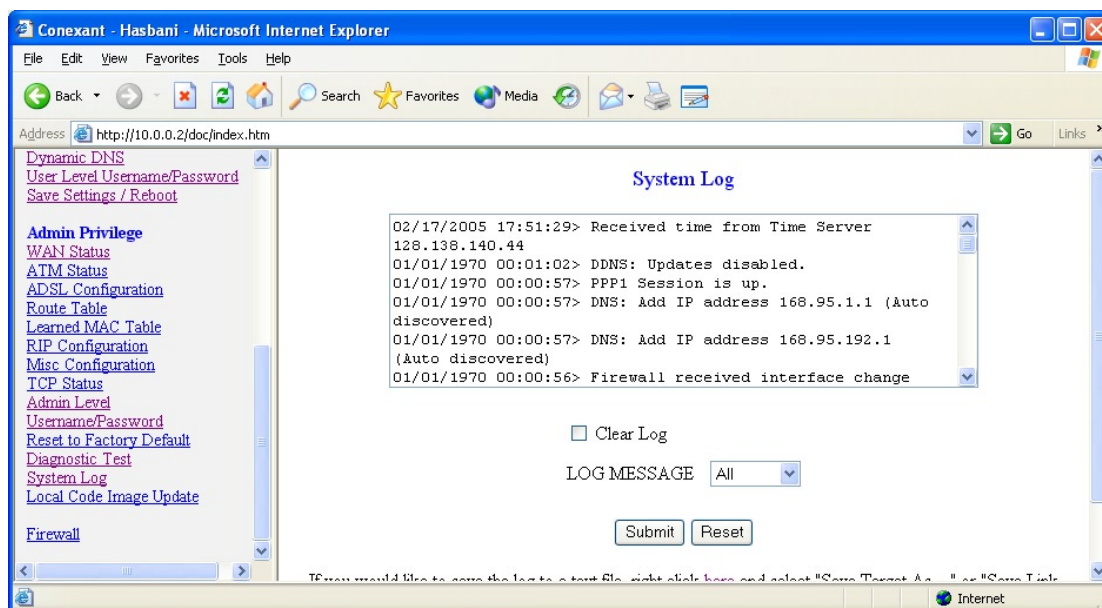

**Clear Log:** This field allows the user to clear the current contents of the System Log.


**Save Log:** This field allows the user to save the current contents of the System Log by right click **HERE** and select "**Save Target As**" to save it into a text file.

The **System Log** records:


- 1) DSL Layer
  - DSL Link detected
  - DSL Link connected
  - DSL Link disconnected
- 2) ATM Layer
  - ATM detected
  - ATM connected
  - ATM disconnected
  - ATM setting up VPI/VC1
- 3) PPP Layer
  - PPP authenticated
  - PPP invalid user name or password
  - PPP unable to connect with PPP server
- 4) IP Layer
  - IP protocol up
  - PPP IP address
  - PPP Gateway IP address PPP DNS Primary IP address
  - PPP DSN Secondary IP address

## 6.13 Local Code Image Update


The Local Code Image Update page allows the user to upgrade the image code locally.

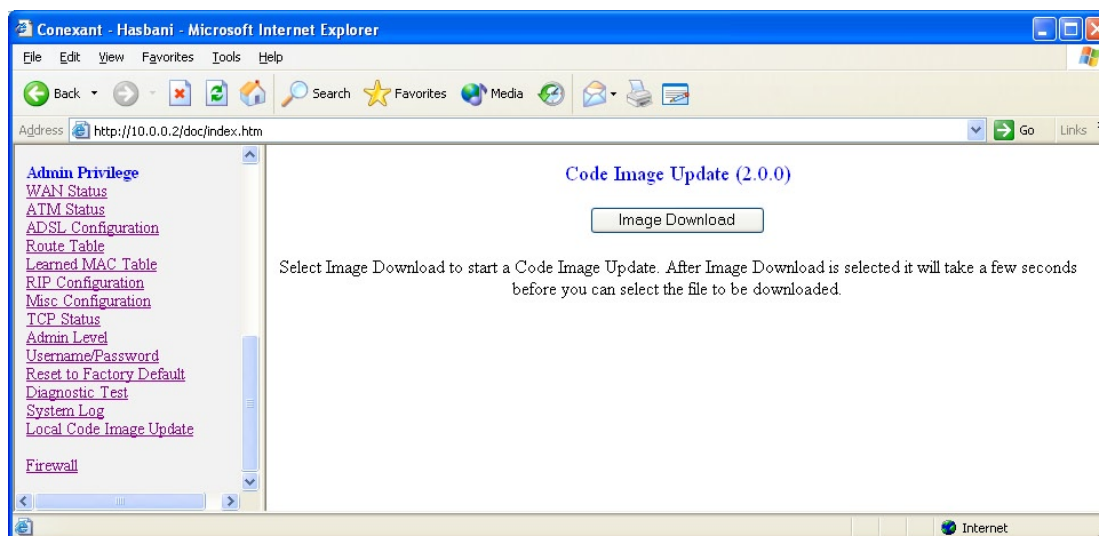

Click Image Download button to start update the code image.

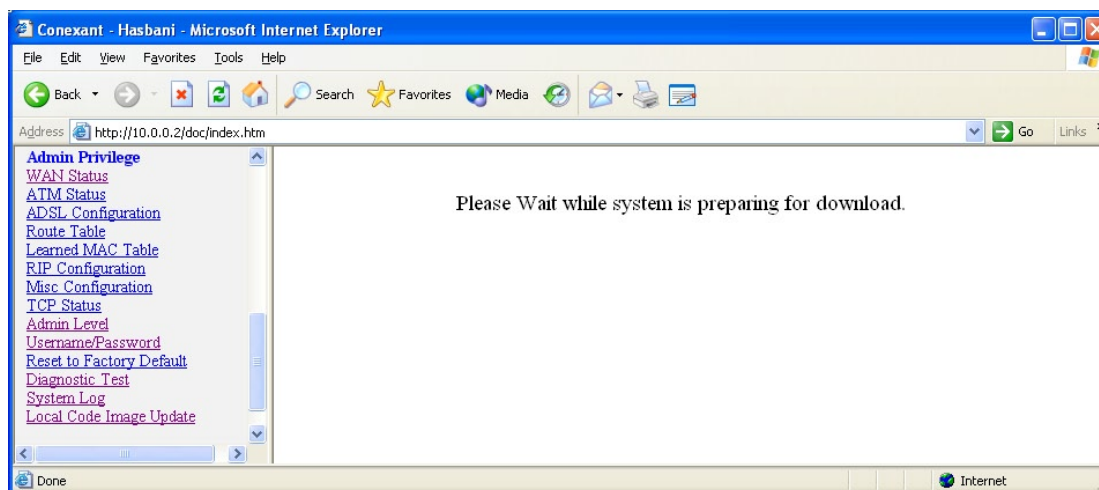


Browse the location of file, firmware.dlf or boorom.dlf file, and click the Upload to start the update. If you decide to abort code update, click Cancel Download button.

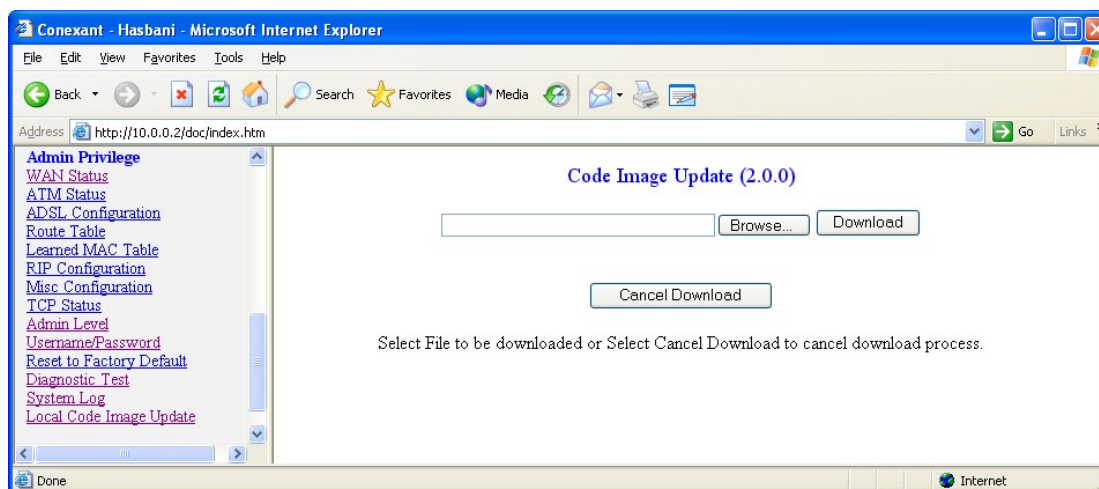

## 6.14 Firewall

Conexant firewall allows users to configure various databases/firewall options and Inbound/Outbound policies for controlling Inbound/Outbound traffic.

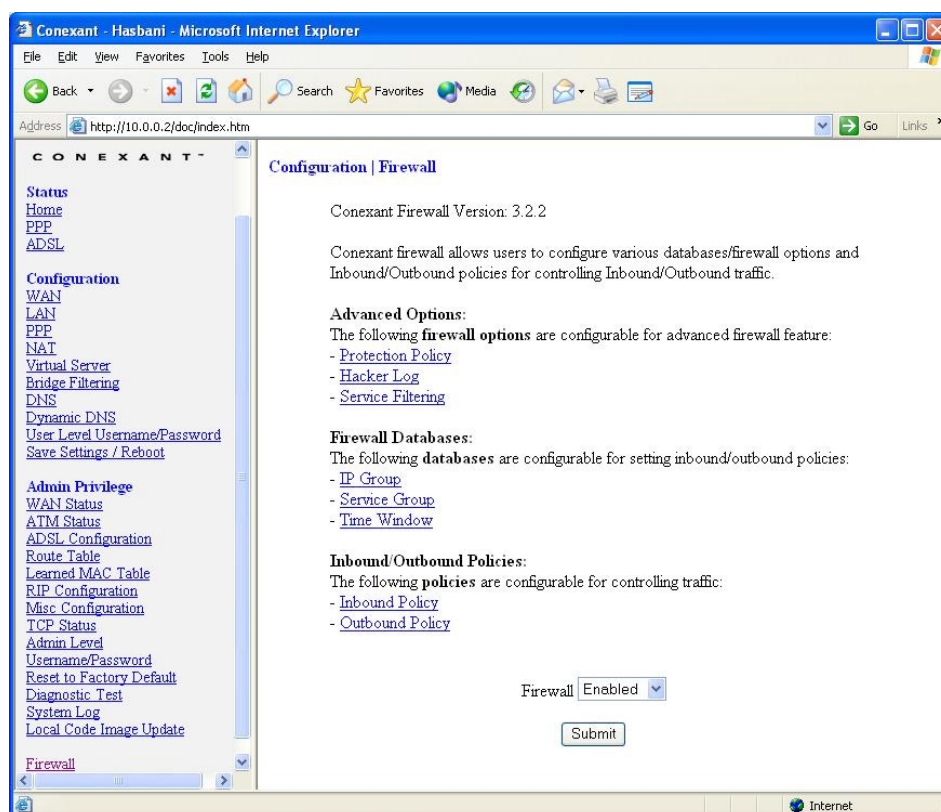


**Firewall:** User can enable or disable firewall feature of the ADSL router at the bottom of this page.

### Advanced Options

Advanced options include Protection Policy, Hacker Log and Service Filtering.

### Protection Policy

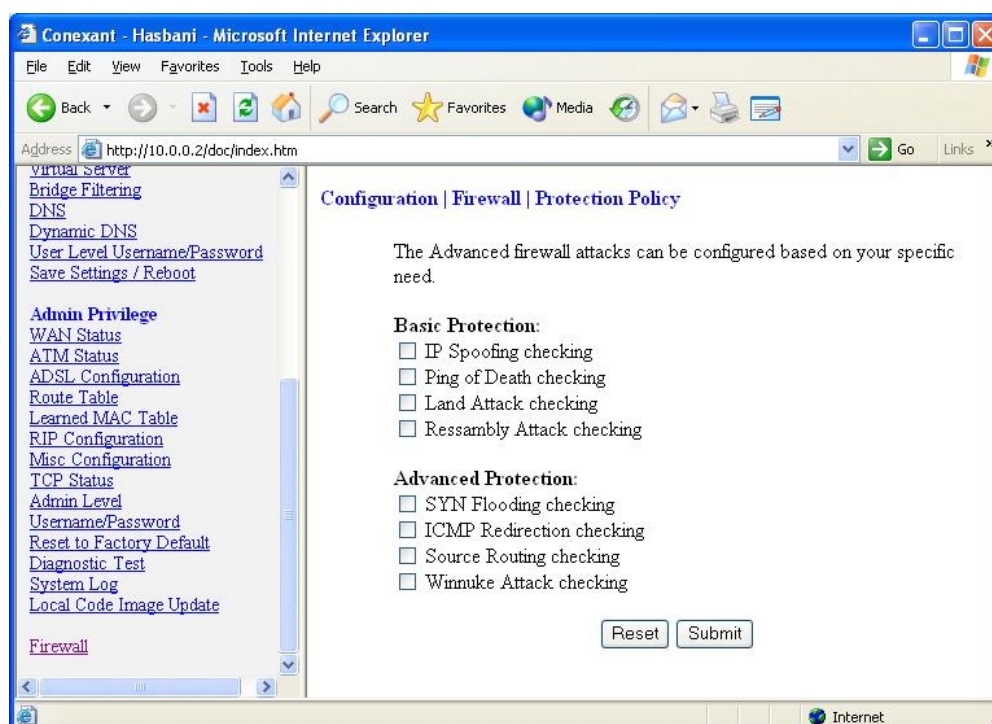




Basic Protection: Firewall blocks IP Spoofing, Ping of Death, Land Attack and Ressambly Attack.

Advanced Protection: Firewall blocks SYN Flooding, ICMP Redirection, Source Routing and Winnuke Attack.


## **Hacker Log**

This page allows user to select which hacker attack router will build attack log.

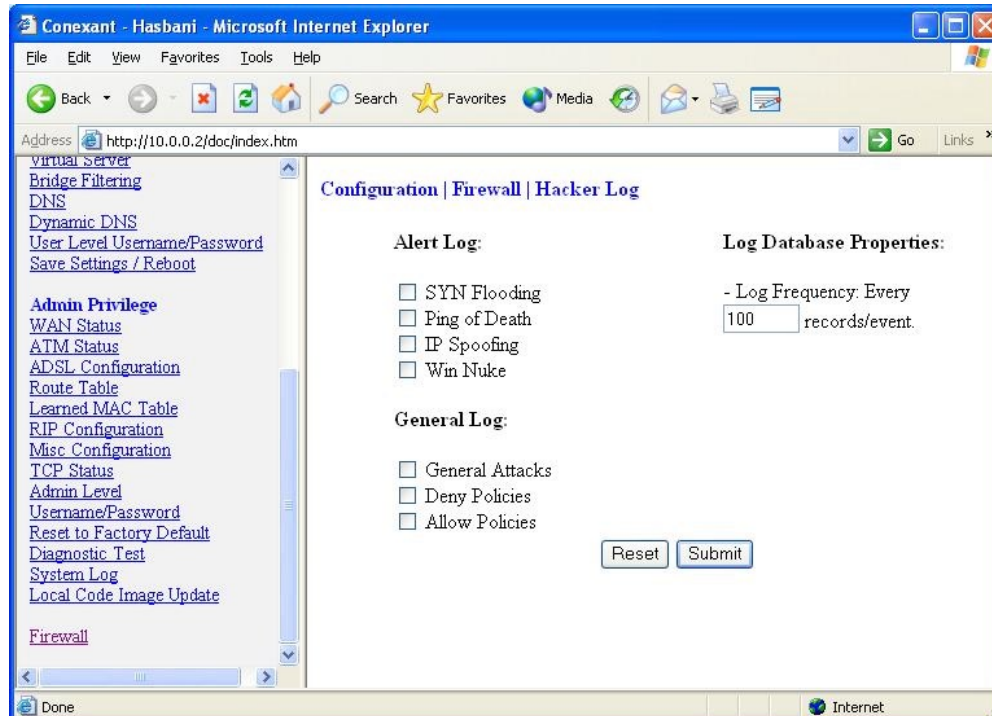

## **Service Filtering**

User can select which service from external network firewall should block. These services include Ping, Telnet, FTP, DNS, IKE, RIP and DHCP.

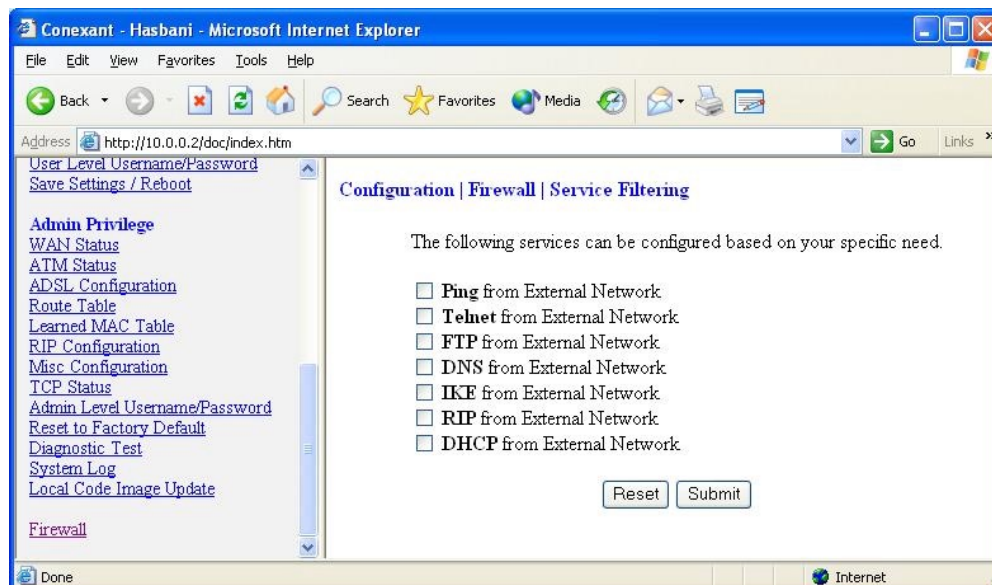

## Firewall Databases

IP Group database, Service Group database and Time Window database are configurable to set inbound/outbound policies.


### IP Group

User can add new IP group or modify the existing IP group.




### Service Group

User can add new service group or modify existing service group in this page.

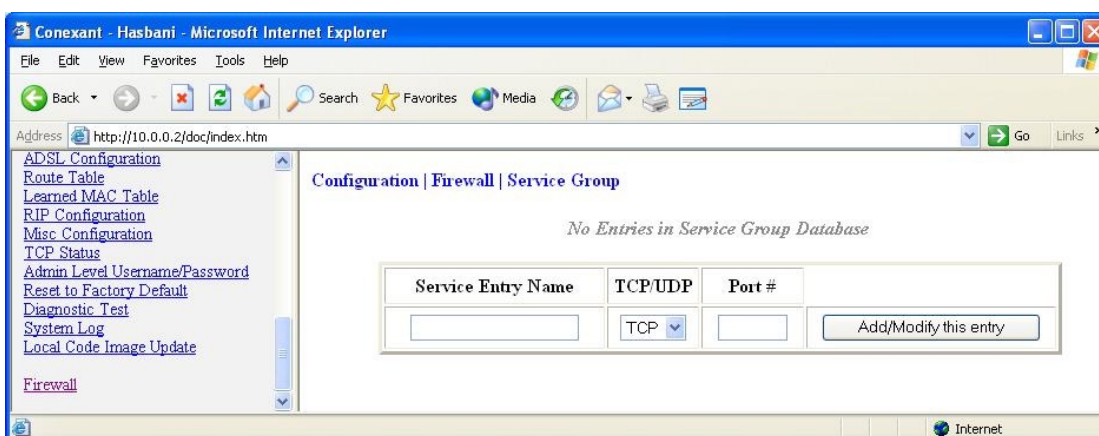

### Time Window

User can add new Time Window group or modify existing Time Window group by setting time duration.


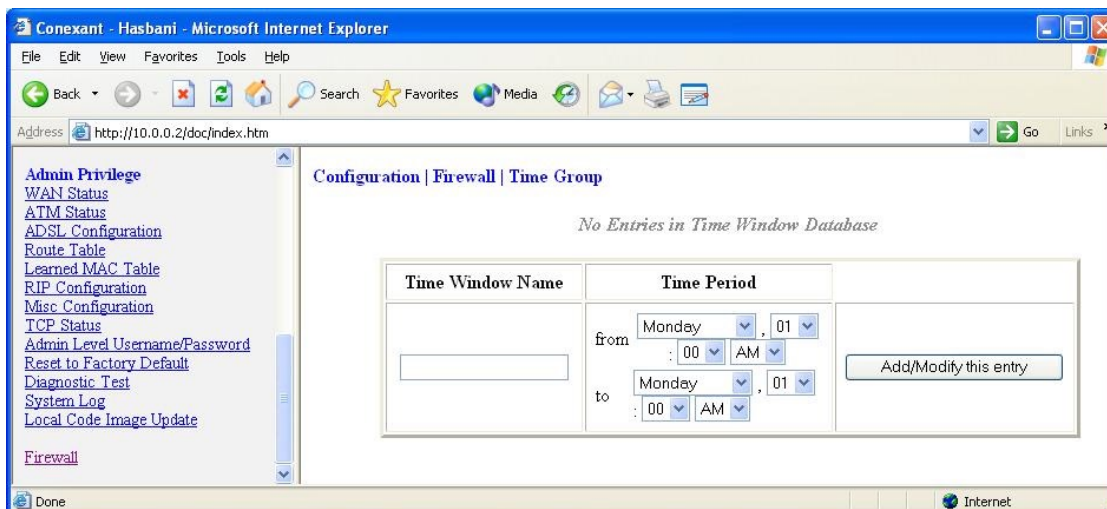


## Inbound/Outbound Policies

User can set inbound and outbound policies to control the data transmission.

### Inbound Policy


User can add new inbound policy to control the data transmission.

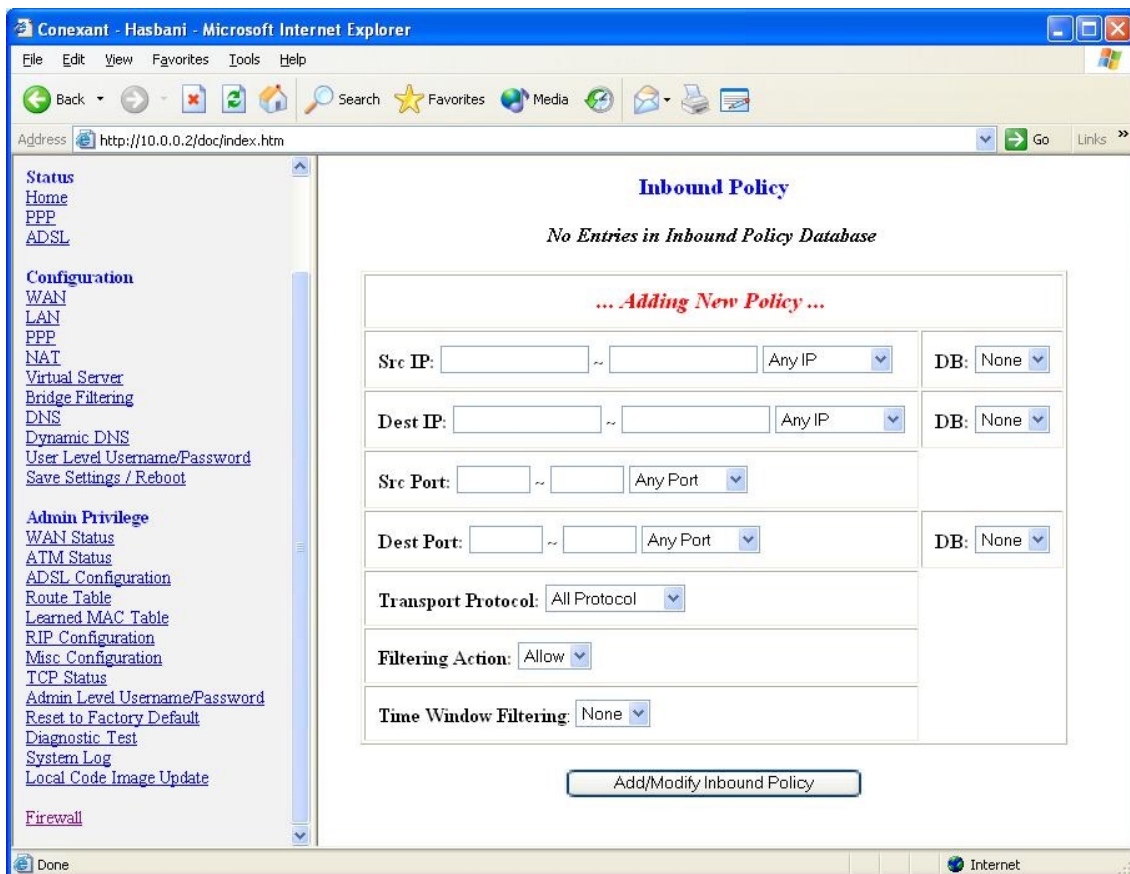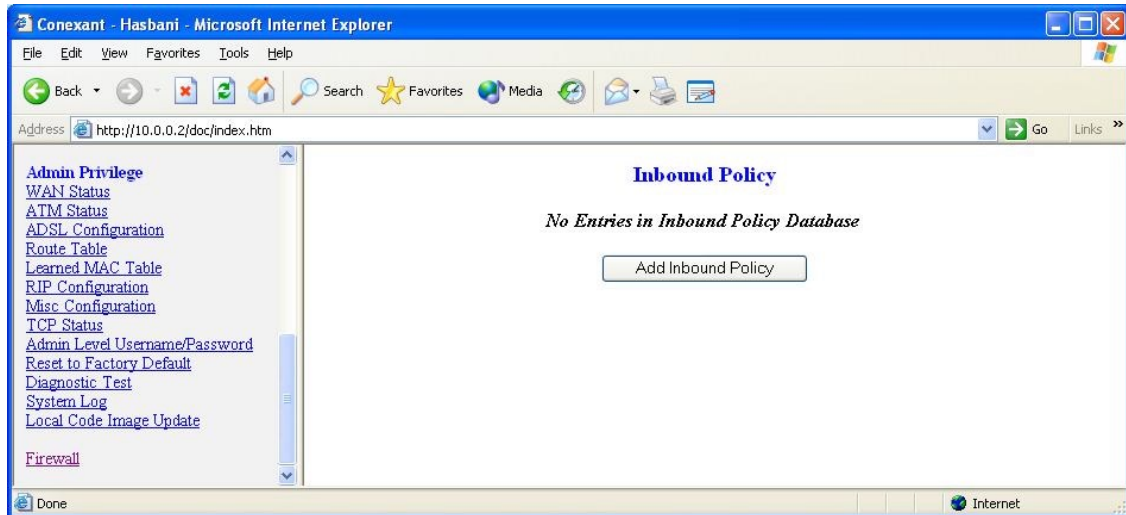



## Outbound Policy

User can add new outbound policy to control the data transmission.

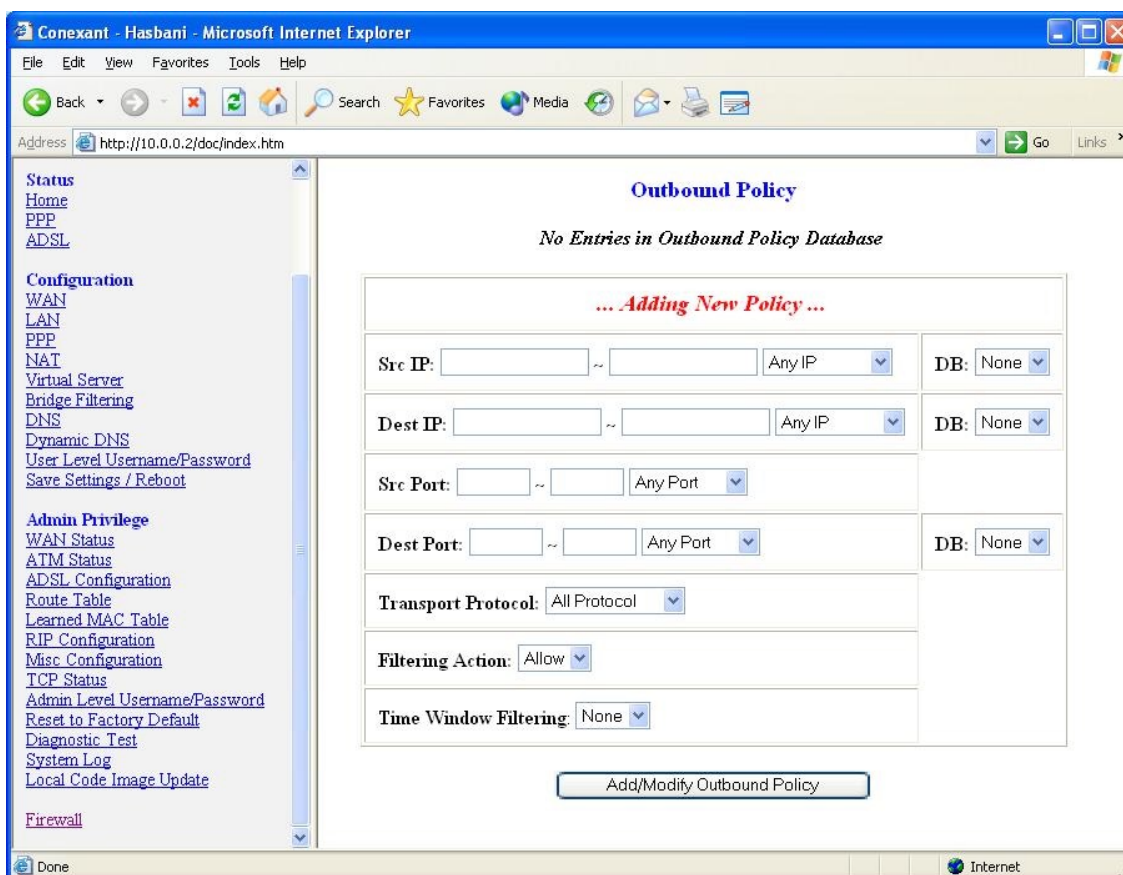

If you have any troubles to configure or setup this Four-Port ADSL Ethernet Router, please contact us.

Before contacting us, make sure collect following information. Submit complete detailed information of your problem will help us to provide you accurate answers.

Model Name:

Serial Number:

PC Settings:

Other: