

# DPHX

## Portable Digital Radio

### Programming Manual



**RELM Wireless Corporation**  
7100 Technology Drive  
West Melbourne, FL 32904  
1-800-648-0947  
[www.relm.com](http://www.relm.com)

P/N 0301-30964-500

REV. 0908

Copyright 2008 RELM Wireless Corporation. All rights reserved



# Contents

---

<b>How to Program Radios</b> .....	<b>3</b>
<b>Keypad Programming</b> .....	<b>3</b>
<b>General Settings (Channel 0)</b> .....	<b>4</b>
Group Password .....	5
Automatic Numeric Identification (ANI).....	6
Transmitter Time-Out Timer.....	6
Scan Delay Time.....	7
Priority 1 Channel .....	7
Priority 2 Channel .....	8
Channel 0 Group One Functions .....	8
Battery Saver Inhibit.....	9
Group Scan List .....	9
Transmit On Priority 1 .....	9
Priority 1 Lock .....	9
Scan List Lock.....	10
Channel 0 Group Two Functions.....	10
User Code Guard Selection .....	10
Busy Channel Operation .....	11
ANI/DTMF Mode .....	11
Channel 0 Group Three Functions.....	12
Backlight On Display Change .....	12
Backlight On Key Press.....	13
Alphanumeric/Numeric Display Mode.....	13
Backlight Duration .....	13
Group Labels.....	14
Review Channel 0 Values .....	15

<b>Channel Settings .....</b>	<b>15</b>
Channel Bandwidth .....	15
Receive Frequency .....	16
Receive Mode .....	16
Receive Analog Code Guard .....	16
Receive NAC.....	17
Squelch Mode .....	17
Transmit Frequency.....	18
Transmit Mode.....	18
Transmit Analog Code Guard.....	19
Transmit NAC .....	20
Talk Group ID .....	20
Secure Selection (Encrypted Radios Only).....	20
Encryption Key (Encrypted Radios Only).....	21
Key Selection Setting (Encrypted Radios Only).....	22
Channel Label .....	22
Review Channel Settings .....	22
Program Another Channel .....	23
Exit Programming Mode .....	23
 <b>Cloning Radio Settings .....</b>	 <b>23</b>
Special Cloning Instructions.....	25
Scan List Cloning .....	26
 <b>CTCSS Code Guard Values .....</b>	 <b>27</b>
 <b>CDCSS Code Guard Values .....</b>	 <b>28</b>
 <b>Quick reference Guide - Channel 0.....</b>	 <b>29</b>

---

## How to Program Radios

---

There are three different ways to program BK Radio radios:

- **BY KEYPAD** A radio can be programmed with its keypad and a programming plug, LAA0701. That procedure is described in this section.
- **BY CLONING** You can transfer the programmed settings to another radio of the same frequency band by using a cloning cable. See "Cloning Radio Settings" on page 23 of this manual.
- **BY COMPUTER** With a computer, DPHx programming software, and an LAA 0725 interface cable. That procedure is not described in this manual. Contact BK Radio for the required programming cable and software.


---

## Keypad Programming

---

Radios are shipped with a door covering the keypad and display. Before programming, remove the door by removing the battery pack, engaging the door just below the speaker grill, and sliding the door downward. Replace the battery pack.

Make sure the battery pack is charged.

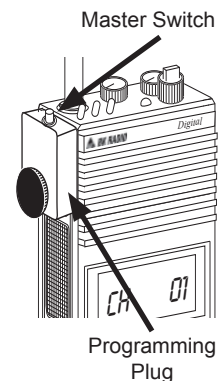

1. Insert the programming plug into the side connector of the radio. The push-button master switch will be on the top.

**NOTE:** The cloning cable can be used as a substitute for the programming plug by inserting the end with the push-button master switch into the side connector of the radio.

2. Select a channel group to be programmed. See "Select A Group/Channel" in the Owner's Manual.
3. Press and hold the master switch.
4. While holding the master switch, press and hold the **[FCN]** key. After approximately three seconds the LCD will display '- - - ID.'



5. Release the **[FCN]** key and the master switch. The radio is now in the Password Entry Mode.
6. Enter the six-digit password code for the selected group. Without the correct password code, you cannot proceed with programming.

**NOTE:** New radios shipped from the factory are assigned the password code **000000**.

While entering the password code the display will not change, but a beep will sound for each key pressed. If the password code is entered incorrectly, the radio will reset to normal operation. Try again, starting at step 2.



7. Press the **[ENT]** key to proceed to Programming Mode. The display will change to **PRG CH 00**.

**NOTE:** Your radio may have been programmed to block keypad programming access to some or all variables. Contact your BK Radio Dealer if you need access to these fields.

---

## GENERAL SETTINGS (CHANNEL 0)

---

Channel 0 settings for each group must be programmed separately.

**NOTE:** Settings listed as Group One Functions, Group Two Functions, and Group Three Functions refer to programming function groups, not channel groups.

Press the **[FCN]** key repeatedly to view the settings in Channel 0 and then loop back to the **CH 00** entry point.

### Channel 0 settings include:

- Group Password
- Automatic Numeric Identification (ANI)
- Transmitter Time-Out Timer
- Scan Delay Time

---

## QUICK REFERENCE GUIDE - CHANNEL 0

---

### RADIO KEYPAD PROGRAMMING

Group Password

Automatic Numeric Identification (ANI)

Transmitter Time-Out Timer

Scan Delay Time

Priority 1 Channel

Priority 2 Channel

Channel 0 Group One Functions

Battery Saver Inhibit	1- <u>1</u> 2345
Group Scan List	1-1 <u>2</u> 345
Transmit On Priority 1	1-12 <u>3</u> 45
Priority 1 Lock	1-123 <u>4</u> 5
Scan List Lock	1-1234 <u>5</u>

Channel 0 Group Two Functions

User Code Guard Selection	2- <u>1</u> 2345
Busy Channel Operation	2-1 <u>2</u> 345
ANI/DTMF Mode	2-123 <u>4</u> 5

Channel 0 Group Three Functions

Reserved for Future Enhancements	3- <u>1</u> 2345
Backlight on Display Change	3-1 <u>2</u> 345
Backlight on Key Press	3-12 <u>3</u> 45
Alphanumeric/Numeric Display Mode	3-123 <u>4</u> 5

Backlight Duration

Group Label

***Flashing*** number indicates active function.

## CDCSS CODE GUARD VALUES

Codes for the CDCSS Code Guard system may be chosen from the following list. Since there are no EIA standards for the performance or compatibility of CDCSS Code Guard systems it is recommended that an operational test be made on the intended system before wholesale assignments are made. In some cases either or both transmit and receive codes will require an inverted code to operate with existing systems. This can be done during the code programming of the system. Usually systems using direct Unit-to-Unit transmission (systems without mobile relays, repeaters, remote control, etc.) may use codes from the table. Systems with relays, etc., may use code variations for systems control and operational efficiency. The system operator or engineer should be consulted regarding the operational requirement on such systems.

023	065	131	165	245	315	411	466	612	703
025	071	132	172	251	331	412	503	624	712
026	072	134	174	261	343	423	506	627	723
031	073	143	205	263	346	431	516	631	731
032	074	152	223	265	351	432	532	632	732
043	114	155	226	271	364	445	546	654	734
047	115	156	243	306	365	464	565	662	743
051	116	162	244	311	371	465	606	664	754
054	125								

Priority 1 Channel

Priority 2 Channel

Channel 0 Group One Functions: 1-12345

Battery Saver Inhibit	(Function 1)
Group Scan List	(Function 2)
Transmit on Priority 1	(Function 3)
Priority 1 Lock	(Function 4)
Scan List Lock	(Function 5)

Channel 0 Group Two Functions: 2-12345

User Code Guard Selection	(Function 1)
Busy Channel Operation	(Functions 2 & 3)
ANI/DTMF Mode	(Functions 4 & 5)


Channel 0 Group Three Functions: 3-12345

Reserved	(Functions 1 & 2)
Backlight on Display Change	(Function 3)
Backlight on Key Press	(Function 4)
Alphanumeric/Numeric Display Mode	(Function 5)

Backlight Duration

Group Label

### Group Password

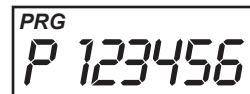

1. After entering Programming Mode the display will show 'PRG CH 00.'
2. Press the **[FCN]** key.
3. The display will indicate the password for the selected group.
  - 4a. If no change is needed for the group password, press the **[FCN]** key to advance to the next field.
  - 4b. To enter a new password, press the **[CLR]** key, then enter a new six-digit password. Press the **[ENT]** key to store the new password and advance to the next field.

## Automatic Numeric Identification (ANI)



1. After the group password is set, the display will indicate the ANI ID number (as many as seven digits may be used). The ID number can be used for either radio management or transmitted as a DTMF tone burst for ANI purposes. The ANI can be enabled or disabled. See "ANI/DTMF Mode" on page 11 of this manual.

2a. If no change is needed for the ID number, press the **[FCN]** key to advance to the next field.

2b. To enter a new number, press the **[CLR]** key and then the number keys. The digits will appear at the right of display and move to the left. Press the **[ENT]** key to store the new ID number and advance to the next field.

## Transmitter Time-Out Timer

After the ID number is set, the display annunciators will indicate 'PRG TX.' This is the duration of the transmitter Time-Out Timer. 0 SEC means the Time-Out Timer is disabled.

Press the **[FCN]** key to advance to the next field if no change is needed.



1. Press the **[PRI]** key to increase the Time-Out Timer duration by 15 seconds, with a maximum of 225 seconds (3 minutes, 45 seconds). Press the **[PRI]** key again to change the duration from 225 seconds to zero.

2. Press the **[CLR]** key to set the Time-Out Timer duration to zero.

3. Press the **[ENT]** key to store the changed setting and advance to the next field.

## CTCSS CODE GUARD VALUES

The CTCSS Code Guard system may be set for any frequency in the range of 67 to 255.9 Hz. However, since most systems adhere to the Electronic Industry Association (EIA) standards, tones should be selected from the following EIA list. In order to insure optimum performance, tone selection for use on the same radio frequency (RF) channel or adjacent channels in the same coverage area should be made from one of the Groups A, B, or C to the maximum degree possible.

Group A		Group B		Group C
67.0 (XZ)	*151.4 (5Z)	71.9 (XA)	146.2 (4B)	74.4
77.0 (XB)	162.2 (5B)	82.5 (YZ)	156.7 (5A)	79.7
88.5 (YB)	173.8 (6A)	94.8 (ZA)	167.9 (6Z)	85.4 (YA)
*100.0 (1Z)	186.2 (7Z)	103.5 (1A)	*179.9 (6B)	91.5 (ZZ)
107.2 (1B)	203.5 (M1)	110.9 (2X)	192.8 (7A)	
114.8 (2A)	218.1 (M3)	*118.8 (2B)	210.7 (M2)	
123.0 (3Z)	233.6	127.3 (3A)	225.7 (M4)	
131.8 (3B)	250.3	136.5 (4Z)	241.8	
141.3 (4A)				

\* 50/60 Hz power distribution systems could cause falsing.

The assignments in a given area shall be made from within one of the Groups: A, B, or C.

**NOTE:** Any new number can be entered at this point by pressing the **[CLR]** key and using the digit keys to enter the new number.



7. Press the **[\*]** key. Connect the cable to the second Clone and download by pressing **[FCN]**.
8. Any number of radios can be coded with different or sequential ID numbers using this technique. The ID number in the permanent memory of the Master radio will remain unchanged as 100.

### Scan List Cloning

When a Master radio downloads to a Clone, the Scan List is also transferred. See the appropriate operating instructions in the Owner's Manual for changing the Scan List.

### Scan Delay Time

After the Time-Out Timer is set, the upper display will indicate 'PRG SCN.' This is the Scan Delay time in seconds.

Press the **[FCN]** key to advance to the next field if no change is needed.



1. Press the **[PRI]** key to increase the scan delay time by .5 seconds, up to 7.5 seconds. Press the **[PRI]** key again to change the time from 7.5 seconds to 0.

2. Press the **[CLR]** key to reset the scan delay time to 0.

3. Press the **[ENT]** key to store the changed setting and advance to the next field.

### Priority 1 Channel

After the Scan Delay is set, the display will indicate 'PRG PR1.' The Priority 1 Channel can be programmed as a fixed channel, tied to the Channel Selector knob, or programmed OFF. If the radio is programmed to transmit on the Priority 1 Channel, transmissions will occur on PR1, if PR1 isn't programmed OFF, when operating in Single or Dual Priority Scan Mode.

If PR1 is a fixed channel, and the **[PRI]** key on the keypad is not locked out, during normal radio operation the user can move the channel selector to a new channel and press the **[PRI]** key to choose a new PR1 channel.



1. Press the **[PRI]** key to cycle through the priority channel options, or enter a fixed priority channel using the number keys.

Setting the channel to ON ties the PR1 channel to the Channel Selector knob. Pressing **[CLR]** or the **[0]** key turns the PR1 channel OFF.

2. Press the **[ENT]** key to store the new priority channel and advance to the next field.



## Priority 2 Channel

After the Priority 1 Channel is set, the display will indicate 'PRG PR2.' The Priority 2 Channel can be programmed as a fixed channel, tied to the Channel Selector knob, or programmed OFF.

The PR2 channel cannot be altered during normal radio operation.

The image shows a digital display with 'PRG' in the top left corner. The main display area shows 'PR2' followed by 'OFF'.

1. Press the **[PRI]** key to cycle through the priority channel options, or enter a fixed priority channel using the number keys.

Setting the channel to ON ties the PR2 channel to the Channel Selector knob. Pressing **[CLR]** or the **[0]** key turns the PR2 channel OFF.

2. Press the **[ENT]** key to store the new priority channel and advance to the next field.

## Old-Style BK Priority Scan

The radio can be programmed to mimic the Old-Style BK Priority Scan Modes as follows:

Mode	PR1	TX on PR1	PR2
A	On	No	Off
B	Fixed Channel #	No	Off
C	Fixed Channel #	Yes	Off

See "Priority Scan" in the Owner's Manual for operational details of the Old-Style BK Priority Scan Modes.

## Channel 0 Group One Functions

The image shows a digital display with 'PRG' in the top left corner. The main display area shows '1--12345'.

After the Priority 2 Channel is set the display will show 'PRG 1-12345.' This is a group of five individual functions that can be enabled or disabled.

When a function is enabled, the corresponding number in the display will flash. When the function is disabled the number is steady. If you wish to change the function from enable to disable or vice versa, press the number key corresponding to that function.

**NOTE:** To stop the 'FAIL' Mode, press **[CLR]**, turn off both radios, and try again, starting with Step 1 on the previous page.

## Special Cloning Instructions

It is possible to change Channel 0 values on the Master radio, hold them in a temporary memory, and download them to the Clone without actually entering them into the permanent memory of the Master radio. This is convenient for sequential identification numbers used to identify a series of portables in a radio system.

Assuming that the frequencies, Code Guard values, and other CH 0 values are common for all radios in the system, but that the radio identification number should be unique to each radio, the following method would be used to clone additional radios for the system.

1. Program the Master radio with all frequencies, Code Guard values, and Channel 0 values that will be common to all radios to be cloned.

2. Advance the display to show the Master radio's ID number - for example, 100.

3. Press the **[CLR]** key; press 125. Do not press the **[ENT]** key. Now 125 is in temporary memory.

The image shows a digital display with 'PRG' in the top left corner and 'ID' in the top right corner. The main display area shows '125'.

4. Press the **[\*]** key, connect the cable to the radios and download to the Clone by pressing the **[FCN]** key. ID number 125 is now stored in permanent memory of the Clone.

5. After download, press the **[CLR]** key on the Master radio. Disconnect the Clone. The Master radio display will show that 125 is still being held in the temporary memory of the Master radio.

6. Press the **[PRI]** key. This will increment the ID number one digit to 126.

The image shows a digital display with 'PRG' in the top left corner and 'ID' in the top right corner. The main display area shows '126'.



5. Put the Master radio in Programming Mode by pressing and holding the master switch then pressing and holding the **[FCN]** key until the display shows '--- ID.' Enter the password of the selected group. The display shows 'PRG CH 00.'

6. Review the values programmed in the radio by pressing the **[FCN]** or **[ENT]** key at each CHXX prompt. Any required changes must be made now.

7. Connect the other plug of the cable to the side connector of the radio you want to clone.

8. Turn on the clone and set it to the desired channel group.



9. Press the **[\*]** key on the Master radio keypad. The display will flash 'PROG' signifying that the radio is ready to download its program to the clone.



10. Press the **[FCN]** key on the Master radio keypad. The display will flash 'CLONE' while information from the master is downloaded to the clone.


11. If the download was successful, the display on the master will resume flashing 'PROG.'

- To clone another channel group, turn off both radios and go back to Step 3, changing the channel group as required.
- If cloning is finished, turn off the clone and disconnect the cloning cable. Normal radio operation will occur when you turn on the clone.



12. If the download was not successful, the master will display 'FAIL' and multiple beeps will follow. Failure of downloading can be due to:

- Improper connection
- Failure to turn on the clone
- Setting the clone in Programming Mode
- Group 'locked' by PC Programming

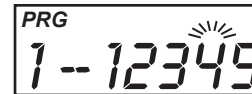

**EXAMPLE:** If function 4 (Priority 1 Lock) is disabled, the 4 in the display will not be flashing. If the **[4]** key is pressed, the 4 in the display will flash, signifying that Priority 1 Lock is enabled. A subsequent press of the **[4]** key will disable Priority 1 Lock.

### 1. Battery Saver Inhibit



When function 1 is enabled (flashing) the battery saver is turned off. The battery saver should be turned off only for getting proper voltage readings during service or for systems requiring fast squelch attack time.

**NOTE:** BK Radio current drain and battery life specifications are based on performance with the battery saver on.

### 2. Group Scan List




When function 2 is enabled (flashing) the current group will be scanned when the radio is operating in Group Scan Mode.

### 3. Transmit On Priority 1



When function 3 is enabled (flashing) transmissions will occur on PR1, if PR1 isn't programmed OFF, when operating in Single or Dual Priority Scan Mode. To simulate BK Radio's Old-Style Priority Mode C, Transmit on Priority 1 must be enabled, with Priority 2 channel set to OFF.

### 4. Priority 1 Lock

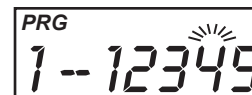

When function 4 is enabled (flashing) the **[PRI]** key is locked out in the Operating Mode. The user will not be able to change the designation of the Priority 1 Channel.

When function 4 is disabled (steady) the user will be able to change the channel that is designated as Priority 1 Channel. See "Dual Priority Scan" in the Owner's Manual.

## 5. Scan List Lock



When function 5 is enabled (flashing), the user will not be able to change the channels in the Scan List. When disabled (steady), the user can enter or delete channels from the Scan List. See "Change the Scan List" in the Owner's Manual.

## Store Group One Settings

Once each function 1-5 is set as desired, you can store the changes, discard the changes, or disable all 5 functions.

Once each function 1-5 is set as desired, you can store the changes, discard the changes, or disable all 5 functions.

Press the **[CLR]** key to disable all Group One functions (steady).

Press the **[ENT]** key to store new Group One settings into memory and advance to the next field.

Press the **[FCN]** key to advance to the next field without saving changes.

## Channel 0 Group Two Functions



After Group One functions are set, the display will show 'PRG 2-12345' for Group Two functions. As with Group One functions, the enabled function numbers will flash. The disabled functions remain steady.

### 1. User Code Guard Selection




When function 1 is enabled (flashing) the user will be able to press the keypad to independently select the Code Guard values that are programmed into Channels 1 through 16 while operating on any Channel 1 through 16. When function 1 is disabled the user will be unable to use the keypad for Code Guard selection. See "User Selected Code Guard" in Owner's Manual.

## Program Another Channel



At the starting point for Channel 1, the display will show 'PRG CH 01'. Press the number keys for another channel number to gain access to the frequencies, etc. for that channel. Each channel is then programmed using the same steps described for Channel 1.

## Exit Programming Mode

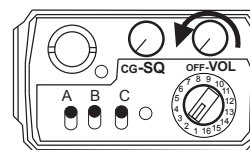


1. Rotate the OFF-VOL knob counterclockwise to the OFF position.
2. The radio will be in normal Operating Mode the next time it is turned on.

## CLONING RADIO SETTINGS

Any "Master" radio (a DPHx with the desired radio frequencies and settings) is capable of transferring its program to another DPHx or "slave" radio. The radio receiving the program is referred to as the "clone." The LAA0700 or E/GCC cloning cable will be required in the following procedure. Contact your BK Radio dealer for information on cloning between DPHx radios and other BK Radio products.

NOTE: Some groups may be "locked" by PC programming to prevent them from being overwritten. Only "unlocked" groups will accept incoming clones.

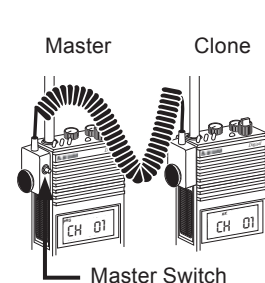


1. Make sure the battery packs for both radios are charged.

2. Attach the master switch end of the cloning cable to the side connector of the Master radio.

NOTE: One plug of the cloning cable has a push-button master switch. This plug must be attached to the Master radio.

3. Turn on the Master radio.
4. Select the group to be cloned from the Master radio.

## Key Selection Setting (Encrypted Radios Only)

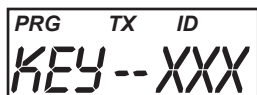

In radios equipped with DES/AES encryption, the next field is the Encryption Key Selection setting. This selection will not appear in radios that do not have the encryption option.

The upper line of the display will show 'PRG TX ID', and the lower part of the display will show 'KEY-XXX', where XXX can be 'SEL', for selectable or 'LCK', for locked.

If the selection is set to Selectable, the encryption key can be selected via the radio's keypad. If the selection is set to Locked, this channel will always use the encryption key selected in the previous setting.

For information on selectable key operation refer to your radio's owner/user manual.

1. If this setting is correct, press the **[FCN]** key to advance to the next field.
2. If a new mode is desired, press the **[PRI]** key to cycle through the mode settings. Press **[ENT]** to store the new mode and automatically advance to the next field.

## Channel Label



The last field is the channel label.

1. If this label is correct, press the **[FCN]** key to proceed to the entry point.
2. If a new channel label is desired, follow the instructions under "Group Labels" on page 14 of this manual.

## Review Channel Settings

After the channel label is set, the display will return to the Channel 1 starting point. If you wish to review the Channel 1 settings, subsequent pressing of the **[FCN]** or **[ENT]** key will show each value and then return to the Channel 1 starting point.

## 2 & 3. Busy Channel Operation



Functions two and three are used to set Busy Channel operation. There are three types of busy channel operation available. They are described more fully under "Busy Channel" in the Owner's Manual.

Busy Channel Modes include:

**Busy Channel Indicator** - The yellow LED illuminates when a signal is received on the channel selected, with or without the programmed receive Code Guard setting.

**Busy Channel Lockout** - The yellow LED illuminates and the transmitter PTT is disabled when a signal is received without the programmed receive Code Guard setting.

**Busy Channel Override** - This function is similar to Busy Channel Lockout except the transmitter PTT can be activated by rotating the Squelch knob clockwise off the Code Guard detent.

To set Busy Channel operation, use the following chart:

Busy Channel	Function 2	Function 3
Indication	Disable (Steady)	Enable (Flashing)
Lockout	Enable (Flashing)	Enable (Flashing)
Override	Enable (Flashing)	Disable (Steady)

## 4 & 5. ANI/DTMF Mode



When function 4 is enabled (flashing) the ANI ID number will be transmitted (as a DTMF tone sequence) with each press of the PTT switch. See "Automatic Numeric Identification (ANI)" on page 6 of this manual for instructions on setting the ANI number.

When function 5 is enabled (flashing) the keypad becomes active for manual DTMF operation.

When functions 4 and 5 are both enabled (flashing) the ANI tone sequence will be transmitted only after the **[ENT]** key is pressed while the transmit

PTT switch is activated. A sidetone of the ANI number transmitted will also be heard through the speaker.

### Store Group Two Settings

Once each function 1-5 is set as desired, you can store the changes, discard the changes, or disable all 5 functions.

Press the **[CLR]** key to disable all Group Two functions (steady).

Press the **[ENT]** key to store new Group Two settings into memory and advance to the next field.

Press the **[FCN]** key to advance to the next field without saving changes.

### Channel 0 Group Three Functions



After Group Two functions are set, the display will show 'PRG 3-12345' for Group Three functions. As with Group One and Group Two functions, the enabled function numbers will flash. The disabled functions remain steady.

1. **Function 1 is reserved for future enhancements.**
2. **Function 2 is reserved for future enhancements.**
3. **Backlight On Display Change**




When function 3 is enabled (flashing), the display backlight will illuminate each time the display receives input. This includes displayed changes in the selected channel or scan channel, and the PR, TX, and SCN annunciators. The display will not illuminate if backlight duration is set to LITE OFF. See "Backlight Duration" on the next page.

show 'SEC-XXX', where XXX can be 'CLR' to always transmit a clear signal, 'ENC' to always transmit an encrypted signal or 'SW' where the transmission can be selected via a programmed switch.

**NOTE:** To use the 'SW' selection one of the radios toggle switches or **[FCN]** menu selection must be programmed with for the 'Transmit Secure' selection. These settings require the use of the PC Radio Editor LAA0744X.

1. If the mode is correct, press the **[FCN]** key to advance to the next field.
2. If a new mode is desired, press the **[PRI]** key to cycle through the mode settings. Press **[ENT]** to store the new mode and automatically advance to the next field.

### Encryption Key (Encrypted Radios Only)

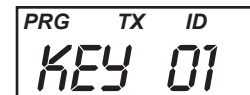

In radios equipped with DES/AES encryption, the next field is the Encryption Key setting. This selection will not appear in radios that do not have the encryption option.

The upper line of the display will show 'PRG TX ID', and the lower part of the display will show 'KEY-XX', where XX can be '01' to '32'. This is the encryption key assigned to the channel.

**NOTE:** Available encryption keys must be loaded into the radio using a compatible keyloader and enabled via the PC Radio Editor LAA0744X.

1. If the key is correct, press the **[FCN]** key to advance to the next field.
2. If a new key is desired, press the **[PRI]** key to increase the key number by 1 or use the keypad numbers to select the desired key number. Press **[ENT]** to store the new mode and automatically advance to the next field.

## Transmit NAC



The display shows 'PRG TX ID CG' at the top and 'NAC XXXX' at the bottom.

The next field is the Network Access Code (NAC) for Channel 1 transmit. This value is only used if the transmit mode selected was Digital or Mixed, or if User Code Guard is activated. The upper part of the display will show 'PRG TX ID CG'. The lower part of the display will show 'NACXXXX' where XXXX is the Network Access Code in decimal.

1. If the NAC is correct, press the **[FCN]** key to advance to the next field.
2. If a new NAC is desired, press the **[CLR]** key followed by the digits of the desired NAC. Then press the **[ENT]** key to store this NAC and automatically advance to the next field.

## Talk Group ID




The display shows 'PRG TX ID' at the top with a phone icon and 'TG XXXXX' at the bottom.

The next field is the Talk Group ID. This value is only used if the transmit mode selected was Digital or Mixed, or if User Code Guard is activated. The upper part of the display will show 'PRG TX ID' and the **phone icon**. The lower part of the display will show 'TGXXXXX' where XXXXX is the Talk Group ID.

1. If the displayed value is correct, press the **[FCN]** key to advance to the next field.
2. If you wish to change it, press the **[CLR]** key followed by the digits for the new TGID, then **[ENT]** to store the new value and automatically advance to the next field.

## Secure Selection (Encrypted Radios Only)

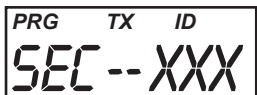

The display shows 'PRG TX ID' at the top and 'SEC -- XXX' at the bottom.

In radios equipped with DES/AES encryption, the next field is the Secure Transmit setting. This selection will not appear in radios that do not have the encryption option.

The upper line of the display will show 'PRG TX ID', and the lower part of the display will

## 4. Backlight On Key Press



The display shows 'PRG' at the top and '2-12345' at the bottom with a backlight icon above the '5'.

When function 4 is enabled (flashing), the display backlight will illuminate each time a key is pressed, even if pressing the key has no other effect. The display will not illuminate if backlight duration is set to LITE OFF. See "Backlight Duration" on the next page.

## 5. Alphanumeric/Numeric Display Mode



The display shows 'PRG' at the top and '2-12345' at the bottom with a backlight icon above the '5'.

When function 5 is enabled (flashing), the display operates in Alphanumeric Mode, enabling the display of channel labels. When disabled (steady), the display operates in Numeric Display Mode. This mode displays channel numbers instead of labels.

## Store Group Three Settings

Once each function 1-5 is set as desired, you can store the changes, discard the changes, or disable all 5 functions.

Press the **[CLR]** key to disable all Group Three functions (steady).

Press the **[ENT]** key to store new Group Three settings into memory and advance to the next field.

Press the **[FCN]** key to advance to the next field without saving changes.

## Backlight Duration



The display shows 'PRG' at the top and 'LITE OFF' at the bottom.

After Group Three functions, the display will show the current backlight duration setting. Available settings are LITE OFF, 1 SEC ON, 1-second increments up to 6 SEC ON and LITE ON.



The display shows 'PRG' at the top and '1 SEC ON' at the bottom.

**NOTE:** Excessive battery drain will result if LITE ON is set and used for extended periods of time.

If no change is needed, press the **[FCN]** key to advance to the next field.



The display shows 'PRG' at the top and 'LITE OFF' at the bottom.

Press the **[CLR]** key to set backlight duration to zero and display LITE OFF.



Press the **[PRI]** key to increase backlight duration by 1 second increments from LITE OFF, to 1 SEC ON, 2, 3, 4, 5, 6 SEC ON, LITE ON (illumination remains on constantly) then back to LITE OFF.

Press the **[ENT]** key to store changes and advance to the next field.

Press the **[FCN]** key to advance to the next field without storing changes.

## Group Labels



After the backlight duration setting, the display will show the current label for the channel group. Each channel group can have a label of up to eight characters or spaces. The characters can include 0-9, A-Z, -, \*, \$, /, +, %, \, |, \_, <, >, h, or blank.

If no change is needed, press the **[FCN]** key to go back to the starting point for Channel 0 settings.

Press the **[CLR]** key to erase the current label. Press the **[CLR]** key a second time to restore the current label.

**NOTE:** Special software available from BK Radio lets you enter group labels and channel labels from a computer. Contact your dealer for information.

### Changing The Group Label

Press the **[CLR]** key. The display becomes blank.

Press number keys to enter 0-9 in positions 1-7. The digits start in position 7, then move left.

Press the **[#]** key to toggle a decimal on or off to the right of the character in position 7.

The decimal moves left with the number in position 7 as new numbers are entered.

Use the following steps to enter a number in position 8 or characters in positions 1-8:

- a. Press the **[PRI]** key repeatedly to cycle through characters 0-9, A-Z, -, \*, \$, /, +, %, \, |, \_, <, >, h, blank, then back to the start again.

1. If the mode is correct, press the **[FCN]** key to advance to the next field.

2. If a new mode is desired, press the **[PRI]** key to cycle through the mode settings. Press **[ENT]** to store the new mode and automatically advance to the next field.


## Transmit Analog Code Guard



The next field is the Analog Code Guard value for Channel 1 transmit. This value is only used if the transmit mode selected was Analog or Mixed, or when User Code Guard is activated. The upper display will show 'PRG TX CG' and the lower part of the display will show the programmed guard.

1. If the displayed value is correct, press the **[FCN]** key to advance to the next field.

2. If a new value is desired, press the **[CLR]** key to reset the display to 0.0. Press the number keys 0 thru 9 to enter a CTCSS Code Guard value. See "CTCSS Code Guard Values" on page 27 of this manual. Press the **[ENT]** key to store the new value and automatically advance to the next field.

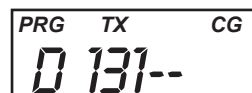


3. To enter a CDCSS Code Guard value press the **[#]** key, causing the letter 'D' to appear followed by three zeros. Enter the desired code using keys 0 thru 7 (keys 8 & 9 do not respond). See "CDCSS Code Guard Values" on page 28 of this manual. Pressing the **[PRI]** key after the three-digit code has been entered allows the code to be inverted (a dash appears to the right of the number). When the displayed value is correct, press the **[ENT]** key to store the Code Guard value and automatically advance to the next field.

The lower part of the display will show 'SQL-XXX' where XXX is 'NRM' for normal squelch or 'SEL' for selective squelch.

Normal squelch opens on a matching NAC and any Talk Group ID or Individual Unit ID. Selective squelch requires the correct NAC and the correct Talk Group ID, and for Unit-to-Unit calls, requires a matching Individual ID.

1. If the Squelch Mode is correct, press the [FCN] key to advance to the next field.
2. If a different Squelch Mode is desired, press the [PRI] key to toggle the setting. Then press the [ENT] key to store this setting and automatically advance to the next field.

## Transmit Frequency

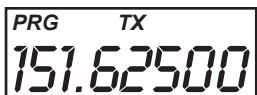


The display shows 'PRG TX' in the upper part and '151.62500' in the lower part.

The upper part of the display will show 'PRG TX.' This is the transmitter frequency for Channel 1.

1. If it is correct, press the [FCN] key to advance to the next field.
2. If a new frequency is desired, press the [CLR] key followed by the digits of the desired frequency. Then press the [ENT] key to store this frequency and automatically advance to the next field.
3. If you want to operate this channel as a receive-only channel, press the [CLR] key (setting the display to 0.0) followed by the [ENT] key. The transmitter will be locked off for this channel.

## Transmit Mode

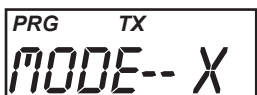

The display shows 'PRG TX' in the upper part and 'MODE--X' in the lower part.

After the transmit frequency is set, the upper part of the display will show 'PRG TX', and the lower part of the display will show 'Mode-X', where X can be 'A' for Analog Mode, 'D' for Digital Mode, or 'M' or Mixed Mode.

If you pass the desired character, press the [PRI] key repeatedly until you return to the start and reach that character again.

- b. Press the [FCN] key to shift the display left by one position, leaving position 8 blank.
- c. Press the [PRI] key repeatedly to enter the next character, or press the [FCN] key a second time to enter a blank space.
- d. To abandon changes, press the [CLR] key, restoring the original label.

Press the [ENT] key to store changes and go back to the starting point for Channel 0 settings.

## Review Channel 0 Values

Press the [FCN] key repeatedly to display each value in Channel 0, and then return to the Channel 0 starting point.

---

## CHANNEL SETTINGS

---

At the starting point for Channel 0, the display shows 'PRG CH 00.' At this point, a channel number can now be pressed to allow access to per-channel variables such as frequencies and Code Guard values for that channel.



The display shows 'PRG CH 01'.

Press [1] and the display will show 'PRG CH 01.' This is the starting point for entering channel 1 values.

## Channel Bandwidth



The display shows 'PRG CH 01N'.

At this point, pressing the [#] key will toggle the channel's bandwidth setting. An 'N' will appear to the right of the channel number when the channel is set for 12.5/15 kHz channel bandwidth using the narrow band receiver filter. When there is no 'N' the channel is set for 25/30 kHz channel bandwidth.



## Receive Frequency



PRG RX  
151.62500

1. Press the **[FCN]** key and the upper part of the display will show 'PRG RX.' This is the receive frequency for channel 1 (in MHz).
2. If the displayed frequency is correct, press the **[FCN]** key to advance to the next field.
3. If a new frequency is desired, press the **[CLR]** key followed by the digits of the desired frequency. Then press the **[ENT]** key to store this frequency and automatically advance to the next field.

## Receive Mode



PRG RX  
MODE -- X

After the receive frequency is set, the upper part of the display will show 'PRG RX', and the lower part of the display will show 'Mode-X', where X can be 'A' for Analog Mode, 'D' for Digital Mode, or 'M' for Mixed Mode.

1. If the mode is correct, press the **[FCN]** key to advance to the next field.
2. If a new mode is desired, press the **[PRI]** key to cycle through the mode settings. Press **[ENT]** to store the new mode and automatically advance to the next field.

## Receive Analog Code Guard



PRG RX CG  
000.0

The next field is the Analog Code Guard value for Channel 1 receive. This value is only used if the receive mode selected was Analog or Mixed, or if User Code Guard is activated. The upper display will show 'PRG RX CG' and the lower part of the display will show the programmed guard.

**NOTE:** 0.0 indicates carrier squelch operation (no Code Guard).

1. If the displayed value is correct, press the **[FCN]** key to advance to the next field.
2. If a new value is desired, press the **[CLR]** key to reset the display to 0.0. Press the number


keys 0 thru 9 to enter a CTCSS Code Guard value. See "CTCSS Code Guard Values" on page 27 of this manual. Press the **[ENT]** key to store the new value and automatically advance to the next field.



PRG RX CG  
0 131--

3. To enter a CDCSS Code Guard value press the **[#]** key, causing the letter 'D' to appear followed by three zeros. Enter the desired code using keys 0 thru 7 (keys 8 & 9 do not respond). See "CDCSS Code Guard Values" on page 28 of this manual. Pressing the **[PRI]** key after the three-digit code has been entered allows the code to be inverted (a dash appears to the right of the number). When the displayed value is correct, press the **[ENT]** key to store the Code Guard value and automatically advance to the next field.

## Receive NAC

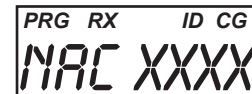


PRG RX ID CG  
NAC XXXX

The next field is the Network Access Code (NAC) for Channel 1 receive. This value is only used if the receive mode selected was Digital or Mixed, or if User Code Guard is activated. The upper part of the display will show 'PRG RX ID CG'. The lower part of the display will show 'NACXXXX' where XXXX is the Network Access Code in decimal.

1. If the NAC is correct, press the **[FCN]** key to advance to the next field.
2. If a new NAC is desired, press the **[CLR]** key followed by the digits of the desired NAC. Then press the **[ENT]** key to store this NAC and automatically advance to the next field.

## Squelch Mode

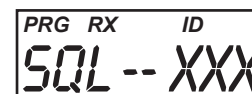

PRG RX ID  
SQL -- XXX

The next field is the Receiver Squelch Mode for Channel 1. This setting is only used if the receive mode selected was Digital or Mixed, or if User Code Guard is activated. The upper part of the display will show 'PRG RX ID'.