

# MatrikonOPC Server for Simulation Quick Start Guide

This document is designed to get you up and running on MatrikonOPC Server for Simulation as quickly as possible.

## **Getting Started**

You must have already installed the product to use this *Quick Start Guide*. For installation instructions, refer to the *Installation* section in the *MatrikonOPC Server for Simulation User's Manual* that accompanies the product software.

## Working With MatrikonOPC Server for Simulation

#### To launch MatrikonOPC Server for Simulation:

- 1. Click on the Windows **Start** button and select **Programs** -> **MatrikonOPC->Simulation**, and then select **MatrikonOPC Server for Simulation**.
- 2. The MatrikonOPC Server for Simulation Configuration window appears.

**Note:** The MatrikonOPC Server for Simulation does not require any configuration. However, new aliases can be added, or security settings can be modified, after the initial install.

#### To insert a new alias, perform the following steps:

- 1. Open the MatrikonOPC Server for Simulation Configuration window, as described in the To launch MatrikonOPC Server for Simulation procedure above.
- 2. Click on the Alias Configuration node in the Current Configuration panel to open the Alias Configuration panel.
- Right-click your mouse and select the Insert New Alias option, or
   Press the Insert button on the keyboard, to launch the Insert New Alias window.
- 4. Fill in a name for the alias, and enter a valid item path. The item path can be found by browsing the server's address space (use the ellipsis button next to this field).
- 5. Save this alias when finished. It will now be visible to OPC clients under the **Configured Aliases** heading.
- 6. For more detailed scaling options, please consult the *MatrikonOPC Server for Simulation User's Manual*.

#### To configure OPC Security, perform the following steps:

- Click on the Windows Start button and select Programs -> MatrikonOPC -> Simulation, and then select Tag Security.
- 2. Enter the server's security password. By default, this is *MatrikonOPC*.
- 3. To add a new user, click on the **Add User** icon, and select the user type, location, and user name.
- 4. Select a path in the server's address space, and assign permissions (*Browse*, *Add*, *Read*, *Write*) to this path. Repeat as required. Click on the **OK** button.



- 5. To add a new group, click on the **Add Group** icon, and select the group type, location, and group name.
- 6. Select a path in the server's address space, and assign permissions (*Browse*, *Add*, *Read*, *Write*) to this path. Repeat as required. Click on the **OK** button.
- 7. When finished, click on either the **OK** or **Apply** button to save the changes to the server's security configuration.
- 8. For more detailed security configurations, please consult the *MatrikonOPC Server for Simulation User's Manual*

### For More Information

Should you require more details, please refer to the *MatrikonOPC Server for Simulation User's Manual*. For assistance, please contact MatrikonOPC Support.

The MatrikonOPC Customer Services department (www.opcsupport.com) is available 24 hours a day, seven days a week. Contact MatrikonOPC Support using the information below, or send an email (support@MatrikonOPC.com).

For Monday to Friday **daytime support** requests, contact MatrikonOPC Support using the following regional phone numbers.

Region	Office Hours	Contact Information
North America UTC/GMT -7 hours (MST)	8:00am-5:00pm	+1-877-OPC-4-ALL
Europe /Africa * UTC/GMT +1 hours (CET)	9:00am-5:00pm	+49-221-969-77-0 (Request OPC Support)
Middle East * UTC/GMT +3 hours	9:00am-5:00pm	+973-174-65363
Australia/Asia * UTC/GMT +10 hours (AEST)	9:00am-5:00pm	+61-2-4908-2198 (Request OPC Support)

<sup>\*</sup> Toll-free regional numbers coming soon!

For **after-hours support** in all regions, please use either of the following numbers. There is no extra charge from MatrikonOPC for calling their after-hours support numbers.

Region	Contact Information	
AII	+1-780-231-9480	
All	+1-780-264-6714	