 


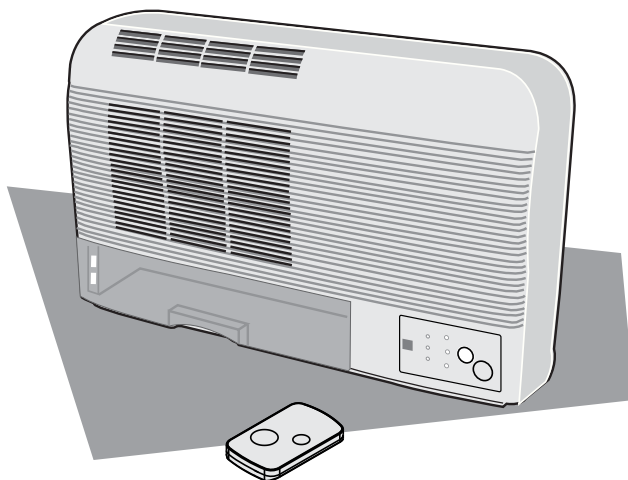

USER GUIDE & ENERGY SAVING TIPS

Dehumidifier Model: DCW10



Read This Guide

Inside you will find many helpful hints on how to use and maintain your dehumidifier properly. Just a little preventative care can save you money and prolong the life of your unit.

Thank you for choosing DCW10.

ECOAIR TECHNICAL SUPPORT
UK TEL: 0845 388 0007
EMAIL: technical@ecoair.org

YOUR DEHUMIDIFIER

Read and follow all the instructions even if you feel you are familiar with the product , and find a place to keep it handy for future reference.

For your convenience record the model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the Service and Warranty information included in this manual.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use may draw significantly less power.

IMPORTANT INSTRUCTIONS

Do not install and use your dehumidifier before completely reading these instructions. This will help you optimize the operation of your dehumidifier.

The following advice and instructions should be followed closely:

1. Your unit must always be used in an upright position because it contains a compressor.
2. After unpacking your unit, place the unit upright to allow the cooling agent to stabilize, and wait 2 hours before use.
3. This product must not be disposed with domestic waste. This product has to be disposed of at an authorized place for recycling of electrical and electronic appliances.
- 4 The appliance can be installed in the bathroom but requires specialist installation with regard to power supply. Use a qualified electrician at all times.
5. The appliance should be installed in accordance with national wiring regulations and must be positioned so that the plug is accessible.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Failure to comply with these instructions may damage the unit and will invalidate the warranty.



WEE/EC2601UR

Wiring Instructions: Should it be necessary to change the plug please note the wires in the mains lead are coloured in accordance with the following code:

BLUE - NEUTRAL
BROWN - LIVE
GREEN AND YELLOW - EARTH

 
As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is the **LIVE** and must be connected to the terminal which is marked with the letter **L** or coloured **RED**.
3. The **GREEN/YELLOW** is the **EARTH** and must be connected to the terminal which is marked with the letter **E** or \oplus or coloured **GREEN OR GREEN/YELLOW**.
4. Always ensure that the cord grip is positioned and fastened correctly.

If a **13A (BS 1363)** fused plug is used it must be fitted with a **13A** fuse. If in doubt consult a qualified electrician.

Wiring for a 13 Amp Plug (BS1363)

Please note. The Earth Terminal is marked with the letter **E** or \oplus Earth Symbol.

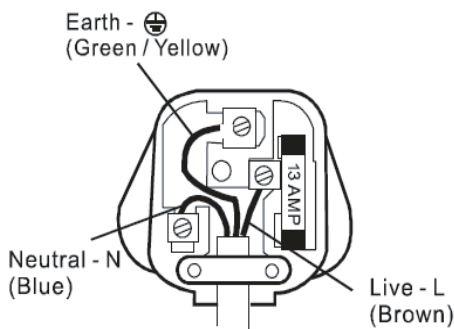

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

WARNING - This appliance is intended for use in a domestic environment and light office use only. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injury to person or property.

 
 
When using electrical appliances, basic safety precautions should always be followed:

1. Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. Return to an authorized service facility for examination and repair.
2. This unit should always be kept in an upright position to avoid any damage. The appliance must be placed on a level flat surface or mounted upright during operation.
3. When wall-mounted be sure the mounting plate is fixed firmly and horizontally. The wall must be rigid and strong enough to support the mounting plate and the unit.
4. Check the household voltage to ensure it matches the units rated specification before operating.
5. Operate this unit in an ambient temperature between 5°C and 35°C.
6. Ensure that the air inlets and outlets are not blocked or covered.
7. Do not place the unit too close to curtains or other objects - min 40cm.
8. Never place anything on top of the unit and do not cover with any kind of material while in use.
9. This product is intended for domestic and light office use ONLY and not for commercial, industrial or outdoor use.
10. To protect against electrical shocks, do not immerse unit, plug or cord in water, or spray
11. Always unplug the unit when not in use or moving location. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
12. Always empty the water tank before storing the unit away.
13. Close supervision is necessary when any appliance is used by or near children and pets. Do not let children play with the drain hose or the water tank.
14. Do not run the power cord under carpeting, or cover with rugs or runners. Arrange the cord away from areas where it may be tripped over.
15. Never operate or store the unit in direct sunlight.
16. To repair the unit, take it to a qualified service engineer. Repairs carried out by unqualified people may cause damage to the unit or injury to persons or property and void the warranty.
17. Where possible, avoid the use of an extension cable as they may overheat and cause a risk of fire. Only use an extension cord after ensuring it is in perfect condition.
18. Do not use the unit without the air filter.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE AND READ THESE IMPORTANT SAFETY INSTRUCTIONS

HOW TO USE YOUR DEHUMIDIFIER

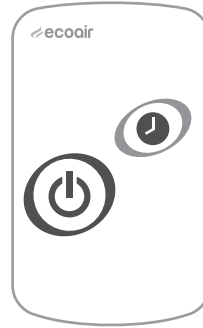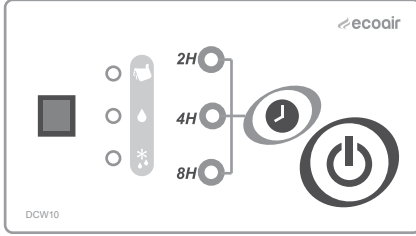

On / Off

Press to run or stop the machine.

Timer

Press to set the time when the machine is intended to stop. Choose from 2, 4 and 8 hours. Hold Timer down if required to run continuously.

Indicators



" FULL" indicator: it lights up when the tank is full of water for disposal.
Please pour out water and restore the tank.

 
"DEHUMIDIFY" indicator: it lights up to indicate the unit running dehumidification.

"DEFROST" indicator: blinks when defrosting. It will automatically return to dehumidification.

Installing remote control battery

First installation or replacing battery:

- 1) Remove the 2 screws to release the battery cover from back of the remote.
- 2) Insert the new battery with (+) pole up.
- 3) Fasten the cover.

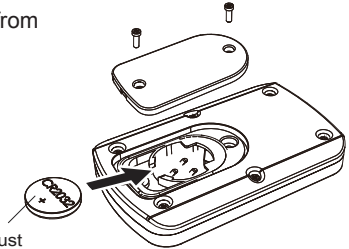

Battery + pole must face outwards

 
- One CR2032 battery is required.
- Signal will fail when the battery needs replacing. Battery life is approximately six months but cannot be guaranteed (due to the length of the the product could have been held in stock).
- Incorrect handling of battery may cause electric shock, fire, fluid leakage, heat or explosion. Do not short-circuit, disassemble, heat it or burn it. Remove when not in use for long periods.

WALL-MOUNTING INSTRUCTION

This dehumidifier can be hung on a wall or stand on a flat surface. It is suggested to hang it on the wall with more than 150cm above ground, so that children do not interfere with it.


Drill two holes 20mm deep, 6mm diameter for wall plugs (the distance must same as the plate), then fit the plate with screws in horizontally.

Fit this plate on the wall

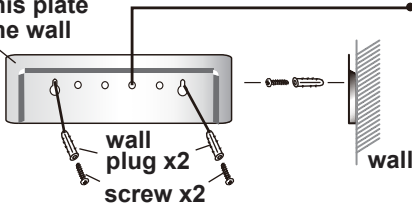


Be sure to fix it firmly. You can also use other screws or nails to fix into the additional holes in the plate. Fix them firmly to avoid losing, falling and causing injury.

 Fit on the wall horizontally

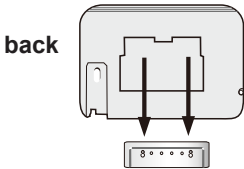

Hang the machine

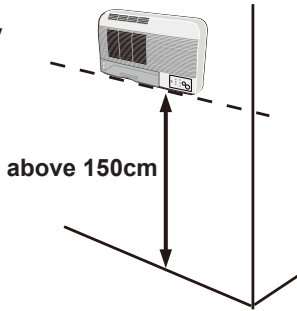 


IMPORTANT

When installing in a bathroom or toilet the plug must be removed and the connection made by ELECTRICAL SPUR. This must be performed by a qualified electrician to avoid personal injury.

CHARCOAL FILTER

The activated charcoal filter comes with the unit (packed with the user manual). First pull out the filter frame on the unit (refer to page 7).

 Unpack the charcoal filter, insert the charcoal filter into the filter frame and refit into the unit.

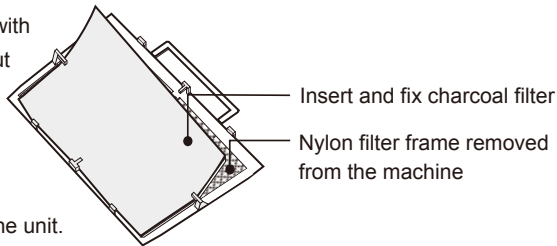

FIT THE TANK

 
The tank must be fitted properly. When the tank is full or is not in place, the " FULL " lights indicator will illuminate.

If you need a continuous drain, follow the instructions on page 6.


TO EMPTY THE TANK

When the tank is full, the " FULL " indicator lights will illuminate and the unit will stop. Don't remove the tank immediately if the machine is still running or just stopping. This may cause some water to drip.


To remove the tank, hold the tank grip then pull it out and hold it with two hands carefully. After pouring out the water, clean the tank and restore in place.

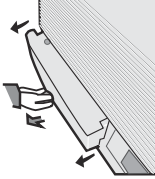

To pull out

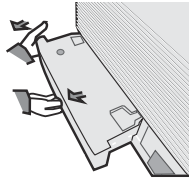 

To hold with two hands

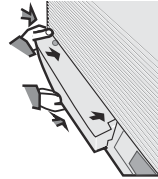 


To restore after pouring

TO DRAIN WATER (Continuous Drainage)


Water can be bypassed the tank by using the hose provided.

 Use a screwdriver to remove the knock-out at the back. Attach the hose to the connector through the hole. The hose should lead to the drain with no sharp bends and in a downward slope.

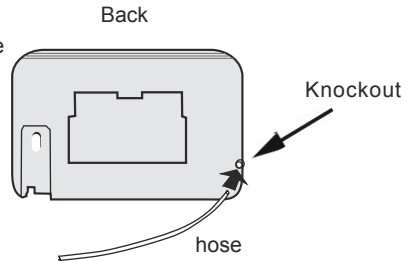

TO START

 Don't cover the air vents.

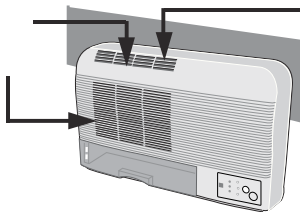

Do not insert small objects into the vents to avoid damage

Place the unit on a stable, horizontal surface, or fit on a level wall, otherwise water may leak.

TO MOVE

Unplug the cord and empty the water tank before moving the unit. Remove and reinstall the bracket for hanging the unit to your new location. Before operating the unit, make sure the unit is settled horizontally and the tank is secure in the unit.

 
Cleaning the filter

Tip: Clean your filter every 2 weeks to prolong the life of your dehumidifier.

How to Clean


If the filter is covered with dust, the airflow and the performance of the unit will be affected. Check the filter periodically.

1. Turn off the unit and remove the filter from the unit.
2. Vacuum the nylon filter or wash it with clean water and drip dry it.
3. Replace the activated charcoal filter after using it for 3 or 6 months when the fibre side has changed from white to a dark colour.

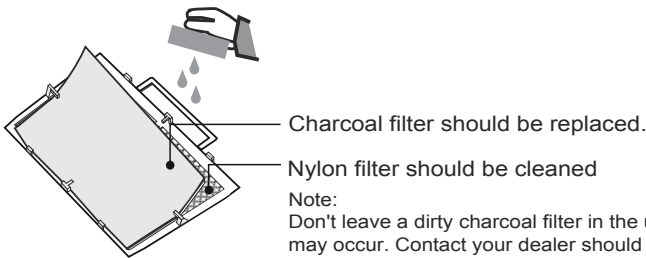

Note:

 Don't leave a dirty charcoal filter in the unit or malfunction may occur. Contact your dealer should you want a new activated charcoal filter.

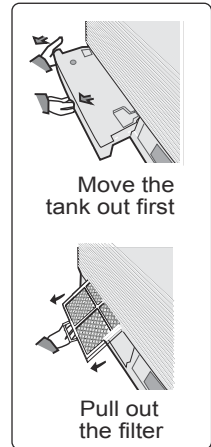


Caution !

Always ensure that fine particles or small objects do not enter the dehumidifier through the vents. Dust build-up in the unit can cause malfunction and overheating.

Cleaning the unit

 1. Turn off the unit, wait for the fan to stop and unplug from the power socket.
2. Clean the surface with a soft damp cloth.
3. Dry thoroughly with a towel after cleaning.
4. In order to avoid damage, do not wash the machine with water, or let water drip into the vents.

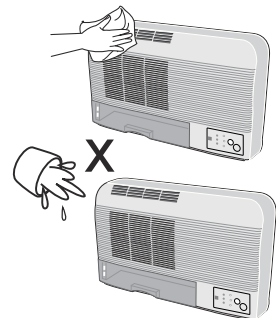

Before storing

1. Turn off the unit, wait for it to stop and disconnect the power cord.
2. Clean and dry the bucket. Leave the unit to drain for approximately one day.
3. Clean the filter and the unit. Cover the unit to prevent it from gathering dust. Store upright in a cool dry place.
4. Do not expose to direct sunlight.

SPECIFICATIONS

Model: DCW10

Operating Temperature Range: 5°C - 35°C

Dehumidification: 10 litres / day (30°C / 80%RH)

Water tank capacity: 2 Litres

Power Consumption: 200W

Voltage: 220-240V ~ 50Hz

Net Weight: 10.5 Kg

Gross Weight: 12.5 Kg

Net Dimension (W x H x D): 530mm x 323mm x 175mm

Gross Dimension (W x H x D): 583mm x 410mm x 234mm

Water Resistance class: IPX4

Remote Control

Model: DCW10-REMOTE

Voltage: 3V (DC), CR2032 battery cell

Net Dimensions (W x H x D): 54 x 87 x 11.5 mm

Net weight: 40g (with battery)

Water Resistance class: IPX5

What's in the box

1 x DCW10

1 x Charcoal Filter

1 x Remote Control

1 x 2 meters Hose

4 x Wall Plug

4 x Screw

1 x Wall Bracket

1 x DCW10 User Guides & Energy Saving Tips

GUARANTEE CARD

TWO (2) YEAR LIMITED GUARANTEE

SAVE THIS GUARANTEE INFORMATION

EcoAir guarantees this product free from defects in materials and workmanship for a period of Two (2) years from the date of purchase. Coverage is valid only with proof of purchase.

Exclusions: This guarantee does not cover:-

- Products used in the conditions other than the settings recommended and at the voltage indicated.
- Products used in a commercial setting or dusty environment.
- Service which do not involve malfunction or defects in materials or workmanship or those used other than in accordance with provided instructions.
- Appliance acquired second hand.
- Surcharges including, but not limited to, any after hour, weekend or holiday service calls and delivery charges.
- Damages caused by services performed by unauthorised service companies or use of parts other than genuine EcoAir parts or external causes; such as abuse, incorrect power supply, accidents, fires or acts of God.
- Replacement accessories such as filters.

This guarantee is in addition to, and does not affect, your Statutory Rights.

We recommend that you note the details of your purchase below and retain your original proof of purchase receipt with this user guide. Keep these documents safe in the event of a guarantee claim.

Date of purchase:

Retailer Name:

Serial number:

This limited guarantee only applies in the United Kingdom. Where the product has been taken from the country it was purchased, the guarantee may be invalidated. However, we will always do our best to assist you in your new country of residence. EcoAir authorises no person to change or add to any obligations under this guarantee. Obligations for service and parts under this guarantee must be performed by EcoAir or an authorised service company. Product features or specification described may be subject to change without notice.



www.ecoair.org



C177

