



S LIT-TY E AIR CO DITIO ERS
ACO DICIO ADORES DE AIRE DE TI O DIVIDIDO

OPERATING INSTRUCTIONS MANUAL DE INSTRUCCIONES

SZ-A09 A
SZ-A12 A
SZ-A15 A
SZ-A17 A

Mr. SLIM

For customers

Thank you very much for purchasing this Mitsubishi room air conditioner.

- To use this unit correctly and safely, be sure to read this operating instructions before use. Keep this manual for later reference.
- Be sure to receive a guarantee card from your dealer and check that the purchased date and amount are correct.
- This air conditioner should not be installed by the customer. (Safety and performance function will be affected.)

Para clientes

Gracias por adquirir este acondicionador de aire Mitsubishi.

- Para utilizar esta unidad de forma correcta y segura, lea previamente estas instrucciones y conserve este manual para consultas posteriores.
- Asegúrese de recibir la garantía de su distribuidor y comprobar que contiene la fecha de compra y el establecimiento, etc. correctos.
- Este acondicionador de aire no debe ser instalado por el cliente (ya que no se asegura que el rendimiento y seguridad).

CONTENTS

SAFETY PRECAUTIONS.....	2
NAME OF EACH PART	3
PREPARATION BEFORE OPERATION	4
AUTO CHANGEOVER... AUTO MODE OPERATION	6
MANUAL OPERATION (COOL, DRY, HEAT).....	7
AIR FLOW VELOCITY AND DIRECTION ADJUSTMENT	7
POWERFUL OPERATION	9
ECONO COOL OPERATION	9
TIMER OPERATION (ON/OFF TIMER)	10
WHEN THE AIR CONDITIONER IS NOT GOING TO BE USED FOR A LONG TIME	10
MAINTENANCE	10
CLEANING THE FRONT PANEL	11
CLEANING THE AIR FILTER (CATECHIN)	11
CLEANING THE AIR CLEANING FILTER	12
REPLACEMENT OF THE AIR CLEANING FILTER	12
BEFORE CONTACTING THE SERVICE REPRESENTATIVE, CHECK THE FOLLOWING AGAIN	13
WHEN YOU THINK THAT TROUBLE HAS OCCURRED	13
INSTALLATION, RELOCATION AND INSPECTION	14

ÍNDICE

MEDIDAS DE SEGURIDAD.....	15
NOMBRE DE LAS PARTES	16
PREPARACIÓN ANTES DE PONERLO EN FUNCIONAMIENTO	17
AUTO CHANGEOVER... [CONMUTACIÓN AUTOMÁTICA]	
FUNCIONAMIENTO EN MODO AUTOMÁTICO	19
ACCIONAMIENTO MANUAL (REFRIGERACIÓN, DESHUMIDIFICACIÓN, CALEFACCIÓN)	20
AJUSTE DE LA VELOCIDAD Y DE LA DIRECCIÓN DEL FLUJO DE AIRE.....	20
FUNCIONAMIENTO DE GRAN POTENCIA	22
FUNCION DE DESCONEXIÓN AUTOMÁTICA (ECONO COOL).....	22
ACCIONAMIENTO POR EL TEMPORIZADOR (TEMPORIZADOR DE CONEXIÓN/DESCONEXIÓN).....	23
CUANDO EL ACONDICIONADOR DE AIRE NO SE VAYA A UTILIZAR DURANTE MUCHO TIEMPO.....	23
MANTENIMIENTO	23
LIMPIEZA DEL PANEL FRONTAL	24
LIMPIEZA DEL FILTRO DE AIRE (TANINOS).....	24
LIMPIEZA DEL FILTRO DE AIRE.....	25
SUSTITUCIÓN DEL FILTRO DE LIMPIEZA DEL AIRE	25
ANTES DE SOLICITAR EL SERVICIO TECNICO COMPRUEBE DE NUEVO LO SIGUIENTE.....	26
SI CREE QUE SE HA PRODUCIDO UN PROBLEMA.....	26
INSTALACIÓN, CAMBIO DE SITIO Y INSPECCIÓN	27

Keep this manual carefully for
shop name, etc. are entered
ans cannot be assured.)

de funcionamiento. Guarde
de compra, el nombre del
se cumplan las funciones de

SAFETY PRECAUTIONS

- Since rotating parts and parts which could cause an electric shock are used in this product, be sure to read these "Safety Precautions" before use.
- Since the cautionary items shown here are important for safety, be sure to observe them.
- Stop using the air conditioner and consult your dealer in case any troubles or abnormality occurs.

Marks and their meanings

 
 
- ⚠ **WARNING:** Incorrect handling could cause a serious hazard, such as death, serious injury, etc. with a high probability.
- ⚠ **CAUTION:** Incorrect handling could cause a serious hazard depending on the conditions.

Meanings of symbols used in this manual






- ⊘ : Be sure not to do.
- ❗ : Be sure to follow the instruction.
- ✋ : Never insert your finger or stick, etc.
- 🚫 : Never step onto the indoor/outdoor unit and do not put anything on them.
- ⚡ : Danger of electric shock. Be careful.
- 🔌 : Be sure to shut off the power.

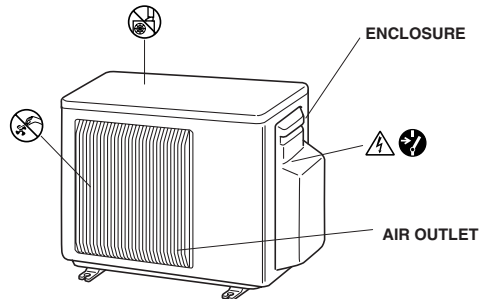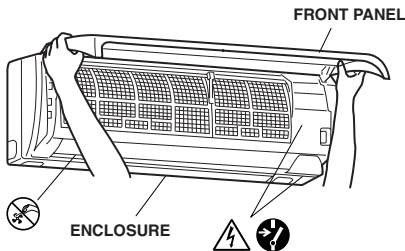

- After reading this manual, keep it together with the installation manual in a handy place for easy reference.

Warning positions








- This air conditioner is NOT intended for use by children or infirm persons without supervisions.



 WARNING	
	<p>Do not use intermediate connection of the power supply cord or the extension cord and do not connect many devices to one AC outlet.</p> <ul style="list-style-type: none"> • A fire or an electric shock may result from poor contact, poor insulation, exceeding the permissible current, etc.
	<p>Do not scratch or process the power supply cord, etc.</p> <ul style="list-style-type: none"> • Do not put heavy object on the power supply cord and do not scratch or process the cord. The cord may be damaged and this may cause a fire or an electric shock.
	<p>Do not turn the breaker off/on during operation.</p> <ul style="list-style-type: none"> • This may cause a fire due to spark, etc. • Be sure to turn off the breaker absolutely after switching the indoor unit off with the remote controller.
	<p>Do not expose your skin directly to cool air for a long time.</p> <ul style="list-style-type: none"> • This could damage your health.
	<p>Installation, repairs or relocation should not be done by the customer.</p> <ul style="list-style-type: none"> • If this is done incorrectly, it may cause a fire, an electric shock, or injury from the unit falling, water leaking, etc. Consult your dealer. • If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
 	<p>Do not insert your finger or a stick, etc. into the air inlet/outlet.</p> <ul style="list-style-type: none"> • Since the fan rotates at high speed, this may cause an injury. • Young children should be supervised to ensure that they do not play with the air conditioner.
	<p>When an abnormality (burning smell, etc.) occurs, stop the air conditioner and turn off the breaker.</p> <ul style="list-style-type: none"> • If the unit continues to be operated in an abnormal condition, it may cause a fire, trouble, etc. In this case, consult your dealer.



 CAUTION	
	<p>When the air filter is to be removed, do not touch the metal parts of the indoor unit.</p> <ul style="list-style-type: none"> • This may cause an injury.
	<p>Do not touch the air inlet or aluminum fin of the outdoor unit.</p> <ul style="list-style-type: none"> • This may cause an injury.
	<p>Do not put a vase or glass on the indoor unit.</p> <ul style="list-style-type: none"> • Water dropping into the indoor unit may deteriorate the insulation, causing electric shock.
	<p>Do not use an insecticide or flammable spray.</p> <ul style="list-style-type: none"> • This may cause a fire or deformation of the cabinet.
	<p>Do not put a pet or houseplant where it will be exposed to direct airflow.</p> <ul style="list-style-type: none"> • This could injure the pet or plant.
	<p>Do not place other electric appliances or furniture under the indoor/outdoor unit.</p> <ul style="list-style-type: none"> • Water may drip down from the unit, and this may cause damage or malfunction to them.
	<p>Do not leave the unit on an installation stand which is damaged.</p> <ul style="list-style-type: none"> • The unit may fall and this may cause an injury.
	<p>Do not step onto an unstable bench when maintaining the unit, etc.</p> <ul style="list-style-type: none"> • This may cause an injury, etc. if you fall down.
	<p>Do not pull the power supply cord.</p> <ul style="list-style-type: none"> • The core wire of the power supply cord may be disconnected and this may cause a fire.
	<p>Do not charge or disassemble the batteries and do not throw them into a fire.</p> <ul style="list-style-type: none"> • This may result in leakage, fire or an explosion.
	<p>Do not operate the unit for a long time in high humidity, e.g. leaving a door or window open.</p> <ul style="list-style-type: none"> • In the cooling mode, if the unit is operated in a room with high humidity (80% RH or more) for a long time, water condensed in the air conditioner may drop and wet or damage furniture, etc.

SAFETY PRECAUTIONS

 CAUTION	
	<p>Do not operate the unit at low outside temperature (less than 14°F) in the cooling mode.</p> <ul style="list-style-type: none"> In the cooling mode, if the unit is operated at low outside temperature (less than 14°F), water condensed in the air conditioner may drop and wet or damage furniture, etc.
	<p>Do not use the unit for special purposes.</p> <ul style="list-style-type: none"> Do not use this air conditioner to preserve precision devices, food, animals, plants and art objects. This may cause deterioration of quality, etc.
	<p>Do not put a stove, etc. where they are exposed to direct airflow.</p> <ul style="list-style-type: none"> This may cause imperfect combustion.
	<p>When the unit is to be cleaned, switch it off and turn off the breaker.</p> <ul style="list-style-type: none"> Since the fan rotates at high speed during operation, this may cause an injury.
	<p>When the unit is not going to be used for a long time, turn off the breaker.</p> <ul style="list-style-type: none"> Otherwise, dirt may collect and this may cause a fire.
	<p>Replace the 2 batteries of the remote controller with new ones of same type.</p> <ul style="list-style-type: none"> Using an old battery together with a new one may result in heat generation, leakage or an explosion.
	<p>If liquid from the batteries gets onto your skin or clothes, wash it well with clean water.</p> <ul style="list-style-type: none"> If liquid from the batteries gets into your eyes, wash them well with clean water and consult a doctor at once.
	<p>Ventilate well in using the unit with a stove, etc.</p> <ul style="list-style-type: none"> An oxygen shortage may occur.
	<p>Do not operate switches with wet hands.</p> <ul style="list-style-type: none"> This may cause an electric shock.
	<p>Do not clean the air conditioner with water or put a vase or glass on it.</p> <ul style="list-style-type: none"> Water may enter the unit and degrade the insulation. This may cause an electric shock.
	<p>Do not step or put anything on the indoor/outdoor unit.</p> <ul style="list-style-type: none"> This may cause an injury, etc. if you or something falls down.


For installation

 WARNING	
	<ul style="list-style-type: none"> Consult your dealer for installation of the air conditioner. Since special techniques and work are required, installation should not be done by the customer. If this is done incorrectly, it may cause a fire, an electric shock, injury or water leaking.
	<p>Do not install the unit where flammable gas could leak.</p> <ul style="list-style-type: none"> If gas leaks and collects around the unit, it may cause an explosion.


 CAUTION	
	<p>Ground the unit.</p> <ul style="list-style-type: none"> Do not connect the ground to a gas pipe, water pipe, lightning rod or the ground of a telephone. If the grounding is incorrect, it may cause an electric shock.
	<p>Install a Ground Fault Interrupt (GFI) circuit breaker depending on the place where the air conditioner is to be installed (humid places, etc.).</p> <ul style="list-style-type: none"> If the Ground Fault Interrupt (GFI) circuit breaker is not installed, it may cause an electric shock.
	<p>Drain should be fully drained.</p> <ul style="list-style-type: none"> If the drainage route is incomplete, water may drop from the unit. This may wet and damage the furniture.


NAME OF EACH PART

 Indoor unit

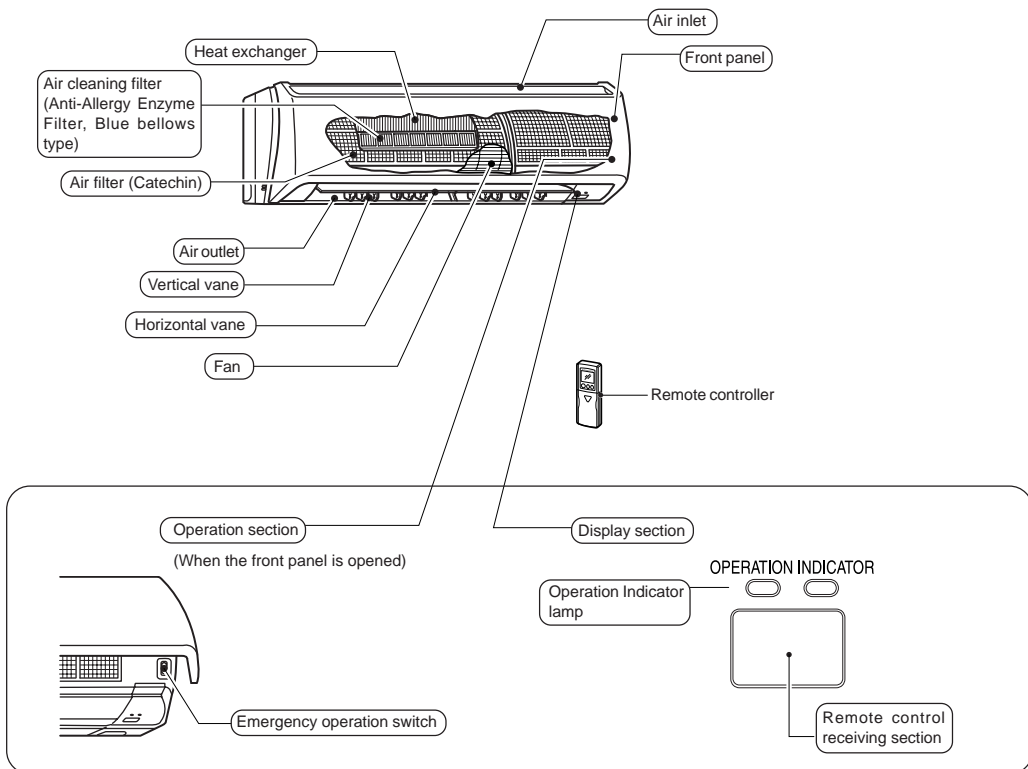

Outdoor unit

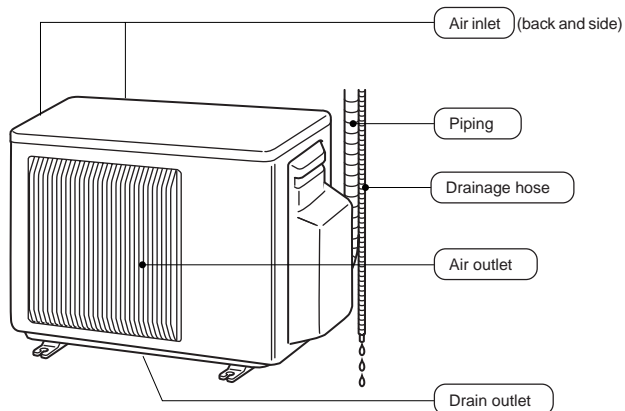 


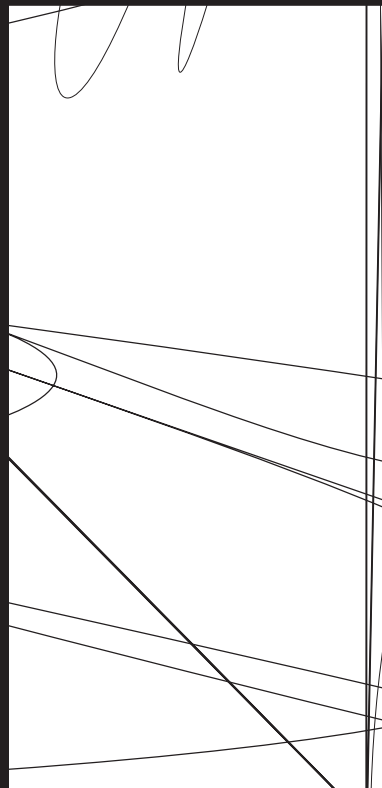  

 





 

 
MANUAL OPERATION (COOL, DRY, HEAT)

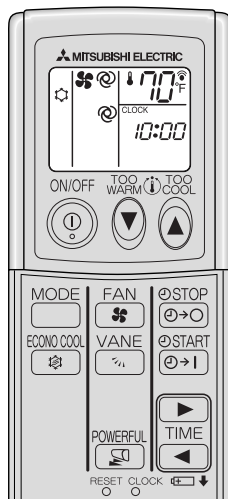

To select the COOL, DRY or HEAT mode:


- 1 Press the  button.
- 2 Select the operation mode by pressing the  button.

Each time this button is pressed, the operation mode is changed in sequence:



 (AUTO) →  (COOL) →  (DRY) →  (HEAT)

To stop operation:

- 1 Press the  button.

After the operation mode is set once, the operation starts in the same mode as the one set previously from the next time by simply pressing the  button.

When the set temperature is to be changed:

- Press the  button to lower the temperature. One press lowers the temperature by about 1°F.
- Press the  button to raise the temperature. One press raises the temperature by about 1°F.

In COOL operation

- When the outside temperature is low, the fan of the outdoor unit turns on and off frequently or decreases the rotation speed to maintain sufficient cooling capacity.

 
In DRY operation

- The temperature control (temperature setting) cannot be done.
- The room temperature is slightly lowered in this operation mode.

The details of the display on the indoor unit are explained on page 6.


If the air conditioner doesn't cool or heat effectively...

If the fan speed is set to Low or AUTO, sometimes the air conditioner may not cool or heat the air effectively. In this case, change the fan speed to Med. or upper.

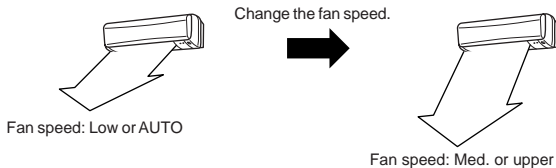

AIR FLOW VELOCITY AND DIRECTION ADJUSTMENT

 AIR FLOW velocity and direction can be selected as required.

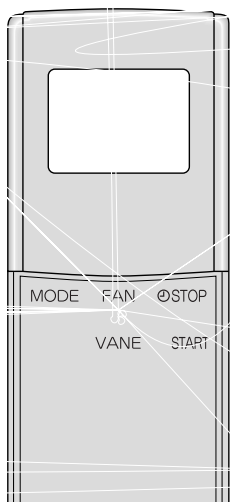

To change the AIR FLOW velocity, press the  button.

Each time the button is pressed, the fan speed is changed in sequence:

■ (Low) → ■ (Med.) → ■ (High) → ⌚ (AUTO)

- If the operating sound of the air conditioner disturbs your sleep, use the ■ (Low) notch.

To change the AIR FLOW blowing direction vertically, press the  button.

Each time the button is pressed, the angle of the horizontal vane is changed in sequence: ▽ (1) → ↙ (2) → ↘ (3) → ▲ (4) → ⌚ (SWING) → ⌚ (AUTO)

 
SWING OPERATION

Use the swing operation for the air flow to reach all corners of the room.

Recommended horizontal vane range for more efficient air-conditioning




 

 

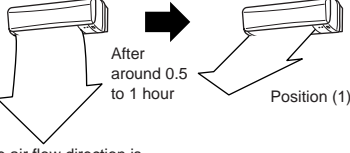 
 
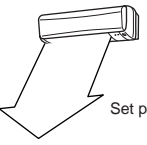 

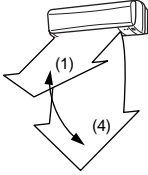 
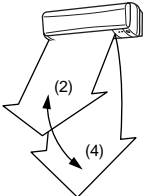 
Use the ⌚ (AUTO) position usually.

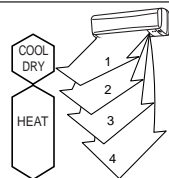Use position ▽ (1) in the COOL or DRY mode and use positions ↙ (2) to ▲ (4) in the HEAT mode when adjusting to your requirements.




AIR FLOW VELOCITY AND DIRECTION ADJUSTMENT


Movement of the horizontal vane

	COOL/DRY	HEAT
AUTO 	 <p>Horizontal position</p> <ul style="list-style-type: none"> The vane automatically moves to horizontal position. It will not swing. <p>NOTE: Air blows out upper than position (1).</p> <ul style="list-style-type: none"> To constantly change the air flow direction, select  (SWING) with the  button. 	<p>At the start of heating operation</p>  <p>Horizontal position</p> <p>Very small air flow</p> <p>When air becomes warm...</p>  <p>Position (4)</p> <ul style="list-style-type: none"> Immediately after the air conditioner starts operating, the vane stays at horizontal position. Once the air from the indoor unit becomes sufficiently warm, the vane moves to position (4). Once the air conditioner starts operating, the fan speed increases gradually as the air from the indoor unit gets warmer, and continues until the set speed is finally reached.
MANUAL 	 <p>After around 0.5 to 1 hour</p> <p>Position (1)</p> <p>When the air flow direction is set to position (2), (3) or (4)</p> <ul style="list-style-type: none"> After around one hour of operation, the air conditioner automatically moves the vane to position (1). To change the air flow direction to the original setting, operate the VANE button on the remote controller again. The vane does not move to the straight-down position in the COOL and DRY mode. 	<p>At the start of heating operation</p>  <p>Horizontal position</p> <p>Very small air flow</p> <p>When air becomes warm...</p>  <p>Set position</p> <ul style="list-style-type: none"> Immediately after the air conditioner starts operating, the vane stays at horizontal position. Once the air from the indoor unit becomes sufficiently warm, the vane moves to the position corresponding to the set direction of air flow. Once the air conditioner starts operating, the fan speed increases gradually as the air from the indoor unit gets warmer, and continues until the set speed is finally reached.
SWING 	<ul style="list-style-type: none"> The vane moves intermittently between positions (1) and (4). The vane stops for a brief period at positions (1) and (4). 	<ul style="list-style-type: none"> The vane moves intermittently between positions (2) and (4). The vane stops for a brief period at positions (2) and (4). 

NOTE:

 - Adjust the vertical AIR FLOW direction using the remote controller. Moving the horizontal vane manually can cause trouble.
- When the operation mode changes in  (AUTO) mode, the horizontal vane is automatically changed to the position in each mode.

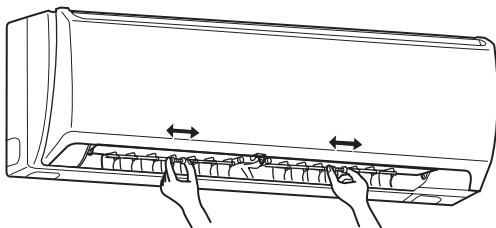

 
 

 
To change the horizontal direction of the air flow, move the vertical vane manually.




Adjust the vane before operation starts.


Since the horizontal vane moves automatically, your fingers may be caught.



To change the air flow direction not to blow directly onto your body.


To change the air flow direction	When to use this function?	COOL/DRY	HEAT
<p>Pressing and holding the  button for 2 seconds or more causes the horizontal vane to reverse and move to horizontal position.</p>  <p>Horizontal position</p>	<p>Use this function if you don't want the air from the indoor unit to blow directly onto your body.</p> <ul style="list-style-type: none"> Depending on the shape of the room, the air may blow directly onto your body. Press the  button again to return the vane to the previously-set position. 	<p>The air conditioner starts the cooling or drying operation approx. 3 minutes after the vane has moved to the horizontal position.</p> <ul style="list-style-type: none"> When the  button is pressed again, the vane returns to the previously-set position and the air conditioner starts the cooling or drying operation in approx. 3 minutes. 	<p>The air conditioner starts heating operation approx. 3 minutes after the vane has moved to the horizontal position.</p> <ul style="list-style-type: none"> Sometimes the area around your feet may not warm. To warm the area around the feet, set the horizontal vane to  (AUTO) or the downward-blowing position. When the  button is pressed again, the vane returns to the previously-set position and the air conditioner starts heating operation in approx. 3 minutes.

NOTE:

  - If you make the air flow not to blow directly onto your body by pressing  button, the compressor stops for 3 minutes even during the operation of the air conditioner.
- The air conditioner operates with decreased air flow until the compressor turns on again.

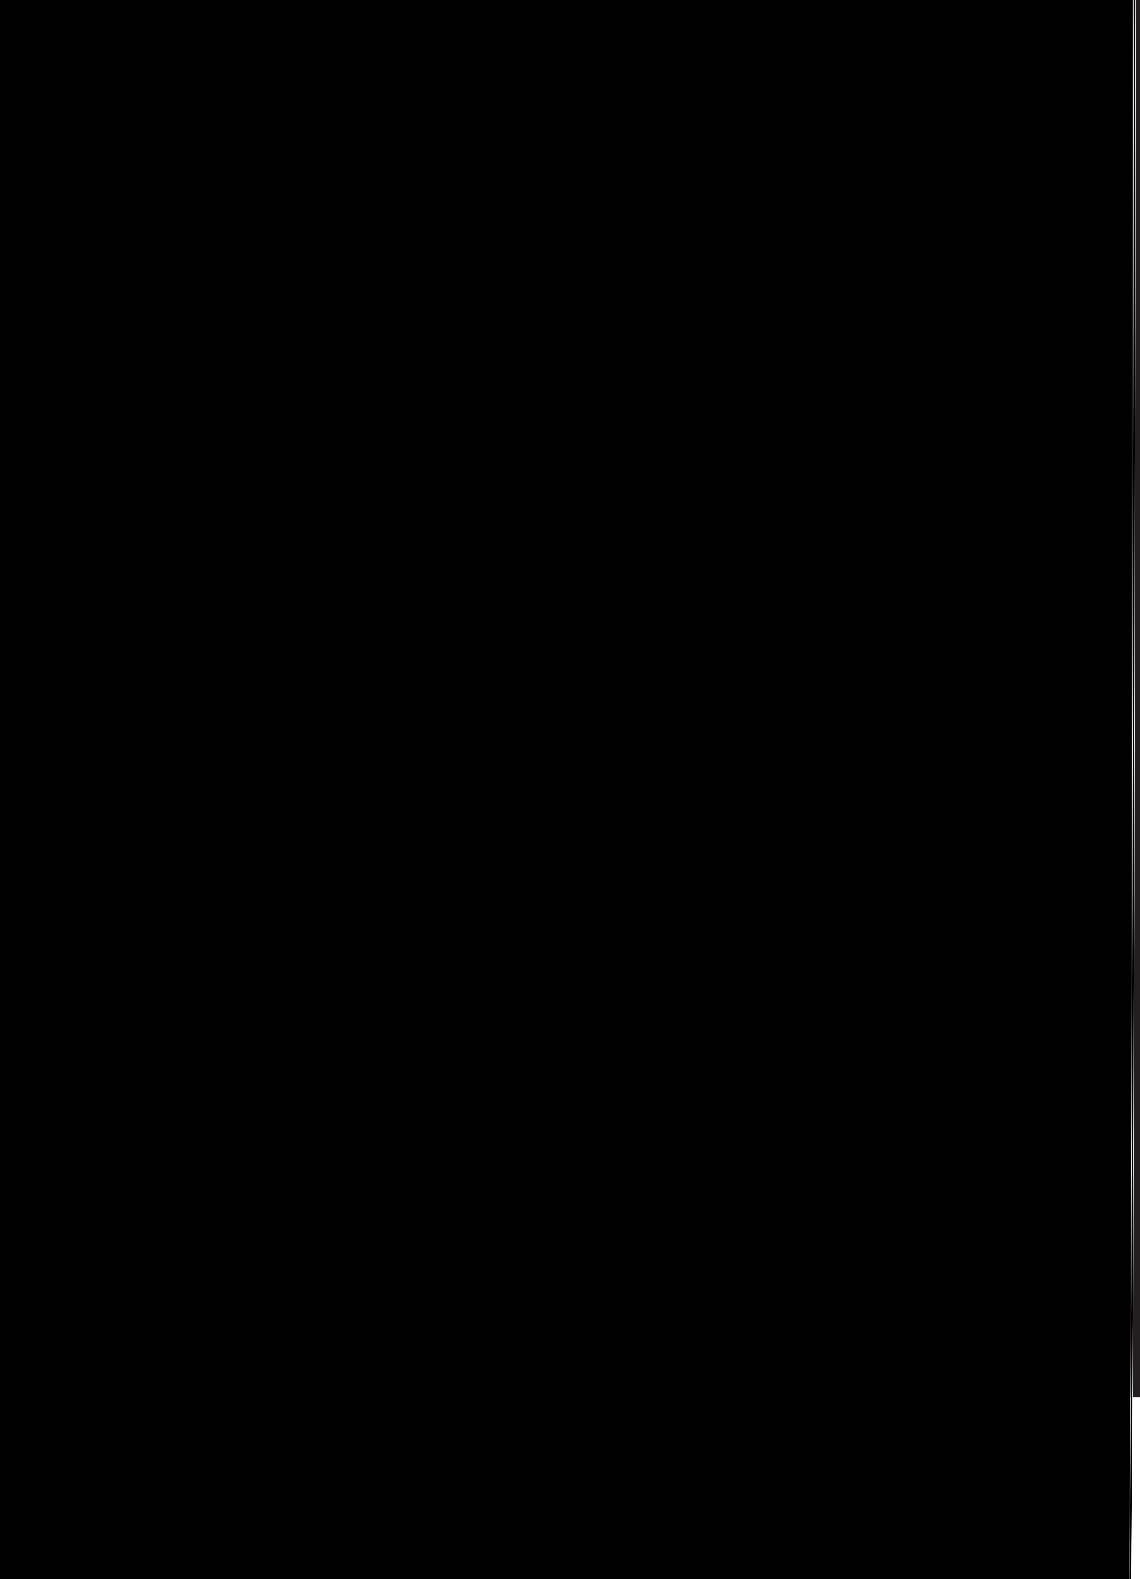

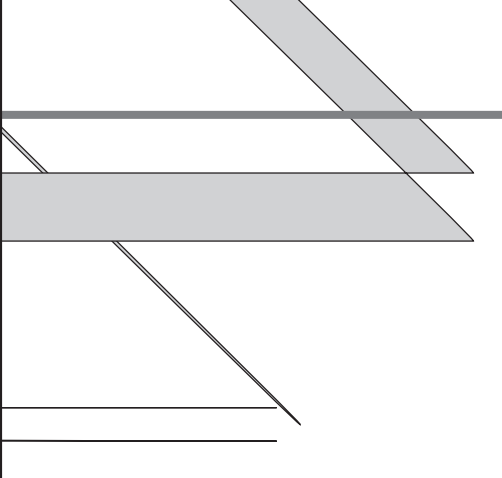

or  button and ON/OFF timer (explained below)

ation with keeping comfort. As a result, energy can be saved.



TIMER OPERATION (ON/OFF TIMER)



It is convenient to set the timer when you go to bed, when you get home, when you get up, etc.

How to set the ON timer

- 1 Press the  button during operation.

Each time the button is pressed, the ON timer mode alternates between ON and OFF.

- 2 Set the time of the timer using the TIME buttons  (Forward) and  (Backward).

Each time the  button is pressed, the set time increases by 10 minutes; each time the  button is pressed, the set time decreases by 10 minutes.

To release the ON timer:

- 1 Press the  button.

Programming timer operation

The ON timer and the OFF timer can be used in combination. The timer of the set time that is reached first will operate first. ("1" mark indicates the order of timer operations.)

- If the current time has not been set, the timer operation cannot be used.



NOTE:



If the main power is turned off or a power failure occurs while AUTO START/STOP timer is active, the timer setting is cancelled. As these models are equipped with an auto restart function, the air conditioner starts operating with timer cancelled at the same time that power is restored.

How to set the OFF timer

- 1 Press the  button during operation.

Each time the button is pressed, the OFF timer mode alternates between ON and OFF.

- 2 Set the time of the timer using the TIME buttons  (Forward) and  (Backward).

Each time the  button is pressed, the set time increases by 10 minutes; each time the  button is pressed, the set time decreases by 10 minutes.

To release the OFF timer:

- 1 Press the  button.

WHEN THE AIR CONDITIONER IS NOT GOING TO BE USED FOR A LONG TIME

When it is not going to be used for a long time:

1 Perform the FAN operation for 3 or 4 hours to dry the inside of the air conditioner.

- To perform FAN operation, set the remote controller to the highest temperature in the MANUAL COOL mode. (Refer to page 7.)

2 Turn off the breaker.



⚠ CAUTION:

Turn off the breaker when the air conditioner is not going to be used for a long time.

Dirt may collect and this may cause a fire.

3 Remove the batteries from the remote controller.

⚠ CAUTION:

To prevent liquid leakage, take out all batteries when the remote controller is not going to be used for a long time.

When the air conditioner is to be used again:

1 Clean the air filter and install it in the indoor unit.

(Refer to page 11 for cleaning instructions.)

2 Check that the air inlet and outlet of the indoor/outdoor units are not blocked with any obstacles.

3 Check that the ground is connected correctly.

⚠ CAUTION:

Ground the unit.

Do not connect the ground to a gas pipe, water pipe, lightning rod or the ground of a telephone. If the grounding is incorrect, it may cause an electric shock.

MAINTENANCE

Before starting maintenance

Turn off the breaker.



⚠ CAUTION:

When the unit is to be cleaned, switch it off and turn off the breaker. Since the fan rotates at high speed during operation, it may cause an injury.

Cleaning the indoor unit

 
Clean the unit using a soft dry cloth.

- If the dirt is noticeable, wipe the unit with a cloth soaked in a solution of mild detergent diluted in lukewarm water.
- Do not use gasoline, benzine, thinner, polishing powder, or insecticide. The unit may be damaged.
- The front panel may come off if it is lifted up past its level position. If the front panel comes off, refer to step **3** in CLEANING THE FRONT PANEL.

CLEANING THE FRONT PANEL

Front panel

- 1 Hold both ends of the front panel and lift the panel up until a “click” is heard. (①) Holding the hinges, lift the panel up until it is level, and pull the hinges forward to remove the front panel. (②)

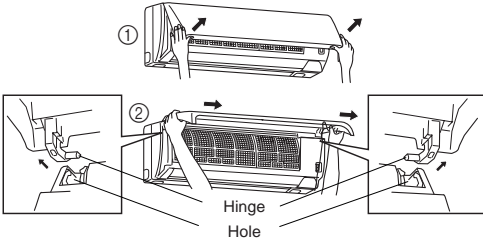


⚠ CAUTION:

- Do not drop the front panel or pull it out forcibly. The panel may be damaged.
- Do not step onto an unstable bench when removing or installing the front panel. This may cause an injury, etc. if you fall down.

- 2 Wipe the front panel with a soft dry cloth or wash it with water. After washing the panel, wipe up the remaining water with a soft dry cloth and let it dry out of direct sunlight.

- If the dirt is noticeable, wipe the front panel with a cloth soaked in a solution of mild detergent diluted in lukewarm water.
- Do not use gasoline, benzene, thinner, polishing powder, or insecticide and do not wash the front panel with a scrubbing brush or the hard surface of a sponge.
- Do not soak the front panel in water/lukewarm water longer than two hours and do not expose the panel to direct sunlight, heat, or flames when drying it. The panel may be deformed or discolored.

 
- 3 Hold both ends of the front panel, keep the panel level, and insert the hinges into the holes on the upper part of the indoor unit until they click into place. Then, close the front panel securely and press the three positions on the front panel as indicated by the arrows.

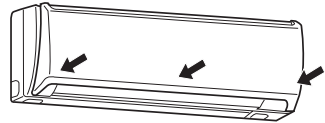

CLEANING THE AIR FILTER (CATECHIN)

Cleaning the air filter (about once every 2 weeks)

 
1 Remove the air filter.

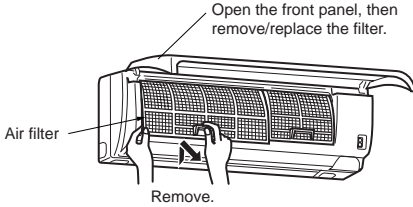

CAUTION:
When the air filter is to be removed, do not touch the metal parts of the indoor unit. This may cause an injury.


2 Remove dirt from the air filter using a vacuum cleaner or by washing the filter with water.

 - Do not wash with scrubbing brush or hard surface of sponge. Otherwise, the filter may deform.
- If the dirt is noticeable, wash the filter with a solution of mild detergent diluted in lukewarm water.
- If hot water (120 °F or more) is used, the filter may be deformed.

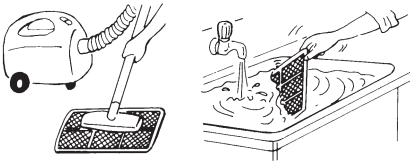


3 After washing with water/lukewarm water, dry the air filter well in the shade.

 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.

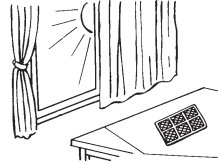

4 Install the air filter.

 (Securely install its tabs.)

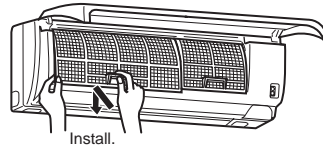

What is "Catechin air filter"?

 
The air filter is dyed with a natural material, catechin, that is contained in tea. The catechin air filter deodorizes odor and noxious gases such as formaldehyde, ammonia, and acetaldehyde. Moreover, it restrains the activity of the viruses adhering to the filter.

CLEANING THE AIR CLEANING FILTER


Cleaning the air cleaning filter (about once every 3 months)

1 Remove the air filter (left one).

The air cleaning filter is not attached to the right side air filter.

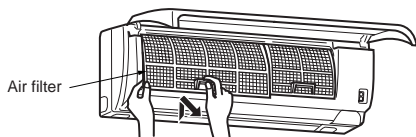

 2 Pull up the tabs on both sides of the air cleaning filter with your finger and remove the air cleaning filter (blue bellows type) from the air filter.

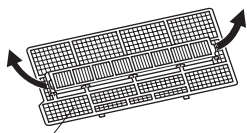

Air filter (Back side)

3 Soak the filter together with its frame in lukewarm water and wash it.

- If the dirt is noticeable, use a solution of mild detergent diluted in lukewarm water.
- If hot water (120°F or more) is used, the filter may be deformed.
- Do not use a scrubbing brush or sponge. This may damage the surface of the filter.
- Do not use a chlorine detergent.



4 After rinsing with water/lukewarm water, shake off the excess water and dry the filter well in the shade.

- Do not expose the filter to direct sunlight or heat from a fire when drying it.



 
REPLACEMENT OF THE AIR CLEANING FILTER

When the capacity is lowered because of dirt, etc., it is necessary to replace the air cleaning filter.


Air cleaning filter replacement (about once every year)

1 Remove the air filter (left one).

The air cleaning filter is not attached to the right side air filter.

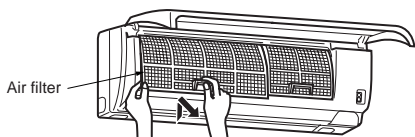


 2 Pull up the tabs on both sides of the air cleaning filter with your finger and remove the air cleaning filter (blue bellows type) from the air filter.

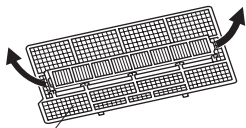


Air filter (Back side)

 3 Attach a new air cleaning filter to the air filter so that all 8 tabs on the air filter are securely installed.

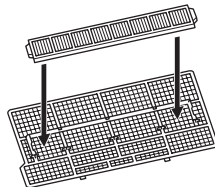

 4 Install the air filter. (Securely install its tabs.)

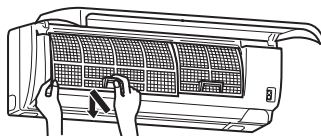

5 Securely close the front panel.

Air cleaning filter

- If the air cleaning filter is clogged, it may lower the unit's capacity or cause condensation at the air outlet.
- The air cleaning filter is disposable. The standard usable term is about 1 year.

Optional parts Optional parts are available from your local dealer.

Name of parts	AIR CLEANING FILTER (Anti-Allergy Enzyme Filter)
Parts number	MAC-415FT-E

This optional part is for the replacement of the left side filter only. No optional part is available for the right side filter.

BEFORE CONTACTING THE SERVICE REPRESENTATIVE, CHECK THE FOLLOWING AGAIN

Question	Check points
The air conditioner cannot be operated.	<ul style="list-style-type: none"> • Is the breaker turned on? • Is the fuse blown? • Is the ON timer set? (Page 10)
The horizontal vane does not move.	<ul style="list-style-type: none"> • Is the horizontal vane attached to the indoor unit correctly? • Is the fan guard deformed?
The room cannot be cooled or heated sufficiently.	<ul style="list-style-type: none"> • Is the temperature setting correct? (Page 7) • Is the filter clean? (Page 11) • Are there any obstacles blocking the air inlet or outlet of the indoor or outdoor unit? • Is a window or door open?
The air from the indoor unit smells strange.	<ul style="list-style-type: none"> • Is the filter clean? (Page 11)
The display on the remote controller does not appear or it is dim. The indoor unit does not respond to the remote control signal.	<ul style="list-style-type: none"> • Are the batteries exhausted? (Page 5) • Is the polarity (+, -) of the batteries correct? (Page 5) • Are any buttons on the remote controller of other electric appliances being pressed?
When a power failure occurs.	<ul style="list-style-type: none"> • Does the air conditioner start operating again? If the air conditioner had operated before the power failure, as these models are equipped with an auto restart function, the air conditioner should start operating again. (Refer to Description of "AUTO RESTART FUNCTION" on page 6.)

Even if the above items are checked, when the air conditioner does not recover from the trouble, stop using the air conditioner and consult your dealer.

In the following cases, stop using the air conditioner and consult your dealer.

- When water leaks or drops from the indoor unit.
- When the left operation indicator lamp blinks.
- When the breaker trips frequently.
- The remote control signal may not be received in a room where an electronic ON/OFF type fluorescent lamp (inverter-type fluorescent lamp, etc.) is used.
- Operation of the air conditioner may interfere with radio or TV reception in areas where the reception is weak. An amplifier may be required for the affected device.
- When thunder is heard, stop operation and turn off the breaker. Otherwise, the electrical parts may be damaged.

WHEN YOU THINK

Question	
The air conditioner cannot be operated for about 3 minutes when restarted.	<ul style="list-style-type: none"> • This procedure should be followed according to the instructions.
Cracking sound is heard.	<ul style="list-style-type: none"> • This sound is due to the contraction of the indoor unit temperature.
The air from the indoor unit smells strange.	<ul style="list-style-type: none"> • The air conditioner may be blowing out the air.
The fan of the outdoor unit does not rotate even though the compressor is running. Even if the fan starts to rotate, it stops soon.	<ul style="list-style-type: none"> • When the outdoor unit is overloaded, the fan may not rotate at full capacity.
The sound of water flowing is heard.	<ul style="list-style-type: none"> • This is the sound of the air conditioner. • This is the sound of the heat exchanger. • This is the sound of the fan.
The sound as burbling is heard.	<ul style="list-style-type: none"> • This sound is due to the sorbed water being discharged from the range hood. • This sound is due to the water flowing from the range hood. • This sound is due to the wind blowing in.
The room cannot be cooled sufficiently.	<ul style="list-style-type: none"> • When a window or door is open in a room. • When a window or door is open in an indoor unit. • When the outdoor unit is not cooling.
Mist is discharged from the air outlet of the indoor unit.	<ul style="list-style-type: none"> • The cool air is saturated with moisture and is discharged into mist.
Mechanical sound is heard from the indoor unit.	<ul style="list-style-type: none"> • This is the sound of the fan or the compressor.
The swing operation of the HORIZONTAL VANE is suspended for about 15 seconds, then restarted.	<ul style="list-style-type: none"> • This is the sound of the HORIZONTAL VANE.

THAT TROUBLE HAS OCCURRED

Answer (not a malfunction)
ects the air conditioner according to instructions from the microprocessor. Please wait.
nd is generated by the expansion/contraction of the front panel, etc. due to change in temperature.
nditioner may suck in an odor adhering to the wall, carpet, furniture, cloth, etc. and mix it with the air.
outside temperature is low, the fan and compressor operate to maintain sufficient cooling.
he sound of refrigerant flowing inside the air conditioner. The sound of condensed water flowing in the heat exchanger. The sound of the heat exchanger defrosting.
nd is heard when the outside air is absorbed from the drain hose in turning on the fan or the ventilation fan and that makes noise flowing in the drain hose spout out. nd is also heard when the outside air is drawn into the drain hose in case the outside air is wrong.
ventilation fan or a gas cooker is used in the room, the cooling load increases, resulting in a less efficient cooling effect. The outside air temperature is high, the cooling effect may not be sufficient.
air from the air conditioner rapidly cools the room in the air inside the room, and it turns on the compressor.
the switching sound in turning on/off the main power of the compressor.
the swing operation of the HORIZONTAL VANE to be performed normally.

Question	Answer (not a malfunction)
The air flow direction changes during operation. The direction of the horizontal vane cannot be adjusted with the remote controller.	<ul style="list-style-type: none"> When the air conditioner is operated in COOL or DRY mode, if the operation continues with air blowing down for 1 hour, the direction of the air flow is automatically set to position (1) to prevent condensed water from dropping. In the heating operation, if the air flow temperature is too low or when defrosting is being done, the horizontal vane position is automatically set to horizontal.
Water leaks from the outdoor unit.	<ul style="list-style-type: none"> During COOL and DRY operations, pipe or pipe connecting sections are cooled and this causes water to condense. In the heating operation, the defrosting operation makes water frozen on the outdoor unit melt and drip down. In the heating operation, water condensed on the heat exchanger drips down.
White smoke is discharged from the outdoor unit.	<ul style="list-style-type: none"> In the heating operation, vapor generated by the defrosting operation looks like white smoke.
Air does not blow out soon in the heating operation.	<ul style="list-style-type: none"> Please wait as the air conditioner is preparing to blow out warm air.
The operation is stopped for about 10 minutes in the heating operation.	<ul style="list-style-type: none"> Defrosting of the outdoor unit is being done (Defrosting operation). Since this is completed in 10 minutes, please wait. (When the external temperature is too low and humidity is too high, frost is formed.)
Hissing sound is sometimes heard.	<ul style="list-style-type: none"> This is the sound when the flow of refrigerant inside the air conditioner is switched.
The room cannot be heated sufficiently.	<ul style="list-style-type: none"> When the outside air temperature is low, the heating effect may not be sufficient.
In a multi-unit system, the indoor unit which is not operating becomes warm and a sound, similar to water flowing, is heard from the unit.	<ul style="list-style-type: none"> A small amount of refrigerant continues to flow into the indoor unit even though it is not operating.
The air conditioner starts the operation only with the main power turned on, though you do not operate the unit with the remote controller.	<ul style="list-style-type: none"> These models are equipped with an auto restart function. When the main power is turned off without stopping the air conditioner with the remote controller and is turned on again, the air conditioner will start operation automatically in the same mode as the one set with the remote controller just before the shutdown of the main power.

INSTALLATION, RELOCATION AND INSPECTION

Installation place

Avoid installing the air conditioner in the following places.

- Where flammable gas could leak.

⚠ CAUTION:

 
Do not install the unit where flammable gas could leak. If gas leaks and collects around the unit, it may cause an explosion.

- Where there is much machine oil.
- Salty places such as the seaside.
- Where sulfide gas is generated such as a hot spring.
- Where oil is splashed or where the area is filled with oily smoke.
- Where there is high-frequency or wireless equipment.

⚠ WARNING:

If the air conditioner operates but does not cool or heat (depending on model) the room, consult your dealer since there may be a refrigerant leak. Be sure to ask the service representative whether there is refrigerant leakage or not when repairs are carried out.

The refrigerant charged in the air conditioner is safe. Refrigerant normally does not leak, however, if refrigerant gas leaks indoors, and comes into contact with the fire of a fan heater, space heater, stove, etc., harmful substances will be generated.

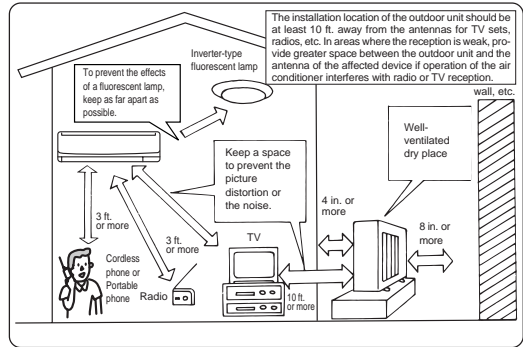

Electrical work

- Provide an exclusive circuit for the power supply of the air conditioner.
- Be sure to observe the breaker capacity.
- Use the correct power (voltage and frequency) indicated on the unit to operate the air conditioner and use only fuses or breakers with specified capacity. Do not use pieces of wire instead of fuses.

⚠ WARNING:

- **The customer should not install this unit.**

If installation is done incorrectly, it may cause a fire, an electric shock, or injury from the unit falling, water leaking, etc.

- **Do not use intermediate connection of the power supply cord or the extension cord and do not connect many devices to one AC outlet.**

A fire or an electric shock may result from poor contact, poor insulation, exceeding the permissible current, etc. Consult your dealer.

- **The unit should be installed by licensed contractor according to local code requirements.**

⚠ CAUTION:

• **Ground the unit.**

Do not connect the ground to a gas pipe, water pipe, lightning rod or the ground of a telephone. If the grounding is incorrect, it may cause an electric shock.

- **If the air conditioner is installed in a high humidity area or near a water source, a Ground Fault Interrupt (GFI) circuit breaker should be installed to protect against an electric shock.**

Inspection and maintenance

- When the air conditioner is used for several seasons, the capacity may be lowered due to dirt inside the unit.
- Depending on the condition, an odor may be generated or dehumidified water may not drain out smoothly due to dirt, dust, etc.
- It is recommended that the unit be inspected and maintained (charged) by specialist in addition to normal maintenance. Consult your dealer.

Operating sound considerations

- Do not put an object around the air outlet of the outdoor unit. This may lower the capacity or increase the volume of the operating sound.
- If an abnormal sound is heard during operation, consult your dealer.

Relocation

- When the air conditioner is to be removed or re-installed because of rebuilding, moving, etc., special techniques and work are required.

⚠ WARNING:

Repairs or relocation should not be done by the customer.

If this is done incorrectly, it may cause a fire, an electric shock, or an injury from the unit falling, water leaking, etc. Consult your dealer.

Disposal

To dispose of this product, consult your dealer.

If you have any questions, consult your dealer.



3400 Lawrenceville Suwanee Road • Suwanee, Georgia 30024
Toll Free: 800-433-4822 • Toll Free Fax: 800-889-9904
www.mrslim.com

Specifications are subject to change without notice.