

SYLVANIA

32" BLUETOOTH SOUND BAR



MODEL:SB323

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USING
AND KEEP IT FOR FUTURE REFERENCE

Congratulations

Congratulation on your purchase. For a better use of your new device, we recommend you to read carefully this user manual and keep it for record.

Package contents

- Instruction Manual x 1
- Remote Control with CR 2025 button cell x 1
- Stereo audio connection cable with 3.5mm stereo plug x 1
- RCA line in cable x 1
- Wall mount brackets x 2
- Wall mount screws x 4
- Wall plugs x 4

Features

- Slim Soundbar for TV use
- Bluetooth V3.0 EDR with A2DP, Range up to 10M
- Digital Volume Control
- Aux IN RCA at the back side for TV and other devices (Left and Right Audio Jack)
- 3.5mm Line in jack(side panel) for input the analogue stereo audio signals from extra devices such as MP3 player,etc.
- Remote Control (Need control with power, source, volume +/-, bass +/-, treble +/-, EQ, mute etc.)
- Build in 2x2.5" High powered speaker system (2x10W full range) and 2x2.5" subwoofer speaker (2x10W)
- AC/DC Operated (AC 100V-240V~, DC === 18V, 2.5A)
- Both adjustable wall-mount and desktop design

Technical specification

Speaker Output Power:	40 W
Power Adaptor Input:	100-240V~, 50/60Hz
Power Adaptor Output:	DC === 18V; 2.5A
Remote Control Battery	3V === ; CR2025 Battery
Maximum Distance:	10 Meters
Net weight:	2.462 kg

Safety precaution

Read, keep and follow these instructions.

Heed all warnings on the product and in the instruction manual.

For your safety, read and follow this manual carefully to ensure proper use of the product and avoid any danger or physical damage.

- Place the unit on a flat surface and ventilated condition. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. to avoid overheating and malfunction.
- No naked flame sources, such as lighted candles, should be placed on the apparatus
- Keep the appliance away from rain and any moisture. Do not place the unit in moist and humid conditions, which could lead to malfunction.
- When the unit is suddenly moved from a cold environment to a warm one, if moisture forms inside it, it may not operate properly.

To correct this problem wait about one hour for the moisture to evaporate.

- Do not expose the unit under direct sunlight or nearby objects that radiate heat to avoid damaging the unit.
- The apparatus should be used in moderate climate.
- The plug of the appliance shall remain readily operable.
- Do not pull on the connection cord, but rather on the plug, to separate the appliance from the mains.
- The On/Off button does not completely isolate the product from the power supply. To disconnect the product from the mains power supply, you must unplug the power cord.
- Pull out the mains plug if the appliance is not to be used over a longer period of time.
- Disconnect the main plug during thunderstorms.
- The apparatus shall not be exposed to dripping or splashing, no objects filled with liquids, such as vases, shall be placed on the apparatus.

Note:

Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage. Refer all servicing to qualified service personnel.

Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product; if the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.

 The lightning flash symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
--	---	---

WARNINGS

- Batteries are to be inserted with the correct polarity. Make sure that the (+) and (-) terminals are placed in the correct direction.
- Do not mix used and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Never use batteries that show signs of electrolyte leaks or cracking.
- Never dispose of used batteries in an open fire, risk of explosion.
- Keep batteries out of reach of children.
- Never short circuit battery terminals.
- Exhausted batteries are to be removed from the product.
- Remove batteries from the appliance before disposing of it at the end of its service life, or during long periods of non-use.
- Do not try to open the batteries.
- Batteries (battery pack or batteries installed) shall not be exposed

to excessive heat such as sunshine, fire or the like.

- Do not charge non-rechargeable batteries.
- Ensure the battery compartment panel is secure.

CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.

IMPORTANT

- When replacing used batteries, please comply with applicable regulation relating to their disposal.
- Please return them to a suitable collection facility for environmentally friendly disposal.
- For indoor use only.

 
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: this device may not cause interference, and this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Installation and maintenance


Placing on table

When placing the sound bar on an entertainment center, bookshelf, or any type of closed space, be sure to allow at least 2-3 inches of space around the sound bar for ventilation. If the sound bar is enclosed in a tight space without ventilation, heat generated from sound bar could produce a potential heat hazard.

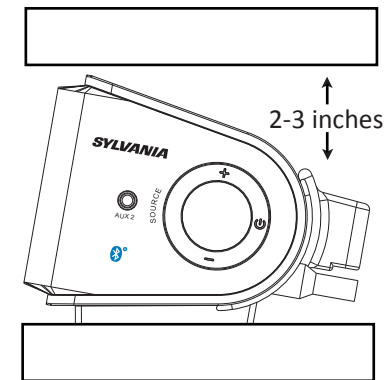


Mounting the sound bar onto a wall

 We recommend mounting the sound bar professionally by using the included mounting accessories.

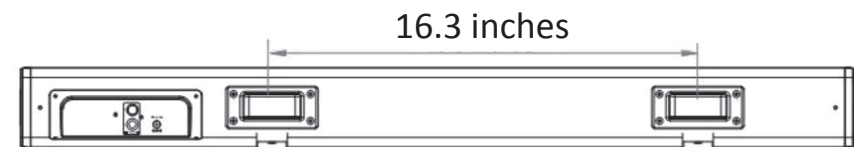

Mounting on the wooden wall

 
You may use 4 pieces of supplied screws and 2 metal brackets.

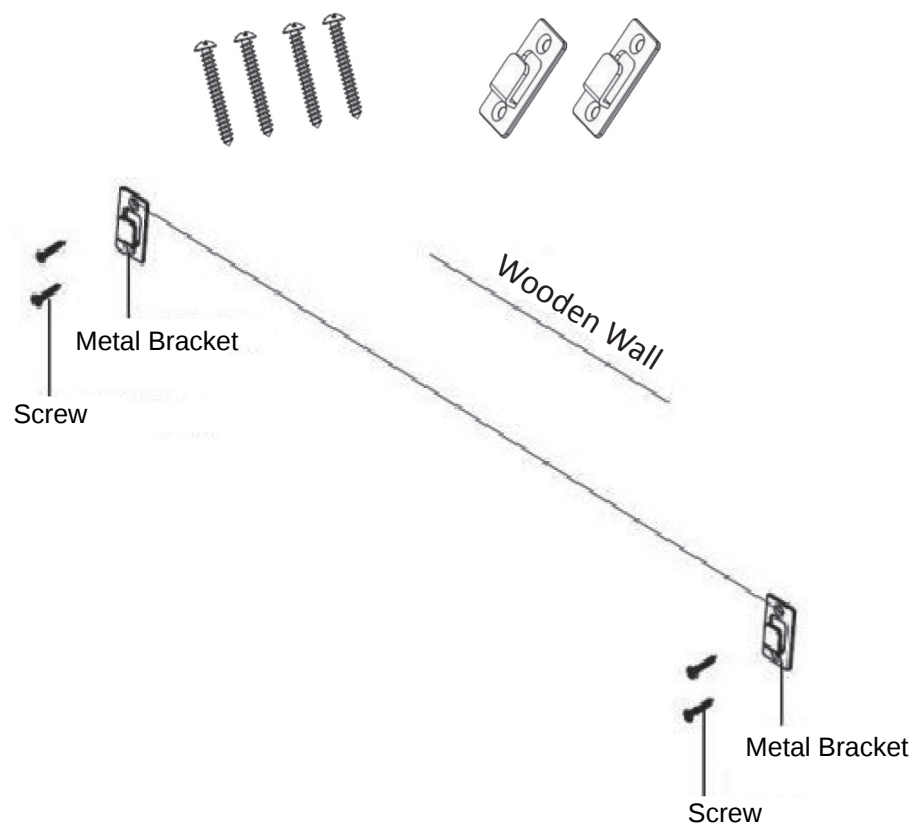

- Mark the distance 16.3 inches of the mounting screws on the wall using a pencil.
- Drill holes on same horizontal level by a powerful electric drill (Not Supplied).
- Put the sound bar onto the mounting brackets and make sure they are firm and stable.

Mounting onto the wall

 
You may use 4 pieces of supplied screws, 4 plastic inserts and 2 metal brackets.

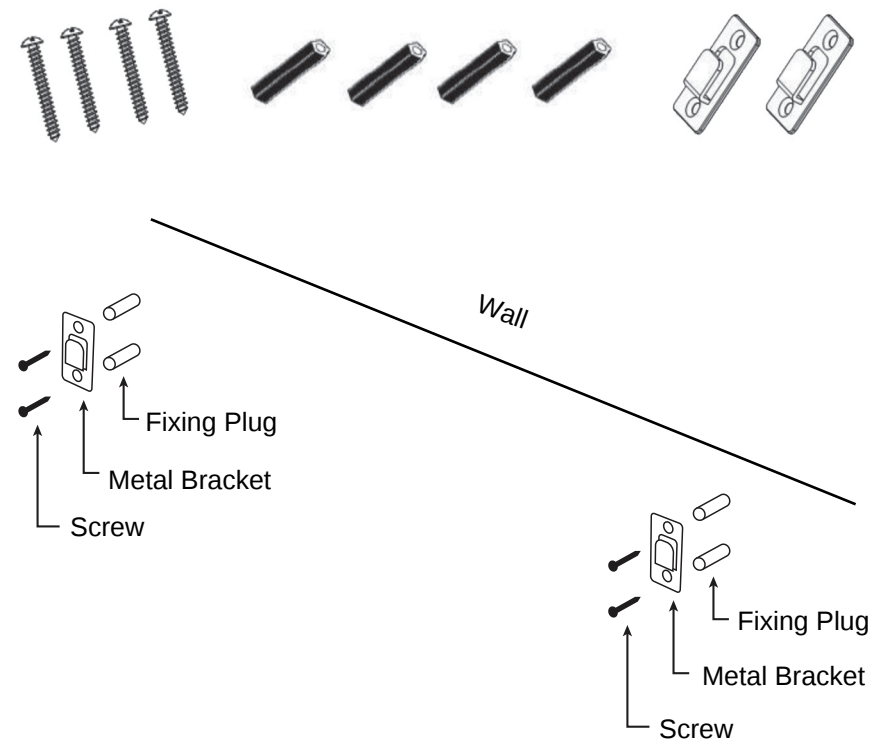


- Mark the distance 16.3 inches of the mounting screws on the wall using a pencil.
- Drill holes on same horizontal level by a powerful electric drill (Not Supplied).
- Insert the plastic inserts and hammer them into the wall.
- Secure the metal brackets by screws.
- Put the sound bar onto the mounting brackets and make sure they are firm and stable.

Locations of controls

 Control Panel

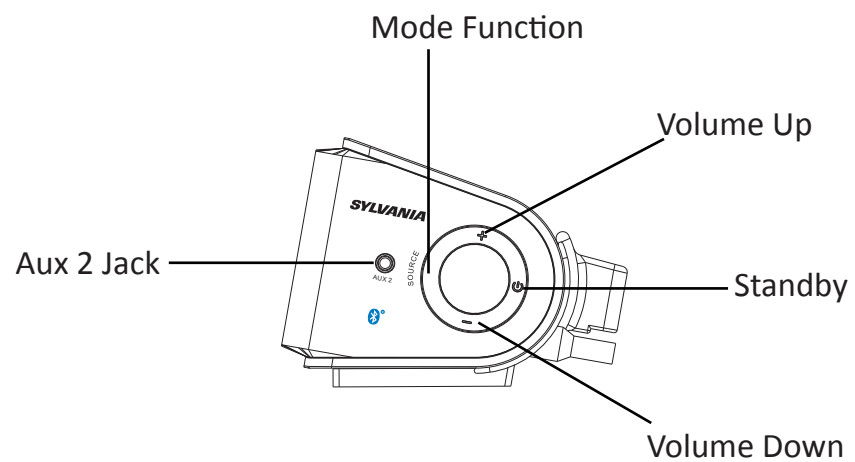


Rear Panel

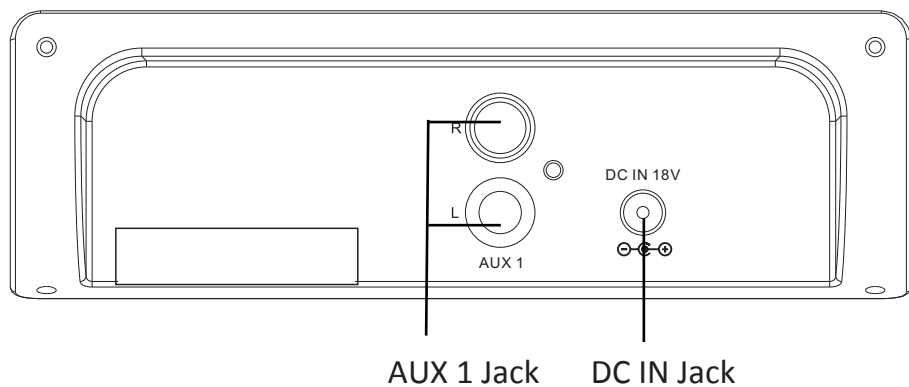 

GB-10

 Remote Control

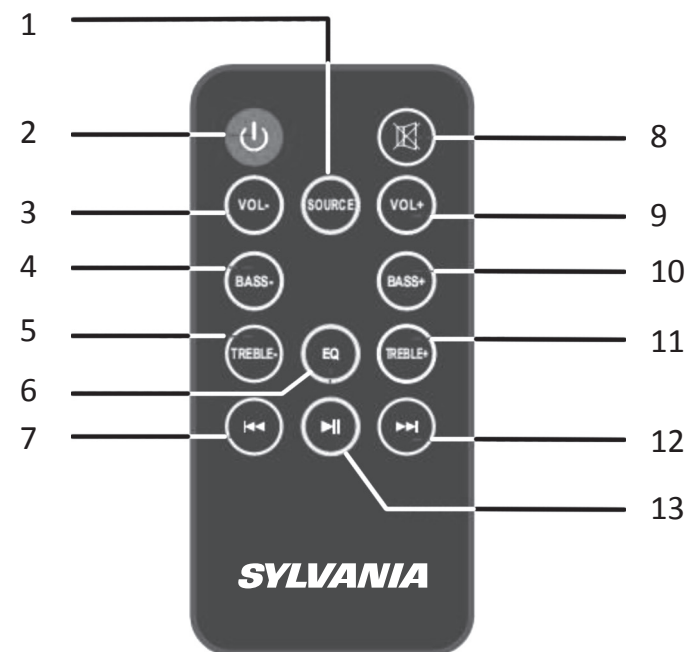

- | | |
|-----------------------|-----------------------|
| 1. Source button | 8. Mute button |
| 2. Standby button | 9. Volume up button |
| 3. Volume down button | 10. Bass up button |
| 4. Bass down button | 11. Treble up button |
| 5. Treble down button | 12. Next button |
| 6. EQ button | 13. Play/pause button |
| 7. Previous button | |

GB-11

Battery installation

Before installation

Remove and discard the insulation tab as figure above:



Replace battery for the remote control

When replacing the battery in the remote control, refer to the diagram below:

1. Press the catch across. While holding the catch, open the battery door.



2. Fit the battery observing polarity as shown. When replacing the battery, use only the same CR2025 type specified.



Battery care

Dispose of used batteries with regard to the recycling regulations in your area.

Weak batteries can leak and damage the remote control.

Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire.

Replace them in good time!

Power control

To turn the speaker on

Connect the supplied AC/DC adapter and the indicator will turn red. Press Standby button to place the unit to working status. The indicator will turn to corresponding color.

FUNCTION	LED
AUX 1	green
AUX 2	orange
BLUETOOTH	blue
Power On	red

NOTE: Before using different external connection functions, please complete external connection with other devices , then power on the unit!

To turn the speaker off

Press Standby button on the remote control or hold Standby button on the side of the unit.

NOTE:If the unit is not used for a long period of time, disconnect the power adapter.

 
Aux In source

Aux In source may include:

TV/DVD/VCR

AUX1 connection

1. Connect the AV cable to audio output jack (white jack=L, red jack=R) on DVD Player and to the audio input jack inlet on the rear of the unit.
2. Press Source button repeatedly until the indicator turns Green.

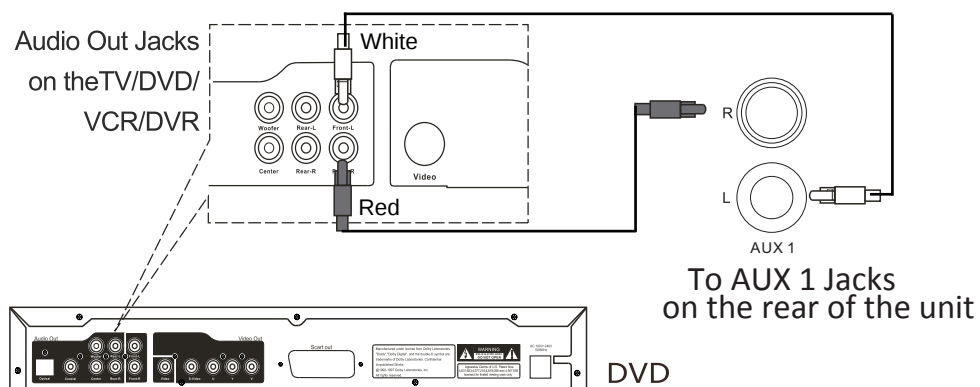

During playback

- Press MUTE button to turn off the sound. Press again to resume the sound.
- Press VOLUME+/- buttons to adjust the volume level.
- Press BASS+/- buttons to adjust bass level.
- Press TREBLE+/- buttons to adjust treble level.
- Press EQ button to switch between POP/ JAZZ/ CLASSIC /ROCK and NORMAL.

Line in source

 
LINE IN sources may include:

Personal audio players
Personal computers or laptops

AUX 2 connection:

1. Connect a stereo 3.5mm jack cable (supplied) between the headphone or LINE/Audio output of the personal audio player and the AUX 2 jack on the side of the unit.
2. Power on the unit and press source button repeatedly until the indicator turns orange. Set your personal audio player/computer to play.

NOTE: If there is no sound or if the volume is not loud enough, you may increase the setting on the music/sound source.

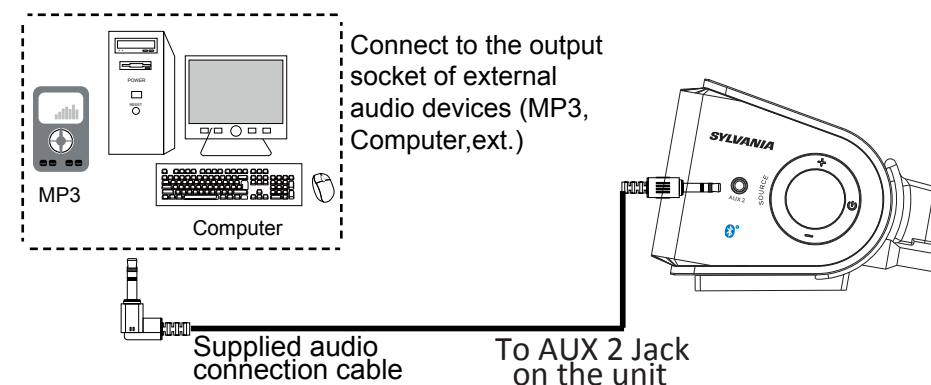

During playback

- Press MUTE button to turn off the sound. Press again to resume the sound.
- Press VOLUME+/- buttons to adjust the volume level.
- Press BASS+/- buttons to adjust bass level.
- Press TREBLE+/- buttons to adjust treble level.
- Press EQ button to switch between POP/ JAZZ/ CLASSIC /ROCK and NORMAL.

Bluetooth source

Pairing

1. Press "SOURCE" button on remote control or Source button on side panel of sound bar until the indicator turns blue.
2. Turn off the Bluetooth functionality of other devices that are paired with your unit. Only one device can be used with the Bluetooth function at a time.
3. Turn on Bluetooth functionality on your Bluetooth device.

Typically, Bluetooth controls are found on the device's tools or settings menu (see your user manual). Turn on Bluetooth connectivity and make your device "discoverable".

4. Choose "add a new Bluetooth device" or "setup Bluetooth device" on your device. It will start to search. Once "SYLVANIA" shows on your device, select it. If your device prompts you for a code, please enter 0000. If the pairing attempt fails or times out, please start pairing procedure again.

5. After your device and the "SYLVANIA" have connected to each other, a tone can be heard.

NOTE:

The unit will automatically reconnect the last paired device when Bluetooth mode is reselected from other mode. If for some reason the Bluetooth connection is lost due to external factors or will not auto reconnect, you must clear the SYLVANIA from you Bluetooth Devices list and start the pairing process again.

During playback:

- Press PLAY/PAUSE button to suspend momentarily the playing track. Press again to resume playing.
- Press TUNE+ button to skip forward to the next track and TUNE- button to skip backward to the previous track.
- Press MUTE button to turn off the sound. Press again to resume the sound.
- Press VOLUME+/- buttons to adjust the volume level.
- Press BASS+/- buttons to adjust bass level.
- Press TREBLE+/- buttons to adjust treble level.
- Press EQ button to switch between POP/ JAZZ/ CLASSIC /ROCK and NORMAL.

Troubleshooting guide

Check the followings before requesting service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOULTION
No power	Power adapter not connected	Connect the adapter
	The unit is in Standby mode	Press the Standby button on the unit or remote control to power on the unit.
No sound	Volume in minimum position	Raise volume level by pressing the VOL (Volume)+Button
	The connected device is not in playback mode	Play the music/movie in the connected device
	Sound output of the device is weak	Raise volume level of the connected device
Remote not working	The batteries in the remote control are exhausted	Replace with new battery
AUX IN / LINE IN not working	Wrong mode is selected	Press source button until indicator turns Green (AUX 1) / Orange (AUX 2)
No response from Bluetooth source	Wrong mode is selected	Press Source button until indicator turns Blue
	The unit is connected with another Bluetooth device	Disconnect the connection and retry.
	The connected device is deactivated	Activate the connected device and start the playback

