

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>Air Conditioning System (with navigation system)*</b>	
Using the automatic mode .....	51
Adjusting the temperature .....	51
To turn off the airflow .....	51
<b>Air Conditioning System (without navigation system)</b>	
Using the automatic mode .....	65
Adjusting the temperature .....	65
To turn off the airflow .....	65
<b>Audio System (with navigation system)*</b>	
Basic operation .....	47
Radio .....	47
DVD player/CD player .....	48
Operating an iPod .....	49
Remote control (steering wheel switches) .....	50
<b>Audio System (without navigation system)</b>	
Basic operation .....	58
Radio .....	59
CD player .....	60
Operating an iPod .....	63
Remote control (steering wheel switches) .....	64
<b>Automatic Transmission</b> .....	16
<b>Cruise Control</b> .....	23
<b>Door Locks</b> .....	75
<b>Dynamic Radar Cruise Control</b> .....	24
<b>ECT Switch</b> .....	21
<b>Engine (ignition) Switch</b> .....	15
<b>Floor Mat Installation</b> .....	8
<b>Fog Lights</b> .....	27
<b>Fuel Tank Cap</b> .....	79
<b>Hands-free System For Cellular Phone (with navigation system)*</b>	
Bluetooth® phone pairing .....	41
Phonebook transfer .....	42
Registering a speed dial .....	43
Calling by speed dial .....	44
Calling using SMS/MMS message .....	45
Receiving a call .....	46
Steering switches .....	46
<b>Hands-free System For Cellular Phone (without navigation system)*</b>	
Bluetooth® phone pairing .....	52
Calling by number .....	53


\*: This feature may be operated by Voice command (See P.66)

Calling by name.....	53
Calling by speed dial.....	54
Phonebook transfer.....	55
Changing the registered name.....	56
Registering a speed dial.....	57
<b>Head Restraints</b> .....	14
<b>Headlights</b> .....	26
<b>Instrument Panel Light Control</b> .....	28
<b>Intuitive Parking Assist</b> .....	22
<b>Keys</b> .....	9
<b>Lexus Enform with Safety Connect</b> .....	72
<b>Multi-information Display</b> .....	19
<b>Navigation System*</b>	
Register home.....	35
Destination input — Search by address.....	36
Destination input — Search points of interest by name.....	38
Destination input — Search points of interest by category.....	39
Destination input — Search points of interest by telephone number.....	40
Voice Command System.....	66
<b>Power Windows</b> .....	76
<b>Retractable Hardtop</b> .....	77
<b>Safety Connect</b> .....	70
<b>Satellite Switches</b> .....	20
<b>Seat Belts</b> .....	14
<b>Seats</b> .....	12
<b>Smart Access System with Push-button Start</b> .....	10
<b>Theft Deterrent System</b> .....	11
<b>Touch Screen</b>	
Basic operation.....	32
Display.....	33
Screen scroll operation.....	34
Setting a route.....	34
<b>Trunk</b> .....	80
<b>Turn Signal Lever</b> .....	21
<b>Voice Command System*</b>	
Basic operation.....	66
Command list.....	67
<b>Windshield Wipers and Washer</b> .....	28
<b>XM Services</b> .....	74

\*: This feature may be operated by Voice command (See P.66)

# Overview

# Instrument Panel

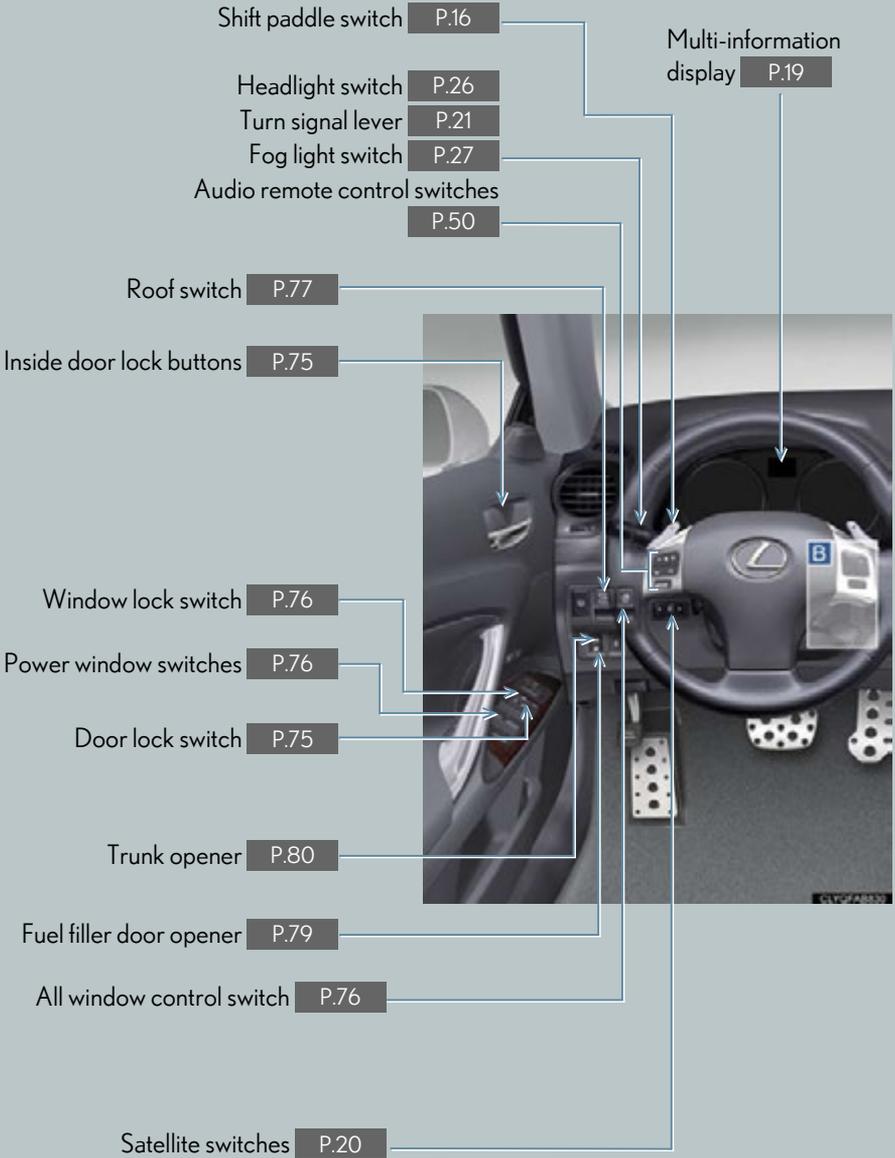



## A

► Without navigation system (type A)

Air conditioning system P.65

Audio system P.58



Security indicator P.11

► Without navigation system (type B)

Air conditioning system P.65

Audio system P.58



Security indicator P.11

A

► With navigation system

Navigation system

P.35

Security indicator

P.11

Audio system


P.47

Air conditioning  
system

P.51



B

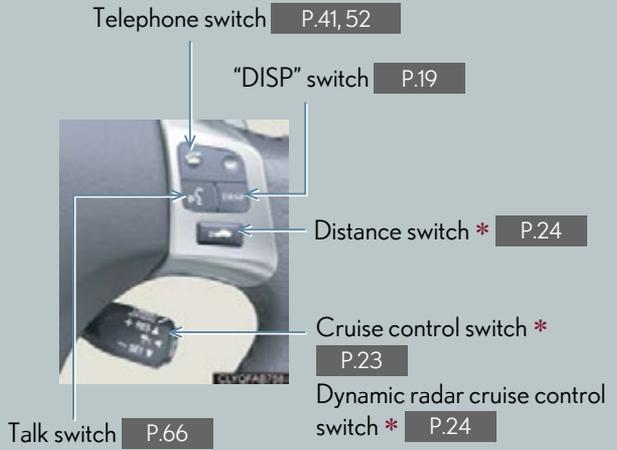


\* : If equipped

## Floor Mat Installation


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

### STEP 1

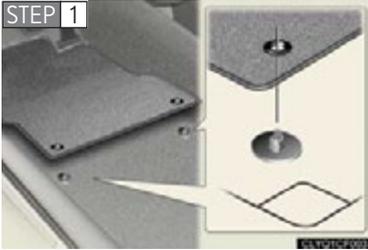

1 Insert the retaining hooks (clips) into the floor mat eyelets.

### STEP 2

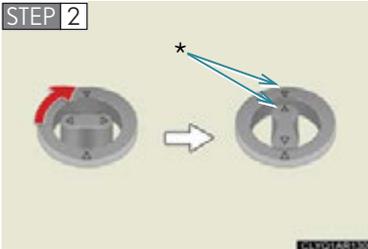

2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\Delta$  marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

## Keys

### Electronic key



Smart access system with push-button start  
(→P.10, 15)

\*: If equipped

### Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

### Wireless remote control



- 1 Press:** locks both side doors
- 2 Press once:** unlocks the driver's door  
**Press twice:** unlocks passenger's door
- 3 Press and hold:** opens the trunk
- 4 Press and hold:** sounds the alarm

(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 15.

### ■ Entering the vehicle



To unlock the vehicle, simply grasp either of the door handles.

### ■ Exiting the vehicle



To lock the vehicle, press the lock button on either of the door handles.

### ■ Opening the trunk



To open the trunk, press the trunk release button.

For details on what to do when the electronic key does not operate properly, see page 83.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

### Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

**To set the alarm:** close the doors, trunk and hood, and lock both side doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** turn the “ENGINE START STOP” switch to ACCESSORY or IGNITION ON mode, or start the engine. Alternatively, unlock the doors or trunk using the entry function, wireless remote door lock function or mechanical key.

### Steering lock



The steering wheel locks when the “ENGINE START STOP” switch is OFF and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. To release it, gently turn the wheel left or right while pressing the “ENGINE START STOP” switch.

## Seats

### ■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### ■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer

## ■ Folding the seatback



Folds

## ■ Entering or exiting the rear seat

### ► Type A——Switch-operated “Front, Fold & Return” seat



- 1 Moves the front seat forward automatically
  - 2 Moves the front seat backward automatically
- Using the satellite switch, the return function 2 can be set to activate only while the switch is being pressed.


### ► Type B——Seat slide switch (front passenger seat)



- 1 Moves the front seat forward
  - 2 Moves the front seat backward
- When enter or exit, fold the seatback.

## Head Restraints

### Vertical adjustment (front seats only)

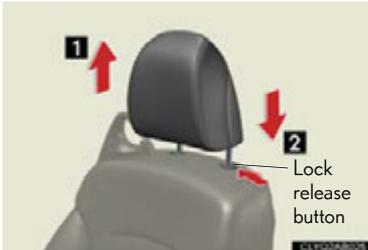

- 1 To raise: push the head restraint upward.
- 2 To lower: push the head restraint down while pressing the lock release button.

### Folding (rear seats only)



Pull the lever.


## Seat Belts

### Seat belt guide (front)



When fastening a front seat belt, always ensure that it passes through the seat belt guide.

### Seat belt guide (rear)

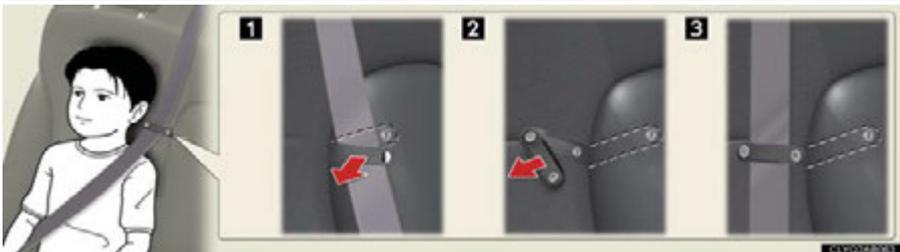

If the shoulder belt sits close to the occupant's neck, secure the seat belt in the guide position.

## Engine (ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.  
(The mechanical key cannot be used to start the engine.)

### Starting the engine



Make sure the parking brake is engaged and the shift lever is in P.

- 1] Depress the brake pedal.  
The “ENGINE START STOP” switch indicator light turns green.
- 2] Press the “ENGINE START STOP” switch.

### Stopping the engine

- 1] Engage the parking brake and shift the shift lever to P.
- 2] Press the “ENGINE START STOP” switch.

### Changing power modes

To change power modes without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The modes can be changed in the following order:



## Automatic Transmission

### Shift positions




- P Park\*
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S S mode

\*: The engine can only be started in P.

← The vehicle can only be shifted out of P when the “ENGINE START STOP” switch is in IGNITION ON mode and the brake pedal is depressed.

## ■ Changing shift ranges in the D position

Operating the shift paddle switches allows shift ranges to be selected to suit the driving conditions.

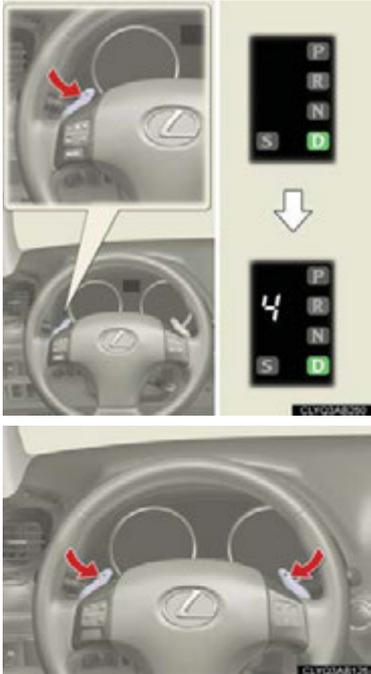

- 1 Pull the “-” shift paddle switch toward you.  
The indicator in the meter cluster will display the selected shift range.

- 2 **Higher shift range:**  
Pull the “+” shift paddle switch toward you.  
**Lower shift range:**  
Pull the “-” shift paddle switch toward you.

Pulling and holding the “+” shift paddle switch for a certain period of time allows you to return to normal D position driving. If the accelerator pedal is depressed for more than a certain period of time in one range, shift range selection in the D position will be automatically deactivated.


## ■ Changing shift ranges in the S position

Operating the shift lever or shift paddle switches allows shift ranges to be selected to suit the driving conditions.



- 1 Shift the shift lever to S.

The indicator in the meter cluster will display the selected shift range.

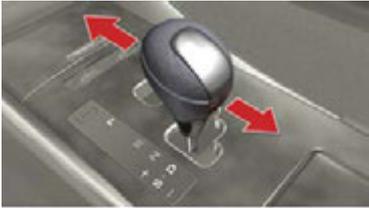

- 2 **Higher shift range:**

Move the shift lever in the "+" direction or pull the "+" shift paddle switch toward you.

**Lower shift range:**

Move the shift lever in the "-" direction or pull the "-" shift paddle switch toward you.



## Multi-information Display


The multi-information display shows information about your vehicle, including the items shown below.

### Display information



- Trip information
  - Outside temperature
  - Driving range
  - Average fuel consumption
  - Average fuel consumption after refueling
  - Current fuel consumption
  - Average vehicle speed
  - Gear position
- Satellite switch mode display
- Intuitive parking assist display (if equipped)
- Dynamic radar cruise control display (if equipped)
- Roof function status indicator
- Warning messages

### Changing the display of trip information

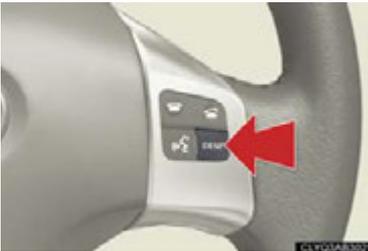

Trip information items can be switched by pressing the DISP switch.

- When using intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Satellite Switches

The satellite switches can be used to change the settings of various functions. Settings are shown on the multi-information display.



The satellite switches can be used to change the settings of the following items.

- Intuitive parking assist (if equipped)
- Tire pressure warning system initialization
- ID code selection for tire inflation pressure warning system
- Vehicle speed indicator
- Tacho indicator
- Pre-collision braking function activate/deactivate (if equipped)
- Front seat auto return function

### Changing the ON/OFF settings




1 To cycle through the functions, press either the left or right selector switch.



2 To change the settings, press the ON/OFF button.

For detailed information of changing the settings, see the Owner's Manual.

## Turn Signal Lever

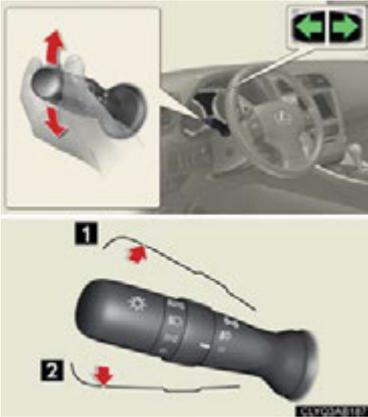

- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and hold.

## ECT Switch

Use the ECT switch to select the driving mode that best suits the driving and road conditions.



- 1 **Power mode**  
For more powerful acceleration and uphill driving.
- 2 **Normal mode**
- 3 **Snow mode**  
For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or snow mode.

## Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner's Manual”.

### ■ Turning the system on and off

---

The system can be turned on and off using the satellite switch. (→P.20)

### ■ Multi-information display

---




Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors

## Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.

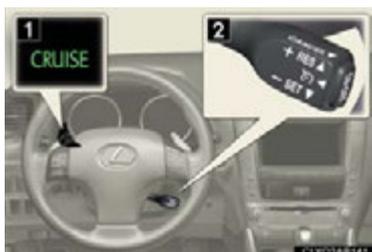


- 1 Indicator
- 2 Cruise control switch

### Setting the speed



- 1 Press the ON-OFF button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the speed in the cruise control memory.

### Canceling

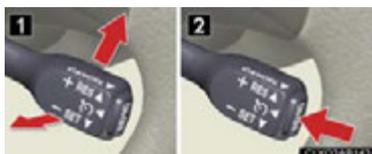

- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the ON-OFF button.

### Adjusting the speed setting



- To increase speed:** push the lever up.  
**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.


## Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator
- 2 Display
- 3 Distance switch
- 4 Cruise control switch

### Cruise control display

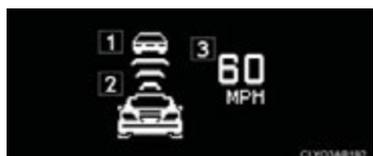

Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

### Vehicle-to-vehicle distance control mode




- 1 Press the ON-OFF button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.

### Constant speed control mode



- 1 Press the ON-OFF button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

## ■ Canceling

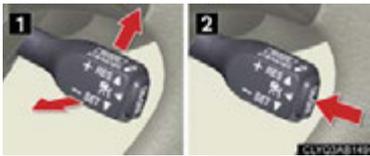

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the ON-OFF button.

## ■ Adjusting the speed setting



**To increase speed:** push the lever up.


**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

# Headlights

## ► Type A

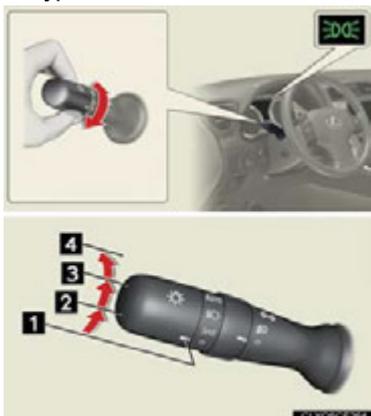

- 1** Off  
The daytime running lights turn on.
- 2** The instrument panel, side marker, parking (vehicles with halogen headlights), tail, daytime running lights and license plate lights turn on.
- 3** The headlights and all lights listed above (except daytime running lights) turn on.
- 4** The headlights, parking lights, daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

## ► Type B




- 1** Off  
The daytime running lights turn on.
- 2** The instrument panel, side marker, parking (vehicles with halogen headlights), tail, daytime running lights and license plate lights turn on.
- 3** The headlights and all lights listed above (except daytime running lights) turn on.
- 4** The headlights, parking lights, daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

## Fog Lights



### ► Type A

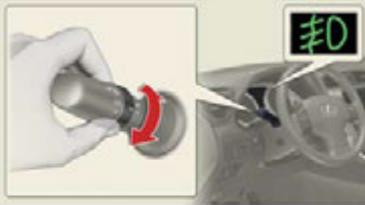

The fog lights can be used only when the headlights (low beam) are on.

- 1 Front fog lights off
- 2 Front fog lights on


### ► Type B

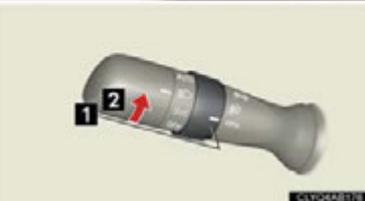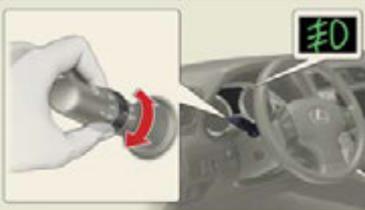

The fog lights can be used only when the headlights (low beam) are on.

- 1 Front fog lights off
- 2 Front fog lights on

## Instrument Panel Light Control

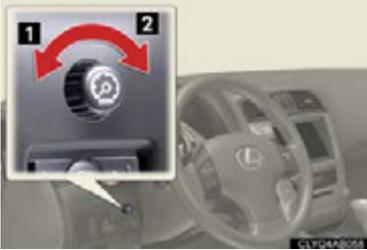

- 1 Darker
- 2 Brighter

## Windshield Wipers and Washer

### Intermittent windshield wipers

#### ► Type A



- 1 Off
- 2 Intermittent operation
- 3 Low speed
- 4 High speed
- 5 Single wipe



► Type B



- 1 Off
- 2 Intermittent operation
- 3 Low speed
- 4 High speed
- 5 Single wipe



Intermittent operation: Wiper interval can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

## ■ Rain-sensing windshield wipers

### ► Type A



- 1 Off
- 2 Automatic operation
- 3 Low speed
- 4 High speed
- 5 Single wipe




### ► Type B



- 1 Off
- 2 Automatic operation
- 3 Low speed
- 4 High speed
- 5 Single wipe



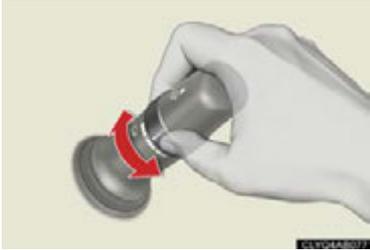

Automatic operation: Sensitivity can be adjusted by turning the band.




To spray washer fluid, pull the lever. The wipers will operate automatically.

## Touch Screen (with navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc. For details, refer to the "Navigation System Owner's Manual".

### Basic operation

The button positions, shapes and screen may slightly vary depending on the type of the touch screen.

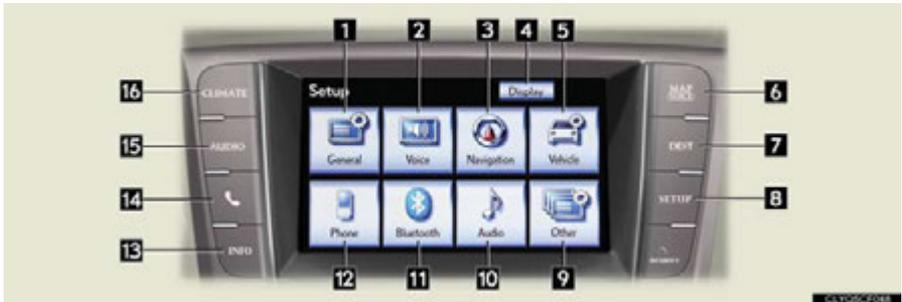


Press the button to display the screen. The "Setup" screen shown in the above illustration is displayed when the "SETUP" button is pressed.

- 1 "General": General settings screen
- 2 "Voice": Voice settings screen
- 3 "Navigation": Navigation settings screen
- 4 "Display": Adjust picture quality
- 5 "Vehicle": Vehicle settings screen
- 6 "MAP/VOICE": Vehicle's current position
- 7 "DEST": Destination screen
- 8 "SETUP": Setup screen
- 9 "Other": Other settings screen
- 10 "Audio": Audio settings screen
- 11 "Bluetooth\*": Bluetooth<sup>®</sup> settings screen
- 12 "Phone": Phone settings screen
- 13 "INFO": Information screen
- 14 : Hands-free operation screen
- 15 "AUDIO": Audio control screen
- 16 "CLIMATE": Air conditioning operation screen

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## ■ Display


### ▶ Adjusting the screen display

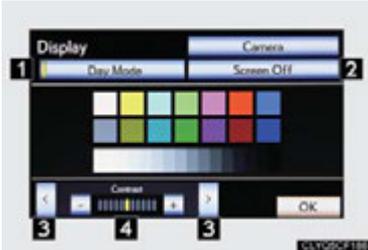

Push the "SETUP" button on the side of the touch screen and touch "Display" screen on the "Setup" screen.

- 1 Displays the screen in "Day Mode" with the headlight switch on
- 2 Turns the screen off
- 3 Change function
- 4 Adjust contrast/brightness

### ▶ Adjusting the image the camera display

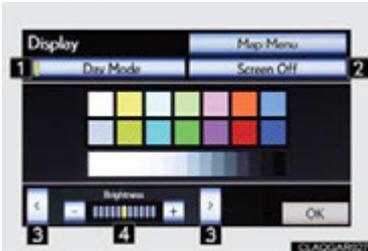

## Screen scroll operation



When any point on the map is touched, that point moves to the center of the screen.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the map configurations
- 5 Zooms in on the map
- 6 Zooms out on the map


## Setting a route

While route guidance is operating, you can change the route using the following method.



Touch "Route".

The following settings can be accessed

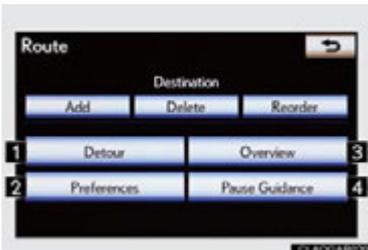

- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

## Navigation System (If Equipped)

### Register home



1 Push the "SETUP" button on the side of the touch screen. (→P.32)

2 Touch "Navigation".



3 Touch "Home".

4 Touch "Set Home".

5 Touch "Address".



6 Touch "City".

7 Input a city name and touch "OK".

8 Touch the screen button of the desired city name from the displayed list.

For security reasons, use a point close to your home instead of your actual home address.

9 Input the street name and touch "OK".

10 When the desired street name is found, touch the corresponding screen button.

11 Input a house number and touch "OK".

12 Touch "Enter".

13 Touch "OK".

## Destination input — Search by address


### ► Select by city name

#### STEP 2



- 1 Push the "DEST" button on the side of the touch screen. (→P.32)
- 2 Touch "Address".

#### STEP 3

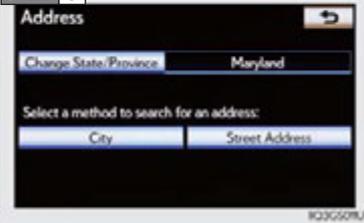



- 3 Touch "City".

#### STEP 4



- 4 Input a city name and touch "OK".
- 5 Touch the screen button of the desired city name from the displayed list.
- 6 Input the street name and touch "OK".
- 7 When the desired street name is found, touch the corresponding screen button.
- 8 Input a house number and touch "OK".
- 9 Touch "Go to".
- 10 Touch "OK".

► Select by street address

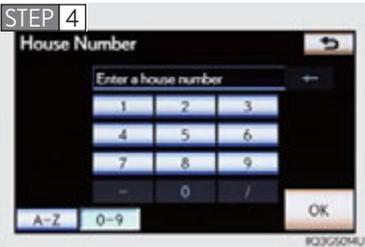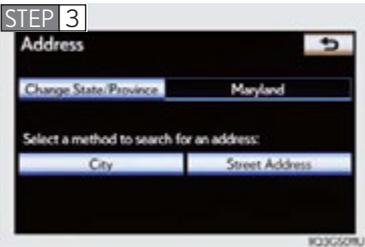

1 Push the “DEST” button on the side of the touch screen. (→P.32)

2 Touch “Address”.

3 Touch “Street Address”.

4 Input a house number and touch “OK”.

5 Input the street name and touch “OK”.

6 When the desired street name is found, touch the corresponding screen button.

7 Input a city name and touch “OK”.

8 Touch the screen button of the desired city name from the displayed list.

9 Touch “Go to”.

10 Touch “OK”.


## Destination input — Search points of interest by name

### STEP 2



- 1 Push the “DEST” button on the side of the touch screen. (→P.32)
- 2 Touch “Point of Interest”.

### STEP 3

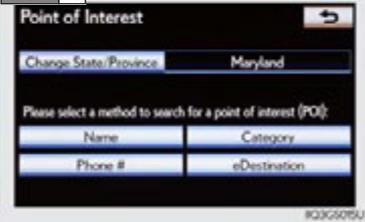

- 3 Touch “Name”.

### STEP 4




- 4 Input the name of the point of interest and touch “OK”.
- 5 Touch the screen button of the desired destination.
- 6 Touch “Go to”.
- 7 Touch “OK”.

## Destination input — Search points of interest by category



- 1 Push the "DEST" button on the side of the touch screen. (→P.32)
- 2 Touch "Point of Interest".

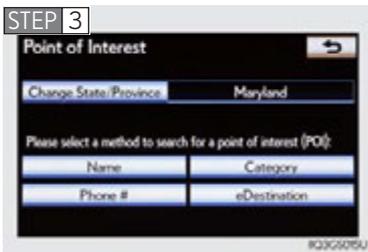

- 3 Touch "Category".



- 4 Touch "Near a Destination".
- 5 Touch the screen button of the desired destination and set screen the search point.
- 6 Touch the desired point of interest category from the displayed list.
- 7 Touch the screen button of the desired item.
- 8 Touch "Go to".
- 9 Touch "OK".


## Destination input — Search points of interest by telephone number

### STEP 2



- 1 Push the “DEST” button on the side of the touch screen. (→P.32)
- 2 Touch “Point of Interest”.

### STEP 3

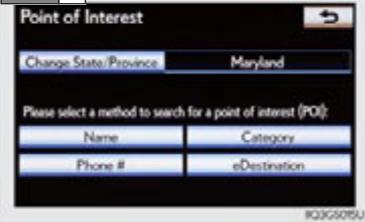

- 3 Touch “Phone #”.

### STEP 4



- 4 Input a telephone number and touch “OK”.
- 5 Touch “Go to”.
- 6 Touch “OK”.

## Hands-free System For Cellular Phone (with navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Push the  button on the side of the touch screen or press  on the steering wheel. (→P.32)



2 Touch "Yes".




3 Enter the passcode displayed on the screen into the phone.

Refer to the cellular phone user's manual for cellular phone operation.

4 If a completion message is displayed, registration is complete.

## ■ Phonebook transfer

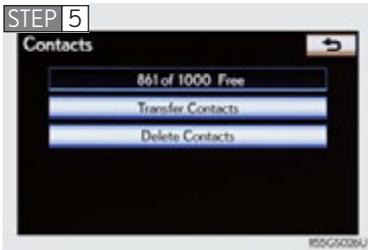

1 Push the "SETUP" button on the side of the touch screen. (→P.32)

2 Touch "Phone".

3 Touch "Phonebook".

4 Touch "Manage Contacts".

5 Touch "Transfer Contacts".

6 Touch "Update Contacts".


7 Transfer the phonebook data to the system using the cellular phone.

Refer to the cellular phone user's manual for cellular phone operation.

## ■ Registering a speed dial



- 1 Push the "SETUP" button on the side of the touch screen. (→P.32)
- 2 Touch "Phone".
- 3 Touch "Phonebook".
- 4 Touch "Manage Speed Dials".

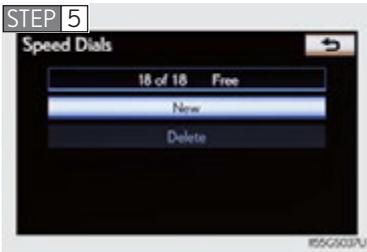

- 5 Touch "New".



- 6 Touch the data you want to register.
- 7 Touch the desired phone number.
- 8 Touch the button you want to register in.

## ■ Calling by speed dial

STEP 1




- 1 Push the  button on the side of the touch screen or press  on the steering wheel. (→P.32)

STEP 2



- 2 Touch "Speed Dials".

STEP 3

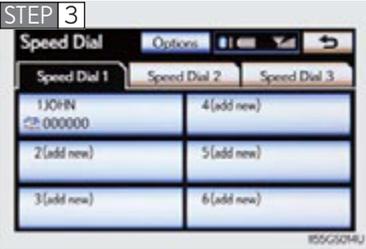

- 3 Touch the desired number to call.

## ■ Calling using SMS/MMS message



- 1 Push the  button on the side of the touch screen or press  on the steering wheel. (→P.32)



- 2 Touch "Messages".
- 3 Touch "SMS/MMS" tab.
- 4 Touch the desired received message from the displayed list.
- 5 Press  on the steering wheel.

The tab display may vary depending on the type of cellular phone.

## ■ Receiving a call




1 When a call is received, this screen is displayed with a sound.



2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

## ■ Steering switches

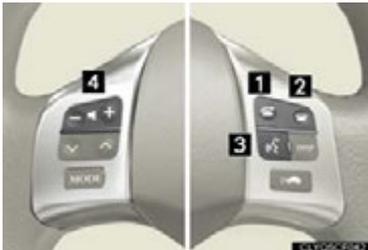

- 1 Sending/Receiving/"Phone" screen display
- 2 End call/Refuse call
- 3 Start the voice command system
- 4 Increases/decreases volume

## Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

### Basic operation



- 1 Displays the audio control screen
- 2 Audio sources  
AM: AM radio  
FM: FM radio  
SAT (if available): Satellite radio  
Apps (if available): Internet radio broadcast  
DISC: DVD player/CD player  
iPod: iPod  
USB: USB memory  
BT Audio: Bluetooth® audio  
AUX: Auxiliary audio device
- 3 Sound quality modes
- 4 Mute/unmute or pause/resume the current operation
- 5 Power/Volume

### Radio



- 1 Displays the audio control screen
- 2 Station selector
- 3 Scanning for receivable stations
- 4 Using HD Radio™ Technology
- 5 Adjusting the frequency
- 6 Preset tuning/seeking the frequency

## ■ Entering station presets

- 1 Touch the desired station by using the tune, seek or scan function.
- 2 Press and hold one of the preset buttons (1-6) until a beep is heard, indicating that the station has been set.

## ■ DVD player/CD player

---

### ■ Playing an audio CD



- 1 Displays the audio control screen
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Track select
- 6 Track select/rewind/fast-forward
- 7 Eject

### ■ Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Folder select
- 6 File select
- 7 File select/rewind/fast-forward
- 8 Eject

## ■ Playing a DVD



- 1 Displays the audio control screen
- 2 Reverse
- 3 Stop
- 4 Pause/Playback
- 5 Image display (full screen)
- 6 Fast forward
- 7 Chapter select
- 8 Eject

## ■ Operating an iPod



- 1 Displays the audio control screen
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Select play mode
- 6 Displays the iPod video control screen
- 7 Song select
- 8 Song select/rewind/fast-forward

## ■ Remote control (steering wheel switches)

---

Some audio features can be controlled using the switches on the steering wheel.



- 1** Increases/decreases volume
- 2** Radio mode: Selects a radio station  
Audio CD mode: Selects a track  
MP3/WMA disc mode: Selects a file and folder  
DVD mode: Selects a chapter  
iPod mode: Selects a song
- 3** Press: Turns the power on, selects audio source  
Press and hold: Mute/unmute or pause/resume the current operation

## Air Conditioning System (with navigation system)



- |  |   |
|--|---|
| 1 Fan speed control  | 10 Micro dust and pollen filter                     |
| 2 Air flows to the feet and the windshield defogger operates | 11 Off  |
| 3 Outside temperature  | 12 Automatic mode                                   |
| 4 Passenger's side temperature display                       | 13 Driver's side temperature control                |
| 5 Air outlet selector  | 14 DUAL mode  |
| 6 Outside air/recirculated air mode                          | 15 Cooling and dehumidification function on/off     |
| 7 Passenger's side temperature control                       | 16 Driver's side temperature display                |
| 8 Rear window and outside rear view mirror defoggers         | 17 Air conditioning operation screen display button |
| 9 Windshield defogger  |   |

### ■ Using the automatic mode

Press **12** to turn on the airflow and **13** to adjust the temperature.

### ■ Adjusting the temperature

#### ■ To simultaneously adjust the driver's side and passenger's side temperature settings

Touch **14** to turn the "DUAL" indicator off ( **DUAL** ) and then press **13**.

#### ■ To individually adjust the driver's side and passenger's side temperature settings

Touch **14** or press **7** to turn the "DUAL" indicator on ( **DUAL** ) and then press **13** or **7**.

### ■ To turn off the airflow

Press **11**.

## Hands-free System For Cellular Phone (without navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name\*.
- \*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance\* for registration completion is finished, press .

\*: For vehicles sold in U.S. mainland, Canada and Hawaii only



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by number



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by speed dial

---

STEP 1



1 Press  .

STEP 2



2 Press the desired preset button (1-6).

3 Press  .

## ■ Phonebook transfer



- 1 Press  .
- 2 Press  and say "Phonebook".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Changing the registered name

STEP 1



- 1 Press .
- 2 Press  and say "Phonebook".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Registering a speed dial

STEP 1



- 1 Press  .
- 2 Press  and say "Phonebook".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button (1-6).
- 8 Press  and say "Confirm".

STEP 7



: Pressing this switch turns the voice command system on. Say a command after the beep.

## Audio System (without navigation system)

### Basic operation

#### ► Type A



- 1 Sound quality modes
- 2 Automatic Sound Levelizer (ASL)
- 3 Mute
- 4 Audio sources
  - AM•FM: AM radio/FM radio
  - SAT: Satellite radio
  - CD•AUX: CD player/Auxiliary audio device/USB memory/iPod/Bluetooth® audio player
- 5 Power/Volume

#### ► Type B



- 1 Sound quality modes
- 2 Automatic Sound Levelizer (ASL)
- 3 Mute
- 4 Audio sources
  - AM: AM radio
  - FM: FM radio
  - CD: CD player
  - AUX: Auxiliary audio device/USB memory/iPod/Bluetooth® audio player
- 5 Power/Volume

## Radio

### ► Type A



- 1 Traffic information
- 2 Station presets
- 3 Text messages
- 4 Radio tuner
- 5 RDS genre select
- 6 Scanning radio stations
- 7 Seek

### ► Type B



- 1 Traffic information
- 2 Station presets
- 3 Radio tuner
- 4 Station select
- 5 Seek

## ■ Entering station presets

- 1 Press the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

## ■ CD player

### ■ Playing an audio CD

#### ▶ Type A



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Text information
- 5 Disc select
- 6 Disc load
- 7 Search playback
- 8 Playback
- 9 Eject
- 10 Track select/rewind/fast-forward

#### ▶ Type B



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Text information
- 5 Disc select
- 6 Disc load
- 7 Playback
- 8 Eject
- 9 Track select/rewind/fast-forward

## ■ Playing a CD with MP3/WMA files

### ▶ Type A



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Folder select
- 5 Text information
- 6 File select
- 7 Disc select
- 8 Disc load
- 9 Search playback
- 10 Playback
- 11 Eject

### ▶ Type B



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Folder select
- 5 Text information
- 6 File select
- 7 Disc select
- 8 Disc load
- 9 Playback
- 10 Eject

## ■ Loading a CD

- 1 Press the "LOAD" button.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".

## ■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".  
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.  
Repeat the procedure for the remaining CDs.  
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.

## ■ Operating an iPod

### ▶ Type A



- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Text information
- 6 Playback
- 7 Menu/Song select
- 8 Song select/rewind/fast-forward

### ▶ Type B



- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Text information
- 6 Playback
- 7 Menu/Song select
- 8 Song select/rewind/fast-forward

## ■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1** Volume
- 2** Radio mode: radio tuner  
CD mode: disc/track/file (MP3/WMA) select  
iPod mode: song select
- 3** Power on/change mode: press  
Power off: press and hold

## Air Conditioning System (without navigation system)



- |   |                                   |
|---|-----------------------------------|
| 1 Passenger side temperature display                  | 6 Dual mode button                |
| 2 Passenger side temperature control                  | 7 Driver side temperature control |
| 3 Windshield defogger                                 | 8 Automatic mode button           |
| 4 Outside air/recirculated air mode button            | 9 Driver side temperature display |
| 5 Cooling and dehumidification function on/off button | 10 "OFF" button                   |
|   | 11 Fan speed controls             |
|   | 12 Air outlet selector button     |

### Using the automatic mode

---

Press **8** to turn on the airflow and **7** to adjust the temperature.

### Adjusting the temperature

---

#### To simultaneously adjust the driver's side and passenger's side temperature settings

Press **6** to turn the "DUAL" indicator off (  ) and then press **7**.

#### To individually adjust the driver's side and passenger's side temperature settings

Press **6** or **2** to turn the "DUAL" indicator on (  ) and then press **7** or **2**.

### To turn off the airflow


---

Press **10**.

## Voice Command System

### Basic operation

**NOTE:** When inputting voice commands you must wait until after the beep to speak.

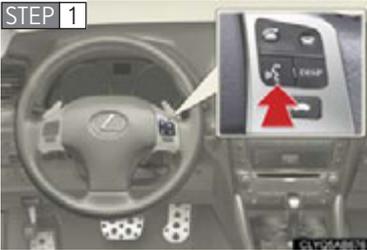

1 Press .

2 - If you know the command:

Press  again.

- If you do not know the command:

Follow the voice guidance\* to learn the command and then press  again.

\*: For vehicles sold in U.S. mainland, Canada and Hawaii only

3 Say a command after the beep.

#### ■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- Vehicles sold in U.S. mainland, Canada and Hawaii only: If you know what command to use, you can press  at any time to interrupt the voice guidance.

## ■ Command list

### ► Without navigation system

PHONE			
To Operate a Bluetooth® Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

### ► With navigation system

#### Set a Destination

Command	Action
"Find Nearby <POI category>"	Displays a list of <POI category*> near the current position.
"Enter an Address"	Enables setting a destination by saying the address.
"Go Home"	Displays the route to home.
"Call Destination Assist"	Connects Lexus Enform with Safety Connect response center.
"Destination by Phone Number"	Enables setting a destination by saying the phone number.

\*: For example; Gas stations, Restaurants, etc.

## Use the Phone

Command	Action
"Call <name> <type>"	Calls made by saying a name from the phonebook. For example: Say "Call John Smith", "Call John Smith, mobile" etc.
"Dial <number>"	Calls made by saying the phone number. For example: Say "Dial 911", "Dial 5556667777" etc.
"International Call"	Calls international numbers by saying the phone number.

## Play Music

Command	Action
"Play Artist <name>"	Plays tracks by the selected artist. For example: Say "Play artist <XXXXXX>"*
"Play Album <name>"	Plays tracks from the selected album. For example: Say "Play album <XXXXXX>"*
"Play Song <name>"	Plays the selected track. For example: Say "Play song Summertime", "Play song Concerto in A Major" etc.
"Play Playlist <name>"	Plays tracks from the selected playlist. For example: Say "Play playlist My Favorite Songs", "Play Playlist Classic Hits" etc.

\*: Say the desired artist name or album name in the place of the "<>".

## Get Information

Command	Action
"Traffic"	Displays the traffic incident list.
"Weather"	Displays weather information.
"Sports Scores"	Displays the sports list.
"Stock Quotes"	Displays the stocks list.
"Fuel Prices"	Displays the fuel prices list.
"Lexus Insider"	Displays the Lexus insider list.

## Select audio mode

Command	Action
"Radio", "AM", "FM", "Satellite radio", "Disc", "Auxiliary", "Bluetooth* audio", "iPod", "USB audio"	Change the audio mode.
"Audio on"	Turns the audio system on.
"Audio off"	Turns the audio system off.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## Climate/air conditioning system command

Command	Action
"Automatic climate control"	Turns air conditioning system on and off.
"Warmer"	Turns temperature up.
"Cooler"	Turns temperature down.

"Select audio mode" and "Climate/air conditioning system command" are enable when expanded voice commands are turned "On". Refer to the "Owner's Manual" and "Navigation System Owner's Manual".

## Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### System components



- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

### Services

Subscribers have the following Safety Connect services available:

#### ● Automatic Collision Notification\*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

#### ● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## **Lexus Enform with Safety Connect (If Equipped)**

Lexus Enform with Safety Connect is a feature that includes Apps, Destination Assist, eDestination, Lexus Insider, and Safety Connect.

The functions included in Lexus Enform with Safety Connect are classified into the following three functions.

For details, refer to the “Owner’s Manual” and “Navigation System Owner’s Manual”.

### **Function achieved by using a cellular phone**

---

#### **Services**

Of the functions included with Lexus Enform with Safety Connect, only Apps can be achieved by using a cellular phone.

Apps is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen.

#### **● APPS**

Each time “Apps” is activated, the system checks for updates. When there are no updates available, the main menu screen will be displayed right after a screen indicating that updates are being checked for has been displayed.

#### **Subscription**

Apps will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### **Function achieved by using DCM and the navigation system**

---

#### **Services**

Of the functions included with Lexus Enform with Safety Connect, Destination Assist, eDestination, and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus’ designated response center, which operates 24 hours per day, 7 days per week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

- **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform with Safety Connect response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

- **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, personalized folders that contains the locations to be sent to your vehicle can be created. (See Lexus Enform with Safety Connect Guide for more information.)

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time. You may opt out of receiving Lexus Insider messages at any time.

## ■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or touch "Destination Assist" in your vehicle for further subscription details.

## ■ **Function achieved by using DCM**

---

### ■ **Services**

Of the functions included with Lexus Enform with Safety Connect, Safety Connect can be achieved by using DCM.

- Safety Connect (→P.70)

## XM Services (If Equipped)

XM services are subscription-based XM Satellite Radio services to provide convenient features to subscribers.

For details, refer to the “Owner’s Manual” and “Navigation System Owner’s Manual”.

### Services

---

With an active XM subscription, the following features are available:

- **XM Sports and XM Stocks** \*1

XM Sports and XM Stocks are services included with an XM Satellite Radio subscription. These services are also available with an XM Travellink subscription. With these services, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM Fuel Prices** \*2

XM Fuel Prices is a service included with an XM Travellink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

- **XM NavWeather**™\*2

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map screen.

- **XM NavTraffic**®\*2

The subscription-based XM NavTraffic® service allows the navigation system to display traffic information on the map screen.

\*1: Available at no extra charge with an active XM Satellite Radio subscription.

\*2: Available via separate XM subscription(s).

### Subscription

---


XM NavTraffic®, XM NavWeather™ and XM Travellink require separate XM subscription(s). XM Sports\*, XM Stocks\* and XM Fuel Prices are available with an XM Travellink subscription. After a 90-day trial, you must contact XM and set up the appropriate XM subscription(s) to continue receiving these services.

\*: XM Sports and XM Stocks are included with an XM Satellite Radio subscription.

## Door Locks

### Locking the vehicle from inside

---

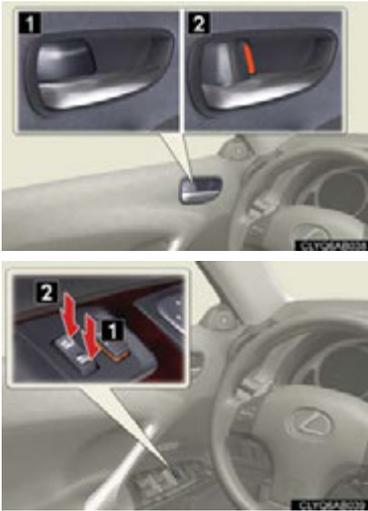

#### ► Inside lock button

- 1 Locks
- 2 Unlocks

#### ► Door lock switch

Operates both side door locks.

- 1 Locks
- 2 Unlocks

### Locking the vehicle from outside

---

Using the entry function or wireless remote control (→P.9, 10)

## Power Windows



### 1 Power window switches

**To open:** press the switch.

**To close:** pull the switch up.

**To one-touch closing (front windows):** fully pulling up and releasing the switches causes the windows to close fully.

**To one-touch opening (all windows):** fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of passenger window switches.


### 3 All window control switch

**To open:** press the switch.

**To close:** pull the switch up.

**To one-touch opening:** fully pressing down and releasing the switch causes the all windows to open fully.

## Retractable Hardtop

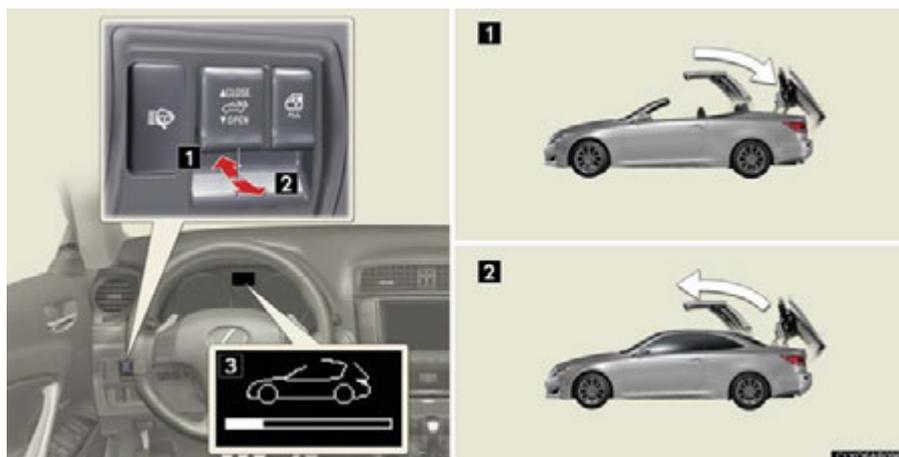


- 1** Opening the retractable hardtop  
Press and hold the switch until “COMPLETE” is shown on the display.
- 2** Closing the retractable hardtop  
Pull up and hold the switch until “COMPLETE” is shown on the display.
- 3** Retractable hardtop status display  
Warnings, advice and the operational status of the retractable hardtop will be displayed.

### To operate the retractable hardtop


When the following conditions are met, the retractable hardtop can be operated:

Operating condition	Details
The vehicle is stopped	–
The trunk lid is closed	–
The “ENGINE START STOP” switch is in IGNITION ON mode	(→P.15)
The luggage cover is installed	(→P.78)
The trunk opener main switch is on	(→P.80)
No obstacles are detected by the intuitive parking assist	Refer to the Owner's Manual for details.

## ■ Installing the luggage cover

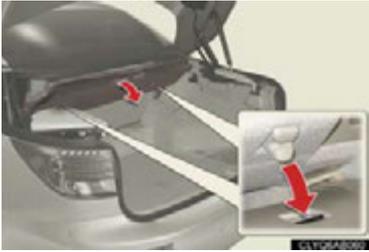


- 1 Pull the board of the luggage cover toward you to unhook the hooks.

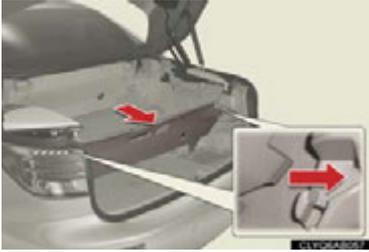

- 2 Pull the luggage cover further until the tabs on the sides of the cover fit securely into the holders on the sides of the trunk.

Make sure the upper part of the board is securely positioned in the holders.

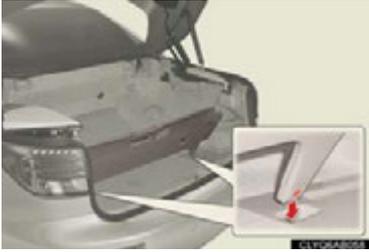


- 3 Fit the tabs on the bottom of the luggage cover into the holders on the floor of the trunk.

Make sure the lower part of the board is securely positioned in the holders on the floor

If the retractable hardtop still does not operate, see the owner's manual for more information or contact your Lexus dealer.

## Fuel Tank Cap

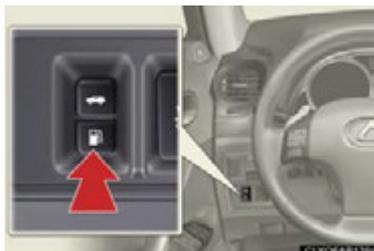

1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.


After the cap is removed, it can be hung on the inside of the fuel filler door.

## Trunk

### Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

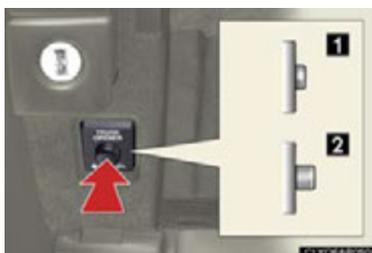

To disable the trunk opener, turn off the main switch in the glove box.

- 1 On
- 2 Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

### Entry function and wireless remote control

→P9, 10

## What to do if ...

### List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

**BRAKE**

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



Electric power steering system warning light



(Comes on)

Pre-collision system warning light<sup>\*1</sup>



SRS warning light



(Blinking and then continuously on)

Tire pressure warning light



(U.S.A.)

"ABS" warning light



(Canada)



(Comes on)

Slip indicator

Follow the correction procedures.



Open door warning light



(On the center panel)

Front passenger's seat belt reminder light



Low fuel level warning light



(Illuminates without blinking)

Tire pressure warning light<sup>\*2</sup>



Driver's seat belt reminder light

(On the instrument cluster)



Master warning light

For further information, refer to the Owner's Manual.

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



"ECT SNOW" indicator



Pre-collision system warning light<sup>\*1</sup>  
(Flashes or flashes quickly)



"ECT PWR" indicator



Cruise control indicator



Intuitive parking assist indicator<sup>\*1</sup>



(Flashes)

Slip indicator



VSC off indicator



SRS airbag on-off indicator



Shift position and shift range indicators

For further information, refer to the Owner's Manual.


<sup>\*1</sup>: If equipped

<sup>\*2</sup>: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature excluding the spare tire. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

## What to do if ...

### If the electronic key does not operate properly

#### Unlocking and locking the doors

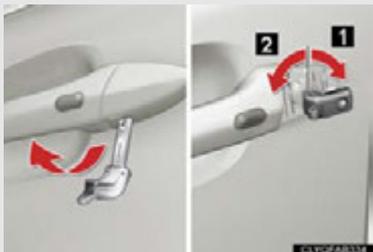

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

#### Starting the engine



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.



If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## If the engine doesn't start

Make sure that the correct operating procedures have been followed.



### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.15)



### Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch. (→P.11)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

### Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Closed the trunk while the electronic key is still inside and both side doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "ENGINE START STOP" switch OFF	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close both side doors and lock the doors again.
Interior alarm sounds continuously	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm pings continuously	Switched to ACCESSORY mode while the driver's door is open (Opened the driver's door when the "ENGINE START STOP" switch is in ACCESSORY mode.)	Close the driver's door.
	Turned the "ENGINE START STOP" switch OFF while the driver's door is open	Close the driver's door.

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, both side doors unlocked in two steps	Both side doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	On	Off
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	30 seconds
			120 seconds
	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
	Door lock buzzer	On	Off
	Trunk unlocking function	On	Off
	Trunk unlocking operation	Push and hold	Push twice
			One short push
Panic function	On	Off	

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, both side doors unlocked in two steps	Both side doors unlocked in one step
	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks both side doors	Off	On
	Shifting gears to P unlocks both side doors	On	Off
	Shifting gears to position other than P locks both side doors	On	Off
Steering wheel	Auto tilt-away function	On	Off
Power windows	Wireless remote control linked operation	Off	On

Item	Function	Default setting	Customized setting
Retractable hardtop	Retractable hardtop operation control linked to the intuitive parking assist	On	Off
Automatic light control system	Light sensor sensitivity	Level 3	Level 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
Lights	Daytime running light system (U.S.A. only)	On	Off
Windshield wipers and washer	Switching operation when the vehicle is stationary	On	Off
	Drip prevention function	On	Off
	Time elapsed before the drip prevention function operates	Variable depending on the vehicle speed	3 seconds
Intuitive parking assist	Back sensor operation display and buzzer	On	Off
	Buzzer volume	Level 3	Level 1 to 5
	Distance which a sensor detects	4.9 ft. (150 cm)	2.0 ft. (60 cm)
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	On	Off
	Operation after the "ENGINE START STOP" switch turned OFF	On	Off
	Front foot well lights	On	Off
	Shift lever light	On	Off
	Outer foot lights	On	Off





### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2014 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.