



Lamborghini
CALORECLIMA

AZIENDA CERTIFICATA ISO 9001



PREGASI CONSEGNARE
L'INSERTO "MANUALE D'USO"
AL SIG. UTENTE
PLEASE MAKE SURE THAT THE
"USE MANUAL" IS HANDED
OVER TO THE USER
TENGAN LA AMABILIDAD DE
ENTREGARLE AL USUARIO EL
"MANUAL DE USO"
FAVOR ENTREGAR O
"MANUAL DE USO"
AO SR. UTENTE

CALDAIA MURALE A GAS A CONDENSAZIONE ISTANTANEA
WALL-HUNG GAS INSTANTANEOUS CONDENSING BOILER
CALDERA MURAL A GAS CON CONDENSACIÓN INSTANTÁNEA
CALDEIRA DE PAREDE A GÁS DE CONDENSAÇÃO INSTANTÂNEA



Futura L 24-28 MC W TOP /IT

MANUALE DI
INSTALLAZIONE E
MANUTENZIONE

INSTALLATION
AND MAINTENANCE
MANUAL

MANUAL PARA
LA INSTALACIÓN Y
EL MANTENIMIENTO

MANUAL DE
INSTALAÇÃO E
MANUTENÇÃO



INDEX	PAGE
GENERAL INSTRUCTIONS	41
DESCRIPTION	42
INSTALLATION	43
DIMENSIONS mm.	44
TECHNICAL FEATURES	44
HYDRAULIC CONNECTION	45
MAIN COMPONENTS	46
HYDRAULIC CIRCUIT	47
ELECTRICAL CONNECTIONS - WIRING DIAGRAMS	48
WIRING DIAGRAM	52
FLUE EXHAUST INSTALLATION	53
OPERATION	57
IGNITION	58
MAINTENANCE	59
CONTROL PANEL	63
ADJUSTMENTS	64
OPERATING SEQUENCE	65
LIST OF PARAMETERS INDICATED BY 1 st FIGURE ON DISPLAY	66
DATA DISPLAY (MONITOR system)	67
FAULT CODE	68
RESETTING	69
PARAMETER DISPLAY AND MODIFICATION (ACCESS CODE)	69
GAS VALVE ADJUSTMENT	72
VARYING FAN R.P.M.	72
NOZZLE CALIBRATION	73
BURNER PRESSURE CURVES - OUTPUT	73
TRANSFORMATION NATURAL GAS - B/P	74
HEATING WITH OUTDOOR SENSOR AND ROOM THERMOSTAT	75

Congratulations...

...on an excellent choice.

We thank you for the preference accorded to our products.

LAMBORGHINI CALORECLIMA has been actively present in Italy and throughout the world since 1959 with a widespread network of agents and concessionary agents to constantly guarantee the presence of our product on the market. Alongside this is the support of a technical service, "LAMBORGHINI SERVICE", which is entrusted with the qualified servicing of the product.

For the installation and positioning of the boiler:
CAREFULLY OBSERVE THE LOCAL REGULATIONS IN FORCE



GENERAL INSTRUCTIONS

- This booklet constitutes an integral and essential part of the product.
Read carefully the instructions contained in this booklet as they provide important directions regarding the safety of installation, use and maintenance. Preserve this booklet with care for any further consultation. The installation of the boiler must be carried out in compliance with current regulations, according to the instructions of the manufacturer and by qualified personnel. An incorrect installation can cause injury or damage to persons, animals and objects, for which the manufacturer cannot be held responsible.
- After removing the packaging materials, check the content integrity. In case of doubt, do not use the unit and contact the supplier. The packaging material (wooden crates, nails, clips, plastic bags, foam, etc.) must not be left within reach of children as they are potential sources of danger.
- This boiler is designed to heat water to a temperature below boiling (atmospheric pressure). It must be connected to a heating system compatible with its performances and output.
- This appliance should be destined only for the use for which it has been expressly envisaged. Any other use is to be considered improper and therefore dangerous. The manufacturer cannot be considered responsible for any damages caused from improper, erroneous or unreasonable use.

ALL INSTALLATION, MAINTENANCE AND GAS CONVERSION OPERATIONS MUST BE CARRIED OUT BY AUTHORISED SKILLED TECHNICIANS.

TO ENSURE THAT BOILER IS INSTALLED CORRECTLY AND THAT IT FUNCTIONS PROPERLY, WE RECOMMEND THAT ONLY LAMBORGHINI ACCESSORIES AND SPARE PARTS BE USED.

ON NOTICING THE SMELL OF GAS DO NOT TOUCH ANY ELECTRIC SWITCH. OPEN DOORS AND WINDOWS. SHUT OFF THE GAS COCKS.

INSTALL THE BOILER ON WALLS WHICH ARE AS WIDE AS OR WIDER THAN THE BOILER ITSELF.



DESCRIPTION

FUTURIA L 24-28 MC

Perfectly air-tight with respect to its surroundings, this unit is suitable for heating water to temperatures below boiling point at atmospheric pressure. Fully automatic, the FUTURIA L boiler is governed by an electronic microprocessor-operated control box.

Continuous power modulation is effected both on the heating circuit and the hot water circuit, by means of an electronic board controlling fan r.p.m.

Combustion analysis (to be measured at the flue base on the appropriate points) allows adjustment of gas delivery so that the right air/gas mix is always obtained. Each variation in fan r.p.m. (and the resulting air-flow) corresponds to a variation in the gas delivery rate.

This operation ensures a constant air-gas ratio whatever the flame intensity, thus guaranteeing maximum combustion efficiency and hygiene under all working conditions.

The electronic board also provides:

- 3-way valve and circulation pump efficiency test; this prevents the lock-out that might otherwise occur when the boiler remains idle for a prolonged period (the valve and pump are operated for a set time every 24 hours).
- Anti-freeze device: when the heating water temperature falls below 10°C the circulation pump comes on. If temperature continues to fall the burner will ignite at 3°C, burning at minimum. It will be switched off when the water is reheated to 10°C. **This is why the boiler must be left connected to the power supply even when it is not in use.**
- Board memory: The control box microprocessor will memorise and signal any anomalies. This information is stored on the memory even when the power is off and can be recalled by connecting up to a PC.
- **Temperature-adjustable** operation with external temperature compensation function (where installed).



INSTALLATION

To be carried out by qualified personnel.

The system must be installed in an area free from corrosive vapours and must comply with the legal standards in force regarding evacuation of combustion by-products. It is especially recommended that standards concerning safety, construction and flue positioning be strictly observed.

SYSTEM START-UP


- Open windows and doors and do not light any naked flames.
- Bleed the air
- Check that there are no gas leaks (use soapy water or an equivalent product).

Before installing the boiler it is important to remove any impurities from the water supply pipes; use air or inert gas.

Make sure that the boiler is suitable for the type of gas available to the user.



DIMENSIONS mm.

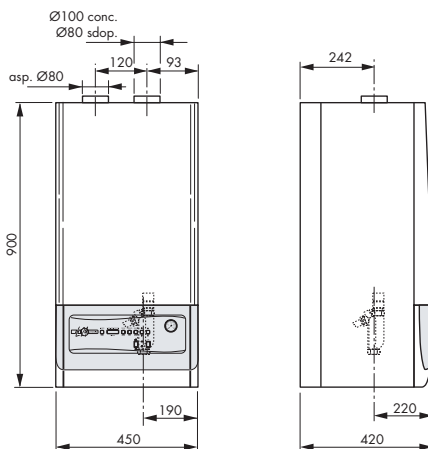

TECHNICAL FEATURES

MODEL FUTURIA	Thermal capacity						Min. thermal capacity						Operating pressure			Hot water supply		Expan. tank	Weight
	Input		Output 50/30°C		Output 80/60°C		Input		Output 50/30°C		Output 80/60°C		Heating circuit	Hot water circuit min.	Hot water circuit max.	Continuous supply Δ30°C	Min. supply		
	kW	kcal/h	kW	kcal/h	kW	kcal/h	kW	kcal/h	kW	kcal/h	kW	kcal/h	bar	bar	bar	l/min.	l/min.	l	kg
L 24 MC	25,0	21.500	25,75	22.145	24,5	21.070	8,8	7.568	9,33	8.022	8,98	7.719	3	0,2	6	11,7	2	8	72
L 28 MC	29,0	24.940	29,8	25.634	28,4	24.390	10	8.600	10,66	9.168	10,09	8.677	3	0,2	6	13,6	2	8	72

Boiler version: mod. C type C13-C33-C43-C53

Category: II 2H3B/P

Max. water temperature 90°C

Rated gas pressure: Natural gas 20 mbars

B 30 mbar

P 37 mbar

CIRCULATING PUMP FEATURES

Delivery/pressure available at the system





HYDRAULIC CONNECTION

Fit the supporting hooks and attach the assembly template, moving it up to the wall; fit all the pipes, starting with the end pipe fittings already mounted on the template: system supply, system return, cold water, hot water, any gas pipes and electric mains leads with room thermostat.

Once the pipes have been fitted, the end pipe fittings can be removed and ordinary caps fitted, ready for hydraulic tests to be carried out. The template can be removed or, if left in place, will be embedded in the wall once finishing operations have been completed (plaster and tiles); only the two supporting hooks will protrude from the wall, as well as an opening for the connections. Attach the boiler to the hooks through the holes at the back of the frame, push it up against the finished wall and fit the two lock nuts onto the hooks.


Make the necessary hydraulic connections using the pipes/tubes supplied, cutting them to the right length, depending on the distance between the fittings on the boiler and those on the template embedded in the wall.

CONDENSATE DISCHARGE

The condensate which forms inside the boiler must be discharged. The boiler is therefore fitted with a water trap. The water trap fitting must be connected to a outlet in PVC. It is advisable to insert another water trap on the discharge line before entry into the waste water system.

Important: should the condensate discharge pipe (supplied with the boiler) be replaced, always use a pipe with an internal diameter of at least 13 mm.

The cool condensate unloading in endowment is of Ø 25 mm external

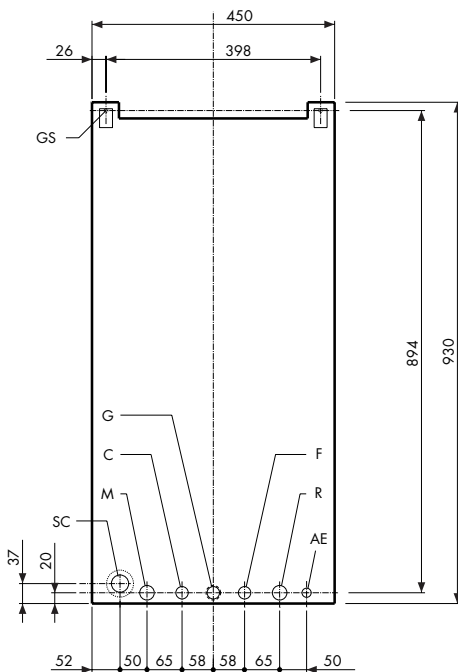

LEGEND

C Hot water

G Gas

F Boiler water supply

AE Electrical supply

M System delivery

R System return

GS Holding hooks

SC Condensate discharge duct

Ø 1/2"

Ø 3/4" (in the boiler)

Ø 1/2" (in the G./connections)

Ø 1/2" (cold)

Ø 3/4"

Ø 3/4"

Ø 10 mm.

Ø 80 mm.

NOTE:


Preview hydraulic female connections.



MAIN COMPONENTS

LEGEND


- 1 Air bleed valve
- 2 Control electrode
- 3 Fan
- 4 Ignition electrodes
- 5 Control box
- 6 Ignition transformer
- 7 Fume pressure switch
- 8 NTC 2 return sensor
- 9 NTC 3 hot water sensor
- 10 Water trap for condensate discharge
- 11 Circulating pump
- 12 Lack of water pressure switch
- 13 Filling cock
- 14 Hydrometer
- 15 NTC 1 delivery sensor
- 16 Expansion tank
- 17 3-way valve
- 18 Water-heater
- 19 Gas valve
- 20 Aluminium boiler body

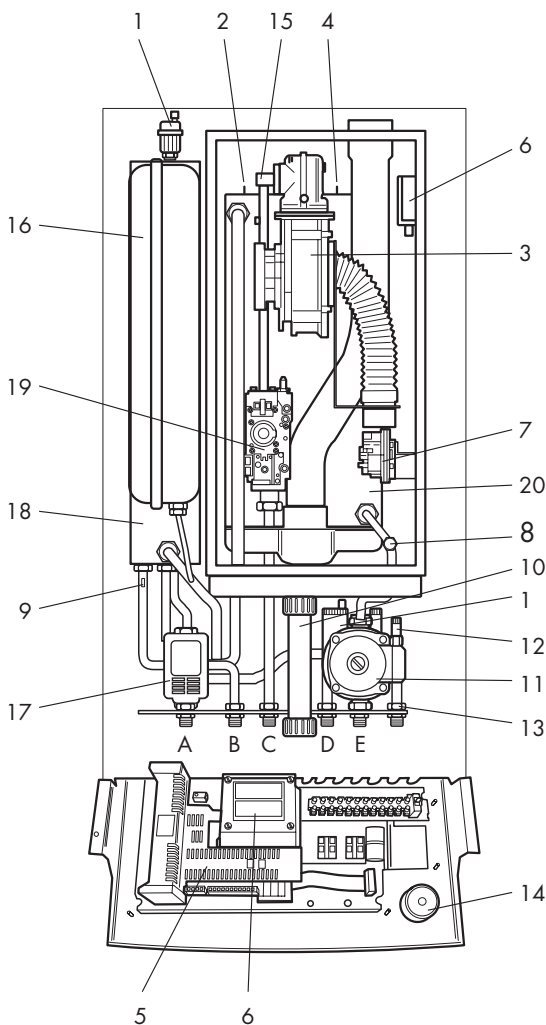

- A 3/4" Ø system delivery
- B 1/2" Ø hot water outlet
- C 3/4" Ø gas inlet
- D 1/2" Ø cold water inlet
- E 3/4" Ø system return



HYDRAULIC CIRCUIT

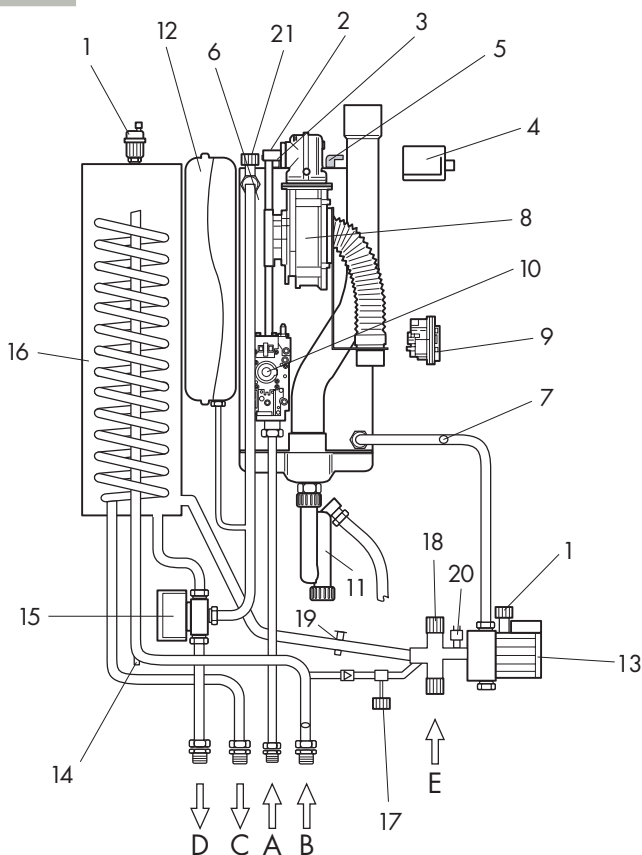

LEGEND

A	Gas	9	Air pressure switch
B	ICold water inlet	10	Gas valve
C	Hot water outlet	11	Water trap for condensate discharge
D	System delivery	12	Expansion tank
E	System return	13	Circulating pump
1	Air bleed valve	14	Hot water sensor
2	Control electrode	15	3-way valve
3	Nozzle connection	16	Water-heater
4	Ignition transformer	17	Filling cock
5	Ignition electrodes	18	Safety valve
6	System delivery control sensor	19	Drain tap
7	System return control sensor	20	Lack of water pressure switch
8	Fan	21	Air bleed tap



ELECTRICAL CONNECTIONS - WIRING DIAGRAMS

The boiler must be connected to an earthed, single-phase 230V-50 Hz mains supply by means of a three-wire cable, ensuring that connections to the LINE and NEUTRAL terminals are made correctly.

A bipolar switch must be used with contacts opening to at least 3 mm.

The power lead must only be replaced by another with the following characteristics: "HAR H05 vv-F" 3x1.00 mm². **(Only LAMBORGHINI accessories and spare parts be used).**

Installation must be made in compliance with safety REGULATIONS IN FORCE.

Make a good earth connection.

Voltage	Frequency	Absorbed power	Protection index	Noise level
V	Hz	W	IP	dB (A)
230	50	150	X 4D	<50

To gain access to the electrical panel which houses the power supply terminal block and any connection to an ambient temperature thermostat, proceed as follows:

- Disconnect the boiler power supply.
- Undo the screws 1 of the plastic front panel (Fig. A).

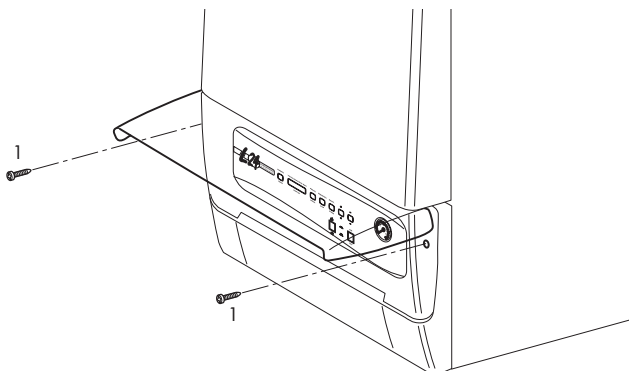


Fig. A



- Remove the plastic front panel attached to the sides by small bolts (Fig. B).

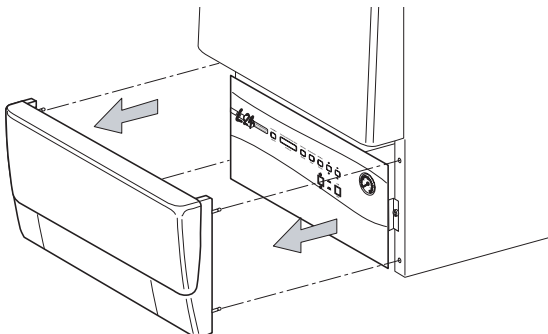


Fig. B

- Undo the screws 2 fixing the panel to the sides (Fig. C), the panel will open by about 20° and will stop in this position (Fig. D).

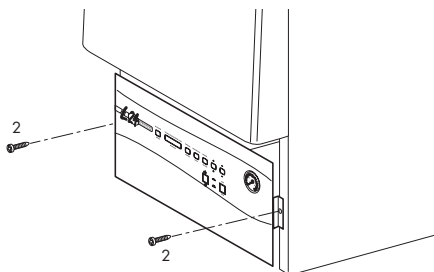


Fig. C

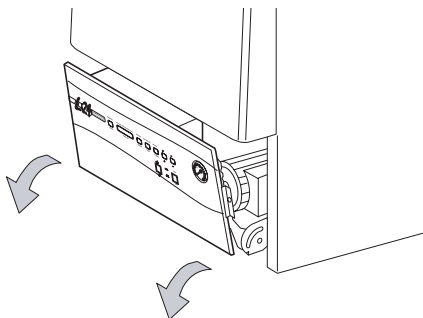


Fig. D



- To lower completely the panel it is first necessary to move it up and then lower it until the locking point is reached (Fig. E).

1st Move it up

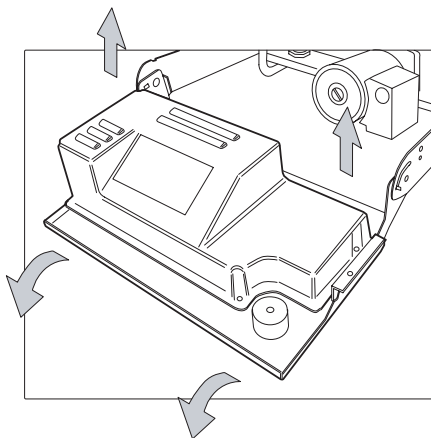


Fig. E

2nd Lower

- To remove the cover from the panel unscrew the bolts 3 (Fig. F).

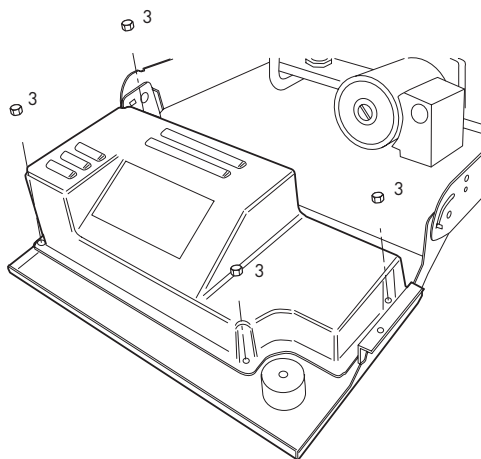


Fig. F



- It is now possible to have access to the terminal board (M) for maintenance or for possible connections (see wiring diagram page 52) of room thermostat or outdoor sensor (Fig. G).

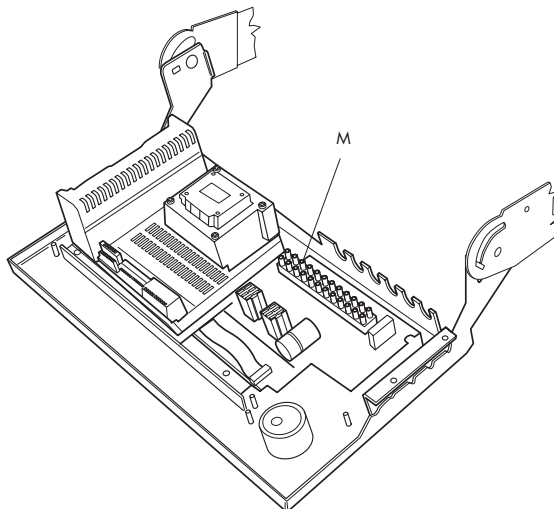


Fig. G

- To gain access to the display or for maintenance, it is possible to remove the holder (P), to which all electrical components are connected, by unscrewing the bolts 5 (Fig. H).


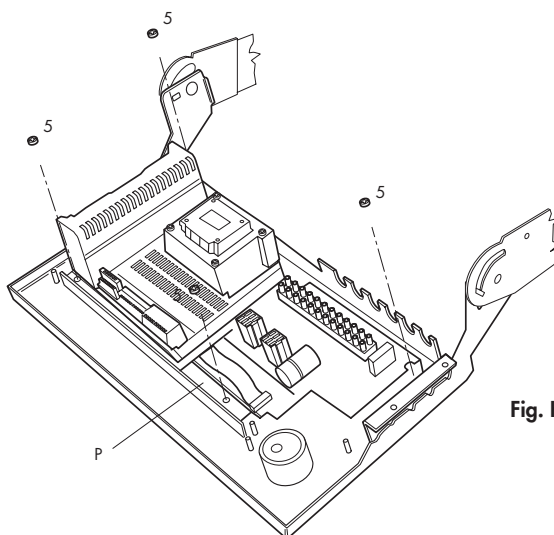


Fig. H



WIRING DIAGRAM

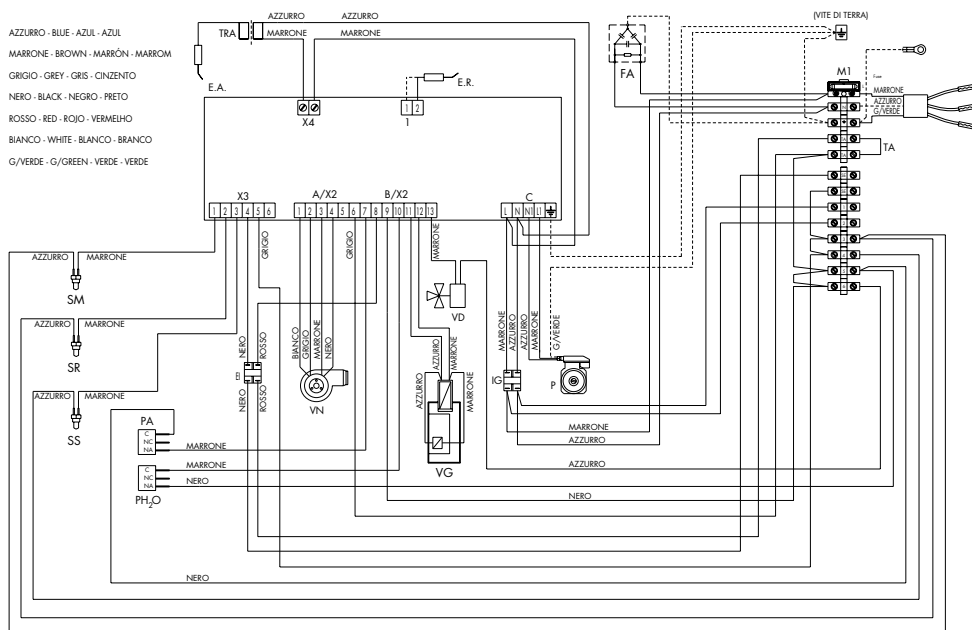

LEGEND

P	System circulating pump
PSG	Safety gas press. switch
PA	Air pressure switch
PH₂O	Water pressure switch
E.A.	Ignition electrode
E.R.	Control electrode
TRA	Transformer
IG	Main switch
VG	Gas valve
FA	Anti interference filter
TA	Room thermostat (optional)
SE	External sensor (optional)

SR	Return sensor
SS	Hot water sensor
SM	Delivery sensor
M1	Terminal board
VD	3 way valve
EI	Summer/Winter switch
VN	Fan
A/X2	5 poles connector
B/X2	8 poles connector
X3	6 poles connector
X4	2 poles connector
C	Connector




FLUE EXHAUST INSTALLATION

CONCENTRIC FLUE EXHAUST PIPE - STANDARD APPLICATIONS

Flue exhaust pipe lengths are referred to the electric fan pre-calibration, i.e. 5500 rpm with concentric flue pipe $\varnothing 100/60$.

FLUE EXHAUST PIPE FROM A WALL

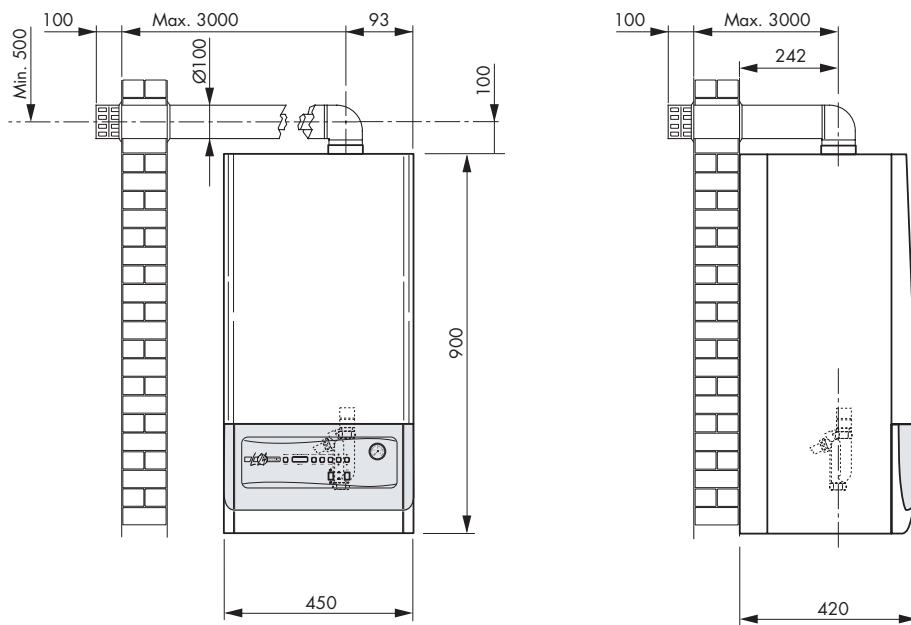


Elbow fitted at 90°: 1 m. length reduction
Elbow fitted at 45°: 0.5 m. length reduction

WARNING:

- Do not calibrate fan speed (rpm) higher than what is necessary.
- Use only air intake/flue exhaust kits produced by Lamborghini Caloreclima.



CONCENTRIC FLUE EXHAUST PIPE FROM THE ROOF

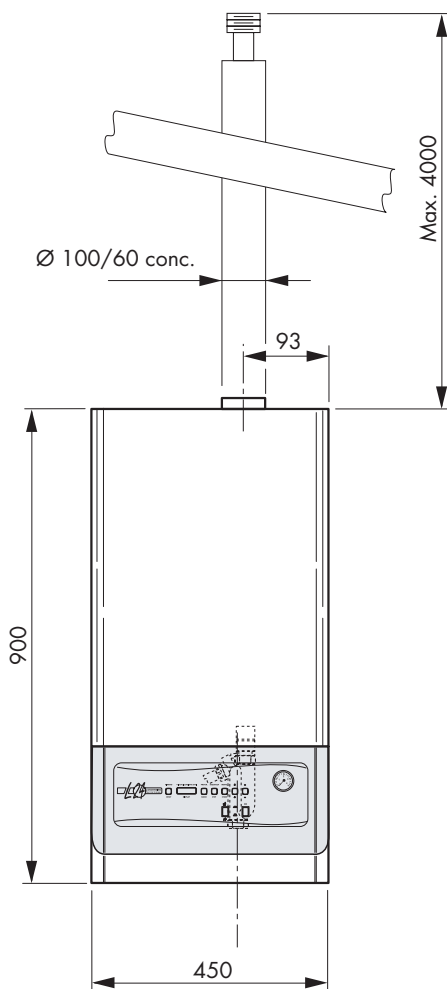

Elbow fitted at 90°: 1 m. length reduction

Elbow fitted at 45°: 0.5 length reduction

WARNING:


- Do not calibrate fan speed (rpm) higher than what is necessary.
- Use only air intake/flue exhaust kits produced by Lamborghini Caloreclima.



DOUBLE FLUE PIPE

The flue exhaust pipe should slope slightly upward (about 3%), to allow possible condensation to be collected in the boiler.

Flue exhaust pipe length (see table) is referred to the electric fan speed of 5500 rpm with pipe diameter Ø 80 or Ø 60.

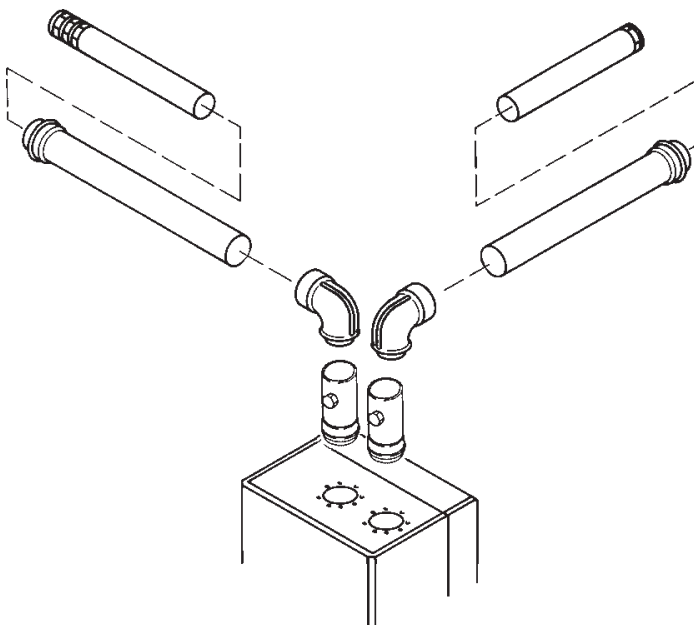

	Max.length Intake + Exhaust	Elbow fitted at 90°
Pipe diameter Ø 80 mm	50 mt.	0,6 mt.
Pipe diameter Ø 60 mm	20 mt.	2 mt.

WARNING:

- Do not calibrate fan speed (rpm) higher than what is necessary.
- Use only air intake/flue exhaust kits produced by Lamborghini Caloreclima.



FLUE EXHAUST PIPE INSTALLATION - SPECIAL APPLICATIONS

If types of flue exhaust different from the standard ones previously described are necessary, it is possible to increase the concentric exhaust length Ø 100/60 or the double pipe exhaust length Ø 60, by adjusting the electric fan speed (see paragraph "Parameters modification", page 69). The maximum obtainable fan speed is 5800 rpm, while the maximum exhaust length is referred to the following table:

Fan speed 5800 rpm	
Concentric flue exhaust pipe Ø 100/60 mm	Concentric pipe max. length 10 mt
Double pipe Ø 60 mm	Intake + exhaust max. length 35 mt

NOTE: For Ø 80 mm double pipe, only standard application is applied.



OPERATION

When the unit is switched on (or when it is reset), and where no heat has been requested, the system runs through the following procedure:

- 5 second safety pause
- 3-way valve activated for 15 seconds
- circulator activated for 60 seconds
- circulator and 3-way valve switched off

This cycle is run every 24 hours and 24 hours after the last heat request. The above operations ensure that the components are put in motion at least once a day.

HEATING

The heating start-up cycle, after a period of inactivity, is as follows:

- 3-way valve activated for 15 seconds
- pump activated
- air pressure switch contacts checked (they must be closed)
- fan switched on
- when heat is requested pre-ventilation begins
- ignition transformer switched on and gas valve opened
- if flame detection reveals normal operation the fan runs for a few seconds at maximum power and then modulation begins

When heat is no longer requested the burner is switched off while the pump continues to run for 3 minutes (post-circulation time). The 3-way valve is then deactivated.

If the flame is not detected the pre-ventilation/ignition cycle is repeated after a set safety period has elapsed (repeated up to 3 times, after which the unit is shut down).

HOT WATER PRODUCTION

When hot water is requested the 3-way valve switches immediately to the hot water circuit. When the burner is switched off the pump continues running for another two minutes after which it shuts down. A hot water request is detected by a temperature sensor on the hot water circuit heat exchanger; this trips the hot water production system when the sensor-detected temperature is lower than the phase n° 1 setting.

Modulation takes place immediately and proceeds as a function of boiler water return temperature.

When producing hot water, the burner goes out when the sensor-detected temperature exceeds set temperature.

DUAL FUNCTION (HOT WATER + HEATING)

If there is a request for hot water when heating is in progress, the 3-way valve diverts the water flow towards the hot water heat exchanger (hot water has precedence over heating). When hot water is no longer required the burner goes out and the pump continues running for another two minutes, then stops. The three-way valve then diverts the water flow back to the heating circuit.

The pump is then restarted and the heating function put back into operation.



IGNITION

SYSTEM FILLING

Bring the 3-way valve into the manual position. Open the inlet valve slowly until the system reaches a working pressure (indicated on the hydrometer) of approximately 1 bar, then close it.

Verify that the automatic air bleed valves have their cap loosened, run the circulator to eliminate the any air in the circuit, proceeding as follows:

press the ON button on the control panel (the display lights up) and activate the heating function (Summer/Winter switch set to Winter) to start the circulator. Press the OFF button to stop the circulator; repeat the procedure until all the air had been vented.

Reset the 3-way valve to the "automatic" position.

IGNITION

Open the gas cock, press the ON button. The burner will ignite automatically (the heating and hot water functions are set by the manufacturers).

Should the unit fail to ignite there will be another three ignition attempts after which there will be a shutdown (the display will flash **2 - 02**). Press RESET: if the unit still fails to ignite contact the technical assistance service.




MAINTENANCE

To remove the casing front panel (1) and access to the internal components, it is first necessary to remove the plastic front panel (2)* and open the control board (3)*.

Undo the screws (4) and remove the casing panel (1) fixed to the sides by four small pins.

If the lower closing panel (5) is to be removed, it is necessary to undo the four screws (6), doing this with care as the screws hold the lower closing panel.

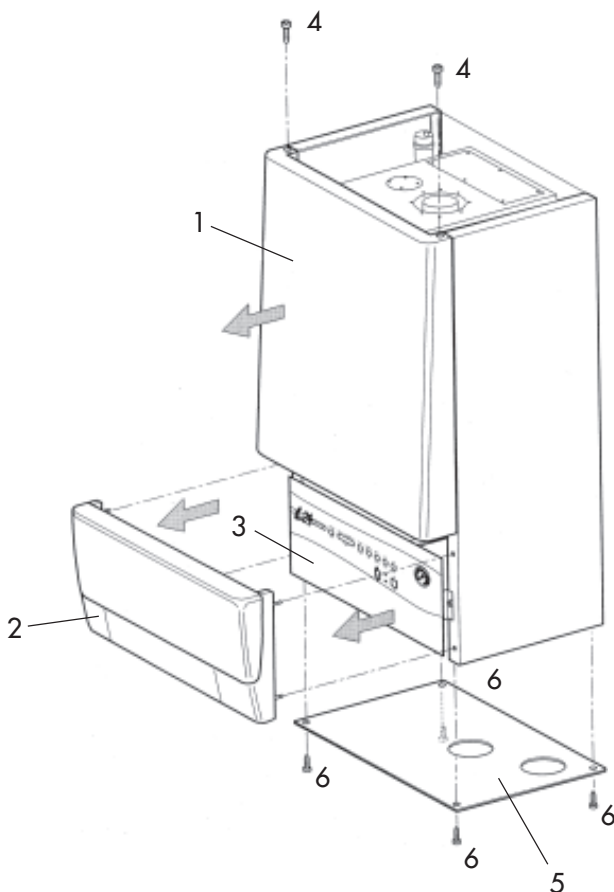

NOTE: To remove the plastic front panel and open the control board see paragraph "Wiring diagrams", page 48.



IGNITION AND CONTROL ELECTRODES INSPECTION

To gain access to ignition and control electrodes, remove the inspection cover on the sealed chamber (Fig. A).

- Undo the screws (1) and remove the inspection cover (C).
- The electrodes can be removed by undoing the screws (2).

EC Control electrode
EA Ignition electrode

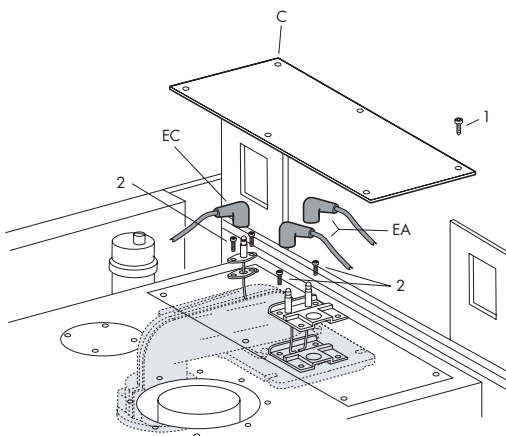


Fig. A

INSPECTION OF THE RETARDERS INSIDE THE COMBUSTION CHAMBER

To inspect the retarders situated inside the sealed chamber, it is first necessary to unfit the lower gas pipe (Fig. B).

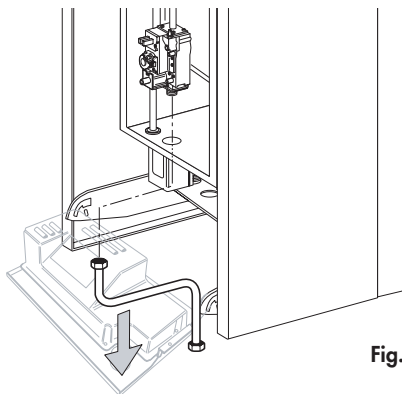


Fig. B



Extract syphon (S) and unscrew the syphon holder (CS), sealed by an O-ring, from the fume tank (Fig. C).

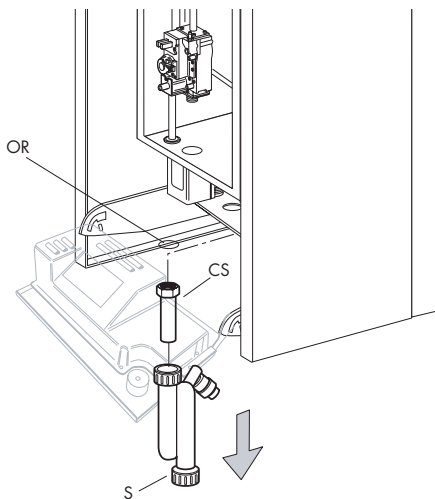


Fig. C

Then remove the lower cover of the sealed chamber (CC) by undoing the screws (1) and pull it outward (Fig. D).

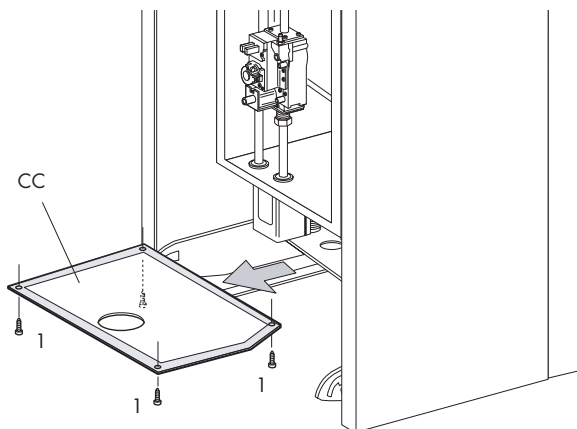


Fig. D



Unscrew fixing nuts(D) from the fume tank (VS). Then, rotating the fume tank as indicated in figure E, it can be disconnected from the fume pipe and extracted from the sealed chamber.

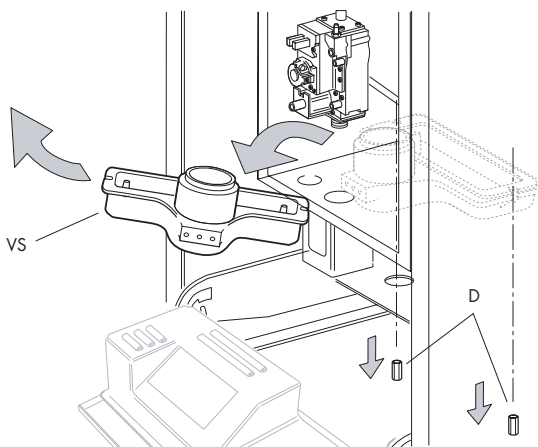


Fig. E

It is now possible to inspect the retarders from the inside of the combustion chamber for maintenance (Fig. F).


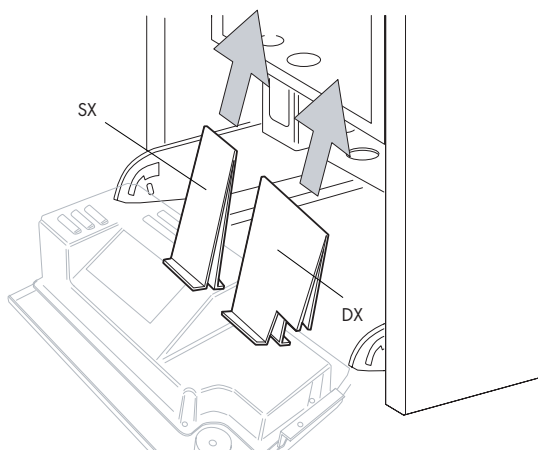


Fig. F




CONTROL PANEL

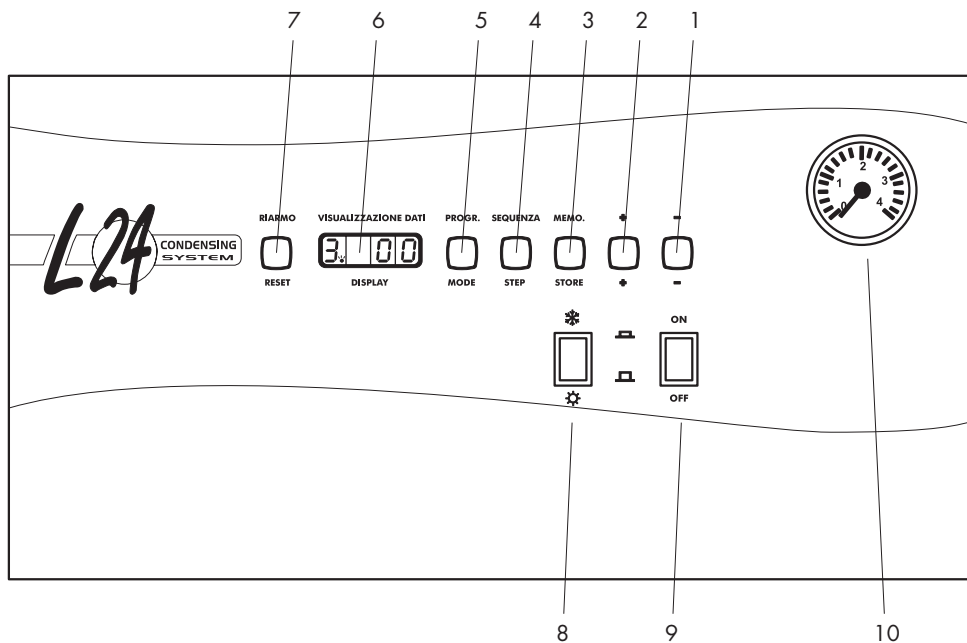

LEGEND

- 1 "-" key to reduce settings
- 2 "+" key to increase settings
- 3 "memo" key to save data
- 4 "sequence" key to select parameters to be displayed
- 5 "program" key to select the program
- 6 Data display
- 7 Boiler "reset" key
- 8 Summer/winter selector
- 9 Main switch
- 10 Hydrometer

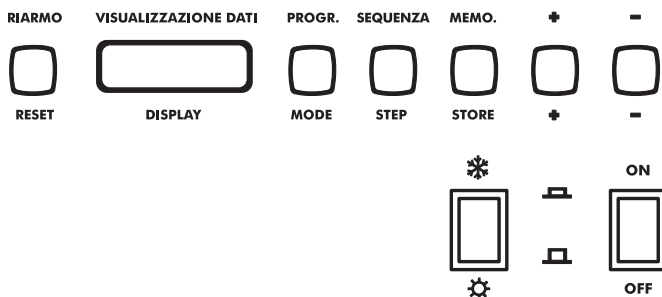

Button	Function
ON/OFF ❄️ ☀️	ON/OFF SWITCH SUMMER/WINTER SWITCH
RIARMO/RESET	BOILER RESET
PROG./MODE	PROGRAM SELECTOR (DISPLAY)

Button	Function
SEQUENZA/STEP	SELECTS PARAMETERS TO BE DISPLAYED
MEMO/STORE	ENTERS DATA
+	INCREASES SETTING
-	DECREASES SETTING

ADJUSTMENTS

ADJUSTING HOT WATER TEMPERATURE

- 1) Open a hot water tap (temporarily).
- 2) Press **(MODE)**. An indicator light on the left-hand display comes on.
- 3) Press **(STEP)** to phase 1



- 4) Press the (+) (-) buttons to modify the hot water temperature.
- 5) Press **(STORE)** to memorise the data.
- 6) Press **(MODE)** twice to enter the new temperature setting.

ADJUSTING HEATING TEMPERATURE

- 1) Press **(MODE)**. An indicator light on the left-hand display comes on.
- 2) Press **(STEP)** to phase 4




- 3) Press the (+) (-) buttons to modify the heating temperature setting.
- 4) Press **(STORE)** to memorise the data.
- 5) Press **(MODE)** twice to enter the new temperature setting.

The boiler is ready to function for heating and hot water supply.



OPERATING SEQUENCE (display only)

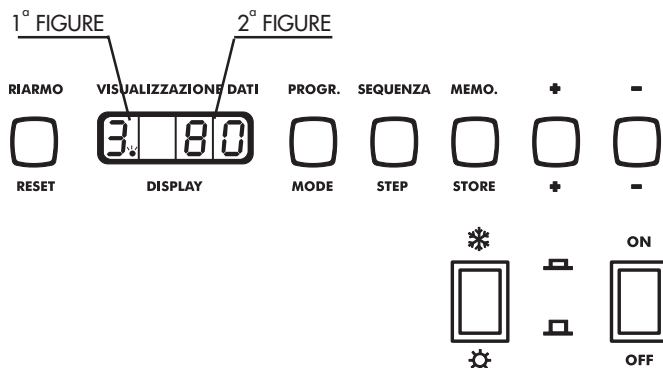

Button	Function	Button	Function
ON/OFF ☀ ☁	ON/OFF SWITCH SUMMER/WINTER SWITCH	SEQUENZA/STEP	SELECTS PARAMETERS TO BE DISPLAYED
RIARMO/RESET	BOILER RESET	MEMO/STORE	ENTERS DATA
PROG./MODE	PROGRAM SELECTOR (DISPLAY)	+	INCREASES SETTING
		-	DECREASES SETTING

During boiler operation the first figure on the digital display indicates the sequence step while the second gives the temperature of the water in the boiler.

E.g. means that the unit is heating at a delivery temperature of around 80°C.


Step	Function
0	pause, no heat required
1	pre-ventilation
2	ignition
3	burner ignited (heating system mode)
4	burner ignited (hot water mode)
5	air pressure switch control
6	burner off (water temp. more than 5°C warmer than setting)
7	post-circulation pump in heating mode
8	post-circulation pump in hot water mode
9	burner off because of fault (see shutdown code)








LIST OF PARAMETERS INDICATED BY 1st FIGURE ON DISPLAY (Values can be adjusted by the user)

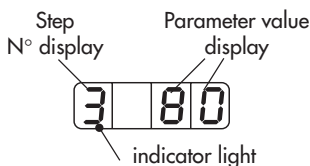
To gain access to the PHASE number press the MODE button once (an indicator light to the right of the 1st figure comes on). Press STEP to display all the available PHASES.

Example:



<div> ↓ </div> <div>  </div>			
Phase N°	Parameter	Value range	Default settings
1	Hot water temperature	from 40 to 65 °C	55
2	Hot water system	00 = domestic hot water excluded 01 = 5°C hysteresis + pump continuously on Hot water 02 = 5°C hysteresis 03 = 10°C hysteresis 04 = 20°C hysteresis 05 = 30°C hysteresis	02
3	Heating	00 = heating disabled 01 = heating enabled 02 = heating enabled, pump running continuously	01
4	Water delivery temperature	from 20 to 90°C	80

 
To exit the PHASE list press





DATA DISPLAY (MONITOR system)

 
Real-time data (not modifiable) regarding unit operation can be checked on the monitor. Press MODE twice (a flashing indicator light appears to the right of the 1st figure). Press STEP to display all the available PHASES.



Phase N°	Parameter		Notes
1	Water delivery temp.	°C	
2	Return temp.	°C	
3	Hot water temp.	°C	
4	Outdoor temp. (*)	°C	
5	Fume temp.	°C	Unavailable
6	Set or calculated delivery temp.		With OPTIONAL outdoor sensor
7,8	Parameters used by the installer	—	Access code input

(*) Parameter displayed if connected to sensor (optional)

 To exit the DATA DISPLAY program press





FAULT CODE (read-only display)

The boiler control box is equipped with a microprocessor that memorises and signals any faults or shutdowns. The fault type is indicated by a code. The meaning of each code is given in the table below:

1 st Figure	2 nd Figure	Fault
0	00	Flame detection circuit fault
1	01	24 V short circuit
2	02	No detection, no flame on burner
4	03	Board fault
4	04	Internal board fault (e.g. power failure)
4	05	Board fault
4	06	Board fault
4	07	Board fault
4	10	Board fault
4	11	Board fault
4	13	Board fault
4	14	Board fault
4	15	Board fault
4	16	Board fault
4	17	Board fault
4	24	NTC1/NTC2 connection switched over
4	26	Minimum gas pressure (at pressure switch)
4	30	Difference ΔT between T1 and T2 exceeded ($>35^{\circ}\text{C}$)
4	31	NTC1 short circuit
4	32	NTC2 short circuit
4	36	NTC1 open
4	37	NTC2 open
4	41	Board fault
4	42	Board fault
4	44	Board fault
4	60	Board fault
5	08	Air pressure switch failure
5	28	Fan not working, no tachometer signal
5	29	Fan continues running, erroneous tachometer signal
9	12	No-water pressure switch
9	18	TST tripped ($>98^{\circ}\text{C}$)
9	19	Return temperature T2 too high ($>88^{\circ}\text{C}$)
9	25	Temperature T1 varies too quickly (T1 = delivery temperature)







RESETTING

Should there be a fault the system will shut down and flash the fault type on the display. Check for proper operating conditions (gas cock open, proper feed pressure etc.) and press RESET. Should the fault persist contact your local **LAMBORGHINI SERVICE CENTRE**.

PARAMETER DISPLAY AND MODIFICATION (ACCESS CODE)

By pressing **MODE** and **STEP** simultaneously the letter **C** will appear on the display. Keeping these buttons pressed, enter the access code (62) by means of the **+** and **-** keys. Press **STORE** to memorise the code (the display will flash twice). Press **MODE** to highlight the **PHASE** number on the display. Then press **STEP** to display the list of **PHASES**.

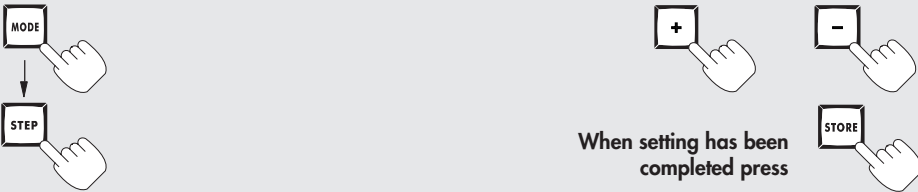		
Phase N°	Parameter	Range
1	T _{set} Hot water temperature	From 40°C to 65°C
2	D.H.W. System (NTC3 present)	00 = Hot water off 01 = Hot water on + pump running continuously with hysteresis of -5°C on T _{set} (Phase 1) 02 = Hot water on with hysteresis of -5°C on T _{set} (Phase 1) 03 = Hot water on with hysteresis of -10°C on T _{set} (Phase 1) 04 = Hot water on with hysteresis of -20°C on T _{set} (Phase 1) 05 = Hot water on with hysteresis of -30°C on T _{set} (Phase 1)

   

When setting has been
completed press




Phase N°	Parameter	Range
3	Central heating system	00 = Central heating off 01 = Central heating on 02 = Central heating on and pump in cont. mode
4	Delivery temperature (T1)	From 20°C to 90°C
5	T1 _{foot} (minimum heating temperature)	From 15°C to 25°C (recommended 15°C)
6	T4 minimum (settable outdoor sensor temperature)	From -20°C to +10°C
7	Pause temp. for heating re-ignition	From 15°C to 30°C
8	Parallel shift (with outdoor sensor and on-boiler timer)	From 0°C to 30°C (on T _{set})
9	Central heating hysteresis	From 5°C to 15°C
A	Heating re-ignition waiting time	From 0°C to 30 (x10.2 seconds)
b	Post-circulation time. Pump heating	From 3 to 99 minutes
C	PWM pump	Do not use
d	Boiler type	
	1 figure (as in heating)	0x = room thermostat 1x = NTC4 sensor (outdoor sensor)
	2 figures (as in Hot water)	x0 = 3-way valve x1 = Hot water pump - Do not use x2 = inverted 3-way valve - Do not use
E	Fan speed control	00 = modulation working From 01 to 100% manual fan speed control. Chimney-sweep function.
F	Min/max r.p.m. in heating mode	From 10 to 60 (x 100)



<div><div><div>MODE</div><div>STEP</div></div><div><div>+</div><div>-</div><div>STORE</div></div><div>When setting has been completed press</div></div>		
Phase N°	Parameter	Range
G	Max r.p.m. in heating mode	from 00 to 90 (units)
H	Max r.p.m. in Hot water mode	from 10 to 60 (x 100)
I	Max r.p.m. in Hot water mode	from 00 to 99 (units)
J	Min. r.p.m.	from 05 to 60 (x 100)
L	Min. r.p.m.	from 00 to 99 (units)
n	Start r.p.m.	R.p.m. settable at start between 80 and 100% of absolute value.

 To exit the program at any time just press




twice.



GAS VALVE ADJUSTMENT

The boilers leave the factory already set to their minimum and maximum output and therefore do not need to be set when installed.

Should the settings need to be modified to adapt them to installation requirements it will be necessary to change fan r.p.m. and reset the CO₂ value to between 8,8-9% for natural gas and 9,8÷10% for B/P.

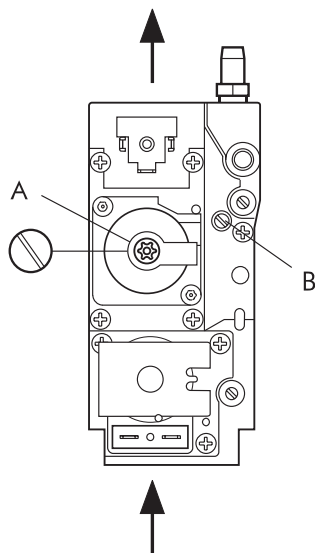

Legend

- A** Minimum heat delivery adjustment screw
B Maximum heat delivery adjustment screw

In the event of gas valve replacement, proceed as follows:

- 1 Insert a combustion instrument.
- 2 Position the switch to SUMMER or WINTER and open a tap on the D.H.W. circuit.
- 3 Read the instructions for displaying and modifying the parameters (access code) on the use and maintenance manual, page 33.
- 4 Select step H and J, set fan rpm to the maximum figure.
- 5 Adjust the gas flow-rate by acting on screw B until the CO₂ value is between 8,8-9% for natural gas and 9,8÷10% for B/P.
- 6 Select step H and J, set fan rpm to the minimum figure.
- 7 Adjust the gas flow-rate by acting on screw A until the CO₂ value is between 8,8-9% for natural gas and 9,8÷10% for B/P.
- 8 Select step H, set the maximum fan rpm.
Select step J, set the minimum fan rpm.

When adjustments have been completed, press PROGRAM button to display again the standard functions.

VARYING FAN R.P.M.

- Set the access code (62) (see page 69).
- Press MODE.
- Press STEP to display the relative PHASE. N° (F-G).
- Use the +/- keys to set the desired r.p.m.
- Press STORE to enter the variation.




GAS - NOZZLE CALIBRATION

The boilers leave the factory calibrated and predisposed to operate with NATURAL GAS or B/P. For the pre-calibrations effected, see the related table below:

Model	Gas type	CO ₂ %		Flow-rate	Burner jet	Air diaphragm	Calorific value (*)
		Min	Max	m³/h	Ø mm	Ø mm	Kcal/h
L 24 MC	NATURAL GAS G20 - 20 mbar	8,8	9,0	2,62	4,9	21,0	8.550
L 28 MC				3,05	5,4	23,5	
L 24 MC	B / P G30 - 30 mbar G31 - 37 mbar	9,8	10,0	0,765 (G30)	3,8	21,0	29.330
				1,01 (G31)			22.360
L 28 MC				0,877 (G30)	4,2	23,5	29.330
				1,15 (G31)			22.360

* = at 1013 mbar, 15°C

BURNER PRESSURE CURVE - OUTPUT

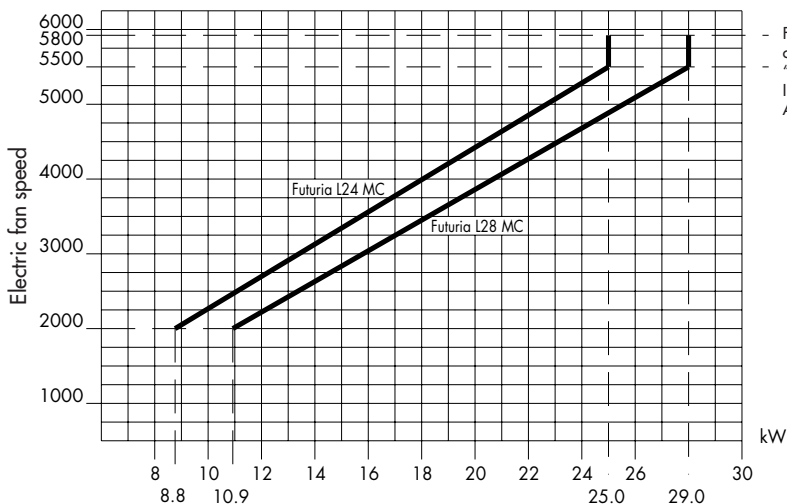


- Field of job previewed for operation like paragraph "FLUE EXHAUST PIPE INSTALLATION - SPECIAL APPLICATIONS" page 56.



TRANSFORMATION NATURAL GAS - B/P

If the boiler is to be converted from natural gas to LPG (or vice-versa), use only original conversion kits.
For the conversion proceed as follows:

- Undo screws (1) and bolts (2)
- Remove the gas pipe (G)
- Unscrew the gas jet (GS) and replace by the new one

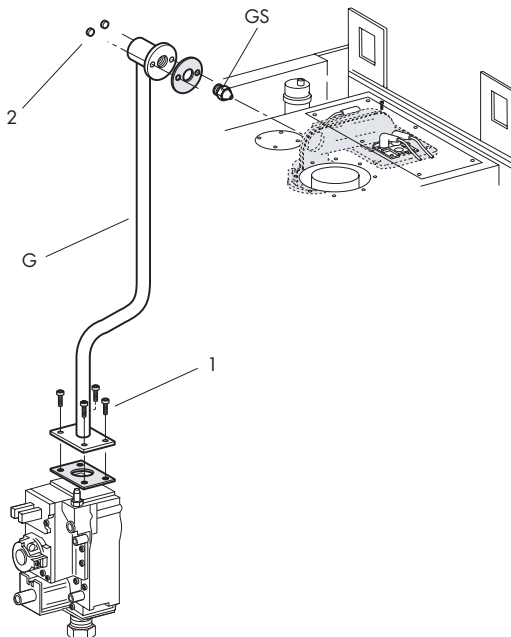

Gas valve calibration must be effected as indicated at page 72 and considering the data indicated in the following table.

Model	Gas type	CO ₂ %		Flow-rate	Burner jet	Air diaphragm
		Min	Max	m ³ /h	Ø mm	Ø mm
L 24 MC	NATURAL GAS G20 - 20 mbar	8,8	9,0	2,62	4,9	21,0
L 28 MC				3,05	5,4	23,5
L 24 MC	B / P G30 - 30 mbar G31 - 37 mbar	9,8	10,0	0,765 (G30)	3,8	21,0
				1,01 (G31)		
L 28 MC				0,877 (G30)	4,2	23,5
				1,15 (G31)		



HEATING WITH OUTDOOR SENSOR AND ROOM THERMOSTAT


For proper use of the outdoor sensor it is compulsory to fit the room thermostat which adjusts delivery temperature T1 to ambient conditions.

For each outdoor temperature reading between the set T4 (via parameter n° 6, adjustable between -20°C and $+10^{\circ}\text{C}$) and 30°C there corresponds a delivery temperature T1 between the T1 temperature set by the user on the boiler (phase. n° 4) and the minimum operating temperature fixed at 55°C (see boiler operation curve). The graph-illustrated example shows T4 set to -10°C and delivery temperature set to 75°C . If, for example, the outdoor sensor detects a temperature of -5°C and the room thermostat is requesting heat (contact closed) the boiler will "try" to reach a delivery temperature of 65°C . If the room thermostat continues requesting heat the delivery temperature increases by 10°C every ten minutes. Vice versa, if the thermostat contact opens the delivery temperature falls by 1°C each elapsed minute. The chapter "PARAMETER DISPLAY AND MODIFICATION" (page 69) shows admissible parameter values regarding outdoor sensor operation. The values must be adjusted as follows:

Phase N°

- 5 T1 heating minimum temperature adjustable between 15°C and 25°C .
- 6 T4 minimum outdoor temperature range -20°C to $+10^{\circ}\text{C}$ (adjusted on the basis of minimum design temperature)
- b BOILER TYPE: adjusted to 00 (fixed): adjustment valid for installation of room temperature thermostat with outdoor sensor.

BOILER OPERATION CURVE

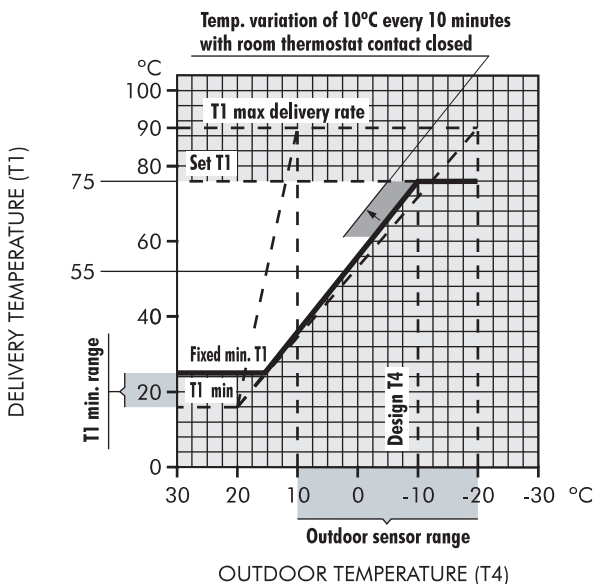

BRUCIATORI
CALDAIE MURALI E TERRA A GAS
GRUPPI TERMICI IN GHISA E IN ACCIAIO
GENERATORI DI ARIA CALDA
TRATTAMENTO ACQUA
CONDIZIONAMENTO

0444 352000
SALICIA VI

Le illustrazioni e i dati riportati sono indicativi e non impegnano. La LAMBORGHINI si riserva il diritto di apportare senza obbligo di preavviso tutte le modifiche che ritiene più opportuno per l'evoluzione del prodotto.

The illustrations and data given are indicative and are not binding on the manufacturer. LAMBORGHINI reserves the right to make those changes, considered necessary, for the improvement of the product without forwaming the customer.

Las ilustraciones y los datos son indicativos y no comprometen. LAMBORGHINI se reserva el derecho de realizar sin preaviso todas las modificaciones que estime oportuno para la evolución del producto.

As ilustrações e os dados existentes são indicativos e não compromissivos. A LAMBORGHINI reserva-se o direito de efectuar, sem a obrigaçao de pré-aviso, todas as modificações que considerar necessárias para a melhoria do produto.

LAMBORGHINI CALOR S.p.A.
VIA STATALE, 342
44040 DOSSO (FERRARA)
ITALIA
TEL. ITALIA 0532/359811 - EXPORT 0532/359913
FAX ITALIA 0532/359952 - EXPORT 0532/359947



Lamborghini

CALORECLIMA

AZIENDA CERTIFICATA ISO 9001

**IT**

CALDAIA MURALE A GAS A CONDENSAZIONE
ISTANTANEA
MANUALE PER L'UTENTE

2

Alla cortese attenzione del sig. **INSTALLATORE**:

Consegnare il presente manuale d'uso all'**UTENTE**

GB

WALL-HUNG GAS INSTANTANEOUS
CONDENSING BOILER
USER MANUAL

10

For the attention of the **INSTALLATION TECHNICIAN**:

make sure that this manual is handed over to the **USER**

ES

CALDERA MURAL A GAS
CON CONDENSACIÓN INSTANTÁNEA
MANUAL PARA EL USUARIO

18

A la atención del sr. **INSTALADOR**:

Entregar el presente manual para el uso al **USUARIO**

PT

CALDEIRA DE PAREDE A GÁS
DE CONDENSACÃO INSTANTÂNEA
MANUAL DO UTENTE

26

Atenção do Sr. **INSTALADOR**:

Entregue este manual de uso ao **UTENTE**



Futaria L 24-28 MC W TOP U/IT



INDEX	PAGE
GENERAL INSTRUCTIONS _____	11
INSTRUCTIONS FOR THE USE _____	12
CHECKS AND MAINTENANCE _____	13
DIMENSIONS _____	14
ADJUSTMENTS _____	15
IGNITION _____	16
FAULT CODE _____	16
RESETTING _____	17

Dear User...

...you have entered into possession of a product that is the result of a careful design and advanced production systems ensuring high-top operational reliability and saving. Read carefully this guide in order to know any detail concerning the product's operation system.

The "LAMBORGHINI SERVICE" after-sales centres are at your disposal to ensure QUALIFIED MAINTENANCE and PROMPT SERVICE.

LAMBORGHINI CALORECLIMA

For the installation and positioning of the boiler
CAREFULLY OBSERVE THE LOCAL REGULATIONS IN FORCE



GENERAL INSTRUCTIONS

- This booklet constitutes an integral and essential part of the product and should be preserved for any further consultation.
Read carefully the instructions contained in this booklet as they provide important directions regarding the operation of the appliance, allowing a great saving in its use and maintenance.
- If the appliance is sold or transferred to other people or if you move house and leave your apartment, ensure that the manual remains with the appliance so that it can be used by the new owner.
- This appliance should be destined only for the use for which it has been expressly envisaged. Any other use is to be considered improper and therefore dangerous.
The manufacturer cannot be considered responsible for any damages caused from improper or unreasonable use.
- Do not touch the parts of the boiler which during the operation become overheated. These parts can be dangerous for children or inexperienced persons.
- Do not obstruct the inlet or dissipation screens.
- Do not make the boiler wet with splashes of water or other liquids.
- Do not rest any object upon the boiler.
- Use of the boiler is prohibited for children or the inexperienced.
- Do not carry out any cleaning of the boiler with inflammable substances.
- Do not deposit containers of inflammable substances in the location where the boiler is situated.
- In the presence of the risk of freezing suitable provisions must be taken which are not however the concern of the boiler manufacturer.

ALL INSTALLATION, MAINTENANCE AND GAS CONVERSION OPERATIONS MUST BE CARRIED OUT BY AUTHORISED SKILLED TECHNICIANS.

TO ENSURE THAT BOILER IS INSTALLED CORRECTLY AND THAT IT FUNCTIONS PROPERLY, WE RECOMMEND THAT ONLY LAMBORGHINI ACCESSORIES AND SPARE PARTS BE USED.

ON NOTICING THE SMELL OF GAS DO NOT TOUCH ANY ELECTRIC SWITCH. OPEN DOORS AND WINDOWS. SHUT OFF THE GAS COCKS.

WARNING: THE BOILER MUST BE LEFT CONNECTED TO THE POWER SUPPLY EVEN WHEN IT IS NOT IN USE.



INSTRUCTIONS FOR THE USE

- In case of breakdown and/or malfunctioning of the appliance, disconnect it avoiding any attempt of repair or direct intervention.
Call exclusively professionally qualified personnel.
Any repair must be carried out by an after-sale service centre "LAMBORGHINI SERVICE" authorised by the manufacturing firm, and using original replacements exclusively.
Non-observance of the above could compromise the guarantee and the safety of the appliance.
In order to guarantee the efficiency of the appliance and its proper operation it is indispensable to keep to the manufacturer's directions, by ensuring the periodical servicing of the appliance is carried out by professionally qualified personnel.
- Check the system hydraulic pressure during the first ignition and then periodically by using the hydrometer. Check that readings for the system when cold are within manufacturer-specified limits. Should any falls-off in pressure be noticed contact a qualified technician.
- After each reopening of the gas cock wait a few minutes before restarting the boiler
- As soon as one decides not to use the appliance further, one should take care to render innocuous those parts liable to be potential sources of danger.
- As soon as one decides to disconnect the boiler definitively, one should ask qualified personnel to effect the related works, then ensure that the main supplies have been disconnected.
- For the power supply to the boiler the use of adaptors, multiple sockets or extensions is not permitted. The use of a switch as indicated by the safety regulations in force must be provided.
- The use of appliances which utilise electrical energy involve the observation of fundamental rules which are:
 - a) not to touch the appliance with parts of the body which are wet or when in bare feet;
 - b) not to pull electrical wires;
 - c) not to expose the appliance to the atmospheric agents;
 - d) not to allow use of the appliance to children or the inexperienced.
- In the case of structural work positioned near the flue pipe, turn off the boiler and at the end of the work ensure that the efficiency of the flue exhaust is verified by qualified personnel.
- On noticing the smell of gas do not touch any electric switch. Open all doors and windows. Shut off the gas cocks and call qualified personnel.




CHECKS AND MAINTENANCE


- Before starting up the boiler ask qualified personnel "LAMBORGHINI SERVICE" to check:
 - a) that the data on the information plate corresponds to that required by the gas, electrical and water supply networks;
 - b) that the pipes which branch off from the boiler are lined with suitable thermally-insulated sheathing;
 - c) the proper functioning of the flue pipe;
 - d) that the comburent air flow and the fumes evacuation take place properly in accordance with the regulations in force;
 - e) that correct aeration and maintenance are possible in case of installation in the furniture.
- Ensure that the installer has connected the boiler and cylinder safety discharge to a waste. In the case of the contrary the intervention of the safety valves could flood the premises and the manufacturer would not be held responsible for this.
- Ensure that the piping of the installation is not used as an earth outlet for other installations; beyond not being ideal for such a use it could in short bring serious damage to the other appliances connected to it.
- Ask qualified personnel "LAMBORGHINI SERVICE" to check:
 - a) the internal and external tightness of the gas system;
 - b) that the gas delivery is that required by the boiler output;
 - c) that the type of gas is suitable for the boiler;
 - d) that the pressure of gas supply is within the values stated on the boiler plate;
 - e) that the gas installation is the correct size and equipped with all the safety and checking devices prescribed by the current regulations.
- Ask periodically to check the proper functioning and the good state of the flue exhaust.
- Ensure that the electrical system has been confirmed by qualified personnel to be adequate for the power required by the appliance itself.
- The electricity supply cable must not be replaced by the user, but by qualified personnel only.
- The electrical safety of the appliance is attained only if the same has been connected to an effective system earthed in accordance with the current regulations. The verification of this fundamental prerequisite should be made by qualified persons as the manufacturer will not be responsible for damage caused by the lack of adequate earthing of the installation.



DIMENSIONS mm.

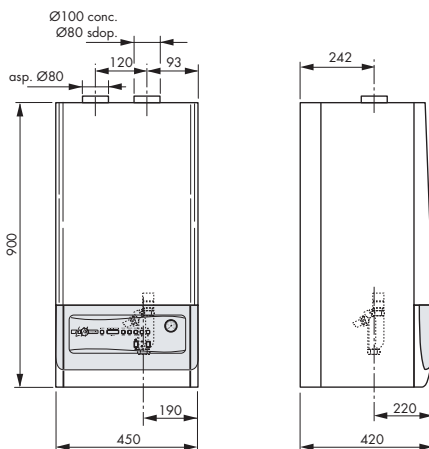

CONTROL PANEL

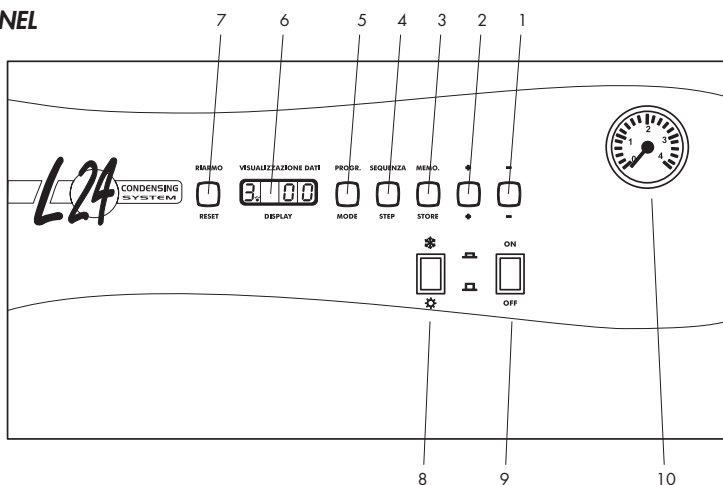


LEGEND

- 1 "-" key to reduce settings
- 2 "+" key to increase settings
- 3 "memo" key to save data
- 4 "sequence" key to select parameters to be displayed
- 5 "program" key to select the program
- 6 Data display
- 7 Boiler "reset" key
- 8 Summer/winter selector
- 9 Main switch
- 10 Hydrometer



ADJUSTMENTS

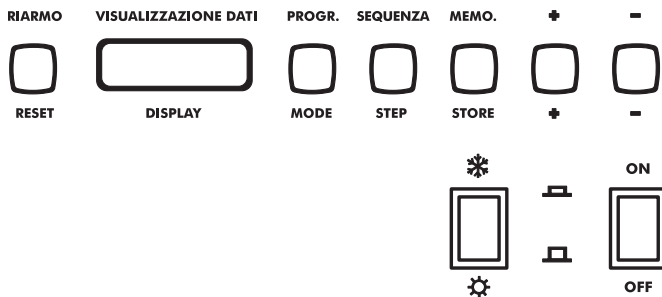

Button	Function
ON/OFF ❄️ ☀️	ON/OFF SWITCH SUMMER/WINTER SWITCH
RIARMO/RESET	BOILER RESET
PROG./MODE	PROGRAM SELECTOR (DISPLAY)

Button	Function
SEQUENZA/STEP	SELECTS PARAMETERS TO BE DISPLAYED
MEMO/STORE	ENTERS DATA
+	INCREASES SETTING
-	DECREASES SETTING

ADJUSTING HOT WATER TEMPERATURE

- 1) Open a hot water tap (temporarily).
- 2) Press **(MODE)**. An indicator light on the left-hand display comes on.
- 3) Press **(STEP)** to phase 1



- 4) Press the **(+)** **(-)** buttons to modify the hot water temperature.
- 5) Press **(STORE)** to memorise the data.
- 6) Press **(MODE)** twice to enter the new temperature setting.

ADJUSTING HEATING TEMPERATURE

- 1) Press **(MODE)**. An indicator light on the left-hand display comes on.
- 2) Press **(STEP)** to phase 4



- 3) Press the **(+)** **(-)** buttons to modify the heating temperature setting.
- 4) Press **(STORE)** to memorise the data.
- 5) Press **(MODE)** twice to enter the new temperature setting.

The boiler is ready to function for heating and hot water supply.



IGNITION

Open the gas tap, press the ON button. The burner will ignite automatically (the heating and hot water functions are set by the manufacturers).

Should the unit fail to ignite there will be another three ignition attempts after which there will be a shutdown (the display will flash **2 - 02**). Press RESET: if the unit still fails to ignite contact the technical assistance service.

FAULT CODE

The boiler control box is equipped with a microprocessor that memorises and signals any faults or shutdowns. The fault type is indicated by a flashing code.

The meaning of each code is given in the table below:

1 st Figure	2 nd Figure	Fault
0	00	Flame detection circuit fault
1	01	24 V short circuit
2	02	No detection, no flame on burner
4	03	Board fault
4	04	Internal board fault (e.g. power failure)
4	05	Board fault
4	06	Board fault
4	07	Board fault
4	10	Board fault
4	11	Board fault
4	13	Board fault
4	14	Board fault
4	15	Board fault
4	16	Board fault
4	17	Board fault
4	24	NTC1/NTC2 connection switched over
4	26	Minimum gas pressure (at pressure switch)
4	30	Difference ΔT between T1 and T2 exceeded ($>35^{\circ}\text{C}$)
4	31	NTC1 short circuit
4	32	NTC2 short circuit
4	36	NTC1 open
4	37	NTC2 open
4	41	Board fault
4	42	Board fault
4	44	Board fault
4	60	Board fault
5	08	Air pressure switch failure
5	28	Fan not working, no tachometer signal
5	29	Fan continues running, erroneous tachometer signal



1 st Figure	2 nd Figure	Fault
9	12	No-water pressure switch
9	18	TST tripped (>98°C)
9	19	Return temperature T2 too high (>88°C)
9	25	Temperature T1 varies too quickly (T1 = delivery temperature)

RESETTING

Should there be a fault the system will shut down and flash the fault type on the display. Check for proper operating conditions (gas cock open, proper feed pressure etc.) and press RESET. Should the fault persist contact your local **LAMBORGHINI SERVICE CENTRE**.

BRUCIATORI
CALDAIE MURALI E TERRA A GAS
GRUPPI TERMICI IN GHISA E IN ACCIAIO
GENERATORI DI ARIA CALDA
TRATTAMENTO ACQUA
CONDIZIONAMENTO

0444 352000
SQUADRA-VI

Le illustrazioni e i dati riportati sono indicativi e non impegnano. La LAMBORGHINI si riserva il diritto di apportare senza obbligo di preavviso tutte le modifiche che ritiene più opportuno per l'evoluzione del prodotto.

The illustrations and data given are indicative and are not binding on the manufacturer. LAMBORGHINI reserves the right to make those changes, considered necessary, for the improvement of the product without forwaming the customer.

Las ilustraciones y los datos son indicativos y no comprometen. LAMBORGHINI se reserva el derecho de realizar sin preaviso todas las modificaciones que estime oportuno para la evolución del producto.

As ilustrações e os dados existentes são indicativos e não compromissivos. A LAMBORGHINI reserva-se o direito de efectuar, sem a obrigação de pré-aviso, todas as modificações que considerar necessárias para a melhoria do produto.

LAMBORGHINI CALOR S.p.A.
VIA STATALE, 342
44040 DOSSO (FERRARA)
ITALIA
TEL. ITALIA 0532/359811 - EXPORT 0532/359913
FAX ITALIA 0532/359952 - EXPORT 0532/359947