

# User manual

Thanks for you purchasing this TFT e-book reader.

The user manual will provide details on how to properly use the player and the product information, including operation、technical specification, etc. Before you start, please read the instruction carefully.

### **Precautions:**

⦿The new battery will be in the best condition ater2-3 times full charge and discharge.

⦿While using the earphone, if the volume is excessively high that it may cause your hearing damage. So please adjust the volume of the player to the moderate level and balance the time of using for prevention of the harm on your hearing

⦿Do not disconnect suddenly when formatting or uploading and downloading, otherwise may lead to program errors

⦿Do not self-demolish the product, and do not use alcohol、thinner or benzene to scrub the product surface

⦿Do not use the product while driving or walking

⦿The system software may take up memory capacity, so the total memory capacity would be less than the actual capacity.

⦿If play a film is not smooth or format unsupported, please use video conversion tool to convert video files.

⦿The product is not moisture and water resistance

 
### **Charging:**

1: Charge from PC.

Please connect the player to the PC, Please use safety exit USB host mode to charge the player, it will be cost around 7-8 hours.

2: Use the adaptor to charge it, if the adaptor is offered. The player will be little hot when charging and playing.

## □ Keys

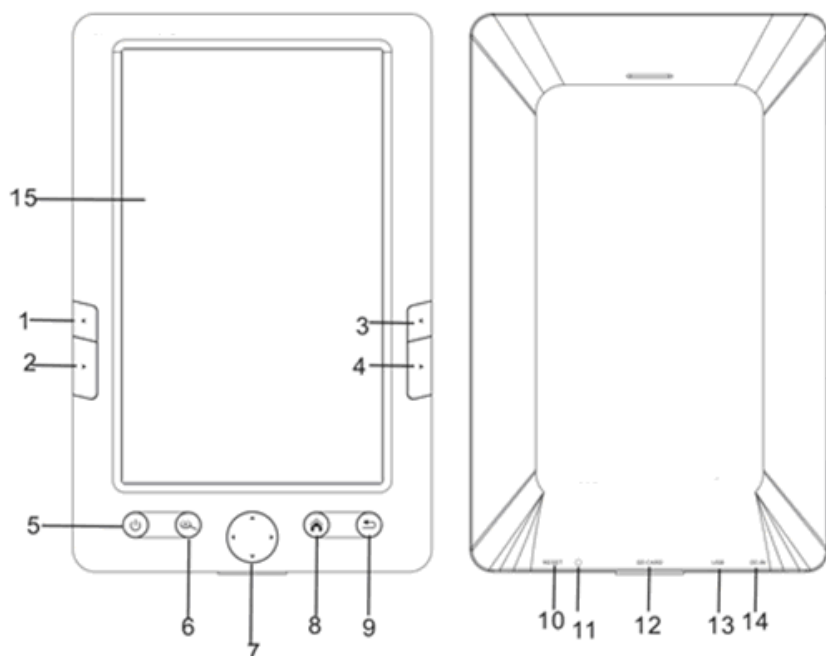


1.2.3.4: in Music: Vol+; Vol-

In E-book: page up; page down

5. Power on/off

 A. Turn on and turn off the player;


6.  zoom in/zoom out:

7.  Direction key

In Music function: pre and next song, play and pause

In E-book function: page up and page down

8.  Main menu

9.  A: Short press: return to the former menu;

B: Long press: return to the main menu

10. Reset button

- 11. Earphone jack
- 12. SD card slot
- 13. USB jack
- 14. DC jack
- 15: display

 
## ☐ **Operation**

1. Please hold and press the  to turn on the player.

### **2. Recent file list**


 

You can know the file which you have reviewed recently



### **3. E-book**

You can see all the E-books you have saved. Press the  to selected the files you'd like to view.


 

In the reading statue, press  to enter into the sub menu

#### **3.1: Page Jump**

In the reading status, short press  to enter into the sub-menu, use the  to select the “Page Jump” press”  ” to confirm.

Use  to set the page NO, then press”  ” to confirm.

#### **3.2: Save mark**

In the reading status---press  button—save mark---use  to select position to save----press  to confirm.


**3.3: Load Mark:** Operation same as 3.2

**3.4: Delete Mark:** Operation same as 3.2

**3.5: Browser mode:**

You set the browser Mode in Manual mode or Auto mode.

### 3.6: Flip time

In the reading status, press  to enter into the sub-menu, selected the Flip time, then set the flip time you need..

Note: This function is only workable when the Browser is" Auto mode"

### 3.7: Mode


 
You can set the background of the E-book here: Black, white or recover the desktop.

 
While viewing the books, you also can listen to the music. Please enter into the Music first, then back to the E-book reading mode.

 
Rotate the screen: In the E-book Reading status, short press the  button.


## 4. Music


**4.1:Volume adjust:** Short press the 1.2.3.4 these four buttons

**4.2: Play&pause:** press the bottom button of  to pause, and press the up button of  to continue to play.

**4.3: Pre& Next song:** Press the left and right button of  to skip to the pre and next songs


**4.4: Fast forward and fast back forward:** hold and press the left or right button of .


**4.5:** In the playing status, press  can enter into the sub-menu of the Music. There is: Repeat mode, Play mode, MSEQ, EQ set, Display and so on.

**4.6:** In the list of the Music. Short press the Left button of , you can add a song to your favorite music list.

## 5. Video


**5.1:** Press 1.2.3.4 button to adjust the Volume

**5.2:** Press the  to zoom in and zoom out the display.

**5.3:** Press  to pause and replay the video.

## **6. Photo:**

**6.1:** zoom in and zoom out:

Press  to Zoom in and zoom out the picture


Or enter into the sub menu to select Zoom in and zoom out

**6.2:** In the Photo display, press  to enter into the sub-menu,


**6.2.1:** Browse: you can set the Photo in the play status, 5 sec, 10 sec or 20 sec, if you select Turn off, then the auto mode is useless.


**6.3:** Rotate: Press the 1.2.3.4 buttons to rotate the picture, or enter into the sub-menu to select the rotate right and rotate left.

## **7. Record**

**7.1:** Press the Left button of the  to start record.


**7.2:** Press the right button of the  to pause.

**7.3:** after finish the record, Press the , please select if you will save the file or not,.

**7.4:** In the pause status, press  to enter into the sub-menu, set the quality and Volume.

Please go back to the Music status to listen to the record files

## **8. Radio**

Press the  to enter into the sub-menu of the FM radio

8.1 Search by Hand. Choose this, you should be search the channel manual

8.2 Auto search: The player will search the channel automatically.

8.3 Preset mode: choose the preset mode you can go to the saved channel directly.

8.4. Save channel. You can save your favorite channel here

8.5 delete channel. You can delete the channel here

8.6 stereo switch: you can set this function, on or off

8.7 Receive area: you can see the

8.8 FM record.

## **9. Settings**

### **9.1 Display setting:**

Set the time of the background

Set the brightness of the background,

### **9.2 Auto shut time**

Set a time to turn off the player automatically.

The function is only workable when the player is standby, if the play is playing the music or Auto view the books, the function will not workable.。

**9.3:** Set the time of the player

**9.4:** set the date of the player

 
**9.5:** restorable: the data will be back to the factory setting.

**9.6:** language: Multi-language is available for you to select.

 
**Note:** In the playing status, if the player works abnormally please reset the player by press the reset button and then press the power button to turn on the player.

## DRM

1. Load “Digital Editions” from <http://www.adobe.com/cn/products/digitaleditions/#fp>, then install it according to the instructions.

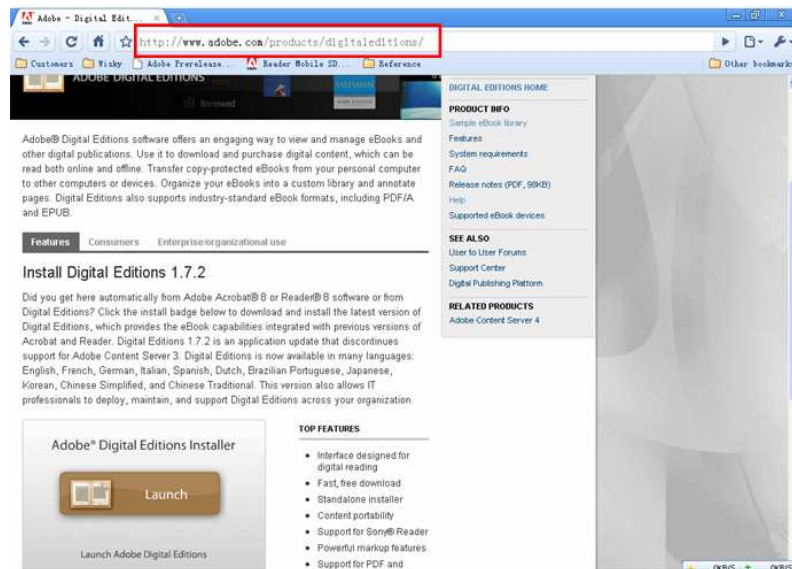 


2. Run Digital Editions, open “LIBRARY” Dropdown List and select “Adobe Digital Edition Help” or press “F1” key.

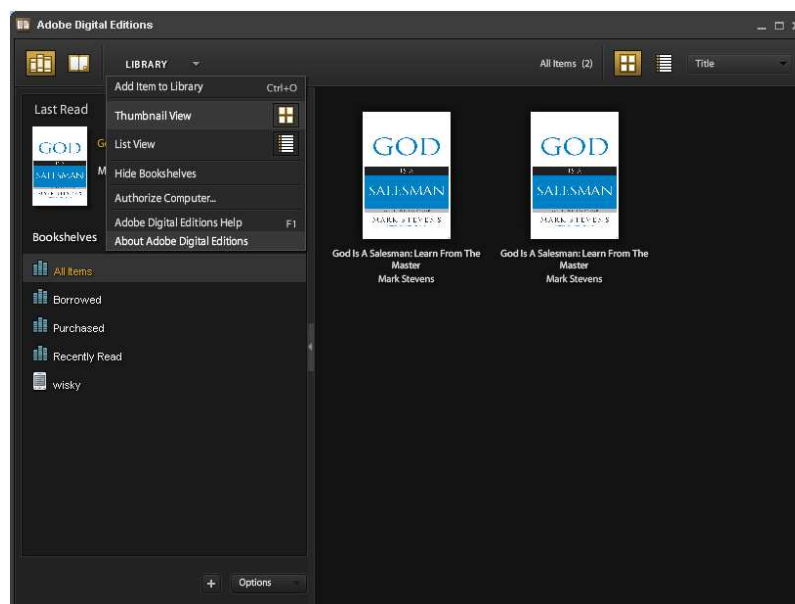



3. Then you can open the following page, select “Sample ebook library” to enter eBook library to load books which you want. All books you load will be listed in the main interface.

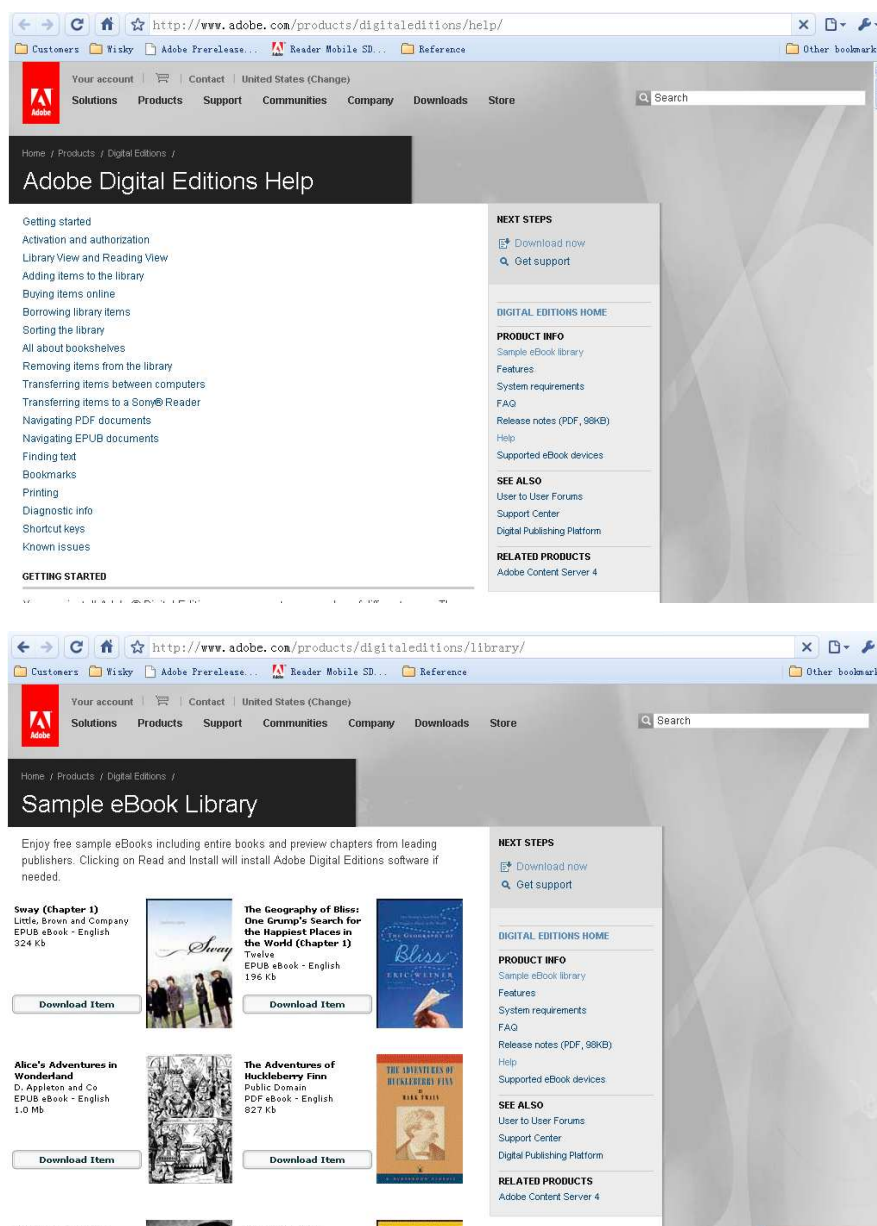

4. Connect your device and computer; it will pop out a window to ask you to applying for an ID number which is belong to your computer specially. After all operation is completed, you can remove your books which have been loaded before to your device.

## 10、trouble shooting

❑ can not turn on the player

· Check if the player has power, please recharge then use it

· ❑ No Volume from Earphone

· Please check if the Volume has set “0”。

· Please change another earphone to have a check.

④ Big noise

· Please check if there is dust in the earphone or speaker.

· Please check if the file is destroyed.

## 11. Specifications

	specifications	
1	Music	MP3,WMA,OGG,FLAC,WAV,AAC
2	E-books	TXT,FB2,PDF,PDB,EPUB,HTML,
3	Photo	JPG,BMP,GIF
4	Movie	Avi, RM, RMVB,mkv, vob,3gp
4	SD card	Support up to 16GB
5	Recorder	support

Note: if there are Videos which can not play directly, please use video convert tool to convert into right format, such as AVI, RMVB.