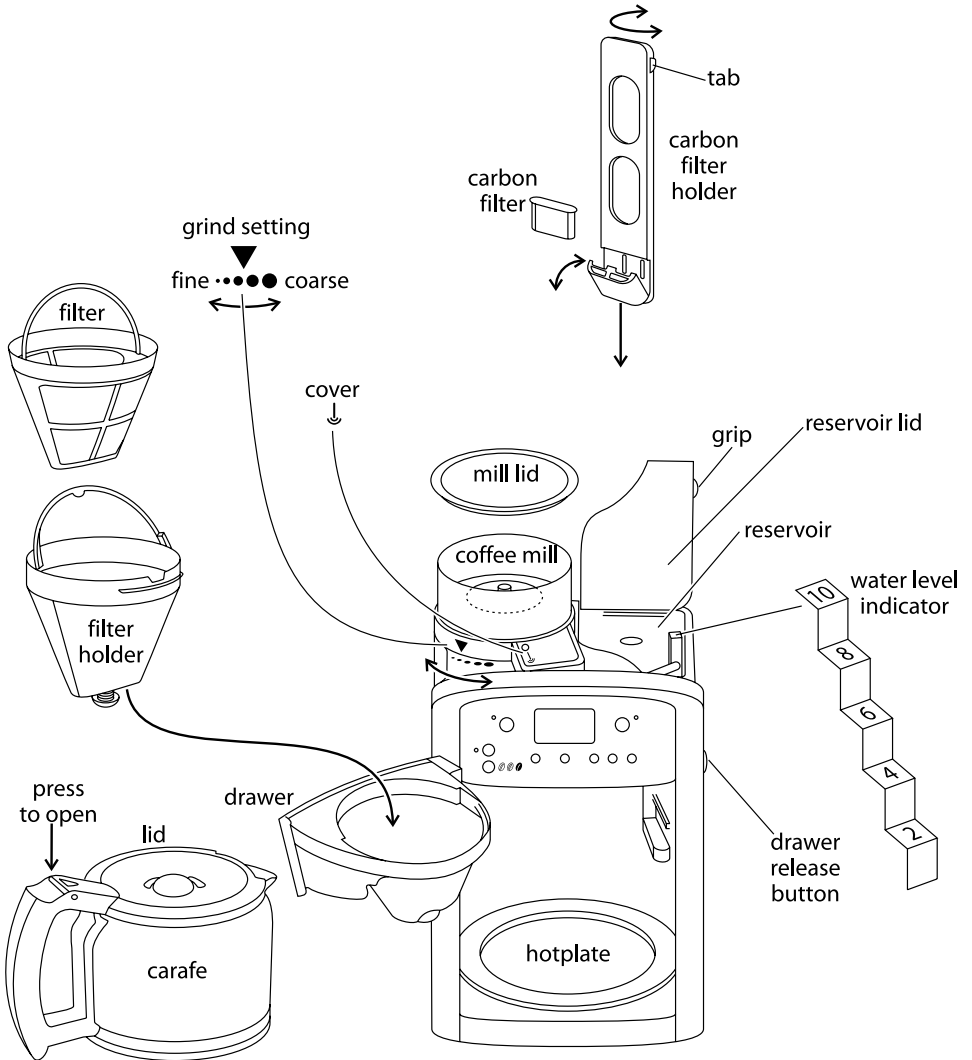
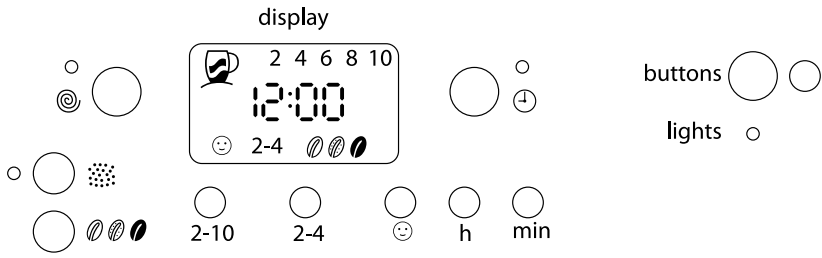




Russell Hobbs



instructions



Read the instructions and keep them safe. Pass them on if you pass the coffee maker on. Remove all packaging, but keep it till you know the coffee maker works.

important safeguards

Follow basic safety precautions, including:

- 1 The coffee maker must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the coffee maker in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Don't touch hot surfaces (e.g. carafe, hotplate).
- 4 The scald hazard lasts long after boiling. Keep the coffee maker and cable away from the edges of worktops and out of reach of children.
- 5 Sit the coffee maker on a stable, level, heat-resistant surface.
- 6 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 7 This appliance must not be operated by an external timer or remote control system.
- 8 Unplug the coffee maker when not in use, before moving and before cleaning.
- 9 Fill with at least 2 cups of water, but not above the 10 mark.
- 10 There's a hole in the rear wall of the reservoir, to prevent overfilling.
- 11 Put the carafe on the hotplate before switching the coffee maker on.
- 12 Let the coffee maker cool for about 10 minutes before adding water or re-using, to avoid spitting.
- 13 Don't put the carafe in a microwave oven.
- 14 Don't try to adjust the metal band round the carafe, you'll break the glass.
- 15 Keep the coffee maker and the cable away from hotplates, hobs or burners.
- 16 Don't use accessories or attachments other than those we supply.
- 17 Don't use the coffee maker for any purpose other than those described in these instructions.
- 18 Don't use the coffee maker if it's damaged or malfunctions.
- 19 If the cable is damaged, return the coffee maker, to avoid hazard.



household use only

before using for the first time

- 1 Fill the reservoir to the 10 mark, and run the coffee maker without coffee.
- 2 Let it cool, discard the water, then use it normally.
- 3 Turn to "the carbon filter" on page 6, and fit the carbon filter before using the coffee maker.

ground coffee

- 4 If you want to buy ready-ground coffee, medium-ground filter coffee will give you the best results. The amount will vary with the type of coffee and your individual taste. We suggest starting with two rounded teaspoons of medium-ground coffee per cup.

storing coffee

- 5 Coffee is best kept in an airtight container in a cool dry place, or in the fridge. Exposure to air oxidises coffee and allows the flavour to evaporate.

milk



- 6 There's a great deal of contention on the subject of milk in coffee. Our view is that personal taste should rule, not convention. If you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, nose and sinuses, not just the taste buds.

bottled water

- 7 If you use bottled water, check that it doesn't contain flavourings, etc., and use still water, not sparkling. The carbon dioxide which gives the sparkle will affect the flavour of your coffee.

switching off

43 The coffee maker does not switch itself off – you must do this manually.

44 Press the  button if you're using beans, press the  button if you're using ground coffee.

45 The light next to the button will go out.

46 Unplug, and let the coffee maker and carafe cool down fully before cleaning, or for about 10 minutes before refilling.

caution Don't lift the reservoir lid till the coffee maker has cooled – escaping steam may create a scald hazard.

a quick cup

47 If you want a quick cup of coffee before the brewing cycle has finished:

48 You may remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.

49 To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds. This may not sound much, but you'll find it's more than enough time to pour a couple of cups of coffee.

50 Replacing the carafe on the hotplate opens the non-drip valve, to let the coffee flow again.

brew strength 2-4

51 Use this feature if you're brewing less than 6 cups of coffee. It slows the brewing process, so your coffee will have the same strength as coffee from a full carafe.

52 The brew strength feature will only work if the number of cups is set to 2 or 4.

 
 
 
 
 
 
 
 
 


53 Press the 2-4 button to activate the brew strength feature, the 2-4 icon will show up on the display.

coffee later

54 Set the clock to the correct time:

- a) Press and release the **h** button until the correct hour is shown.
- b) Press and release the **min** button until the correct minute is shown.
- c) It's a 24 hour clock.
- d) If you overshoot, you can't step back. Either go right round (24 hours or 60 minutes), or unplug the coffee maker, to reset the display to 12:00.
- e) The clock will retain its settings until the coffee maker is unplugged. It will reset to 12:00 next time you plug it in.

55 Set the timer to the time you want to start brewing.

- a) Press the  button and hold it for 3 seconds.
- b) The  light will flash.
- c) Release the  button.
- d) Press and release the **h** button until the correct hour is shown.
- e) Press and release the **min** button until the correct minute is shown.
- f) Use the    button to select the coffee strength  = light,  = medium,  = dark.
- g) If you're using coffee beans, use the 2-10 button to set the number of cups you want.
- h) If you're making less than 6 cups of coffee, press the 2-4 button, to turn the brew strength feature on.
 - i) The brew strength feature will only work if the number of cups is set to 2 or 4.
 - j) If you're using ground coffee, press and release the  button, otherwise the machine will assume you're using beans.
 - k) If you don't press all the buttons within 10 seconds, the coffee maker will revert to "normal", and the time will show.
 - l) You'll have to press the  button, and start again.

★ You have now set the timer to the time you want to start brewing, and you have set the clock to the correct time. You have not turned the timer function on.

turn the timer on

56 Press and release the ⊕ button.

57 The ⊕ light will stop flashing, and glow steadily.

leave it alone

58 That's it – leave it alone till the preset time comes round, and it makes your coffee – don't fiddle with it, you might upset it.

59 The clock will retain its settings until the coffee maker is unplugged.

60 If you want to cancel the timer before brewing has started, press the ⊕ button.

the carbon filter

61 Chemicals in the water may affect the flavour of your coffee. The carbon filter will remove or reduce the amount of these chemicals.

62 Open the reservoir lid.

63 Grip the top of the carbon filter holder and pull it up and out of the reservoir.

64 Pull open the bottom of the carbon filter holder.

65 Remove the old carbon filter and put it in the bin.

66 Fit a fresh carbon filter into the bottom of the filter holder, and close it.

67 Turn the carbon filter holder till the tab is towards the coffee mill, lower it into the reservoir, and push the bottom of the filter holder into the matching space in the floor of the reservoir.

68 Close the reservoir lid.

69 The carbon filter will last for 70 brewing cycles.

70 If you leave the coffee maker plugged in, it will count these for you, and show ☺ in the display when it needs replacing.

71 When you've replaced the filter, press and release the ☺ button, to remove ☺ from the display.

72 Don't worry if you don't have a replacement carbon filter handy. The coffee machine will work without it.

replacement carbon filters

73 Replacement carbon filters (ask for part number 189980) are available from Customer Service. Ring 0845 658 9700, or email service@saltoneurope.com for prices, then purchase using VISA or MASTERCARD.

care and maintenance

- 1 Unplug the coffee maker and let it cool down before cleaning or storing away.
- 2 Tip the contents of the filter into the bin – don't flush coffee grounds down the sink. They'll build up and cause a blockage.
- 3 You may clean the carafe, filter, and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all traces of soap.
- 4 Clean the outside surfaces of the coffee maker with a damp cloth.
- 5 Clean the inside of the coffee mill with a pastry brush.
- 6 Remove the cover in front of the coffee mill by pressing the hole marked ↓ with a cocktail stick, and sliding the cover forward.
- 7 Clean the inside with a pastry brush, then slide the cover back into place.
- 8 Don't put any part of the coffee maker in a dishwasher.
- 9 Don't put the coffee maker in water or any other liquid.
- 10 Don't use harsh or abrasive cleaning agents or solvents.

descaling

- 11 Scale build-up will cause the element to overheat, reducing its working life. It will also lengthen the brewing time.
 - 12 Descale regularly. If you notice the brewing time getting longer, shorten the time between descalings. In areas of very hard water it may be necessary to descale as often as once a month, or to use filtered water instead of ordinary tap water.
 - 13 Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler. When descaling has finished, empty the carafe and operate the coffee maker twice more with fresh water, but without coffee. Discard the water to ensure that no chemical residues are left in the coffee maker.
- ✳ Products returned under guarantee with faults due to scale will be subject to a repair charge.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

replacement carbon filters

Replacement carbon filters (ask for part number 189980) are available from Customer Service. Ring 0845 658 9700, or email service@saltoneurope.com for prices, then purchase using VISA or MASTERCARD.

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Salton Europe Ltd, Failsworth, Manchester M35 0HS

email: service@saltoneurope.com

telephone: 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products

