

# **USER MANUAL**





**Professional Stage LED show Lighting** 

# TABLE OF CONTENT

Brief	1
Packing list	1
Opening the package	
Installation and safety instruction	2
Installation Installation situs safety instruction Use attention	2
Power supply and signal connect	3
Connect the power and control	
Operation instruction	5
Explanation of control panel and key-press  Function setting  Main Function  DMX Control Function  Slave Mode	
Safety warning and maintain	11
Safety warning	
Specification	11
Common breakdown solution	12

### The manual of LED show system

### First, Brief

Thank you for purchasing of our professional **LED** show system. We always try to develop our product with high-tech and high performance to meet your requirement and expectation.

The unit is designed strictly according to the international standard. The control way is single or master/slave in option.

The manual is included the skill parameter and detail instructions etc.

Please read the manual carefully before using the product.

# © SECURITY WARNINGS







Green package

# Second, Packing list

- 2 1 We use the carton to pack normally. You may choose the fly case.
- 2 2 Opening the packageOpen the case and take out the enclosed spare parts, remove the drier, take the unit and put it in a flat place to operate.
- 2 3 Spare parts

  With of exception of this equipment, the pacing enclosed as following

Spare parts		
The manual	1pcs	

# Third installation and safety instruction

#### 3 - 1 installation:

It must be installed in the safety and best light angle.

Make sure that the power cable is never crimped or damaged. Check the device and power cable from time to time.

### 3 - 2 safety instruction

The fans and vent-pipes should not be jammed by other equipment and decorate material.

Do not light or extinguish frequently, otherwise the life of bulbs will be shortened. Try to avoid the using time too long.

The light must be fixture installed. Attention that prevent the strong shock.Do not use it under the damp and rain.

Prevent the dust into the product.

The light is applied for disco hall, KTV house, nightclub and various different performing occasions.

# Fourth, power supply and signal connect

#### 4 - 1 Connect the power and control


Use the professional plug to connect the LED light and power cable. Before installing the unit, please confirm whether the voltage and frequency indicated on the real panel of LED light. Voltage and frequency parameters(is matching)

Voltage	240V	230V	220V	208V	120V	110V
Opt						
Frequency	50Hz	60Hz	LED light			
Opt			model			

#### 4 - 2 Connect the signal cable


The LED light may be controlled the DMX 512 signal. Under sound and Atuo control.

the master/slave can be used. The master/slave mode is lined by signal line. Connect the DMX-out of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.

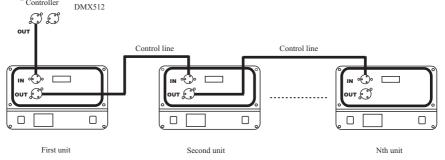


Caution: Please remember the signal output of last machine must connect the attached circle plug .The circle plug connect a 120 resistor between 2 feet and 3 feet canon plug. The signal reflects phenomena can be avoided by using circle plug during DMX 512 signal transfer.

### (DMX TERMIN ATOR CONNECTION):

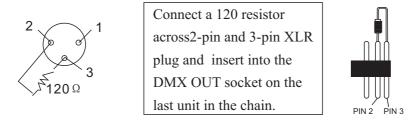

The LED light use 3 feet XLR plug, if the controller you use is 5 feet XLR plug. You must use a inter change line from 5 feet to 3 feet. See the following. The transform of 3-pin and 5-pin XLR adaptor.


# The 3pin and 5pin Canon DMX512 connector circuit

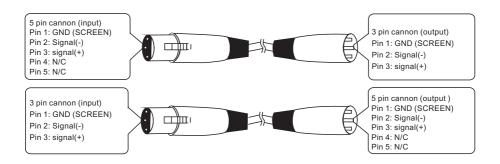

## Fifth, Operation instruction

Below is the detail function explanation of this light:

5 - 1 Explanation of control panel and key-press.

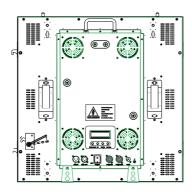

1. Display screen: Menu display and function instruction.


### 2. Key-press Fuction:

MENU	To select the program functions
UP	Go to backward in the selected functions
DOWN	Go to forward in the selected functions
ENTER	To confirm the selected functions

- 3. DMX IN/OUT: DMX512 input/output link
- 4. POWER IN/POWER OUT: Power input/output link

### 5 - 2 Function setting operation:

To select any of the pre-set functions, please press the (MENU) and the (UP) and the (DOWN) of the back panel to set. Once the required function has been selected, press the (ENTER) button enter to the next menu or con-firm the selected function . Press the (MENU) or (DOWN) also can return to forward menu .

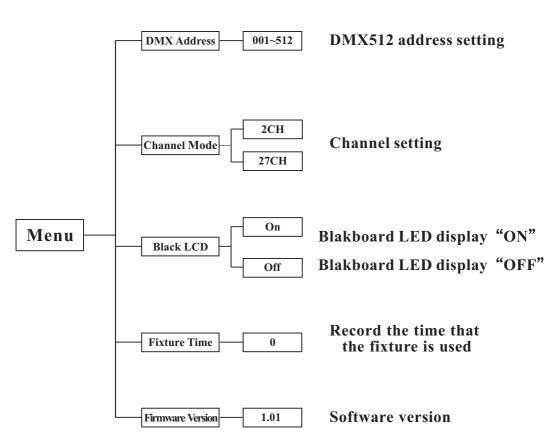

### 5 - 3Universal DMX controller:


The user need to set the lighting channel mode first while control by universal DMX controller. It can set the channel mode from its LED displaypanel. Please refer to the following diagram to use your controller to activate the fixture:

DMX512 Configuration		
Ch1	Ch2	
Dimming	Strobe	
255 100%	255  fast  ###  ##  Slow  7  E  0	

DMX512 Configuration					
Ch1	Ch2	Ch3	Ch4	Ch26	Ch27
Dimming	The first LED light	The Secoud LED light	The third LED light	The twenty-fifth LED light	Strobe
255 100%	255 100%	255 100%		0 0	255 Fast  ###  Slow 7  10 0


#### 5 - 5 Master/slave mode operation:

The fixtures will allow you to link others fixtures together and operate without a controller. In master/slave mode, the first fixture will control the others to give an automatic or sound activated, synchronized light show. This function if good when you want an instant show. Attention: The first unit it's DMX input cable will have nothing connect it. and the other fixtures will be set in slave mode automatically. Their DMX input cables connect the last fixture DMX output cable (daisy chain).any fixture can act as a Master or as a Slave .Please refer to the following diagram to link the others fixtures.

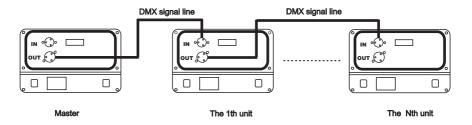

### 5 - 5 Master/slave mode operation:

The fixtures will allow you to link others fixtures together and operate without a controller. In master/slave mode, the first fixture will control the others to give an automatic or sound activated, synchronized light show. This function if good when you want an instant show. Attention: The first unit it's DMX input cable will have nothing connect it. and the other fixtures will be set in slave mode automatically. Their DMX input cables connect the last fixture DMX output cable (daisy chain).any fixture can act as a Master or as a Slave .Please refer to the following diagram to link the others fixtures.

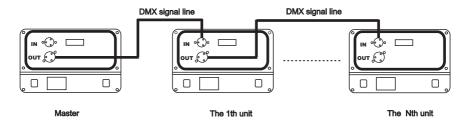

### Sixth, Safety warning and maintain

#### 6 - 1 Safety warning:

- 1. The product must be installed by a qualified professional. Please do not open the equipment.
- 2. The fans and air-vents should not be jammed by other equipment or decorate materials.
- 3. Avoid looking directly in the light source.

#### 6 - 2 Maintain:

- 1. Please read the user manual in detail before operating the equipment. Please call the technician in case the machine broken down.
- 2. Keep the equipment away from water or moisture.
- 3. Make sure the power is off and the equipment is not connected to the mains power supply before opening the unit or carrying and any maintenance.
- 4. If there has been any damaged caused to the LED bulbs by the user

### Seventh, Specification

1. Voltage: AC90~260V 50~60Hz

2 Rated Power: 300W

3. LED Color: 25PCS10W

4 DMX Channels: 2/27CH

5. Version: 1.01

6. Size: 750(L)X250(W)X720(H)mm

7. N.W/G.W: 16.6Kg/18.1Kg

Product common breakdown comparative chart			
Breakdown cause	Major breakdown analysis and solution		
The fixture no work	<ol> <li>Check the power cable whether to connect the fixture, whether the fuse does burn out.</li> <li>Check the input voltage whether to assign the voltage match with the fixture.</li> </ol>		
No sound control	Check the address code or the display whether establishes according to the instruction booklet is the voice control pattern.     Check the potentiometer possibly moves is smallest, attempt to adjust the potentiometer.		
The fixture can bright normally, but it not controlled by controller	Please check the fixtures' DIP outset address setting whether correctly.     Please check the XLR signal cable whether be damage.		
Master-slave mode, The master mode is normal,but slave mode is not normal	Please conformed only one for the master and the master without DMX be connected, and to set master as sound control or auto pattern.     If the Master-slave setting is right but still have problem, please check the XLR connect cable.		
The button malfunction, does not work.	Check the buttons whether to have some button not to have the normal reset.		
The fixtures' brightness obvious dim	Check the LED tubes or the laser already whether to be service life.     Check the internal and external optical system whether to be clean.		