



X505- Psych
User Manual

INTRODUCTION

Thank you for purchasing Micromax mobile phone. To obtain the best performance of your phone, please read this user manual carefully.

User manual


Table of Contents

1	Safety	5
1.1	Safety Precautions	5
2	Introduction	6
2.1	Phone and Accessories	6
2.2	Your Phone.....	6
2.3	About your Phone	7
2.4	About SIM Card and the Battery	7
2.5	To switch ON and OFF	8
2.6	USB Cable Functions.....	9
3	Phonebook	9
3.1	To Add a Contact	9
3.2	To Search by Name.....	9
3.3	To Search by Number	9
3.4	To Dial a number from the Phonebook.....	9
3.5	Send a Message to a contact	9
3.6	To Delete a Contact	9
3.7	To Copy a contact	10
3.8	To Move a contact	10
3.9	To Send a contact	10
3.10	Add to Blacklist.....	10
3.11	Caller groups	10
3.12	Phonebook Settings	10
4	Calling	11
4.1	To Dial from the Phonebook.....	11
4.2	To activate 'Mute' during a call.....	11
4.3	DTMF (Dual Tone MultiFrequency) tone	11
4.4	Call divert.....	11
4.5	Call waiting.....	11
4.6	Call Barring.....	11
4.7	Conference Call	11
5	Call Logs	12
5.1	Missed calls/dialed calls/received calls	12
5.2	Delete call logs	12
5.3	SIM1-2 call timers.....	12
5.4	SIM1-2 call cost	12
6	Messages	12
6.1	Write SMS	12
6.2	Inbox.....	13
6.3	Drafts	13
6.4	Outbox.....	13
6.5	Sent Messages.....	14

User manual

6.6	Archive.....	14
6.7	Delete Messages	14
6.8	Templates.....	14
6.9	Message settings.....	14
6.10	EMAIL.....	14
6.11	Broadcast Message.....	15
7	Settings	16
7.1	Customized Phone & Call Settings	16
7.2	Profile Setup	17
7.3	Security Settings.....	17
8	Multimedia and Entertainment	18
8.1	Camera	18
8.2	Image Viewer.....	18
8.3	Video Recorder	18
8.4	Video Player.....	19
8.5	Audio Player.....	19
8.6	Sound Recorder.....	20
8.7	FM Radio.....	20
9	Fun & Games.....	20
9.1	Games.....	20
10	Bluetooth	20
10.1	To Activate/deactivate Bluetooth Connectivity	21
10.2	To Search/Inquire Audio Device.....	21
10.3	To Search My (new) device	21
10.4	Active Device.....	21
10.5	Settings	21
11	Organizer & Applications	21
12	File Manager	22
13	Internet (WAP) & JAVA Services	23
13.1	WAP Browser	23
13.2	WAP Setup	23
13.3	Java	23
14	Phone Sync.....	24
15	STK	24
15.1	STK Services	24
16	Inputting Text.....	24
17	Maintenance.....	25
18	Taking Care of your Device	26
19	After Services	27


1.1 Safety Precautions


 Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.


Safe driving


1) Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.


2) Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.


 **Turn off during a flight:** Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.


 **Turn off the phone when within an area where blasting takes place:** Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.


 **Turn off the phone when any dangerous goods are in vicinity:** Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

 **In hospital:** Please obey the related rules or bylaws of the hospital when using your phone in a hospital. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone, will interfere with any medical equipment that is not protected fully, and other electronic equipment items, too. Should you have any question in this regard, please consult a related physician or medical equipment supplier.

 **Interference:** Each and every phone's performance may be affected due to radio interference.

 **Professional service:** The phone must be installed or repaired by no other personnel than professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.

 **Fittings and battery:** You shall use the fittings and battery acknowledged by the phone manufacturer only. Using unauthorized accessories may tamper the warranty of the device.

 **Emergency call:** You may enter a telephone number (112, etc.) to ask for emergency help after making sure that the phone has been turned on and is in the service status. Press the Send Key to call out.

Disclaimer: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone. Micromax keeps the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such case, the latter shall govern.

2.1 Phone and Accessories

Open the packing box of the phone and check that you have the Phone, Standard Charger, Standard Battery, USB Cable, Earphone, Service Guide, Software CD, 2 additional back panels, Silicon cover and Warranty Card.

2.2 Your Phone



2.3 About your Phone

To view the features in your phone press the 'center key'; for your convenience the pages has been divided into 2 pages. Slide on top of the screen to view the 2 pages.

Your phone allows you to customize the screen according to your preference. On the idle screen tap on the arrow on the left side of the phone and choose to display from a list of multiple features on your screen.


2.4 About SIM Card and the Battery

Please store the cards out of childrens reach.


The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.

Be sure to switch off the phone before you insert or remove the battery or the card, otherwise, the phone may be damaged.

Inserting SIM card and battery

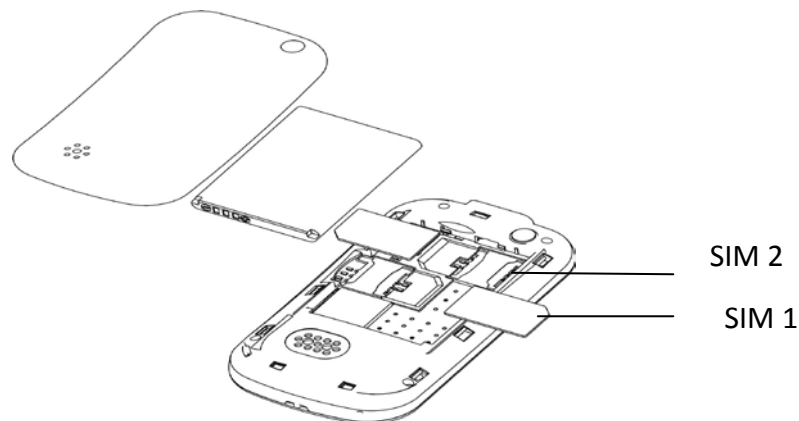

Inserting Charging the battery

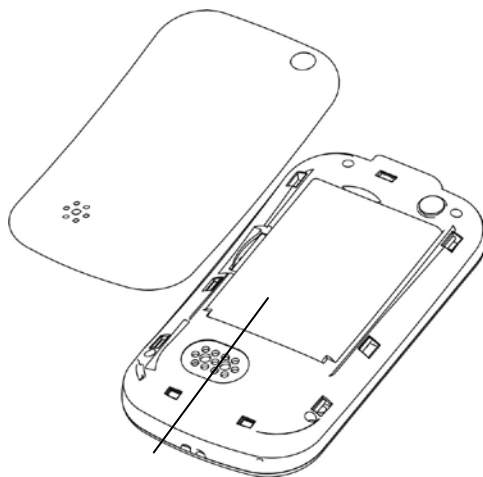

Battery

Insert the plug of the charger into the interface of the phone, and insert the charger into the power socket carefully. The battery icon will blink.

Tips:


Please charge the battery before you use the newly purchased phone. We suggest you charge the battery for 4 hours continuously for the first time.

Charging when the phone is in the ON mode will not influence the normal dialing and answering, but this needs to consume power, thus the time of charging will increase.

We suggest you recharge the battery when the power is used up so as to prolong the life of the battery.

Inserting the Memory Card

Memory Card

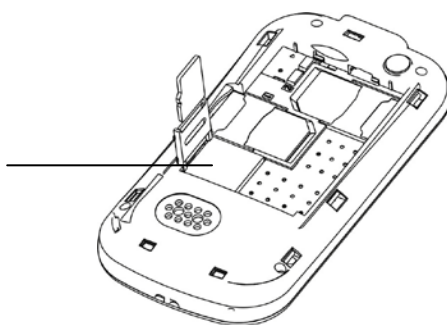

2.5 To switch ON and OFF

To switch ON: Long press **End key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.)

If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

To switch OFF: In the standby mode, long press **End key**.

2.6 USB Cable Functions

On connecting the USB cable you can view the:

Webcam: Allows you to use your phone as a webcam

Mass storage

COM port

3 Phonebook

You can store names and phone numbers in the memory of the phone or SIM card.

Menu > Phonebook

3.1 To Add a Contact

In idle, enter phone numbers.

Options > Save > Select the location for saving

Or: **Menu > Phonebook > Add new contact >** Select the location for saving

You can edit the name, mobile phone number, home phone number, company name, e-mail address, office phone number, fax number, birthday, photo caller ID, ringtone and group of each contact.

3.2 To Search by Name

Menu > Phonebook > Search name > Enter characters

3.3 To Search by Number

Menu > Phonebook > Search number > Enter characters

3.4 To Dial a number from the Phonebook

Or **Menu > Phonebook > Search contact >** Input characters

Options > Search

The desired contact will be highlighted. Press **Send key** to make a call.

Tip: If the entry contains more than one numbers, the number selection screen will be displayed. You can select one and press **Send key** to dial.

3.5 Send a Message to a contact

Menu>Phonebook> Tap on the desired contact>Send message

Allows you to send a message to the contact

3.6 To Delete a Contact

Menu > Phonebook > Tap on the desired contact >Delete contact

Allows you to delete the contact.

3.7 To Copy a contact

Menu>Phonebook> Tap on the desired contact >Copy

You can copy all entries stored in the SIM card to the phone memory and vice-versa

3.8 To Move a contact

Menu>Phonebook> Tap on the desired contact >Move

Allows you to move a contact from the SIM to the phone memory and vice-versa.

3.9 To Send a contact

Menu>Phonebook> Tap on the desired contact >Send a contact

Allows you to send the contact via text message, mms, email and Bluetooth.

3.10 Add to Blacklist

Menu>Phonebook> Tap on the desired contact >Add to blacklist

Allows you the contact number in Blacklist.

3.11 Caller groups

Menu > Phonebook > Tap on the desired contact >Caller groups

Allows you to add a contact in caller groups under- friends, family, VIP, business, others.

3.12 Phonebook Settings

Menu >Phonebook> Phonebook Settings

Choose Phonebook view: Choose to view the contacts stored in the SIM or phone memory or both.

Speed dial: Specify speed dial numbers to frequently used phone numbers.

My number: Edit or send your number

vCard version: View the vCard version

Extra numbers: View SIM 1-2 owner number/service dialing number/SOS number

Phonebook backup: This feature allows you to Import and Export contacts from your phone to the memory card and vice-versa.

Memory status: View used SIM/Phone memory

Copy contacts: Copy contacts from SIM to phone and vice-versa

Move contacts: Contacts from SIM to phone and vice-versa

Delete all contacts: Delete all the contacts from the phonebook.

4.1 To Dial from the Phonebook

Enter the **Phonebook**, select an entry from the entry list and press **Send key** to dial.

Tip: If the entry contains more than one numbers, the number selection screen will be displayed. You can select one and press **Send key** to dial.

4.2 To activate 'Mute' during a call

During a call, you can prevent the other party from hearing you:

While on call> Press the Right Soft Key (RSK)

4.3 DTMF (Dual Tone MultiFrequency) tone

During a call, you can select to turn ON or turn OFF the DTMF tone. When the DTMF tone is turned off, the digits entered will not be regarded as a DTMF signal response.

4.4 Call divert

Menu > Settings > Call settings > SIM1-2 call settings>Call divert

With the Call Divert function (needs network support), you may divert incoming calls to another mobile phone or a direct line telephone, but not to any extensions of a fixed telephone.

4.5 Call waiting

Menu > Settings > Call settings > SIM1-2 call settings>Call Waiting

This function allows you to put the current call on hold and then answer a second one. If, during a call, a new call comes in, you will hear a special alert sound and the screen will display the number of the new incoming call, which indicates that a third-party call is coming in and waiting for to answer.

4.6 Call Barring

Menu > Settings > Call settings > SIM1-2 call settings>Call Barring

The function is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the settings of Restrict Calls, please contact your network operator to obtain the password for opening this service.

4.7 Conference Call

The phone supports Three-party Calling. A Three-party Calling, also called a multiparty call or a conference call, is a service based on call waiting. It is applicable to dual standby with GSM network.

5.1 Missed calls/dialed calls/received calls

At the bottom of the phone view the Dialed calls, Received calls, Missed calls, Menu section.

Menu>Call Logs>SIM1-2 call history

View: View the desired entry

Call: Call the desired entry

Send message: to save the number to the Phonebook

Add to blacklist: add a number you wish to avoid/ignore under blacklist

Edit before call: Edit the number before making a call.

Delete: to delete the entry.

5.2 Delete call logs

Call Logs>Menu>SIM1-2 call history>Delete SIM1-2 call logs

You may select to delete **Missed, Dialed, Received** or **All** calls.

5.3 SIM1-2 call timers

Call Logs>Menu>SIM1-2 call history>SIM 1-2 call timers

View SIM 1-2 call timers

5.4 SIM1-2 call cost

Call Logs>Menu>SIM1-2 call history>SIM 1-2 call cost

View SIM 1-2 call cost.

6.1 Write SMS

Menu > Messages > Write SMS/MMS

Write the content of the SMS

Send to: Add contact number

Input Method: select Multitap abc/Numeric/Insert Symbol

Add picture: Add a desired picture in the message you want to send as an MMS

Add sound: Add a desired sound in the message you want to send as an MMS

Add video: Add a desired video in the message you want to send as an MMS

Add subject: Add a desired subject in the MMS message

Slide Options: Allows you to add a slide 'before/after in the current mms.

Switch to MMS: Allows you to switch from SMS to MMS, manually.

Advanced: Insert text template/Insert attachment/contact number/insert contact name (embellish the characters of text)/ Insert bookmark.

Save: Save the mms/sms

Details: View the details of the MMS/SMS

6.2 Inbox

Menu > Messages > Inbox

To read a message, move to the entry and press **OK**

When reading a SMS, you can select **Options >**

View: Allows you to view the SMS received.

Reply: Allows you to reply to the SMS received.

Call Sender: Allows you to call the number from which the SMS was received.

Forward: forward the entry to others.

Delete: delete the message.

Delete all: delete all the messages from the Inbox.

Save to Phonebook: Allows you to save the number from which the sms was received to the phonebook.

Mark as Unread: Allows you to mark the message as 'unread'.

Advanced

- Copy to phone/SIM: copy the SMS stored in SIM/phone to the phone/SIM.
- Move to phone/SIM: move the SMS stored in SIM/phone to the phone/SIM.
- Copy all: copy all the messages stored in SIM to the phone memory, or copy all the messages stored in the phone memory to SIM.
- Move all: move all the messages stored in SIM to the phone memory, or move all the messages stored in the phone memory to SIM.

6.3 Drafts

Menu > Messages > Drafts

View: Allows you to view the SMS received.

Send: Send the message saved in drafts

Edit: Allows you to edit the SMS.

Delete: Delete the message.

Delete all: Delete all the messages from the Inbox.

Advanced

- Copy to phone/SIM: Copy the SMS stored in SIM/phone to the phone/SIM.
- Move to phone/SIM: Move the SMS stored in SIM/phone to the phone/SIM.
- Copy all: copy all the messages stored in SIM to the phone memory, or copy all the messages stored in the phone memory to SIM.
- Move all: Move all the messages stored in SIM to the phone memory, or move all the messages stored in the phone memory to SIM.

6.4 Outbox

Menu > Messages > Outbox

SMS that have been sent and saved are stored in Outbox.

To read a message, move to the entry and press **OK**

When reading an SMS, you can select **Options >**

View: View the message saved in **outbox**

Resend: Select how to send.

Edit: Edit the message.

Delete: Delete the message.

Delete all: Delete all the messages from the Inbox.

Advanced

- Copy to phone/SIM: Copy the SMS stored in SIM/phone to the phone/SIM.

- **Move to phone/SIM:** Move the SMS stored in SIM/phone to the phone/SIM.
- **Copy all:** copy all the messages stored in SIM to the phone memory, or copy all the messages stored in the phone memory to SIM.
- **Move all:** Move all the messages stored in SIM to the phone memory, or move all the messages stored in the phone memory to SIM.

6.5 Sent Messages

Menu > Messages > Sent messages

View sent messages.

6.6 Archive

Menu>Messages>Archive

Allows you to save messages received in your inbox into this **archive** folder.

6.7 Delete Messages

Menu>Messages>Delete messages

Delete messages from the following folders:

Inbox, Drafts, Outbox, Sent messages, Archive, All messages

6.8 Templates

Menu>Messages>Templates>SMS Templates/MMS Templates

The phone has preset frequently used phrases which may be selected and added to the text when you are editing SMS. Preset phrases may be modified.

6.9 Message settings

Menu>Messages>Messages settings>Text messages>SIM1-2 message settings

SMS Settings

Menu>Messages>Message settings>SMS settings

- Profile settings
- Voicemail server
- Common settings- Set to receive Delivery reports, Reply path, Save Sent message.
- Memory status
- Preferred storage
- SIM1-2 text message counter

MMS Settings

Menu>Messages>Message settings>MMS settings

- Profiles- Select a profile from the available network profiles.
- Common setting

6.10 EMAIL

E-Mail

Before use, you need to set the e-mail in the “E-mail accounts” menu. Via this menu, you can

receive and send e-mail.

- Send and Receive: You can send/receive the e-mail from the specified mailbox.
- Write Email: You can edit e-mails.
- Inbox: You can see the received e-mails.
- Outbox: You can see the sent e-mails.
- Sent: You can view send e-mails.
- Drafts: You can see the drafts in the specified mailbox.
- Clear mailbox: You can clear the e-mails in the specified mailbox, including inbox, outbox, sent e-mail backup and drafts, or clear all e-mails.
- Delete marked emails: You can change the status of all e-mails to deleting status.
- Email accounts: You can set up you new account.
- Templates: you can pre-edit some common phrases, which is convenient for quick editing.
 - Incoming Server: You can set the server parameters for the received e-mails, including Incoming server, Incoming port, user name and password etc.
 - Signature: You can set it On or Off and edit the signature.

The first step in using email on your mobile phone is to define your email account's settings so that your mobile phone knows which server to contact and to login using the correct credentials.

TO CONFIGURE A NEW EMAIL ACCOUNT:

Go to:

- Email >Email accounts> Options >New Account> Start to create account >Email address >Options >Next > Select email protocol ('POP3' or 'IMAP- as per the account settings).
- Next >Select Data account (as per the SIM connection) > Incoming Server (edit email incoming server as per the account standard settings).
- Next > Outgoing Server (edit email outgoing server as per the account standard settings) >User Name > Password > Account Name > Options > Done (email account is created)
- Go to- Created email account >Options > Edit (user can edit email account settings if required)
- Advance Settings > Outgoing Sever > Outgoing Port (Input correct outgoing port according to the email configuration).
- Advance Settings > Incoming Server > Incoming Port (Input correct incoming port according to the email configuration)
- Go to- Configured email account > Options > Activate
You email account is now created!

6.11 Broadcast Message

Menu > Messages > Broadcast Message

The phone supports Broadcast Message. It is supported by GSM network. Broadcast messages are single-way messages sent to the users of the network operators by the message service center. For the contents and channel setup of broadcast messages, consult your network operator.

7.1 Customized Phone & Call Settings

Functions	Description
Reception Mode	Menu>Settings>Reception mode
Pen Calibration	Menu>Settings>Calibration Edit settings for enhancing touch calibration by altering settings in Handwriting & Touch Vibration features.
Set time and date	Menu > Settings > Phone settings > Time and date
Schedule power on/off	Menu > Settings > Phone settings > Schedule power on/off To disable and enable status; to activate/deactivate, switch on/off, and time in turn.
Select language	Menu > Settings > Phone settings > Language
Preferred Input	Menu > Settings > Phone settings >Preferred input
Set Display setup	Menu > Settings > Phone settings > Display Setup > Wallpaper/Screen saver/Show date and time/ LCD backlight/Screen switch effect.
Themes	Menu>Settings>Phone settings>Themes
Set Greeting text	Menu > Settings > Phone setup > Greeting Text
Auto update of date and time On/Off	Menu > Settings > Phone settings > Auto update of date and time
Caller ID- Set by Network	Menu > Settings > Call settings > SIM1/2 call settings>Caller ID
Set Call waiting	Menu > Settings > Call settings > SIM1-2 call settings>Call waiting
Set call Divert	Menu > Settings > Call settings > SIM1-2 call settings> Call Divert Tip: You can select Cancel all divert to cancel all the divert settings.
Set Call Barring	Menu > Settings > Call settings > SIM1-2 call settings> Call Barring. Restrict Calls is a GSM network service. Please contact your network operator to obtain the password for opening this service.
Set the Blacklist	Menu > Settings > Call settings > Advance settings>Blacklist
Reject by SMS	Menu > Settings > Call settings > Advance settings>Reject by SMS Allows you to reject a call by SMS. Switch ON/OFF to use this feature
Select network	Menu > Settings > Network settings >SIM 1-2 network settings New Search: The phone will select a new network automatically. Select preferred Network: The phone will search and display the list of known networks for you to select the desired one, after which, the phone will try to log in the selected network. If the selected network is registered successfully, it will prompt so.
Sound effects	Menu>Settings>Sound effects

User manual

Set information of GPRS Connection	Menu > Connectivity> Data account>GPRS/GSM Data
Restore factory default	Menu > Settings > Restore factory settings Tip: You need to enter the phone password when you want to restore factory default. The preset phone password is 0000 . Please bear your password in mind. In case you forget it, contact the local dealer or an authorized service center.

7.2 Profile Setup

Functions	Description
Activate the profile mode	Menu > User profiles > Desired mode>Options > Activate
Set the ringtone for incoming calls	Menu > User profiles > Customize> Tone setup> SIM1-2 Incoming call
Set the ringtone for messages	Menu > User profiles > Customize> Tone setup> SIM1-2 message tone
Set the ringtone for keypad tone	Menu > Settings > User profiles > Customize> Tone setup> Keypad tone
Adjust the volume of Ring Tone / Key Tone	Menu > User profiles >Customize> Volume
Set Alert Type of ringing	Menu>User profiles> Customize >Alert type
Set the ring type	Menu > User profiles > Customize> Ring type
Set the Extra Tone	Menu > User profiles > Customize> Extra tone
Set the answer mode	Menu > User profiles > Customize> Answer mode

7.3 Security Settings

Functions	Description
PIN code request for SIM Lock	Menu > Settings > Security settings> SIM1-2 security settings>SIM 1-2 lock Warning: If you enter three wrong PIN codes in a row, you need to enter the PUK code to unlock. PIN code and PUK code are provided by the network operator.
Phone lock	Menu > Settings > Security settings > Phone lock The preset password is 0000
Auto keypad lock	Menu > Settings > Security settings> Auto keypad lock > Select the time for the auto keylock. Note: To lock the phone press the 'end' key. To unlock it slide your finger in the direction of the arrow.
Change password	Menu > Settings > Security Center> SIM1Security setup > Change password

8 Multimedia and Entertainment

8.1 Camera

Menu > Camera:

When the camera is activated, the phone enters the view finding status.

On the view finding screen, press **Ok Key** to capture.

Tip: If in weak light, such as night or indoor scene, the ISO Sensitivity may increase, which will cause noise or mottle.

Before shooting, you can set the following as needed. Select **Options >**

Photos: View the images clicked.

Camera settings: Set EV, Banding, delay timer, shutter sound, contrast and cont. shot,

Image settings: Set the size and quality of photos.

White balance: Set White Balance.

Scene mode: Set scene mode.

Effect settings: Set the special effects of photos, such as Grayscale, Sepia, Sepia Green and Colour Invert.

Storage: Select phone or memory card.

Restore default: Restore default settings.

8.2 Image Viewer

Menu > Image viewer

Or on the view finding screen, select **Options > Photos**

The phone will automatically read the entries with the format supported by the phone under the folder **Photos** of **File manager** and display a list of entries. If there is no entry, the list is blank.

On the Image viewer list screen, select **Options>**

View: View the highlighted photo.

Edit: Allows you to resize pictures or add frames, text etc.

Browse style: Select the style of viewing.

Send: Send the photo by MMS or Bluetooth, Email

Use as: Set the highlighted photo as wallpaper, screen saver, or caller picture of a Phonebook entry.

Rename: Rename the highlighted file.

Delete: Delete the highlighted file.

Sort by: Sort the files in the list.

Delete all files: Delete all the files from the list.

Storage: Select phone or memory card.

8.3 Video Recorder

Menu > Video recorder

Tap on the center icon on the screen to record. When recording, press **the same center icon (marked with a dot)** to pause the recording, and tap on the same key again to resume

recording.

Before recording, you can set the following as needed. Select **Options >**

To player: enter video player.

Camcorder settings: set White Balance, EV, Night Mode and Banding.

White balance: Set white balance

Video settings: Set the Video Quality, File size limit, Rec time limit, and record audio.

Effect settings: Set the special effects, such as Grayscale, Sepia, and Sepia Green etc.

Restore default: Restore default settings.

8.4 Video Player

Menu > Video player

Or, on the view finding screen, select **Options > To player**

The phone will automatically read the entries with the format supported by the phone under the folder **Videos** of the **File manager** and display a list of entries. If there is no entry, the list is blank.

On the video player list screen, select **Options >**

Play: Enter the play screen of the highlighted file. Select **Ok Key** to begin/pause playing; press **Navigation key (Up/Down)** to adjust the speed, press **Navigation key (Left/Right)** to adjust the progress.

Send: Send the video by MMS or Bluetooth.

Rename: Rename the highlighted file.

Delete: Delete the highlighted file.

Delete all files: Delete all the files from the list.

Sort by: Sort the files in the list.

Streaming URL: Allows you to browse sites like Youtube, Google.

This feature is a network dependant service.

Network Profiles: Choose a desired network

Storage: Select phone or memory card.

8.5 Audio Player

Menu > Audio player

SRS WOW HD: Is a sound effect control software that allows you to add a variety of effects like: Bass, Treble, Blue, Classical, Hip Hop, Jazz, Voice, Rock- to your songs

Playlists: Allows you to make a playlist and add songs in it either from the phone memory or the memory card.

All tracks: Allows you to view all the tracks

Recently played: View a list of the recently played songs

Most played: View the most played songs.

Recently added: View the list of recently added songs

Artists: Add the artist name

Albums: Add the album name

Genres: Add a genre/type to your songs

Refresh list: Refresh the playlist

Settings:

- Player settings
- Display settings
- Sound effects

- Bluetooth settings:

8.6 Sound Recorder

Menu > Sound recorder>

On the Sound Recorder list screen, you can select:

New Record: Begin recording. The recordings will be saved in the folder **Audio** under the **File Manager** automatically.

Play: Play the recorded sound

Append: Continue to record the highlighted recording

Rename: Rename the highlighted recording.

Delete: Delete the highlighted recording.

List: View the number of sounds recorder

Settings: Set the format of the recording.

Use: Send the highlighted record to the ringtone list for profiles.

8.7 FM Radio

Menu >>FM radio

Edit the channel list manually:

Options > Channel list

Options > Edit

Edit the channel list automatically:

Options > Auto search

Listen in by Loud Speaker:

Options > Settings

Set the speaker **On or Off**.

When Playing:

Search mode: Set the search mode **ON** or **OFF**.

Play/Stop: Play/Stop.

(Left/Right): Search for the previous/next channel on search mode or adjust the frequency length by length.

9 Fun & Games

9.1 Games

Menu > Applications>Games

Allows you play from a set of two preset games in your phone

10 Bluetooth

Tip:

You can connect wirelessly to other compatible device with Bluetooth technology. Compatible devices may include computers, mobile phones. You can use Bluetooth connectivity to send images, music and sound clips, video clips, and notes.

Since devices with Bluetooth wireless technology communicate using radio waves, your device and the other devices need to be within a range of 10 meters from each other, but the connection may be subject to interference or could face obstruction from stuff such as wall or from other electronic devices. Use the wireless technology of bluetooth to be able to consume battery quantity of electric charge. If you are restricted by something when using bluetooth technology, consult your local Micromax support/service station.

10.1 To Activate/Deactivate Bluetooth Connectivity

Menu > Connectivity > Bluetooth > Power (On/Off)

10.2 To Search/Inquire Audio Device

Menu > Connectivity > Bluetooth > Inquiry audio device

Tip: Please activate the Bluetooth first.

10.3 To Search My (new) device

Menu > Connectivity > Bluetooth > My device > Inquiry new device

Tip: Please activate the Bluetooth first.

10.4 Active Device

Menu > Connectivity > Bluetooth > Active Device

Tip: Please activate the Bluetooth first.

10.5 Settings

Menu > Connectivity > Bluetooth > Settings- Allows you to:

- ON/OFF your Device visibility to other connected Bluetooth users.
- You can also Change Device Name, Authentication_
- Forward songs to your Bluetooth device.

Tip: Please activate the Bluetooth first.

11 Organizer & Applications

Functions	Description
View the calendar	Menu > Organizer > Calendar
Task	Menu > Organizer > Task
Set the alarm	Menu > Organizer > Alarm > Edit
World clock	Menu > Organizer > World clock
Calculator	Menu > Calculator
Currency converter	Menu > Applications > Currency converter

User manual

	Input the exchange rate and Press OK . Select the exchange rate, input the figure and press OK .
Text Reader	Menu > Applications > Text reader

12 File Manager

When an USB cable is connected, you can use the phone as a USB mass storage.

Functions	Description
View folders	Menu > File manager > Options > Open
View detailed information	Menu > File manager > Options > Open Options > Detail
Format	Menu > File manager > Options > Format Tip: The Format function will delete the data you have created and saved. Please back up important data and keep them properly.

13 Internet (WAP) & JAVA Services

13.1 WAP Browser

Menu > Connectivity > Internet Services (WAP)

You need to make the relevant settings in WAP Setup before you use the WAP browser to surf the web.

When the WAP browser is activated, if a homepage is set in WAP Setup, the phone will link the website indicated by the homepage; otherwise, you may enter a website and the phone will connect to it.

When surfing the web, select **Options >**

Refresh: To refresh the web page.

Homepage: To link the homepage.

Input URL: input a website address.

Add Bookmark: Add to bookmark.

Set Homepage: set the URL as homepage.

Forward/Backward: To turn to the next /previous page.

Advance: Show URL info, Bookmark, Save item.

Exit: To exit the browser.

13.2 WAP Setup

WAP settings are required for surfing the web with WAP. Follow the steps below to set up a WAP account:

- Connectivity > Data Account > GPRS > Add account > Add account name/ APN/ Username & password > Save.

Then go to:

- Menu >Connectivity > WAP >Settings > Profiles > Add new > Account Name/ Homepage/ Data Account (select the previously created data account) > Select connection type (HTTP/WAP- Indise HTTP & WAP ener the correct proxy address & port > Done > Save the account >Go to the created account & activate.

Menu > Connectivity> WAP> Settings>Profile

You can set the following:

Account: To select from the GPRS connection list.

Connection type: To set WAP or HTTP connection mode.

Home page: To set the address of the homepage. The phone has a default and you can modify it.

13.3 Java

Menu > Applications>Java

You can install Java applications to enhance the multimedia function. It also allows you to connect to Facebook, Nimbuzz , Operamini and Snaptu as well.

Run JAVA

Menu > JAVA > Run JAVA

14 Phone Sync

Menu>Phone sync

The phone sync function helps you to transfer contacts from your phonebook to another mobile device via bluetooth

15 STK

15.1 STK Services

If your SIM card supports STK, you may use the corresponding value-added services.

Menu > Connectivity

16 Inputting Text

You can enter text in English language.

17 Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

18 Taking Care of your Device

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use chargers indoors

For details, see the After Service Guide supplied with the phone.