

User Manual

- V200

Table of Contents

SAFETY PRECAUTION / MEASURES	3
PHONE LAYOUT.....	4
KEYS AND PART.....	5
1 GETTING STARTED.....	6
1.1 INSTALLING SIM CARD AND BATTERY	6
1.2 CHARGING	6
1.3 POWER ON / OFF	6
1.4 USING HEADSET	6
2 BASIC FUNCTION	8
2.1 MAKE A CALL	8
2.2 MAKE AN INTERNATIONAL CALL	8
2.3 ANSWER OR REJECT A CALL	8
2.3.1 Answer a Call.....	8
2.3.2 Reject a Call.....	8
2.3.3 End a Call.....	8
2.4 CALLING OPTIONS.....	8
3 PHONE BOOK	9
3.1 CONTACT SEARCH.....	9
3.2 ADD NEW CONTACT.....	9
3.3 CALLER GROUPS	9
3.4 SPEED DIAL	9
3.5 DELETE ALL	9
3.6 COPY ALL	9
3.7 MOVE ALL	9
3.8 EXTRA NUMBER.....	10
3.9 SETTINGS.....	10
4 SMS	11
4.1 WRITE MESSAGE.....	11
4.2 INBOX.....	11
4.3 DRAFTS	12
4.4 OUTBOX	12
4.5 DELETE.....	12
4.6 TEMPLATE	12
4.7 VOICE MAIL SERVER.....	12
4.8 BROADCAST MESSAGE	12
4.9 SMS SETTINGS.....	12
5 CALL HISTORY	14
5.1 ALL CALLS	14
5.2 MISSED CALLS	14
5.3 DIALED CALLS	14
5.4 RECEIVED CALLS	14
5.5 DELETE CALL LOGS	15
5.6 CALL TIMERS	15

5.7	AUTO QUICK END	15
5.8	CALL COST	15
5.9	SMS COUNTER	15
6	FM RADIO.....	16
7	ORGANIZER.....	17
7.1	ALARM	17
7.2	CALENDAR.....	17
7.3	STOPWATCH.....	17
7.3.1	<i>Typical stopwatch.....</i>	<i>17</i>
7.3.2	<i>nWay stopwatch.....</i>	<i>17</i>
7.4	TO DO LIST	17
7.5	CALCULATOR.....	18
7.6	CURRENCY CONVERTER	18
7.7	WORLD CLOCK	18
7.8	UNIT CONVERTER	18
7.9	MELODY COMPOSER	18
7.10	TORCH LIGHT	18
7.11	FILE MANAGER.....	18
8	USER PROFILES	19
9	SETTINGS	20
9.1	TIME AND DATE.....	20
9.2	PHONE SETTING.....	20
9.3	CALL SETUP	20
9.4	NETWORK SETTING	21
9.4.1	<i>Network selection</i>	<i>21</i>
9.4.2	<i>Preferred network.....</i>	<i>21</i>
9.5	SECURITY SETUP	21
9.5.1	<i>SIM lock.....</i>	<i>21</i>
9.5.2	<i>Phone lock.....</i>	<i>21</i>
9.5.3	<i>Auto keypad lock</i>	<i>21</i>
9.5.4	<i>Fixed dial.....</i>	<i>21</i>
9.5.5	<i>Barred Dial.....</i>	<i>21</i>
9.5.6	<i>Change password</i>	<i>21</i>
9.6	RESTORE FACTORY SETTINGS.....	21
10	FUN & GAMES	23
11	SERVICES	24
	APPENDIX I TROUBLESHOOTING	25

Safety Precaution / Measures

Please comply with these precautions / measures to avoid dangerous or illegal situation and ensure peak performance of your phone.



ROAD SAFETY COMES FIRST

Do not use the phone hand-held while driving. Park the vehicle on the road side, if phone is hand held.



SWITCH OFF IN AIRCRAFT

Switch your phone while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.



SWITCH OFF NEAR EXPLOSIVE

Switch your phone off when entering any explosive area. Observe any provided guidelines or regulations.



SWITCH OFF WHEN REFUELING

Do not use your phone when refueling. You should keep your phone away from fuel and chemicals.




SWITCH OFF IN HOSPITALS

Switch the phone off in hospitals. Follow any instructions if provided.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.

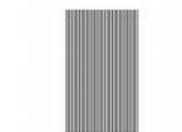

AVOID INTERFERENCE WITH PACEMAKERS

Maintain a minimum of 15cm between mobile phones and pacemakers to avoid potential interference.



You may only open the phone to replace the battery, SIM and microSD card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

Phone Layout



Keys and Part

Communication control keys

Calling key is used to make a call after a number has been entered or selected from the phone book, or to answer an incoming call.

Ending key is used to end a call during calling or conversation, or to quit the menu and return to idle screen. Press and hold the ending key for about two seconds to turn on/off the phone.

Direction keys

Direction keys are used to readily access different functions which can be assigned by dedicating the keys by **Dedicated Keys** option in **Settings**.

OK key

In idle screen, press **OK** key to open the main menu. In lists and menus, press the **OK** key to start an application/function.

Left and right soft keys

In idle screen, press the left soft key to directly access the **Menu**. In idle screen, press the right soft key to directly access the **Phonebook** list. During menu operation, the current functions of the left and right soft keys are shown in the bottom line of the screen, and they are closely related to the current status of the phone.

Number keys

Press number keys (0-9) to enter numbers.

Press and hold number keys (2-9) to start speed dial.

You can also use number keys to select menus. If a number is shown before an option in menu list, you can select the option quickly by pressing the corresponding number key.

Asterisk key

Press the asterisk key to enter "*".

Press the asterisk key twice in a row to enter "+", to make an international call.

Pound key

Press the pound key to enter "#".

Long Press pound key in idle screen to activate/deactivate the Meeting mode.

When in an editing screen, press the pound key to change the input method.

Connection jack

The connection jack is used to connect charger and headset.

Icons displayed on the main screen (Icons may be changed without further notice)


1 Getting Started

1.1 Installing SIM Card and Battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) with subscription details, such as your Personal Identification Number (PIN) and optional services.

To install SIM card and Battery:


1. Switch OFF the Phone
2. Remove the battery cover
3. Insert the SIM card
4. Insert the Battery
5. Replace the Battery cover and Switch ON the phone

 Note:	Please do not touch the metal area to avoid losing and breaking the information in SIM card. Avoid SIM from putting it nearby electricity and magnetism.
---	--

1.2 Charging

Insert the Plug of your charger to the charging port at the base of your phone.

When you begin to charge the battery, the stripe of Signal Strength on the right corner of the screen starts to roll. When battery gets fully charged, the stripe becomes stable and stops rolling.

 Note:	<ol style="list-style-type: none">1. Please charge the battery, after it is completely consumed and then charge full to make your battery in best state.2. Using the phone while charging may extend the charging time.3. If battery gets fully discharged, the phone will automatically get switched off.
---	--

1.3 Power ON / OFF

Press End Key for max of 5-10 seconds to Power ON. On getting ON the backlight brighten and animation gets displayed.

If Phone asks for a PIN code, enter the PIN Code and select "OK".

The Lock code for the phone in factory setting is 0000.

Press End Key for max of 5-10 seconds to Power OFF.

1.4 Using Headset

Connect the headset to the mobile headset socket. To answer a call, press headset key and again to end a call, press headset key.



Note:

If phone is in Auto answer mode, the call will be automatically answered.

2 Basic Function

2.1 Make a Call

In idle screen, enter a phone number and press the Dialing key to make a call.

Press the end key to end a call.

2.2 Make an International Call

Double press “ * ” directly for the international prefix (the “+” character replaces the international access code), and enter the country code, area code and phone number. Press the calling key to make a call.

2.3 Answer or Reject a Call

2.3.1 Answer a Call

To answer a call, Press Talk key.

During the conversation, click Options to display the menu which includes: Hold, End, New Call, Phone Book, Messages, Sound Recorder, Mute, and DTMF.

2.3.2 Reject a Call

During the incoming call, press End Key to reject a call.

2.3.3 End a Call

During a call, press End Key to end a call.

2.4 Calling Options

During an active call, you can select the following option by pressing Left Soft Key.

Hold single call:	To put a call on hold
End single call:	End a call
New call:	To make a new call during an active call
Phonebook:	Shortcut to Phone book menu
Messages:	Can enter into Message, read, write and sent SMS.
Sound recorder:	Record the call sound.
Mute:	To mute the call
DTMF:	Can select On or Off

On pressing Right Soft key user get following option:

H-Free:	To use the phone in hands free mode
----------------	-------------------------------------

3 Phone Book

You can save many phone numbers in your mobile phone. You can access the Phone Book to search all records saved in this mobile phone and your SIM card.

3.1 Contact Search

Quick Search allows you to quickly search an entry in the Phonebook by entering the key letters or words of the name.

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display in the middle of the screen. Please use the Up / Down key to select the number as desired, and then press Talk Key to make a call.

3.2 Add New Contact

You can add a new contact entry to the Phone Book, both for the SIM card and your phone. Steps described below:

1. From the Phone Book menu, press left soft key to select **Add New Contact > To SIM / To Phone**.
2. If **To SIM** is selected, press the left soft key to select OK to start to edit the contact's name and phone number.
3. If **To Phone** is selected, you can add the contact's name, phone number, home number, company name, E-mail address, office number, fax number and so on.

3.3 Caller Groups

You can set group name, associated sound, associated picture and members for different caller groups.

3.4 Speed Dial

Speed Dial enables to call the person dedicated to that particular key.

You have to enable the Speed Dial ON / OFF.

You can assign a phone number to one of the speed dial keys **2 to 9**.

To make a Speed Dial call, press and hold the key until the call begins.

3.5 Delete all

You can delete entries from the SIM card, the Phone or One by One.

To delete from SIM card or Phone select "**From SIM**" or "**From Phone**" respectively to delete entries.

You can select "**One by One**" to delete entries by selecting the particular phone number.

3.6 Copy all

This function enables you to copy all entries both from the SIM card and the Phone.

3.7 Move all

This function enables you to move all entries from the SIM card or from the Phone.

3.8 Extra Number

You can set Owner Number, Service Dialing Number and SOS Number.

Owner Number: You can enter a group of a number, name and can also edit or erase it.

Service Dialing Number: You can enter service dialing number

SOS Number: you can enter 5 groups of SOS numbers

3.9 Settings

It enables you to check Memory Status, set the preferred Memory Storage and Fields.

4 SMS

You can send, receive SMS, Voice Mail Server, and Broadcast messages and so on.

4.1 Write Message

You can create and send message by this option.

Select **Menu > SMS> Write Message**, to create new message, SMS editor screen appears. It also displays the length indicator counting backwards from 160 to 0.

Selecting **Option** provide following sub-options to perform:

Done: It provides option to select Send only, Save and Send, Save only, Send to many and Send by group.

Use Templates: It provides option to insert the templates available in the phone.

Insert Object: It provides option to insert object such as Picture, Animation, Melody and Sound from their respective folders.

Format Text: It enables you to configure Text Size, Text style, Alignment of the message text and inserting any new paragraph.

Insert Contact: It enables to insert contact number from the phonebook in the message.

Insert Number: It enables to insert any number in the message.

Input Method: It enables to select the method and language to edit the message.

4.2 Inbox

All received messages are saved in the inbox; you can edit or forward these messages and so on.

Select **SMS > Inbox**, then press **Option** to display the options:

Reply: Enables to reply the message.

Delete: Enables to delete the current message.

Edit: Enables to edit the current message.

Forward: Enables to forward the message.

Copy to Phone / SIM: Enables to copy the message




Move to Phone / SIM: Enables to move the message.

Copy all: Enables to copy all the messages.

Move all: Enables to move all the messages.

Use number: Enable to extract the number from the message and then provides option to dial or save the number to phone book.

Iconic Mark: The message will be stored in the Inbox folder after you have read it.

-  or  icons indicate whether an SMS has been read or still unread.
-  Icon indicates when an SMS is in an illegible message format or an incomplete message which cannot be displayed in the Message body screen.

4.3 Drafts

This folder is a temporary storage place for SMS that are waiting to be sent.

4.4 Outbox

This folder contains the messages which are unsuccessful to reach the destination.

4.5 Delete

This option enables you to delete the messages present in Inbox, Outbox, Drafts and enables to delete all the messages.

4.6 Template

Your phone contains 10 SMS which can be used commonly. You can Edit or Erase them.

4.7 Voice Mail Server

Voice Mail Server is a network service to which you may need to subscribe. For more information, contact your service provider.

Select **SMS >Voice Mail Server**

The options available within Voice Mail Server are:

Call Voice Mail: Enables to call the Voice Mail Server to listen to voicemails.

Edit: Enables to edit the Voice Mail Server Phone number.

4.8 Broadcast Message

Broadcast Message enables you to receive messages on various topics, such as weather or traffic conditions from your service provider (network service). For available topics and relevant topic numbers, and more information contact your service provider

The options available under this are:

Receive mode: Enables to make receiving mode ON / OFF.

Read message: Enables to read the messages received.

Languages: Enables to set out the preferred language.

Channel settings: Enables to set out the preferred channel.

4.9 SMS Settings

SMS Settings help in to edit the settings for the SMS. It provides following option:

Profile Setting

- **Message center:** Enables to define the message center number to be used.
- **Validity period:** Enables to define the duration that your message will be stored at the Message Center. Delivery attempts will be repeated until the message has been delivered or expired. The options are: Maximum /1 hour/6hours/12 hours/1 day/3day/1 week.

Common settings

- **Delivery report:** Enables to get the delivery notification by making the status ON /OFF.

- **Reply path:** Enables to make out reply path by making the feature ON / OFF.

Memory status

It enables to check SIM and Phone memory status.

Preferred Storage

It enables to select your preferred storage location “SIM Memory” or “Phone Memory”



Note:

If either of your storage location is already full, the phone will automatically save your message to the corresponding location

5 Call History

Your Phone registers your missed, received and dialed calls.

5.1 All Calls

You can check your complete call logs by this option.

Select **Menu > Call History > All Calls**, to check complete call logs.

On selecting a phone number following options gets displayed:

Delete: Enables to delete the current log.

Save to Phonebook: Enables to save the phone number to phone book.

Call: Enables to dial the current number.

Edit: Enables to edit the current number.

Send Text Message: Enables to send SMS to current number.

5.2 Missed Calls

You can check your complete missed call logs by this option.

Select **Menu > Call History > Missed Calls**, to check missed call logs.

On selecting a phone number following options gets displayed:

Delete: Enables to delete the current log.

Save to Phonebook: Enables to save the phone number to phone book.

Call: Enables to dial the current number.

Edit: Enables to edit the current number.

Send Text Message: Enables to send SMS to current number.

5.3 Dialed Calls

You can check your complete Dialed call logs by this option.

Select **Menu > Call History > Dialed Calls**, to check dialed call logs.

On selecting a phone number following options gets displayed:

Delete: Enables to delete the current log.

Save to Phonebook: Enables to save the phone number to phone book.

Call: Enables to dial the current number.

Edit: Enables to edit the current number.

Send Text Message: Enables to send SMS to current number.

5.4 Received Calls

You can check your complete Received call logs by this option.

Select **Menu > Call History > Received Calls**, to check received call logs.

On selecting a phone number following options gets displayed:

Delete: Enables to delete the current log.

Save to Phonebook: Enables to save the phone number to phone book.

Call: Enables to dial the current number.

Edit: Enables to edit the current number.

Send Text Message: Enables to send SMS to current number.

5.5 Delete Call Logs

You can remove all records of Missed calls, Dialed calls, Received Calls or Delete all.

5.6 Call Timers

You can view the duration of your incoming and outgoing calls.

Select **Menu > Call History > Call Timers**, to get following options;

Last Call Time: Enables to check last call time/duration.

Dialed Calls: Enables to check total time for all dialed calls.

Received Calls: Enables to check total time for all received calls

Reset All time: Enables to reset all the counters.

5.7 Auto Quick End

You can use this feature to end your call automatically by specifying the time.

You can set this feature ON / OFF. And, the time limit is 1 – 9999 seconds.

5.8 Call Cost

You can check or reset Last call cost, total Cost, Reset Cost, Max Cost and Price per unit.

5.9 SMS Counter

You can view the number of SMS Sent and received by your phone.

Sent: Enables to check and clear the number of sent messages.

Received: Enables to check and clear all the number of received messages.

6 FM Radio

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector.

Select **Menu > FM Radio**, to access radio controls, it also provides following options:

Channel List: Enables check out the list off all the available channels.

Manual Input: Enables to set the channel and receive the channel manually.

Preset Auto Search: Enables to search the channel automatically and reset the channel list.

Settings: Enables to set the settings for “Background Play”, “Skin”, “Loud Speaker”, “Record Format”, “Audio Quality” and “Channel Effect”.

Record: Enables to record FM program while you are enjoying it

Append: If there is any record, then you can append record after it.

File List: Enables to play over all of the records.

7 Organizer

7.1 Alarm

You can set the device to sound an alarm at a desired time.

Select **Menu > Organizer > Alarm**, to access alarm.

To set the Alarm, select the time and set the Options: On /Off, Time, Repeat Type, Alarm Tone, Snooze time and Alert type.

You can repeat the alarm **Once, Everyday** and **User Defined**.

7.2 Calendar

You can use the phone's calendar to keep track of reminders, calls you need to make, meetings and birthdays. You can set the calendar to sound an alarm for your task.

Pressing the left soft key "Option" enables to View Tasks, Add task, Jump To Date and Go to weekly view.

View tasks: Enables to view tasks list and add tasks.

Add task: Use Navigation key for moving to the day you want and press Options to select Add task. You can select task type such as: Reminder / Meeting / Course / Date / Call / Anniversary.

Jump to date: Enables to input date to jump to date.

Go to weekly view: enables to go monthly view and weekly view respectively.

7.3 Stopwatch

7.3.1 Typical stopwatch

- **Split timing:** To take intermediate times in a sequence. To start the time observation, press Start. Press Split every time that you want to take an intermediate time. To stop the time observation, press Stop. To start the time observation again, press Resume, the new time is added to the previous time.
- **Lap timing:** To record repetitive lap timing, each period reset to zero. To start the time observation, press Start. Press Lap every time you complete a lap and want to reset for the next lap. To start the time observation again, press Resume, the new time is added to the previous time.
- **View record:** Enables to View, Add, Edit, Delete and Delete all the list of record.

7.3.2 nWay stopwatch

It offers to take the intermediate time for all the directions by pressing up/down/left/right key. The total time is displayed on the top of the screen.

7.4 To Do List

You can use your phone to keep track of all your Reminder, Meeting, Course, Date, Call and Anniversary.

7.5 Calculator

You can use your phone's calculator to add, subtract, multiply and divide.

1. Press the # key to enter decimal point.
2. Press the up, down, left and right key and OK key to select +, -, x, / and = respectively.
3. Press Clear to delete the figure.

7.6 Currency Converter

You can use your phone for converting currency. To convert currency, you must first set the exchange rate. Input currency rate (press # key to input radix point), then press Left Soft Key. (This currency rate will be always saved in storage until you input new currency rate to replace it.) Scroll to the first Amount field, and enter the value that you want to convert. The other amount field changes automatically to show the converted value.

7.7 World Clock

You can scroll to browse every city's time zone in the world map. The related date and time will display at the bottom of the screen.

7.8 Unit Converter

You can make the units conversion for weight, length, volume, velocity and area.

In the first entry field, enter the value you want to convert.

Press Up / Down key down to **From** and **To** fields. Use the Left / Right to set the conversion units for both **From** and **To** calculation and Press **OK**. The other amount field automatically shows the converted value.

7.9 Melody Composer

You can use your phone to compose your own favorite melody.

7.10 Torch Light

Your phone is equipped with torch light and you can make it ON / OFF as per your convenience.

7.11 File Manager

You may create folder to manage files. In the File Manager interface, the phone will display Total capacity and free capacity of the memory.

8 User Profiles

You can select your own user profile for the phone.

Select **Menu > User Profile**, to access different profiles.

- **General**
- **Meeting**
- **Outdoor**
- **Silent**
- **Headset**

You can activate and customize them as per your need.

Activate: Enables to select the particular profile and activate it.

Customize: Enables to set Tone setup, Volume, Alert type, Ring type, Extra tone, and Answer mode.

9 Settings

Select **Menu > Settings**, to access the settings menu.

9.1 Time and date

Set Home City: Enables to select the desired home city.

Set Time/Date: Enables to enter the current date and time.

Set Format: Enables to select time and date format.

Auto update of date and time: Enables to get updated automatically.

9.2 Phone setting

Select **Menu > Settings > Phone Settings**, to get access to these options:

Language: Enables to select the desired language for the display text.

Scheduled power on / off: Enables to set the time for auto power on / off.

Pref. input methods: Enables to select the desired input method for the default input method.

Display setting: Enables to select and set the wallpaper, screen saver, show date and time and show owner number.

Greeting text: Enables to enter the input words as your greeting text once you switch on the phone.

Dedicated key: Enables to configure shortcut functions for the up, down, left, and right key respectively.

Shortcuts: Enables to set the shortcuts for the function you often used.

Flight mode: Enables to select the mode On / Off.

LCD backlight: Enables to set the brightness and time duration for the back light.

Contrast: Enables to configure the contrast of the display

Keypad light setting: Enables to set the keypad light On / Off and configure the wait time.

Network name: Enables to display the name of the network.

9.3 Call setup

Select **Menu > Settings > Call settings**, to get access for:

Caller ID: Enables to select Set by Network, Hide ID or Send ID.

Call waiting: Enables to activate and deactivate the call waiting facility. It is a network based service.

Call divert: Enables to set Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls and Cancel all divert.

Call barring: It allows you to restrict the calls that you make and receive with your phone. You can set outgoing calls, incoming calls, cancel all or change barring password. It is a network based service.

Call time reminder: Enables to set the reminder schedule as Off / Single or Periodic.

Call time display: Enables to set the display for call time either On or Off.

Auto Redial: Enables to set the auto redial status On or Off.

9.4 Network Setting

9.4.1 Network selection

New search or select network can help search the network where you are. You can select the selection mode: Automatic or Manual. When you select automatic, the phone will make the preferential selection according to the network. When you select manual, you are required to select the same network as the registered network.


9.4.2 Preferred network

Select the preferred networks. The default network is the network where the SIM card belongs.

9.5 Security setup

9.5.1 SIM lock

The PIN number can prevent the illegal use of your SIM card.

 <p>Note:</p>	<p>If you input the wrong PIN code for thrice will ask PUK code. PUK is used to release and modify the locked PIN. If the PUK code is not provided or missed, please contact your network operator.</p>
--	---

9.5.2 Phone lock

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password.

9.5.3 Auto keypad lock

You can lock or unlock the phone keyboard and set the key lock time to 5 seconds, 30 seconds, 1 min or 5 min.

9.5.4 Fixed dial

This function enables to set the fixed dial option on or off.

9.5.5 Barred Dial

This function enables you to barred the numbers, which cannot be dialed.

9.5.6 Change password

This option let you to change the password of your phone.

9.6 Restore Factory Settings

All settings can be restored to factory settings with this function. The Lock code for the phone in factory setting is 0000.



Note:

On restoring, the phone to factory setting the default network setting will remain the same which is previously configured.

10 Fun & Games

Select **Menu > Fun & Games > Games**, to access the game.

Game interface offers option to select a game, user can select the following game from the interface:

- **Copter**

On selecting, any of the particular game users receive following options:

Start Game: To start the game

Best Grades: Enable to see best grades/score.

Game Help: Display the introduction how to play the game

Game interface also displays the Game settings option:

- **Games Settings**

You can configure your game settings such as background music, sound effect, vibration and volume by this option.

11 Services

Your mobile phone supports Services functions. This service is provided by your network operator. If your SIM card and network operator do not provide this service, then you will not be able to use this function. For more information please contact your network operator.

Appendix I Troubleshooting

If you encounter problems while using the phone, or if it performs erratically, you can consult the information in the following table. If a particular problem cannot be resolved by using the following information, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time, for example, during peak times, because there may be too much network traffic to handle additional calls.	Avoid using the phone at such time, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	Press the ending key and dial again. You may be switched to a better-quality network trunk or phone line.
	Poor local telephone line quality	Press the ending key and dial again. You may be switched to a better-quality network trunk or phone line.
Battery not charging properly	The battery or battery charger is damaged.	Contact the dealer.
	The temperature of the phone is below -10°C or higher than 55°C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.

Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily switch off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
You cannot switch your phone on.	Battery power has been exhausted.	Recharge the battery.
SIM card error	SIM card malfunction or damage	Take the SIM card to your service provider for testing.
	SIM card is inserted improperly.	Insert the SIM card properly.
	Debris on the SIM card contacts	Use a soft and dry cloth to clean the SIM card contacts.
Unable to connect to the network.	SIM card invalid.	Contact your service provider.
	You are not within the service area of the network.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
PIN Code is blocked.	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the PUK code of the SIM card, use the PUK code to unlock the SIM card.

Unable to enter information into the phone book.	The memory of the phone book is already full.	Delete unnecessary data from the phone book.
Unable to select certain features.	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.