

MODEL: S1351CL

Version: 1.0

USER MANUAL



SINGLE LEVER LED THERMAL VESSEL BASIN FAUCET

THANK YOU

Dear Valued Customer,

SUMERAIN would like to take this opportunity to thank you for purchasing SUMERAIN products. It is our sincere hope that you are completely satisfied with your new purchase. We welcome any questions or comments you may have and look forward to assisting you in the future.

Sincerely, SUMERAIN customer service department

PRIOR TO INSTALLATION STEPS

- 1. Unpack your new product and ensure that all the parts are contained in the packaging. Keep the product in its original box until you ready to install it.
- 2. Shut off the water supply if replacing a previously-installed faucet.
- 3. Observe all plumbing and building codes in your area.
- 4. It is recommended that installation of the product be done by a professional plumber.

Tools you may need when installing the faucet









wrench

Flexible rule

Sealant Tape

Pencil

Screwdriver

Specification

Function Feature Style Finish Installation Holes Number of Handles Faucet Total Height Spout Spread Spout Height Valve Type Faucet Body Material Faucet Spout Material Net Weight **Gross Weight** Working water press LED Color changing Water temperature Water temperature Water temperature Packing box size

Bathroom Sink Faucets LED Thermal Contemporary Chrome **One Hole** Single Handle 430mm [16.9 lnch] 165mm [6.5 Inch] 213mm [8.4 Inch] **Ceramic Valve** Brass Brass 1.6 KG 2.3 KG 0.2~0.8 Mpa <28 ℃

< 28 °C Blue color 28 °C 38 °C Green color > 38 °C Red color 370mm x 210mm x 140 mm

Dimension





CODE		QUANTITY
А	Faucet Body	1 PCS
В	O-Ring	1 PCS
С	Rubber Gasket	1 PCS
D	Metal Gasket	1 PCS
E	Nut	1 PCS
F	Thread pipe	1 PCS
G	Hoses	2 PCS

FAUCET INSTALLATION STEPS

Step 1:

Screw the hoses "G" with the faucet body through the thread pipe "F" and the O-Ring "B"

Step 2:

Screw the thread pipe "F" with the body "A"

Step 3:

Through the faucet body with O-ring "B" and thread pipe "F" into the hole of basin

Step 4:

Through the rubber gasket "C" and metal gasket "D" in the thread pipe and Screw the nut "E" on the thread pipe

Step 5:

Connecting the end of the hoses to the connector of the cold and hot water supply system.

USAGE CLEANING & MAINTENANCE

- ■Clean the faucets and showers as and when required. Regular cleaning can prevent calcification.
- ■Never use cleaning materials contain hydrochloric, formic, phosphoric or acetic acid, which may cause considerable damage.
- Never use cleaning materials or appliances with an abrasive effect, such as unsuitable cleaning powders, sponge pads, or micro fiber cloths.
- ■After cleaning, rinse thoroughly the faucet with clean water to remove any cleaner residue.
- Unscrew and clean the aerator regularly.

Symptom	Solution
Faucet leaks from	A. Tighten the packing nut
the handle	B. Replace the "O" ring or packing
The water	A. Make sure the water supply valves under the sink are turned on all the way
pressure is too low	B. Clean or replace the aerator
	C. Check plumbing system for water pressure problems
The spout sprays	A. Clean or replace the aerator
water all over	B. Replace the aerator washer
Water is leaking	A. Check the water supply connections to the faucet
from the faucet	B. Inspect the water supply lines or hoses for leaks
under the sink	
	A. Remove the cap and tighten the screw
Handle is loose	B. Locate and tighten the hex set screw
	C. Remove the handle and check for stripped teeth on the
	stem.
LED does not	A. Increase the water press
illuminate	B. Clean the strainer of hot and cold water inlet

TROUBLESHOOTING



HONGKONG SUMERAIN SANITARY INDUSTRY CO..LIMITED

Address: ROOM 1018, HOLLYWOOD PLAZA 610 NATHAN ROAD MONGKOK, KL Factory Address: Shuikou Industrial Park, Kaiping City, Guangdong Province, China (Mainland) Tel: +86-750-2731579 Toll Free: 400-0999-075 (China mainland) Fax: +86-750-2715258 E-mail:hk@sumerain.com

SUMERAIN INTERNATIONAL GROUP – AMERICA Branch

Address: 13455 Harper Dr. Saratoga, CA 95070 USA Tel: +1-408-867-8884 FAX: +1-408-867-4272 E-mail:us@sumerain.com