

ICELAND

245Lt Fridge

USER'S OPERATION MANUAL


WHITE

Model No.: KS-245L

220-240V~ 50Hz

READ AND SAVE THESE INSTRUCTIONS

PARTS AND FEATURES

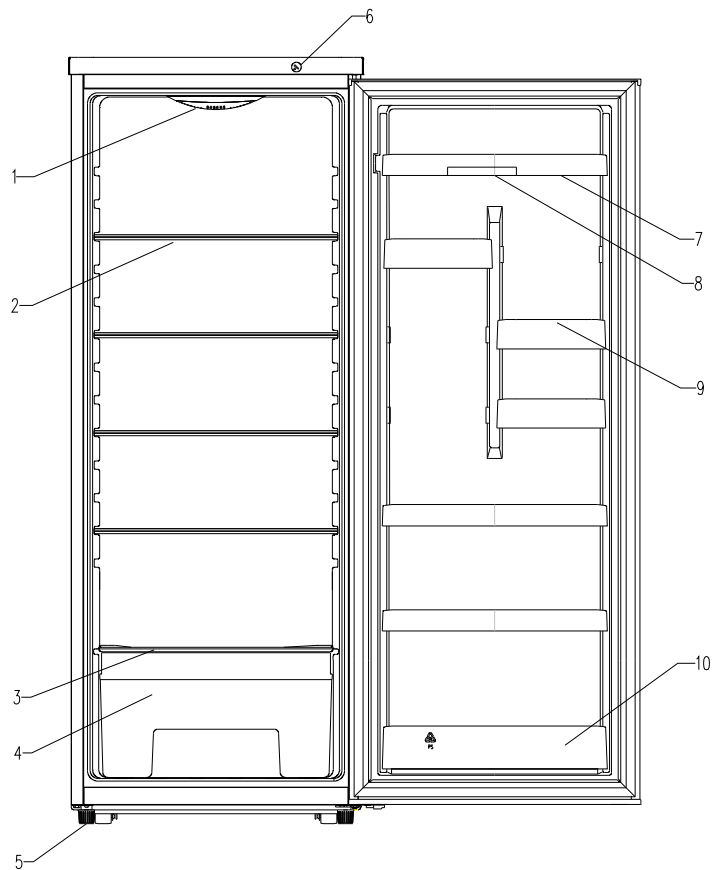

1 – Lamp(MAX 10W)

2 – Glass shelf Assm.

3 –Crisper cover

4 – Crisper

5 - Adjustable leg

6 - thermostat knob

7 – Door shelf

8 – Egg tray

9 – Little shelf

10 – Bottle shelf

CAUTION :

- 1.The appliance is not intended for use by young children or infirm persons without supervision.
- 2.Young children should be supervised to ensure that they do not play with the appliance
- 3.The instructions shall also include the substance of the warnings listed below.
 - WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
 - WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
 - WARNING: Do not damage the refrigerant circuit.
 - WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Dear customer:

Thank you for buying this upright fridge. To ensure that you get the best results from your new fridge, please take time to read through the simple instructions in this booklet.

Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

As old refrigerator equipment may contain CFC's which will damage the ozone layer.

When disposing of any refrigerator equipment please contact your local waste disposal department for advice on safe disposal.

This appliance must be only used for its intended purpose.

INSTALLATION

Sighting of the appliance

Place the fridge in a location with a firm base. In order to prevent vibration and noise, the fridge must be leveled by adjusting the front feet.

Choose a well ventilated location with no less than 10cm clearance around the fridge.

Site the fridge away from direct sunlight and heat sources such as an oven or boiler.

For your safety, please read the following information

Warning: This appliance must be earthed.

USE OF THE APPLIANCE

Before plugging in your fridge for the first time remove all packing, clean the fridge with the lukewarm water and bicarbonate of soda. Wipe dry with soft cloth.

Temperature Control

The temperature in the fridge is controlled by the thermostat control regulator in the upper the fridge. Turn the thermostat control regulator with key attached up or down to regulate the temperature inside the fridge The markings on control regulator indicated the "Min, Max" for the different temperature grades. The temperature decreases with position MIN being the warmest and position MAX being the coldest. Set the control to the middle position for normal use, but you may set the control to other positions of you find the middle is too cold or too warm.

Cleaning your fridge

Before you start to clean your fridge remove the mains plug from the power supply.

Use lukewarm water and bicarbonate of soda.

Clean with a cloth soaked in this solution and then dry with a soft cloth.

Before calling for service

Please check the following points:

- The fridge is not working
- Check the plug is inserted correctly into the wall socket
- Check there is power to the wall socket by plugging in another appliance.
- Check the fuse in fridge plug.

The fridge is noisy when running

- Check the fridge is level and it is not in contact with another appliance or kitchen furniture.

The fridge does not cool sufficiently

- If the door has been opened too often, or it has been left open for a while it will take time for the fridge to reach its set temperature.
- Check the airflow the rear of the fridge has not been reduced due to insufficient clearance.

The following characteristics should not be looked upon as a problem.

- **A gentle tricking sound caused by coolant flowing the pipe.**
- **Compressor operating at high temperature.**

PROLONGED OFF PERIODS.

If the fridge is not in use for a long period of time, proceed as follows:

Disconnect the fridge from the main supply by removing the plug from the wall socket.

Clean and dry the inside as instructed under the heading of cleaning the fridge.

Leave the door open to prevent any unpleasant smells from building up while the fridge is not in use.



READ AND SAVE THESE INSTRUCTIONS