



Table of Contents

This guide contains the following sections describing how to install and configure your Business Internet Gateway. The sections are colour coded to help you locate your place within the guide.

| | |
|--|----|
| Before You Begin | 3 |
| Configuring your Network Settings | 5 |
| After You Finish | 11 |
| Troubleshooting | 31 |
| Setting up your Optional Business Internet Dial | 33 |
| Troubleshooting your Optional Business Internet Dial Hours | 41 |
| Email | 45 |
| Devices | 49 |
| Advanced Features | 51 |
| Appendix | 85 |

Before proceeding with your installation, please review the following information.

- **Bell Business Internet Service Agreement:** Use of the Business Internet service is subject to terms and conditions of the applicable Bell Business Internet Service Agreement. By installing the service, you are accepting these terms and conditions. The Bell Business Internet Service Agreement is located in your installation kit. If you do not agree with these terms and conditions, refer to the *Refund/Cancellations Policies* section of the Bell Business Internet Service Agreement for information on canceling the service.

As a Bell Internet member, you will receive up to five email accounts. During the installation process, you will be provided with instructions for configuring one main email account. For instructions on configuring *additional email accounts* or information on other member features and benefits, visit www.interaction.bell.ca and use your User ID and Password to log in and set up your additional emails.

Your privacy is important to us.

To avoid certain security issues inherent to Internet usage and to assist you with privacy protection, we recommend that you take the following precautions at all times:

- **Downloading Email or Internet Files:** Do not open any email attachments or downloaded files without first scanning them using anti-virus software. Ensure you have the most up-to-date virus lists loaded into your virus scanner.
- **Bell Customer Privacy Policy:** We want to keep you up to date on your rights as our customer and how the Bell companies use and [safeguard your personal information](#). To find more about our Privacy Policy visit:

www.bell.ca/privacypolicy

Welcome to the exciting world of the Business Internet High Speed service from Bell.

Sincerely,

The Bell Business Internet services team

Certain conditions and restrictions apply. The service is only available to business customers where technology permits.

BIG-E-071

Before You Begin

Before you begin the installation of your Business Internet Gateway, you will need to check the contents of your installation kit, verify that your computer meets the minimum system requirements, select a connection method and complete the preliminary setup steps.

Check the contents of your installation kit

Your installation kit (shown in Figure 1) includes the following items:



Figure 1: Installation kit contents

1. Business Internet Gateway Quick Setup Guide
2. Business Internet Gateway
3. DC Power Supply
4. Ethernet Cable (yellow)
5. Telephone Line
6. Telephone Line Splitter
7. Business Internet Gateway Optional Installation Files CD

If you are a new Business Internet member, or if you are currently a Business Internet member using a Nortel modem, the installation kit will also include the following items:

8. Four Telephone Filters (If you require additional telephone filters, contact Business Internet Help Desk at **1-877-877-2426**. Note: Telephone line splitters are not included for Business Internet Optimax.)

If you are currently a Business Internet member, the installation kit will also include the following items so that you can return your old modem to Bell Canada at no charge.

9. Modem Return Box (not shown in photograph)
10. Modem Return Instructions (not shown in photograph)
11. Prepaid Postage Stamp (not shown in photograph)

If any items are missing or damaged, contact Business Internet Help Desk at **1-877-877-2426**. Otherwise, continue with the following instructions within this guide to begin.

Configuring your Network Settings

In this section, you will use your web browser to access the Business Internet Gateway and configure your network settings.

Note: You must have Internet Explorer installed on your computer to complete this step.

Complete the following steps to configure your Business Internet Gateway network settings:

1. Open your web browser. An error message appears at this point, but the error is nothing to worry about, because your computer is still not connected to the Internet. Type **http://mynetwork** in the address bar, then press the Enter key on your keyboard. The Welcome screen appears.

Note: If the Welcome screen does not appear, close your web browser, wait five seconds, then open your web browser again and retry your connection to the Welcome screen. If the Welcome screen still does not appear, type **http://192.168.2.1** in the address bar, then press the **Enter** key on your keyboard. If you are still unable to connect, ensure that all connections between your computer, Business Internet Gateway, and telephone jack are correct and that the Business Internet Gateway is turned on. For additional assistance, refer to the *Troubleshooting* section on page 23.

2. Click **ENGLISH** or **FRANÇAIS** to select your preferred language (Figure 1).

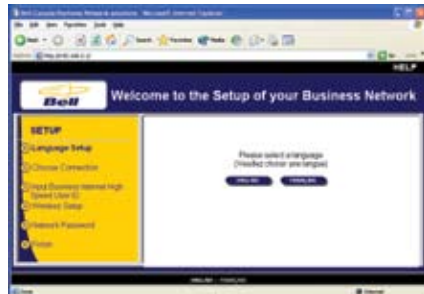


Figure 1: Welcome screen

3. Accept the default Business Internet Gateway Networking configuration (option 1). Do not choose option 2. Click the **Next** Button (Figure 2).



Figure 2: Business Internet Gateway configuration screen

4. Refer to the Welcome Letter for details about your Business Internet User ID and Access Password.

Type your Business Internet User ID (for example, **username@bellnet.ca**) and password, and then click the **Next** button (Figure 3).



Figure 3: Business Internet User ID screen

Note: If you receive an error after typing your User ID and Password, first ensure that you have typed the information correctly (case sensitive). If you still receive an error, ensure that you have connected one end of the grey telephone line to the DSL port on the back of the modem and the other end to your telephone jack. For additional assistance, refer to the *Troubleshooting* section on page 23.

5. If you want to use your Business Internet service for wireless networking, select this option by choosing **Yes – Enable wireless now**, and then click the **Next** button. You will need one wireless adapter for each computer you wish to use wirelessly.

If you do not wish to enable a wireless network, click **No – I will do this later**, and then click the **Next** button (Figure 4). Proceed to step 6 in this section.



Figure 4: Wireless Setup Configuration screen

Note: Regardless of whether you choose to enable wireless support at this time, you can access and change your wireless settings at a later time.

If you enable wireless networking now, you are presented with additional setup screens to configure the wireless settings for your network.

6. Type the User Name and Password you want to use to control who can make changes to your network settings in the future (Figure 7).

Note: The User Name and Password requested here are not your Business Internet User ID and Password.

Print the User Name and Password in the spaces below. You'll need to supply this information to make any changes to your settings in the future.

User Name: _____

Password: _____

Once you have recorded your administrator User Name and Password, click the **Next** button.

7. The Congratulations screen summarizes your settings (Figure 8).

If you have not recorded the values displayed on the screen, do so now or print this page for future reference.

Once you have ensured that all values are recorded for future reference, click the **Next** button.

8. Click the **Finish** button to save your Business Internet Gateway settings (Figure 9).

Once you click the **Finish** button, your Business Internet Gateway will save your settings and take you to your web browser home page so you can begin using the Internet.



Figure 7: Administration Setup screen



Figure 8: Configuration screen



Figure 9: Save Settings screen

Note: It may take up to 45 seconds for your Business Internet Gateway to save your settings. During this time, please do not click any other links.

Locating your Static IP address

Note: If you want to use your Business Internet High Speed service for just the Internet access, you may skip the three steps given below and simply follow the installation instructions given in the welcome letter.

However, if you want to know your Static IP for any reason, here are the steps to find it.

1. For all Operating Systems, install the Business Internet Gateway using the User ID and Password provided within the welcome letter and instructions given in the User Guide or CD.
2. Click the **Advanced** tab in the upper tool bar in the modem Graphical User Interface. The Advanced Settings window appears.
3. Click the **Business Internet High Speed** connection icon located in the left-side navigation pane. A new page titled Business Internet Connection Information appears. Your Static IP is next to **PPPOE**.

Congratulations!

You've finished connecting and configuring your Business Internet Gateway and computer!

Now that you've completed the setup of your Business Internet Gateway, you can refer to the section that follows in this guide to help you configure additional aspects of your Business Internet Gateway, including:

- Configuring this computer or other computers on your network for wireless access
- Configuring additional computers on your network for wired access
- Configuring additional settings on your Business Internet Gateway
- Configuring Microsoft Outlook Express email access

You can also refer to the *Advanced Features* section starting on page 37 of this guide for instructions on configuring additional features of your Business Internet Gateway.

After You Finish

Configuring computers for wireless access

If you enabled wireless access when you were completing the steps in the *Configuring Your Network Settings* section of this guide, you can configure any of the computers on your network (including your primary computer you just finished connecting to the Business Internet Gateway) to access the Business Internet Gateway wirelessly.

To set up a computer for wireless access, complete the following steps:

1. Ensure that the wireless adapter and the drivers have been correctly installed in the computer. Refer to the documentation that came with your wireless adapter for details.
2. Access your Business Internet Gateway settings by opening your web browser and typing **http://mynetwork** into the address bar. After entering your administrator User Name and Password, click the Basic Setup tab and refer to the wireless configuration information in the **What Can I do Here** list of frequently asked questions for instructions on configuring a computer for wireless access.

Your computer is now set up with a wireless network connection!

Configuring additional computers for wired access

To set up another computer on your network to access the Business Internet Gateway, complete the following steps:

1. Verify that the computer meets the minimum system requirements.
2. Connect one end of the Ethernet cable to one of the four ports marked Ethernet on the back of the Business Internet Gateway, and the other end to the **Ethernet** port on your computer.
3. Check the network configuration to ensure that the computer has the correct settings. Refer to the *Configuring your Network Settings* section of this guide for details.

Configuring additional settings on your Business Internet Gateway

Access your Business Internet Gateway settings by opening your Web browser and typing **http://mynetwork** into the address bar. After entering your administrator user name and password, click the **BASIC SETUP** tab.

Basic Setup

In addition to being the Home screen when logging into the Business Internet Gateway, the Basic Setup screen (Figure 1) provides access to re-configure settings established during the Setup Wizard; the options available are displayed in the left pane of the Basic Setup screen.

The Basic Setup configuration options and their associated configuration procedures are explained in the following paragraphs.



Figure 1: Basic Setup screen

How do I change the Business Internet User ID and Access Password that I previously entered into the Business Internet Gateway?

Selecting this option allows you to change the Business Internet User ID input in the Setup Wizard.

Important! This should only be changed when directed by Bell Canada.

To change the Business Internet User ID and Access Password:

1. Type your new User ID in the box provided (Figure 2).
2. Type your new Access Password in the **Password** box.
3. Click **Save Settings**. The system responds with a confirmation screen indicating the change has been accepted.



Figure 2: Input Business Internet User ID screen

How do I configure the wireless features of my Business Internet Gateway or change existing wireless settings?

This option allows you to either perform a new setup or re-configure an existing setup of the wireless equipment in your Business Internet Gateway.

Note: The wireless settings on the Business Internet Gateway must match the settings of all wireless adapters on the computers you wish to use wirelessly.

To configure the wireless network option:

1. On the Wireless Setup Configuration screen (Figure 3), select **Yes - Enable Wireless Now**.
2. Click **Next**.

The system responds with the Wireless Security Configuration (Figure 4).



Figure 3: Wireless Setup Configuration screen

Important! Prior to making any changes, read the information provided within this screen.

3. Type your wireless network ID in the **SSID** box (Figure 4). The SSID is the name of your wireless network. Choose something that is unique to you as you will need to remember this name when setting up wireless adapters on your computers.
4. Optionally, change the **Channel ID** drop-down from **11** if you experience any interference with your wireless Business Internet Gateway. If you are setting up wireless for the first time, leave your channel at the default value of **11**.



Figure 4: Wireless Security Configuration window

5. The Wireless Security Configuration window also allows you to set the wireless security level you wish to use. All wireless devices attached to the Business Internet Gateway **MUST** have the same wireless security settings for your network to have proper communications and security. From the Encryption Level drop-down menu, select one of the following options.
 - **NONE:** This option offers no encryption. **This option is not recommended.**
 - **64-bits:** This option offers 64-bit encryption.
 - **128-bits:** This option offers 128-bit encryption.
 - **WPA PSK:** (Wi-Fi Protected Access) WPA security changes encryption keys after a specified amount of time.
6. You may select or deselect the Enable SSID Broadcast option. This step is optional, but selecting this option makes it easier to configure your wireless adapters.
7. Click **Next**.

If you have selected **None** as your encryption level (Not Recommended)

1. Click **Next**.
2. Click **Finish** to return to the main Wireless Setup Configuration page.
3. Click **BASIC SETUP** to return to the Main Menu.

If you have selected **64-bit** or **128-bit** as your encryption level (Recommended)

WEP security offers the same security offered by a wired LAN with encrypted packets. This option offers either 64-bit or 128-bit encryption, depending on the level you have selected. This section assumes you currently have one of the Wireless Security Configuration windows (Figure 5 and 6) displayed.



Figure 5: Wireless 64-Bit WEP Configuration



Figure 6: Wireless 128-Bit WEP Configuration

To configure either the 64-bit or the 128-bit encryption level:

1. Select one of the following options:
 - **Open System:** Open system keys are always authenticated at the device level. After authentication, data is then encrypted between the gateway and the connected device. **This is the default setting for most wireless adapters.**
 - **Shared Key:** Shared keys accept a string of unencrypted data from a device. The Business Internet Gateway encrypts with a WEP key and sends back the encrypted data to the attached device.
2. Type a phrase in the **Passphrase** box.

The passphrase is used to generate the 64-bit or 128-bit key. The passphrase must at least be one character with a maximum of 32 characters. Please choose something that is unique to you.

3. Click **Generate Keys**. The system responds by generating keys that display in the boxes under the Passphrase box. Please write your encryption keys down.

Note: the encryption keys are case-sensitive.

4. Click **Next**.
5. Click **Finish** to return to the main Wireless Setup Configuration page, then click **BASIC SETUP** to return to the Main Menu.

If you have selected "WPA PSK" as your encryption level

WPA security changes encryption keys after a specified amount of time.

To use the WPA option:

1. The Wireless WPA Configuration window is used to configure the algorithm, shared key, and key renewal options. Select one of the following options from the **Algorithms** drop-down menu (Figure 7):
 - **TKIP:** (Temporal Key Integrity Protocol) TKIP supports: Verification of the security configuration after the encryption keys are determined, synchronizes changing of the unicast encryption key for each frame, and then determines a unique starting unicast encryption key for each pre-shared key authentication.
 - **AES:** (Advanced Encryption Standard) AES supports a private key algorithm that ranges from 128 to 256 bits.



Figure 7: Wireless WPA-PSK Configuration

2. Type a key in the **Shared Key** box.

The shared key is used to generate a dynamic encryption key for gateway security.

3. Type a numeric value (in seconds) of the time lapse in changing the key in the Group Key Renewal box.

Note: The minimum time value is 30.

4. Click **Next**.
5. Click **Finish** to return to the main Wireless Setup Configuration page, then click **BASIC SETUP** to return to the Main Menu.

How do I check if my Business Internet Gateway is working properly?

This option presents a status display of all the current connections associated with your Business Internet Gateway (Figure 8). Each connection's status is indicated by color, text and a graphical indicator as shown in the example below.

- **Network Connection:** Indicates the status of the physical connection to your telephone jack.
- **Business Internet High Speed Connection:** Indicates the status of your connection to the Business Internet service.
- **Wireless Network Connection:** Indicates if wireless internet access has been enabled on your Business Internet Gateway.



Figure 8: Connection Status screen

How do I configure my Business Internet Gateway to let me use specific applications?

Selecting this option takes you to the Quick Setup screen (Figure 9). The Quick Setup feature provides different methods of keeping individual users or computers hidden behind a single outward-facing address, but allows users to access the Internet and related applications. If you have more than one available Internet connection interface, they will all be displayed in the drop-down box for ease of selection.

To configure the Quick Setup feature:

1. In the Available Applications list (Figure 9), click the name of the application you wish to enable on your computer.

The application is moved to the Enabled Applications list.

Repeat step 1 until all preferred applications have been enabled.

2. If the preferred application is not in the Available Applications list, you can click the **Configure a specific service** link. For more information on editing these entries, please refer to *Advanced Features* on page 37.



Figure 9: Quick Setup screen

How do I restart my Business Internet Gateway or reset it back to the original factory settings?

Selecting option takes you to the System Reboot screen (Figure 10). The Reboot feature offers two options for restarting your Business Internet Gateway: Reboot and Reset.

A **Reboot** should be used when the Business Internet Gateway networking modem needs to be restarted. The Business Internet Gateway can also be rebooted using the power switch on the rear panel. **Rebooting your Business Internet Gateway will not erase your currently saved settings.**



Figure 10: System Reboot screen

Note: By clicking the **Reboot** button, you will not reboot your computer; you are only rebooting your Business Internet Gateway.

The **Reset** option should be used when you find it necessary to recover the factory default settings. This may be necessary when a custom configuration did not go as planned, when a new configuration is desired, or when the Business Internet Gateway does not appear to be working properly.

Important: This option resets all personalized settings on your Business Internet Gateway.

To use the reboot option:

1. If required, select **Reset to Factory Defaults**.
2. Click **Reboot**.
 - a. If the **Reset to Factory Defaults** option was selected, the system responds with a warning screen that prompts you to confirm the Reset to Factory Defaults selection.
 - b. Click the **Reset to Factory Defaults** button to confirm, or click **Cancel** to return to the System Reboot screen.
3. A status screen begins a 45 second countdown to reset the Business Internet Gateway.

Configuring Microsoft Outlook Express email access

Complete the following steps to configure email access using Microsoft Outlook Express.

Note: You must have the Outlook Express software installed on your computer to complete this step.

Once Outlook Express is installed on your computer, complete the following steps to configure email access.

1. If you are an Outlook Express user, double-click the **Outlook Express** icon on your desktop. With some versions of Windows, you may need to click **Start**, then click **Programs**, and then click **Outlook Express**.

If the Internet Connection Wizard does not appear automatically when you start Outlook Express, click the **Tools** menu, then click **Accounts** to display the Internet Accounts window. Click the **Add** button, then click **Mail** to launch the Wizard.

2. Type your name in the **Display name** box, then click the **Next** button (Figure 11).



Figure 11: Internet Connection Wizard – Your Name

3. Type your Business Internet email address (located on the Welcome Letter) in the **E-mail address** box, and click the **Next** button (Figure 12).



Figure 12: Internet Connection Wizard – Internet E-mail Address

4. Ensure that **POP3** is selected in the pull-down menu (Figure 13).
5. Type **pop51.bellnet.ca** in the **Incoming mail server** box, and **smtp10.bellnet.ca** in the **Outgoing mail server** box, then click the **Next** button.



Figure 13: Internet Connection Wizard – E-mail Server Names

6. Type your Business Internet email address in the **Account Name** box, and type your Email Password in the **Password** box (Figure 14).
7. If you do not want to enter in your Password each time you check for email, ensure that **Remember password** is checked.
8. Ensure that **Log on using Secure Password Authentication (SPA)** is unchecked, and then click the **Next** button.
9. Click the **Finish** button to return to the Internet Accounts window.

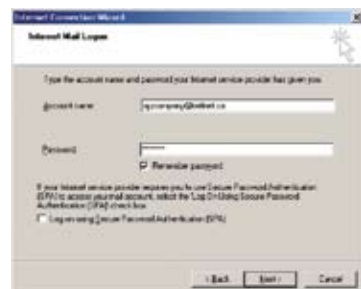


Figure 14: Internet Connection Wizard – Internet Mail Logon

Sending email with Microsoft Outlook Express

Microsoft Outlook Express is a program included with Microsoft Internet Explorer software, which is used to send and receive electronic mail (email) and to read newsgroups.

To start Outlook Express

Double-click the Outlook Express icon on your desktop. With some versions of Windows, you may need to click **Start**, then click **Programs**, and then click **Outlook Express**. With Windows XP, click **Start**, and then click **Outlook Express**.

You will see the Outlook Express window (Figure 15).

To compose and send email with Outlook Express

1. Click the **New Mail** button in the Outlook Express toolbar. With Windows XP, click **Create Mail**.

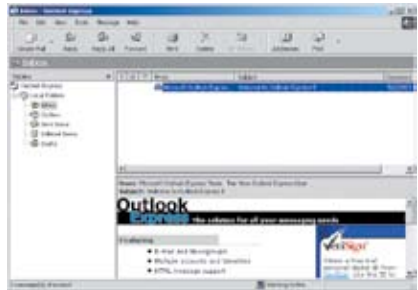


Figure 15: Outlook Express

2. In the **To** box, type the email address (in lower case) of the person to whom you are sending the message. If you want to send your message to more than one person, press the **Enter** or **Return** key on your keyboard and type in the second email address.
3. Press the **Tab** key twice to move the cursor to the **Subject** box, and type the subject of your message.
4. Press the **Tab** key again to move the cursor to the message area. Type your message.
5. Click the **Send** button to send your message.

To retrieve and read email with Outlook Express

The first time you retrieve your email, you will be prompted to enter your Email Password (located on the Welcome Letter). Type your Password in lower-case characters.

1. Click the **Send/Recv** button on the toolbar to check for new email. New messages appear in the Inbox folder.
2. Click **Inbox** in the folders pane.
3. In the message list pane, click the message you want to read. The message is displayed in the message pane.

To close Outlook Express

When you are finished using Outlook Express, click the **File** menu, and then click **Exit**.

Creating a second Outlook Express Identity

If a second person is using Outlook Express and you wish to keep your mail separate, follow the instructions below.

1. In Outlook Express, click **File**, then **Identities**, then **Add New Identity**.
2. Type a name for the new Identity, then click **OK**.
3. A window asks if you want to switch to the new Identity now. Click **Yes**.
4. Proceed to *Setting up a second Outlook Express Identity* below.

Setting up a second Outlook Express Identity

Once you have created a second Identity, you must set it up with your Business Internet High Speed account information.

1. Follow the instructions provided by the Internet Connection Wizard. You will need the following information to configure your Outlook Express Identity.
 - Your desired email display name
 - Your email address
 - Incoming mail POP3 Server: **pop51.bellnet.ca**
 - Outgoing mail SMTP Server: **smtp10.bellnet.ca**
 - Your user/account name
 - Your Email Password
 - News Server: **news21.bellnet.ca**
2. Once this is completed, click **Finish**.

Setting up email in Windows Vista

Configuring Windows Mail for Business Internet mail


These instructions describe how to create a new email account in Windows Mail.

You'll need the following information on hand before you start:


- Your user ID (which should look like **xxxxx@bellnet.ca**)
- Your Business Internet email address
- Your access password
- Your outgoing (SMTP) mail server name
- Your incoming (POP) mail server name

Creating the Account

1. Open **Windows Mail**.

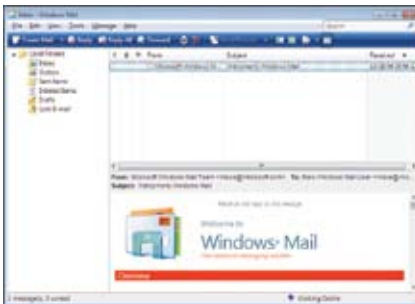


- a. Click the **Tools** menu.

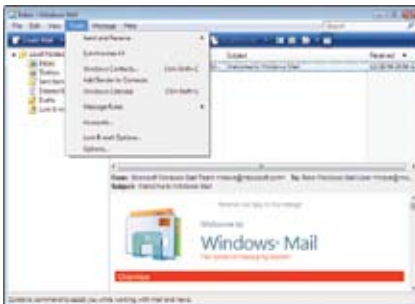


- c. Click **Accounts**.

4. Click **Add**.

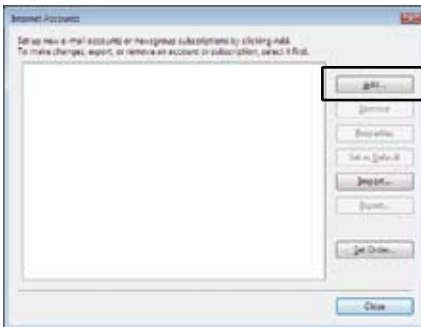

5. Click **E-mail Account**.

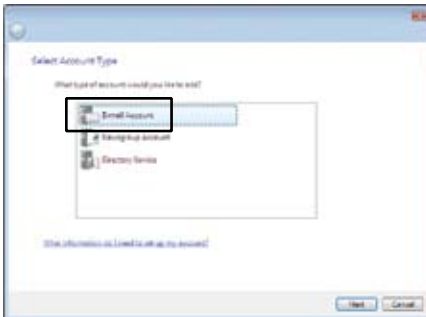


6. Click **Next**.


7. Type your name in the box.




8. Click **Next**.
9. Type your email address in the box.

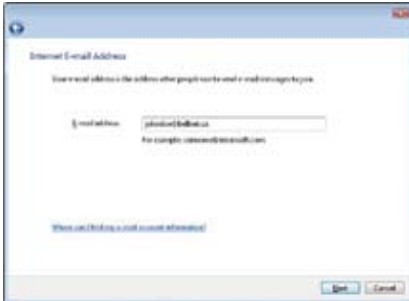

10. Click **Next**.
11. Click **POP3** in the drop-down menu under **Incoming email server type**.
12. Type the following information:
 - Incoming mail server: **pop51.bellnet.ca**
 - Outgoing e-mail name server: **smtp10.bellnet.ca**
13. Do **NOT** put a check mark next to **Outgoing server requires authentication**.

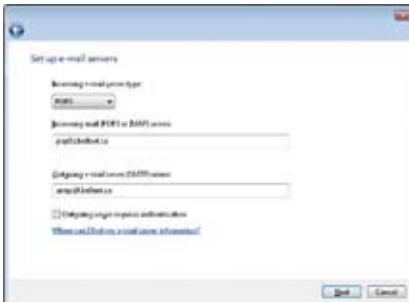


14. Click **Next**.
15. Type your Business Internet UserID (xxxxx@bellnet.ca) in the **E-mail username** box.
16. Type your password in the **Password** box.
17. Leave the **Remember password** option checked. It will allow you to send and receive email without repeatedly entering your password. However, to prevent others from checking your email, you could uncheck this option and log in every time you retrieve your messages.

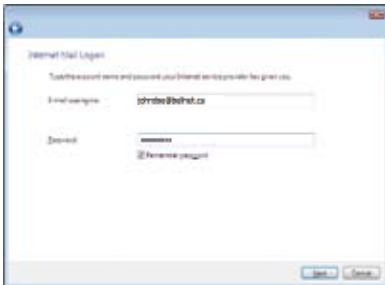

18. Click **Next**.
19. Click **Do not download my e-mail at this time**.




20. Click **Finish**.
21. In the Internet Accounts window, click your mail account, then click **Properties**.

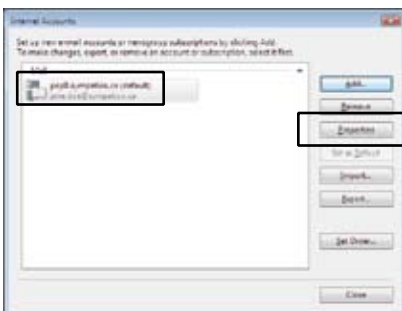


22. Proceed to *Configuring additional settings* below.

Configuring additional settings

1. Click the **Connection** tab.
2. Click **Always connect to this account using**.
3. Make sure that **Local Area Network** is selected in the drop-down menu.

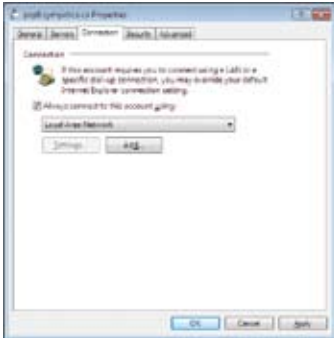

4. Click **OK**.
5. Click the **Tools** menu.
6. Click **Options**.
7. Click the **Security** tab.
8. Click to uncheck **Do not allow attachments to be saved or opened that could potentially be a virus**.
9. Click to uncheck **Block images and other external content in HTML e-mail**.

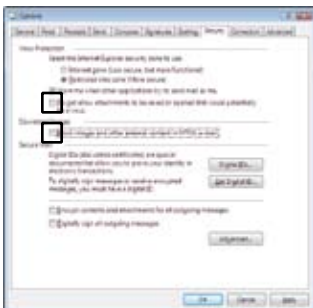

10. Click **OK**.


Configuring Outlook 2007 for Business Internet mail

These instructions describe how to create a new email account in Windows Vista – Outlook 2007.


You'll need the following information on hand before you start:

- Your user ID (which should look like **xxxxx@bellnet.ca**)
- Your Business Internet email address
- Your access password
- Your outgoing (SMTP) mail server name
- Your incoming (POP) mail server name

1. Open **Outlook 2007**.
2. Click **Tools** and then click **Account Settings**.
3. Click **New**.

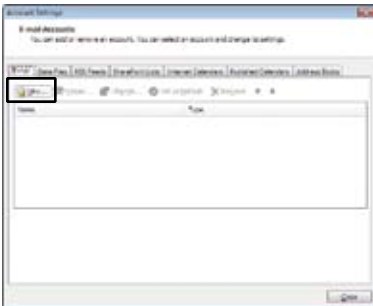


4. Check the box beside **Manually configure server settings or additional server types**.

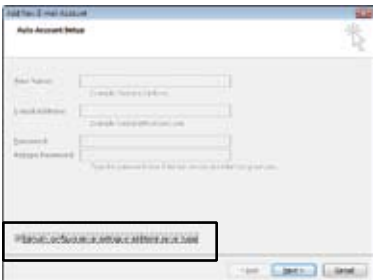


5. Click **Next**.

6. Leave the option on **Internet E-mail**.

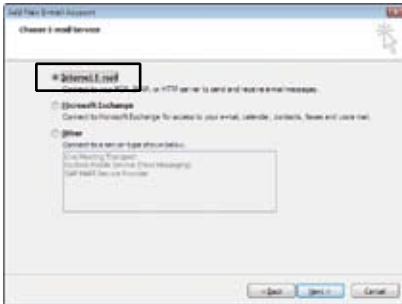


7. Click **Next**.
8. Type the following account information:
 - Your Name
 - Your Business Internet email address
 - Account Type: **POP3**
 - Incoming mail server (POP3): **pop51.bellnet.ca**
 - Outgoing mail server (SMTP): **smtp10.bellnet.ca**
 - User Name: Your user ID (**xxxxx@bellnet.ca**)
 - Password: Your access password

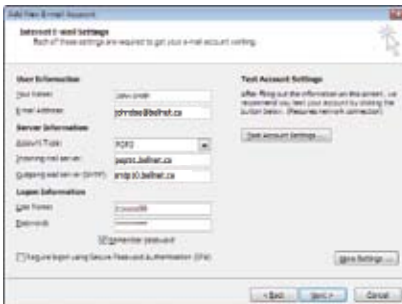

10. Click the **More Settings** button.

11. Click the **Advanced** tab.
12. Ensure **Incoming server (POP3)** is set to **110**.
13. Ensure **Outgoing server (SMTP)** is set to **25**.
14. Increase the **Server Timeouts** to **Long** (10 minutes).

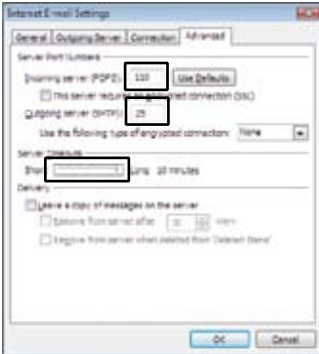

15. Click **OK**.
16. Click **Next**.
17. Click **Finish**.

Troubleshooting

As a subscriber of the Business Internet High Speed service, support for the Business Internet High Speed software is always available. Business Internet High Speed Services do not provide support for software other than the Internet Explorer software that is included with the Business Internet High Speed service. Most problems are easy to solve. Here are the solutions to some of the most common problems you might encounter.

I want to set up another Outlook Express Identity with my Business Internet High Speed settings

Follow the instructions under *Setting up a second Outlook Express Identity* on page 21.

You don't have enough free hard drive space to install the Business Internet High Speed software

Delete any files you don't need, but do not delete files if you don't know what they are for. Empty the Recycle Bin or Trash. Try to install the Business Internet High Speed software again.

Your computer crashed while using the browser (computer will not respond to mouse)

Low disk space: Make sure that you have sufficient free disk space on your computer. Empty the Recycle Bin or Trash. You may need to delete some files from your hard drive.

Corrupt cache: To clear the cache with Internet Explorer, select **Internet Options** in the **Tools** menu. Click the **General** tab, then click the **Delete Files** button. Click **OK**, then click **OK** again.

"System Error", "Application Error", or "General Protection Fault"

These are operating system errors. Please refer to the user manual that came with your computer.

You cannot browse the Internet

Make sure that the cable is connected securely to the Business Internet Gateway and computer, and that you are using the right kind of cable. If you are using the Ethernet cable, turn the Business Internet Gateway off, then back on.

You see a message about a network error

Exit the browser software, then restart your computer and try connecting again. Follow the instructions under *Your computer crashed while using the browser (computer will not respond to mouse)* above.

The browser does not start when double-clicked

Look for the Internet Explorer icon on the taskbar at the bottom of the screen. If you see it, click it once. To prevent this from happening in the future, click **Close** from the browser **File** menu when you're finished rather than simply minimizing the browser window.

Other troubleshooting resources

As part of your Business Internet High Speed membership, the Business Internet Support Web site (www.bell.ca/businessaccounts) is a great resource for up-to-date information about your account and how to use the Business Internet High Speed software. At any time you are connected to the Internet, click the Help link, Download link, or eCare link and you will have access to the latest news and tips about your Business Internet High Speed software, including information about available upgrades, and billing information.

If you need help using the Internet Explorer software, you can consult its built-in help by clicking the **Help** menu, then by clicking **Contents and Index**.

If you receive an error message on your screen, please write it down before contacting our support services. Also, if the error occurred while following the instructions in this guide, note the page and step you were at. This information will help the technical support agent's give you the assistance you need as quickly as possible.

If you cannot send email to our support services, please have your personal Business Internet account information in front of you (specifically your User ID), then call the Business Internet Help Desk at **1-877-877-2426**.

Setting up your Optional Business Internet Dial

As part of your Business Internet High Speed service you receive 20 hours of Business Internet Dial service FREE each month! When you want to access the Business Internet service while away from the office, you can use a dialup connection. Follow the directions below to configure a dialup connection.


You will need the following items.

- A regular dial-up modem to connect your computer to a telephone line.
- Your Business Internet User ID and Access Password.


Ensure that your regular dial-up modem is installed. If necessary, consult the documentation that came with your modem.

Configuring a dial-up connection with Windows Vista

1. Click **Start**, then click **Control Panel** (or click **Start, Settings**, and then **Control Panel**).
2. Click **Classic View** at the top left corner if you're not in Classic View.
3. Click **Network and Sharing Center**.
4. Click **Set up a connection or network**.

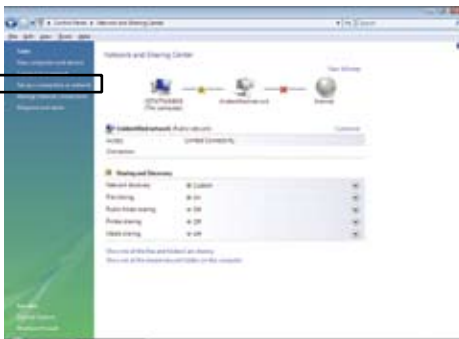

5. Click **Set up a dial-up connection**.

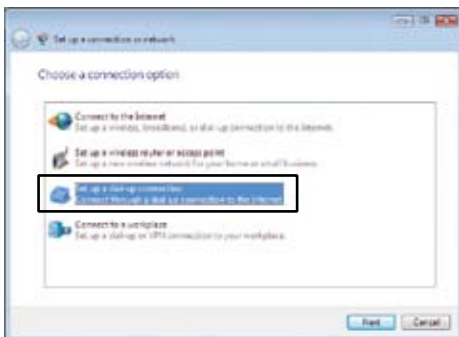

6. Click **Next**.
7. Type the appropriate information in the following fields:
 - Dial-up phone number
 - Bell Business user ID
 - Access password
 - Connection name



Note: To help you with typing your password, you can click **Show characters**. This will display the password as you type it.

8. Click **Create**.


If there is no **Location** created, the following screen appears.



9. Fill in the boxes on this screen, and then click **OK**.
10. Click **OK** to close the Phone and Modem Options window.
11. Click **Close**. Your connection is now ready to use.


Connecting to the Internet

1. Click **Start**, then click **Control Panel** (or click **Start, Settings**, and then **Control Panel**).
2. Click **Classic View** at the top left corner if you're not in Classic View.
3. Click **Network and Sharing Center**.
4. Select **Manage network connections**.

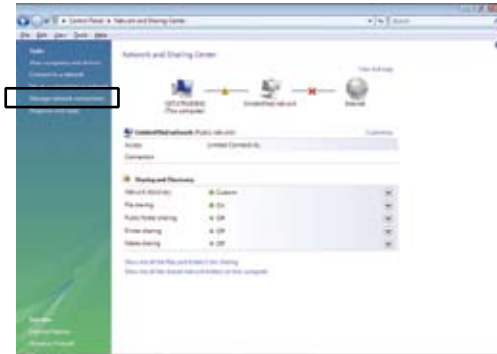

Note: The connection with  is the default connection.

5. Double-click the connection icon.

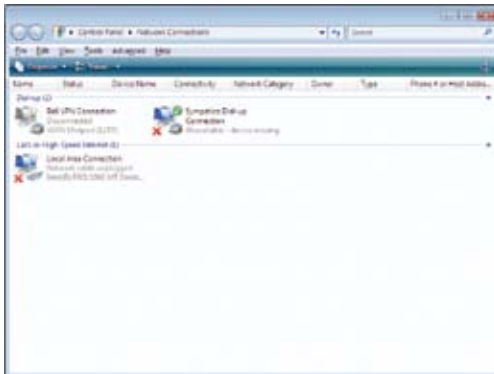

6. Click **Connect**.

Configuring your dial-up connection with Windows XP


1. Click the **Start** button, and then click **Control Panel**.
2. In the Control Panel window, click **Network and Internet Connections**.
3. Click **Set up or change your Internet connection**.
4. In the Internet Properties window that appears, click the **Connections** tab, and then click the **Setup** button.




5. In the New Connection Wizard window that appears, click **Next**.
6. On the next screen, click the **Connect to the Internet** option, and then click **Next**.



7. On the next screen, click the **Set up my connection manually** option, and then click **Next**.

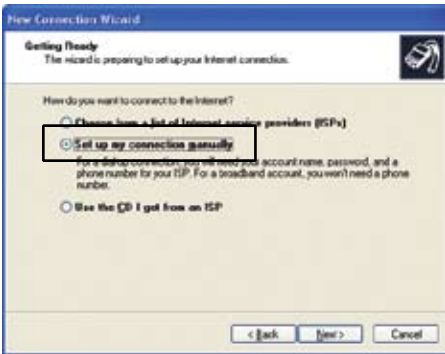

8. On the next screen, click the **Connect using a dial-up modem** option, and then click **Next**.

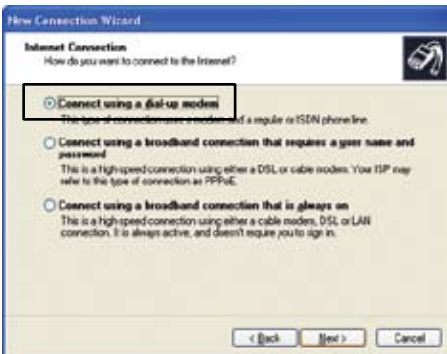

9. On the next screen, you will be asked for a name for the connection. Type **Bell Business**, and then click **Next**.




- Next, you will be asked for your local Bell Business dial-up access number. Make sure to include the area code. Type it in the **Phone number** field, and then click **Next**.



The screenshot shows the 'New Connection Wizard' dialog box with the title 'Phone Number to Dial'. The subtitle asks 'What is your ISP's phone number?'. Below this, it says 'Type the phone number below:'. There is a text input field containing '415 253 3636'. A note below the field states: 'You might need to include a "1" or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct.' At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

- Next, in the **User name** field type your Bell Business User ID, and in the **Password** and **Confirm password** fields type your Bell Business password.



The screenshot shows the 'New Connection Wizard' dialog box with the title 'Internet Account Information'. The subtitle says 'You will need an account name and password to sign in to your Internet account.' Below this, it says 'Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)'. There are three text input fields: 'User name' containing 'EHoward3', 'Password' containing '*****', and 'Confirm password' containing '*****'. Below the fields are two checkboxes: 'Use this account name and password when anyone connects to the Internet from this computer' (checked) and 'Make this the default Internet connection' (checked). At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

- Click **Next** to continue.
- On the final screen of the New Connection Wizard, click to check **Add a shortcut to this connection to my desktop** option, and then click **Finish**.



The screenshot shows the 'New Connection Wizard' dialog box with the title 'Completing the New Connection Wizard'. The subtitle says 'You have successfully completed the steps needed to create the following connection:'. Below this, it lists 'Bell Business' with three bullet points: 'Make this the default connection', 'Share with all users of this computer', and 'Use the same user name & password for everyone'. Below the list, it says 'The connection will be saved in the Network Connections folder.' There is a checkbox 'Add a shortcut to this connection to my desktop' which is checked. At the bottom, there are three buttons: '< Back', 'Finish', and 'Cancel'.

To connect to the Bell Business Internet service:

1. Double-click the Bell Business connection icon on your desktop, and then click the **Dial** button.

Setting up your Optional Business Internet Dial Global Roaming

1. Go to **www.bell.ca/businessaccounts** and access the Downloads page.
2. Download the Global Roaming Dialer.
3. Double-click the Global Roaming Dialer **.exe** file that you downloaded.
4. Double-click the **iPass** folder, then double-click the **iPassConnect** icon.
5. The installation of the Global Roaming software starts. Click **Next** on the first screen.
6. On the next screen, click **Next** to install the Global Roaming software in the recommended location. A progress bar shows the progress of the installation.

7. On the last screen (Figure 1), uncheck the **Launch Global Roaming** box, then click **Finish**.
8. Click **Exit** in the Business Internet installation program.
9. Double-click the **Global Roaming** icon on the desktop.
10. If this is the first time you have used Global Roaming, you will see a license agreement. Read the agreement, then click **Accept** if you agree.

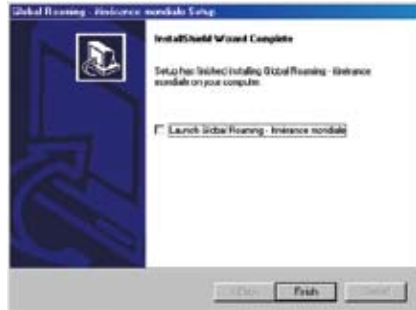


Figure 1: Global Roaming

11. In the Global Roaming window (Figure 2), click your country in the **Country** pull-down menu.
12. Click your city in the **City** pull-down menu.
13. Click the number you want to dial from the list that appears in the **Phone Book** section of the window.
14. If you need to use dialing prefixes or codes to turn off Call Waiting™ or to access an outside line before dialing, click **Dial Properties** and type them in the Dial Properties window.



Figure 2: Global Roaming

15. Click **Connect** to connect to the Business Internet Dial service. A User Info window appears (Figure 3). Type your Business Internet Dial Username and Password in the boxes provided. If your domain is not **bellnet.ca**, ask your account administrator for your domain, and type it in the Domain box. Click **OK**.
16. If you need more help using the Global Roaming software, click the **Help** button in the main window.
17. Double-click the **Internet Explorer** icon on your desktop. Internet Explorer will start and display your Business Internet Dial home page.



Figure 3: Global Roaming

Disconnecting from the Internet

When you are finished exploring the Internet, follow these steps to disconnect from the Business Internet Dial service and exit your software:

1. Quit the Internet applications you are using.
2. Right-click the small **Global Roaming** or **Dial-Up Networking** icon in the system tray (the lower right-hand corner of the screen).
3. Click **Disconnect**.

Changing the number you dial

To change the number you dial (for instance, if you move to another city), follow these steps.

1. In the Global Roaming window, click your country in the **Country** pull-down menu.
2. Click your city in the **City** pull-down menu.
3. Click the number you want to dial from the list that appears in the **Phone Book** section of the window.
4. If you need to use dialing prefixes or codes to turn off Call Waiting™ or to access an outside line before dialing, click **Dial Properties** and type them in the Dial Properties window.

For the latest release of Global Roaming dialer, please visit www.bell.ca/globalroaming

Troubleshooting your Optional Business Internet Dial Hours

As a subscriber of the Business Internet Dial service, support is always available to you. Most problems are easy to solve. Here are the solutions to some of the most common problems you might encounter while installing and using the software.

There is no dial tone present on your phone line

If your connection software tells you that your phone line does not have a dial tone, here are some tips to help you resolve the problem:

- Pick up the receiver of your telephone and listen for a dial tone. If you do not hear a dial tone, another telephone on the same line might be off the hook. Or, there might be something wrong with your phone line.
- Make sure that the modem is turned on, and that the phone cables are properly connected to the modem and the phone line. Most modems have two ports on the back. One should be connected to your telephone wall jack, and the other may be connected to a standard telephone. Dial tone errors may result if the two lines are reversed. External modems will also have a cable which connects the modem to the back of your computer, and a power cord which reaches from the modem to the electrical wall outlet. Make sure all cables and the power cord are firmly plugged in. If the modem has external lights, at least one of them should be on.
- If you have Call Answer or Message Manager service on the phone line used by your modem, and you have new messages waiting, most modems require that you listen to your messages before trying to connect. Often these extra phone services provide warnings and notifications to the customer by sending a slightly different dial tone, which may not be properly detected by your modem.

Windows Me/98:

1. Click **Start**, select **Settings**, then click **Control Panel**.
2. Double-click the **Modem** icon, then click **Dialing Properties**. If you need to use special dialing prefixes or codes – to turn off Call Waiting or to access an outside line before dialing, for example – be sure that you have entered the information correctly. It is likely that you have specified a code (e.g., ***70**) to disable Call Waiting but that your phone line does not have Call Waiting.
3. Click **OK**, then click **OK** again.

Windows XP:

1. Click **Start**, then click **Control Panel**.
2. Double-click **Phone and Modem Options**.
3. Double-click your Business Internet Dial location. If you need to use special dialing prefixes or codes – to turn off Call Waiting or to access an outside line before dialing, for example – be sure that you have entered the information correctly. It is likely that you have specified a code (e.g., ***70**) to disable Call Waiting but that your phone line does not have Call Waiting.
4. Click **OK**, then click **OK** again.

Windows NT/2000:

1. Click **Start**, select **Settings**, then click **Control Panel**.
2. In Windows NT, double-click the **Modems** icon, then click the **Dialing Properties** button.
3. In Windows 2000, double-click the **Phone and modem options** icon, then click the **Properties** button, then click the **Rules** button. Double-click your location.
4. Double-click the **Modems** icon, then click the **Dialing Properties** button. If you need to use special dialing prefixes or codes – to disable Call Waiting or to access an outside line before dialing, for example – be sure that you have entered the information correctly. It is likely that you have specified a code (e.g., ***70**) to disable Call Waiting but that your phone line does not have Call Waiting.
5. Click **OK**, then click **Close**.

You can't connect to the Business Internet Dial service

- Check for a dial tone on your phone line. For more information, please consult *There is no dial tone present on your phone line* on the previous page.
- Your modem may need to be reset for it to initialize properly. If you have an external modem, you can reset it simply by turning it off and then on again. If you have an internal modem, you will need to shut down your computer and restart it again. Once your modem has been reset, try connecting again.
- Verify that any required software for your modem has been installed properly. If you are not sure about whether your modem includes special software, look in the user guide that came with your modem. If you are not sure whether the software is present on your computer, reinstall the software according to the manufacturer's instructions.
- Make sure that no other programs are currently using your modem, such as fax software waiting for an incoming fax.
- Check to see that your modem is configured correctly. See *There is no dial tone present on your phone line* on the previous page.

The browser is unable to connect to the network

Clear the browser's cache:

- To clear the cache with Internet Explorer, select **Internet Options** in the **Tools** menu. Click the **General** tab, then click the **Delete Files** button. Click **OK**, then click **OK** again.
- Try reloading the page using the **Reload** or **Refresh** button on the browser toolbar.
- If this does not work after a couple of tries, quit the browser, disconnect from the Business Internet Dial service, and check that your name server addresses in the TCP/IP settings in the Control Panel are correct.

Note: These are generic errors. Do not assume that the Business Internet Dial service is unavailable.

Your browser does not start when double clicked

This might mean that your browser has already been started.

1. Give your computer some time (about 20 seconds) before clicking the browser icon again.
2. Look for your browser icon on the taskbar at the bottom of the screen. If you see it, click it once.
3. To prevent this from happening in the future, click **Close** in your browser's File menu when you're finished rather than simply minimizing the window.

It may also be that your browser shortcut has been configured to start minimized. To correct this problem:

1. Right-click the browser shortcut on your desktop, then click **Properties**.
2. In the Properties window, click the **Shortcut** tab, and ensure that **Normal window** is selected in the **Run** pop-up menu.

You see a message saying that a duplicate instance cannot be started

Restart your computer, then reinstall the software by following the instructions in *Setting up your optional Business Internet Dial Hours* on page 25.

Removing the Global Roaming software

1. Click **Start**, click **Settings**, then click **Control Panel**. In Windows XP, click **Start** then click **Control Panel**.
2. Double-click **Add/Remove Programs**, then click **Global Roaming**.
3. Click the **Add/Remove** button (in Windows XP click **Change/Remove**), and follow the instructions to remove the Global Roaming software.

If none of the above resources have answered your question or problem

Don't worry, we're here to help you. Our support services are staffed by friendly experts who will be happy to answer your questions.

If you receive an error message on your screen, please write it down before contacting our support services. Also, if the error occurred while following the instructions in this guide, note the page and step you were at. This information will help our support services give you the assistance you need as quickly as possible.

If you cannot send e-mail to the Business Internet Help Desk, please have your personal Business Internet Dial account information in front of you, then call the Business Internet Technical Support Line. The number is on the Welcome Letter.

Please remember that our support services are only equipped to answer questions related to the Business Internet Dial software described in this guide.

Email

There are two methods by which you can access your email accounts. The first method is by setting up an email account in Outlook Express. This is set up for you once you complete *Configuring Microsoft Outlook Express email access* on page 18. The second method is through the world wide web from any computer! For more information, please see *Unified Web Messaging* below.

Unified Web Messaging

Unified Web Messaging, offered to Bell Business Internet customers free of charge, provides you with a single convenient Web interface to access and manage all of your Web-based messaging services.

How do I access my email account online?

Web access to email (also known as Webmail) is a free service that lets you access your email account over the Internet, giving you total mobility and freedom to travel. You get access to most of the same features as your regular email. Additional services include anti-spam, vacation alerts, forwarding, etc.

- From www.bell.ca/businessaccounts, click the e-mail located on the toolbar on the right-hand side of the screen, then click the **Unified Web Messaging** link. You will then be prompted for your Business Internet e-mail address and Password. You should use the Business Internet email address and Password provided in your starter kit.
- Once you have accessed your email online you have entered the Unified Web Messaging Interface. At this time you will have the option to use all of the other features listed below.
- Complete your profile settings if you do not want to enter your User ID and Password for each of the applications you use on Unified Web Messaging. You will only need to enter them once in the Profile section.

Wireless access to email

Wireless access to email lets you configure your business email account so you will be able to access your messages on your Bell Mobility PCS phone (via the mobile browser service). You can view your email messages by scrolling down on the display screen. Wireless access to email is free.

Wireless access to VoiceNet services

Wireless access to VoiceNet services allows you to keep up-to-date and stay connected to the world through your cellular phone. You can listen to helpful audio information, such as stock quotes, sports updates and weather forecasts, or even hear your email messages. Voice-activated navigation provides safe, convenient and hands-free access. VoiceNet services are subscription-based.

Text messaging SMS

The text messaging (SMS) lets you send messages to Bell Mobility subscribers from anywhere in the world. There is no charge for the person sending the message, but there is a charge for the person receiving it.

EPage messaging

EPage messaging allows you to easily connect your Bell Mobility pager to the Internet. You can forward office and Internet email directly to your pager and receive messages from any Internet site in the world via webDirect™, Bell Mobility's World Wide Web paging interface (the first 100 characters are sent to alphanumeric pagers only).

Note: To access this service, you must use Internet Explorer.

Support

For the support of specific services within Unified Web Messaging, please click the **Help** buttons available in each application.

Security and management email features

The following features will provide you with greater security and more flexibility when managing your email accounts. Here is an overview of our features, for more information you can visit our Website at www.bell.ca/bihs.

Antivirus

Scan and clean all incoming emails for viruses before they reach your computer.

IMAP4

Store and manage mail on the server as well as create folders to organize messages.

SSL Encryption

Allows you to send and receive email through a Secure Socket Layer (SSL). This is the industry standard for security.

Additional storage

Allows you to increase your mailbox storage on individual email accounts in increments of 10MB, providing more flexibility and helping you manage your emails.

Email deluxe bundle

The bundle includes antivirus, IMAP4, SSL Encryption, and 10MB of additional storage.

Secure logon to Webmail

This feature will encrypt the logon activities of users when they access the Web interface. It ensures that your user ID and Password are protected (through encryption) when logging on through the Webmail site.

eCare

www.bell.ca/businessaccounts and click on eCare!

Where to find the eCare tool

1. Go to the Bell website. (www.bell.ca/businessaccounts).
2. Click **Downloads**.
3. Locate the section called **Additional Windows Software and Links**.
4. Click **eCare**.
5. To ensure that only authorized personnel have access to eCare, it will ask you the following information:
 - **User name (Login ID) - Code d'utilisateur:** The same as your Business Internet Access account login ID. For example, **yourID@bellnet.ca** (if you have a standard domain name) or **yourID@yourcompany.com** (if you have a custom domain name).
 - **Password:** The same as your Business Internet Access Password.

If you have any question about eCare, please call our Help Desk at **1-877-877-2426**.

Setting up additional email accounts with eCare

eCare is an online account management tool for your Bell Business Internet account. Since it is available on World Wide Web, it's accessible from anywhere at any time and puts you in direct control of your account. It can help you to:

- Create more Dial up users within minutes
- Order additional High Speed service
- Create email accounts
- Suspend users
- Check the usage details

- View invoices
- Change passwords, etc.
- Subscribe to email features (NEW!)

Individual users will have access to only their own account information. However, company designated IT Administrators will have access to all features. If during the initial setup, you did not register yourself as an IT administrator, call our Business Office.

Devices

1. Open your Internet browser.
2. In the address bar, type: **http://mynetwork**.
3. Enter your administrator User ID and password.
4. Click the **Devices** tab.

The Devices option allows you to view devices connected to your Business Internet Gateway.

To use the Devices option:

- Click **Devices** in the toolbar.

The Connected Devices screen (Figure 1) appears.

The information under **Connected Devices Information** includes the following:

- Number of Devices in your Business Internet Gateway Network.
- Number of devices receiving IP addresses from DHCP.



Figure 1: Devices screen

The information in the table under **Connected Devices Summary** includes the following:

- **Host Name:** the unique name by which that computer is identified.
- **Domain Name:** a unique name given to your Business Internet Gateway.
- **IP Address:** the IP address of the connected device. An IP address is a 32-bit address assigned to hosts using TCP/IP.
- **Attached By:** indicates the type of connection by which the device is attached.
- **Physical Address:** a physical address (also known as a MAC layer address) is required for every device that connects to the network. Other devices in the network use these addresses to locate specific ports in the network and to create and update routing tables.

Advanced Features

Viewing the Advanced Features

1. Open your Internet browser.
2. In the address bar, type: **http://mynetwork**.
3. Enter your administrator User ID and password.
4. Click the **Advanced** tab.

The Advanced option screen (Figure 1) provides a summary of your network. The information includes:

- **System Type:** Model information of your Business Internet Gateway.
- **DSL Connection Information:** Indicates the status of your connection to Bell Business Internet's network.
- **Router IP Address:** The IP address of the Business Internet Gateway.
- **WAN IP Address:** IP address provided by Bell Business Internet.
- **MAC Address:** The MAC Address of the Business Internet Gateway's Ethernet Interface.



Figure 1: Advanced Options window

The **Advanced** option also provides access to advanced features of your Business Internet Gateway. The configuration options and procedures are explained in the following Sections. Please note that the options in this section could result in the failure of your Internet connection.

Business Internet Connection

All active and available Internet connections are shown in this window (Figure 2). Many of the settings for this option are intended for use by advanced users.

WARNING: You may terminate your Internet connection if this feature is not properly configured.

To use the Business Internet Connection function:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet High Speed Connection** in the left navigation pane.

The Business Internet Connection Information screen (Figure 2) appears.

3. Click one of the Business Internet connections (in red) to reconfigure that connection. Please consult *Configuring your Network Settings* on page 5 for information required to reconfigure a connection.
4. Click **Advanced Settings** to configure additional access options from the Business Internet help desk.

The Advanced Internet Options screen (Figure 3) appears.



Figure 2: Business Internet Connection Information Screen

Advanced Internet Options

All of the options in this section should only be configured with the help and guidance of a network technician.

ATM Virtual Circuits

The ATM virtual circuit option provides access to settings that the Business Internet help desk may advise you to modify depending upon your service needs. This option allows the creation and configuration of a PVC (Permanent Virtual Circuit) across a network. A PVC is used to maintain a permanent connection between two points on a network.

Important! ATM Setting changes should not be made unless you are advised to do so by the Business Internet help desk.

To access the ATM virtual circuit option:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet High Speed Connection** in the left navigation pane.
3. Click **Advanced Settings**.

The Advanced Internet Options screen appears (Figure 3).

4. Click the **Configure the ATM Virtual Circuit** link.



Figure 3: Advanced Internet Options Screen

The ATM Virtual Circuit Wizard screen appears (Figure 4).



Figure 4: ATM Virtual Circuits Screen

Note: Changes to settings using the ATM Virtual Circuit Wizard should not be made unless directed by the Business Internet help desk.

5. You may do one of the following:
 - a. Click to **Disable** or **Enable** an existing Virtual Circuit. This selection will change the VC's current status.
 - b. Click **Delete** to remove an existing Virtual Circuit.
6. Or you can click the **Add a New VC** link.

Contact the Business Internet help desk for configuration information required for adding additional Virtual Circuits.

Static Routes

The static routes option allows you to configure static routes to remote equipment. These routes appear in the routing table. These routes identify pathways to destination networks that are stable over time or to networks that must always be available, even if the link is currently open. These static routes let each router recognize how to reach the other. Static routes take precedence over all dynamic routing options and also provide enhanced security over dynamic routing.

To add a static route option:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet High Speed Connection** in the left-navigation-pane.
3. Click **Advanced Settings**.

The Advanced Internet Options screen appears (Figure 3).

4. Click the **Add Static Routes for direct IP Connections** link. The Static Routes screen appears (Figure 5).
5. Type the IP address of the destination device in the **Destination** box.
6. Optionally, click the **View the current routing table link** to view the current routing table.

Please see the section in this document titled *Routing Table* for more information.

7. Type the net mask of the destination device in the **Net Mask** box.
8. Optionally, type the IP address of a destination gateway in the **Next Hop** box.
9. Select a connection type from the Interface drop-down menu.
10. Click **Apply**.

Your new route is added to the routing table.



Figure 5: Static Routes Screen

Routing Table

This screen shows a listing of all currently mapped routes in the Business Internet Gateway. It shows both static and dynamically learned routes. The information provided in the routing table includes:

- **Destination:** the IP address of the destination.
- **Net mask:** the network mask of the destination.
- **Business Internet Gateway:** the next machine which knows how to reach the ultimate destination machine.
- **Flags:** indicates the route is static or has been defined by the Routing Information Protocol (RIP).
- **Metric:** A number that is used to specify the cost of the route, so that the best route (potentially among multiple routes to the same destination) can be selected.
- **Interface:** the network interface that is used to forward the data.

To access the routing table:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet High Speed Connection** in the left-navigation-pane.
3. Click **Advanced Settings**.

The Advanced Internet Options screen appears (Figure 3).

4. Click the **View the current Routing Table** link.

The Current Routing Table screen appears (Figure 6).

| Destination | Address | Netmask | Gateway | Flags | Metric | Interface |
|-------------|-------------|---------------|-------------|-------|--------|-----------|
| 0.0.0.0 | 0.0.0.0 | 0.0.0.0 | * | * | 0 | eth0 |
| 192.168.1.0 | 192.168.1.0 | 255.255.255.0 | 192.168.1.1 | * | 100 | eth0 |
| 192.168.1.0 | 192.168.1.0 | 255.255.255.0 | 192.168.1.1 | * | 100 | eth0 |

Figure 6: Routing Table Screen

Dynamic DNS

Dynamic DNS translates IP addresses into alphanumeric names.

To set up Dynamic DNS on the Business Internet Gateway:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet High Speed Connection** in the left-navigation-pane.
3. Click **Advanced Settings**. The Advanced Internet Options screen appears (Figure 3).
4. Click the **Set up Dynamic DNS** link. The Set Up Dynamic DNS screen appears (Figure 7).
5. Click the **Enable** option.
6. Type the name provided to you by your Dynamic DNS service provider in the **Service Username** box.
7. Type your password provided to you by your Dynamic DNS service provider in the **Service Password** box.
8. Type the domain or host name provided to you by your Dynamic DNS service provider in the **Host Name 1** box.
9. Optionally, if you have more than one domain or host name, type it in the **Host Name 2** box.
10. Click **Apply**.



Figure 7: Dynamic DNS Window

Please note that for technical assistance with your Dynamic DNS service, please contact your Dynamic DNS service provider. The Business Internet help desk does not offer support on Dynamic DNS services.

The system responds by registering your domain or host name to **www.dyndns.org**.

RIP (Routing Information Protocol)

RIP (Routing Information Protocol) is based on distance algorithms that calculate the shortest distance between two points on the network based on the addresses of the originating devices. The shortest path is determined by the number of hops between these two points. RIP also allows for the receiving of routing updates from the devices connected to the gateway.

1. Click **Advanced** in the toolbar.
2. Click **Business Internet High Speed Connection** in the left-navigation-pane.
3. Click **Advanced Settings**.

The Advanced Internet Options screen appears (Figure 3).

4. Click the **Configure the RIP protocol for advanced routing** link.

The RIP Configuration screen appears (Figure 8).

5. Select one of the following options from under the **RIP Version** heading and next to the connection of your choice:

1: Provides essential RIP packet formatting for routing information packets.

2: Provides enhanced packet formatting for routing information packets by providing the following:

- **IP Address:** Specifies an IP address for the routing entry.
- **Subnet Mask:** Specifies a mask for the routing entry.
- **1&2:** A combination of both types of RIP packets.

6. Select an **Active Mode** checkbox next to a corresponding connection to enable it.
7. Click **Apply** to save the settings.

The **Your Settings Have Been Saved** screen appears.



Figure 8: RIP Configuration Screen

Network Information

The Network Information option displays all Business Internet Gateway network-related information. To use the Business Internet Gateway Network option:

1. Click **Advanced** in the toolbar.
2. Click **Network Information** in the left navigation pane.

The Business Network screen appears (Figure 9).

The Business Network screen provides the following information:

- **Host Name:** The name given to the Business Internet Gateway.
 - **IP Address:** A numeric location code given to the Business Internet Gateway.
 - **IP Netmask:** A range of IP Internet addresses defined so that only machines within the range have access to the Internet.
 - **DHCP Range:** A range of IP addresses. The Business Internet Gateway will allocate IP addresses from this pool to other devices connected to your network.
3. Optionally, click **Advanced Settings**.

The Advanced Networking features screen appears (Figure 10).



Figure 9: Business Network Screen



Figure 10: Advanced Networking features Screen

IP Network

The Business Internet Gateway provides the flexibility to use different ranges of IP addresses to be assigned by the DHCP Server housed in the Business Internet Gateway. DHCP (Dynamic Host Configuration Protocol) allows computers to obtain either permanently or temporarily, IP addresses from a central server. Ensure that you select an IP address range that is not in conflict with any existing devices. A custom configuration option is provided for advanced users.

To use the IP network option:

1. Click **Advanced** in the toolbar.
2. Click **Network Information** in the left navigation-pane, then click **Advanced Settings**.

The Business Internet Gateway Network screen appears (Figure 9).

3. Click the **Configure the local Business Internet Gateway IP Network** link.

The Business Internet Gateway IP Network screen appears (Figure 11).

4. Select from the following options:
 - Select **Default Business Internet High Speed Settings** (these settings cannot be changed).
 - Select from one of the three specified ranges.
 - Select **Custom Settings**.
5. Click **Save Settings**.
6. Optionally, click the **Custom Settings** link for advanced configuration. The Business Internet Gateway IP Network screen appears (Figure 12).



Figure 11: Business internet Gateway IP Network Window



Figure 12: IP Network Custom Settings Screen

Note: If you are unsure of values required for the custom setting option, consult a network technician before selecting this option and making any changes to the existing configuration.

Server Ports

Common applications such as HTTP (Web site traffic), FTP, and Telnet use pre-defined incoming port numbers for compatibility with other services. If you wish to change the ports used by these applications you may do so from this screen. This feature is recommended for use by advanced users only.

To use the server port option:

1. Click **Advanced** in the toolbar.
2. Click **Network Information** in the left-navigation-pane, then click **Advanced Settings**.

The Business Internet Gateway Network screen appears (Figure 9).

3. Click the **Configure the Local Business Internet Gateway Server Ports** link.

The Business Internet Gateway Server Ports screen appears (Figure 13).

4. Type a port number in the **HTTP** box. The default port for this field is **80**.
5. Or, type a port number in the **FTP** box. The default port for this field is **21**.
6. Click **Apply**. The Your settings have been saved screen appears.
7. Click **Reboot** if you wish for the settings to immediately be implemented. Your Business Internet Gateway is restarted.



Figure 13: Server Ports Screen

LAN/WAN Port

Ethernet port #5 can be used as either a LAN (network) port or as a WAN (Internet connection) port. Select the appropriate option to define whether the port is used as a fifth local network port or as a connection for another broadband device.

Note: For configuration of the port as a WAN port, you may be required to consult the Business Internet help desk for the appropriate settings.

To configure the LAN/WAN port:

1. Click **Advanced** in the toolbar.
2. Click **Network Information** in the left-navigation-pane, then click **Advanced Settings**.

The Advanced Networking features screen appears (Figure 10).

3. Click the **Configure the Local Business Internet Gateway LAN/WAN Port** link.

The Business Internet Gateway LAN/WAN Port screen appears (Figure 14).

4. Select one of the following options under the **Select how you want to use the LAN/WAN port** heading:
 - **LAN (Local Area Network):** The connected network located in your office.
 - **WAN (Wide Area Network):** A large connected network such as the Internet that is spread over a large geographic area.



Figure 14: LAN/WAN Port Window

Note: If you select the WAN option, this can possibly disrupt your Internet service. Please consult with a network technician before proceeding.

5. Click **Apply** to save the settings.

Wireless Network

This option allows you to either perform a new setup or re-configure an existing setup of the wireless settings of your Business Internet Gateway.

Note: The wireless settings on the Business Internet Gateway must match the settings of all wireless adapters on the computers you wish to use wirelessly.

To configure the wireless network option:

1. Click **Advanced** in the toolbar.
2. Click **Network Information** in the left-navigation-pane, then click **Advanced Settings**.
3. Click **Configure the Local Business Internet Gateway Wireless Network** (Figure 10).
4. Click **Yes - Enable wireless now**, then click **Next** (Figure 15).

The Wireless Security Configuration screen appears (Figure 16).



Figure 15: Wireless Setup Configuration Screen

Important! Before making any changes, read the information provided in this screen.

5. Type your **wireless network ID** in the **SSID** box.

The SSID is the name of your wireless network. Choose something that is unique to you as you will need to remember this name when setting up wireless adapters on your computers.

6. Optionally, change the Channel ID drop-down menu from **11** if you experience any interference with your wireless Business Internet Gateway. If you are setting up wireless for the first time, leave your channel at the default value of **11**.



Figure 16: Wireless Security Configuration Screen

- The Wireless Security Configuration window also allows you to set the wireless security level you wish to use. All wireless devices attached to the Business Internet Gateway **MUST** have the same wireless security settings for your network to have proper communications and security. From the **Encryption Level** drop-down menu, select one of the following options:
 - NONE:** This option offers no encryption. **This option is not recommended.**
 - 64-bit:** This option offers 64-bit encryption.
 - 128-bit:** This option offers 128-bit encryption.
 - WPA PSK:** (Wi-Fi Protected Access) WPA security changes encryption keys after a specified amount of time.
- Optionally, select the **Enable SSID Broadcast** option.

Based on the **Encryption Level** selected in Step 7, proceed to the section in this document titled:

- None*
- Wireless Setup (WEP) 64-Bit Option*
- Wireless Setup (WEP) 128-Bit Option*
- Wireless Setup WPA PSK Option*

None

- Click **Next**.
- Click **Finish**, then click **Basic Setup** to return to the Main Menu.

Wireless Setup (WEP) 64-Bit Option

WEP security offers the same security offered by a wired LAN with encrypted packets. This option offers 64-bit encryption. This section assumes you currently have the Wireless Security Configuration screen (Figure 16) displayed.

To use the WEP 64-bit option:

- The Wireless 64-bit WEP Configuration screen (Figure 17) allows you to configure the security for the 64-bit WEP option. Select one of the following options:
 - Open System:** Open system keys are always authenticated at the device level. After authentication, data is then encrypted between the gateway and the connected device. This is the default setting for most wireless adapters.
 - Shared Key:** Shared keys accept a string of unencrypted data from a device. The Business Internet Gateway encrypts with a WEP key and sends back the encrypted data to the attached device.



Figure 17: Wireless 64-Bit WEP Configuration

2. Type a phrase in the Passphrase box.

The passphrase is used to generate the 64-bit key. The passphrase must at least be one character with a maximum of 32 characters. Please choose something that is unique to you.

3. Click **Generate Keys**. The system responds by generating keys that display in the boxes under the Passphrase box. Please write down your encryption keys.

Note: the encryption keys are case-sensitive.

4. Click **Next**.

Please proceed to the section in this document titled *Wireless Filter and Options Configuration*.

Wireless Setup (WEP) 128-Bit Option

WEP security offers the same security offered by a wired LAN with encrypted packets. This option offers 128-bit encryption, which is the most secure WEP option. This section assumes you currently have the Wireless Security Configuration window (Figure 16) displayed.

To use the WEP 128-bit option:

1. The Wireless 128-bit WEP Configuration window (Figure 18) allows you to configure the security for the 128-bit WEP option. Select one of the following options:

- **Open System:** Open system keys are always authenticated at the device level. After authentication, data is then encrypted between the gateway and the connected device. This is the default setting for most wireless adapters.
- **Shared Key:** Shared keys accept a string of unencrypted data from a device. The gateway encrypts with a WEP key and sends back the encrypted data to the attached device.

2. Type a phrase in the **Passphrase** box.

The passphrase is used to generate the 128-bit key. The passphrase must at least be one character with a maximum of 32 characters. Please choose something that is unique to you.

3. Click **Generate Keys**. The system responds by generating keys that display in the boxes under the **Passphrase** box. Please write down your encryption keys down.

Note: the encryption keys are case-sensitive.

4. Click **Next**.

Please proceed to the section in this document titled *Wireless Filter and Options Configuration*.



Figure 18: Wireless 128-Bit WEP Configuration

Wireless Setup WPA PSK Option

WPA security changes encryption keys after a specified amount of time.

To use the WPA option:

1. The Wireless WPA Configuration screen (Figure 19) is used to configure the algorithm, shared key, and key renewal options. Select one of the following options from the **Algorithms** drop-down menu:

- **TKIP:** (Temporal Key Integrity Protocol) TKIP supports: Verification of the security configuration after the encryption keys are determined, synchronizes changing of the unicast encryption key for each frame, and then determines a unique starting unicast encryption key for each pre-shared key authentication.
- **AES:** (Advanced Encryption Standard) AES supports a private key algorithm that ranges from 128 to 256 bits.



Figure 19: Wireless WPA-PSK Configuration

2. Type a key in the **Shared Key** box.
The shared key is used to generate a dynamic encryption key for gateway security.
3. Type a numeric value (in seconds) of the time lapse in changing the key in the **Group Key Renewal** box.

Note: The minimum time value is 30.

4. Click **Next**.

Please proceed to the section in this document titled *Wireless Filter and Options Configuration*.

Wireless Filter and Options Configuration

The Wireless Filter Configuration screen (Figure 20) allows you to either permit or deny access to the Business Internet Gateway of wireless devices based on the MAC address of the device. A MAC (Media Access Control) address refers to a hardware address that uniquely identifies each device of a network. **Note:** Please see the user documentation for each device you wish to deny or allow access for a particular MAC address.



Figure 20: Wireless Filter Configuration Window

To use the wireless filter configuration:

1. Select the **Enable** option to either allow or deny access to the Business Internet Gateway.

Note: If you select the **Disable** option, all devices have access to the Business Internet Gateway.

2. If the **Enable** option was selected in step 1, click the **Allow** or **Deny** option next to the Filter Mode heading.
 - The **Allow** option allows all of the MAC addresses entered in the table below access to the Business Internet Gateway.
 - The **Deny** option denies all of the MAC addresses entered in the table below access to the Business Internet Gateway.
3. Type the MAC address in the **MAC Address** column of each device in which you either want to allow or restrict access.
4. Click **Next**.

The Wireless Options Configuration screen (Figure 21) appears.

5. **Optionally**, configure the following items:
 - **Data Transfer Rate:** If a particular wireless client is unable to auto-negotiate a connection to the Gateway, the data transfer rate may be set to a specific data rate such as 11 Mbps for 802.11b wireless clients.



Figure 21: Wireless Options Configuration Screen

- **RTS/CTS Threshold:** A combination of wireless clients may experience difficulty allowing each other to communicate with the Business Internet Gateway without interrupting each other's communications. If this occurs, the RTS/CTS threshold may be set to a higher number to allow each of them a longer period in which to communicate with the Gateway before the priority is switched to another wireless client wishing to transmit data.
- **Fragmentation Threshold:** The fragmentation threshold may be lowered to improve reliability in an excessively noisy wireless environment where changing channels does not provide significant enough improvement.

Note: if you wish to reset the options in the Wireless Options Configuration window, click **Restore Default Values**. All of the advanced features on this page will be restored.

6. Click **Next**.
The Wireless Wizard screen appears (Figure 22).
7. Click **Finish**.
8. Once your Business Internet Gateway has saved your new settings, it will automatically take you to your Internet browser's default home page.



Figure 22: Wireless Wizard Screen

UPnP (Universal Plug-N-Play)

Microsoft® UPnP allows the Business Internet Gateway to communicate directly with certain Windows operating systems to trade information about the special needs of certain applications as well as provide information about other devices on the network, where applicable. This communication between the operating system and Business Internet Gateway greatly reduces the amount of manual configuration required to use new applications and devices.

1. Click **Advanced** in the toolbar.
2. Click **Network Information** in the left-navigation-pane, then click **Advanced Settings**.
3. Click **Configure the Universal Plug-n-Play Settings** link to display the following window (Figure 23):

Three options are provided for UPnP:



Figure 23: UPnP Configuration Screen

- **Disable UPnP:** Prevents the Business Internet Gateway networking modem from using the UPnP feature to communicate with other devices or your operating system. Also may be disabled if your operating system does not support UPnP.
- **Enable Discovery and Advertisement only (SSDP):** Only allows the Business Internet Gateway to send information about new devices (hardware) detected. No information concerning software applications or services is transmitted. Note that UPnP must be enabled in your supported operating system to use this feature. See *About UPnP* below for more information on supported operating systems and enabling UPnP functionality.
- **Enable full Internet Gateway Device (IGD) support:** Allows the Business Internet Gateway to communicate freely with computers on the network about new devices, software applications, and services as needed to ensure they are working with minimal manual configuration required.

Note that UPnP must be enabled in your supported operating system to use this feature.


See *About UPnP* below for more information on supported operating systems and enabling UPnP functionality.

About UPnP

Only certain versions of Windows XP and computers support the UPnP (Universal Plug and Play) function. Before configuring this option, you must ensure that the UPnP component is installed on your computer and enabled.

Follow the steps below for installing UPnP components.


1. Click the **Start** menu, then click the **Control Panel** icon.
2. Click **Add or Remove Programs**, then click **Add/Remove Windows Components** to open the Windows Components Wizard screen.

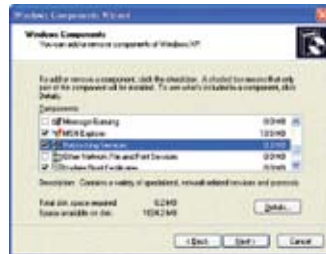

3. Click **Network Services**, then click **Details**. Check the **Universal Plug and Play** check box.
4. Click **OK**. The UPnP components are automatically installed.
5. After finishing the installation, go to **My Network Places**. You will find an icon (for example **Residential Gateway Device**) for the UPnP function.
6. Double-click the icon. The Gateway will open another Web page for UPnP functions. Now, the NAT traversal function of UPnP will be available. The Gateway will create virtual servers automatically when it detects the computer running some Internet applications that require this configuration.



Consult your Windows operating system documentation for more information on UPnP, installation, and usage.

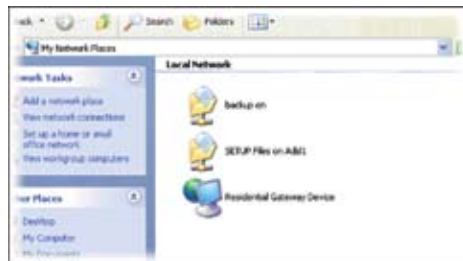

Applications

The Business Internet Gateway option displays all network-related information. To use the Business Internet Gateway option:

1. Click **Advanced** in the toolbar.
2. Click **Applications** in the left-navigation-pane.

The Applications screen appears (Figure 24).



Figure 24: Applications Screen

Quick Setup on Current Computer

1. Click **Advanced** in the toolbar.
2. Click **Applications** in the left-navigation pane.
3. Click the **Quick Setup on Current Computer** icon.

The Quick Setup on Current Computer feature provides different methods of keeping individual users/computers hidden behind a single outward-facing address, but still allowing them to access the Internet and related applications. If you have more than one available Internet connection interface, they will all be displayed in the drop-down box for ease of selection.

To configure the Quick Setup feature:

1. In the **Available Applications** list (Figure 25), click on the name of the application you wish to enable on your computer.
2. The application is moved to the **Enabled Applications** list.
3. Repeat step 1 until all preferred applications have been enabled.
4. Optionally, if the preferred application is not in the **Available Applications** list; click the **Configure a specific application** link.



Figure 25: Quick Setup Screen

The Port Mapping Setup screen appears (Figure 26). The Port Mapping Setup table is displayed that shows currently enabled services in the form of protocols and port numbers and the device to which the service will be redirected. For information on editing these entries, please refer to *Port Mapping Setup* in the Advanced Section.



Figure 26: Port Mapping Setup Screen

5. Click the **Edit** button of the appropriate service you wish to configure (as shown in Figure 26) or under the **Add/Edit Entry** heading, select one of the following options from the **Select application by name** drop-down menu:
 - **FTP:** (File Transfer Protocol) FTP is used to transfer files in both ASCII and Binary format between local and remote devices. This option uses port 21.
 - **HTTP:** (Hyper Text Transfer Protocol) HTTP is the standard method of transferring all types of information over the Internet. This option uses port 80.
 - **SNMP:** (Signaling Network Management Protocol) SNMP is a protocol used by network management applications to help manage a network. This option uses port 161.
 - **SMTP:** (Simple Mail Transfer Protocol) SMTP is used for sending email between servers. This port uses port 25.
 - **PPTP:** (Point-to-Point Tunneling Protocol) PPTP is a protocol that allows VPN (Virtual Private Network) applications. This option uses port 1723.
 - **Domain:** (Dynamic Naming Service) DNS is used to rename IP addresses to host names in the network. This option uses port 53.
6. Optionally, instead of selecting a service in step 5, you can select a protocol and specify port numbers.
7. Select one of the following options from the **Select protocol** drop-down menu:
 - **TCP:** (Transmission Control Protocol) Provides reliable, sequenced, and unduplicated delivery of bytes to a remote or local user.
 - **UDP:** (User Datagram Protocol) A connectionless mode protocol that provides the delivery of packets to a remote or local user.
 - **ICMP:** (Internet Control Message Protocol) A method by which IP software on a host or gateway can communicate to pass information to other machines.
 - **GRE:** (Generic Routing Encapsulation) This protocol is used to provide tunneling for a VPN connection.
8. If you are using the protocol option in step 7, type the range of UDP or TCP ports in the boxes next to the **TCP/UDP port(s)** heading.

9. Select one of the following options:

- **Redirect selected protocol/application to this Business Internet Gateway:**
The protocol or service that you select is directed to your Business Internet Gateway.
- **Redirect selected protocol/application to IP Address:**
The protocol or service that you select is directed to an IP address on your LAN that you type in the box next to this field. The IP address of the computer currently logged into the Business Internet Gateway is entered in this field by default.
 - Optionally, type the IP address of the device using the service in the IP Address box.

10. Click **Apply** to save the settings.

Port Mapping

The port mapping setup feature uses a port-by-pass feature, which provides basically the same feature as the Quick Setup on Current Computer, except you must define custom settings for all selected servers.

To use the Port Mapping feature:

1. Click **Advanced** in the toolbar.
2. Click **Applications** in the left-navigation pane.
3. Click the **Port Mapping Setup** icon.

The Port Mapping Setup screen appears (Figure 27).

On the Port Mapping Setup screen, a table shows currently enabled applications in the form of protocols and port numbers. It also shows the device the application is redirected to. From this screen, you may edit existing application entries or add new services.



Figure 27: Port Mapping Setup Screen – Edit Existing Services

Edit Existing Application Entry

To edit an existing application entry, you may:

1. Optionally, click **Delete** on the row of the application entry to remove it.
This will remove the application entry from the table. The screen is refreshed and the table is updated.
2. Optionally, click **Enable** or **Disable** on the row of the application entry.
3. Optionally, click **Edit** on the row of the application entry.

The Add/Edit boxes are populated with the application entry to be edited.

- If the application selected was defined by a service name, the **Select service by name box** are populated.
 - If the service selected was a custom configuration, the **Select protocol and TCP/UDP port(s)** boxes are populated.
4. Edit the Service settings as required:
 - **Optionally**, under the **Add/Edit Entry** heading, select a different application from the **Select application by name** drop-down menu.
 - **Optionally**, select a different protocol from the **Select protocol** drop-down menu.
 - **Optionally**, edit the **range of UDP or TCP ports**.
 - **Optionally**, select the application redirect option and IP address as required.
 5. Click **Apply** to save the changes.
The table is updated.

Add an Application Entry

To add a new application entry:

1. Under the **Add/Edit Entry** heading (Figure 28), select one of the following options from the **Select application by name** drop-down menu:
 - **FTP:** (File Transfer Protocol) FTP is used to transfer files in both ASCII and Binary format between local and remote devices. This option uses port 21.
 - **HTTP:** (Hyper Text Transfer Protocol) HTTP is the standard method of transferring all types of information over the Internet. This option uses port 80.
 - **SNMP:** (Signaling Network Management Protocol) SNMP is a protocol used by net-work management applications to help manage a network. This option uses port 161.



Figure 28: Port Mapping Setup Screen – Add New Services

- **SMTP:** (Simple Mail Transfer Protocol) SMTP is used for sending email between servers. This port uses port 25.
 - **PPTP:** (Point-to-Point Tunneling Protocol) PPTP is a protocol that allows VPN (Virtual Private Network) applications. This option uses port 1723.
 - **Domain:** (Dynamic Naming Service) DNS is used to rename IP address to host names in the network. This option uses port 53.
2. Optionally, instead of selecting an application in step 1, you can select a protocol and specify port numbers.
 3. Select one of the following options from the Select protocol drop-down menu:
 - **TCP:** (Transmission Control Protocol) Provides reliable, sequenced, and unduplicated delivery of bytes to a remote or local user.
 - **UDP:** (User Datagram Protocol) A connectionless mode protocol that provides the delivery of packets to a remote or local user.
 - **ICMP:** (Internet Control Message Protocol) A method by which IP software on a host or gateway can communicate to pass information to other machines.
 - **GRE:** (Generic Routing Encapsulation) This protocol is used to provide tunneling for a VPN connection.
 4. If you are using the protocol option in step 2, type the range of UDP or TCP ports in the boxes next to the TCP/UDP port(s) heading.
 5. Select one of the following options:
 - **Redirect selected protocol/application to this Business Internet Gateway.**
The protocol or service that you select is directed to your Business Internet Gateway.
 - **Redirect selected protocol/application to IP Address.**
The protocol or service that you select is directed to an IP address on your LAN that you type in the box next to this field. The IP address of the computer currently logged into the Business Internet Gateway is entered in this field by default.
 - Optionally, type the IP address of the device using the service in the **IP Address** box.
 6. Click **Apply** to save the settings.
The table is updated.

DMZ

If you have installed a firewall for added security of your Business Internet Gateway network, the Business Internet Gateway allows you to configure a DMZ (Demilitarized Zone) to allow for either a temporary or permanent bypassing of the firewall.

Note: If the DMZ feature is enabled, you must select the computer to be used as the DMZ computer or host.

To configure the DMZ:

1. Click **Advanced** in the toolbar.
2. Click **Applications** in the left-navigation pane.
3. Click the **DMZ** icon.

The DMZ Configuration screen appears (Figure 29).

4. Select one of the following options.
 - **Disable DMZ:** The firewall is not bypassed.
 - **Enable DMZ with this Host IP address:** The firewall is bypassed through an IP address typed in the box next to this field.
 - **Enable DMZ with this known Host IP address:** The firewall is bypassed through an IP address that is selected from the drop-down next to this field.



Figure 29: DMZ Configuration Window

5. Select one of the following options:
 - **Make Settings Permanent:** The settings in step 4 are permanent unless changed.
 - **Make Settings Last for:** The settings in step 4 are only enabled for the time (in minutes) entered in the box next to this option.
6. Click **Apply** to save the settings.

Business Internet Gateway Health

These options are used to gauge the various measures of the Business Internet Gateway's health. These options include: viewing statistics, updating the firmware of the Business Internet Gateway, running diagnostics, and being able to reset or reboot the Business Internet Gateway. The statistics option is used to measure the Internet stats, Business Internet Gateway stats, security stats, and the different Business Internet Gateway log files. The update firmware option is used to update the firmware of your Business Internet Gateway through the Internet or from a device connected to your Business Internet Gateway. The diagnostics option runs a diagnostic program against a selected connection on your Business Internet Gateway. The reboot option is used to reboot the system and to reset all settings to the factory default values. The administrator logon allows you change the administrative user name and/or password.

To use the Business Internet Gateway features:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet Gateway Health** in the left-navigation pane.

The Business Internet Gateway Health screen appears (Figure 30).



Figure 30: Business Internet Gateway Health Window

Admin Password

The Admin Password option allows you to change the administrative user name and/or password required to gain access to the Business Internet Gateway.

To change the admin user name and/or password:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet Gateway Health** in the left-navigation pane.
3. Click the **Admin Password** icon.

4. The Business Internet Gateway Password screen appears (Figure 31).
5. Optionally, you may change the user name and or password as preferred.

You may:

- a. Change the administrative name by typing a new administrative name in the **User Name** box.
 - b. Change the password by typing a new password in the **New Password** box.
 - c. Re-type the new password in the **Confirm Password** box.
6. Click **Save Settings**.



Figure 31: Business Internet Gateway Password Screen

Update Firmware

The firmware (software) on the Business Internet Gateway can be upgraded using your Web browser.

To update the firmware:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet Gateway Health** in the left-navigation pane.
3. Click the **Update Firmware** icon.

The System Update screen appears (Figure 32).

4. Click in the table cell of one of the following options:
 - **Recommended:** Select **Remote** to allow the gateway to search the Internet for the appropriate upgrade file.
 - **Alternate:** Select **Local** to browse to a location on your network and select the upgrade file. You must first download the upgrade file to your computer then select the file from the file-browsing window to begin the upgrade process.



Figure 32: System Update Screen

Important: Do not turn off or interrupt the Business Internet Gateway during a firmware upgrade session. The Business Internet Gateway could be rendered inoperable!

Diagnostics

The Business Internet Gateway provides diagnostic tests and data for each interface. This data is commonly requested by technical support to assist should troubleshooting ever be required.

To use the diagnostic option:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet Gateway Health** in the left-navigation pane.
3. Click the **Diagnostics** icon.

The Diagnostics screen appears (Figure 33).

4. Scroll down to the bottom of the screen and select a connection to test from the **Connection to Test** drop-down menu.
5. Click **Run Diagnostics**.

The results are displayed (Figure 34).



Figure 33: Diagnostics Screen



Figure 34: Diagnostics Results Screen

Note: Pay special attention to any tests that report a failing condition and check the connections for these interfaces before running the diagnostics again.

Statistics

A variety of statistics are available for monitoring your Internet connection and network status. A logging feature is also available that provide help in monitoring and diagnosing system health.

To view the statistics and logging information:

1. Click **Advanced** in the toolbar.
2. Click **Business Internet Gateway Health** in the left-navigation pane.
3. Click the **Statistics and Logging** icon. The Business Internet Gateway Statistics screen is displayed (Figure 35).
4. Click the link of your choice for the type of statistics you wish to view.



Figure 35: Business Internet Gateway Statistics Screen

Internet Stats

These statistics are commonly used by the Business Internet help desk to diagnose service-related issues.

- Click the **ATM** hyperlink under the **Internet Stats** heading to display the ATM connection status, uptime, and transmit/receive data, VPI/VCI's and related data for each circuit.
- Click the **DSL** hyperlink under the **Internet Stats** heading to display information about your Business Internet connection.

ATM Information

The Information screen provides summary information about the ATM interface of your Business Internet Gateway. Asynchronous Transfer Mode (ATM) is a networking technology that provides support for a wide variety of services and applications.

The ATM information is provided in three tables: an ATM Status table, an ATM Statistics table, and an ATM/AAL Status/Statistics table.

The ATM Status table (Figure 36) indicates the status of your ATM connection. This information provided includes:

- **Status:** the status of the ATM connection. The Status may be:
 - **Down:** The link is down.
 - **Up:** The link is enabled and ready to send packets.
 - **Up Time:** Shows the number of hours, minutes, and seconds the link has been active.
 - **Max. Theoretical Speed (bits/sec):** Shows the maximum data rate the connection may attain. This rate is negotiated with the endpoint of the connection.



Figure 36: ATM Information Screen

The ATM Statistics table displays data traffic statistics for the ATM connection. The ATM/AAL Status/Statistics table provides information about ATM Virtual Circuits. For more information on the status and statistics displayed in these tables, please see the *Statistics Legend*.

DSL Information

The DSL screen (Figure 37) provides summary information about your DSL interface. The information is provided in two tables; a DSL Status table and a DSL Statistics table.

The DSL Status table provides a status of your DSL connection. This information provided includes:

- **Status:** the status of the DSL connection. The Status may be:
 - **Down:** The link is down.
 - **Up:** The link is enabled and ready to send packets.
- **Current Transmit Rate:** The current transmit rates for the Near-End (ATU-R) and Far-End (ATU-C).



Figure 37: DSL Information Screen

The DSL Statistics table displays data traffic information and statistics for the DSL connection. For more information on the statistics displayed, please see the *Statistics Legend*.

Business Internet Gateway Networking Stats

These statistics are helpful when used to troubleshoot issues on your network. These statistics are displayed for each physical interface connected to the Business Internet Gateway. They are separated into Ethernet, USB, and Wireless statistics.

Click the link for the interface you are interested in viewing. Pay special attention to the status (up or down) reported for each Ethernet port to verify that each cable is connected properly and detected by the Business Internet Gateway.

Ethernet Information

The Ethernet screen (Figure 38) provides summary information about the Ethernet ports and interface of your Business Internet Gateway. The Ethernet information is displayed in two tables: Ethernet Status and Ethernet Statistics.

The Ethernet Status table displays Ethernet port information. This information provided includes:

- **Port:** the Ethernet port number
- **Status:** the status of the Ethernet link for the designated port. The Status may be:
 - **Down:** The link is down.
 - **Up:** The link is enabled and ready to send packets.
- **Up Time:** Shows the number of hours, minutes, and seconds the link has been active.
- **Speed (Mbits/sec):** Shows the data rate of the link in Mbps.
- **Duplex:** Shows the duplex mode. The Duplex may be:
 - **Full:** The link is full-duplex.
 - **Half:** The link is half-duplex.
- **MTU:** Maximum Transmission Unit: maximum allowable size of a PDU on this interface.

The Ethernet Statistics table displays statistics for each Ethernet port. For more information on the statistics displayed, please see the *Statistics Legend*.



Figure 38: Ethernet Information Screen

Wireless Information

The Wireless Information screen (Figure 39) provides summary information about your Wireless interface. The information is provided in two tables: a Wireless Status table and a Wireless Statistics table.

The Wireless Status table displays a status of your wireless connection. This information provided includes:

- **Status:** the status of the wireless connection. The Status may be:
 - **Down:** The connection is down.
 - **Up:** The link is enabled and ready to send packets.
- **Up Time:** Shows the number of hours, minutes, and seconds the link has been active.
- **Speed (Mbits/sec):** Shows the current data rate of the wireless connection.



Figure 39: Wireless Information Screen

Statistics Legend

- **Tx Octets:** Number of octets transmitted on this interface.
- **Rx Octets:** Number of octets received on this interface.
- **Tx Unicast:** Number of PDUs transmitted that were not addressed to a multicast or broadcast address.
- **Rx Unicast:** Number of PDUs received that were not addressed to a multicast or broadcast address.
- **Tx Non Unicast:** Number of PDUs transmitted that were addressed to a broadcast or multicast address.
- **Rx Non Unicast:** Number of PDUs received that were addressed to a broadcast or multicast address.
- **Tx Dropped:** Number of transmitted PDUs without errors that were dropped.
- **Rx Dropped:** Number of received PDUs without errors that were dropped.
- **Tx Errors:** Number of outgoing packets with errors on this interface, or the number of PDUs that could not be transmitted on this interface because of errors.
- **Rx Errors:** Number of incoming errors received on this interface.
- **Tx Total:** Total number of outgoing PDUs transmitted on this interface.
- **RX Total:** Total number of incoming PDUs received on this interface.
- **SNR:** The noise margin as seen by the Business Internet Gateway with respect to its received signal.
- **Atten:** Indicates the loss of intensity of the signal across the upstream and downstream links.

- **Tx Cells:** Total number of cells transmitted on this connection.
- **Rx Cells:** Total number of cells received on this connection.
- **Loss of Signal (LOS):** The number of Loss of Signal failures.
- **Tx CRC:** Number of PDUs that were transmitted with Cyclic Redundancy Check errors.
- **Rx CRC:** Number of PDUs that were received with Cyclic Redundancy Check errors.
- **Severely Errored Frames (SEF):** Total number of Severely Errored Frames.
- **SEF (Sec):** The number of Errored Seconds. The errored second is a count of one-second intervals containing one or more Severely Errored Frame defects.
- **LOS (Sec):** The number of Errored Seconds. The errored second is a count of one-second intervals containing one or more Loss of Signal defects.
- **Err (Sec):** The number of Errored Seconds. The errored second value is a count of one-second intervals containing one or more CRC errors, one or more LOS or SEF errors.
- **VPI/VCi:** Virtual Path Identifier/Virtual Channel Identifier. ATM defines connections with these parameters and used together, provide information that identifies the PDUs as it passes through ATM switches.
- **Protocol:** The protocol used for the ATM connection.

Logging

Extensive activity logs are provided for advanced troubleshooting and administrative use (Figure 40).

System: Displays Business Internet Gateway status, user login, interfaces accessed, etc. Activity displayed in the system log is defined using the checkboxes provided at the bottom of the screen. Click **Apply** after making any changes.



Figure 40: Log Screen

Log entry functions can be filtered by selecting or deselecting the preferred options, then clicking **Apply**. Selection or deselection of **Display All Log Entries** selects and deselects all log entries.

The system log can be cleared or saved to a text file using the appropriate buttons: **Clear Log** or **Save Log**.

Reboot

Selecting this option takes you to the System Reboot screen (Figure 41). The Reboot feature offers two options for restarting your Business Internet Gateway: Reboot and Reset.

A **Reboot** should be used when the Business Internet Gateway needs to be restarted. The Business Internet Gateway can also be rebooted using the power switch on the rear panel. Rebooting your Business Internet Gateway will not erase your currently saved settings.



Figure 41: System Reboot Screen

Note: By clicking the Reboot button, you will not reboot your computer; you are only rebooting your Business Internet Gateway.

The **Reset** option should be used when you find it necessary to recover the factory default settings. This may be necessary when a custom configuration did not go as planned, when a new configuration is desired, or when the Business Internet Gateway does not appear to be working properly.

Important: This option resets all personalized settings on your Business Internet Gateway.

To use the reset option:

1. If required, click **Reset to Factory Defaults**.
2. Click **Reboot**.
 - a. If the **Reset to Factory Defaults** option was selected, the system responds with a warning screen that prompts you to confirm the Reset to Factory Defaults selection.
 - b. Click the **Reset to Factory Defaults** button to confirm, or click **Cancel** to return to the System Reboot screen.
3. A status screen begins a 45 second countdown to reset the Business Internet Gateway.

Appendix

Front Panel Display

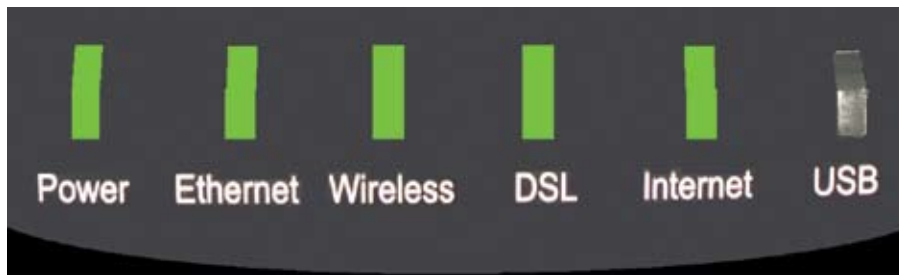


Figure 1: Front Panel

The following table provides information on the lights on the front panel of your Business Internet Gateway. These lights can provide you with important information on the status of your Business Internet Gateway.

Power

Green Indicates that the Business Internet Gateway is on. During normal operations, the **Power** light will be green.

Off The Business Internet Gateway is turned off.

Red The Power light is briefly red when you first turn on the Business Internet Gateway. This indicates that the modem is conducting a self-test diagnostic.

Ethernet 1 - 5

Each Ethernet LAN port on the back of the Business Internet Gateway has two corresponding lights: **Link and Activity**.

- **Link**

Green Indicates that the corresponding LAN port is active.

Off Indicates no active connection for the corresponding LAN port.

- **Activity**

Flashing Green Indicates that data is being transmitted or received via the corresponding LAN port.

Off Indicates that no data is being transmitted or received via the corresponding LAN port.

DSL

For the DSL connection, there are 2 lights:

- **Link**

Green Indicates the Business Internet connection is active.

Off Indicates that there is no active Business Internet connection.

- **Activity**

Flashing Green Indicates that data is being transmitted or received via the Business Internet connection.

Off Indicates that no data is being transmitted or received via the Business Internet connection.

USB

For the USB port, there are 2 lights:

- **Link**

Green Indicates the USB connection to computer is active.

Off Indicates that there is no active USB connection to computer.

- **Activity**

Flashing Green Indicates that data is being transmitted or received via the USB port.

Off Indicates that no data being transmitted or received via the USB port

802.11

For the 802.11 wireless connection, there are 2 lights:

- **Link**

Green Indicates that there is an active wireless connection.

Off Indicates that there is no active wireless connection detected.

- **Activity**

Flashing Green Indicates that data is being transmitted or received via the wireless connection.

Off Indicates that no data being transmitted or received via the wireless connection.

Status

Reserved for future functionality of the Business Internet Gateway.