



MODEL: CE1971CK

CORDLESS KETTLE INSTRUCTION MANUAL



Dear Valued Customer

Thank you for choosing to purchase a **Cascade** appliance, we appreciate your business. We have provided a product, which is value for money and is supported by our after sales service. We encourage you and your friends to choose from the range of **Cascade** appliances in the future.

Oriental Pacific International Ltd.

SPECIFICATIONS

Mains supply:	220-240V ~ 50 Hz – AC only
Rated Power:	1850 – 2200 watts

SERVICE

In the unlikely event of failure or for product information please contact the below help lines. For repair, replacement or return under warranty return the product in full along with proof of purchase to the retailer.

New Zealand call 0800 898580

Email: service@opnz.com

Australia call Toll Free 1-800-858011

SAVE THESE INSTRUCTIONS - RETAIN FOR FUTURE USE

BEFORE FIRST USE

Your CASCADE cordless kettle has left the factory in good working order in this carton for your protection. Should the carton be damaged or if the product is dropped, damaged, has a malfunction in any way, or if the flexible cord is damaged, immediately contact your retailer for replacement or repair.

Carefully unpack your CASCADE cordless kettle. Make sure you do not discard any packaging material until all parts of the appliance have been found.

Rinse the interior of the kettle and discard this water to eliminate any dust build up that may have occurred. Carefully wipe the exterior of the kettle and base with a soft damp cloth to remove any dust that may have accumulated. Dry with a dry towel. Do not use abrasive cleaners. Do not let any liquid enter the base electrical supply socket.

Warning! Do not immerse base or kettle in water or any other liquids.

The appliance is now ready for operation.

OPERATION

Always place the appliance on a flat, clean and non-slippery surface before operating it.

Warning! Always leave a gap of approximately 20 cm around the exterior of appliance. Never use near curtains, walls, under cupboards or other flammable materials. Do not place near the edge of any bench or allow cord to overhang.

Plug the power base supply plug into a suitable mains outlet.

Fill the kettle to the desired level and place securely onto the base.

To switch on depress the on/off switch to position marked "I". The indicator Blue internal lamp will light indicating the kettle is heating the water.

The kettle will automatically switch off and return to position marked "0" once the water has reached boiling point.

The kettle can be switched off manually at any time. Do not attempt to re-boil water immediately after it has switched off as this may damage the switch mechanism.

OPERATION (CONTINUED)

Keep Warm/ Re Boil Function

To maintain the water in a 'warm' state simply press the 'Keep Warm' button located on the handle above the ON/OFF switch and switch the main ON/OFF switch on to boil water as normal. The Violet light will glow. Once the water has boiled the main ON/OFF switch will switch off and the kettle will remain in 'Keep Warm' mode and the Red light will glow.

Note. This function does not keep the water at boiling temperature. The indicator lamp will glow Red.

To re-boil in 'Keep Warm' mode simply switch the ON/OFF switch to ON and the kettle will boil as normal.

Warning! It is not advisable to keep this appliance in "Keep Warm" mode indefinitely. If you are not attending the appliance for any extended period disconnect from the mains supply to avoid any risk of electrocution or personal injury.

Warning! To avoid electrocution, personal injury, damage to the kettle or scalding from ejected water, do not over fill or under fill, do not fill kettle when it is connected to the base or when it is in operation. Always take special care when moving any appliance containing hot water. Do not open the lid when boiling. Always use only with the base provided.

For first time use only:

- Fill the kettle to maximum level.
- Place on base and switch on.

After this water has boiled and the switch has turned off, disconnect from power supply, remove kettle from base, and discard this water completely. This should eliminate any impurities in the kettle. Repeat if necessary.

Warning! Ensure that the kettle is switched off before removing it from its stand.

Warning! Do not operate the kettle on an inclined surface. Do not operate the kettle unless the element is fully immersed. Do not move the kettle while it is switched on.

Warning! This kettle uses the latest high quality automatic on/off switch. It is operated by the steam, which is produced from the boiling water. The switch unit is mounted in the base of the kettle. Steam produced from the boiling water activates the on/off switch mechanism, which is located below the lower handle area. There may be a small amount of condensation left on the base unit at this point. This is normal and not a reason for concern. If this occurs after use, wipe this condensation dry with a dry towel.

CLEANING

Always disconnect your CASCADE kettle from the mains supply before cleaning.

Never immerse your kettle or base in water or other liquids.

Wipe the exterior of the kettle and base with a damp cloth. Dry with a dry towel. Do not use harsh abrasives or solvents as these may damage the plastics.

Do not use detergent.

Periodically check the supply cord for damage.

Store your appliance and these instructions in its original box or in a dry cupboard.

De-Scaling

In order to retain the performance of your kettle, it is important to periodically remove calcium deposits that build up inside the kettle. Half fill the kettle with clean water.

Add 30 ml of white vinegar.

Boil this mixture and allow water to stand for 1 minute. Repeat this step two or three times.

Drain this water away.

Rinse the inside of the kettle with clean water.

Fill kettle to the maximum level and boil. Drain this water away completely.

IMPORTANT SAFEGAURDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Carefully read these instructions before using your appliance.

Warning! Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.

Warning! Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.

Warning! Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.

Warning! Unplug from mains outlet when appliance is not in use, before attaching or removing accessories, and before cleaning.

Warning! An appliance dropped or damaged should not be used until examined by a service engineer.

Warning! Do not permit the mains lead to come in contact with hot objects.

Warning! If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Warning! Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service-Dealer.

Warning! The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.

Warning! Do not let the cord hang over edge of table or counter. Young children may pull it over and cause personal injury, scalding or electric shock hazard risk.

Warning! An appliance should never be left unattended when plugged in.

This appliance is intended for household use only and not for commercial or industrial use.

Warning! Hot steam may be ejected when opening the lid.

If appliance is to be used by a third party, please supply the instruction manual with it.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com