



WIRELESS
INDOOR/OUTDOOR SPEAKER

FOR SMARTPHONES AND OTHER BLUETOOTH MEDIA DEVICES

WSP40 USER MANUAL

FEATURES

CONTENTS

- Bluetooth Speaker
- USB Charging Cord
- Suction cup
- Instruction Manual

Enjoy music wirelessly

- Switch between calls and music - you will not miss the incoming call while listening to music


- Answer & end a call at click of a button.
- Redial last number
- Volume Control
- Media Control (pause/play, previous track/next track)
- Connects to last connected device automatically

SAFETY INSTRUCTIONS

Read this manual carefully before putting the appliance into operation and keep this manual for future reference.

Do not insert any metal object into the device.

PRODUCT OVERVIEW

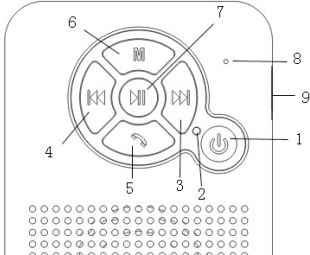

1 Power ON/OFF button

2 LED indicator

3 Long press: volume up; short press: next track

4 Long press: volume down; short press: previous track

5 Phone button

6 Play/Pause button

7 Built-in microphone

8 Micro USB charging port

The Aqua Sound WSP40 Bluetooth speaker comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully.

1. Connect the USB cable to the USB port on the unit.
2. Connect the other end of the USB cable to a USB port on a PC or an AC/DC adapter. The LED indicator turns on to indicate that the battery is being charged. When the battery is fully charged, the LED indicator will turn off

PAIRING

1. Turn off the speaker. Make sure the speaker is powered off before continuing
2. Press and hold the Power ON/OFF button until the red LED light flashes - the Bluetooth speaker is ready for pairing.
3. Turn on your Bluetooth enabled device and activate the Bluetooth function the put it in pairing mode
4. Search for the Bluetooth device - "AQUASOUND WSP40" will show up.

5. Pair your Bluetooth enabled device with AQUASOUND WSP40. If a password is needed, type in "0000". After the speaker is paired with your device, connect it.

Tips:

Once the speaker is paired and connected to your Bluetooth device, it automatically connects the next time as long as the Bluetooth setting on your device is turned on.

CONTROLLING CALLS

Answer a call: Press the Phone button.

End a call: Press the Phone button.

Reject a call: Press and hold the Phone button for around 2 seconds.

Redial the last number: Press the phone button twice quickly.

CONTROLLING MUSIC

Playing Music: Once the device is connected choose music file to play. You can use the speaker to FWD & RWD to the next file. To pause simply press the play button. Press again to play.

SPECIFICATIONS

Bluetooth operating distance: 33 feet

Working time: Music time 3 hours, talk time 3 hours

Charging input power: DC 5V

Charging time: Approx 3 hours

IP grade: Px4 (Splashproof)

BATTERY: LI-PO 500MA

Note: Battery life & charging time may vary, based on usage & types of devices used.

Warranty

Aduro warrants this product to be free from defects in materials and workmanship for one year. If your Aduro product is found to be defective within that time, Aduro will promptly replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Aduro liable for loss of, or damage to devices; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Aduro has been informed of their possibility.

We're here to help. If you have any issues with this product, please contact us at:
cs@aduroproducts.com

Aduro Products LLC

© Aduro. All rights reserved. Trademarks and registered trademarks are the property of their respective owners. In style mobile accessories at www.aduroproducts.com