

VAMP 255 and 230

Feeder and Motor Manager

User manual

63230-218-205

04/2015

Retain for future use.



Hazard Categories and Special Symbols

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol is not used with this signal word.

Electrical equipment should be installed, operated, serviced, and maintained only by trained and qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material. A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Table of Contents

Section 1: General	9
Password protection	10
Relay features	11
User interface	12
Related documents	12
Abbreviations	13
Periodical testing	14
Section 2: Local panel user interface	15
Relay front panel	15
Display	17
Adjusting display contrast	18
Local panel operations	19
Menu structure of protection functions	23
Setting groups	26
Fault logs	27
Operating levels	28
Operating measures	30
Control functions	30
Measured data	31
Reading event register	35
Forced control (Force)	36
Configuration and parameter setting	38
Parameter setting	40
Setting range limits	41
Disturbance recorder menu DR	41
Configuring digital inputs DI	42
Configuring digital outputs DO	43
Protection menu Prot	43
Configuration menu CONF	43
Protocol menu Bus	45
Single line diagram editing	50
Blocking and Interlocking configuration	50
Section 3: VAMPSET PC software	51
Section 4: Introduction	52
Main features	53
Principles of numerical protection techniques	54
Section 5: Protection functions	56
Maximum number of protection stages in one application	56

General features of protection stages	56
Application modes	61
Current protection function dependencies	62
Overcurrent protection $I > (50/51)$	62
Remote controlled overcurrent scaling	62
Directional phase overcurrent $I_{\phi} > (67)$	68
Current unbalance stage $I_2 > (46)$ in feeder mode	75
Current unbalance stage $I_2 > (46)$ in motor mode	76
Phase reversal/incorrect phase sequence protection $I_2 >> (47)$	79
Stall protection $I_{ST} > (48)$	80
Motor status	82
Frequent start protection $N > (66)$	84
Undercurrent protection $I < (37)$	86
Directional ground fault protection $I_{0\phi} > (67N)$	86
Ground fault protection $I_0 > (50N/51N)$	93
Intermittent transient ground fault protection $I_{0INT} > (67NI)$	98
Capacitor bank unbalance protection	98
Zero sequence voltage protection $V_0 > (59N)$	104
Thermal overload protection $T > (49)$	111
Overvoltage protection $V > (59)$	115
Undervoltage protection $V < (27)$	117
Directional power protection $P < (32)$	122
Frequency Protection $f > <, f >> << (81)$	123
Rate of change of frequency (ROCOF) (81R)	125
Synchrocheck (25)	130
Magnetizing inrush $I_{f2} > (68F2)$	138
Transformer over excitation $I_{f5} > (68F5)$	139
Circuit breaker failure protection CBFP (50BF)	140
Programmable stages (99)	141
Arc fault detection (50ARC/50NARC) optional	145
Inverse time operation	148
Standard inverse delays IEC, IEEE, IEEE2, RI ...	151
Free parameterization using IEC, IEEE and IEEE2 equations	153
Programmable inverse time curves	163
Section 6: Supporting functions	165
Event log	165
Disturbance recorder	167
Running virtual comtrade files	172
Cold load pick-up and inrush current detection	173
Voltage sags and swells	175
Voltage interruptions	177
Current transformer supervision	179
Voltage transformer supervision	180
Circuit breaker condition monitoring	181
Energy pulse outputs	188
System clock and synchronization	191

Running hour counter	197
Timers	198
Combined overcurrent status	200
Self-supervision	202
Diagnostics	202
Short circuit fault locator	204
Feeder fault locator	207
Ground-fault location	209
Section 7: Measurement functions	211
Measurement accuracy	211
RMS values	213
Harmonics and Total Harmonic Distortion (THD)	213
Demand values	214
Minimum and maximum values	214
Maximum values of the last 31 days and twelve months	215
Voltage measurement modes	216
Power calculations	217
Direction of power and current	219
Symmetric components	221
Primary secondary and per unit scaling	226
Current scaling	226
Voltage scaling	229
Analog output (option)	233
mA scaling examples	233
Section 8: Control functions	235
Output relays	235
Digital inputs	236
Virtual inputs and outputs	239
Output matrix	240
Blocking matrix	241
Controllable objects	242
Local/Remote selection	243
Controlling with DI	244
Auto-reclose function (79)	244
Logic functions	254
Section 9: Communication	257
Communication ports	257
Local port X4	259
Remote port X5	261
Extension port X4	263
Ethernet port	264
Communication protocols	266
PC communication	266
Modbus TCP and Modbus RTU	267
Profibus DP	268

	SPA-bus	270
	IEC 60870-5-103	271
	DNP 3.0	273
	IEC 60870-5-101	274
	External I/O (Modbus RTU master)	276
	IEC 61850	276
	EtherNet/IP	277
	FTP server	278
Section 10: Application		279
	Substation feeder protection	279
	Industrial feeder protection	280
	Parallel line protection	281
	Ring network protection	283
	Trip circuit supervision	284
	Trip circuit supervision with one digital input	284
	Trip circuit supervision with two digital inputs	292
Section 11: Connections.....		296
	Rear panel	296
	VAMP 255	296
	VAMP 230	296
	Auxiliary voltage	311
	Serial communication connection	311
	Front panel connector	311
	Rear panel connector X5 (REMOTE)	312
	X4 rear panel connector (local RS232 and extension RS485 ports)	317
	Optional two channel arc protection card	317
	Optional digital I/O card (DI19/DI20)	318
	External option modules	318
	External LED module VAM 16D	318
	External input / output module	318
	Block optional diagrams	324
	VAMP 255	324
	VAMP 230	324
	Block diagrams of option modules	328
	Block diagrams of optional arc modules	328
	Block diagram of optional DI19/DI20	328
	Connection examples	329
	VAMP 255	329
	VAMP 230	333
Section 12: Technical data		336
	Connections	336
	Measuring circuits	338
	Auxiliary power supply	339
	Digital inputs	340

Trip contacts	340
Signal contacts	341
Ethernet connection	341
Local serial communication port	341
Remote control connection (option)	342
Arc detection interface (option)	342
Analog output connection (option)	343
Test and environmental conditions	344
Protection functions	346
Non-directional current protection	346
Directional current protection	352
Frequent start protection	355
Voltage protection	355
Circuit breaker failure protection CBFP (50BF) ...	358
Magnetizing inrush 68F2	359
Over excitation 68F5	359
Frequency protection	360
Power protection	362
Synchrocheck function	362
Arc fault detection (option)	363
Supporting functions	364
Section 13: Construction	366
Section 14: Order information	368
Section 15: Revision history	371

Section 1: General

Safety precautions

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, NOM-029-STPS-2011, and CSA Z462.
- This unit must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this unit before working on or inside the unit.
- Always use a properly rated voltage sensing device to confirm that the power is off.
- A live current transformer secondary circuit must not be opened without turning off the primary side of the transformer and short circuiting transformer secondary circuits first.
- Replace all devices, doors and covers before turning on power to this unit.

Failure to follow these instructions will result in death or serious injury.

WARNING

WORKING ON ENERGIZED EQUIPMENT

Do not choose lower Personal Protection Equipment while working on energized equipment.

Failure to follow these instructions can result in death or serious injury.

Password protection

Password protection

Use IED's password protection feature in order to protect untrained person interacting this device.

Relay features

The comprehensive protection functions of the relay make it ideal for utility, industrial, marine and off-shore power distribution applications. The relay features the following protection functions.

Table 1.1: List of protection functions

IEEE/ANSI code	IEC symbol	Function name
25	$\Delta f, \Delta U, \Delta \phi$	Synchrocheck
27	$U<, U<<, U<<<^{\square}$	Undervoltage protection
32	$P<, P<<$	Reverse power protection
37	$I<$	Undercurrent protection
46	$I_2>$	Current unbalance protection in feeder mode
46	$I_2>$	Current unbalance protection in motor mode *
47	$I_2>>$	Phase reversal / incorrect phase sequence protection *
48	$I_{ST}>$	Stall protection *
49	$T>$	Thermal overload protection
50/51	$I>, I>>, I>>>$	Overcurrent protection
50ARC/ 50NARC	$Arcl>, Arcl_{01}, Arcl_{02}>$	Optional arc fault detection
50BF	CBFP	Circuit-breaker failure protection
50NC/51NC	$I_{0CAP}>$	Capacitor bank unbalance protection
59	$U>, U>>, U>>>^{\square}$	Overvoltage protection
59N	$U_0>, U_0>>U_0>>>^{\square}$	zero sequence voltage protection
66	$N>$	Frequent start protection *
67	$I_{\phi}>, I_{\phi}>>, I_{\phi}>>>, I_{\phi}>>>>$	Directional overcurrent protection
67N	$I_{0\phi}>, I_{0\phi}>>$	Directional ground-fault, low-set stage, sensitive, definite or inverse time (can be used as non directional)
67NI	$I_{0INT}>$	Intermittent transient ground fault
68F2	$I_{f2}>$	protection Magnetishing inrush
68F5	$I_{f5}>$	Transformer overexcitation
81H/81L	$f><, f>><<$	Overfrequency and underfrequency protection
81L	$f<, f<<$	Underfrequency protection
81R	df/dt	Rate of change of frequency (ROCOF) protection
99	Prg1-8	Programmable stages

* Only available when application mode is motor protection.

$\square$ For NEMA, $U=V$.

Further the relay includes a disturbance recorder. Arc detection is optionally available.

The relay communicates with other systems using common protocols, such as the Modbus RTU, ModbusTCP, Profibus DP, IEC 60870-5-103, IEC 60870-5-101, IEC 61850, SPA bus, Ethernet / IP and DNP 3.0.

User interface

The relay can be controlled in three ways:

- Locally with the push-buttons on the relay front panel
- Locally using a PC connected to the serial port on the front panel or on the rear panel of the relay (both cannot be used simultaneously)
- Via remote control over the optional remote control port on the relay rear panel.

Related documents

Document Title	Website	Document No.
VAMPSET Setting and Configuration Tool User Manual	http://www.schneider-electric.us/sites/us/en/support/documents-downloads.page	63230-218-207
Communication parameters for VAMP 255 (Modbus, Profibus, SPA bus, DNP 3.0, IEC101, IEC103, Modbus Master, ProfibusDP)	http://www.schneider-electric.com/ww/en/download/document/VAMP_210_230_255_257_259_260_265_cp?showAsIframe=true&xtmc=IEC%2520101%2520profile%2520checklist&xtcr=2	FA225826

Download the latest software at <http://www.schneider-electric.com/products/ww/en/2300-ied-user-software/2320-vamp-user-software/62050-vamp-software/?xtmc=vamp&xtcr=2>.

Abbreviations

A1	Alarm Contact 1
ANSI	American National Standards Institute-a standardization organization
CB	Circuit breaker
CBFP	Circuit breaker failure protection
$\cos\phi$	Active power divided by apparent power = P/S. (See power factor PF). Negative sign indicates reverse power.
CT	Current transformer
CT _{PRI}	Nominal primary value of current transformer
CT _{SEC}	Nominal secondary value of current transformer
Dead band	See hysteresis
DI	Digital input
DO	Digital output, output relay
Document file	Stores information about the IED settings, events, and fault logs.
DSR	Data set ready. An RS232 signal. Input in front panel port of VAMP relays to disable rear panel local port.
DST	Daylight saving time. Adjusting the official local time forward by one hour for summer time.
DTR	Data terminal ready. An RS232 signal. Output and always true (+8 Vdc) in front panel port of VAMP relays.
FFT	Fast Fourier transform. Algorithm to convert time domain signals to frequency domain or to phasors.
HMI	Human-machine interface
Hysteresis	i.e. dead band. Used to avoid oscillation when comparing two near by values.
I _{MODE}	Nominal current of the selected mode. In feeder mode, I _{MODE} = V _T PRIMARY. In motor mode, I _{MODE} = I _{MOT} .
I _{MOT}	Nominal current of the protected motor
I _N	Nominal current. Rating of CT primary or secondary.
I _{SET}	Another name for pick up setting value I _{>}
I _{0SET}	Another name for pick up setting value I ₀ >
I _{0N}	Nominal current of I ₀ input in general
I _{01N}	Nominal current of the I ₀₁ input of the device
I _{02N}	Nominal current of the I ₀₂ input of the device
IEC	International Electrotechnical Commission. An international standardization organization.
IEC-101	Abbreviation for communication protocol defined in standard IEC 60870-5-101
IEC-103	Abbreviation for communication protocol defined in standard IEC 60870-5-103
IED	Intelligent electronic device
IEEE	Institute of Electrical and Electronics Engineers
LA	LED A
LAN	Local area network. Ethernet based network for computers and IEDs.
Latching	Output relays and indication LEDs can be latched, which means that they are not released when the control signal is releasing. Releasing of latched devices is done with a separate action.
LB	LED B
LC	LED C
LCD	Liquid crystal display
LED	Light-emitting diode
Local HMI	IED front panel with display and pushbuttons
NTP	Network time protocol for LAN and WWW
P	Active power. Unit = [W]

PF	Power factor. The absolute value is equal to $\cos\phi$, but the sign is '+' for inductive i.e. lagging current and '-' for capacitive i.e. leading current.
P_M	Nominal power of the prime mover. (Used by reverse/under power protection.)
PT	See VT
pu	Per unit. Depending of the context the per unit refers to any nominal value. For example for overcurrent setting $1 \text{ pu} = 1 \times I_{MODE}$.
Q	Reactive power. Unit = [var] acc. IEC
RMS	Root mean square
S	Apparent power. Unit = [VA]
SF	IED status inoperative
SNTP	Simple Network Time Protocol for LAN and WWW
TCS	Trip circuit supervision
THD	Total harmonic distortion
TR	Trip indication
V_{0SEC}	Voltage at input V_c at zero ohm ground fault. (Used in voltage measurement mode "2LL+U ₀ ")
V_A	Voltage input for V_{12} or V_A depending of the voltage measurement mode
V_B	Voltage input for V_{23} or V_B depending of the voltage measurement mode
V_C	Voltage input for V_{31} or V_0 depending of the voltage measurement mode
V_N	Nominal voltage. Rating of VT primary or secondary
VAMPSET	Configuration tool for VAMP protection devices
VT	Voltage transformer i.e. potential transformer PT
VT_{PRI}	Nominal primary value of voltage transformer
VT_{SEC}	Nominal secondary value of voltage transformer
WWW	World wide web (internet)
Webset	http configuration interface

Periodic testing

The protection IED, cabling and arc sensors must periodically be tested according to the end-user's safety instructions, national safety instructions or law. Manufacturer recommends functional testing being carried minimum every five (5) years. Environmental conditions may cause the need to clear the light sensors frequently.

It is proposed that the periodic testing is conducted with a secondary injection principle for those protection stages which are used in the IED.

Section 2: Local panel user interface

Relay front panel

The figure below shows, as an example, the front panel of the device and the location of the user interface elements used for local control.



1. Navigation push-buttons
2. LED indicators
3. LCD
4. RS 232 serial communication port for PC

Navigation push-button function



CANCEL push-button for returning to the previous menu. To return to the first menu item in the main menu, press the button for at least three seconds.



INFO push-button for viewing additional information, for entering the password view and for adjusting the LCD contrast.



ENTER push-button for activating or confirming a function.



arrow UP navigation push-button for moving up in the menu or increasing a numerical value.



arrow DOWN navigation push-button for moving down in the menu or decreasing a numerical value.



arrow LEFT navigation push-button for moving backwards in a parallel menu or selecting a digit in a numerical value.



arrow RIGHT navigation push-button for moving forwards in a parallel menu or selecting a digit in a numerical value.

LED indicators

The relay is provided with eight LED indicators:

LED indicator	Meaning	Measure/ Remarks
Power LED lit	The auxiliary power has been switched on	Normal operation state
Error LED lit	Internal detected fault, operates in parallel with the self supervision output relay	The relay attempts to reboot [RE-BOOT]. If the error LED remains lit, call for maintenance.
Com LED lit or flashing	The serial bus is in use and transferring information	Normal operation state
Alarm LED lit	One or several signals of the output relay matrix have been assigned to output LED A (LA) and the output has been activated by one of the signals. (For more information about output matrix, please see Configuring digital outputs [DO]).	The LED is not lit when the signal that caused output Alarm Contact 1 (A1) to activate, e.g. the START signal, is reset. The resetting depends on the type of configuration, connected or latched.
Trip LED lit	One or several signals of the output relay matrix have been assigned to output Tr, and the output has been activated by one of the signals. (For more information about output relay configuration, please see Configuring digital outputs [DO]).	The LED is not lit when the signal that caused output Trip Indication (Tr) to activate, e.g. the TRIP signal, is reset. The resetting depends on the type of configuration, connected or latched.
A-C LED lit	Application-related status indicators. One or several signals of the output relay matrix have been assigned to output LED A, LED B, or LED C (LA, LB or LC), and the output has been activated by one of the signals. (For more information about output relay configuration, please see Configuring digital outputs DO).	Configurable

Adjusting LCD contrast

1. On the local HMI, push  and .
2. Enter the four-digit password and push .
3. Push  and adjust the contrast.
 - To increase the contrast, push .
 - To decrease the contrast, push .
4. To return to the main menu, push .

Resetting latched indicators and output relays

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Remove the cause of the event that resulted in the latched output relay.

Failure to follow these instructions will result in death, serious injury, or equipment damage.

All the indicators and output relays can be given a latching function in the configuration.

There are several ways to reset latched indicators and relays:

- From the alarm list, move back to the initial display by pushing  for approx. 3s. Then reset the latched indicators and output relays by pushing **OK**.
- Acknowledge each event in the alarm list one by one by pushing **OK** equivalent times. Then, in the initial display, reset the latched indicators and output relays by pushing **OK**.

The latched indicators and relays can also be reset via a remote communication bus or via a digital input configured for that purpose.

Display

The relay is provided with a backlit 128 x 64 LCD dot matrix display. The display can accommodate up to 21 characters horizontally and eight rows vertically at one time. The display has two different purposes: one is to show the single line diagram of the relay with the object status, measurement values, identification etc (Figure 2.1). The other purpose is to show the configuration and parameterization values of the relay (Figure 2.2).

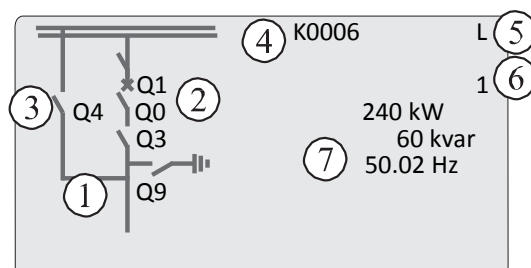


Figure 2.1: Sections of the LCD dot matrix display

1. Freely configurable single-line diagram
2. Controllable objects (max six objects)

3. Object status (max eight objects, including the six controllable objects)
4. Bay identification
5. Local/Remote selection
6. Auto-reclose on/off selection (if applicable)
7. Freely selectable measurement values (max. six values)

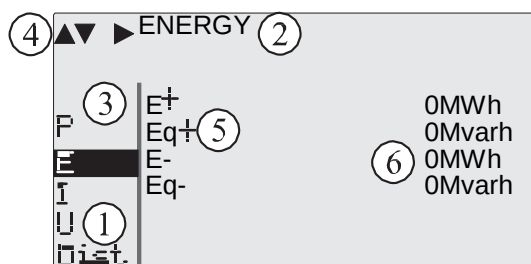


Figure 2.2: Sections of the LCD dot matrix display

1. Main menu column
2. The heading of the active menu
3. The cursor of the main menu
4. Possible navigating directions (push buttons)
5. Measured/setting parameter
6. Measured/set value

Backlight control

Display backlight can be switched on with a digital input, virtual input, or virtual output. LOCALPANEL CONF/Display backlight ctrl setting is used for selecting trigger input for backlight control. When the selected input activates (rising edge), display backlight is set on for 60 minutes.

Adjusting display contrast

The readability of the LCD varies with the brightness and the temperature of the environment. The contrast of the display can be adjusted via the PC user interface.

Local panel operations

The front panel can be used to control objects, change the local/remote status, read the measured values, set parameters, and to configure relay functions. Some parameters, however, can only be set by means of a PC connected to the local communication port. Some parameters are factory-set.

Moving in the menus

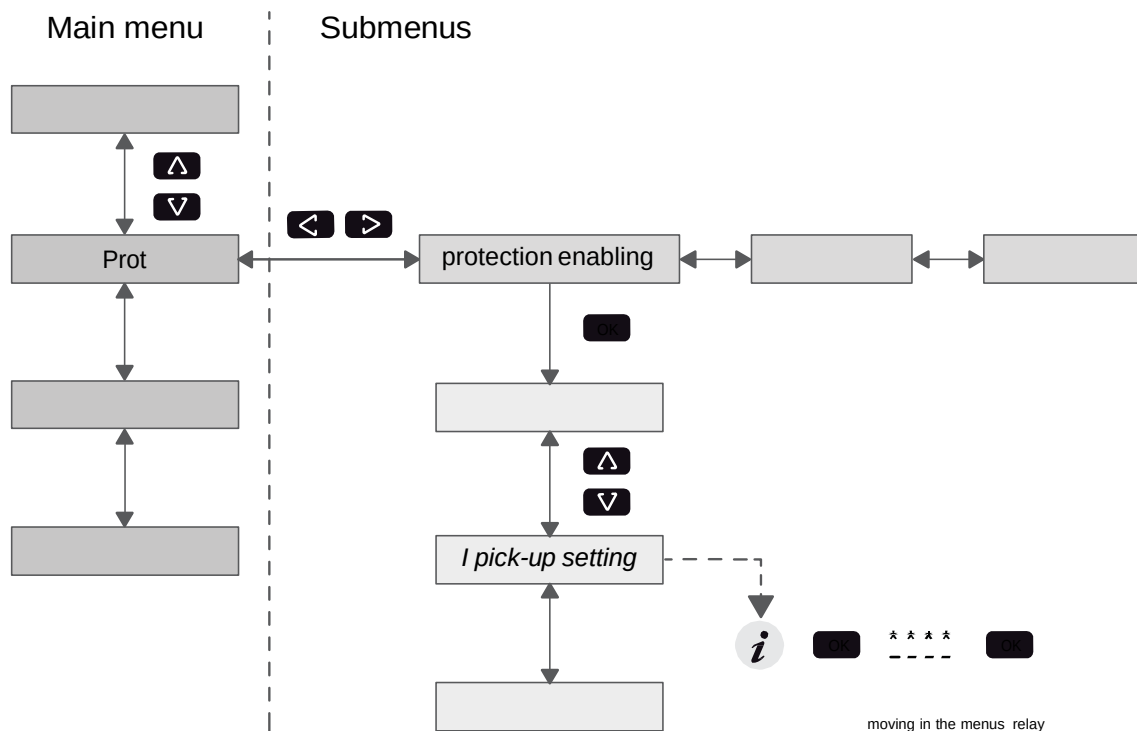


Figure 2.3: Moving in the menus using local HMI

- To move in the main menu, push or .
- To move in submenus, push or .
- To enter a submenu, push and use or for moving down or up in the menu.
- To edit a parameter value, push and .
- To go back to the previous menu, push .
- To go back to the first menu item in the main menu, push for at least three seconds.

NOTE: To enter the parameter edit mode, give the password. When the value is in edit mode, its background is dark.

Main menu

The menu is dependent on the user's configuration and the options according the order code. For example only the enabled protection stages will appear in the menu.

A list of the local main menu

Main menu	Number of menus	Description	ANSI code	Note
	1	Interactive mimic display		1
	5	Double size measurements defined by the user		1
	1	Title screen with device name, time and firmware version.		
P	14	Power measurements		
E	4	Energy measurements		
I	13	Current measurements		
U	15	Voltage measurements□		
Dema	15	Demand values		
Umax	5	Time stamped min & max of voltages		
Imax	9	Time stamped min & max of currents		
Pmax	5	Time stamped min & max of power and frequency		
Mont	21	Maximum values of the last 31 days and the last twelve months		
Evnt	2	Events		
DR	2	Disturbance recorder		2
Runh	2	Running hour counter. Active time of a selected digital input and time stamps of the latest start and stop.		
TIMR	6	Day and week timers		
DI	5	Digital inputs including virtual inputs		
DO	4	Digital outputs (relays) and output matrix		
ExtAI	3	External analog inputs		3
ExDI	3	External digital inputs		3
ExDO	3	External digital outputs		3
Prot	27	Protection counters, combined overcurrent status, protection status, protection enabling, cold load and inrush detectionIf2> and block matrix		
I>	5	1st overcurrent stage	50/51	4
I>>	3	2nd overcurrent stage	50/51	4
I>>>	3	3rd overcurrent stage	50/51	4
Iφ >	6	1st directional overcurrent stage	67	4
Iφ >>	6	2nd directional overcurrent stage	67	4
Iφ >>>	4	3rd directional overcurrent stage	67	4
Iφ >>>>	4	4th directional overcurrent stage	67	4
I<	3	Undercurrent stage	37	4
I2>	3	Current unbalance stage	46	4
T>	3	Thermal overload stage	49	4

Main menu	Number of menus	Description	ANSI code	Note
Uc>	4	Capacitor O/V stage	59C	4
Io>	5	1st ground fault stage	50N/51N	4
Io>>	3	2nd ground fault stage	50N/51N	4
Io>>>	3	3rd ground fault stage	50N/51N	4
Io>>>>	3	4th ground fault stage	50N/51N	4
Ioφ >	6	1st directional ground fault stage	67N	4
Ioφ>>	6	2nd directional ground fault stage	67N	4
Ioint>	4	Transient intermittent E/F	67NI	4
U>	4	1st overvoltage stage□	59	4
U>>	3	2nd overvoltage stage□	59	4
U>>>	3	3rd overvoltage stage□	59	4
U<	4	1st undervoltage stage□	27	4
U<<	3	2nd undervoltage stage□	27	4
U<<<	3	3rd undervoltage stage□	27	4
U1<	4	1st positive sequence undervoltage stage□	27P	4
U1<<	4	2nd positive sequence undervoltage stage□	27P	4
Uo>	3	1st residual overvoltage stage□	59N	4
Uo>>	3	2nd residual overvoltage stage□	59N	4
P<	3	1st reverse and underpower stage	32	4
P<<	3	2nd reverse and underpower stage	32	4
f><	4	1st over/under-frequency stage	81	4
f>><<	4	2nd over/under-frequency stage	81	4
f<	4	1st underfrequency stage	81L	4
f<<	4	2nd underfrequency stage	81L	4
dfdt	3	Rate of change of frequency (ROCOF) stage	81R	4
Prg1	3	1st programmable stage		4
Prg2	3	2nd programmable stage		4
Prg3	3	3rd programmable stage		4
Prg4	3	4th programmable stage		4
Prg5	3	5th programmable stage		4
Prg6	3	6th programmable stage		4
Prg7	3	7th programmable stage		4
Prg8	3	8th programmable stage		4
If2>	3	Second harmonic O/C stage	68F2	4
If5>	3	Fifth harmonic O/C stage	68F5	4
CBFP	3	Circuit breaker failure protection	50BF	4
CBWE	4	Circuit breaker wearing supervision		4
AR	15	Auto-reclose	79	
CTSV	1	CT supervisor		4
CT'SV	1	CT' supervisor		4
VTsv	1	VT supervisor		4

Main menu	Number of menus	Description	ANSI code	Note
ArcI>	4	Optional arc detection stage for phase-to-phase faults and delayed light signal.	50ARC	4
ArcIo1>	3	Optional arc detection stage for ground faults. Current input = I01	50NARC	4
ArcIo2>	3	Optional arc detection stage for ground faults. Current input = I02	50NARC	4
OBJ	11	Object definitions		5
Lgic	2	Status and counters of user's logic		1
CONF	10+2	Device setup, scaling etc.		6
Bus	13	Serial port and protocol configuration		7
Diag	6	Device self diagnosis		

Notes

1. Configuration is done with VAMPSET.
 2. Recording files are read with VAMPSET.
 3. The menu is visible only if protocol "ExternalIO" is selected for one of the serial ports. Serial ports are configured in menu "Bus".
 4. The menu is visible only if the stage is enabled.
 5. Objects are circuit breakers, disconnectors etc. Their position or status can be displayed and controlled in the interactive mimic display.
 6. There are two extra menus, which are visible only if the access level "operator" or "configurator" has been opened with the corresponding password.
 7. Detailed protocol configuration is done with VAMPSET.
- For NEMA, U=V.

Menu structure of protection functions

The general structure of all protection function menus is similar although the details do differ from stage to stage. As an example the details of the second overcurrent stage I>> menus are shown below.

First menu of I>> 50/51 stage

▲▼ ► I>> STATUS 50 / 51		
ExDO	Status	-
Prot	SCntr	5
I>	TCntr	2
I>>	SetGrp	1
Iv>	SGrpDI	-
Iφ>	Force	OFF

Figure 2.4: First menu of I>> 50/51 stage

This is the status, start and trip counter and setting group menu. The content is:

- Status –
The stage is not detecting any fault at the moment. The stage can also be forced to pick-up or trip if the operating level is “Configurator” and the force flag below is on. Operating levels are explained in the section Operating levels.
- SCntr 5
The stage has picked-up a fault five times since the last reset or restart. This value can be cleared if the operating level is at least “Operator”.
- TCntr 2
The stage has tripped two times since the last reset or restart. This value can be cleared if the operating level is at least “Operator”.
- SetGrp 1
The active setting group is one. This value can be edited if the operating level is at least “Operator”. Setting groups are explained in the section Setting groups.
- SGrpDI –
The setting group is not controlled by any digital input. This value can be edited if the operating level is at least “Configurator”.
- Force Off
The status forcing and output relay forcing is disabled. This force flag status can be set to “On” or back to “Off” if the operating level is at least “Configurator”. If no front panel button is pressed within five minutes and there is no VAMPSET communication, the force flag will be set to “Off” position. The forcing is explained in the section Forced control (Force).

Second menu of I>> 50/51 stage

second menu

▲▼◀▶	I>> SET	50 / 51
Stage	setting	group 1
ExDI	ILmax	403A
ExDO	Status	-
Prot	I>>	1013A
I>>	I>>	2.50xI _N
CBWE	t>>	0.60s
OBJ		

Figure 2.5: Second menu(next on the right) of I>> 50/51 stage

This is the main setting menu. The content is:

- Stage setting group 1
These are the group 1 setting values. The other setting group can be seen by pressing push buttons **OK** and then **>** or **<**. Setting groups are explained in the section Setting groups.
- ILmax 403A
The maximum of three measured phase currents is at the moment 403 A. This is the value the stage is supervising.
- Status –
Status of the stage. This is just a copy of the status value in the first menu.
- I>> 1013 A
The pick-up limit is 1013 A in primary value.
- I>> 2.50xI_N
The pick-up limit is 2.50 times the rated current of the generator. This value can be edited if the operating level is at least “Operator”. Operating levels are explained in the section Operating levels.
- t>> 0.60s
The total operation delay is set to 600 ms. This value can be edited if the operating level is at least “Operator”.

Third menu of I>> 50/51 stage

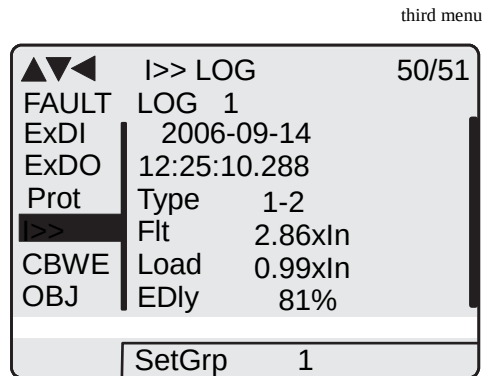


Figure 2.6: Third and last menu (next on the right) of I>> 50/51 stage

This is the menu for registered values by the I>> stage. Fault logs are explained in the section Fault logs.

- **FAULT LOG 1**
This is the latest of the eight available logs. You may move between the logs by pressing push buttons **OK** and then **>** or **<**.
- **2006-09-14**
Date of the log.
- **12:25:10.288**
Time of the log.
- **Type 1-2**
The overcurrent fault has been detected in phases A and B.
- **Flt 2.86xI_N**
The fault current has been 2.86 per unit.
- **Load 0.99xI_N**
The average load current before the fault has been 0.99 pu.
- **EDly 81%**
The elapsed operation delay has been 81% of the setting 0.60 s = 0.49 s. Any registered elapsed delay less than 100 % means that the stage has not tripped, because the fault duration has been shorter than the delay setting.
- **SetGrp 1**
The setting group has been 1. This line can be reached by pressing **OK** and several times **▼**.

Setting groups

Most of the protection functions of the relay have two setting groups. These groups are useful for example when the network topology is changed frequently. The active group can be changed by a digital input, through remote communication or locally by using the local panel.

The active setting group of each protection function can be selected separately. Figure 2.7 shows an example where the changing of the I> setting group is handled with digital input one (SGrpDI). If the digital input is TRUE, the active setting group is group two and correspondingly, the active group is group one, if the digital input is FALSE. If no digital input is selected (SGrpDI = -), the active group can be selected by changing the value of the parameter SetGrp.

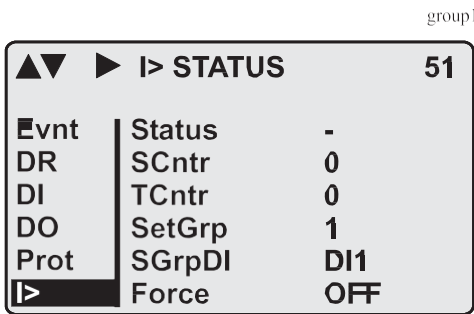


Figure 2.7: Example of protection submenu with setting group parameters

The changing of the setting parameters can be done easily. When the desired submenu has been found (with the arrow keys), press **OK** to select the submenu. Now the selected setting group is indicated in the down-left corner of the display (See Figure 2.8). Set1 is setting group one and Set2 is setting group two. When the needed changes, to the selected setting group, have been done, press **>** or **<** to select another group (**<** is used when the active setting group is 2 and **>** is used when the active setting group is 1).

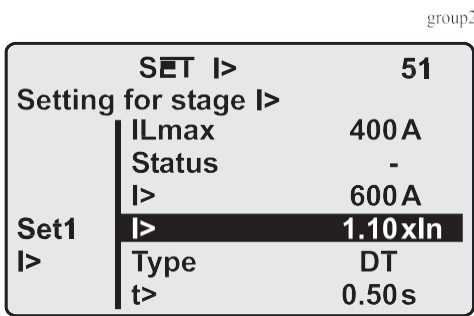


Figure 2.8: Example of I> setting submenu

Fault logs

All the protection functions include fault logs. The fault log of a function can register up to eight different faults with time stamp information, fault values etc. The fault logs are stored in non-volatile memory. Each function has its own logs. The fault logs are not cleared when power is switched off. The user is able to clear all logs using VAMPSET. Each function has its own logs (Figure 2.9).

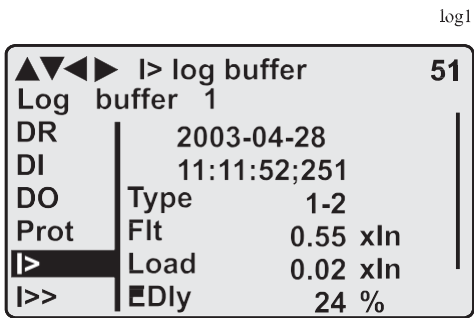


Figure 2.9: Example of fault log

To see the values of, for example, log two, press then **OK** to select the current log (log one). The current log number is then indicated in the down-left corner of the display (See Figure 2.10, Log2 = log two). The log two is selected by pressing **>** once.

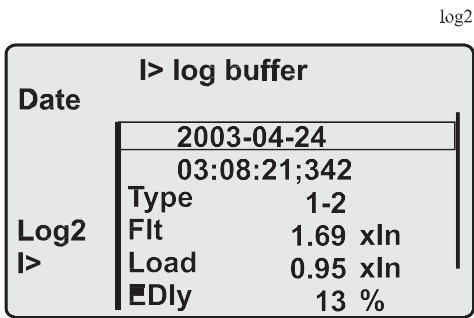


Figure 2.10: Example of selected fault log

Operating levels

The relay has three operating levels: User level, Operator level and Configurator level. The purpose of the access levels is to help prevent accidental change of relay configurations, parameters or settings.

USER level

Use:	Possible to read e.g. parameter values, measurements and events
Opening:	Level permanently open
Closing:	Closing not possible

OPERATOR level

Use:	Possible to control objects and to change e.g. the settings of the protection stages
Opening:	Default password is 1*
Setting state:	Push 
Closing:	The level is automatically closed after 10 minutes idle time. Giving the password 9999 can also close the level.

CONFIGURATOR level

Use:	The configurator level is needed during the commissioning of the relay. E.g. the scaling of the voltage and current transformers can be set.
Opening:	Default password is 2*
Setting state:	Push 
Closing:	The level is automatically closed after 10 minutes idle time. Giving the password 9999 can also close the level.

* Please note: Schneider Electric recommends changing the default password and saving for future use.

Opening access

- 1. Push  and  on the front panel

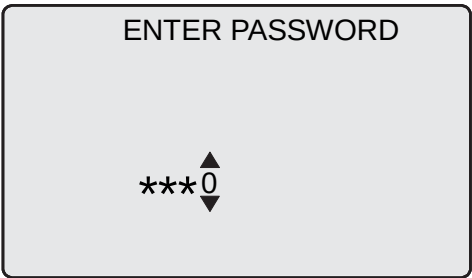


Figure 2.11: Opening the access level

- 2. Enter the password needed for the desired level: the password can contain four digits. The digits are supplied one by one by first moving to the position of the digit using  and then setting the desired digit value using .
- 3. Push .

Password handling

The passwords can only be changed using VAMPSET software connected to the local RS-232 port on the relay.

It is possible to restore the password(s) in case the password is lost or forgotten. In order to restore the password(s), a relay program is needed. The virtual serial port settings are 38400 bps, 8 data bits, no parity and one stop bit. The bit rate is configurable via the front panel.

Command	Description
get pwd_break	Get the break code (Example: 6569403)
get serno	Get the serial number of the relay (Example: 12345)

Send both the numbers to your nearest Schneider Electric Customer Care Center and ask for a password break. A device specific break code is sent back to you. That code will be valid for the next two weeks.

Command	Description
set pwd_break=4435876	Restore the factory default passwords ("4435876" is just an example. The actual code should be asked from your nearest Schneider Electric Customer Care Center.)

Now the passwords are restored to the default values (See Operating levels).

Operating measures

Control functions

The default display of the local panel is a single-line diagram including relay identification, Local/Remote indication, Auto-reclose on/off selection and selected analog measurement values.

Please note the following:

- the control functions directly control the contacts assigned to it and will operate the equipment attached to it.
- the operator password must be active in order to be able to control the objects. Please refer to Opening access.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Remove the cause of the event that resulted in the latched output relay.

Failure to follow these instructions will result in death, serious injury, or equipment damage.

Toggleing Local/Remote control

NOTE: If the relay is in local mode, the remote commands are rejected.

1. Push **OK**. The previously activated object starts to blink.
2. Select the Local/Remote object (the letters "L" or "R" with a square box around the letter) by using arrow keys.
3. Push **OK**. The L/R dialog opens. Select "REMOTE" to enable remote control and disable local control. Select "LOCAL" to enable local control and disable remote control.
4. Confirm the setting by pushing **OK**. The Local/Remote state will change.

Object control

1. Push **OK**. The previously activated object starts to blink.
2. Select the object to control by using arrow keys. Please note that only controllable objects can be selected.
3. Push **OK**. A control dialog opens.
4. Select the “Open” or “Close” command by using the **△** or **▽**.
5. Confirm the operation by pushing **OK**. The state of the object changes.

Toggling virtual inputs

1. Push **OK**. The previously activated object starts to blink.
2. Select the virtual input object (empty or black square)
3. The dialog opens
4. Select “Vlon” to activate the virtual input or select “Vloff” to deactivate the virtual input

Measured data

The measured values can be read from the P*, E*, I and U* menus and their submenus. Furthermore, any measurement value in the following table can be displayed on the main view next to the single line diagram. Up to six measurements can be shown.

Value	Menu/Submenu	Description
P	P/POWER	Active power [kW]
Q	P/POWER	Reactive power [kvar]
S	P/POWER	Apparent power [kVA]
φ	P/POWER	Active power angle [°]
P.F.	P/POWER	Power factor []
f	P/POWER	Frequency [Hz]
Pda	P/15 MIN POWER	Active power [kW] *
Qda	P/15 MIN POWER	Reactive power [kvar] *
Sda	P/15 MIN POWER	Apparent power [kVA] *
Pfda	P/15 MIN POWER	Power factor [] *
fda	P/15 MIN POWER	Frequency [Hz] *
PL1	P/POWER/PHASE 1	Active power of phase A [kW]
PL2	P/POWER/PHASE 1	Active power of phase B [kW]
PL3	P/POWER/PHASE 1	Active power of phase C [kW]
QL1	P/POWER/PHASE 1	Reactive power of phase A [kvar]
QL2	P/POWER/PHASE 1	Reactive power of phase B [kvar]
QL3	P/POWER/PHASE 1	Reactive power of phase C [kvar]
SL1	P/POWER/PHASE 2	Apparent power of phase A [kVA]
SL2	P/POWER/PHASE 2	Apparent power of phase B [kVA]
SL3	P/POWER/PHASE 2	Apparent power of phase C [kVA]
PF_L1	P/POWER/PHASE 2	Power factor of phase A []
PF_L2	P/POWER/PHASE 2	Power factor of phase B []
PF_L3	P/POWER/PHASE 2	Power factor of phase C []
cos	P/COS & TAN	Cosine phi []
tan	P/COS & TAN	Tangent phi []
cosL1	P/COS & TAN	Cosine phi of phase A []
cosL2	P/COS & TAN	Cosine phi of phase B []
cosL3	P/COS & TAN	Cosine phi of phase C []
Iseq	P/PHASE SEQUENCIES	Actual current phase sequency [OK; Reverse; ??]
Useq	P/PHASE SEQUENCIES	Actual voltage phase sequency [OK; Reverse; ??]
Io φ	P/PHASE SEQUENCIES	Io/Vo angle [°]
Io2 φ	P/PHASE SEQUENCIES	Io2/Vo angle [°]
fAdop	P/PHASE SEQUENCIES	Adopted frequency [Hz]
E+	E/ENERGY	Exported energy [MWh]
Eq+	E/ENERGY	Exported reactive energy [Mvar]
E-	E/ENERGY	Imported energy [MWh]

Value	Menu/Submenu	Description
Eq-	E/ENERGY	Imported reactive energy [Mvar]
E+.nn	E/DECIMAL COUNT	Decimals of exported energy []
Eq.nn	E/DECIMAL COUNT	Decimals of reactive energy []
E-.nn	E/DECIMAL COUNT	Decimals of imported energy []
Ewrap	E/DECIMAL COUNT	Energy control
E+	E/E-PULSE SIZES	Pulse size of exported energy [kWh]
Eq+	E/E-PULSE SIZES	Pulse size of exported reactive energy [kvar]
E-	E/E-PULSE SIZES	Pulse size of imported energy [kWh]
Eq-	E/E-PULSE SIZES	Pulse duration of imported reactive energy [ms]
E+	E/E-PULSE DURATION	Pulse duration of exported energy [ms]
Eq+	E/E-PULSE DURATION	Pulse duration of exported reactive energy [ms]
E-	E/E-PULSE DURATION	Pulse duration of imported energy [ms]
Eq-	E/E-PULSE DURATION	Pulse duration of imported reactive energy [ms]
E+	E/E-pulse TEST	Test the exported energy pulse []
Eq+	E/E-pulse TEST	Test the exported reactive energy []
E-	E/E-pulse TEST	Test the imported energy []
Eq-	E/E-pulse TEST	Test the imported reactive energy []
IL1 [♦]	I/PHASE CURRENTS	Phase current ILA [A]
IL2 [♦]	I/PHASE CURRENTS	Phase current ILB [A]
IL3 [♦]	I/PHASE CURRENTS	Phase current ILC [A]
IL1da	I/PHASE CURRENTS	15 min average for A [A]
IL2da	I/PHASE CURRENTS	15 min average for B [A]
IL3da	I/PHASE CURRENTS	15 min average for C [A]
Io	I/SYMMETRIC CURRENTS	Primary value of zero-sequence/ residual current Io [A]
Io2	I/SYMMETRIC CURRENTS	Primary value of zero-sequence/residual current Io2 [A]
IoC	I/SYMMETRIC CURRENTS	Calculated Io [A]
I1	I/SYMMETRIC CURRENTS	Positive sequence current [A]
I2	I/SYMMETRIC CURRENTS	Negative sequence current [A]
I2/I1	I/SYMMETRIC CURRENTS	Negative sequence current related to positive sequence current (for unbalance protection) [%]
THDIL	I/HARM. DISTORTION	Total harmonic distortion of the mean value of phase currents [%]
THDIL1	I/HARM. DISTORTION	Total harmonic distortion of phase current A [%]
THDIL2	I/HARM. DISTORTION	Total harmonic distortion of phase current B [%]
THDIL3	I/HARM. DISTORTION	Total harmonic distortion of phase current C [%]
Diagram	I/HARMONICS of IL1	Harmonics of phase current A [%] (See Figure 2.12)
Diagram	I/HARMONICS of IL2	Harmonics of phase current B [%] (See Figure 2.12)
Diagram	I/HARMONICS of IL3	Harmonics of phase current C [%] (See Figure 2.12)
Uline	U/LINE VOLTAGES	Average value for the three line voltages [V]
U12	U/LINE VOLTAGES	Phase-to-phase voltage V12 [V]
U23	U/LINE VOLTAGES	Phase-to-phase voltage V23 [V]
U31	U/LINE VOLTAGES	Phase-to-phase voltage V31 [V]
UL	U/PHASE VOLTAGES	Average for the three phase voltages [V]

Value	Menu/Submenu	Description
UL1	U/PHASE VOLTAGES	Phase-to-ground voltage [VA]
UL2	U/PHASE VOLTAGES	Phase-to-ground voltage [VB]
UL3	U/PHASE VOLTAGES	Phase-to-ground voltage [VC]
Uo	U/SYMMETRIC VOLTAGES	Residual voltage Vo [%]
U1	U/SYMMETRIC VOLTAGES	Positive sequence voltage [%]
U2	U/SYMMETRIC VOLTAGES	Negative sequence voltage [%]
U2/U1	U/SYMMETRIC VOLTAGES	Negative sequence voltage related to positive sequence voltage [%]
THDU	U/HARM. DISTORTION	Total harmonic distortion of the mean value of voltages [%]
THDUa	U/HARM. DISTORTION	Total harmonic distortion of the voltage input a [%]
THDUb	U/HARM. DISTORTION	Total harmonic distortion of the voltage input b [%]
THDUc	U/HARM. DISTORTION	Total harmonic distortion of the voltage input c [%]
Diagram	U/HARMONICS of Ua	Harmonics of voltage input Ua [%] (See Figure 2.12)
Diagram	U/HARMONICS of Ub	Harmonics of voltage input Ub [%] (See Figure 2.12)
Diagram	U/HARMONICS of Uc	Harmonics of voltage input Uc [%] (See Figure 2.12)
Count	U/VOLT. INTERRUPTS	Voltage interrupts counter []
Prev	U/VOLT. INTERRUPTS	Previous interruption []
Total	U/VOLT. INTERRUPTS	Total duration of voltage interruptions [days, hours]
Prev	U/VOLT. INTERRUPTS	Duration of previous interruption [s]
Status	U/VOLT. INTERRUPTS	Voltage status [LOW; NORMAL]

*) The depth of the window can be selected

♦ L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

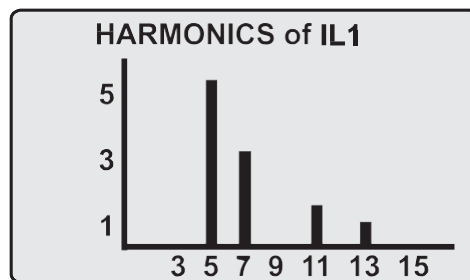


Figure 2.12: Example of harmonics bar display

Reading event register

The event register can be read from the Evnt submenu:

1. Push  once.
2. The EVENT LIST appears. The display contains a list of all the events that have been configured to be included in the event register.

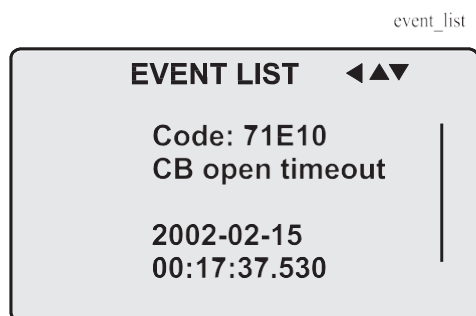


Figure 2.13: Example of an event register

3. Scroll through the event list with the  and .
4. Exit the event list by pushing .

It is possible to set the order in which the events are sorted. If the "Order" -parameter is set to "New-Old", then the first event in the EVENT LIST is the most recent event.

Forced control (Force)

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Forcing a contact should only be used while testing and not in real time. All interlocking and blockings are bypassed when the forced control is used. This should only be done with full awareness of the consequences of the action.

Failure to follow these instructions will result in death, serious injury, or equipment damage.

In some menus it is possible to switch a function on and off by using a force function. This feature should be used for testing a certain function. The force function can be activated as follows:

1. Move to the setting state of the desired function, for example DO (see Configuration and parameter setting)
2. Select the Force function (the background color of the force text is black).

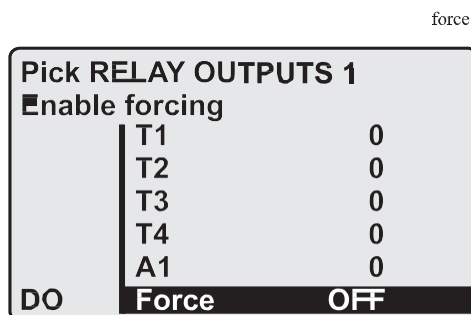


Figure 2.14: Selecting Force function

3. Push **OK**.
4. Push the **△** or **▽** to change the "OFF" text to "ON", that is, to activate the Force function.
5. Push **OK** to return to the selection list. Choose the signal to be controlled by force with the **△** and **▽**, for instance the T1 signal.
6. Push **OK** to confirm the selection. Signal T1 can now be controlled by force.
7. Push the **△** or **▽** to change the selection from "0" (not alert) to "1" (alert) or vice versa.

8. Push  to execute the forced control operation of the selected function, e.g., making the output relay of T1 to pick up.
9. Repeat the steps 7 and 8 to alternate between the on and off state of the function.
10. Repeat the steps 1 – 4 to exit the Force function.
11. Push  to return to the main menu.

Configuration and parameter setting

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Ensure the relay has the necessary programming and settings to adequately protect the system.

Failure to follow these instructions will result in death, serious injury, or equipment damage.

The minimum procedure to configure a relay is as follows:

1. Open the access level "Configurator". The default password for configurator access level is 2.
2. Set the rated values in menu [CONF] including at least current transformers, voltage transformers and motor ratings if applicable. Also the date and time settings are in this same main menu.
3. Enable the needed protection functions and disable the rest of the protection functions in main menu [Prot].
4. Set the setting parameter of the enable protection stages according the application.
5. Connect the output relays to the start and trip signals of the enabled protection stages using the output matrix. This can be done in main menu [DO], although the VAMPSET program is recommended for output matrix editing.
6. Configure the needed digital inputs in main menu [DI].
7. Configure blocking and interlockings for protection stages using the block matrix. This can be done in main menu [Prot], although VAMPSET is recommended for block matrix editing.

Some of the parameters can only be changed via the RS-232 serial port using the VAMPSET software. Such parameters, (for example passwords, blockings and mimic configuration) are normally set only during commissioning.

Some of the parameters require the restarting of the relay. This restarting is done automatically when necessary. If a parameter change requires restarting, the display will show as Figure 2.15.

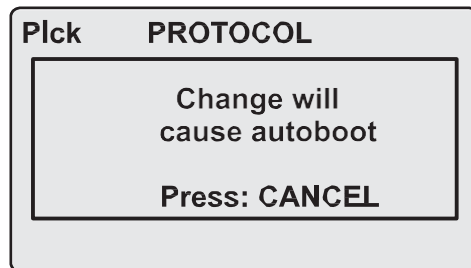


Figure 2.15: Example of auto-reset display

Press  to return to the setting view. If a parameter must be changed, press **OK** again. The parameter can now be set. When the parameter change is confirmed with **OK**, a [RESTART]- text appears to the top-right corner of the display. This means that auto-resetting is pending. If no key is pressed, the auto-reset will be executed within few seconds.

Parameter setting

1. Move to the setting state of the desired menu (for example CONF/CURRENT SCALING) by pushing **OK**. The Pick text appears in the upper-left part of the display.
2. Enter the password associated with the configuration level by pushing **i** and then using the arrow keys and **OK** (default value is 0002). For more information about the access levels, please refer to the section Fault logs.
3. Scroll through the parameters using the **▲** and **▼**. A parameter can be set if the background color of the line is black. If the parameter cannot be set the parameter is framed.
4. Select the desired parameter (for example Inom) with **OK**.
5. Use the **▲** and **▼** keys to change a parameter value. If the value contains more than one digit, use the **➤** and **➤** keys to shift from digit to digit, and the **▲** and **▼** keys to change the digits.
6. Push **OK** to accept a new value. If you want to leave the parameter value unchanged, exit the edit state by pushing .

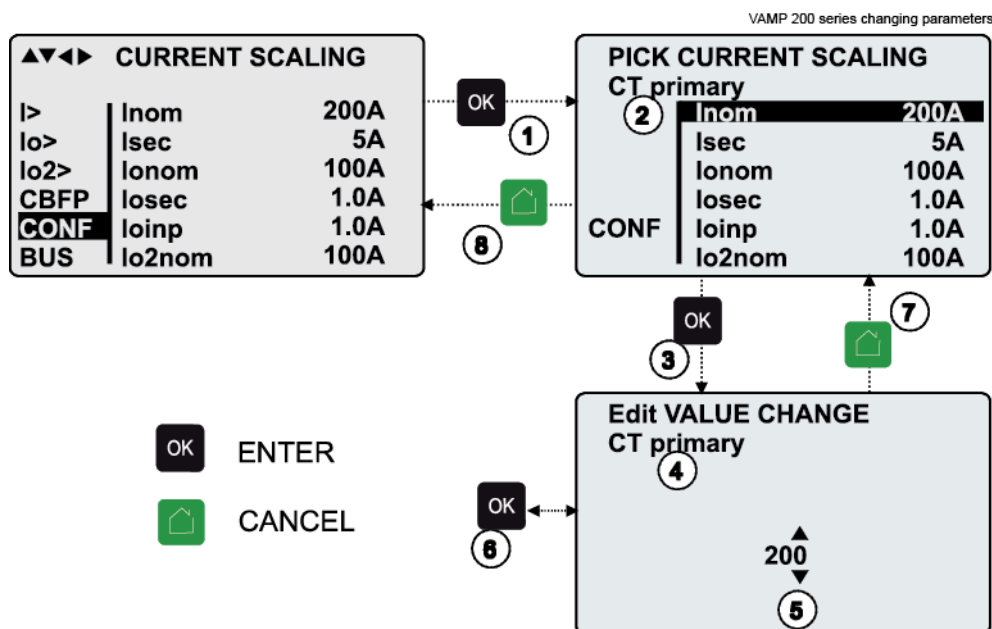


Figure 2.16: Changing parameters

Setting range limits

If the given parameter setting values are out-of-range values, a message noting the out of range condition will be shown when the setting is confirmed with **OK**. Adjust the setting to be within the allowed range.

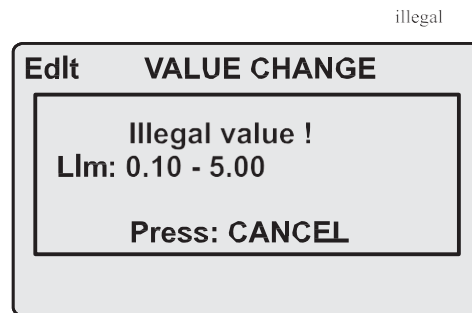


Figure 2.17: Example of an out of range message

The allowed setting range is shown in the display in the setting mode.

To view the range, push . Push  to return to the setting mode.

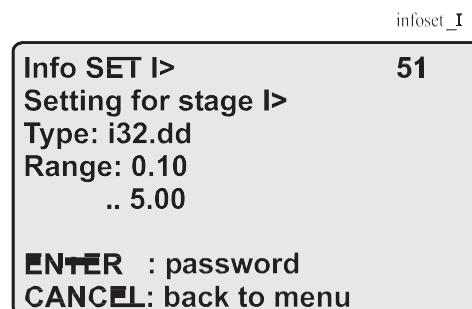


Figure 2.18: Allowed setting ranges show in the display

Disturbance recorder menu DR

Via the submenus of the disturbance recorder menu the following functions and features can be read and set:

Disturbance recorder

1. Recording mode (Mode)
2. Sample rate (Rate)
3. Recording time (Time)
4. Pre trig time (PreTrig)
5. Manual trigger (MnITrig)
6. Count of ready records (ReadyRe)

Rec. coupling

1. Add a link to the recorder (AddLink)
2. Clear all links (ClrLnks)

Available links

1. DO, DI
2. IL
3. I2/In, I2/I1, I2, I1, IoCalc
4. f
5. IL3, IL2, IL1 (For NEMA, phases are as follows: L1=A, L2=B, L3=C)
6. THDIL1, THDIL2, THDIL3
7. IL1RMS, IL2RMS, IL3RMS
8. Uo (For NEMA, U=V)
9. Uline, Uphase
10. U2/U1, U2, U1 (For NEMA, U=V)
11. UL3, UL2, UL1
12. U31, U23, U12 (For NEMA, U=V)
13. CosFii
14. PF, S, Q, P
15. Io2, Io1
16. Prms, Qrms, Srms
17. Tanfii
18. THDUa, THDUb, THDUc
19. ILmin, ILmax, ULLmin, ULLmax, ULNmin, ULNmax
20. fy, fz, U12y, U12z

Configuring digital inputs DI

The following functions can be read and set via the submenus of the digital inputs menu:

1. The status of digital inputs (DIGITAL INPUTS 1-6/18)
2. Operation counters (DI COUNTERS)
3. Operation delay (DELAYS for DigIn)
4. The polarity of the input signal (INPUT POLARITY). Either normally open (NO) or normally closed (NC) circuit.
5. Event enabling EVENT MASK1

Configuring digital outputs DO

The following functions can be read and set via the submenus of the digital outputs menu:

- The status of the output relays (RELAY OUTPUTS1 and 2)
- The forcing of the output relays (RELAY OUTPUTS1 and 2) (only if Force = ON):
 - Forced control (0 or 1) of the Trip relays
 - Forced control (0 or 1) of the Alarm relays
 - Forced control (0 or 1) of the SF relay
- The configuration of the output signals to the output relays. The configuration of the operation indicators (LED) Alarm and Trip and application specific alarm LEDs A, B and C (that is, the output relay matrix).

NOTE: The amount of Trip and Alarm relays depends on the relay type and optional hardware.

Protection menu Prot

The following functions can be read and set via the submenus of the Prot menu:

1. Reset all the counters (PROTECTION SET/CIAll)
2. Read the status of all the protection functions (PROTECT STATUS 1 – x)
3. Enable and disable protection functions (ENABLED STAGES 1 – x)
4. Define the interlockings using block matrix (only with VAMPSET).

Each stage of the protection functions can be disabled or enabled individually in the Prot menu. When a stage is enabled, it will be in operation immediately without a need to reset the relay.

The relay includes several protection functions. However, the processor capacity limits the number of protection functions that can be active at the same time.

Configuration menu CONF

The following functions and features can be read and set via the submenus of the configuration menu:

Device setup

- Bit rate for the command line interface in ports X4 and the front panel. The front panel is always using this setting. If SPABUS is selected for the rear panel local port X4, the bit rate is according SPABUS settings.

- Access level [Acc]

Language

- List of available languages in the relay

Current scaling

- Rated phase CT primary current (I_{nom})
- Rated phase CT secondary current (I_{sec})
- Rated input of the relay [I_{inp}]. 5 A or 1 A. This is specified in the order code of the device.
- Rated value of I_{01} CT primary current (I_{01nom})
- Rated value of I_{01} CT secondary current (I_{01sec})
- Rated I_{01} input of the relay [I_{01inp}]. 5 A or 1 A. This is specified in the order code of the device.
- Rated value of I_{02} CT primary current (I_{02nom})
- Rated value of I_{02} CT secondary current (I_{02sec})
- Rated I_{02} input of the relay [I_{02inp}]. 5A, 1 A or 0.2 A. This is specified in the order code of the device.

The rated input values are usually equal to the rated secondary value of the CT.

The rated CT secondary may be greater than the rated input but the continuous current must be less than four times the rated input. In compensated, high impedance grounded and isolated networks using cable transformer to measure residual current I_0 , it is quite usual to use a relay with 1 A or 0.2 A input although the CT is 5 A or 1A. This increases the measurement accuracy.

The rated CT secondary may also be less than the rated input but the measurement accuracy near zero current will decrease.

Voltage scaling

- Rated VT primary voltage (V_{prim})
- Rated VT secondary voltage (V_{sec})
- Rated V_0 VT secondary voltage (V_{0sec})
- Voltage measuring mode (V_{mode})

Motor setting

- Rated current of the motor (Imot).

Units for mimic display

- Unit for voltages (V). The choices are V (volt) or kV (kilovolt).
- Scaling for active, reactive and apparent power [Power]. The choices are k for kW, kvar and kVA or M for MW, Mvar and MVA.

Device info

- Relay type (Type VAMP 2xx)
- Serial number (SerN)
- Software version (PrgVer)
- Bootcode version (BootVer)

Date/time setup

- Day, month and year (Date)
- Time of day (Time)
- Date format (Style). The choices are "yyyy-mm-dd", "dd.nn.yyyy" and "mm/dd/yyyy".

Clock synchronisation

- Digital input for minute sync pulse (SyncDI). If any digital input is not used for synchronization, select "-".
- Daylight saving time for NTP synchronization (DST).
- Detected source of synchronization (SyScr).
- Synchronization message counter (MsgCnt).
- Latest synchronization deviation (Dev).

The following parameters are visible only when the access level is higher than "User".

- Offset, i.e. constant error, of the synchronization source (SyOS).
- Auto adjust interval (AAIntv).
- Average drift direction (AvDrft): "Lead" or "lag".
- Average synchronization deviation (FilDev).

Protocol menu Bus

There are three optional communication ports in the rear panel. The availability depends on the communication options (see Section 12: Order information).

In addition there is a connector in the front panel overruling the local port in the rear panel.

Remote port

- Communication protocol for remote port X5 [Protocol].
- Message counter [Msg#]. This can be used to verify that the device is receiving messages.
- Detected communication error counter [Errors].
- Detected communication time-out error counter [Tout].
- Information of bit rate/data bits/parity/stop bits. This value is not directly editable. Editing is done in the appropriate protocol setting menus.

The counters are useful when testing the communication.

Local port X4

This port is disabled, if a cable is connected to the front panel connector.

- Communication protocol for the local port X4 [Protocol]. For VAMPSET use "None" or "SPABUS".
- Message counter [Msg#]. This can be used to verify that the device is receiving messages.
- Detected communication error counter [Errors].
- Detected communication time-out error counter [Tout].
- Information of bit rate/data bits/parity/stop bits. This value is not directly editable. Editing is done in the appropriate protocol setting menus. For VAMPSET and protocol "None" the setting is done in menu CONF/DEVICE SETUP.

The counters are useful when testing the communication.

PC (Local/SPA-bus)

This is a second menu for local port X4. The VAMPSET communication status is showed.

- Bytes/size of the transmitter buffer [Tx].
- Message counter [Msg#]. This can be used to verify that the device is receiving messages.
- Detected communication error counter [Errors]
- Detected communication time-out error counter [Tout].
- Same information as in the previous menu.

Extension port (pins 7, 8 and 5)

- Communication protocol for extension port X4 [Protocol].
- Message counter [Msg#]. This can be used to verify that the device is receiving messages.
- Detected communication error counter [Errors].
- Detected communication time-out error counter [Tout].
- Information of bit rate/data bits/parity/stop bits. This value is not directly editable. Editing is done in the appropriate protocol setting menus.

Ethernet port

These parameters are used by the ethernet interface module. For changing the nnn.nnn.nnn.nnn style parameter values, VAMPSET is recommended.

- Ethernet port protocol [Protoc].
- IP Port for protocol [Port]
- IP address [IpAddr].
- Net mask [NetMsk].
- Gateway [Gatew].
- Name server [NameSw].
- Network time protocol (NTP) server [NTPSvr].
- TCP Keep alive interval [KeepAlive]
- MAC address [MAC]
- IP Port for VAMPSET [VS Port]
- Message counter [Msg#]
- Detected error counter [Errors]
- Timeout counter [Tout]

Modbus

- Modbus address for this slave device [Addr]. This address has to be unique within the system.
- Modbus bit rate [bit/s]. Default is "9600".
- Parity [Parity]. Default is "Even".

For details, see Modbus TCP and Modbus RTU.

External I/O protocol

This is a Modbus master protocol to communicate with the extension I/O modules connected to the extension port. Only one instance of this protocol is possible.

- Bit rate [bit/s]. Default is "9600".
- Parity [Parity]. Default is "Even".

For details, see External I/O (Modbus RTU master).

SPA-bus

Several instances of this protocol are possible.

- SPA-bus address for this device [Addr]. This address has to be unique within the system.
- Bit rate [bit/s]. Default is "9600".
- Event numbering style [Emode]. Default is "Channel".

For details, see SPA-bus.

IEC 60870-5-103

Only one instance of this protocol is possible.

- Address for this device [Addr]. This address has to be unique within the system.
- Bit rate [bit/s]. Default is "9600".
- Minimum measurement response interval [MeasInt].
- ASDU6 response time mode [SyncRe].

For details, see IEC 60870-5-103.

IEC 103 Disturbance recordings

For details, see Table 9.11.

Profibus

Only one instance of this protocol is possible.

- [Mode]
- Bit rate [bit/s]. Use 2400 bps. This parameter is the bit rate between the main CPU and the Profibus ASIC. The actual Profibus bit rate is automatically set by the Profibus master and can be up to 12 Mbit/s.
- Event numbering style [Emode].
- Size of the Profibus Tx buffer [InBuf].
- Size of the Profibus Rx buffer [OutBuf].
When configuring the Profibus master system, the length of these buffers are needed. The size of the both buffers is set indirectly when configuring the data items for Profibus.
- Address for this slave device [Addr]. This address has to be unique within the system.
- Profibus converter type [Conv]. If the shown type is a dash "-", either Profibus protocol has not been selected or the device has not restarted after protocol change or there is a communication problem between the main CPU and the Profibus ASIC.

For details, see Profibus DP.

DNP3

Only one instance of this protocol is possible.

- Bit rate [bit/s]. Default is "9600".
- [Parity].
- Address for this device [SlvAddr]. This address has to be unique within the system.
- Master's address [MstrAddr].

For details, see DNP 3.0.

IEC 60870-5-101

- Bit rate [bit/s]. Default is "9600".
- [Parity].
- Link layer address for this device [LLAddr].
- ASDU address [ALAddr].

For details, see IEC 60870-5-101.

Single-line diagram editing

The single-line diagram is drawn with the VAMPSET software. For more information, please refer to the VAMPSET manual (doc. no. 63230-218-207).

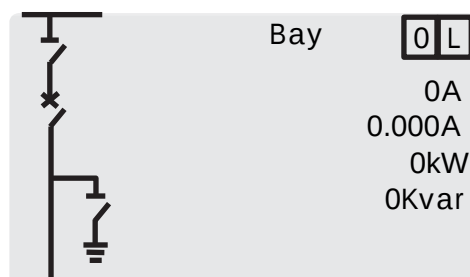


Figure 2.19: Single line diagram

Blocking and interlocking configuration (outputs only)

The configuration of the blockings and interlockings is done with the VAMPSET software. Any start or trip signal can be used for blocking the operation of any protection stage. Furthermore, the interlocking between objects can be configured in the same blocking matrix of the VAMPSET software. For more information, please refer to the VAMPSET manual (doc. no. 63230-218-207).

Section 3: VAMPSET PC software

The PC user interface can be used for:

- On-site parameterization of the relay
- Loading relay software from a computer
- Reading measured values, registered values and events to a computer.
- Continuous monitoring of all values and events.

Two RS-232 serial ports are available for connecting a local PC with VAMPSET to the relay; one on the front panel and one on the rear panel of the relay. These two serial ports are connected in parallel. However, if the connection cables are connected to both ports, only the port on the front panel will be active. To connect a PC to a serial port, use the connection cable with part no. VX 003-3.

The VAMPSET program can also use TCP/IP LAN connection. Optional hardware is required.

There is a free of charge PC program called VAMPSET available for configuration and setting of VAMP relays. Please download the latest VAMPSET.exe from www.schneider-electric.com. For more information about the VAMPSET software, please refer to the user's manual (doc. no. 63230-218-207).

Section 4: Introduction

The VAMP device, a digital (micro-processor based relay) includes all the essential protection functions needed to protect feeders and motors in distribution networks of utilities, industry, power plants and offshore applications. Further, the device includes several programmable functions, such as arc detection (option), thermal, trip circuit supervision and circuit breaker protection and communication protocols for various protection and communication situations.

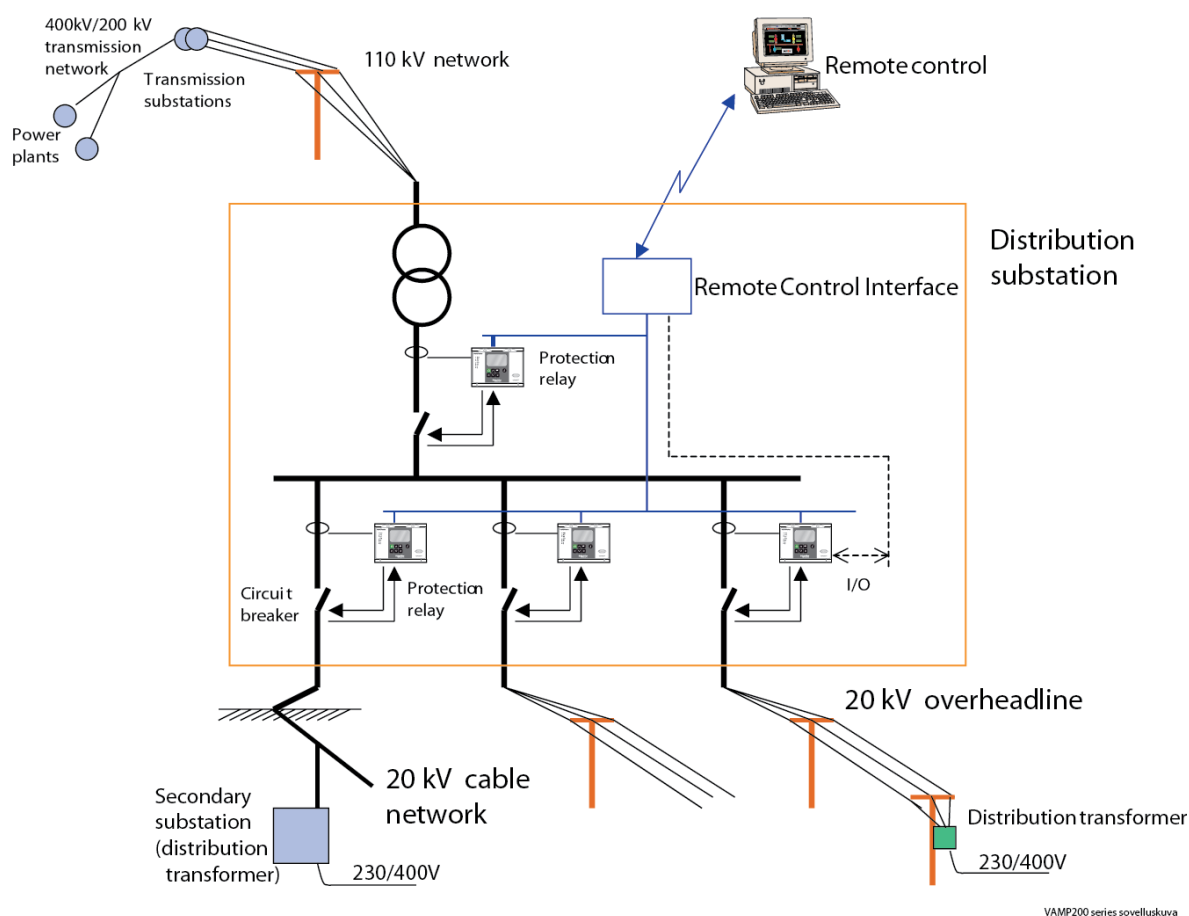


Figure 4.1: Application of the feeder and motor protection device

Main features

- Fully digital signal handling with a powerful 16-bit microprocessor, and high measuring accuracy on all the setting ranges due to an accurate 16-bit A/D conversion technique.
- Wide setting ranges for the protection functions, e.g. the ground fault protection can reach a sensitivity of 0.5%.
- Integrated fault location for short-circuit faults.
- The device can be matched to the requirements of the application by disabling the functions that are not needed.
- Flexible control and blocking possibilities due to digital signal control inputs (DI) and outputs (DO).
- Easy adaptability of the device to various substations and alarm systems due to flexible signal-grouping matrix in the device.
- Possibility to control six objects (e.g. circuit-breakers, disconnectors).
- Status of eight objects (e.g. circuit-breakers, disconnectors, switches).
- Freely configurable display with six measurement values.
- Freely configurable interlocking schemes with basic logic functions.
- Recording of events and fault values into an event register from which the data can be read via a keypad and a local HMI or by means of a PC based VAMPSET user interface.
- Latest events and indications are in non-volatile memory.
- Easy configuration, parameterisation and reading of information via local HMI, or with a VAMPSET user interface.
- Easy connection to power plant automation system due to a versatile serial connection and several available communication protocols.
- Built-in, self-regulating ac/dc converter for auxiliary power supply from any source within the range from 40 to 265 Vdc or Vac. Optional power supply for 40-265 Vac/dc or 18-36 Vdc.
- Built-in disturbance recorder for evaluating all the analog and digital signals.

Principles of numerical protection techniques

The device is fully designed using numerical technology. This means that all the signal filtering, protection and control functions are implemented through digital processing.

The numerical technique used in the device is primarily based on an adapted Fast Fourier Transformation (FFT). In FFT the number of calculations (multiplications and additions), which are required to filter out the measuring quantities, remains reasonable.

By using synchronized sampling of the measured signal (voltage or current) and a sample rate according to the 2^n series, the FFT technique leads to a solution, which can be realized with just a 16 bit micro controller, without using a separate DSP (Digital Signal Processor).

The synchronized sampling means an even number of 2^n samples per period (e.g. 32 samples per a period). This means that the frequency must be measured and the number of the samples per period must be controlled accordingly so that the number of the samples per period remains constant if the frequency changes.

Therefore, secondary testing of a brand new device should be started with voltage protection functions and voltage injection to let the relay learn the local frequency. However, if this is not possible then the frequency must be set on the device (either to 50 or 60 Hz).

Apart from the FFT calculations, some protection functions also require the symmetrical components to be calculated for obtaining the positive, negative and zero phase sequence components of the measured quantity. For example, the function of the unbalanced load protection stage is based on the use of the negative phase sequence component of the current.

Figure 4.2 shows a principle block diagram of a numerical device. The main components are the energizing inputs, digital input elements, output relays, A/D converters and the micro controller including memory circuits. Further, a device contains a power supply unit and a human-machine interface (HMI).

Figure 4.3 shows the heart of the numerical technology. That is the main block diagram for calculated functions.

Figure 4.4 shows a principle diagram of a single-phase overvoltage function.

K211

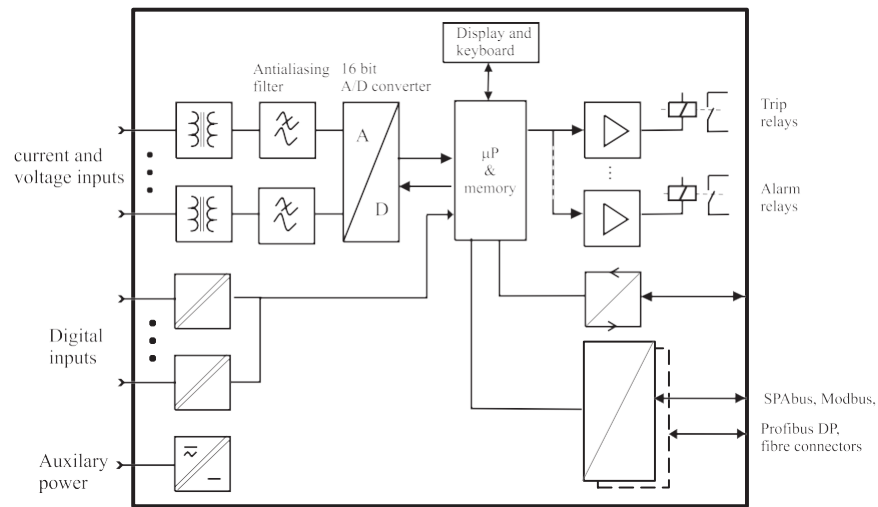


Figure 4.2: Principle block diagram of the VAMP hardware

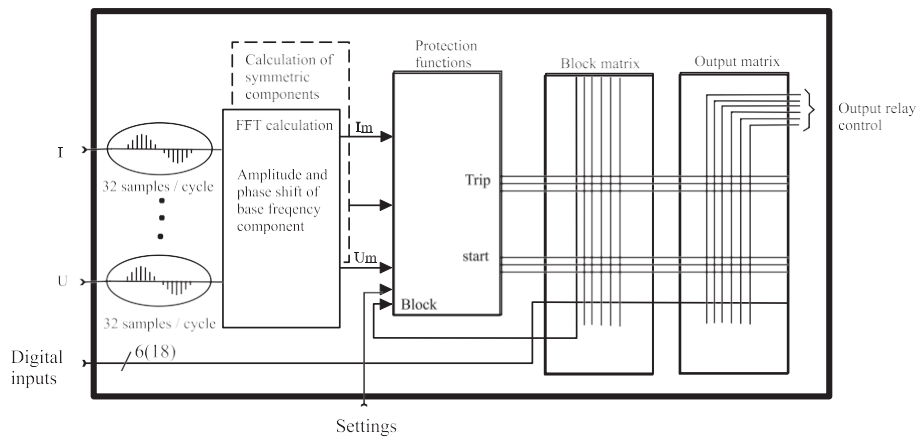


Figure 4.3: Block diagram of signal processing and protection software

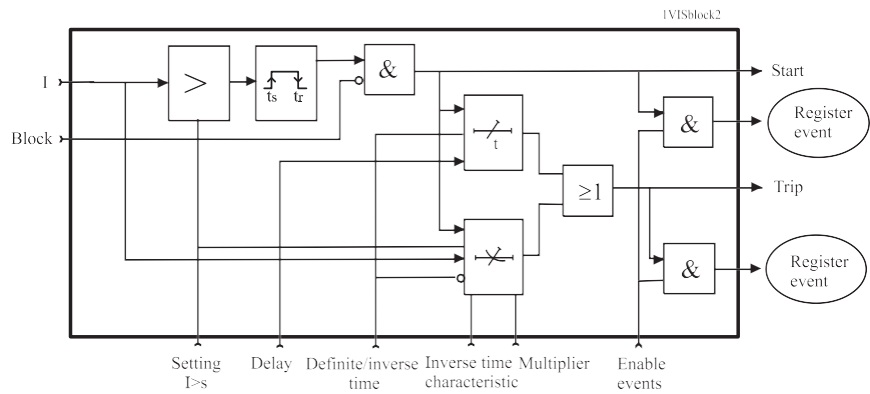


Figure 4.4: Block diagram of a basic protection function

Section 5: Protection functions

Each protection stage can be independently enabled or disabled according to the requirements of the intended application.

Maximum number of protection stages in one application

The device limits the maximum number of enabled stages to about 30, depending of the type of the stages.

For more information, please see the configuration instructions in the section Configuration and parameter setting.

General features of protection stages

Setting groups

Most stages have two setting groups. Changing between setting groups can be controlled manually or using any of the digital inputs, virtual inputs, virtual outputs or LED indicator signals. By using virtual I/O the active setting group can be controlled using the local panel display, any communication protocol or using the built-in programmable logic functions.

Forcing start or trip condition for testing

The status of a protection stage can be one of the followings:

- Ok = '-'
The stage is idle and is measuring the analog quantity for the protection. No fault detected.
- Blocked
The stage is detecting a fault but blocked by some reason.
- Start
The stage is counting the operation delay.
- Trip
The stage has tripped and the fault is still on.

The blocking reason may be an active signal via the block matrix from other stages, the programmable logic or any digital input. Some stages also have built-in blocking logic. For more details about block matrix, see Blocking matrix.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Forcing a contact should only be used while testing and not in real time. All interlocking and blockings are bypassed when the forced control is used. This should only be done with full awareness of the consequences of the action.


Failure to follow these instructions will result in death, serious injury, or equipment damage.

There is a "Force flag" parameter which, when activated, allows forcing the status of any protection stage to be "start" or "trip" for a half second. By using this forcing feature any current or voltage injection to the device is not necessary to check the output matrix configuration, to check the wiring from the output relays to the circuit breaker and also to check that communication protocols are correctly transferring event information to a SCADA system.

After testing the force flag will automatically reset 5-minutes after the last local panel push button activity.

The force flag also enables forcing of the output relays and forcing the optional mA outputs.

Force flag can be found in relays menu.

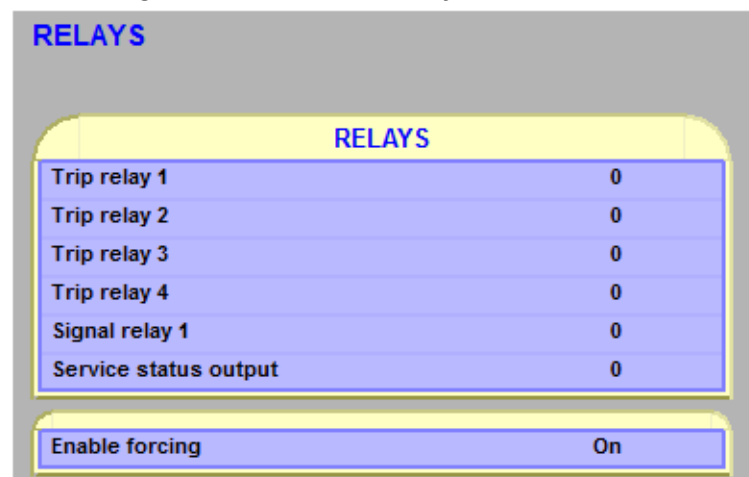

Start and trip signals

Every protection stage has two internal binary output signals: start and trip. The start signal is issued when a fault has been detected. The trip signal is issued after the configured operation delay unless the fault disappears before the end of the delay time.

Output matrix

Using the output matrix the user connects the internal start and trip signals to the output relays and indicators. For more details, see

Output matrix.

Blocking

Any protection function, except arc detection, can be blocked with internal and external signals using the block matrix (the section Blocking matrix). Internal signals are for example logic outputs and start and trip signals from other stages and external signals are for example digital and virtual inputs.

Some protection stages also have built-in blocking functions. For example under-frequency protection has built-in under-voltage blocking to avoid tripping when the voltage is off.

When a protection stage is blocked, it won't pick-up in case a fault condition is detected. If blocking is activated during the operation delay, the delay counting is frozen until the blocking goes off or the pick-up reason, i.e. the fault condition, disappears. If the stage is already tripping, the blocking has no effect.

Retardation time

Retardation time is the time a protection relay needs to detect that a fault has been cleared during the operation time delay. This parameter is important when calculating the operation time delay settings between relays.

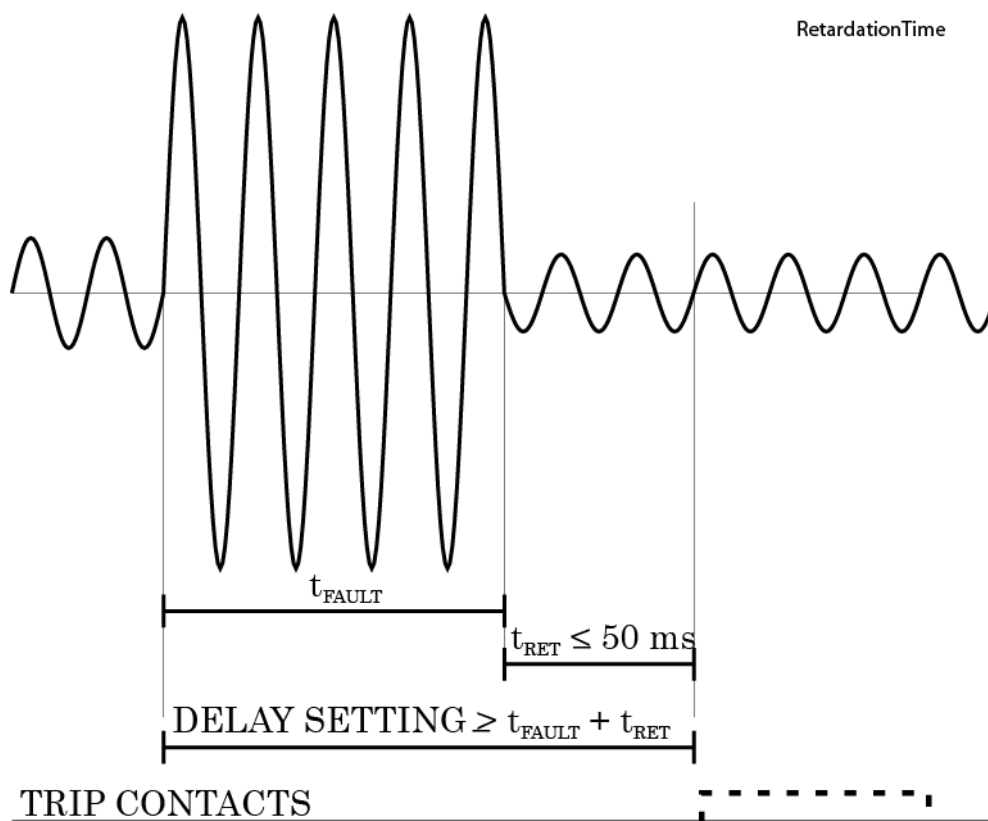


Figure 5.1: Definition for retardation time. If the delay setting would be slightly shorter, an unselective trip might occur (the dash line pulse).

For example when there is a high fault in an outgoing feeder, it might pick-up both the incoming and outgoing feeder relay. However the fault must be cleared by the outgoing feeder relay and the incoming feeder relay must not trip. Although the operating delay setting of the incoming feeder is more than at the outgoing feeder, the incoming feeder might still trip, if the operation time difference is not big enough. The difference must be more than the retardation time of the incoming feeder relay plus the operating time of the outgoing feeder circuit breaker.

Figure 5.1 shows an overvoltage fault seen by the incoming feeder, when the outgoing feeder does clear the fault. If the operation delay setting would be slightly shorter or if the fault duration would be slightly longer than in the figure, a nuisance trip might happen (the dashed 40 ms pulse in the figure). In VAMP devices the retardation time is less than 50 ms.

Reset time (release time)

Figure 5.2 shows an example of reset time i.e. release time, when the relay is clearing an overcurrent fault. When the relay's trip contacts are closed, the circuit breaker (CB) starts to open. After the CB contacts are open, the fault current will still flow through an arc between the opened contacts. The current is finally stopped when the arc extinguishes at the next zero crossing of the current. This is the start moment of the reset delay. After the reset delay, the trip contacts and start contact are opened unless latching is configured. The precise reset time depends on the intensity of the fault; the more intense the fault is, the slower the reset time will be. The reset time also depends on the specific protection stage.

The maximum reset time for each stage is specified in section Protection functions. For most stages it is less than 95 ms.

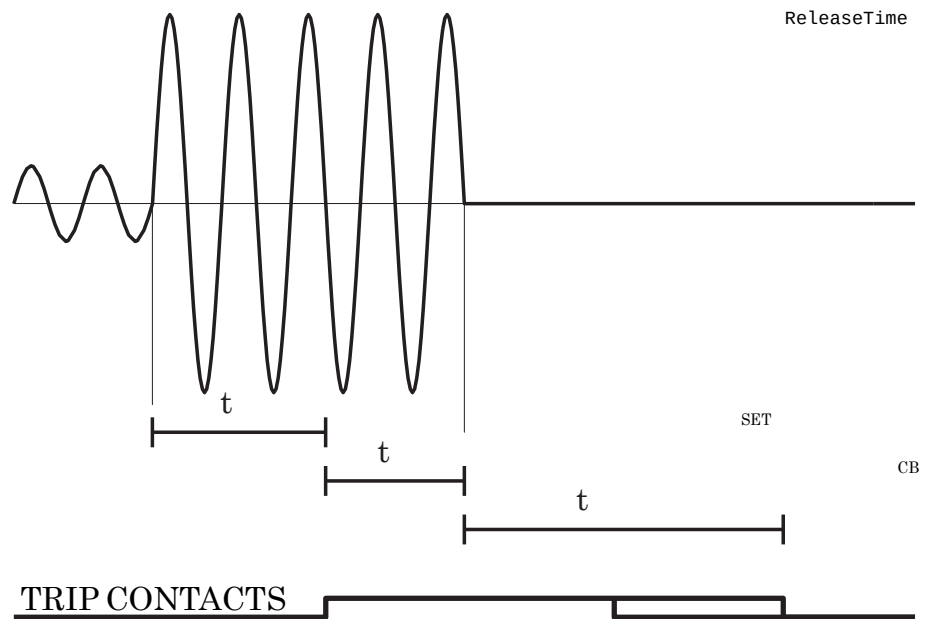


Figure 5.2: Reset time is the time it takes the trip or start relay contacts to open after the fault has been cleared.

Hysteresis or dead band

When comparing a measured value against a pick-up value, some amount of hysteresis is needed to avoid oscillation near equilibrium situation. With zero hysteresis any noise in the measured signal or any noise in the measurement itself would cause unwanted oscillation between fault-on and fault-off situations.

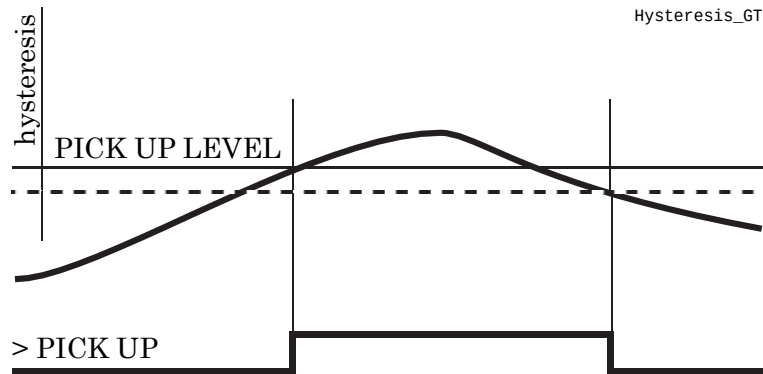


Figure 5.3: Behavior of a greater than comparator. For example in overvoltage stages the hysteresis (dead band) acts according this figure.

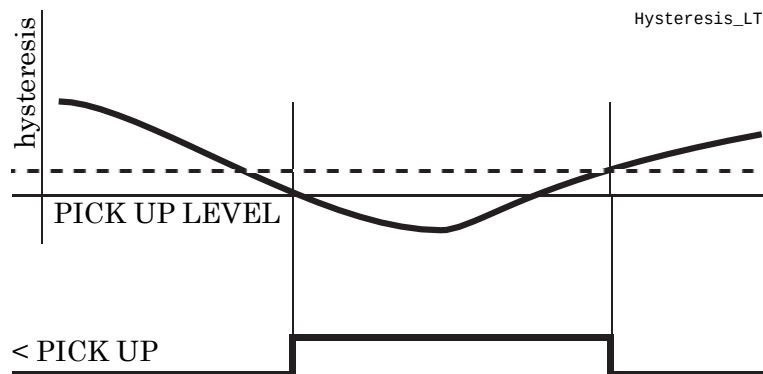


Figure 5.4: Behavior of a less than comparator. For example in under-voltage and under frequency stages the hysteresis (dead band) acts according this figure.

Application modes

The application modes available are the feeder protection mode and the motor protection mode. In the feeder protection mode all current dependent protection functions are relative to nominal current (I_n) derived by CT ratios. The motor protection functions are unavailable in the feeder protection mode. In the motor protection mode all current dependent protection functions are relative to motor's nominal current (I_{mot}). The motor protection mode enables motor protection functions. All functions which are available in the feeder protection mode are also available in the motor protection mode. Default value of the application mode is the feeder protection mode.

The application mode can be changed with VAMPSET software or from CONF menu of the device. Changing the application mode requires configurator password.

Current protection function dependencies

The current based protection functions are relative to I_{MODE} , which is dependent of the application mode. In the motor, protection mode all of the current based functions are relative to I_{MOT} and in the feeder protection mode to I_N with the following exceptions.

$I_2>$ (46), $I_2>>$ (47), $I_{ST}>$ (48), $N>$ (66) are always dependent on I_{MOT} and they are only available when application mode is in the motor protection.

Overcurrent protection I> (50/51)

Overcurrent protection is used against short circuit faults and overloads.

The overcurrent function measures the fundamental frequency component of the phase currents. The protection is sensitive for the highest of the three phase currents. Whenever this value exceeds the user's pick-up setting of a particular stage, this stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation delay setting, a trip signal is issued, and the operation delay timer starts when the start signal is issued.

Three independent stages

There are three separately adjustable overcurrent stages: $I>$, $I>>$ and $I>>>$. The first stage $I>$ can be configured for definite time (DT) or inverse time operation characteristic (IDMT). The stages $I>>$ and $I>>>$ have definite time operation characteristic. By using the definite delay type and setting the delay to its minimum, an instantaneous (ANSI 50) operation is obtained.

Figure 5.5 shows a functional block diagram of the $I>$ overcurrent stage with definite time and inverse time operation time. Figure 5.6 shows a functional block diagram of the $I>>$ and $I>>>$ overcurrent stages with definite time operation delay.

Inverse operation time

Inverse delay means that the operation time depends on the amount that the measured current exceeds the pick-up setting. The more intense the fault current is the faster will be the operation.

Accomplished inverse delays are available for the $I>$ stage. The inverse delay types are described in the section Inverse time operation. The device will show the currently used inverse delay curve graph on the local panel display.

Inverse time limitation

The maximum measured secondary current is $50 \times I_N$. This limits the scope of inverse curves with high pick-up settings. See Inverse time operation for more information.

Cold load and inrush current handling

See Cold load pick-up and inrush current detection.

Setting groups

There are two settings groups available for each stage. Switching between setting groups can be controlled by digital inputs, virtual inputs (communication, logic) and manually.

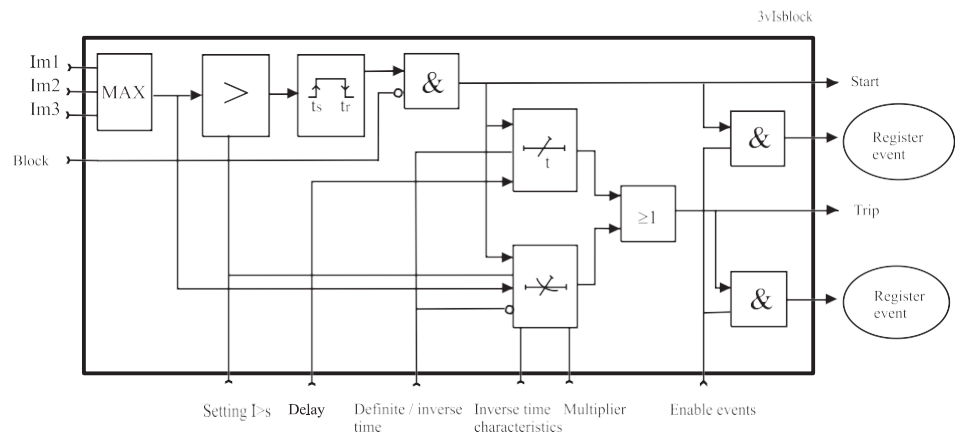


Figure 5.5: Block diagram of the three-phase overcurrent stage I>.

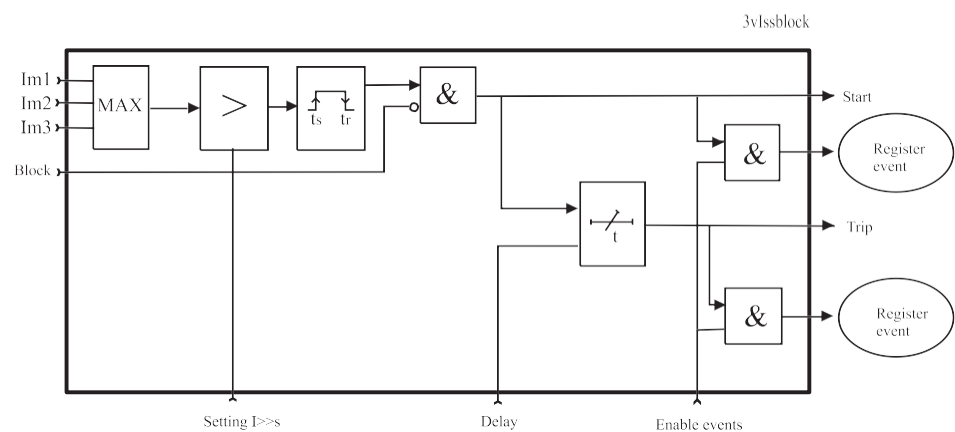


Figure 5.6: Block diagram of the three-phase overcurrent stage I>> and I>>>.

Table 5.1: Parameters of the overcurrent stage I> (50/51)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	 F F
TripTime		s	Estimated time to trip	
SCntr			Cumulative start counter	Clr
TCntr			Cumulative trip counter	Clr
SetGrp	1 or 2		Active setting group	Set
SGrpDI	- DIx VIx LEDx VOx		Digital signal to select the active setting group None Digital input Virtual input LED indicator signal Virtual output	Set
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. This flag is automatically reset 5 minutes after the last front panel push button pressing.	Set
ILmax	A A		The supervised value. Max. of IA, IB and IC Pick-up value scaled to primary value	
I>	xlmode		Pick-up setting	Set
Curve	DT IEC, IEEE, IEEE2, RI, PrgN		Delay curve family: Definite time Inverse time. See Inverse time operation.	Set
Type	DT NI, VI, EI, LTI, Parameters		Delay type Definite time Inverse time. See Inverse time operation.	Set
t>			Definite operation time (for definite time only)	Set
k>			Inverse delay multiplier (for inverse time only)	Set
Dly20x		s	Delay at 20xlmode	
Dly4x		s	Delay at 4xlmode	
Dly2x		s	Delay at 2xlmode	
Dly1x		s	Delay at 1xlmode	
A, B, C, D, E			User's constants for standard equations. Type=Parameters. Section Inverse time operation.	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on. For details of setting ranges, see Protection functions.

Table 5.2: Parameters of the overcurrent stages I>>, I>>> (50/51)

Parameter	Value	Unit	Description	Note
Status	-		Current status of the stage	
	Blocked			
	Start			F
	Trip			F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	Dlx		Digital input	
	Vlx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
	On			
ILmax			The supervised value. Max. of IA, IB and IC Pick-up value scaled	
I>>, I>>>		xlmode	to primary value	
I>>, I>>>		s	Pick-up setting	Set
t>>, t>>>			Definite operation time	Set

Set = An editable parameter (password needed), C = Can be cleared to zero, F = Editable when force flag is on. For details of setting ranges, see Protection functions.

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Recorded values of the latest eight faults

There is detailed information available for the eight latest faults: Time stamp, fault type, fault current, load current before the fault, elapsed delay and setting group.

Table 5.3: Recorded values of the overcurrent stages (8 latest faults) I>, I>>, I>>> (50/51)

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Type	1-N 2-N 3-N 1-2 2-3 3-1 1-2-3		Fault type Ground fault Ground fault Ground fault Two phase fault Two phase fault Two phase fault Three phase fault
Flt		xlmode	Maximum fault current
Load		xlmode	1 s average phase currents before the fault
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1 2		Active setting group during fault

Remote controlled overcurrent scaling

Please note: This function is typically used for a maintenance mode application. If communications are lost it may be set via the front display or via local connection with the software.

Pick-up setting of the three over current stages can also be controlled remotely. In this case only two scaling coefficients are possible: 100% (the scaling is inactive) and any configured value between 10% - 200% (the scaling is active). When scaling is enabled all settings of group one are copied to group two but the pick-up value of group two is changed according the given value (10-200%).

- This feature can be enabled/disabled via VAMPSET or by using the local panel. When using VAMPSET the scaling can be activated and adjusted in the “protection stage status 2” –menu. When using the local panel similar settings can be found from the “prot” -menu.
- It is also possible to change the scaling factor remotely by using the modbus TCP –protocol. When changing the scaling factor remotely value of 1% is equal to 1. Check the correct modbus address for this application from the VAMPSET or from the communication parameter list.

Group 2 o/c remote scaling

Enable ☒ **Grp. 2 remote scaling** 150 %

Set group DI control

Group 2

	Group 1	Group 2
Pick-up setting	1000 A	1500 A
Pick-up setting	1.00 xIn	1.50 xIn
Delay curve family	IEC	IEC
Delay type	III	III
Inv. time coefficient k	0.20	0.20
Inverse delay (20x)	0.45 s	0.45 s
Inverse delay (4x)	0.99 s	0.99 s
Inverse delay (1x)	141.83 s	141.15 s
Common settings		
Include harmonics	Off	

Figure 5.7: Remote scaling example.

In the Figure 5.7 can be seen the affect of remote scaling. After enabling group is changed from group one to group two and all settings from group one are copied to group two. The difference is that group two uses scaled pick-up settings.

NOTE: When remote scaling function is used, it replaces all the settings of group 2. So this function cannot be used simultaneously with normal group change.

Directional phase overcurrent $I_{\phi}>$ (67)

Directional overcurrent protection can be used for directional short circuit protection. Typical applications are

- Short circuit protection of two parallel cables or overhead lines in a radial network.
- Short circuit protection of a looped network with single feeding point.
- Short circuit protection of a two-way feeder, which usually supplies loads but is used in special cases as an incoming feeder.
- Directional overcurrent protection in low impedance grounded networks. Please note that in this case the device has to be connected to line-to-neutral voltages instead of line-to-line voltages. In other words the voltage measurement mode has to be "3LN" (See section Voltage measurement modes).

The stages are sensitive to the amplitude of the highest fundamental frequency current of the three measured phase currents.

In phase to phase and in three phase faults, the fault angle is determined by using angles between positive sequence of currents and voltages. In phase to ground faults, the fault angle is determined by using fault phase current and the healthy line to line voltage. For details of power direction, see section Direction of power and current.

A typical characteristic is shown in Figure 5.8. The base angle setting is -30° . The stage will pick up, if the tip of the three phase current phasor gets into the grey area.

NOTE: If the maximum possible ground fault current is greater than the most sensitive directional over current setting used, the device has to be connected to the line-to-neutral voltages instead of line-to-line voltages in order to get the right direction for ground faults. (For networks having the maximum possible ground fault current less than the over current setting, use 67N, the directional ground fault stages.)

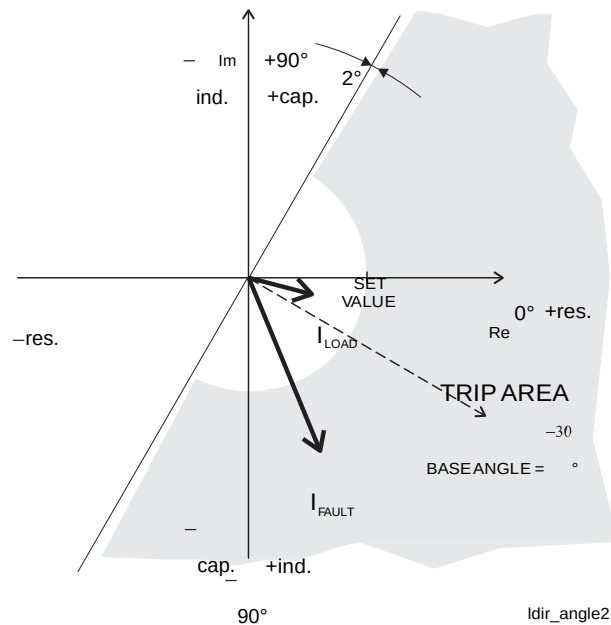


Figure 5.8: Example of protection area of the directional overcurrent function.

Three modes are available: directional, non-direct, and directional+back-up (Figure 5.9). In the non-directional mode the stage is acting just like an ordinary overcurrent 50/51 stage.

Directional+back-up mode works the same way as directional mode but it has undirectional back-up protection in case a close-up fault will force all voltages to about zero. After the angle memory hold time, the direction would be lost. Basically the directional+backup mode is required when operation time is set longer than 0.5 s and no other undirectional back-up protection is in use.

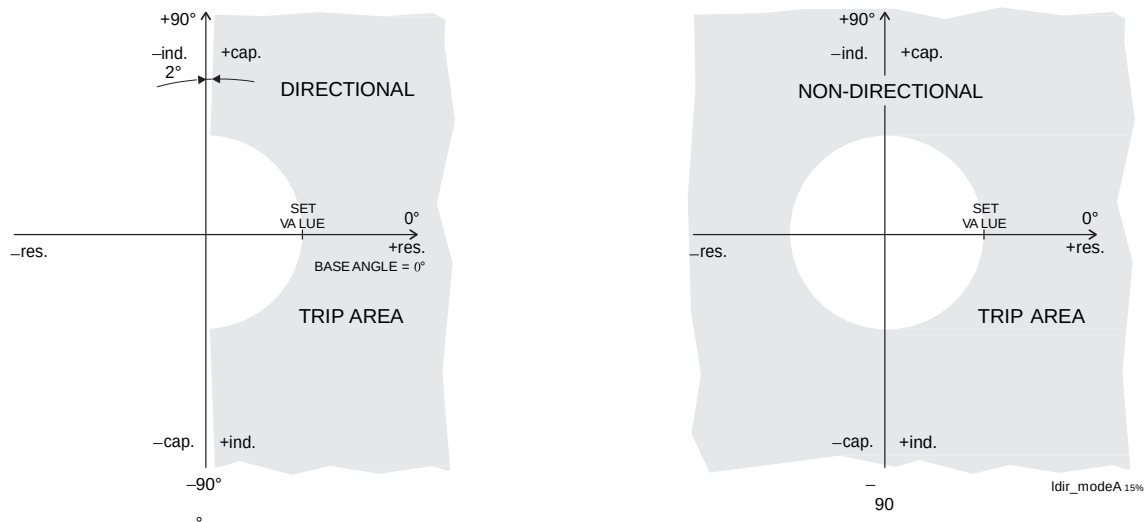


Figure 5.9: Difference between directional mode and non-directional mode. The grey area is the trip region.

An example of bi-directional operation characteristic is shown in Figure 5.10. The right side stage in this example is the stage $I_{\phi} >$ and the left side is $I_{\phi} >>$. The base angle setting of the $I_{\phi} >$ is 0° and the base angle of $I_{\phi} >>$ is set to -180° .

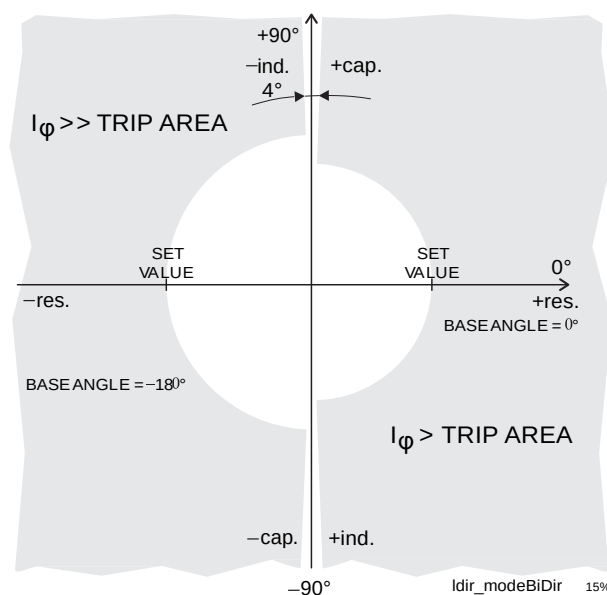


Figure 5.10: Bi-directional application with two stages $I_{\phi} >$ and $I_{\phi} >>$.

When any of the three phase currents exceeds the setting value and, in directional mode, the phase angle including the base angle is within the active $\pm 88^\circ$ wide sector, the stage picks up and issues a start signal. If this fault situation remains on longer than the delay setting, a trip signal is issued.

Four independent stages

There are four separately adjustable stages available: $I_{\phi}>$, $I_{\phi}>>$, $I_{\phi}>>>$ and $I_{\phi}>>>>$.

Inverse operation time

Stages $I_{\phi}>$ and $I_{\phi}>>$ can be configured for definite time or inverse time characteristic. See section Inverse time operation for details of the available inverse delays. Stages $I_{\phi}>>>$ and $I_{\phi}>>>>$ have definite time (DT) operation delay. The device will show a scaleable graph of the configured delay on the local panel display.

Inverse time limitation

The maximum measured secondary current is $50 \times I_N$. This limits the scope of inverse curves with high pick-up settings. See section Inverse time operation for more information.

Cold load and inrush current handling

See section Cold load pick-up and inrush current detection.

Setting groups

There are two settings groups available for each stage. Switching between setting groups can be controlled by digital inputs, virtual inputs (mimic display, communication, logic) and manually.

Table 5.4: Parameters of the directional overcurrent stages $I_{\phi}>$, $I_{\phi}>>$ (67)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
TripTime		s	Estimated time to trip	
SCntr			Cumulative start counter	Clr
TCntr			Cumulative trip counter	Clr
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	DIx		Digital input	
	VIx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
ILmax		A	The supervised value. Max. of IA, IB and IC	

Parameter	Value	Unit	Description	Note
$I_{\phi}>, I_{\phi}>>$		A	Pick-up value scaled to primary value	
$I_{\phi}>, I_{\phi}>>$		xlmode	Pick-up setting	Set
Curve	DT IEC, IEEE, IEEE2, RI, PrgN		Delay curve family: Definite time Inverse time. See the section Inverse time operation.	Set
Type	DT NI, VI, EI, LTI, Parameters		Delay type Definite time Inverse time. See the section Inverse time operation.	Set
t>		s	Definite operation time (for definite time only)	Set
k>			Inverse delay multiplier (for inverse time only)	Set
Dly20x		s	Delay at 20xlmode	
Dly4x		s	Delay at 4xlmode	
Dly2x		s	Delay at 2xlmode	
Dly1x		s	Delay at 1xlmode	
Mode	Dir Undir Dir+back-up		Directional mode (67) Undirectional (50/51) Directional and undirectional back-up	Set
Offset		°	Angle offset in degrees	Set
U/I angle		°	Measured U_1/I_1 angle	
U1		% Un	Measured positive sequence voltage	
A, B, C, D, E			User's constants for standard equations. Type=Parameters. See Chapter 5.30 Inverse time operation.	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see section Protection functions.

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Table 5.5: Parameters of the directional overcurrent stages $I_{\phi} >$, $I_{\phi} >>>$ (67)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	 F F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
SgrpDI			Digital signal to select the active setting group	Set
	-		None	
	Dix		Digital input	
	Vix		Virtual input	
	LEDx		LED indicator signal	
	Vox		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays, too. Automatically reset by a 5-minute timeout.	Set
ILmax		A	The supervised value. Max. of IL1, IL2 and IL3 [♦]	
$I_{\phi} >$		A	Pick-up value scaled to primary value	
$I_{\phi} >>>$				
$I_{\phi} >$		xlmode	Pick-up setting	Set
$I_{\phi} >>>$				
t>>>		s	Definite operation time (for definite time only)	Set
t>>>>				
Mode	Dir		Directional (67)	Set
	Undir		Undirectional (50/51)	
	Dir+back-up		Directional and undirectional back-up	
Offset		°	Angle offset in degrees	Set
U/I angle		°	Measured U_1/I_1 angle	
U1		% Un	Measured positive sequence voltage	

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see section Protection functions.

[♦] L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Recorded values of the latest eight faults

There is detailed information available of the eight latest faults:
Time stamp, fault type, fault current, load current before the fault, elapsed delay and setting group.

Table 5.6: Recorded values of the directional overcurrent stages (8 latest faults) $I_{\phi} >$, $I_{\phi} >>$, $I_{\phi} >>>$, $I_{\phi} >>>>$ (67)

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Type			Fault type
	1-N		Ground fault
	2-N		Ground fault
	3-N		Ground fault
	1-2		Two phase fault
	2-3		Two phase fault
	3-1		Two phase fault
	1-2-3		Three phase fault
	1-2-N		Two phase fault with ground contact
	2-3-N		Two phase fault with ground contact
	3-1-N		Two phase fault with ground contact
	1-2-3-N		Three phase fault with ground contact
Flt		xIn	Maximum fault current
Load		xIn	1 s average phase currents before the fault
EDly		%	Elapsed time of the operating time setting. 100% = trip
Angle		°	Fault angle in degrees
U1		xUn	Positive sequence voltage during fault
SetGrp	1, 2		Active setting group during fault
Direction mode			Dir, undir, dir+back-up

Current unbalance stage $I_2 > (46)$ in feeder mode

The purpose of the unbalance stage is to detect unbalanced load conditions, for example an open conductor of a heavily loaded overhead line in case there is no ground fault.

The operation of the unbalanced load function is based on the negative phase sequence of component I_2 relative to the positive phase sequence component I_1 . This is calculated from the phase currents using the method of symmetrical components. The function requires that the measuring inputs are connected correctly so that the rotation direction of the phase currents are as shown in the section Connection examples. If the rotation direction is incorrect, a trip will occur. The unbalance protection has definite time operation characteristic.

$$K2 = \frac{I_2}{I_1} \quad \begin{aligned} I_1 &= I_A + aI_B + a^2I_C \\ I_2 &= I_A + a^2I_B + aI_C \end{aligned}$$

$$\underline{a} = 1\angle 120^\circ = -\frac{1}{2} + j\frac{\sqrt{3}}{2}, \text{ a phasor rotating constant}$$

Table 5.7: Setting parameters of the current unbalanced stage $I_2 > (46)$ in feeder mode

Parameter	Value	Unit	Default	Description
$I_2/I_1 >$	2 - 70	%	20	Setting value, I_2/I_1
$t >$	1.0 - 600.0	s	10.0	Definite operating time
Type	DT INV	-	DT	The selection of time characteristics
S_On	Enabled; Disabled	-	Enabled	Start on event
S_Off	Enabled; Disabled	-	Enabled	Start off event
T_On	Enabled; Disabled	-	Enabled	Trip on event
T_Off	Enabled; Disabled	-	Enabled	Trip off event

Table 5.8: Measured and recorded values of the current unbalanced stage $I_2 > (46)$ in feeder mode

	Parameter	Value	Unit	Description
Measured value	I_2/I_1		%	Relative negative sequence component
Recorded values	SCntr			Cumulative start counter
	TCntr			Cumulative start counter
	Flt		%	Maximum I_2/I_1 fault component
	EDly		%	Elapsed time as compared to the set operating time, 100% = tripping

Current unbalance stage I₂> (46) in motor mode

Current unbalance in a motor causes double frequency currents in the rotor. This warms up the surface of the rotor and the available thermal capacity of the rotor is much less than the thermal capacity of the whole motor. Thus an rms current based overload protection (see section Thermal overload protection T> (49)) is not capable to protect a motor against current unbalance.

The current unbalance protection is based on the negative sequence of the base frequency phase currents. Both definite time and inverse time characteristics are available.

Inverse delay

The inverse delay is based on the following equation.

Equation 5.1:

$$T = \frac{K}{\left(\frac{I_2}{I_{MOT}} \right)^2 - K_2^2}$$

T = Operation time

K₁ = Delay multiplier

I₂ = Measured and calculated negative sequence phase current of fundamental frequency.

I_{MOT} = Nominal current of the motor

K₂ = Pick-up setting I₂> in pu. The maximum allowed degree of unbalance.

Example:

K₁ = 15 s

I₂ = 22.9 % = 0.229 × I_{MOT}

K₂ = 5 % = 0.05 × I_{MOT}

$$t = \frac{15}{\frac{0.229^2}{1} - 0.05^2} = 300.4$$

The operation time in this example will be five minutes.

More stages (definite time delay only)

If more than one definite time delay stage is needed for current unbalance protection, the freely programmable stages can be used (section Programmable stages (99)).

Setting groups

There are two settings groups available. Switching between setting groups can be controlled by digital inputs, virtual inputs (communication, logic) and manually.

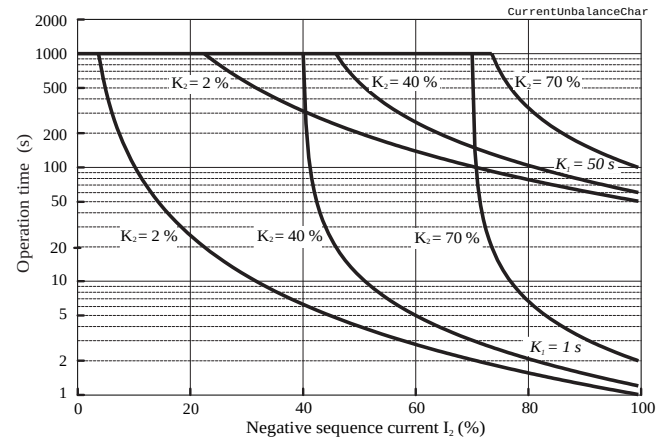


Figure 5.11: Inverse operation delay of current unbalance stage I2>. The longest delay is limited to 1000 seconds (=16min 40s).

Table 5.9: Parameters of the current unbalance stage $I_2 > (46)$ in motor mode

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	DIx		Digital input	
	VIx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
I_2/I_{mot}		% I_{mot}	The supervised value.	
$I_2 >$		% I_{mot}	Pick-up setting	Set
$t >$		s	Definite operation time (Type=DT)	Set
Type	DT INV		Definite time Inverse time (Equation 5.1)	Set
K1		s	Delay multiplier (Type =INV)	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see section Protection functions.

Recorded values of the latest eight faults

There is detailed information available of the eight latest faults: Time stamp, unbalance current, elapsed delay and setting group.

Table 5.10: Recorded values of the current unbalance stage (8 latest faults) $I_2 > (46)$ in motor mode

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		% I_{mot}	Maximum unbalance current
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1 2		Active setting group during the fault

Phase reversal/incorrect phase sequence protection I₂>> (47)

The phase sequence stage helps prevent the motor from being started in to wrong direction, thus protecting the load.

When the ratio between negative and positive sequence current exceeds 80% and the average of three phase currents exceeds $0.2 \times I_{MOT}$ in the start-up situation, the phase sequence stage starts and trips after 100 ms after start-up.

Table 5.11: Parameters of the incorrect phase sequence stage I₂>> (47)

	Parameter	Value/unit	Description
Measured value	I ₂ /I ₁	%	Neg. phase seq. current/pos. phase seq. current
Recorded values	SCntr		Start counter (Start) reading
	TCntr		Trip counter (Trip) reading
	Flt	%	Max. value of fault current
	EDly	%	Elapsed time as compared to the set operate time, 100% = tripping

Stall protection $I_{ST} > (48)$

The stall protection stage protects the motor against prolonged direct-on-line (DOL) starts caused by e.g. a stalled rotor, too high inertia of the load or too low voltage. This function is sensitive to the fundamental frequency component of the phase currents.

The I_{ST} stage can be configured for definite operation time or inverse time operation characteristic. For a weak voltage supply the inverse characteristics are useful allowing more start time when a voltage drop decreases the start current and increases the start time.

Equation 5.2 defines the inverse operation time. Figure 5.13 shows an example of the inverse characteristics.

$T =$ Inverse operation time.

I_{START} = Rated start current of the motor “Nom motor start current”
 I_{MOTST} . The default setting is $6.00 \times I_{MOT}$.

$$I_{MEAS} = \text{Measured current}$$

T_{START} = Maximum allowed start time "Inv. time coefficient" $k>$ for the motor at rated voltage.

Equation 5.2:

$$T = \left(\frac{I_{start}}{I_{meas}} \right)^2 T_{start}$$

The pick-up setting “Motor start detection current” I_{ST} is the start detection level of the start current. While the current has been less than 10% of I_{mot} and then within 200 milliseconds exceeds the setting I_{ST} , the stall protection stage starts to count the operation time T_{START} .

When current drops below $120 \% \times I_{MOT}$, the stall protection stage releases. Stall protection is active only during the starting of the motor.

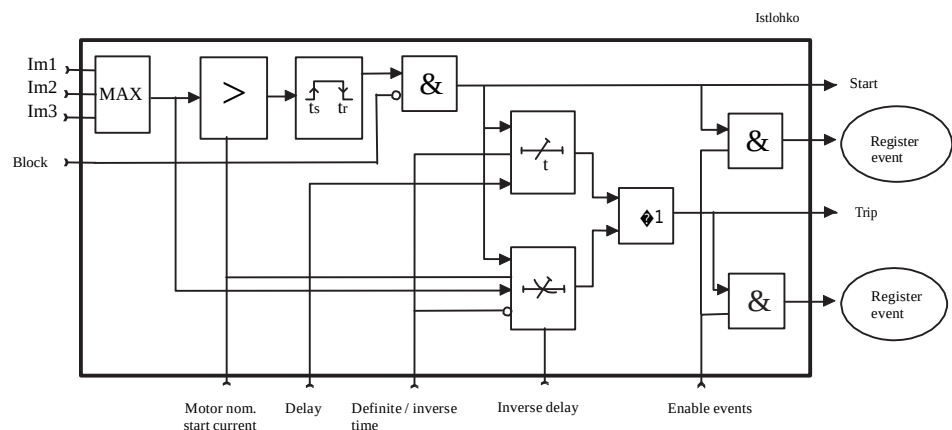


Figure 5.12: Block diagram of the stall protection stage $I_{ST} >$.

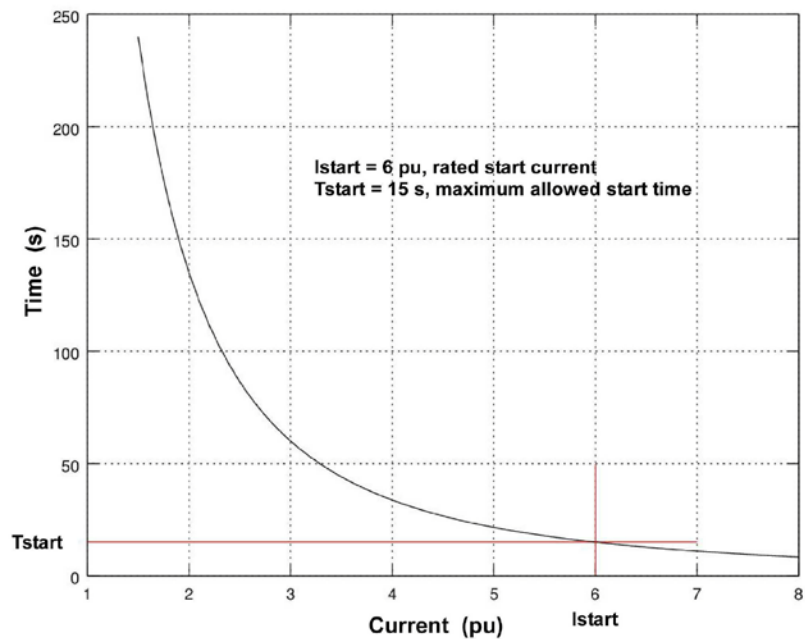


Figure 5.13: Example of an inverse operation time delay of the stall protection stage. If the measured current is less than the specified start current I_{START} the operation time will be longer than the specified start time T_{START} and vice versa.

Table 5.12: Parameters of the stall protection stage $I_{ST}>$ (48)

	Parameter	Value/unit	Description
Setting values	ImotSt	xImot	Nominal motor starting current
	Ist>	% Imot	Motor start detection current. Must be less than initial motor starting current.
	Type	DT	Delay type: Definite time
		Inv	Delay type: inverse time
	t	s	Definite operation time
	k		Time multiplier T_{START} for inverse delay characteristics
Recorded values	SCnt		Start counter (Start) reading
	r		Trip counter (Trip) reading
	TCntr	xImot	Max. value of fault.
	EDly	%	Elapsed time as compared to the set operate time, 100% = tripping

Motor status

There are three possible statuses for a motor: stopped, starting or running.

- Motor stopped: Motor average current is less than 10% of the motor nominal current.
- Motor starting: To reach the starting position, the motor has to be stopped for least 500 ms before starting. Motor average current has to increase above the motor start detection current (setting value) within 200ms. Motor will remain starting as long as the terms for turning into running condition are not satisfied.
- Motor running: Motor is able to turn into a running position from both stopped and starting position. Low limit for motor running is 20% of the motors nominal and the high limit for motor running is 120% of the motors nominal current.

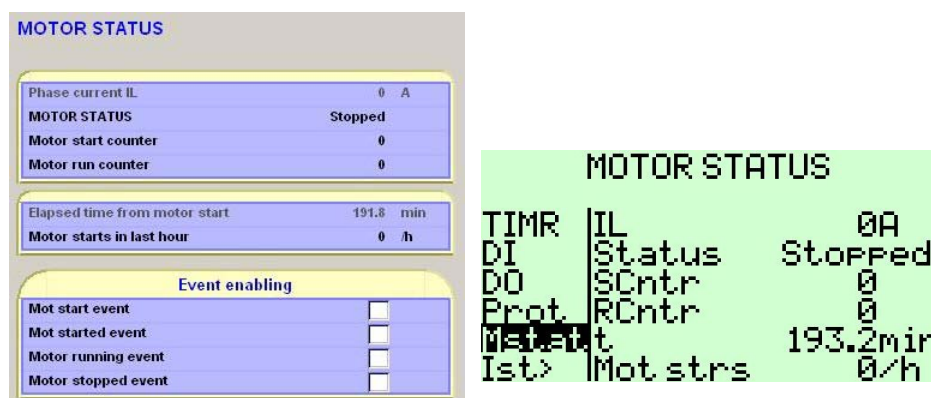


Figure 5.14: Motor status via VAMPSET and local panel.

The status of the motor can be viewed via VAMPSET -software or by looking from the local panel of the relay (Mstat). Statuses Starting and running can be found from the output –and block matrix. Therefore it is possible to use these signals for tripping or indication and for blocking purposes.

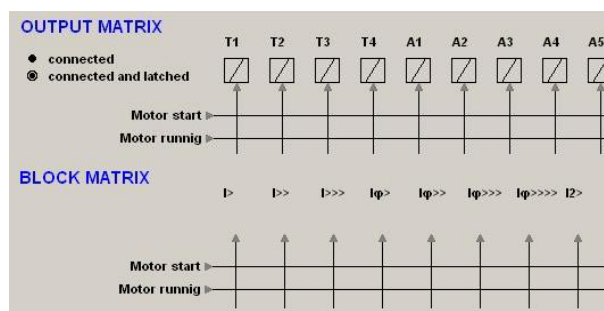


Figure 5.15: Motor status in output –and block matrix.

Softstart

Frequency converter drives and soft starter applications will not initiate the motor start signal due to the low current while starting the motor. Motor will change directly from stopped to running position when the current increases into a certain level.

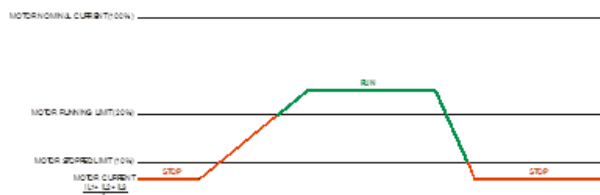


Figure 5.16: The terms of soft start.

Normal starting sequence

As a default for the motor start detection, relay uses value of 6 times motor nominal. This value is editable.

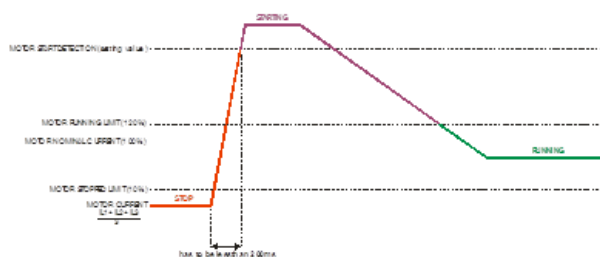


Figure 5.17: The terms of normal starting sequence.

Frequent start protection N> (66)

The simplest way to start an asynchronous motor is just to switch the stator windings to the supply voltages. However every such start will heat up the motor considerably because the initial currents are significantly above the rated current.

If the motor manufacturer has defined the maximum number of starts within an hour or/and the minimum time between two consecutive starts this stage is easy to apply to help prevent starting too frequently.

When current has been less than 10% of the motor nominal current and then exceeds the value Motor start detection current of $I_{ST>}$ (Stall protection stage), situation is recognized as a motor start. After the recognition of the motor start if current drops to a less than 10% of the motor nominal current, stage considers motor to be stopped.

Frequent start protection stage will provide N> alarm signal when the second last start has been done and remains active until the maximum amount of motor starts are reached or one hour of time is passed.

The N> motor start inhibit signal activates after starting the motor and remains active a period of time that is defined for parameter Min time between motor starts. After the given time has passed, inhibit signal returns to inactive state.

When start counter of stage reaches the value defined for Max. motor starts/hour, N> motor start inhibit signal activates and remains active until one hour has passed.

Frequent start protection stage correlation to output contacts is defined in output matrix menu. See section Output matrix.

Figure 5.18 shows an application.

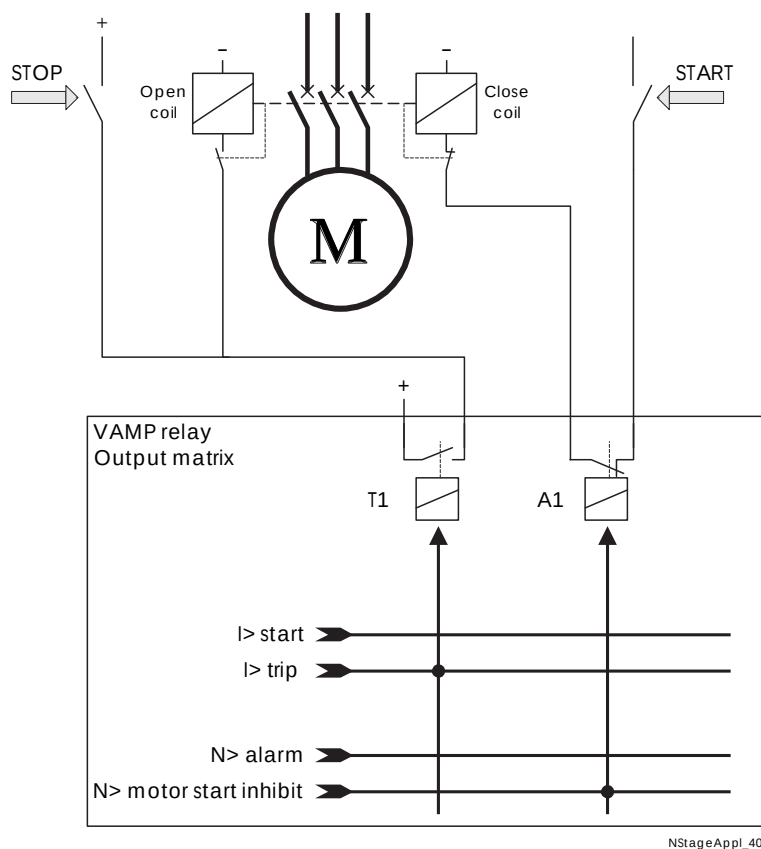


Figure 5.18: Application for helping prevent starting too frequently using the N> stage. The signal relay A1 has been configured to normal closed (NC) in device “relays” menu and is controlled by N> motor start inhibit signal. Whenever N> motor start inhibit signal becomes active, it prevents the circuit breaker from closing.

Table 5.13: Parameters of the frequent start protection N> (66)

	Parameter	Value/unit	Description
Measured value	Mot strs		Motor starts in last hour
	T	Min	Elapsed time from motor start
Setting values	Sts/h		Max. starts in one hour
	Interval	Min	Min. interval between two consecutive starts
Recorded values	SCntr		Start counter (Start) reading
	TCntr		Trip counter (Trip) reading
	Descr	1StartLeft	1 start left, activates the N> start signal
		MaxStarts	Max. start trip, activates the N> trip signal
		Interval	Min. interval between two consecutive starts has not yet been elapsed, activates the N> trip signal
	Tot Mot Strs		Number of total motor starts
	Mot Strs/h		Number of motor starts in last hour
	El. Time from mot Strt	Min	Elapsed time from the last motor start

Undercurrent protection $I_{<}$ (37)

The undercurrent unit measures the fundamental frequency component of the phase currents.

The stage $I_{<}$ can be configured for definite time characteristic.

The undercurrent stage is protecting rather the device driven by the motor e.g. a submersible pump, than the motor itself.

Table 5.14: Parameters of the undercurrent stage $I_{<}$ (37)

	Parameter	Value/unit	Description
Measured value	ILmin	A	Min. value of phase currents IL1 – IL3 [*] in primary value
Setting values	$I_{<}$	xImode	Setting value as per times Imot
	$t_{<}$	S	Operation time [s]
Recorded values	SCntr		Start counter (Start) reading
	TCntr		Trip counter (Trip) reading
	Type	1-N, 2-N	Fault type/single-phase fault e.g.: 1-N = fault on phase L1
		3-N	
		1-2, 2-3	Fault type/two-phase fault
		1-3	e.g.: 2-3 = fault between L2 and L3
		1-2-3	Fault type/three-phase fault
	Flt	%	Min. value of fault current as per times Imot
	Load	%	1s mean value of pre-fault currents IL1 – IL3 [*]
	EDly	%	Elapsed time as compared to the set operate time, 100% = tripping

^{*} L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Directional ground fault protection $I_{0\phi}>$ (67N)

The directional ground fault protection is used for ground faults in networks or motors where a selective and sensitive ground fault protection is needed and in applications with varying network structure and length.

The device consists of versatile protection functions for ground fault protection in various network types.

The function is sensitive to the fundamental frequency component of the residual current and zero sequence voltage and the phase angle between them. The attenuation of the third harmonic is more than 60 dB. Whenever the size of I_0 and V_0 and the phase angle between I_0 and V_0 fulfils the pick-up criteria, the stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation time delay setting, a trip signal is issued.

Polarization

The negative zero sequence voltage $-V_0$ is used for polarization i.e. the angle reference for I_0 . The $-V_0$ voltage is measured via energizing input V_0 or it is calculated from the phase voltages internally depending on the selected voltage measurement mode (see section Voltage measurement modes):

- LN: the zero sequence voltage is calculated from the phase voltages and therefore any separate zero sequence voltage transformers are not needed. The setting values are relative to the configured voltage transformer (VT) voltage/ $\sqrt{3}$.
- LL+ V_0 : the zero sequence voltage is measured with voltage transformer(s) for example using an open delta connection. The setting values are relative to the VT_0 secondary voltage defined in configuration.

NOTE: The V_0 signal must be connected according the connection diagram (Figure 11.17) in order to get a correct polarization. Please note that actually the negative V_0 , $-V_0$, is connected to the device.

Modes for different network types

The available modes are:

- ResCap

This mode consists of two sub modes, Res and Cap. A digital signal can be used to dynamically switch between these two sub modes. This feature can be used with compensated networks, when the Petersen coil is temporarily switched off.

 - Res

The stage is sensitive to the resistive component of the selected I_0 signal. This mode is used with compensated networks (resonant grounding) and networks grounded with a high resistance. Compensation is usually done with a Petersen coil between the neutral point of the main transformer and ground. In this context "high resistance" means, that the fault current is limited to be less than the rated phase current. The trip area is a half plane as drawn in Figure 5.20. The base angle is usually set to zero degrees.
 - Cap

The stage is sensitive to the capacitive component of the selected I_0 signal. This mode is used with ungrounded networks. The trip area is a half plane as drawn in Figure 5.20. The base angle is usually set to zero degrees.

- **Sector**
This mode is used with networks grounded with a small resistance. In this context "small" means, that a fault current may be more than the rated phase currents. The trip area has a shape of a sector as drawn in Figure 5.21. The base angle is usually set to zero degrees or slightly on the lagging inductive side (i.e. negative angle).
- **Undir**
This mode makes the stage equal to the undirectional stage $I_0>$. The phase angle and V_0 amplitude setting are discarded. Only the amplitude of the selected I_0 input is supervised.

Input signal selection

Each stage can be connected to supervise any of the following inputs and signals:

- Input I_{01} for all networks other than solidly grounded.
- Input I_{02} for all networks other than solidly grounded.
- Calculated signal I_{0Calc} for solidly and low impedance grounded networks. $I_{0Calc} = I_A + I_B + I_C = 3I_0$.

Intermittent ground fault detection

Short ground faults make the protection to start (to pick up), but will not cause a trip. (Here a short fault means one cycle or more. For shorter than 1 ms transient type of intermittent ground faults in compensated networks there is a dedicated stage $I_{0INT}> 67NI$.) When starting happens often enough, such intermittent faults can be cleared using the intermittent time setting.

When a new start happens within the set intermittent time, the operation delay counter is not cleared between adjacent faults and finally the stage will trip.

Two independent stages

There are two separately adjustable stages: $I_{0\phi}>$ and $I_{0\phi}>>$. Both the stages can be configured for definite time delay (DT) or inverse time delay operation time.

Inverse operation time

Inverse delay means that the operation time depends on the amount the measured current exceeds the pick-up setting. The bigger the fault current is the faster will be the operation. Accomplished inverse delays are available for both stages $I_{0\phi}>$ and $I_{0\phi}>>$. The inverse delay types are described in the section Inverse time operation. The device will show a scaleable graph of the configured delay on the local panel display.

Inverse time limitation

The maximum measured secondary residual current is $10 \times I_{0N}$ and maximum measured phase current is $50 \times I_N$. This limits the scope of inverse curves with high pick-up settings. See section Inverse time operation for more information.

Setting groups

There are two settings groups available for each stage. Switching between setting groups can be controlled by digital inputs, virtual inputs (communication, logic) and manually.

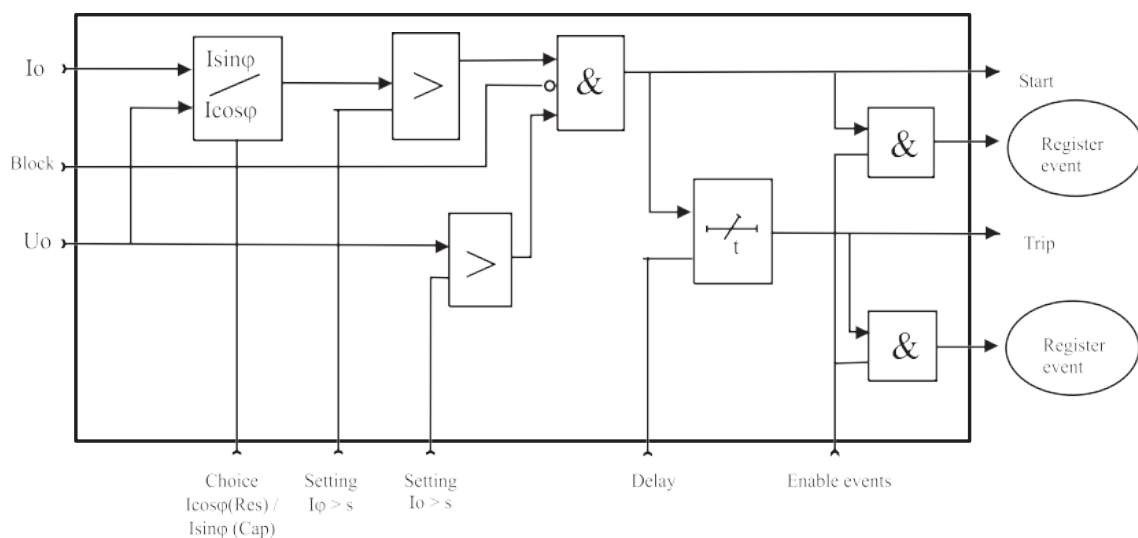


Figure 5.19: Block diagram of the directional ground fault stages $I_{0\varphi} >$ and $I_{0\varphi} >>$

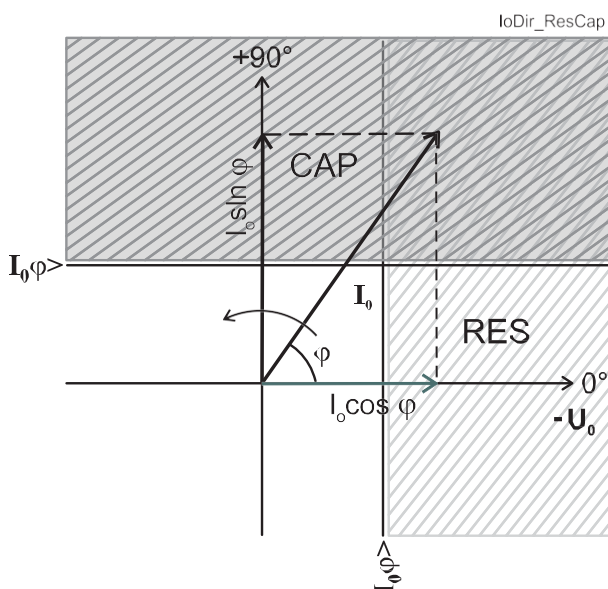


Figure 5.20: Operation characteristic of the directional ground fault protection in Res or Cap mode. Res mode can be used with compensated networks and Cap mode is used with ungrounded networks.

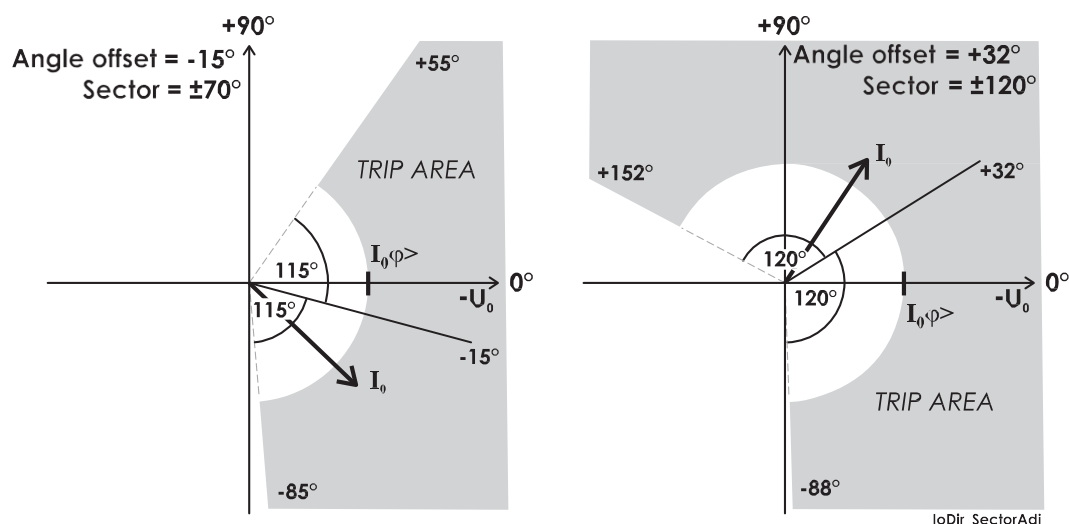


Figure 5.21: Two example of operation characteristics of the directional ground fault stages in sector mode. The drawn I_0 phasor in both figures is inside the trip area. The angle offset and half sector size are user's parameters.

Table 5.15: Parameters of the directional ground fault stages $I_{0\phi}>$, $I_{0\phi}>>$ (67N)

Parameter	Value	Unit	Description	Note
Status	-		Current status of the stage	
	Blocked			
	Start			F
	Trip			
TripTime		s	Estimated time to trip	
SCntr			Cumulative start counter	Clr
TCntr			Cumulative trip counter	Clr
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	DIx		Digital input	
	VIx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
Io		pu	The supervised value according the parameter "Input" below. ($I_{0\phi}>$ only)	
Io2				
IoCalc				
IoPeak				
Io2Peak				
IoRes		pu	Resistive part of I_0 (only when "InUse"=Res)	
IoCap		pu	Capacitive part of I_0 (only when "InUse"=Cap)	
Ioφ>		A	Pick-up value scaled to primary value	

Parameter	Value	Unit	Description	Note
$I_{0\phi}>$		pu	Pick-up setting relative to the parameter "Input" and the corresponding CT value	Set
$U_0>$		%	Pick-up setting for U_0	Set
U_0		%	Measured U_0	
Curve	DT IEC, IEEE, IEEE2, RI, PrgN		Delay curve family: Definite time Inverse time. Chapter 5.30 Inverse time operation.	Set
Type	DT NI, VI, EI, LTI, Parameters		Delay type. Definite time Inverse time. Chapter 5.30 Inverse time operation.	Set
$t>$		s	Definite operation time (for definite time only)	Set
$k>$			Inverse delay multiplier (for inverse time only)	Set
Mode	ResCap Sector Undir		High impedance grounded nets Low impedance grounded nets	Set
Offset		°	Angle offset (MTA) for ResCap and Sector modes	Set
Sector	Default = 88	±°	Half sector size of the trip area on both sides of the offset angle	Set
ChCtrl			Res/Cap control in mode ResCap	Set
	Res		Fixed to Resistive characteristic	
	Cap		Fixed to Capacitive characteristic	
	Dlx		Controlled by digital input	
	VI1..4		Controlled by virtual input	
InUse			Selected submode in mode ResCap.	
	-		Mode is not ResCap	
	Res		Submode = resistive	
	Cap		Submode = capacitive	
Input	Io1		X1:7-8, see Section 11:Connections	Set
	Io2		X1:9-10	
	IoCalc		$IL1 + IL2 + IL3^*$	
	Io1Peak		X1:7-8. peak mode ($I_{0\phi}>$ only)	
	Io2Peak		X1:9-10. peak mode ($I_{0\phi}>$ only)	
Intrmt		s	Intermittent time	Se
Dly20x		s	Delay at $20xI_{0N}$	
Dly4x		s	Delay at $4xI_{0N}$	
Dly2x		s	Delay at $2xI_{0N}$	
Dly1x		s	Delay at $1xI_{0N}$	
A, B, C, D, E			User's constants for standard equations. Type=Parameters. See Chapter 5.30 Inverse time operation.	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see section Protection functions.

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Recorded values of the latest eight faults

There is detailed information available of the eight latest ground faults: Time stamp, fault current, elapsed delay and setting group.

Table 5.16: Recorded values of the directional ground fault stages (8 latest faults) $I_{0\phi}>$, $I_{0\phi}>>$ (67N)

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		pu	Maximum ground fault current Resistive part of I_0 (only when "InUse"=Res) Capacitive part of I_0 (only when "InUse"=Cap)
EDly		%	Elapsed time of the operating time setting. 100% = trip
Angle	°		Fault angle of I_0 - $U_0 = 0^\circ$
Uo		%	Max. U_0 voltage during the fault
SetGrp	1 2		Active setting group during fault

Ground fault protection $I_0 > (50N/51N)$

The unidirectional ground fault protection is to detect ground faults in low impedance grounded networks. In high impedance grounded networks, compensated networks and isolated networks unidirectional ground fault can be used as back-up protection.

The unidirectional ground fault function is sensitive to the fundamental frequency component of the residual current $3I_0$. The attenuation of the third harmonic is more than 60 dB. Whenever this fundamental value exceeds the user's pick-up setting of a particular stage, this stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation time delay setting, a trip signal is issued.

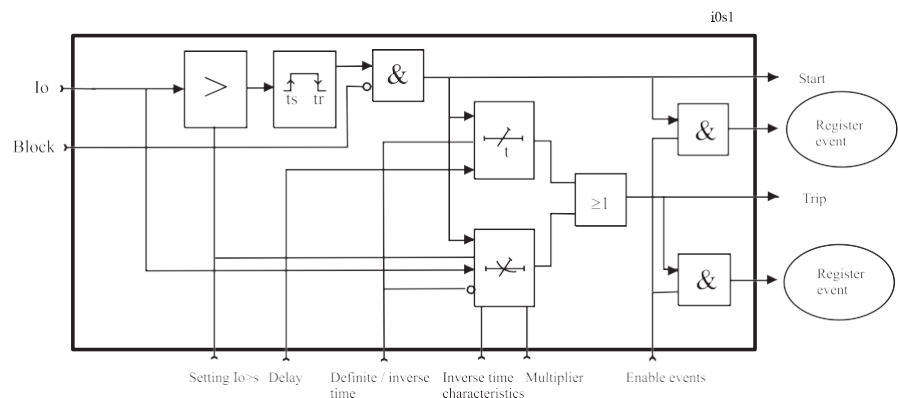


Figure 5.22: Block diagram of the ground fault stage $I_0 >$

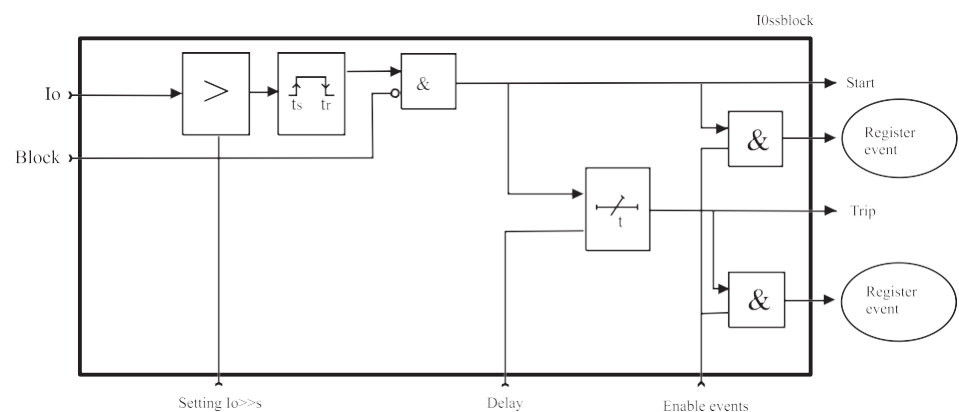


Figure 5.23: Block diagram of the ground fault stages $I_0 >>$, $I_0 >>>$ and $I_0 >>>>$

Figure 5.22 shows a functional block diagram of the $I_0 >$ ground overcurrent stage with definite time and inverse time operation time. Figure 5.23 shows a functional block diagram of the $I_0 >>$, $I_0 >>>$ and $I_0 >>>>$ ground fault stages with definite time operation delay.

Input signal selection

Each stage can be connected to supervise any of the following inputs and signals:

- Input I_{01} for all networks other than solidly grounded.
- Input I_{02} for all networks other than solidly grounded.
- Calculated signal I_{0Calc} for solidly and low impedance grounded networks. $I_{0Calc} = I_A + I_B + I_C$.

Intermittent ground fault detection

Short ground faults make the protection to start (to pick up), but will not cause a trip. (Here a short fault means one cycle or more. For shorter than 1 ms transient type of intermittent ground faults in compensated networks there is a dedicated stage $I_{0INT} > 67NI$.) When starting happens often enough, such intermittent faults can be cleared using the intermittent time setting.

When a new start happens within the set intermittent time, the operation delay counter is not cleared between adjacent faults and finally the stage will trip.

Four or six independent unidirectional ground fault overcurrent stages

There are four separately adjustable ground fault stages: $I_0 >$, $I_0 >>$, $I_0 >>>$, and $I_0 >>>>$. The first stage $I_0 >$ can be configured for definite time (DT) or inverse time operation characteristic (IDMT). The other stages have definite time operation characteristic. By using the definite delay type and setting the delay to its minimum, an instantaneous (ANSI 50N) operation is obtained.

Using the directional ground fault stages (section Directional ground fault protection $I_{0\phi} > (67N)$) in unidirectional mode, two more stages with inverse operation time delay are available for unidirectional ground fault protection.

Inverse operation time ($I_0 >$ stage only)

Inverse delay means that the operation time depends on the amount the measured current exceeds the pick-up setting. The bigger the fault current is the faster will be the operation. Accomplished inverse delays are available for the $I_0 >$ stage. The inverse delay types are described in the section Inverse time operation. The device will show a scaleable graph of the configured delay on the local panel display.

Inverse time limitation

The maximum measured secondary residual current is $10 \times I_{0N}$ and maximum measured phase current is $50 \times I_N$. This limits the scope of inverse curves with high pick-up settings. See section Inverse time operation for more information.

Setting groups

There are two settings groups available for each stage. Switching between setting groups can be controlled by digital inputs, virtual inputs (communication, logic) and manually.

Table 5.17: Parameters of the unidirectional ground fault stage $I_0 > (50N/51N)$

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
TripTime		s	Estimated time to trip	
SCntr			Cumulative start counter	Clr
TCntr			Cumulative trip counter	Clr
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	Dlx		Digital input	
	Vlx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
Io Io2 IoCalc IoPeak Io2Peak		pu	The supervised value according the parameter "Input" below.	
Io>		A	Pick-up value scaled to primary value	
Io>		pu	Pick-up setting relative to the parameter "Input" and the corresponding CT value	Set
Curve	DT IEC, IEEE, IEEE2, RI, PrgN		Delay curve family: Definite time Inverse time. Section Inverse time operation.	Set
Type	DT NI, VI, EI, LTI, Parameters		Delay type. Definite time Inverse time. See section Inverse time operation.	Set
t>		s	Definite operation time (for definite time only)	Set

Parameter	Value	Unit	Description	Note
k>			Inverse delay multiplier (for inverse time only)	Set
Input	Io1		X1:7-8. See Section 11: Connections	Set
	Io2		X1:9-10	
	IoCalc		IL1 + IL2 + IL3*	
	Io1Peak		X1:7-8. peak mode ($I_{0\phi} >$ only)	
	Io2Peak		X1:9-10 peak mode ($I_{0\phi} >$ only)	
Intrmt		s	Intermittent time	Set
Dly20x		s	Delay at 20xlon	
Dly4x		s	Delay at 4xlon	
Dly2x		s	Delay at 2xlon	
Dly1x			Delay at 1xlon	
A, B, C, D, E			User's constants for standard equations. Type=Parameters. See section Inverse time operation.	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see section Protection functions.

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Table 5.18: Parameters of the unidirectional ground fault stage $I_0 >$, $I_0 >>$, $I_0 >>>$ (50N/51N)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
TripTime		s	Estimated time to trip	
SCntr			Cumulative start counter	Clr
TCntr			Cumulative trip counter	Clr
SetGrp	1 or 2		Active setting group	Set
SgrpDI			Digital signal to select the active setting group	Set
	-		None	
	Dix		Digital input	
	Vix		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
Io Io2 IoCalc		pu	The supervised value according the parameter "Input" below.	
Io>, Io>>, Io>>>		A	Pick-up value scaled to primary value	

$I_{0>>}, I_{0>>>}, I_{0>>>>}$		pu	Pick-up setting relative to the parameter "Input" and the corresponding CT value	Set
$t>$		s	Definite operation time (for definite time only)	Set
Input	Io1		X1:7-8. See Section 11: Connections	Set
	Io2		X1:9-10	
	IoCalc		$IL1 + IL2 + IL3^*$	

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see section Protection functions.

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Recorded values of the latest eight faults

There is detailed information available of the eight latest ground faults: Time stamp, fault current, elapsed delay and setting group.

Table 5.19: Recorded values of the undirectional ground fault stages (8 latest faults) $I_{0>}, I_{0>>}, I_{0>>>}, I_{0>>>>}$ (50N/51N)

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
FIt		pu	Maximum ground fault current
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1		Active setting group during fault
	2		

Intermittent transient ground fault protection $I_{0INT}>$ (67NI)

NOTE: This function is available only in voltage measurement modes (see section Voltage measurement modes), which include direct $-V_0$ measurement like for example $2U_{LL} + V_0$, but not for example in mode $3U_{LN}$.

The directional intermittent transient ground fault protection is used to detect short intermittent transient faults in compensated cable networks. The transient faults are self extinguished at some zero crossing of the transient part of the fault current I_{Fault} and the fault duration is typically only 0.1 ms – 1 ms. Such short intermittent faults can not be correctly recognized by normal directional ground fault function using only the fundamental frequency components of I_0 and V_0 .

Although a single transient fault usually self extinguishes within less than one millisecond, in most cases a new fault happens when the phase-to-ground voltage of the detected faulty phase has recovered (Figure 5.24).

NOTE: L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C. $U=V$.

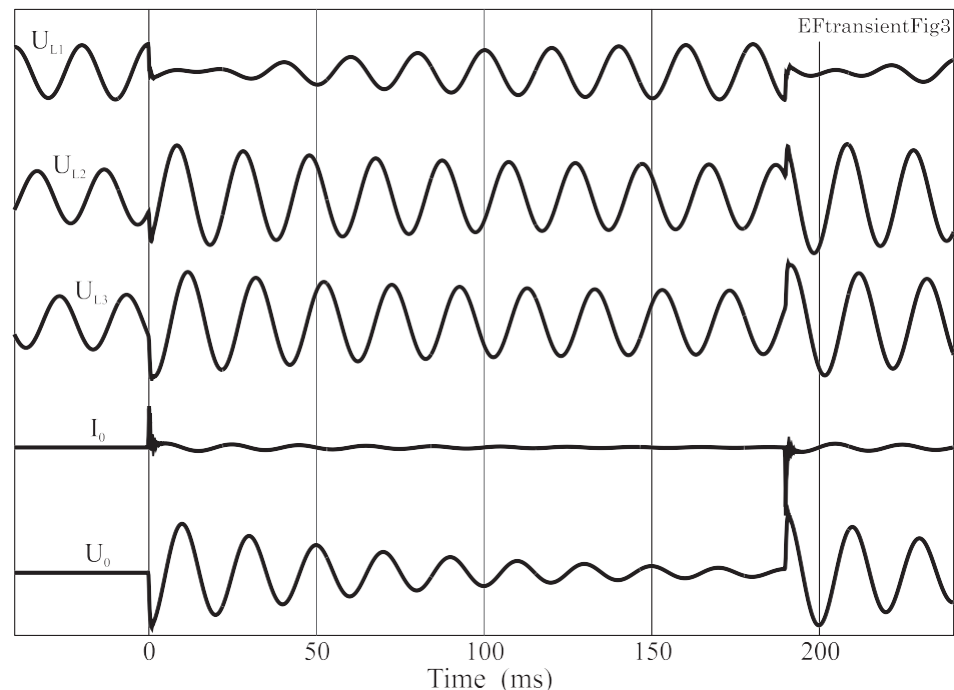


Figure 5.24: Typical phase to ground voltages, residual current of the detected faulty feeder and the zero sequence voltage V_0 during two transient ground faults in phase A. In this case the network is compensated.

Direction algorithm

The function is sensitive to the instantaneous sampled values of the residual current and zero sequence voltage. The selected voltage measurement mode has to include a direct $-V_0$ measurement.

I_0 pick-up sensitivity

The sampling time interval of the relay is 625 μ s at 50 Hz (32 samples/cycle). The I_0 current spikes can be quite short compared to this sampling interval. Fortunately the current spikes in cable networks are high and while the anti-alias filter of the relay attenuates the amplitude, the filter also makes the pulses wider. Thus, when the current pulses are high enough, it is possible to detect pulses, which have duration of less than twenty per cent of the sampling interval. Although the measured amplitude can be only a fraction of the actual peak amplitude it doesn't disturb the direction detection, because the algorithm is more sensitive to the sign and timing of the I_0 transient than sensitive to the absolute amplitude of the transient. Thus a fixed value is used as a pick up level for the I_0 .

Coordination with $V_0>$ back up protection

Especially in a fully compensated situation, the zero sequence voltage back up protection stage $V_0>$ for the bus may not release between consecutive faults and the $V_0>$ might finally do an unselective trip if the intermittent transient stage $I_{0INT}>$ doesn't operate fast enough. The actual operation time of the $I_{0INT}>$ stage is very dependent on the behavior of the fault and the intermittent time setting. To make the co-ordination between $V_0>$ and $I_{0INT}>$ more simple, the start signal of the transient stage $I_{0INT}>$ in an outgoing feeder can be used to block the $V_0>$ backup protection.

Co-ordination with the normal directional ground fault protection based on fundamental frequency signals

The intermittent transient ground fault protection stage $I_{0INT}>$ should always be used together with the normal directional ground fault protection stages $I_{0\phi}>$, $I_{0\phi}>>$. The transient stage $I_{0INT}>$ may in worst case detect the start of a steady ground fault in wrong direction, but will not trip because the peak value of a steady state sine wave I_0 signal must also exceed the corresponding base frequency component's peak value in order to make the $I_{0INT}>$ to trip.

The operation time of the transient stage $I_{0INT}>$ should be lower than the settings of any directional ground fault stage to avoid any unnecessary trip from the $I_{0\phi}>$, $I_{0\phi}>>$ stages. The start signal of the $I_{0INT}>$ stage can be also used to block $I_{0\phi}>$, $I_{0\phi}>>$ stages of all parallel feeders.

Auto reclosing

The start signal of any $I_{0\phi}>$ stage initiating auto reclosing (AR) can be used to block the $I_{0INT}>$ stage to avoid the $I_{0INT}>$ stage with a long intermittent setting to interfere with the AR cycle in the middle of discrimination time.

Usually the $I_{0INT}>$ stage itself is not used to initiate any AR. For transient faults the AR will not help, because the fault phenomena itself already includes repeating self extinguishing.

Operation time, peak amount counter and intermittent time coordination

Algorithm has three independently settable parameters: operation delay, required amount of peaks and intermittent time. All requirements need to be satisfied before stage issues trip signal. There is also settable reset delay: to help ensure that stage does not release before circuit breaker has operated. Setting range for required amount of peaks is 1 – 20 and the setting range for operational delay is 0.04 – 300s. Reset delay setting range is 0.06 – 300s. Intermittent time setting is 0.00 – 300s. If in example setting for peaks is set to 2 and setting for operation delay is set to 160ms and intermittent time is set to 200 ms then function starts calculating operation delay from first peak and after second peak in 80 ms peak amount criteria is satisfied and when 160ms comes full operation time criteria is satisfied and the stage issues trip (Figure 5.25). If second peak does not come before operational delay comes full the stage is released after intermittent time has come full. But if the second peak comes after operation time has come full but still inside intermittent time then trip is issued instantly (Figure 5.26). If intermittent time comes full before operation delay comes full the stage is released (Figure 5.27). There are a couple of limitations to avoid completely incorrect settings.

The algorithm assumes that peaks can't come more often than 10 ms. So, if the peak amount is set to 10, then the operational delay will not accept a smaller value than 100 ms. Also, if the operational delay is set to 40 ms, then it's not possible to set a higher peak amount setting than 4. These input restrictions prohibit the entry of parameters to the relay, such as operational delay and peak amount, that are not physically possible.

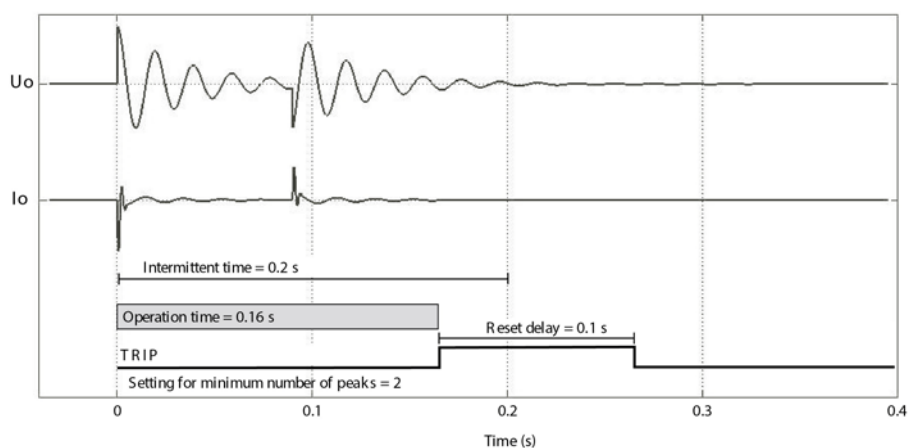


Figure 5.25: Set peak amount is satisfied and operation time comes full inside intermittent time setting. Stage issues a trip.

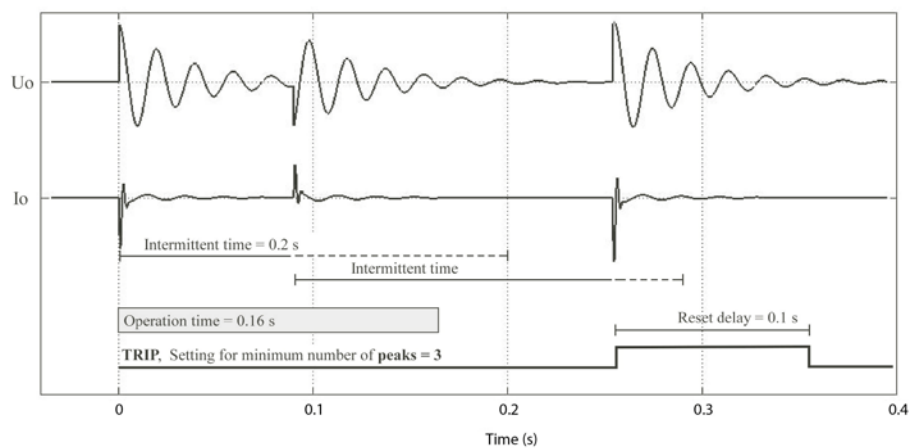


Figure 5.26: Peak amount is not satisfied when operation delay comes full but last required peak comes during intermittent time. Stage issues instant trip when peak amount comes satisfied.

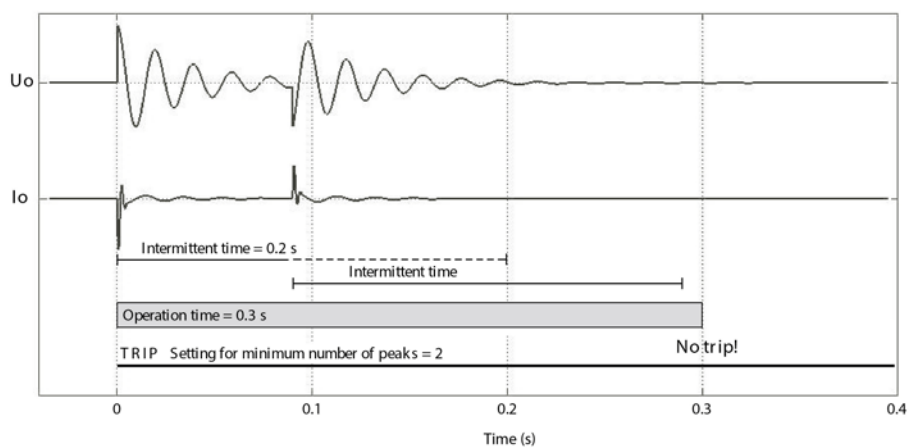


Figure 5.27: Peak amount is satisfied but intermittent time comes full before operation time comes full. Stage is released.

Setting groups

There are two settings groups available. Switching between setting groups can be controlled by digital inputs, virtual inputs (mimic display, communication, logic) and manually.

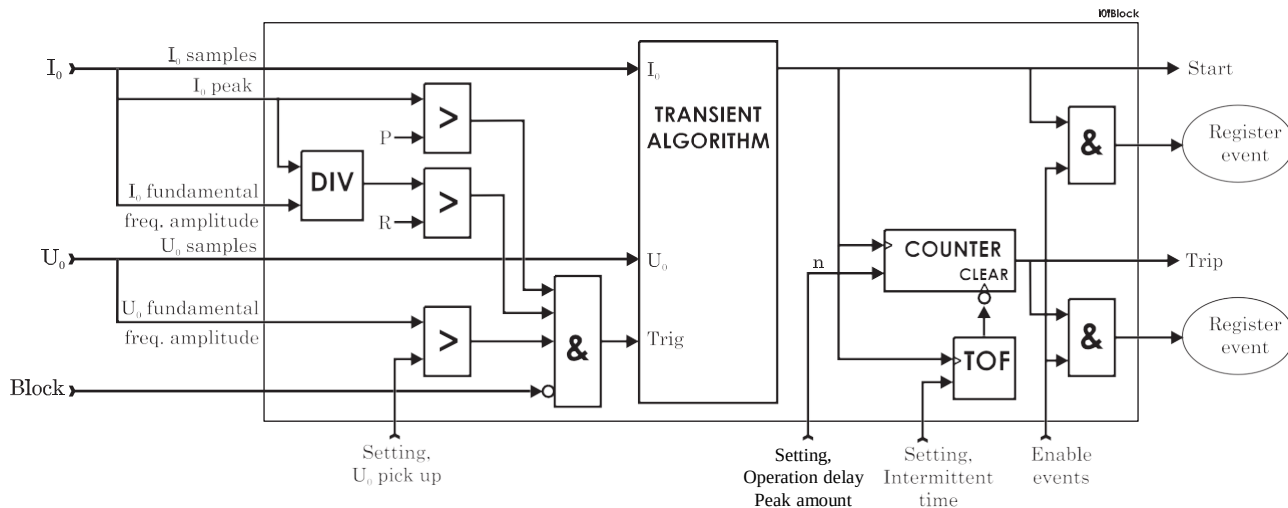


Figure 5.28: Block diagram of the directional intermittent transient ground fault stage $I_{0INT}>$.

Table 5.20: Parameters of the directional intermittent transient ground fault stage $I_{0INT}>$ (67NI)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	Clr
TCntr			Cumulative trip counter	Clr
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	Dlx		Digital input	
	Vlx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Io input	Io1Peak		Io1 Connectors X:1-7 & 8	Set
	Io2Peak		Io2 Connectors X:1-9 & 10	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset after a five minute timeout.	Set
Io1 peak		pu	The detected I_0 value according the parameter "Input" below.	
Io2 peak				

Parameter	Value	Unit	Description	Note
U ₀		%	The measured U ₀ value. U _{0N} = 100 %	
Direction mode	Forward Reverse		Setting between direction towards line or bus	Set
U ₀ >		%	U ₀ pick up level. U _{0N} = 100 %	Set
t>	0.04 – 300	s	Operation delay setting	Set
Min. peaks	1 – 20		Minimum number of peaks required	Set
Reset	0.06 – 300	s	Reset delay setting	Set
Intrmt		s	Intermittent time. When the next fault occurs within this time, the delay counting continues from the previous value.	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on

For details of setting ranges, see section Protection functions.

Recorded values of the latest eight faults

There is detailed information available of the eight latest detected faults: Time stamp, V₀ voltage, elapsed delay and setting group.

Table 5.21: Recorded values of the directional intermittent transient ground fault stage (8 latest faults) $I_{0INT}> (67NI)$

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		pu	Maximum detected ground fault current
EDly		%	Elapsed time of the operating time setting. 100% = trip
U ₀		%	Max. U ₀ voltage during the fault
SetGrp	1 2		Active setting group during fault

Capacitor bank unbalance protection

The device enables capacitor, filter and reactor bank protection, with its five current measurement inputs. The fifth input is typically useful for unbalance current measurement of a double-wye connected ungrounded bank.

Furthermore, the unbalance protection is highly sensitive to detect internal faults of a bank because of the sophisticated natural unbalance compensation. However, the location method gives the protection a new dimension and enables easy maintenance monitoring for a bank.

This protection scheme is specially used in double wye connected capacitor banks. The unbalance current is measured with a dedicated current transformer (could be like 5A/5A) between two starpoints of the bank. The unbalance current is not affected by system unbalance. However, due to manufacturing tolerances, some amount of natural unbalance current exists between the starpoints. This natural unbalance current affects the settings, thus, the setting has to be increased.

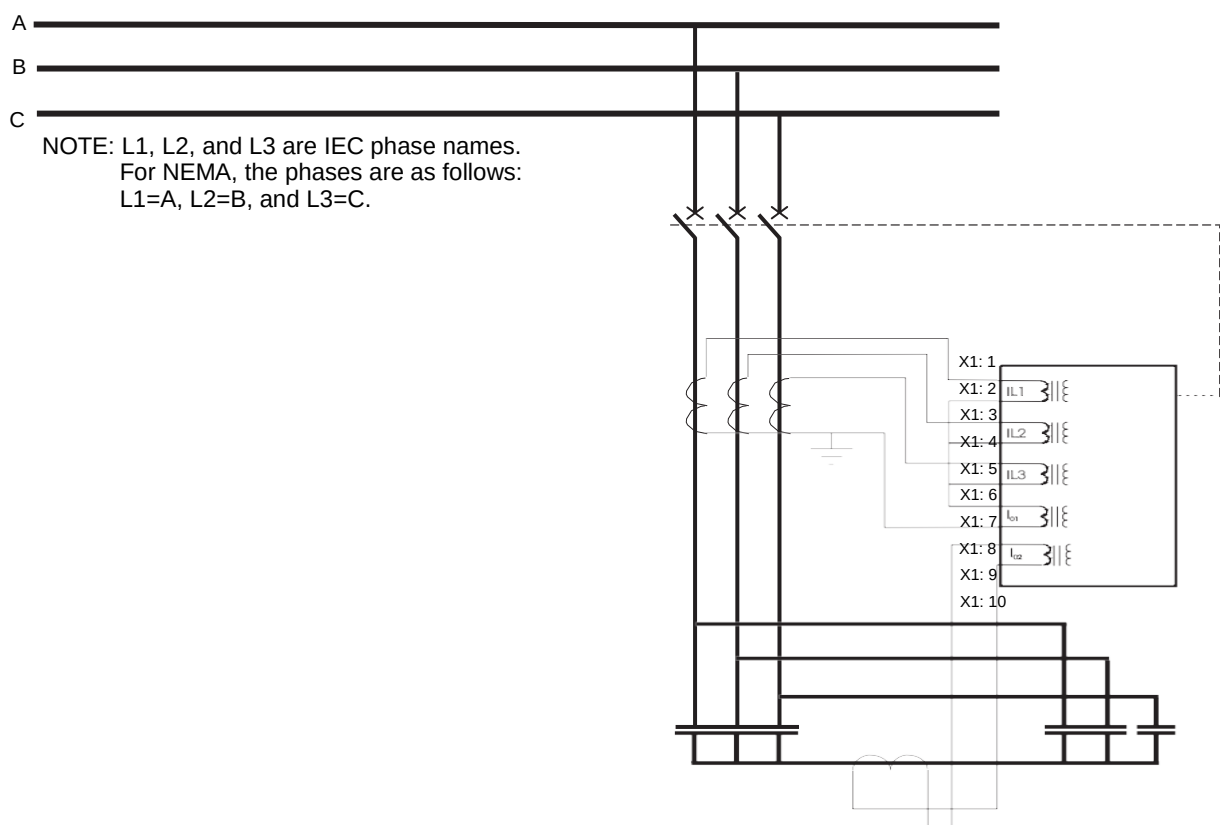


Figure 5.29: Typical capacitor bank protection application with VAMP devices.

Compensation method

The method for unbalance protection is to compensate the natural unbalance current. The compensation is triggered manually when commissioning.

The phasors of the unbalance current and one phase current are recorded.

This is because one polarizing measurement is needed. When the phasor of the unbalance current is always related to I_A , the frequency changes or deviations have no effect on the protection.

After recording, the measured unbalance current corresponds to the zero-level and therefore, the setting of the stage can be very sensitive.

Compensation and location

The most sophisticated method is to use the same compensation method as mentioned above, but the add-on feature is to locate the branch of each detected issue or to be more precise, the open fuse.

This feature is implemented to the stage $I_{0>>>>}$, while the other stage $I_{0>>>}$ can still function as normal unbalance protection stage with compensation method. Normally, the $I_{0>>>>}$ could be set as an alarming stage while stage $I_{0>>>}$ will trip the circuit breaker.

The stage $I_{0>>>>}$ should be set based on the calculated unbalance current change of one detected issue. This can be easily calculated. However, the setting must have some margin, possibly 10% less than the calculated value, since there are some tolerances in the primary equipment as well as in the relay measurement circuit. Then, the time setting of $I_{0>>>>}$ is not used for tripping purposes. The time setting specifies, how long the device must wait until it is certain that it detects an issue in the bank. After this time has elapsed, the stage $I_{0>>>>}$ makes a new compensation automatically, and the measured unbalance current for this stage is now zero. Note, the automatic compensation does not effect on the measured unbalance current of stage $I_{0>>>}$.

If it detects an issue in the bank, the algorithm checks the phase angle of the unbalance current related to the phase angle of the phase current I_A . Based on this angle, the algorithm can increase the corresponding detected issue counter (there are six counters).

The user can set for the stage $I_{0>>>>}$ the allowed number of detected issues, e.g. if set to three elements, the fourth detected issue will issue the trip signal.

The detected issue location function is used with internal fused capacitor and filter banks. There is no need to use it with fuseless or external fused capacitor and filter banks, nor with the reactor banks.

Table 5.22: Setting parameters of capacitor bank unbalance protection $I_{0>>>}$, $I_{0>>>>}$ (50N/51N):

Parameter	Value	Unit	Default	Description
Input	Io1; Io2; IoCalc	-	Io2	Current measurement input. NOTE! Do not use the calculated value which is only for ground fault protection purposes
Io>>>	0.01 – 20.00	pu	0.10	Setting value
Io>>>>	0.01 – 20.00	pu	0.20	Setting value
t>	0.08 – 300.00	s	0.50 (Io>>>), 1.00 (Io>>>>)	Definite operating time
CMode	Off; On (Io>>>); Off; Normal; Location(Io>>>>)	-	Off	Compensation selection
SaveBa	-; Get	-	-	Trigger the phasor recording
SetBal	0.010 – 3.000	pu	0.050	Compensation level
S_On	On; Off	-	On	Start on event
S_Off	On; Off	-	On	Start off event
T_On	On; Off	-	On	Trip on event
T_Off	On; Off	-	On	Trip off event
DloSav	On; Off	-	Off	Recording triggered event
DloSav	On; Off	-	Off	Recording ended event

Table 5.23: Measured and recorded values of capacitor bank unbalance protection $I_{0>>>}$, $I_{0>>>>}$ (50N/51N):

	Parameter	Value	Unit	Description
Measured values	I_0		pu	unbalance current (including the natural unbalance current)
	dI_0		A	Compensated unbalance current
Display	$I_{0>>>}$, $I_{0>>>>}$		A	Setting value
Recorded values	SCntr		-	Cumulative start counter
	TCntr		-	Cumulative trip counter
	Flt		pu	The max. fault value
	EDly		%	Elapsed time as compared to the set operating time; 100% = tripping
	Isaved		A	Recorded natural unbalance current
	SavedA		deg	Recorded phase angle of natural unbalance current
	Faults ($I_{0>>>>}$ only)		-	Allowed number of detected detected issues
	Total ($I_{0>>>>}$ only)		-	Actual # of detected detected issues in bank
	Clear ($I_{0>>>>}$ only)	-; Clear	-	Clear the element counters
	$L1^*-B1$ ($I_{0>>>>}$ only)		-	Number of detected detected issues in phase L1 in brach 1 (left side)
	$L1^*-B2$ ($I_{0>>>>}$ only)		-	Number of detected detected issues in phase L1 in brach 2 (right side)
	$L2^*-B1$ ($I_{0>>>>}$ only)		-	Number of detected detected issues in phase L2 in brach 1 (left side)
	$L2^*-B2$ ($I_{0>>>>}$ only)		-	Number of detected detected issues in phase L2 in brach 2 (right side)
	$L3^*-B1$ ($I_{0>>>>}$ only)		-	Number of detected detected issues in phase L3 in brach 1 (left side)
	$L3^*-B2$ ($I_{0>>>>}$ only)		-	Number of detected detected issues in phase L3 in brach 2 (right side)
	Locat ($I_{0>>>>}$ only)		-	Changed unbalance current (after automatic compensation)
	LocAng ($I_{0>>>>}$ only)		-	Changed phase angle of the unbalance current (after automatic compensation)

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Zero sequence voltage protection $V_0 > (59N)$

The zero sequence voltage protection is used as unselective backup for ground faults and also for selective ground fault protections for motors having a unit transformer between the motor and the busbar.

This function is sensitive to the fundamental frequency component of the zero sequence voltage. The attenuation of the third harmonic is more than 60 dB. This is essential, because 3n harmonics exist between the neutral point and ground also when there is no ground fault.

Whenever the measured value exceeds the user's pick-up setting of a particular stage, this stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation time delay setting, a trip signal is issued.

Measuring the zero sequence voltage

The zero sequence voltage is either measured with three voltage transformers (e.g., open delta connection), one voltage transformer between the motor's neutral point and ground or calculated from the measured phase-to-neutral voltages according to the selected voltage measurement mode (see the section Voltage measurement modes):

- When the voltage measurement mode is 3LN: the zero sequence voltage is calculated from the phase voltages and therefore a separate zero sequence voltage transformer is not needed. The setting values are relative to the configured voltage transformer (VT) voltage/ $\sqrt{3}$.
- When the voltage measurement mode contains "+ V_0 ": The zero sequence voltage is measured with voltage transformer(s) for example using an open delta connection. The setting values are relative to the VT_0 secondary voltage defined in configuration.

NOTE: The U_0 signal must be connected according the connection diagram (Figure 11.17) in order to get a correct polarization. Please note that actually the negative V_0 , $-V_0$, is to be connected to the device.

Two independent stages

There are two separately adjustable stages: $V_0 >$ and $V_0 >>$. Both stages can be configured for definite time (DT) operation characteristic.

The zero sequence voltage function comprises two separately adjustable zero sequence voltage stages (stage $V_0 >$ and $V_0 >>$).

Setting groups

There are two settings groups available for both stages. Switching between setting groups can be controlled by digital inputs, virtual inputs (communication, logic) and manually.

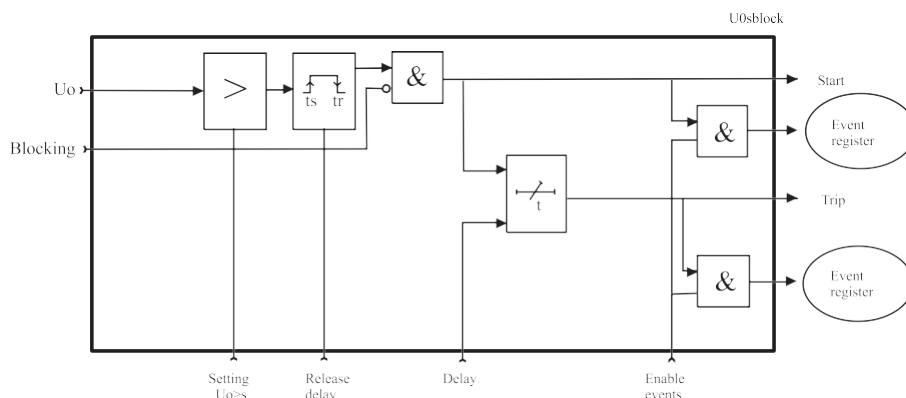


Figure 5.30: Block diagram of the zero sequence voltage stages $V_0>$, $V_0>>$

Table 5.24: Parameters of the residual overvoltage stages $V_0>$, $V_0>>$

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
SGrpDI	- DIx VIx LEDx VOx		Digital signal to select the active setting group None Digital input Virtual input LED indicator signal Virtual output	Set
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
U_0		%	The supervised value relative to $U_n/\sqrt{3}$	
$U_0>$, $U_0>>$		%	Pick-up value relative to $U_n/\sqrt{3}$	Set
$t>$, $t>>$		s	Definite operation time	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see the section Protection functions.

Recorded values of the latest eight faults

There are detailed information available of the eight latest faults:
Time stamp, fault voltage, elapsed delay and setting group.

Table 5.25: Recorded values of the residual overvoltage stages $V_0>$, $V_0>>$

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		%	Fault voltage relative to $U_n/\sqrt{3}$
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1 2		Active setting group during fault

Thermal overload protection $T > (49)$

The thermal overload function protects the motor in the motor mode or cables in the feeder mode against excessive heating.

Thermal model

The temperature is calculated using rms values of phase currents and a thermal model according IEC 60255-8. The rms values are calculated using harmonic components up to the 15th.

$$\text{Trip time: } t = T \cdot \frac{I^2 - I_p^2}{\ln \frac{P}{I^2 - a^2}}$$

$$\text{Alarm: } a = k \cdot k_\Theta \cdot I_{MODE} \cdot \sqrt{alarm} \quad (\text{Alarm 60\%} = 0.6)$$

$$\text{Trip: } a = k \cdot k_\Theta \cdot I_{MODE}$$

$$\text{Release time: } t = T \cdot C_T \cdot \ln \frac{I^2}{a^2 - I^2}$$

$$\text{Trip release: } a = \sqrt{0.95} \times k \times I_{MODE}$$

$$\text{Start release: } a = \sqrt{0.95} \times k \times I_{MODE} \times \sqrt{alarm} \quad (\text{Alarm 60\%} = 0.6)$$

$T =$ Operation time

$\tau =$ Thermal time constant tau (Setting value)

$\ln =$ Natural logarithm function

$I =$ Measured rms phase current (the max. value of three phase currents)

$I_p =$ Preload current, $I_p = \sqrt{\theta} \times k \times I_N$ (If temperature rise is 120% ($\theta = 1.2$). This parameter is the memory of the algorithm and corresponds to the actual temperature rise.

$k =$ Overload factor (Maximum continuous current), i.e. service factor.(Setting value)

$k_\Theta =$ Ambient temperature factor (Permitted current due to t_{amb}).

$I_{MODE} =$ The rated current (I_N or I_{MOT})

$C_T =$ Relay cooling time constant (Setting value)

Time constant for cooling situation

If the motor's fan is stopped, the cooling will be slower than with an active fan. Therefore there is a coefficient C_τ for thermal constant available to be used as cooling time constant, when current is less than $0.3xI_{MOT}$.

Heat capacitance, service factor and ambient temperature

The trip level is determined by the maximum allowed continuous current I_{MAX} corresponding to the 100 % temperature rise Θ_{TRIP} i.e. the heat capacitance of the motor or cable. I_{MAX} depends of the given service factor k and ambient temperature Θ_{AMB} and settings I_{MAX40} and I_{MAX70} according the following equation.

$$I_{MAX} = k \cdot k_\Theta \cdot I_{MODE}$$

The value of ambient temperature compensation factor k_Θ depends on the ambient temperature Θ_{AMB} and settings I_{MAX40} and I_{MAX70} . See Figure 5.31. Ambient temperature is not in use when $k_\Theta = 1$. This is true when

- I_{MAX40} is 1.0
- S_{amb} is "n/a" (no ambient temperature sensor)
- T_{AMB} is +40 °C.

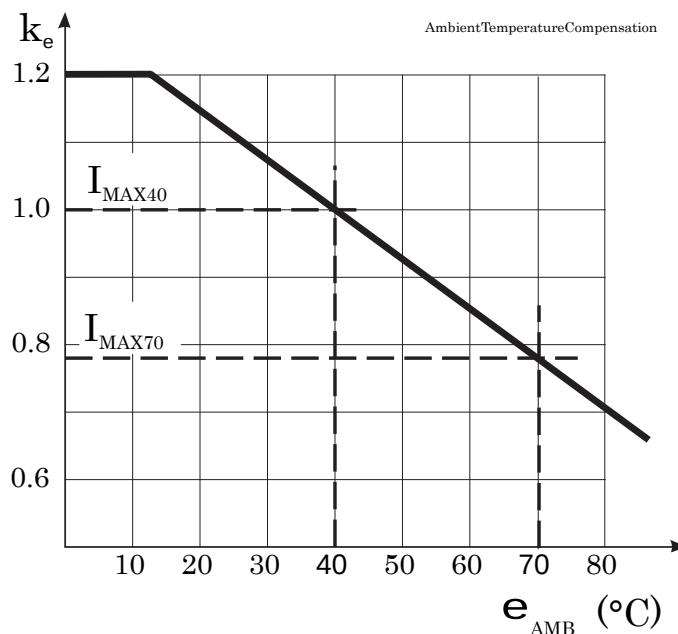


Figure 5.31: Ambient temperature correction of the overload stage T>.

Example of a behavior of the thermal model

Figure 5.31 shows an example of the thermal model behavior. In this example $\tau = 30$ minutes, $k = 1.06$ and $k\Theta = 1$ and the current has been zero for a long time and thus the initial temperature rise is 0 %. At time = 50 minutes the current changes to $0.85 \times I_{\text{MODE}}$ and the temperature rise starts to approach value $(0.85/1.06)^2 = 64$ % according the time constant. At time = 300 min, the temperature is about stable, and the current increases to 5 % over the maximum defined by the rated current and the service factor k . The temperature rise starts to approach value 110 %. At about 340 minutes the temperature rise is 100 % and a trip follows.

Initial temperature rise after restart

When the device is switched on, an initial temperature rise of 70 % is used. Depending of the actual current, the calculated temperature rise then starts to approach the final value.

Alarm function

The thermal overload stage is provided with a separately settable alarm function. When the alarm limit is reached the stage activates its start signal.

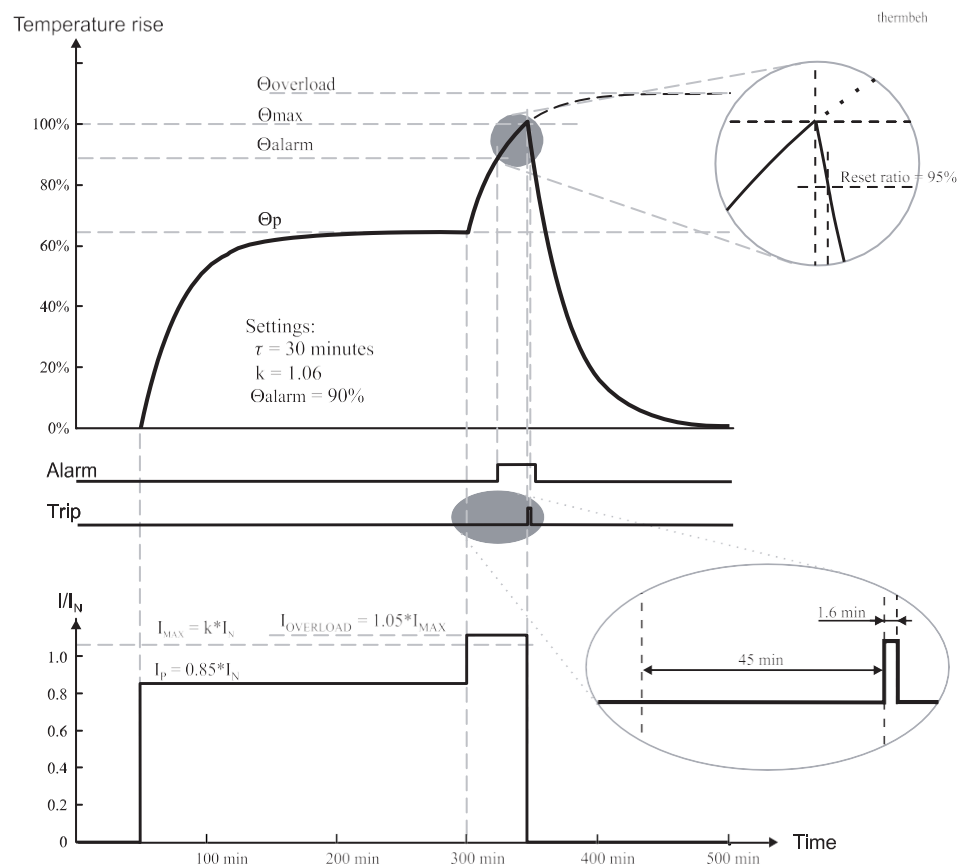


Figure 5.32: Example of the thermal model behavior.

Table 5.26: Parameters of the thermal overload stage T> (49)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
Time	hh:mm:ss		Estimated time to trip	
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
T		%	Calculated temperature rise. Trip limit is 100 %.	F
MaxRMS		Arms	Measured current. Highest of the three phases.	
I _{max}		A	k _x I _n . Current corresponding to the 100 % temperature rise.	
k>		xI _{mode}	Allowed overload (service factor)	Set
Alarm		%	Alarm level	Set
tau		min	Thermal time constant	Set
ctau		xtau	Coefficient for cooling time constant. Default = 1.0	Set
kT _{amb}		xI _{mode}	Ambient temperature corrected max. allowed continuous current	
I _{max40}		% I _{mode}	Allowed load at T _{amb} +40 °C. Default = 100 %.	Set
I _{max70}		% I _{mode}	Allowed load at T _{amb} +70 °C.	Set
T _{amb}		°C	Ambient temperature. Editable S _{amb} =n/a. Default = +40 °C	Set
S _{amb}			Sensor for ambient temperature	Set
	n/a		No sensor in use for T _{amb}	
	ExtAI1 – 16		External Analog input 1 – 16	

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see the section Protection functions.

Overvoltage protection V> (59)

The overvoltage function measures the fundamental frequency component of the line-to-line voltages regardless of the voltage measurement mode (see the section Voltage measurement modes). By using line-to-line voltages any phase-to-ground over-voltages during ground faults have no effect. (The ground fault protection functions will detect ground faults.) Whenever any of these three line-to-line voltages exceeds the user's pick-up setting of a particular stage, this stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation time delay setting, a trip signal is issued.

In solidly grounded 4-wire networks with loads between phase and neutral overvoltage protection may be needed for phase-to-ground voltages, too. In such applications the programmable stages can be used. See the section Programmable stages (99).

Three independent stages

There are three separately adjustable stages: V>, V>> and V>>>. All the stages can be configured for definite time (DT) operation characteristic.

Configurable release time

The V> stage has a settable release time, which enables detecting intermittent faults. This means that the time counter of the protection function does not reset immediately after the fault is cleared, but resets after the release time has elapsed. If the fault appears again before the release time has elapsed, the delay counter continues from the previous value. This means that the function will eventually trip if faults are occurring often enough.

Configurable hysteresis

The dead band is 3 % by default. It means that an overvoltage fault is regarded as a fault until the voltage drops below 97 % of the pick up setting. In a sensitive alarm application a smaller hysteresis is needed. For example if the pick up setting is about only 2 % above the normal voltage level, hysteresis must be less than 2 %. Otherwise the stage will not release after fault.

Setting groups

There are two settings groups available for each stage. Switching between setting groups can be controlled by digital inputs, virtual inputs (communication, logic) and manually.

Figure 5.33 shows the functional block diagram of the overvoltage function stages V>, V>> and V>>>.

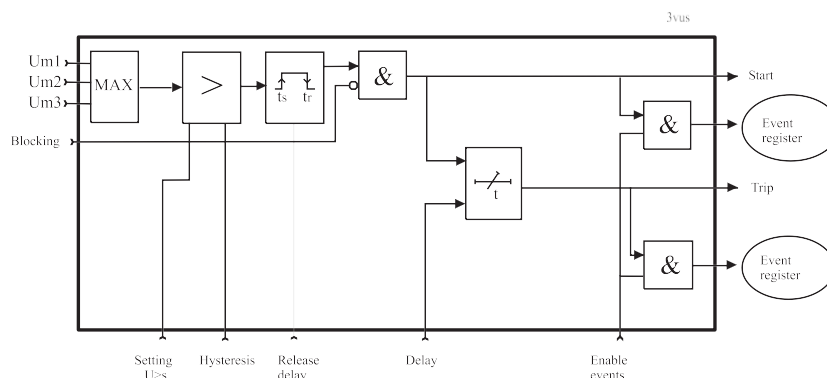


Figure 5.33: Block diagram of the three-phase overvoltage stages V>, V>> and V>>>

Table 5.27: Parameters of the overvoltage stages V>, V>>, V>>>

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
SGrpDI	- DIx VIx LEDx VOx		Digital signal to select the active setting group None Digital input Virtual input LED indicator signal Virtual output	Set
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
Umax		V	The supervised value. Max. of U12, U23 and U31	
U>, U>>, U>>>		V	Pick-up value scaled to primary value	
U>, U>>, U>>>		% Un	Pick-up setting relative to U_N	Set
t>, t>>, t>>>		s	Definite operation time	Set
RlsDly		s	Release time (U> stage only) Dead	Set
Hyster	3 (default)	%	band size i.e. hysteresis	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see the section Protection functions.

Recorded values of the latest eight faults

There are detailed information available of the eight latest faults:
Time stamp, fault voltage, elapsed delay and setting group.

Table 5.28: Recorded values of the overvoltage stages (8 latest faults) V>, V>>, V>>>

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		% Un	Maximum fault voltage
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1		Active setting group during fault
	2		

Undervoltage protection V< (27)

This is a basic undervoltage protection. The function measures the three line-to-line voltages and whenever the smallest of them drops below the user's pick-up setting of a particular stage, this stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation time delay setting, a trip signal is issued.

Blocking during VT fuse while open

As all the protection stages the undervoltage function can be blocked with any internal or external signal using the block matrix. For example if the secondary voltage of one of the measuring transformers disappears because of a fuse opening (See VT supervision function in the section Voltage transformer supervision). The blocking signal can also be a signal from the user's logic (see the section Logic functions).

Self blocking at very low voltage

The stages can be blocked with a separate low limit setting. With this setting, the particular stage will be blocked, when the biggest of the three line-to-line voltages drops below the given limit. The idea is to avoid purposeless tripping, when voltage is switched off. If the operating time is less than 0.08 s, the blocking level setting should not be less than 15% (for the blocking action to be fast enough). The self blocking can be disabled by setting the low voltage block limit equal to zero.

Figure 5.34 shows an example of low voltage self blocking.

Table 5.28: Recorded values of the overvoltage stages (8 latest faults) V>, V>>, V>>>

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		% Un	Maximum fault voltage
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1 2		Active setting group during fault

Undervoltage protection $V<$ (27)

This is a basic undervoltage protection. The function measures the three line-to-line voltages and whenever the smallest of them drops below the user's pick-up setting of a particular stage, this stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation time delay setting, a trip signal is issued.

Blocking during VT fuse opening

As all the protection stages the undervoltage function can be blocked with any internal or external signal using the block matrix. For example if the secondary voltage of one of the measuring transformers disappears because of a fuse opening (See VT supervision function in the section Voltage transformer supervision). The blocking signal can also be a signal from the user's logic (see the section Logic functions).

Self blocking at very low voltage

The stages can be blocked with a separate low limit setting. With this setting, the particular stage will be blocked, when the biggest of the three line-to-line voltages drops below the given limit. The idea is to avoid purposeless tripping, when voltage is switched off. If the operating time is less than 0.08 s, the blocking level setting should not be less than 15% (for the blocking action to be fast enough). The self blocking can be disabled by setting the low voltage block limit equal to zero.

Figure 5.34 shows an example of low voltage self blocking.

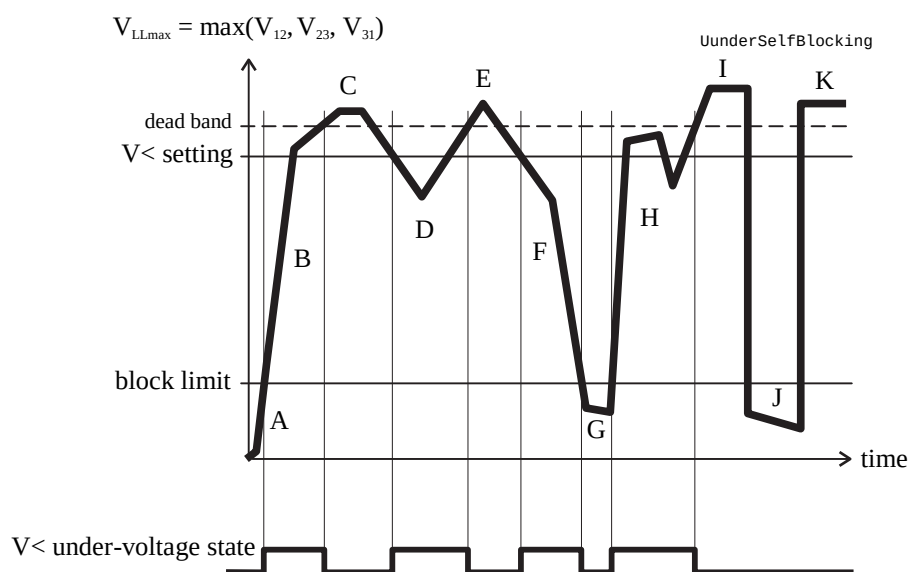


Figure 5.34: Under voltage state and block limit.

- | | | | |
|---|--|---|--|
| A | The maximum of the three line-to-line voltages V_{LLmax} is below the block limit. This is not regarded as an under voltage situation. | F | This is an under voltage situation. |
| B | The voltage V_{LLmin} is above the block limit but below the pick-up level. This is an undervoltage situation. | G | The voltage V_{LLmin} is under block limit and this is not regarded as an under voltage situation. |
| C | Voltage is OK, because it is above the pick-up limit. | H | This is an under voltage situation. |
| D | This is an under voltage situation. | I | Voltage is OK. |
| E | Voltage is OK. | J | Same as G |
| | | K | Voltage is OK. |

Three independent stages

There are three separately adjustable stages: $V<$, $V<<$ and $V<<<$. All these stages can be configured for definite time (DT) operation characteristic.

Setting groups

There are two settings groups available for all stages. Switching between setting groups can be controlled by digital inputs, virtual inputs (mimic display, communication, logic) and manually.

Table 5.29: Parameters of the under voltage stages V<, V<<, V<<<

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	DIx		Digital input	
	VIx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays, too. Automatically reset by a 5-minute timeout.	Set
MinU		V	The supervised minimum of line-to-line voltages in primary volts	
U<, U<<, U<<<		V	Pick-up value scaled to primary value	
U<, U<<, U<<<		% Un	Pick-up setting	Set
t<, t<<, t<<<		S	Definite operation time	Set
LVBk		% Un	Low limit for self blocking	Set
RIsDly		S	Release time (U< stage only)	Set
Hyster	Default 3.0 %	%	Dead band setting	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see the section Protection functions.

Recorded values of the latest eight faults

There are detailed information available of the eight latest faults for each of the stages: Time stamp, fault voltage, elapsed delay, voltage before the fault and setting group.

Table 5.30: Recorded values of the undervoltage stages (8 latest faults) V<, V<<, V<<<

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
FIt		% Un	Minimum fault voltage
EDly		%	Elapsed time of the operating time setting. 100% = trip
PreFIt		% Un	Supervised value before fault, 1 s average value.
SetGrp	1, 2		Active setting group during fault

Directional power protection P<, P<< (32)

Directional power function can be used for example to disconnect a motor in case the supply voltage is lost and thus helps prevent power generation by the motor. It can also be used to detect loss of load of a motor.

Directional power function is sensitive to active power. For reverse power function the pick-up value is negative. For underpower function a positive pick-up value is used. Whenever the active power goes under the pick-up value, the stage picks up and issues a start signal. If the fault situation stays on longer than the delay setting, a trip signal is issued.

The pick-up setting range is from –200 % to +200 % of the nominal apparent power S_N . The nominal apparent power is determined by the configured voltage and current transformer values.

Equation 5.3:

$$S_n = V_{T_{Rated Primary}} \cdot CT_{Rated Primary} \cdot \sqrt{3}$$

There are two identical stages available with independent setting parameters.

Table 5.31: Setting parameters of P< and P<< stages

Parameter	Value	Unit	Default	Description
P<, P<<	-200.0 – +200.0	%Sn	-4.0 (P<), -20.0(P<<)	P<, P<< pick-up setting
t<	0.3 – 300.0	s	1.0	P<, P<< operational delay
S_On	Enabled; Disabled	-	Enabled	Start on event
S_Off	Enabled; Disabled	-	Enabled	Start off event
T_On	Enabled; Disabled	-	Enabled	Trip on event
T_Off	Enabled; Disabled	-	Enabled	Trip off event

Table 5.32: Measured and recorded values of P< and P<< stages

	Parameter	vaule	Unit	Description
Measured value	P		kW	Active power
Recorded values	SCntr		-	Start counter (Start) reading
	TCntr		-	Trip counter (Trip) reading
	Flt		%Sn	Max value of fault
	EDly		%	Elapsed time as compared to the set operating time, 100% = tripping

Frequency Protection $f_{><}$, $f_{>><<}$ (81)

Frequency protection is used for load sharing, loss of mains detection and as a backup protection for over-speeding.

The frequency function measures the frequency from the two first voltage inputs. At least one of these two inputs must have a voltage connected to be able to measure the frequency. Whenever the frequency crosses the user's pick-up setting of a particular stage, this stage picks up and a start signal is issued. If the fault situation remains on longer than the user's operation delay setting, a trip signal is issued. For situations, where no voltage is present an adapted frequency is used. See the section Principles of numerical protection techniques.

Protection mode for $f_{><}$ and $f_{>><<}$ stages

These two stages can be configured either for overfrequency or for underfrequency.

Under voltage self blocking of underfrequency stages

The underfrequency stages are blocked when biggest of the three line-to-line voltages is below the low voltage block limit setting. With this common setting, LVBlk, all stages in underfrequency mode are blocked, when the voltage drops below the given limit. The idea is to avoid purposeless alarms, when the voltage is off.

Initial self blocking of underfrequency stages

When the biggest of the three line-to-line voltages has been below the block limit, the under frequency stages will be blocked until the pick-up setting has been reached.

Four independent frequency stages

There are four separately adjustable frequency stages: $f_{><}$, $f_{>><<}$, $f_{<}$, $f_{<<}$. The two first stages can be configured for either overfrequency or underfrequency usage. So four underfrequency stages total can be in use simultaneously. Using the programmable stages even more can be implemented (section Programmable stages (99)). All the stages have definite operation time delay (DT).

Setting groups

There are two settings groups available for each stage. Switching between setting groups can be controlled by digital inputs, virtual inputs (mimic display, communication, logic) and manually.

Table 5.33: Parameters of the over & underfrequency stages

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
f		Hz	The supervised value.	
fX fXX f< f<<		Hz	Pick-up value Over/under stage f><. See row "Mode". Over/under stage f>><<. Under stage f< Under stage f<<	Set
tX tXX t< t<<		s	Definite operation time f>< stage f>><< stage f< stage f<< stage	Set
Mode	> <		Operation mode. (only for f>< and f>><<) Overfrequency mode Underfrequency mode	Set
LVblk		% Un	Low limit for self blocking. This is a common setting for all four stages.	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see the section Protection functions.

Recorded values of the latest eight faults

There is detailed information available for the eight latest faults:
Time stamp, frequency during fault, elapsed delay and setting group.

Table 5.34: Recorded values of the over & under frequency stages (8 latest faults) $f > <$, $f > < <$, $f <$, $f < <$

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		Hz	Detected faulty frequency
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1, 2		Active setting group during fault

Rate of change of frequency (ROCOF) (81R)

Rate of change of frequency (ROCOF or df/dt) function is used for fast load shedding, to speed up operation time in over- and under-frequency situations and to detect loss of grid. For example a centralized dedicated load shedding relay can be omitted and replaced with distributed load shedding, if all outgoing feeders are equipped with VAMP devices.

A special application for ROCOF is to detect loss of grid (loss of mains, islanding). The more the remaining load differs from the load before the loss of grid, the better the ROCOF function detects the situation.

Frequency behavior during load switching

Load switching and fault situations may generate change in frequency. A load drop may increase the frequency and increasing load may decrease the frequency, at least for a while. The frequency may also oscillate after the initial change. After a while the control system of any local generator may drive the frequency back to the original value. However, in case of a heavy short circuit fault or in case the new load exceeds the generating capacity, the average frequency keeps on decreasing.

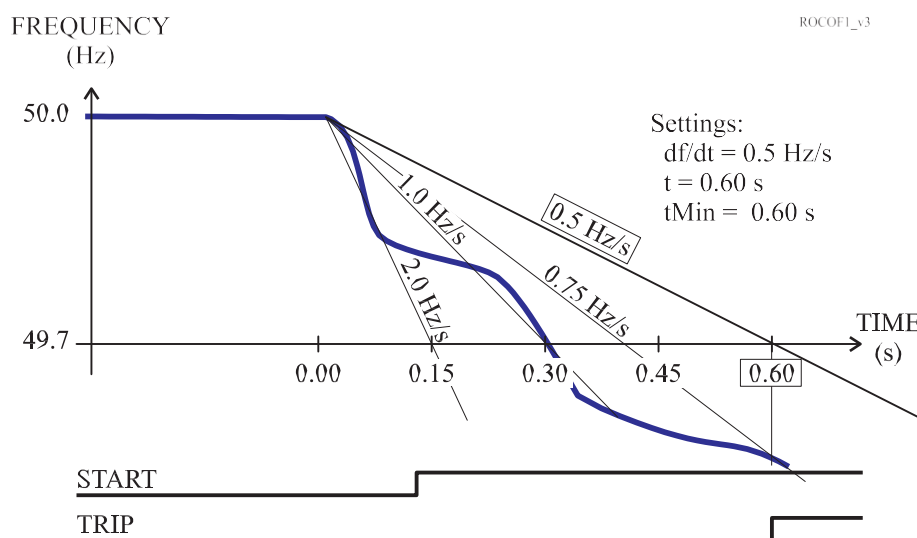


Figure 5.35: An example of definite time df/dt operation time. At 0.6 s, which is the delay setting, the average slope exceeds the setting 0.5 Hz/s and a trip signal is generated.

Setting groups

There are two settings groups available. Switching between setting groups can be controlled by digital inputs, virtual inputs (mimic display, communication, logic) and manually.

Description of ROCOF implementation

The ROCOF function is sensitive to the absolute average value of the time derivate of the measured frequency $|df/dt|$. Whenever the measured frequency slope $|df/dt|$ exceeds the setting value for 80 ms time, the ROCOF stage picks up and issues a start signal after an additional 60 ms delay. If the average $|df/dt|$, since the pick-up moment, still exceeds the setting, when the operation delay time has elapsed, a trip signal is issued. In this definite time mode the second delay parameter "minimum delay, t_{MIN} " must be equal to the operation delay parameter "t".

If the frequency is stable for about 80 ms and the time t has already elapsed without a trip, the stage will release.

ROCOF and frequency over and under stages

One difference between over-/under-frequency and df/dt function is the speed. In many cases a df/dt function can predict an overfrequency or underfrequency situation and is thus faster than a simple overfrequency or under-frequency function. However, in most cases a standard overfrequency and underfrequency stages must be used together with ROCOF to help ensure tripping also in case the frequency drift is slower than the slope setting of ROCOF.

Definite operation time characteristics

Figure 5.35 shows an example where the df/dt pick-up value is 0.5 Hz/s and the delay settings are $t=0.60$ s and $t_{MIN}=0.60$ s. Equal times $t = t_{MIN}$ will give a definite time delay characteristics. Although the frequency slope fluctuates the stage will not release but continues to calculate the average slope since the initial pick-up. At the defined operation time, $t = 0.6$ s, the average slope is 0.75 Hz/s. This exceeds the setting, and the stage will trip.

At slope settings less than 0.7 Hz/s the fastest possible operation time is limited according the Figure 5.36

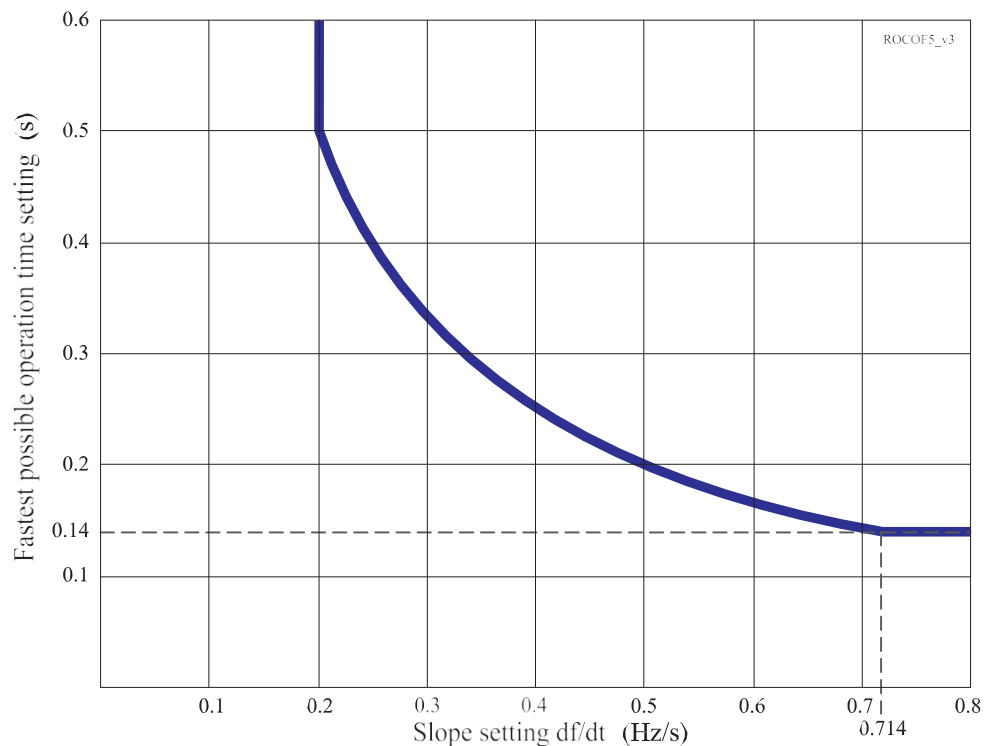


Figure 5.36: At very sensitive slope settings the fastest possible operation time is limited according the figure.

Inverse operation time characteristics

By setting the second delay parameter t_{MIN} smaller than the operational delay t , an inverse type of operation time characteristics is achieved.

Figure 5.38 shows one example, where the frequency behavior is the same as in the first figure, but the t_{MIN} setting is 0.15 s instead of being equal with t . The operation time depends of the measured average slope according the following equation.

Equation 5.4:

$$t_{TRIP} = \frac{s_{SET} \cdot t_{SET}}{|s|}$$

 t_{TRIP} = Resulting operation time (seconds). s_{SET} = df/dt i.e. slope setting (hertz/seconds). t_{SET} = Operation time setting t (seconds). s = Measured average frequency slope (hertz/seconds).

The minimum operation time is always limited by the setting parameter t_{MIN} . In the example of the fastest operation time, 0.15 s, is achieved when the slope is 2 Hz/s or more. The leftmost curve in Figure 5.37 shows the inverse characteristics with the same settings as in Figure 5.38.

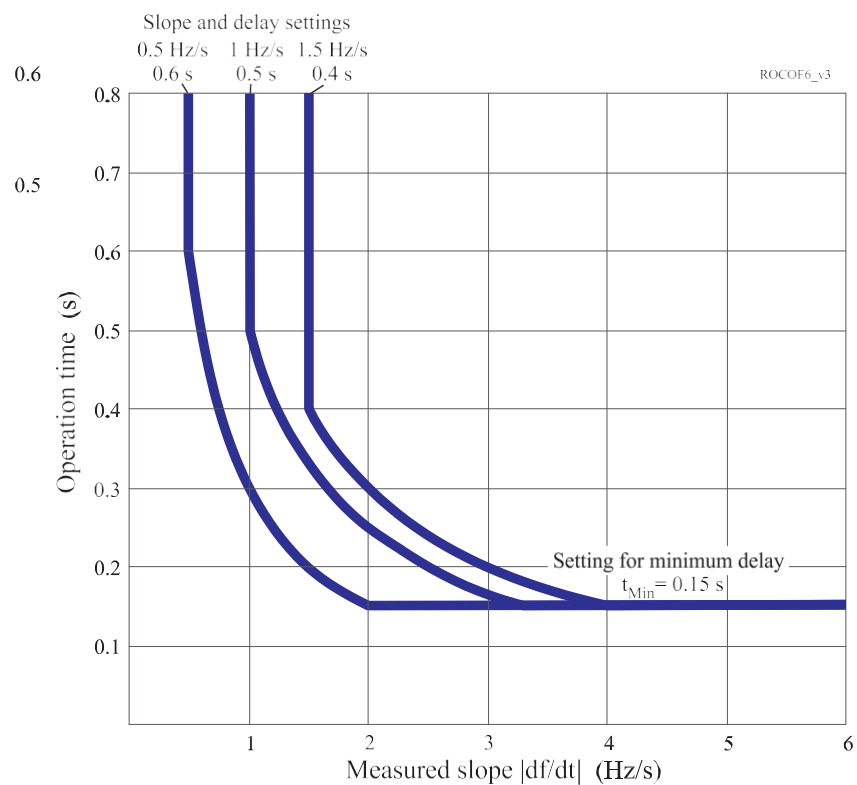


Figure 5.37: Three examples of possible inverse df/dt operation time characteristics. The slope and operation delay settings define the knee points on the left. A common setting for t_{Min} has been used in these three examples. This minimum delay parameter defines the knee point positions on the right.

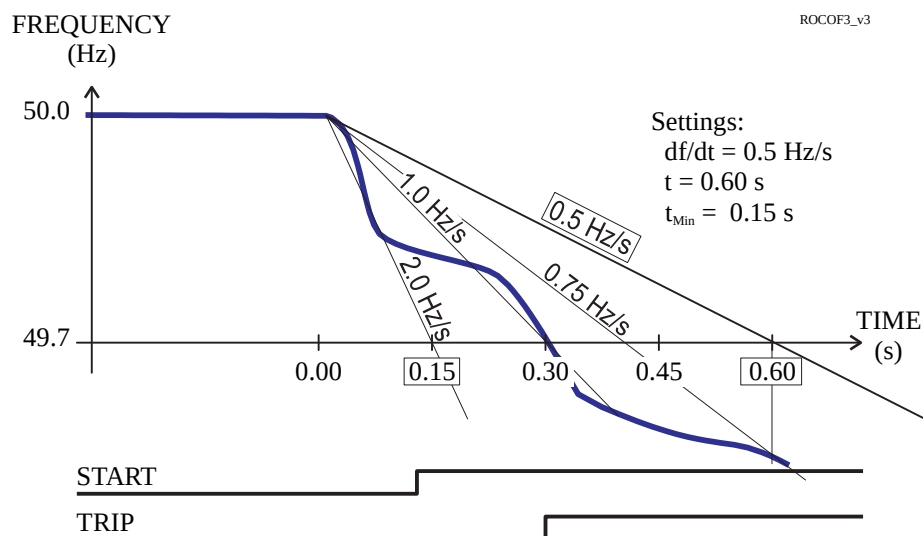


Figure 5.38: An example of inverse df/dt operation time. The time to trip will be 0.3 s, although the setting is 0.6 s, because the average slope 1 Hz/s is steeper than the setting value 0.5 Hz/s.

Table 5.35: Setting parameters of df/dt stage

Parameter	Value	Unit	Default	Description
df/dt	0.2 – 10.0	Hz/s	5.0	df/dt pick-up setting
$t >$	0.14 – 10.0	s	0.50	df/dt operational delay
$t_{\text{Min}} >$	0.14 – 10.0	s	0.50	df/dt minimum delay
S_On	Enabled; Disabled	-	Enabled	Start on event
S_Off	Enabled; Disabled	-	Enabled	Start off event
T_On	Enabled; Disabled	-	Enabled	Trip on event
T_Off	Enabled; Disabled	-	Enabled	Trip off event

Table 5.36: Measured and recorded values of df/dt stage

	Parameter	Value	Unit	Description
Measured value	f		Hz	Frequency
	df/dt		Hz/s	Frequency rate of change
Recorded values	SCntr		-	Start counter (Start) reading
	TCntr		-	Trip counter (Trip) reading
	Flt		%Hz/s	Max rate of change fault value
	EDly		%	Elapsed time as compared to the set operating time, 100% = tripping

Synchrocheck (25)

The device includes a function that will check synchronism when the circuit-breaker is closed. The function will monitor voltage amplitude, frequency and phase angle difference between two voltages. Since there are two stages available, it is possible to monitor three voltages. The voltages can be busbar and line or busbar and busbar (bus coupler).

Note: For NEMA, $U=V$.

While using the synchrocheck function, normal measuring modes cannot be used. Therefore, “2LL/LLy”, “1LL+U₀/LLy” or “LL/LLy/LLz” voltage measuring mode must be selected to enable synchrocheck function. If “2LL/LLy”- or “1LL+U₀/LLy”-mode is selected, one stage is available. The “LL/LLy/LLz”-mode enables using two stages.

The voltage used for synchrochecking is always phase-to-phase voltage V_{12} . The synchrocheck stage 1 compares V_{12} with V_{12y} always. The compared voltages for the stage 2 can be selected.

Table 5.37: Setting parameters of synchrocheck stages SyC1, SyC2 (25)


Parameter	Values	Unit	Default	Description
Side	U12/U12y; U12/U12z; U12y/U12z	-	U12/U12z	Voltage selection. The stage 1 has fixed voltages U12/U12y.
CBObj	Obj1 – Obj6	-	Obj1	The selected object for CB control. The synchrocheck closing command will use the closing command of the selected object.
CBObj2	Obj1 – Obj6	-	Obj2	The selected object for CB control. The synchrocheck closing command will use the closing command of the selected object.
ObjSel	Digital inputs	-	-	Input for selecting between CBObj1 and CBObj2. When active CBObj2 is in use
Smode	Async; Sync; Off	-	Sync	Synchrocheck mode. Off = only voltage check Async = the function checks dU, df and dangle. Furthermore, the frequency slip, df, determines the remaining time for closing. This time must be longer than “CB time”. Sync mode = Synchronization is tried to make exactly when angle difference is zero. In this mode df-setting should be small enough (<0.3Hz).
Umode	-, DD, DL, LD, DD/DL, DD/LD, DL/LD, DD/DL/LD	-	-	Voltage check mode: The first letter refers to the reference voltage and the second letter refers to the comparison voltage. D means that the side must be “dead” when closing (dead = The voltage below the dead voltage limit setting) L means that the side must be “live” when closing (live = The voltage higher than the live voltage limit setting) Example: DL mode for stage 1: The U12 side must be “dead” and the U12y side must be “live”.
Cbtime	0.04 – 0.6	s	0.1	Typical closing time of the circuit-breaker.
Dibypass	Digital inputs	-	-	Bypass input. If the input is active, the function is bypassed.
Bypass	0; 1	-	0	The bypass status. “1” means that the function is bypassed. This parameter can also be used for manual bypass.
CBCtrl	Open;Close	-	-	Circuit-breaker control
ShowInfo	Off; On	-	On	Additional information display about the synchrocheck status to the mimic display.
SGrpDI	Digital inputs	-	-	The input for changing the setting group.
SetGrp	1; 2	-	1	The active setting group.

Table 5.38: Measured and recorded values of synchrocheck stages SyC1, SyC2 (25)

	Parameter	Values	Unit	Description
Measured values	df	-	Hz	Measured frequency difference
	dU	-	% Un / deg	Measured voltage amplitude and phase angle difference
	UState	-	-	Voltage status (e.g. DD)
	SState	-	-	Synchrocheck status
	ReqTime	-	-	Request time status
	f ¹⁾	-	Hz	Measured frequency (reference side)
	f _y ¹⁾	-	Hz	Measured frequency (comparison side)
	U12 ¹⁾	-	% Un	Measured voltage (reference side)
	U12 _y ¹⁾	-	% Un	Measured voltage (comparison side)
Recorded values	ReqCntr	-	-	Request counter
	SyncCntr	-	-	Synchronising counter
	FailCntr	-	-	Unsuccessful sync
	f ¹⁾	-	Hz	Recorded frequency (reference side)
	f _y ¹⁾	-	Hz	Recorded frequency (comparison side)
	U12 ¹⁾	-	% Un	Recorded voltage (reference side)
	U12 _y ¹⁾	-	% Un	Recorded voltage (comparison side)
	dAng	-	Deg	Recorded phase angle difference, when close command is given from the function
	dAngC	-	Deg	Recorded phase angle difference, when the circuit-breaker actually closes.
	EDly	-	%	The elapsed time compared to the set request timeout setting, 100% = timeout

1) Please note that the labels (parameter names) change according to the voltage selection.


The following signals of the stage are available in the output matrix and the logic: “Request”, “OK” and “Fail”. The “request”-signal is active, when a request has received but the breaker is not yet closed. The “OK”-signal is active, when the synchronising conditions are met, or the voltage check criterion is met. The “fail”-signal is activated if the function does not close the breaker within the request timeout setting. See the figure below.

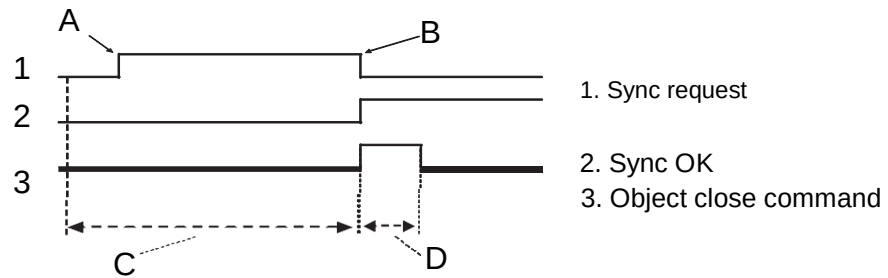

- A. Object close command given (minic or bus) actually make only sync request
- B. Request going down when "real" object close being requested
- C. Synchronizing time if timeout happens, Sync_Fail signal activates Timeout defined in synchrocheck
- D. Normal object close operation

Figure 5.39: The principle of the synchrocheck function

Please note that the control pulse of the selected object should be long enough. For example, if the voltages are in opposite direction, the synchronising conditions are met after several seconds.

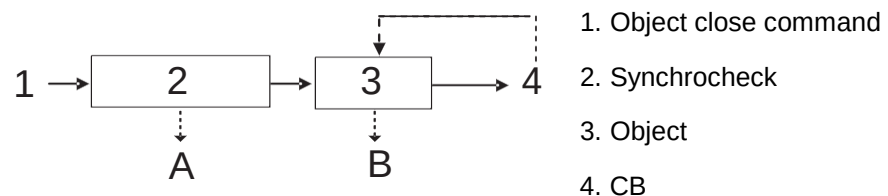

- A. Sync_Fail signal if sync timeout happen
- B. Object_Fail signal if "real" object control does not complete in time.

Time settings:

- Synchrocheck: Max synchronize time (~seconds)
- Object: Max object control pulse length (~200 ms)

Figure 5.40: The block diagram of the synchrocheck and the controlling object

Please note that the wiring of the secondary circuits of voltage transformers to the device terminal depends on the selected voltage measuring mode.

Table 5.39: Voltage measurement modes for synchrocheck function

Voltage input	Terminals	Signals in mode "1LL+U ₀ /LLy"	Signals in mode "2LL/LLy"	Signals in mode "LL/LLy/LLz"
U _a	X1:11-12	U ₁₂	U ₁₂	U ₁₂
U _b	X1:13-14	U _{12y}	U ₂₃	U _{12y}
U _c	X1:17-18	U ₀	U _{12y}	U _{12z}
Number of synchrocheck stages		1	1	2
Availability of U ₀ and directional I ₀ stages		Yes	No	No
Power measurement		1-phase power, symmetrical loads	3-phase power, unsymmetrical loads	1-phase power, symmetrical loads

The following application examples show the correct connection of the voltage inputs. In the Figure 5.41 and Figure 5.42, the applications require only one stage (Voltage measuring modes are "1LL+U₀/LLy" and "2LL/LLy"). Two stages are needed for the application presented in Figure 5.43 (Voltage measuring mode is "LL/LLy/LLz").

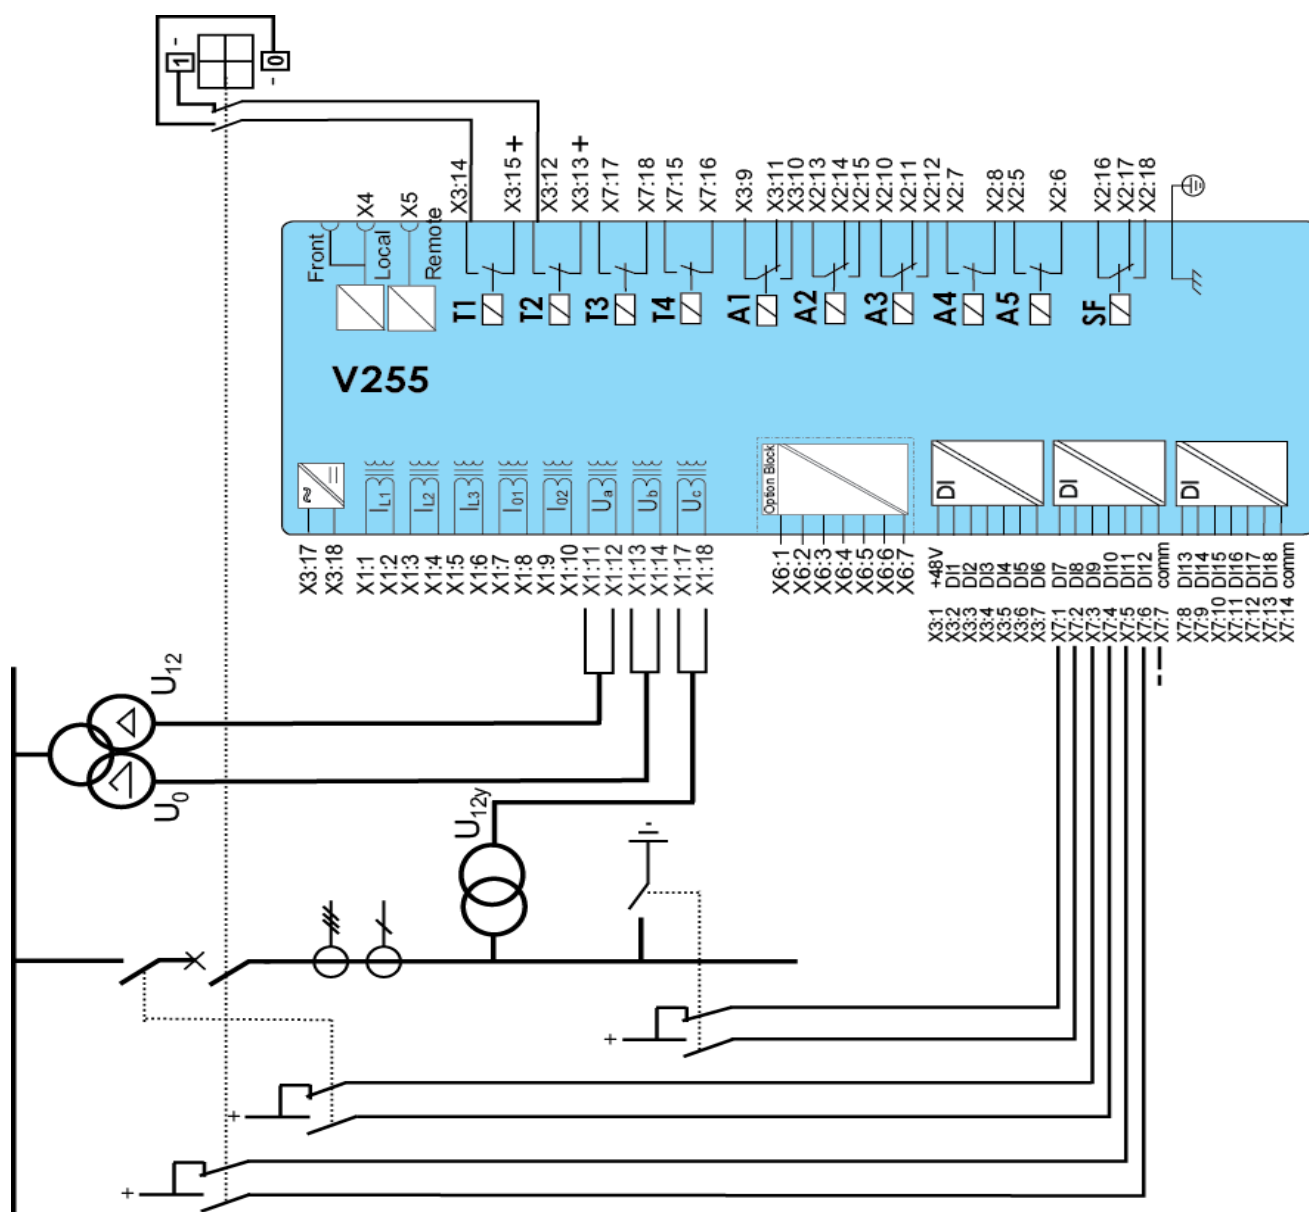


Figure 5.41: One synchrocheck stage needed with “1LL+U₀/LLy”-mode.

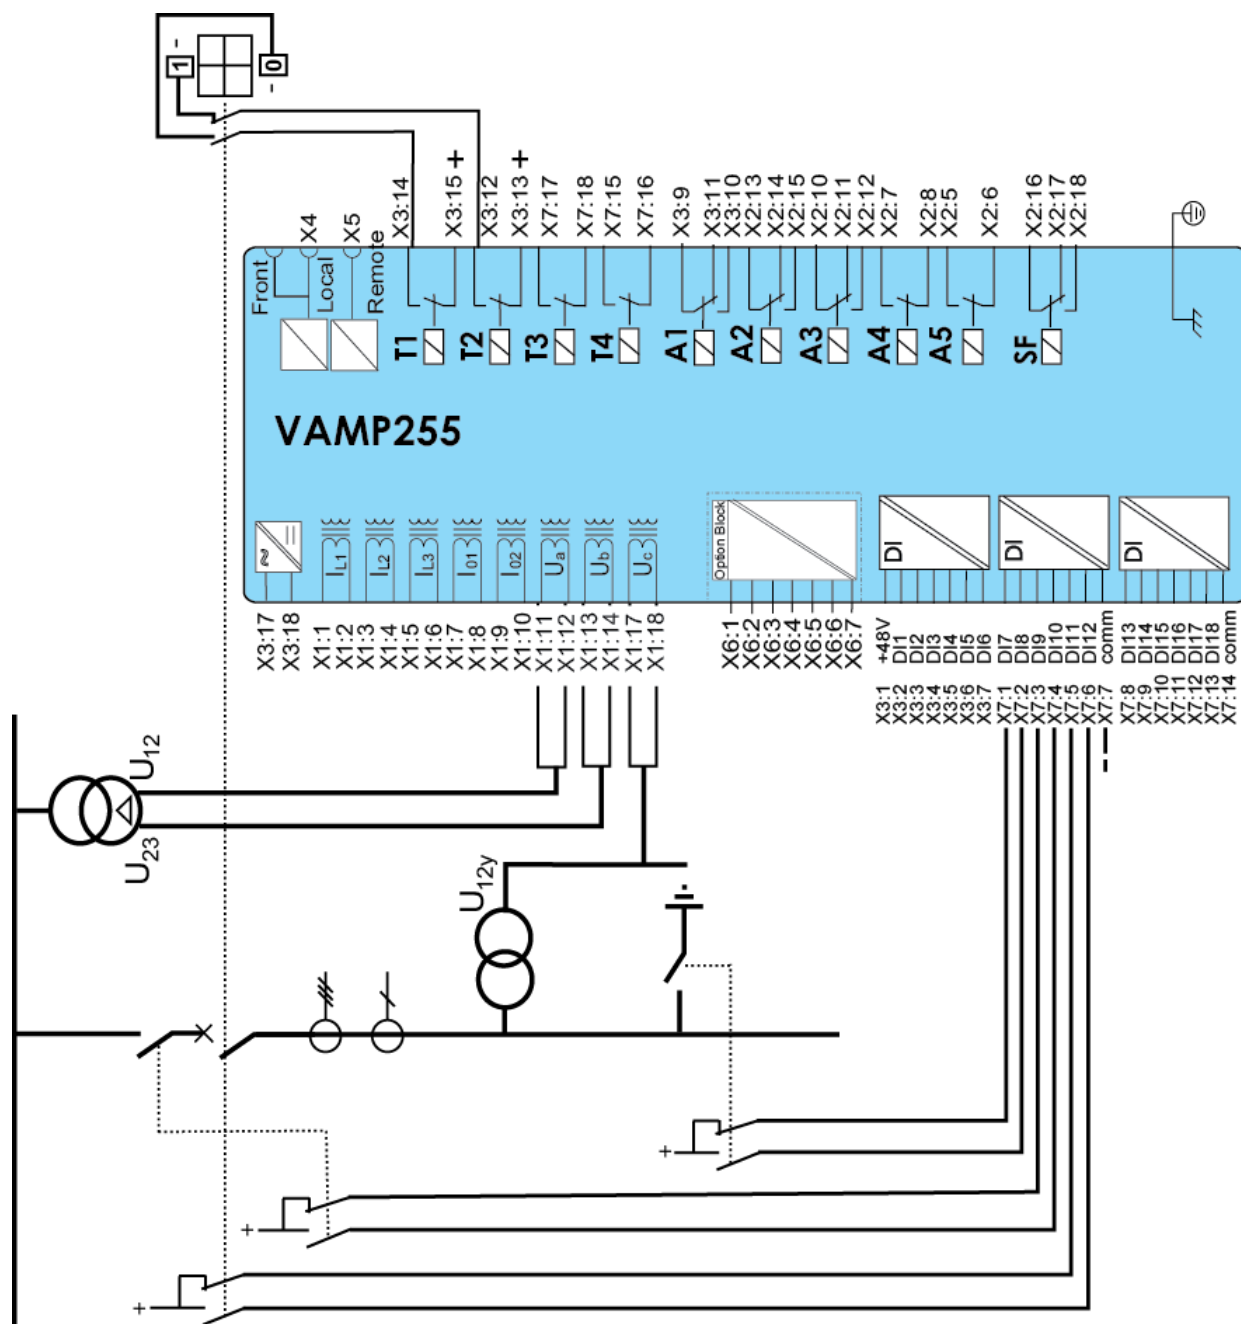


Figure 5.42: One synchrocheck stage needed with "2LL/LLy" -mode.

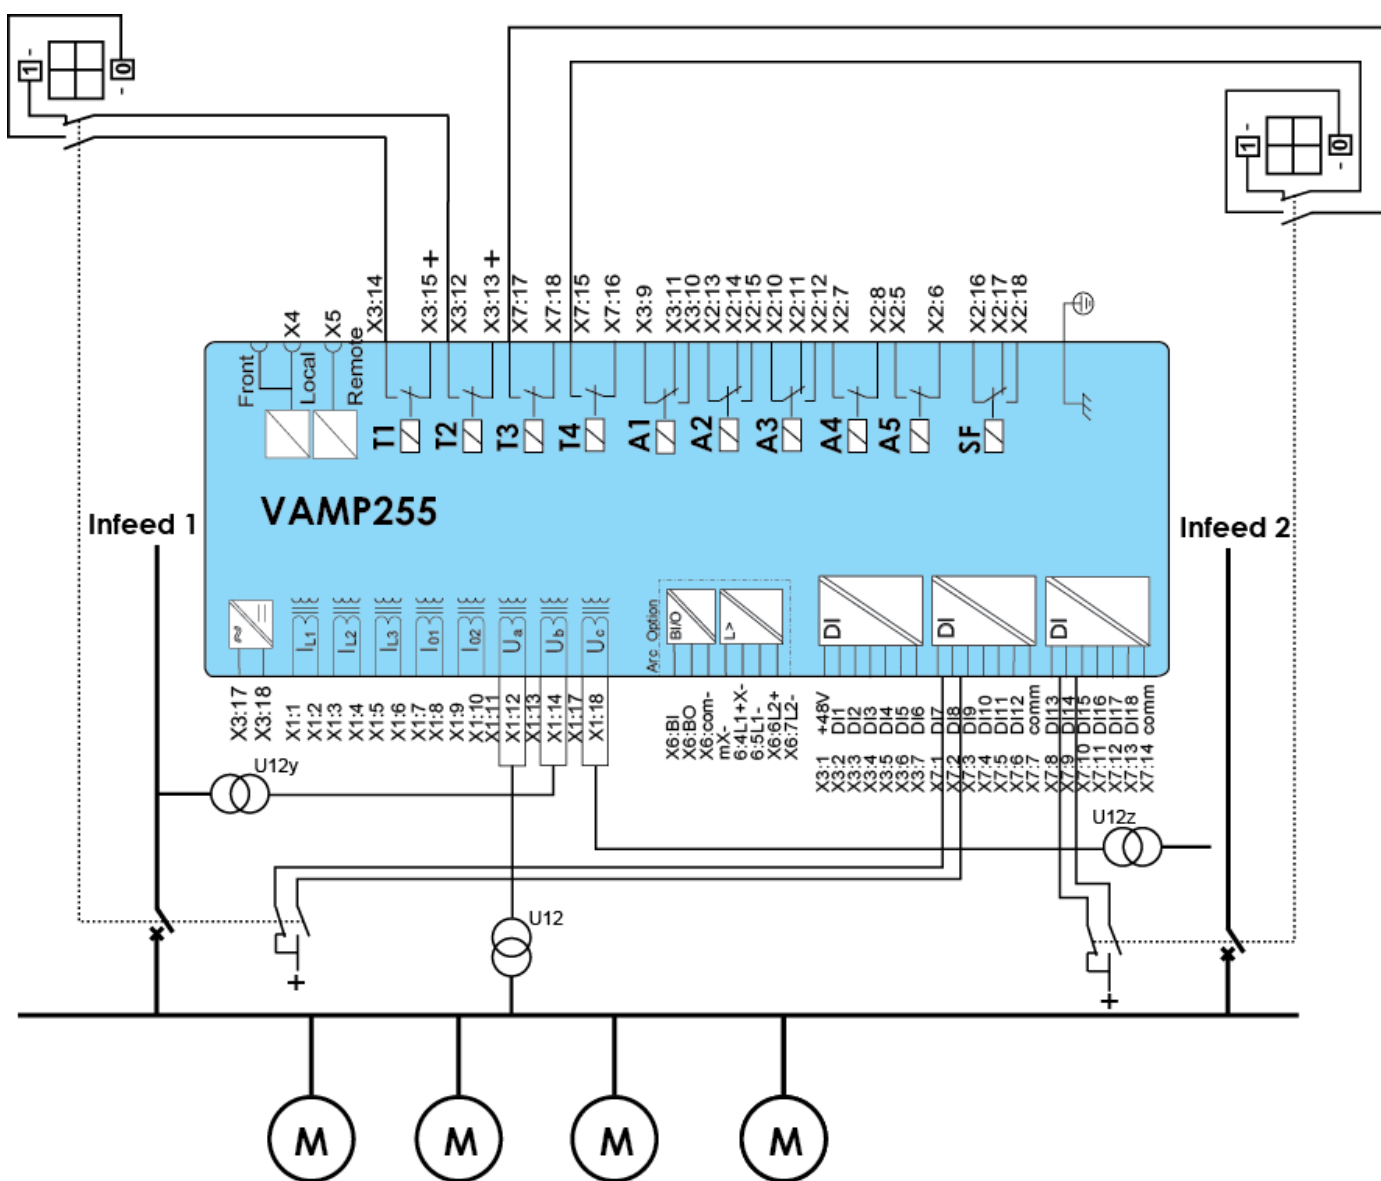


Figure 5.43: Two synchrocheck stages needed with “LL/LLy/LLz”-mode.

Magnetishing inrush $I_{f2} > (68F2)$

This stage is mainly used to block other stages. The ratio between the second harmonic component and the fundamental frequency component is measured on all the phase currents. When the ratio in any phase exceeds the setting value, the stage gives a start signal. After a settable delay, the stage gives a trip signal.

The start and trip signals can be used for blocking the other stages.

The trip delay is irrelevant if only the start signal is used for blocking.

The trip delay of the stages to be blocked must be more than 60 ms to help ensure a proper blocking.

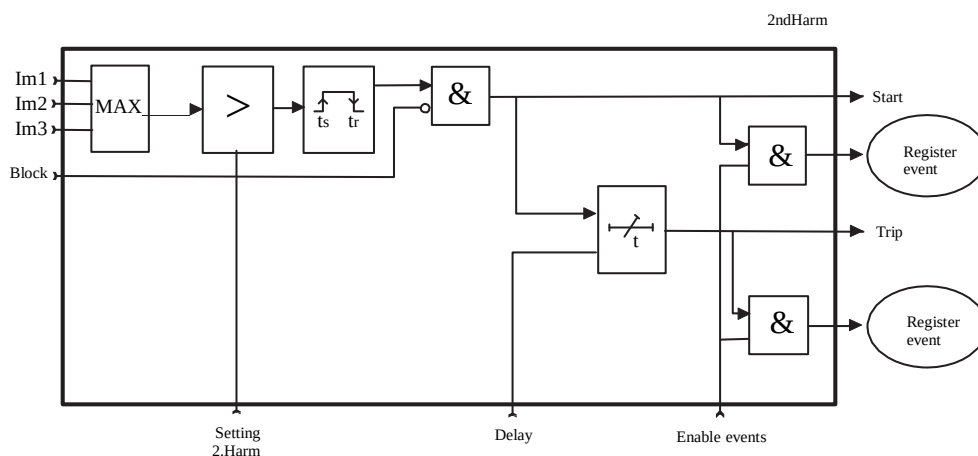


Figure 5.44: Block diagram of the magnetishing inrush stage.

Table 5.40: Setting parameters of magnetishing inrush blocking (68F2)

Parameter	Value	Unit	Default	Description
If2>	10 – 100	%	10	Setting value If2/Ifund
t_f2	0.05 – 300.0	s	0.05	Definite operating time
S_On	Enabled; Disabled	-	Enabled	Start on event
S_Off	Enabled; Disabled	-	Enabled	Start off event
T_On	Enabled; Disabled	-	Enabled	Trip on event
T_Off	Enabled; Disabled	-	Enabled	Trip off event

Table 5.41: Measured and recorded values of magnetishing inrush blocking (68F2)

	Parameter	Value	Unit	Description
Measured values	IL1H2.		%	2. harmonic of IL1 [*] , proportional to the fundamental value of IL1
	IL2H2.		%	2. harmonic of IL2 [*]
	IL3H2.		%	2. harmonic of IL3 [*]
Recorded values	Flt		%	The max. fault value
	EDly		%	Elapsed time as compared to the set operating time; 100% = tripping

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Transformer over excitation $I_{f5} >$ (68F5)

Overexciting for example a transformer creates odd harmonics. This over excitation stage can be used to detect overexcitation. This stage can also be used to block some other stages.

The ratio between the over excitation component and the fundamental frequency component is measured on all the phase currents. When the ratio in any phase exceeds the setting value, the stage gives a start signal. After a settable delay, the stage gives a trip signal.

The trip delay of the stages to be blocked must be more than 60 ms to help ensure a proper blocking.

Table 5.42: Setting parameters of over excitation blocking (68F5)

Parameter	Value	Unit	Default	Description
If5>	10 – 100	%	10	Setting value If2/Ifund
t_f5	0.05 – 300.0	s	0.05	Definite operating time
S_On	Enabled; Disabled	-	Enabled	Start on event
S_Off	Enabled; Disabled	-	Enabled	Start off event
T_On	Enabled; Disabled	-	Enabled	Trip on event
T_Off	Enabled; Disabled	-	Enabled	Trip off event

Table 5.43: Measured and recorded values of over excitation blocking (68F5)

	Parameter	Value	Unit	Description
Measured values	IL1H5.		%	5. harmonic of IL1 [*] , proportional to the fundamental value of IL1
	IL2H5.		%	5. harmonic of IL2 [*]
	IL3H5.		%	5. harmonic of IL3 [*]
Recorded values	Flt		%	The max. fault value
	EDly		%	Elapsed time as compared to the set operating time; 100% = tripping

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Circuit breaker failure protection CBFP (50BF)

The circuit breaker failure protection can be used to trip any upstream circuit breaker (CB), if the fault has not disappeared within a given time after the initial trip command. A different output contact of the device must be used for this backup trip.

The operation of the circuit-breaker failure protection (CBFP) is based on the supervision of the signal to the selected trip relay and the time the fault remains on after the trip command.

If this time is longer than the operating time of the CBFP stage, the CBFP stage activates another output relay, which will remain activated until the primary trip relay resets.

The CBFP stage is supervising all the protection stages using the same selected trip relay, since it supervises the control signal of this device. See the section Output matrix

Table 5.44: Parameters of the circuit breaker failure stage CBFP (50BF)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
Cbrelay			The supervised output relay ^{*)} .	Set
	1 – N		Relay T1 – T2 (VAMP 230) Relay T1 – T4 (VAMP 255)	
t>		s	Definite operation time.	Set

^{*)} This setting is used by the circuit breaker condition monitoring. See the section Circuit breaker condition monitoring.

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see the section Protection functions.

Recorded values of the latest eight faults

There is detailed information available for the eight latest faults:
Time stamp and elapsed delay.

Table 5.45: Recorded values of the circuit breaker failure stage (8 latest faults) CBFP (50BF)

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
EDly		%	Elapsed time of the operating time setting. 100% = trip

Programmable stages (99)

For special applications, the user can build their own protection stages by selecting the supervised signal and the comparison mode.

The following parameters are available:

- **Priority**
If operation times less than 80 milliseconds are needed select 10 ms. For operation times under one second 20 ms is recommended. For longer operation times and THD signals 100 ms is recommended.
- **Coupling A**
The name of the supervised signal in “>” and “<” modes (see table below). Also the name of the supervised signal 1 in “Diff” and “AbsDiff” modes.
- **Coupling B**
The name of the supervised signal 2 in “Diff” and “AbsDiff” modes.
- **Compare condition**
Compare mode. ‘>’ for over or ‘<’ for under comparison, “Diff” and “AbsDiff” for comparing Coupling A and Coupling B.
- **Pick-up**
Limit of the stage. The available setting range and the unit depend on the selected signal.
- **Operation delay**
Definite time operation delay
- **Hysteresis**
Dead band (hysteresis)
- **No Compare limit for mode <**
Only used with compare mode under (‘<’). This is the limit to start the comparison. Signal values under NoCmp are not regarded as fault.

Table 5.46: Available signals to be supervised by the programmable stages

IL1, IL2, IL3 [★]	Phase currents
Io1, Io2	Residual current inputs
U12, U23, U31	Line-to-line voltages
UL1, UL2, UL3	Phase-to-ground voltages
Uo	Zero-sequence voltage
f	Frequency
P	Active power
Q	Reactive power
S	Apparent power
Cos Fii	Cosine φ
IoCalc	Phasor sum $I_{L1} + I_{L2} + I_{L3}$ [★]
I1	Positive sequence current
I2	Negative sequence current
I2/I1	Relative negative sequence current
I2/In	Negative sequence current in pu
U1	Positive sequence voltage
U2	Negative sequence voltage
U2/U1	Relative negative sequence voltage
IL	Average $(I_{L1} + I_{L2} + I_{L3})/3$ [★]
TanFii	Tangent $\varphi \square [\tan(\arccos \varphi)]$
Prms	Active power rms value
Qrms	Reactive power rms value
Srms	Apparent power rms value
Uphase	Average of UL1, UL2, UL3
Uline	Average of U12, U23, U32
THDIL1	Total harmonic distortion of I_{L1} [★]
THDIL2	Total harmonic distortion of I_{L2} [★]
THDIL3	Total harmonic distortion of I_{L3} [★]
THDUa	Total harmonic distortion of input U_A
THDUB	Total harmonic distortion of input U_B
THDUC	Total harmonic distortion of input U_C
fy	Frequency behind circuit breaker
fz	Frequency behind 2 nd circuit breaker
U12y	Voltage behind circuit breaker
U12z	Voltage behind 2 nd circuit breaker
IL1RMS	I_{L1} [★] RMS for average sampling
IL2RMS	I_{L2} [★] RMS for average sampling
IL3RMS	I_{L3} [★] RMS for average sampling
ILmin, ILmax	Minimum and maximum of phase currents
ULLmin, ULLmax	Minimum and maximum of line voltages
ULNmin, ULNmax	Minimum and maximum of phase voltages
VAI1, VAI2, VAI3, VAI4, VAI5	Virtual analog inputs 1, 2, 3, 4, 5 (GOOSE)

Eight independent stages

The device has eight independent programmable stages. Each programmable stage can be enabled or disabled to fit the intended application.

Setting groups

There are two settings groups available. Switching between setting groups can be controlled by digital inputs, virtual inputs (mimic display, communication, logic) and manually.

There are two identical stages available with independent setting parameters.

Table 5.47: Parameters of the programmable stages PrgN (99)

Parameter	Value	Unit	Description	Note
Status	- Blocked Start Trip		Current status of the stage	F
SCntr			Cumulative start counter	C
TCntr			Cumulative trip counter	C
SetGrp	1 or 2		Active setting group	Set
SGrpDI			Digital signal to select the active setting group	Set
	-		None	
	DIx		Digital input	
	VIx		Virtual input	
	LEDx		LED indicator signal	
	VOx		Virtual output	
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
Link	See Table 5.46		Name for the supervised signal	Set
See Table 5.46			Value of the supervised signal	
Cmp			Mode of comparison	Set
	>		Over protection	
	<		Under protection	
	Diff		Difference	
	AbsDiff		Absolute difference	
Pickup			Pick up value scaled to primary level	
Pickup		pu	Pick up setting in pu	Set
t		s	Definite operation time.	Set
Hyster		%	Dead band setting	Set
NoCmp		pu	Minimum value to start under comparison. (Mode='<')	Set

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

Recorded values of the latest eight faults

There is detailed information available of the eight latest faults: Time stamp, fault value and elapsed delay.

Table 5.48: Recorded values of the programmable stages PrgN (99)

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Flt		pu	Fault value
EDly		%	Elapsed time of the operating time setting. 100% = trip
SetGrp	1, 2		Active setting group during fault

Arc fault detection (50ARC/50NARC) optional

NOTE: This protection function needs optional hardware in slot X6. More details of the hardware can be found in sections Optional two channel arc detection card and Arc protection interface (option)).

Arc detection is used for fast arc detection. The function is based on simultaneous light and current measurement. Special arc sensors are used to measure the light of an arc.

Three stages for arc faults

There are three separate stages for the various current inputs:

- $Arcl_{>}$: for phase-to-phase arc faults. Current inputs I_A , I_B , I_C are used.
- $Arcl_{01}>$: for phase-to-ground arc faults. Current input I_{01} is used.
- $Arcl_{02}>$: for phase-to-ground arc faults. Current input I_{02} is used.

Light channel selection

The light information source to the stages can be selected from the following list.

- - : No sensor selected. The stage will not work.
- S1: Light sensor S1.
- S2: Light sensor S2.
- S1/S2: Either one of the light sensors S1 or S2.
- BI: Binary input of the arc card. 48 Vdc.
- S1/BI: Light sensor S1 or the binary input.
- S2/BI: Light sensor S2 or the binary input.
- S1/S2/BI: Light sensor S1 or S2 or the binary input.

Binary input

The binary input (BI) on the arc option card (see section Optional two channel arc detection card) can be used to get the light indication from another relay to build selective arc detection systems.

The BI signal can also be connected to any of the output relays, BO, indicators etc. offered by the output matrix (see section Output matrix). BI is a dry input for 48 Vdc signal from binary outputs of other VAMP devices or dedicated arc detection devices by VAMP.

Binary output

The binary output (BO) on the arc option card (see section Optional two channel arc detection card) can be used to give the light indication signal or any other signal or signals to another relay's binary input to build selective arc detection systems.

Selection of the BO connected signal(s) is done with the output matrix (see section Output matrix). BO is an internally wetted 48 Vdc signal for BI of other VAMP relays or dedicated arc detection devices by VAMP.

Delayed light indication signal

Relay output matrix has a delayed light indication output signal (Delayed Arc L>) available for building selective arc detection systems. Any light source combination and a delay can be configured starting from 0.01 s to 0.15 s. The resulting signal is available in the output matrix to be connected to BO, output relays etc.

Pick up scaling

The per unit (pu) values for pick up setting are based on the current transformer values.

Arcl>: 1 pu = $1 \times I_N$ = rated phase current CT value

Arcl₀₁>: 1 pu = $1 \times I_{01N}$ = rated residual current CT value for input I_{01} .

Arcl₀₂>: 1 pu = $1 \times I_{02N}$ = rated residual current CT value for input I_{02} .

Table 5.49: Parameters of arc detection stages Arcl>, Arcl₀₁>, Arcl₀₂> (50ARC/50NARC)

Parameter	Value	Unit	Description	Note
Status	-		Current status of the stage	
	Start		Light detected according Arcl _N	F
	Trip		Light and overcurrent detected	
LCntr			Cumulative light indication counter. S1, S2 or BI.	C
SCntr			Cumulative light indication counter for the selected inputs according parameter Arcl _N	C
TCntr			Cumulative trip counter	C
Force	Off On		Force flag for status forcing for test purposes. This is a common flag for all stages and output relays. Automatically reset by a 5-minute timeout.	Set
ILmax			Value of the supervised signal	
Io1			Stage Arcl>	
			Stage Arcl ₀₁ >	
Io2			Stage Arcl ₀₂ >	

Parameter	Value	Unit	Description	Note
ArcI>		p	Pick up setting xI_N	Set
ArcIo1		u	Pick up setting xI_{01N}	
>		p	Pick up setting xI_{02N}	
ArcIn			Light indication source selection	Set
	–		No sensor selected	
	S1		Sensor 1 at terminals X6:4 – 5	
	S2		Sensor 2 at terminals X6:6 – 7	
	S1/S2		Sensor in terminals 1 and 2	
	BI		Terminals X6:1 – 3	
	S1/BI		Sensor 1 and BI in use	
	S2/BI		Sensor 2 and BI in use	
	S1/S2/BI		Sensor 1, 2 and BI in use	
Delayed light signal output				
Ldly		s	Delay for delayed light output signal	Set
LdlyCn			Light indication source selection	Set
	–		No sensor selected	
	S1		Sensor 1 at terminals X6:4 – 5	
	S2		Sensor 2 at terminals X6:6 – 7	
	S1/S2		Sensor in terminals 1 and 2	
	BI		Terminals X6:1 – 3	
	S1/BI		Sensor 1 and BI in use	
	S2/BI		Sensor 2 and BI in use	
	S1/S2/BI		Sensor 1, 2 and BI in use	

Set = An editable parameter (password needed). C = Can be cleared to zero. F = Editable when force flag is on.

For details of setting ranges, see section Protection functions.

Recorded values of the latest eight faults

There is detailed information available of the eight latest faults: Time stamp, fault type, fault value, load current before the fault and elapsed delay.

Table 5.50: Recorded values of the arc detection stages

Parameter	Value	Unit	Description
	yyyy-mm-dd		Time stamp of the recording, date
	hh:mm:ss.ms		Time stamp, time of day
Type		pu	Fault type value. Only for ArcI> stage.
Flt		pu	Fault value
Load		pu	Pre fault current. Only for ArcI> stage.
EDly		%	Elapsed time of the operating time setting. 100% = trip

Inverse time operation

The inverse time operation - i.e. inverse delay minimum time (IDMT) type of operation - is available for several protection functions. The common principle, formulae and graphic representations of the available inverse delay types are described in this section.

Inverse delay means that the operation time depends on the measured real time process values during a fault. For example with an overcurrent stage using inverse delay, a bigger a fault current gives faster operation. The alternative to inverse delay is definite delay. With definite delay a preset time is used and the operation time does not depend on the size of a fault.

Stage specific inverse delay

Some protection functions have their own specific type of inverse delay. Details of these dedicated inverse delays are described with the appropriate protection function.

Operation modes

There are three operation modes to use the inverse time characteristics:

- **Standard delays**
Using standard delay characteristics by selecting a curve family (IEC, IEEE, IEEE2, RI) and a delay type (Normal inverse, Very inverse etc). See the section Standard inverse delays IEC, IEEE, IEEE2, RI.
- **Standard delay formulae with free parameters**
selecting a curve family (IEC, IEEE, IEEE2) and defining one's own parameters for the selected delay formula. This mode is activated by setting delay type to 'Parameters', and then editing the delay function parameters A – E. See the section Free parameterization using IEC, IEEE and IEEE2 equations.
- **Fully programmable inverse delay characteristics**
Building the characteristics by setting 16 [current, time] points. The relay interpolates the values between given points with 2nd degree polynomials. This mode is activated by setting curve family to 'PrgN'. There are maximum three different programmable curves available at the same time. Each programmed curve can be used by any number of protection stages. See the section Programmable inverse time curves.

Local panel graph

The device will show a graph of the currently used inverse delay on the local panel display. Up and down keys can be used for zooming. Also the delays at $20I_{SET}$, $4I_{SET}$ and $2I_{SET}$ are shown.

Inverse time setting detected error signal

If there are any detected errors in the inverse delay configuration, the values will be rejected and the appropriate protection stage will use definite time delay.

There is a signal 'Setting Error' available in output matrix, which indicates three different situations:

1. Settings are currently changed with VAMPSET or local panel, and there is temporarily an illegal combination of curve/delay/points. For example, if previous settings were IEC/NI and then curve family is changed to IEEE, the detected setting error will activate because there is no NI type available for IEEE curves. After changing valid delay type for IEEE mode (for example MI), the 'Setting Error' signal will release.
2. There are detected errors in formula parameters A – E, and the device is not able to build the delay curve
3. There are detected errors in the programmable curve configuration and the device is not able to interpolate values between the given points.

Limitations

The maximum measured secondary phase current is $50 \times I_{0N}$ and the maximum directly measured ground fault current is $10 \times I_{0N}$ for VAMP 255 and $5 \times I_{0N}$ for VAMP 230 for residual current input. The full scope of inverse delay curves goes up to 20 times the setting. At high setting the maximum measurement capability limits the scope of inverse curves according the following table.

Current input	Maximum measured secondary current	Maximum secondary scaled setting enabling inverse delay times up to full 20x setting
VAMP 255 $I_{0N} = 5 \text{ A}$ *)	50 A	2.5 A
VAMP 255 $I_{0N} = 1 \text{ A}$ *)	10 A	0.5 A
VAMP 255 $I_{0N} = 0.2 \text{ A}$ *)	2 A	0.1 A
VAMP 230 $I_{0N} = 5 \text{ A}$	25 A	1.25 A
VAMP 230 $I_{0N} = 1 \text{ A}$	5 A	1.25 A

*) The available I_{0N} values depend on the order code. The VAMP 255-3C7___ has 1A and 5 A I_0 inputs while the VAMP 255-3D7___ has 0.2 A and 1 A I_0 inputs.

1. Example of limitation VAMP 255

$$CT = 750 / 5$$

Application mode is Feeder

$CT_0 = 100/1$ (cable CT is used for residual current)

The CT_0 is connected to a 1 A terminals of input I_{01} .

For overcurrent stage $I >$ the table above gives 12.5 A. Thus the maximum setting for $I >$ stage giving full inverse delay range is $12.5 \text{ A} / 5 \text{ A} = 2.5 \times I_N = 1875 \text{ A}_{\text{Primary}}$.

For ground fault stage $I_0 >$ the table above gives 0.5 A. Thus the maximum setting for $I_0 >$ stage giving full inverse delay range is

$$0.5 \text{ A} / 1 \text{ A} = 0.5 \times I_{0N} = 50 \text{ A}_{\text{Primary}}$$

2. Example of limitation VAMP 255

$$CT = 750 / 5$$

Application mode is Motor

Rated current of the motor = 600 A

$I_{0\text{Calc}} (= I_A + I_B + I_C)$ is used for residual current

At secondary level the rated motor current is $600 / 750 \times 5 = 4 \text{ A}$

For overcurrent stage $I >$ the table above gives 12.5 A. Thus the maximum setting giving full inverse delay range is $12.5 \text{ A} / 4 \text{ A} = 3.13 \times I_{\text{MOT}} = 1875 \text{ A}_{\text{Primary}}$.

For ground fault stage $I_0 >$ the table above gives 12.5 A. Thus the maximum setting for $I_0 >$ stage giving full inverse delay range is

$$12.5 \text{ A} / 5 \text{ A} = 2.5 \times I_{0N} = 1875 \text{ A}_{\text{Primary}}$$

3. Example of limitations VAMP 230

$$CT = 750 / 5$$

Application mode is Feeder

$CT_0 = 100 / 5$ (cable CT is used for residual current)

For overcurrent stage $I >$ the table above gives 12.5 A. Thus the maximum setting giving full inverse delay range is $12.5 \text{ A} / 5 \text{ A} = 2.5 \times I_N = 1875 \text{ A}_{\text{Primary}}$.

For ground fault stage $I_0 >$ the table above gives 1.25 A. Thus the maximum setting for $I_0 >$ stage giving full inverse delay range is

$$1.25 \text{ A} / 5 \text{ A} = 0.25 \times I_{0N} = 25 \text{ A}_{\text{Primary}}$$

Standard inverse delays IEC, IEEE, IEEE2, RI

The available standard inverse delays are divided in four categories IEC, IEEE, IEEE2 and RI called delay curve families. Each category of family contains a set of different delay types according the following table.

Inverse time setting detected error signal

The inverse time setting detected error signal will be activated, if the delay category is changed and the old delay type doesn't exist in the new category. See the section Inverse time operation for more details.

Limitations

The minimum definite time delay starts latest, when the measured value is twenty times the setting. However, there are limitations at high setting values due to the measurement range. See the section Inverse time operation for more details.

Table 5.51: Available standard delay families and the available delay types within each family.

Delay type		Curve family				
		DT	IEC	IEEE	IEEE2	RI
DT	Definite time	X				
NI	Normal inverse		X		X	
VI	Very inverse		X	X	X	
EI	Extremely inverse		X	X	X	
LTI	Long time inverse		X	X		
LTEI	Long time extremely inverse			X		
LTVI	Long time very inverse			X		
MI	Moderately inverse			X	X	
STI	Short time inverse			X		
STEI	Short time extremely inverse			X		
RI	Old ASEA type					X
RXIDG	Old ASEA type					X

IEC inverse time operation

The operation time depends on the measured value and other parameters according Equation 5.5. Actually this equation can only be used to draw graphs or when the measured value I is constant during the fault. A modified version is implemented in the relay for real time usage.

Equation 5.5:

$$t = \left(\frac{k A}{I} \right)^B \frac{1}{I_{PICKUP} - 1}$$

t = Operation delay in seconds

k = User's multiplier

I = Measured value

I_{PICKUP} = User's pick up setting

A, B = Constants parameters according Table 5.52.

There are three different delay types according IEC 60255-3, Normal inverse (NI), Extremely inverse (EI), Very inverse (VI) and a VI extension. Additional there is a de facto standard Long time inverse (LTI).

Table 5.52: Constants for IEC inverse delay equation

Delay type		Parameter	
		A	B
NI	Normal inverse	0.14	0.02
EI	Extremely inverse	80	2
VI	Very inverse	13.5	1
LTI	Long time inverse	120	1

Example for Delay type "Normal inverse (NI)":

$$k = 0.50$$

$$I = 4 \text{ pu (constant current)}$$

$$I_{\text{PICKUP}} = 2 \text{ pu}$$

$$A = 0.14$$

$$B = 0.02$$

$$t = \frac{0.50 \cdot 0.14}{0.02} = 5.0$$

$$\left| \frac{4}{2} \right|^{-1}$$

The operation time in this example will be 5 seconds. The same result can be read from Figure 5.45.

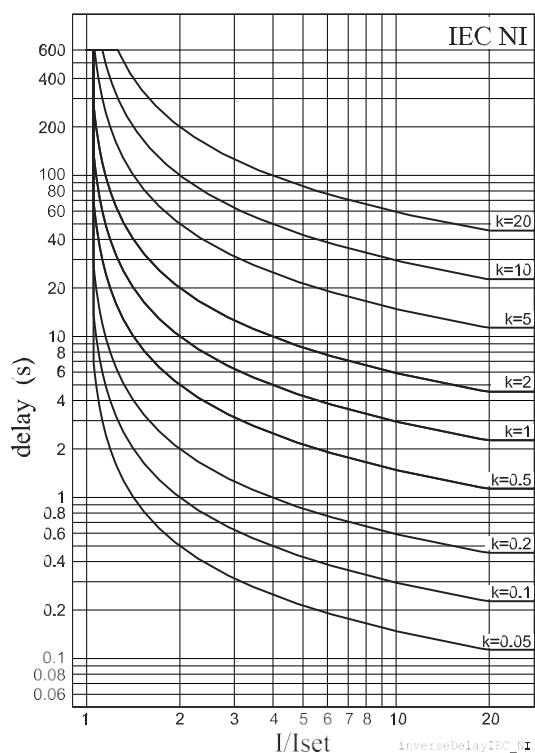


Figure 5.45: IEC normal inverse delay.

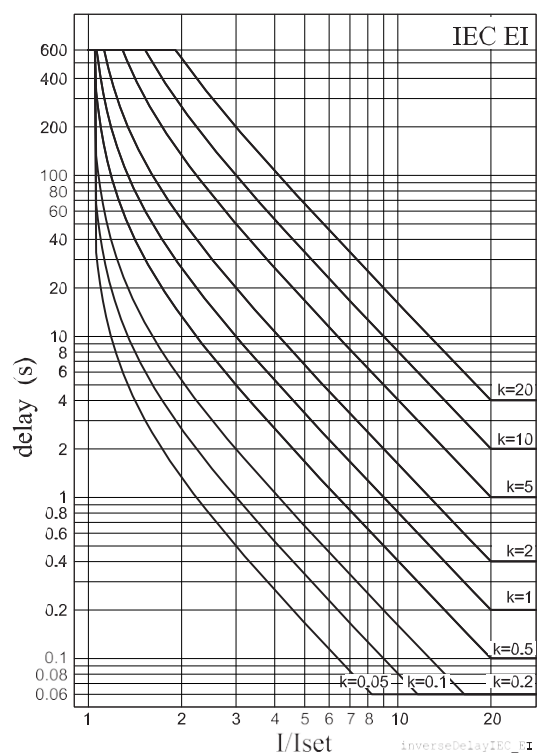


Figure 5.46: IEC extremely inverse delay.

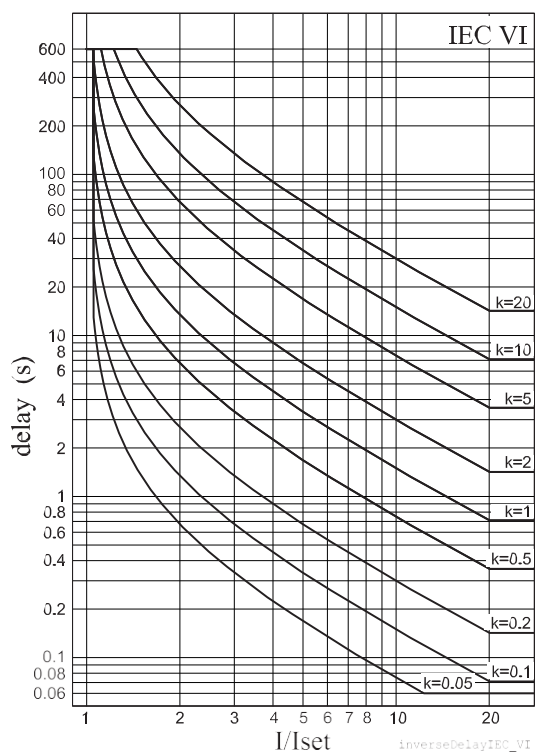


Figure 5.47: IEC very inverse delay.

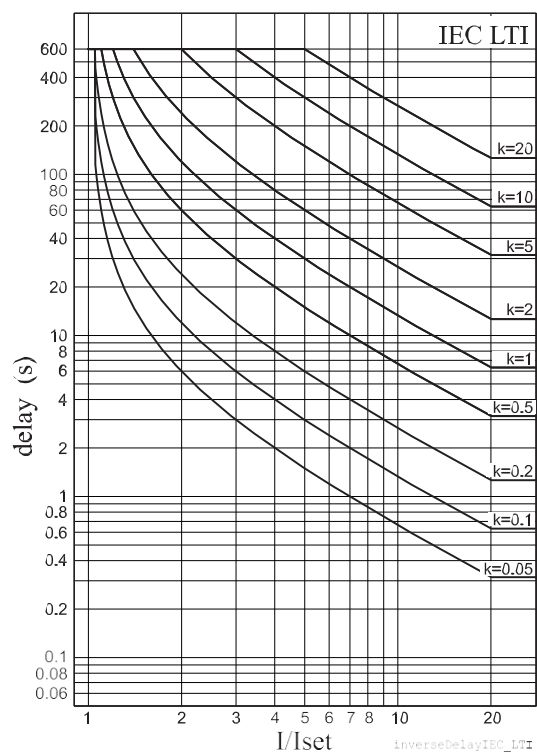


Figure 5.48: IEC long time inverse delay.

IEEE/ANSI inverse time operation

There are three different delay types according IEEE Std C37.112-1996 (MI, VI, EI) and many de facto versions according Table 5.53. The IEEE standard defines inverse delay for both trip and release operations. However, in the VAMP relay only the trip time is inverse according the standard but the release time is constant.

The operation delay depends on the measured value and other parameters according Equation 5.6. Actually this equation can only be used to draw graphs or when the measured value I is constant during the fault. A modified version is implemented in the relay for real time usage.

Equation 5.6:

$$t = k \left[\left(\frac{A}{I - I_{PICKUP}} \right)^C + B \right]$$

t = Operation delay in seconds

k = User's multiplier

I = Measured value

I_{PICKUP} = User's pick up setting

A, B, C = Constant parameter according Table 5.53.

Table 5.53: Constants for IEEE/ANSI inverse delay equation

Delay type		Parameter		
		A	B	C
LTI	Long time inverse	0.086	0.185	0.02
LTVI	Long time very inverse	28.55	0.712	2
LTEI	Long time extremely inverse	64.07	0.250	2
MI	Moderately inverse	0.0515	0.1140	0.02
VI	Very inverse	19.61	0.491	2
EI	Extremely inverse	28.2	0.1217	2
STI	Short time inverse	0.16758	0.11858	0.02
STEI	Short time extremely inverse	1.281	0.005	2

Example for Delay type "Moderately inverse (MI)":

$$k = 0.50$$

$$I = 4 \text{ pu}$$

$$I_{\text{PICKUP}} = 2 \text{ pu}$$

$$A = 0.0515$$

$$B = 0.114$$

$$C = 0.02$$

$$t = 0.50 \cdot \left[\frac{0.0515}{\left(\frac{4}{2} \right)^{0.02} - 1} + 0.1140 \right] = 1.9$$

The operation time in this example will be 1.9 seconds. The same result can be read from Figure 5.52.

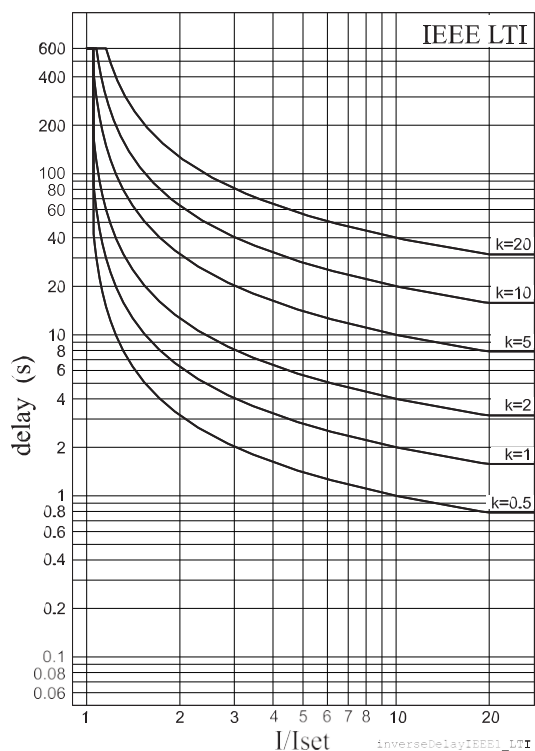


Figure 5.49: ANSI/IEEE long time inverse delay

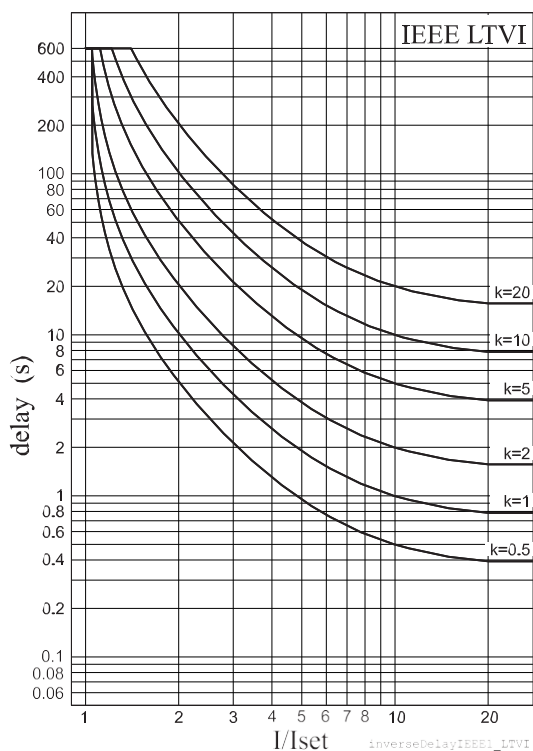


Figure 5.50: ANSI/IEEE long time very inverse delay

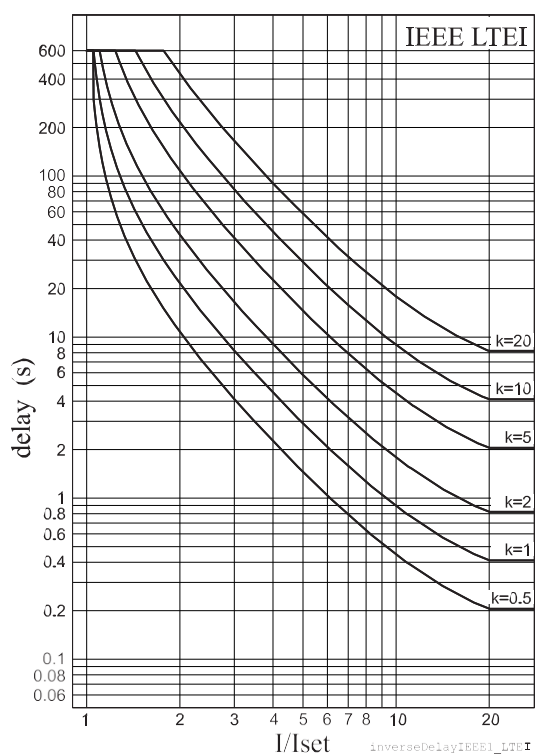


Figure 5.51: ANSI/IEEE long time extremely inverse delay

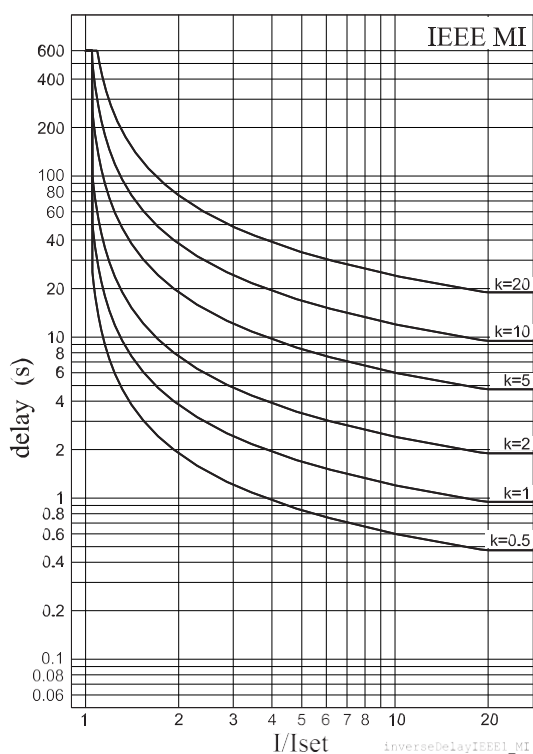


Figure 5.52: ANSI/IEEE moderately inverse delay

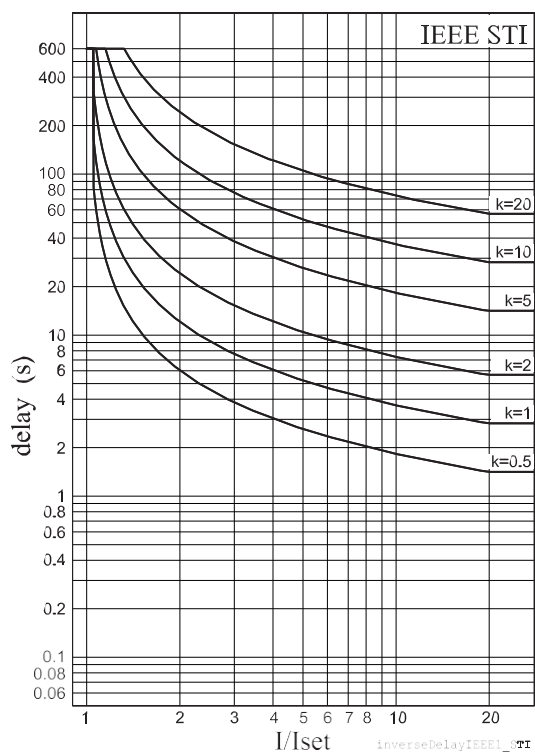


Figure 5.53: ANSI/IEEE short time inverse delay

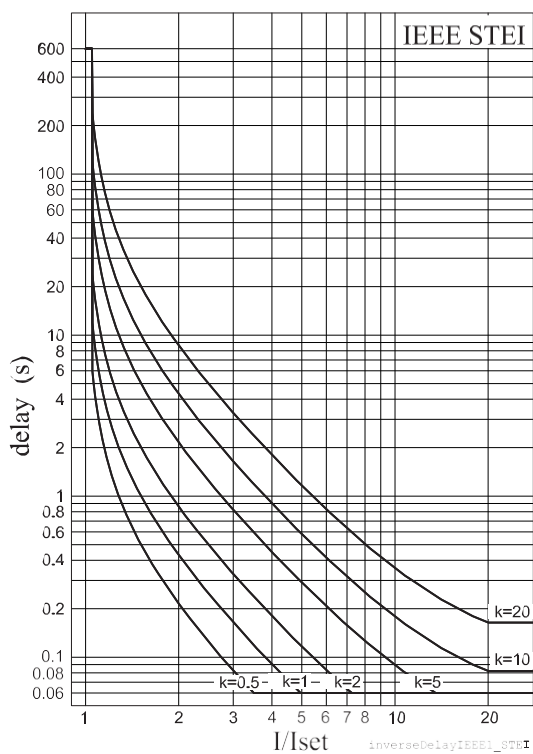


Figure 5.54: ANSI/IEEE short time extremely inverse delay

IEEE2 inverse time operation

Before the year 1996 and ANSI standard C37.112 microprocessor relays were using equations approximating the behavior of various induction disc type relays. A popular approximation is Equation 5.7, which in VAMP relays is called IEEE2. Another name could be IAC, because the old General Electric IAC relays have been modeled using the same equation.

There are four different delay types according Table 5.54. The old electromechanical induction disc relays have inverse delay for both trip and release operations. However, in VAMP relays only the trip time is inverse the release time being constant.

The operation delay depends on the measured value and other parameters according Equation 5.7. Actually this equation can only be used to draw graphs or when the measured value I is constant during the fault. A modified version is implemented in the relay for real time usage.

Equation 5.7:

$$t = k \left[A + \frac{B}{\left(\frac{I}{I_{PICKUP}} - C \right)} + \frac{D}{\left(\frac{I}{I_{PICKUP}} - C \right)^2} + \frac{E}{\left(\frac{I}{I_{PICKUP}} - C \right)^3} \right]$$

t = Operation delay in seconds

k = User's multiplier

I = Measured value

I_{PICKUP} = User's pick up setting

A, B, C, D = Constant parameter according Table 5.54.

Table 5.54: Constants for IEEE2 inverse delay equation

Delay type		Parameter				
		A	B	C	D	E
MI	Moderately inverse	0.1735	0.6791	0.8	-0.08	0.1271
NI	Normally inverse	0.0274	2.2614	0.3	-0.1899	9.1272
VI	Very inverse	0.0615	0.7989	0.34	-0.284	4.0505
EI	Extremely inverse	0.0399	0.2294	0.5	3.0094	0.7222

Example for Delay type "Moderately inverse (MI)":

$$k = 0.50$$

$$I = 4 \text{ pu}$$

$$I_{\text{PICKUP}} = 2 \text{ pu}$$

$$A = 0.1735$$

$$B = 0.6791$$

$$C = 0.8$$

$$D = -0.08$$

$$E = 0.127$$

$$t = 0.5 \cdot \left[0.1735 + \frac{0.6791}{4} + \frac{-0.08}{4^2} + \frac{0.127}{4^3} \right] = 0.38$$

$$\left[\frac{1}{(2)} \quad \frac{1}{(2)} \quad \frac{1}{(2)} \right]$$

The operation time in this example will be 0.38 seconds. The same result can be read from Figure 5.55.

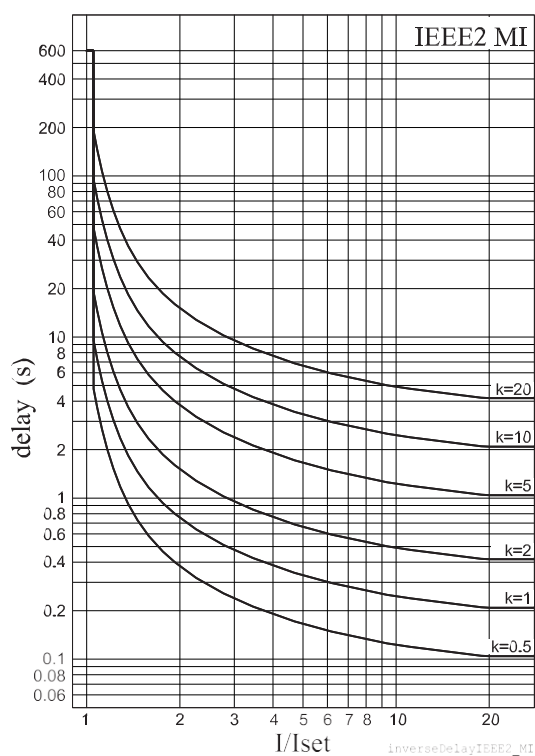


Figure 5.55: IEEE2 moderately inverse delay

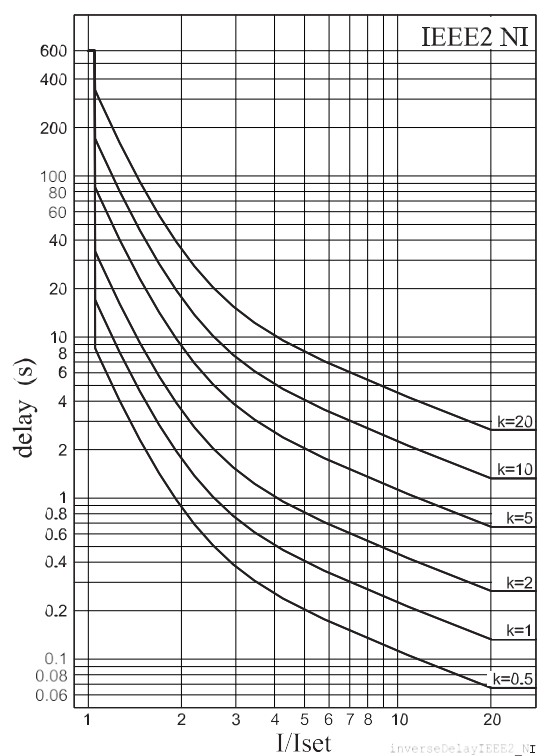


Figure 5.56: IEEE2 normal inverse delay

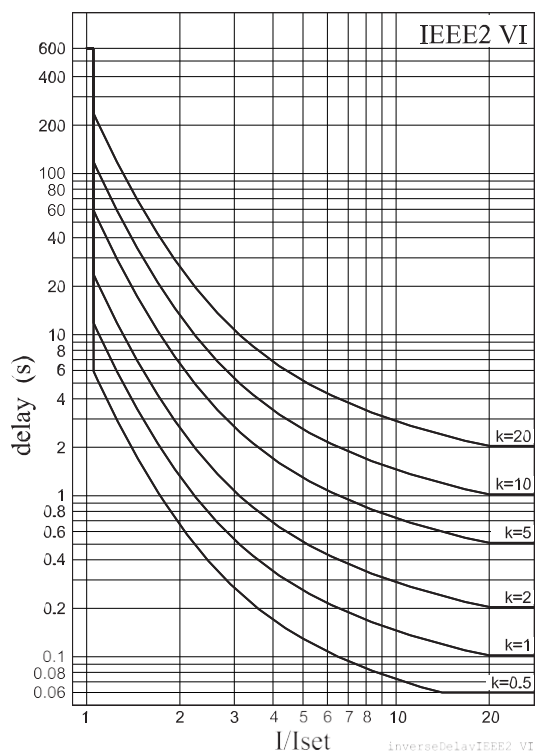


Figure 5.57: IEEE2 very inverse delay

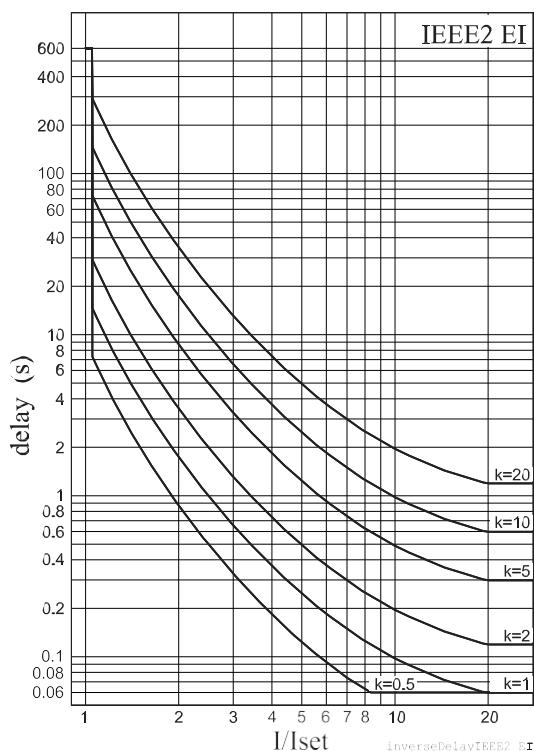


Figure 5.58: IEEE2 extremely inverse delay

RI and RXIDG type inverse time operation

These two inverse delay types have their origin in old ASEA (ABB) ground fault relays.

The operation delay of types RI and RXIDG depends on the measured value and other parameters according Equation 5.8 and Equation 5.9. Actually these equations can only be used to draw graphs or when the measured value I is constant during the fault. Modified versions are implemented in the relay for real time usage.

Equation 5.8: RI

$$t_{RI} = \frac{k}{0.339 - \left(\frac{0.236}{I} \right) \left(\frac{I}{I_{PICKUP}} \right)}$$

Equation 5.9: RXIDG

$$t_{RXIDG} = 5.8 - 1.35 \ln \frac{I}{k I_{PICKUP}}$$

t = Operation delay in seconds

k = User's multiplier

I = Measured value

I_{PICKUP} = User's pick up setting

Example for Delay type RI

$$k = 0.50$$

$$I = 4 \text{ pu}$$

$$I_{\text{PICKUP}} = 2 \text{ pu}$$

$$t_{RI} = \frac{0.5}{0.339 - \frac{.236}{\left(\frac{4}{2}\right)}} = 2.3$$

The operation time in this example will be 2.3 seconds. The same result can be read from Equation 5.8.

Example for Delay type RXIDG

$$k = 0.50$$

$$I = 4 \text{ pu}$$

$$I_{\text{PICKUP}} = 2 \text{ pu}$$

$$t_{RXIDG} = 5.8 - 1.35 \ln \frac{4}{0.5 \cdot 2} = 3.9$$

The operation time in this example will be 3.9 seconds. The same result can be read from Figure 5.60.

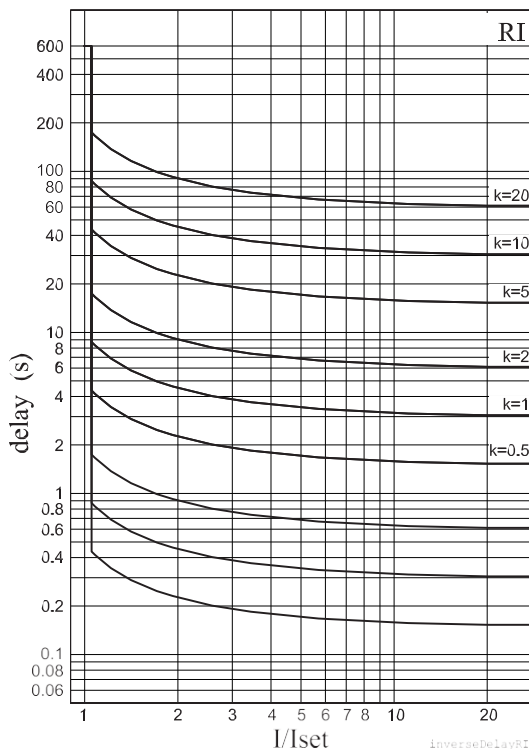


Figure 5.59: Inverse delay of type RI.

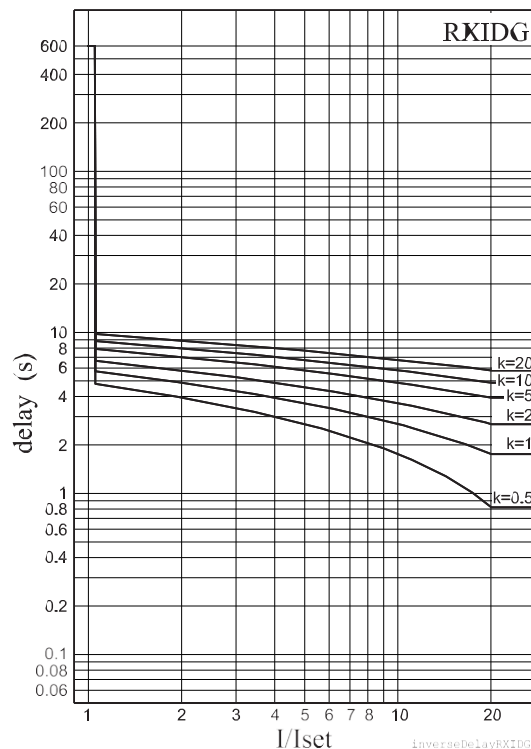


Figure 5.60: Inverse delay of type RXIDG.

Free parameterization using IEC, IEEE and IEEE2 equations

This mode is activated by setting delay type to 'Parameters', and then editing the delay function constants, i.e. the parameters A – E. The idea is to use the standard equations with one's own constants instead of the standardized constants shown in the previous section.

Example for GE-IAC51 delay type inverse:

$$k = 0.50$$

$$I = 4 \text{ pu}$$

$$I_{\text{PICKUP}} = 2 \text{ pu}$$

$$A = 0.2078$$

$$B = 0.8630$$

$$C = 0.8000$$

$$D = -0.4180$$

$$E = 0.1947$$

$$t = 5 \cdot \left[0.2078 + \frac{0.8630}{\left(\frac{4}{2} - 0.8\right)} + \frac{-0.4180}{\left(\frac{4}{2} - 0.8\right)^2} + \frac{0.1947}{\left(\frac{4}{2} - 0.8\right)^3} \right] = 0.37$$

The operation time in this example will be 0.37 seconds.

The resulting time/current characteristic of this example matches quite well with the characteristic of the old electromechanical IAC51 induction disc relay.

Inverse time setting detected error signal

The inverse time setting detected error signal will become active, if interpolation with the given parameters is not possible. See the section Inverse time operation for more details.

Limitations

The minimum definite time delay start latest, when the measured value is twenty times the setting. However, there are limitations at high setting values due to the measurement range. See the section Inverse time operation for more details.

Programmable inverse time curves

The [current, time] curve points are programmed using VAMPSET software. Once programmed, the relay will require a reboot for the changes to take effect.

Rules for defining the curve points:

- configuration must begin from the topmost line
- line order must be as follows: the smallest current (longest operation time) on the top and the largest current (shortest operation time) on the bottom
- all unused lines (on the bottom) should be filled with [1.00 0.00s]

Here is an example configuration of curve points:

Point	Current I/I _{PICKUP}	Operation delay
1	1.00	10.00 s
2	2.00	6.50 s
3	5.00	4.00 s
4	10.00	3.00 s
5	20.00	2.00 s
6	40.00	1.00 s
7	1.00	0.00 s
8	1.00	0.00 s
9	1.00	0.00 s
10	1.00	0.00 s
11	1.00	0.00 s
12	1.00	0.00 s
13	1.00	0.00 s
14	1.00	0.00 s
15	1.00	0.00 s
16	1.00	0.00 s

Inverse time setting detected error signal

The inverse time setting detected error signal will be activated, if interpolation with the given points does not calculate properly. See the section Inverse time operation for more details.

Limitations

The minimum definite time delay start latest, when the measured value is twenty times the setting. However, there are limitations at high setting values due to the measurement range. See the section Inverse time operation for more details.

Section 6: Supporting functions

Event log

Event log is a buffer of event codes and time stamps including date and time. For example each start-on, start-off, trip-on or trip-off of any protection stage has a unique event number code. Such a code and the corresponding time stamp is called an event. The event codes are listed in a separate document “Modbus_Profibus_Spabus_event.pdf”.

As an example of information included with a typical event a programmable stage trip event is shown in the following table.

EVENT	Description	Local panel	Communication protocols
Code: 1E2	Channel 30, event 2	Yes	Yes
I> trip on	Event text	Yes	No
2.7 x In	Fault value	Yes	No
2007-01-31	Date	Yes	Yes
08:35:13.413	Time	Yes	Yes
Type: U12,23,31	Fault type	Yes	No

Events are the major data for a SCADA system. SCADA systems are reading events using any of the available communication protocols. Event log can also be scanned using the front panel or using VAMPSET. With VAMPSET the events can be stored to a file especially in case the relay is not connected to any SCADA system.

Only the latest event can be read when using communication protocols or VAMPSET. Every reading increments the internal read pointer to the event buffer. (In case of detected communication, the latest event can be reread any number of times using an other parameter.) On the local panel scanning the event buffer back and forth is possible.

Event enabling/masking

In case of an uninteresting event, it can be masked, which helps prevent the particular event(s) to be written in the event buffer. As a default there is room for 200 latest events in the buffer. Event buffer size can be modified from 50 to 2000.

Modification can be done in “Local panel conf” –menu.

Indication screen (popup screen) can also be enabled in this same menu when VAMPSET –setting tool is used. The oldest one will be overwritten, when a new event does occur. The shown resolution of a time stamp is one millisecond, but the actual resolution depends on the particular function creating the event.

For example, most protection stages create events with 5 ms, 10 ms or 20 ms resolution. The absolute accuracy of all time stamps depends on the time synchronizing of the relay. See the section System clock and synchronization for system clock synchronizing.

Event buffer overflow

The normal procedure is to poll events from the device all the time. If this is not done, the event buffer will eventually overflow. On the local screen this is indicated with string "OVF" after the event code.

Table 6.1: Setting parameters for events

Parameter	Value	Description	Note
Count		Number of events	
ClrEn	- Clear	Clear event buffer	Set
Order	Old-New New-Old	Order of the event buffer for local display	Set
FVSca		Scaling of event fault value	Set
	PU	Per unit scaling	
	Pri	Primary scaling	
Display	On	Indication display is enabled	Set
Alarms	Off	No indication display	
FORMAT OF EVENTS ON THE LOCAL DISPLAY			
Code: CHENN		CH = event channel, NN=event code	
Event description		Event channel and code in plain text	
yyyy-mm-dd		Date (for available date formats, see section System clock and synchronization)	
hh:mm:ss.nnn		Time	

Disturbance recorder

The disturbance recorder can be used to record all the measured signals, that is, currents, voltage and the status information of digital inputs (DI) and digital outputs (DO).

The digital inputs include also the arc detection signals S1, S2, BI and BO, if the optional arc detection is available.

Triggering the recorder

The recorder can be triggered by any start or trip signal from any protection stage or by a digital input. The triggering signal is selected in the output matrix (vertical signal DR). The recording can also be triggered manually. All recordings are time stamped.

Reading recordings

The recordings can be uploaded, viewed and analysed with the VAMPSET program. The recording is in COMTRADE format. This also means that other programs can be used to view and analyse the recordings made by the relay.

For more details, please see the VAMPSET manual (doc. no. 63230-218-207).

Number of channels

At the maximum, there can be 12 recordings, and the maximum selection of channels in one recording 12 (limited in wave form) and digital inputs reserve one channel (includes all the inputs). Also the digital outputs reserve one channel (includes all the outputs). If digital inputs and outputs are recorded, there will be still 10 channels left for analog waveforms.

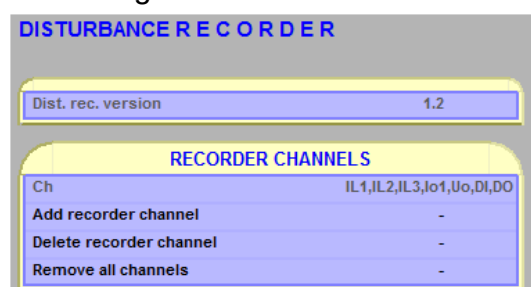


Table 6.2: Disturbance recorder waveform

Channel	Description	Available for waveform				
		Voltage measurement mode				
		2LL+Uo	3LN	1LL+Uo/LLy	2LL/LLy	L/LLy/LLz
IL1, IL2, IL3	Phase current	Yes	Yes	Yes	Yes	Yes
Io1, Io2	Measured residual current	Yes	Yes	Yes	Yes	Yes
U12	Line-to-line voltage	Yes	-	Yes	Yes	Yes
U23	Line-to-line voltage	Yes	-	-	Yes	-
U31	Line-to-line voltage	-	-	-	-	-
UL1, UL2, UL3	Phase-to-neutral voltage	-	Yes	-	-	-
Uo	Zero sequence voltage	Yes	-	Yes	-	-
f	Frequency	-	-	-	-	-
P, Q, S	Active, reactive, apparent power	-	-	-	-	-
P.F.	Power factor	-	-	-	-	-
CosFii	cosφ	-	-	-	-	-
IoCalc	Phasor sum Io = (IL1+IL2+IL3 [*])/3	-	-	-	-	-
I1	Positive sequence current	-	-	-	-	-
I2	Negative sequence current	-	-	-	-	-
I2/I1	Relative current unbalance	-	-	-	-	-
I2/Imode	Current unbalance [xImode]	-	-	-	-	-
U1	Positive sequence voltage	-	-	-	-	-
U2	Negative sequence voltage	-	-	-	-	-
U2/U1	Relative voltage unbalance	-	-	-	-	-
IL	Average (IL1 + IL2 + IL3 [*])/3	-	-	-	-	-
Uphase	Average (UL1 + UL2 + UL3)/3	-	-	-	-	-
Uline	Average (U12 + U23 + U31)/3	-	-	-	-	-
DO	Digital outputs	Yes	Yes	Yes	Yes	Yes
DI	Digital inputs	Yes	Yes	Yes	Yes	Yes
TanFii	tanφ	-	-	-	-	-
THDIL1	Total harmonic distortion of IL1 [*]	-	-	-	-	-
THDIL2	Total harmonic distortion of IL2 [*]	-	-	-	-	-
THDIL3	Total harmonic distortion of IL3 [*]	-	-	-	-	-
THDUa	Total harmonic distortion of Ua	-	-	-	-	-
THDUb	Total harmonic distortion of Ub	-	-	-	-	-
THDUc	Total harmonic distortion of Uc	-	-	-	-	-
DI_2	Digital inputs 21-32	Yes	Yes	Yes	Yes	Yes
Prms	Active power rms value	-	-	-	-	-
Qrms	Reactive power rms value	-	-	-	-	-
Srms	Apparent power rms value	-	-	-	-	-
fy	Frequency behind circuit breaker	-	-	-	-	-

fz	Frequency behind 2nd circuit breaker	-	-	-	-	-
U12y	Voltage behind circuit breaker	-	-	Yes	Yes	Yes
U12z	Voltage behind 2nd circuit breaker	-	-	-	-	-
IL1RMS	IL1* RMS for average sampling	-	-	-	-	-
IL2RMS	IL2* RMS for average sampling	-	-	-	-	-
IL3RMS	IL3* RMS for average sampling	-	-	-	-	-

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Table 6.3: Disturbance recorder parameters

Parameter	Value	Unit	Description	Note
Mode			Behavior in memory full situation:	Set
	Saturated		No more recordings are accepted	
	Overflow		The oldest recorder will be overwritten	
SR			Sample rate	Set
	32/cycle		Waveform	
	16/cycle		Waveform	
	8/cycle		Waveform	
	1/10ms		One cycle value *)	
	1/20ms		One cycle value **)	
	1/200 ms		Average	
	1/1s		Average	
	1/5s		Average	
	1/10s		Average	
	1/15s		Average	
	1/30s		Average	
	1/1min		Average	
Time		s	Recording length	Set
PreTrig		%	Amount of recording data before the trigger moment	Set
MaxLen		s	Maximum time setting. This value depends on sample rate, number and type of the selected channels and the configured recording length.	
Status			Status of recording	
	-		Not active	
	Run		Waiting a triggering	
	Trig		Recording	
	FULL		Memory is full in saturated mode	
ManTrig	-, Trig		Manual triggering	Set
ReadyRec	n/m		n = Available recordings / m = maximum number of recordings The value of 'm' depends on sample rate, number and type of the selected channels and the configured recording length.	

Parameter	Value	Unit	Description	Note
AddCh			Add one channel. Maximum simultaneous number of channels is 12.	Set
	IL1, IL2, IL3 [♦]		Phase current	
	Io1, Io2		Measured residual current Line-	
	U12, U23, U31		to-line voltage	
	UL1, UL2, UL3		Phase-to-neutral voltage	
	Uo		Zero sequence voltage	
	f		Frequency	
	P, Q, S		Active, reactive, apparent power	
	P.F.		Power factor	
	CosFii		cosφ	
	IoCalc		Phasor sum Io = (IL1+IL2+IL3 [♦])/3	
	I1		Positive sequence current	
	I2		Negative sequence current	
	I2/I1		Relative current unbalance	
	I2/In		Current unbalance [xI _{MOT}]	
	U1		Positive sequence voltage	
	U2		Negative sequence voltage	
	U2/U1		Relative negative sequence voltage	
	IL		Average (IL1 + IL2 + IL3 [♦])/3	
	Uphase		Average phase voltage	
	Uline		Average line-to-lines voltages	
	DI, DO		Digital inputs, Digital outputs	
	TanFii		tanφ	
	THDIL1, THDIL2, THDIL3		Total harmonic distortion of IL1, IL2 or IL3	
	THDUa, THDUb, THDUc		Total harmonic distortion of Ua, Ub or Uc	
	Prms		Active power rms value	
	Qrms		Reactive power rms value	
	Srms		Apparent power rms value	
	fy		Frequency behind circuit breaker	
	fz		Frequency behind 2nd circuit breaker	
	U12y		Voltage behind circuit breaker	
	U12z		Voltage behind 2nd circuit breaker	
	IL1RMS, IL2MRS, IL3RMS		IL1, IL2, IL3 RMS for average sampling	
	ILmin, ILmax		Min and max of phase currents	
	ULLmin, ULLmax		Min and max of line-to-line voltages	
	ULNmin, ULNmax		Min and max of phase voltages	
Delete recorder			Delete selected channel	
ClrCh	-, Clear		Remove all channels	Set

Parameter	Value	Unit	Description	Note
(Ch)			List of selected channels	

*) This is the fundamental frequency rms value of one cycle updated every 10 ms.

**) This is the fundamental frequency rms value of one cycle updated every 20 ms.

♦ L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Set = An editable parameter (password needed).


For details of setting ranges, see the section Supporting functions.

Running virtual comtrade files

Virtual comtrade files can be run with VAMP relays with the v.10.74 software or a later version. Relay behavior can be analysed by playing the recorder data over and over again in the relay memory.

Steps of opening the VAMPSET setting tool:

1. Go to “Disturbance record” and select Open... (A).
2. Select the comtrade file from you hard disc or equivalent. VAMPSET is now ready to read the recording.
3. The virtual measurement has to be enabled (B) in order to send record data to the relay (C).
4. Sending the file to the device's memory takes a few seconds. Initiate playback of the file by pressing the Go! button (D). The “Change to control mode” button takes you back to the virtual measurement.

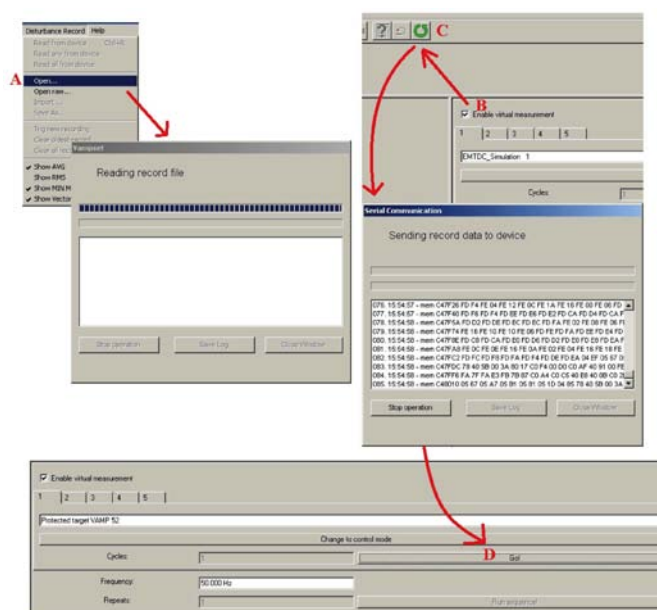

NOTE: The sample rate of the comtrade file has to be 32/cycle (625 micro seconds when 50 Hz is used). The channel names have to correspond to the channel names in Vamp relays: I_{L1} , I_{L2} , I_{L3} , I_{01} , I_{02} , U_{12} , U_{23} , U_{L1} , U_{L2} , U_{L3} and U_0 (NEMA: L1=A, L2=B, L3=C, U=V)

Cold load pick-up and inrush current detection

Cold load pick-up

A situation is regarded as cold load when all the three phase currents have been less than a given idle value and then at least one of the currents exceeds a given pick-up level within 80 ms. In such case the cold load detection signal is activated for a given time. This signal is available for output matrix and blocking matrix. Using virtual outputs of the output matrix setting group control is possible.

Application for cold load detection

Right after closing a circuit breaker a given amount of overload can be allowed for a given limited time to take care of concurrent thermostat controlled loads. Cold load pick-up function does this for example by selecting a more coarse setting group for over-current stage(s). It is also possible to use the cold load detection signal to block any set of protection stages for a given time.

Inrush current detection

Inrush current detection is quite similar with the cold load detection but it does also include a condition for second harmonic relative content of the currents. When all phase currents have been less than a given idle value and then at least one of them exceeds a given pick-up level within 80 ms and the ratio 2nd harmonic ratio to fundamental frequency, I_{f2}/I_{f1} , of at least one phase exceeds the given setting, the inrush detection signal is activated. This signal is available for output matrix and blocking matrix. Using virtual outputs of the output matrix setting group control is possible.


By setting the 2nd harmonic pickup parameter for I_{f2}/I_{f1} to zero, the inrush signal will behave equally with the cold load pick-up signal.

Application for inrush current detection

The inrush current of transformers usually exceeds the pick-up setting of sensitive overcurrent stages and contains a lot of even harmonics. Right after closing a circuit breaker the pick-up and tripping of sensitive overcurrent stages can be avoided by selecting a more coarse setting group for the appropriate over-current stage with inrush detect signal. It is also possible to use the detection signal to block any set of protection stages for a given time.

NOTE: Inrush detection is based on FFT - calculation which requires a full cycle of data for analyzing the harmonic content. Therefore when using inrush blocking function the cold load pick up starting conditions are used for activating the inrush blocking when the current rise is noticed. If in the signal is found second harmonic component after

1st cycle the blocking is continued, otherwise 2nd harmonic based blocking signal is released. Inrush blocking is recommended to be used into time delayed overcurrent stages while non blocked instant overcurrent stage is set to 20 % higher than expected inrush current. By this scheme fast reaction time in short circuit faults during the energization can be achieved while time delayed stages are blocked by inrush function.

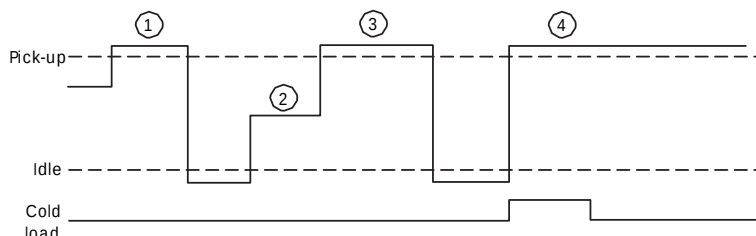

1. No activation because the current has not been under the set I_{DLE} current.
2. Current dropped under the I_{DLE} current level but now it stays between the I_{DLE} current and the pick-up current for over 80ms.
3. No activation because the phase two lasted longer than 80ms.
4. Now we have a cold load activation which lasts as long as the operation time was set or as long as the current stays above the pick-up setting.

Figure 6.1: Functionality of cold load / inrush current feature.

Table 6.4: Parameters of the cold load & inrush detection function

Parameter	Value	Unit	Description	Note
ColdLd	-		Status of cold load detection:	
	Start		Cold load situation is active	
	Trip		Timeout	
Inrush	-		Status of inrush detection:	
	Start		Inrush is detected	
	Trip		Timeout	
ILmax		A	The supervised value. Max. of IL1, IL2 and IL3	
Pickup		A	Primary scaled pick-up value	
Idle		A	Primary scaled upper limit for idle current	
MaxTime		s		Set
Idle		xImode	Current limit setting for idle situation	Set
Pickup		xImode	Pick-up setting for minimum start current	Set
	80	ms	Maximum transition time for start recognition	
Pickupf2		%	Pick-up value for relative amount of 2 nd harmonic, I_2/I_{f1}	Set

Set = An editable parameter (password needed).

For details of setting ranges, see the section Supporting functions.

Voltage sags and swells

The power quality of electrical networks has become increasingly important. The sophisticated loads (e.g. computers etc.) require uninterruptible supply of “clean” electricity. VAMP protection platform provides many power quality functions that can be used to evaluate, monitor and alarm on the basis of the quality. One of the most important power quality functions are voltage sag and swell monitoring.

VAMP provides separate monitoring logs for sags and swells. The voltage log is triggered, if any voltage input either goes under the sag limit ($V<$) or exceeds the swell limit ($V>$). There are four registers for both sags and swells in the fault log. Each register will have start time, phase information, duration, minimum, average, maximum voltage values of each sag and swell event. Furthermore, there are total number of sags and swells counters as well as total timers for sags and swells.

The voltage power quality functions are located under the submenu “U”.

Table 6.5: Setting parameters of sags and swells monitoring

Parameter	Value	Unit	Default	Description
U>	20 – 150	%	110	Setting value of swell limit
U<	10 – 120	%	90	Setting value of sag limit
Delay	0.04 – 1.00	s	0.06	Delay for sag and swell detection
SagOn	On; Off	-	On	Sag on event
SagOff	On; Off	-	On	Sag off event
SwelOn	On; Off	-	On	Swell on event
SwelOf	On; Off	-	On	Swell off event

Table 6.6: Recorded values of sags and swells monitoring

	Parameter	Value	Unit	Description
Recorded values	Count		-	Cumulative sag counter
	Total		-	Cumulative sag time counter
	Count		-	Cumulative swell counter
	Total		-	Cumulative swell time counter
Sag/ swell logs 1 – 4	Date		-	Date of the sag/swell
	Time		-	Time stamp of the sag/swell
	Type		-	Voltage inputs that had the sag/swell
	Time		s	Duration of the sag/swell
	Min1		% Un	Minimum voltage value during the sag/swell in the input 1
	Min2		% Un	Minimum voltage value during the sag/swell in the input 2
	Min3		% Un	Minimum voltage value during the sag/swell in the input 3
	Ave1		% Un	Average voltage value during the sag/swell in the input 1
	Ave2		% Un	Average voltage value during the sag/swell in the input 2
	Ave3		% Un	Average voltage value during the sag/swell in the input 3
	Max1		% Un	Maximum voltage value during the sag/swell in the input 1
	Max2		% Un	Maximum voltage value during the sag/swell in the input 2
	Max3		% Un	Maximum voltage value during the sag/swell in the input 3

For details of setting ranges, see the section Supporting functions.

Voltage interruptions

The device includes a simple function to detect voltage interruptions. The function calculates the number of voltage interruptions and the total time of the voltage-off time within a given calendar period. The period is based on the real time clock of the device. The available periods are:

- 8 hours, 00:00 – 08:00, 08:00 – 16:00, 16:00 – 24:00
- one day, 00:00 – 24:00
- one week, Monday 00:00 – Sunday 24:00
- one month, the first day 00:00 – the last day 24:00
- one year, 1st January 00:00 – 31st December 24:00

After each period, the number of interruptions and the total interruption time are stored as previous values. The interruption counter and the total time are cleared for a new period. The old previous values are overwritten.

The voltage interruption is based on the value of the positive sequence voltage V_1 and a user given limit value. Whenever the measured V_1 goes below the limit, the interruption counter is increased, and the total time counter starts increasing.

Shortest recognized interruption time is 40 ms. If the voltage-off time is shorter it may be recognized depending on the relative depth of the voltage dip.

If the voltage has been significantly over the limit $U_1 <$ and then there is a small and short under-swing, it will not be recognized (Figure 6.2).

Note: For NEMA, $U=V$.

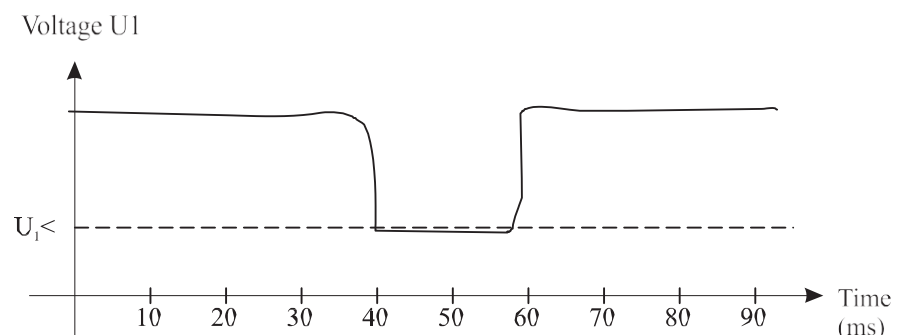


Figure 6.2: A short voltage interruption which is probably not recognized

If the limit $V_1 <$ is high and the voltage has been near this limit, and then there is a short but very deep dip, it will be recognized (Figure 6.3).

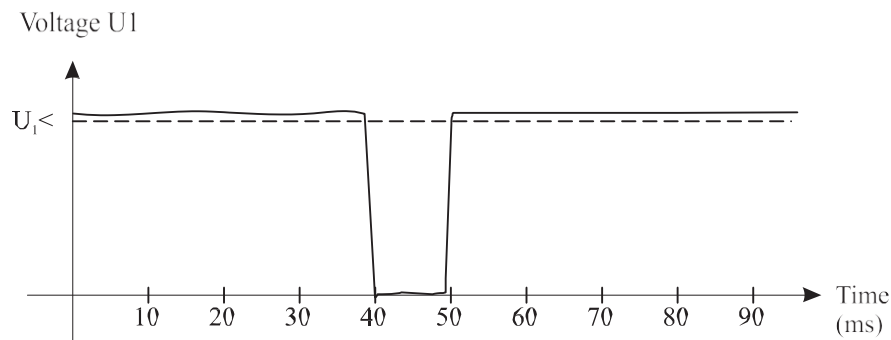


Figure 6.3: A short voltage interrupt that will be recognized

Table 6.7: Setting parameters of the voltage sag measurement function:

Parameter	Value	Unit	Default	Description
U1<	10.0 – 120.0	%	64	Setting value
Period	8h Day Week Month	-	Month	Length of the observation period
Date		-		Date
Time		-		Time

Table 6.8: Measured and recorded values of voltage sag measurement function:

	Parameter	Value	Unit	Description
Measured value	Voltage	LOW; OK	-	Current voltage status
	U1		%	Measured positive sequence voltage
Recorded values	Count		-	Number of voltage sags during the current observation period
	Prev		-	Number of voltage sags during the previous observation period
	Total		s	Total (summed) time of voltage sags during the current observation period
	Prev		s	Total (summed) time of voltage sags during the previous observation period

For details of setting ranges, see the section Supporting functions.

Current transformer supervision

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, NOM-029-STPS-2011, and CSA Z462.
- This unit must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this unit before working on or inside the unit.
- Always use a properly rated voltage sensing device to confirm that the power is off.
- Avoid open current transformer connections.
- Replace all devices, doors and covers before turning on power to this unit.

Failure to follow these instructions will result in death or serious injury.

The VAMP relay is capable of detecting faults originating from the current transformers (CTs) or the wiring from the CTs to the relay terminals. Furthermore, the function can detect an open secondary of a CT, and an open secondary of a CT can cause hazardous voltages and equipment damage.

The CT supervisor function measures phase currents. If one of the three phase currents drops below $I_{MIN}<$ setting, while another phase current is exceeding the $I_{MAX}>$ setting, the function will issue an alarm after the operation delay has elapsed.

Table 6.9: Setting parameters of CT supervisor CTSV

Parameter	Value	Unit	Default	Description
$I_{max}>$	0.0 – 10.0	xIn	2.0	Upper setting for CT supervisor
$I_{min}<$	0.0 – 10.0	xIn	0.2	Lower setting for CT supervisor
$t>$	0.02 – 600.0	s	0.10	Operation delay
CT on	On; Off	-	On	CT supervisor on event
CT off	On; Off	-	On	CT supervisor off even

Table 6.10: Measured and recorded values of CT supervisor CTSV

	Parameter	Value	Unit	Description
Measured value	ILmax		A	Maximum of phase currents
	ILmin		A	Minimum of phase currents
Display	Imax>, Imin<		A	Setting values as primary values
Recorded values	Date		-	Date of CT supervision alarm
	Time		-	Time of CT supervision alarm
	Imax		A	Maximum phase current
	Imin		A	Minimum phase current

For details of setting ranges, see the section Supporting functions.

Voltage transformer supervision

The device supervises the VTs and VT wiring between the device terminals and the VTs. If there is a fuse in the voltage transformer circuitry, the open fuse prevents or distorts the voltage measurement. Therefore, an alarm should be issued. Furthermore, in some applications, protection functions using voltage signals should be blocked to avoid nuisance tripping.

The VT supervisor function measures the three phase voltages and currents. The negative sequence voltage V_2 and the negative sequence current I_2 are calculated. If V_2 exceed the $V_{2>}$ setting and at the same time, I_2 is less than the $I_{2<}$ setting, the function will issue an alarm after the operation delay has elapsed.

Table 6.11: Setting parameters of VT supervisor VTSV ()

Parameter	Value	Unit	Default	Description
U2>	0.0 – 200.0	% Un	34.6	Upper setting for VT supervisor
I2<	0.0 – 200.0	% In	100.0	Lower setting for VT supervisor
t>	0.02 – 600.0	s	0.10	Operation delay
VT on	On; Off	-	On	VT supervisor on event
VT off	On; Off	-	On	VT supervisor off even

Table 6.12: Measured and recorded values of VT supervisor VTSV ()

	Parameter	Value	Uni	Description
Measured value	U2		%	Measured negative sequence voltage
	I2		%	Measured negative sequence current
Recorded Values	Date		-	Date of VT supervision alarm
	Time		-	Time of VT supervision alarm
	U2		%	Recorded negative sequence voltage
	I2		%	Recorded negative sequence current

For details of setting ranges, see the section Supporting functions.

Circuit breaker condition monitoring

The relay has a condition monitoring function that supervises the wearing of the circuit-breaker. The condition monitoring can give an alarm for the need of CB maintenance.

The CB wear function measures the breaking current of each CB pole separately and then estimates the condition of the CB accordingly the permissible cycle diagram. The breaking current is registered when the trip relay supervised by the circuit breaker failure protection (CBFP) is activated. (See the section Circuit breaker failure protection CBFP (50BF) for CBFP and the setting parameter "CBrelay".)

Breaker curve and its approximation

The permissible cycle diagram is usually available in the documentation of the CB manufacturer (Figure 6.4). The diagram specifies the permissible number of cycles for every level of the breaking current. This diagram is parameterised to the condition monitoring function with maximum eight [current, cycles] points. See Table 6.13. If less than eight points needed, the unused points are set to $[I_{BIG}, 1]$, where I_{BIG} is more than the maximum breaking capacity.

If the CB wearing characteristics or part of it is a straight line on a log/log graph, the two end points are needed to define that part of the characteristics. This is because the relay is using logarithmic interpolation for any current values falling in between the given current points 2 – 8.

The points 4 – 8 are not needed for the CB in Figure 6.4. Thus they are set to 100 kA and one operation in the table to be discarded by the algorithm.

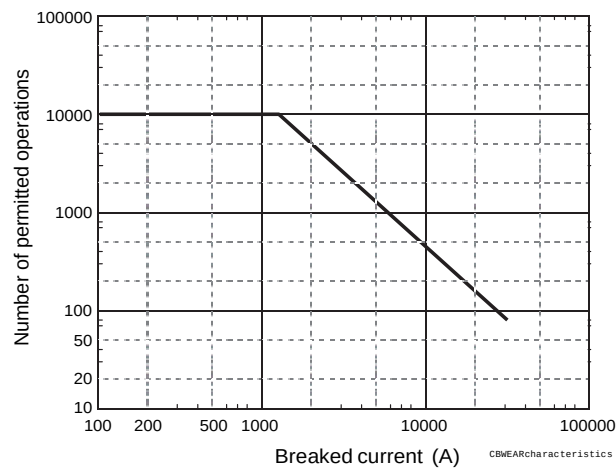


Figure 6.4: An example of a circuit breaker wearing characteristic graph.

Table 6.13: An example of circuit breaker wearing characteristics in a table format. The values are taken from the figure above. The table is edited with VAMPSET under menu "BREAKER CURVE".

Point	Interrupted current (kA)	Number of permitted operations
1	0 (mechanical age)	10000
2	1.25 (rated current)	10000
3	31.0 (maximum breaking current)	80
4	100	1
5	100	1
6	100	1
7	100	1
8	100	1

Setting alarm points

There are two alarm points available having two setting parameters each.

- **Current**
The first alarm can be set for example to nominal current of the CB or any application typical current. The second alarm can be set for example according a typical fault current.
- **Operations left alarm limit**
An alarm is activated when there are less operations left at the given current level than this limit.

Any actual interrupted current will be logarithmically weighted for the two given alarm current levels and the number of operations left at the alarm points is decreased accordingly. When the "operations left" i.e. the number of remaining operations, goes under the given alarm limit, an alarm signal is issued to the output matrix. Also an event is generated depending on the event enabling.

Clearing "operations left" counters

After the breaker curve table is filled and the alarm currents are defined, the wearing function can be initialised by clearing the decreasing operation counters with parameter "Clear" (Clear oper. left cnts). After clearing the relay will show the maximum allowed operations for the defined alarm current levels.

Operation counters to monitor the condition

The operations left can be read from the counters "Al1Ln" (Alarm 1) and "Al2Ln" (Alarm2). There are three values for both alarms, one for each phase. The smallest of three is supervised by the two alarm functions.

Logarithmic interpolation

The permitted number of operations for currents in between the defined points are logarithmically interpolated using equation

Equation 6.1:

$$C = \frac{a}{I^n}$$

C = permitted operations

I = interrupted current

a = constant according Equation 6.2

n = constant according Equation 6.3

Equation 6.2:

$$n = \frac{\ln \frac{C_k}{C_{k+1}}}{\ln \frac{I_k}{I_{k+1}}}$$

Equation 6.3:

$$a = C_k I_k^2$$

$$\ln \frac{I_{k+1}}{I_k}$$

$\ln$ = natural logarithm function

C_k = permitted operations. k = row 2 – 7 in Table 6.13.

I_k = corresponding current. k = row 2 – 7 in Table 6.13.

C_{k+1} = permitted operations. k = row 2 – 7 in Table 6.13.

I_{k+1} = corresponding current. k = row 2 – 7 in Table 6.13.

Example of the logarithmic interpolation

Alarm 2 current is set to 6 kA. What is the maximum number of operations according Table 6.13.

The current 6 kA lies between points 2 and 3 in the table. That gives value for the index k . Using

$$k = 2$$

$$C_k = 10000$$

$$C_{k+1} = 80$$

$$I_{k+1} = 31 \text{ kA}$$

$$I_k = 1.25 \text{ kA}$$

and the Equation 6.2 and Equation 6.3, the relay calculates

$$n = \frac{\ln \frac{10000}{80}}{\ln \frac{31000}{1250}} = 1.5038$$

$$a = 10000 \cdot 1250^{1.5038} = 454 \cdot 10^6$$

Using Equation 6.1 the relay gets the number of permitted operations for current 6 kA.

$$C = \frac{454 \cdot 10^6}{6000^{1.5038}} = 945$$

Thus the maximum number of current breaking at 6 kA is 945. This can be verified with the original breaker curve in Figure 6.4. Indeed, the figure shows that at 6 kA the operation count is between 900 and 1000. A useful alarm level for operation-left, could be in this case for example 50 being about five per cent of the maximum.

Example of operations counter decrementing when the CB is breaking a current

Alarm2 is set to 6 kA. CBFP is supervising trip relay T1 and trip signal of an overcurrent stage detecting a two phase fault is connected to this trip relay T1. The interrupted phase currents are 12.5 kA, 12.5 kA and 1.5 kA. How many are Alarm2 counters decremented?

Using Equation 6.1 and values “n” and “a” from the previous example, the relay gets the number of permitted operation at 10 kA.

$$C_{10kA} = \frac{454 \cdot 10^6}{12500^{1.5038}} = 313$$

At alarm level 2, 6 kA, the corresponding number of operations is calculated according

Equation 6.4:

$$\Delta = \frac{C_{AlarmMax}}{C}$$

$$\Delta_A = \Delta_B = \frac{945}{313} = 3$$

Thus Alarm2 counters for phases A and B are decremented by 3. In phase A the currents is less than the alarm limit current 6 kA. For such currents the decrement is one.

$$\Delta_C = 1$$

Table 6.14: Local panel parameters of CBWEAR function

Parameter	Value	Unit	Description	Set
CBWEAR STATUS				
			Operations left for	
AI1L1			- Alarm 1, phase L1	
AI1L2			- Alarm 1, phase L2	
AI1L3			- Alarm 1, phase L3	
AI2L1			- Alarm 2, phase L1	
AI2L2			- Alarm 2, phase L2	
AI2L3			- Alarm 2, phase L3	
Latest trip				
Date time			Time stamp of the latest trip operation	
IL1 [♦]		A	Interrupted current of phase L1	
IL2 [♦]		A	Interrupted current of phase L2	
IL3 [♦]		A	Interrupted current of phase L3	
CBWEAR SET				
Alarm1				
Current	0.00 – 100.00	kA	Alarm1 current level	Set
Cycles	100000 – 1		Alarm1 limit for operations left	Set
Alarm2				
Current	0.00 – 100.00	kA	Alarm2 current level	Set
Cycles	100000 – 1		Alarm1 limit for operations left	Set
CBWEAR SET2				

Al1On	On Off		'Alarm1 on' event enabling	Set
Al1Off	On Off		'Alarm1 off' event enabling	Set
Al2On	On Off		'Alarm2 on' event enabling	Set
Al2Off	On Off		'Alarm2 off' event enabling	Set
Clear	- Clear		Clearing of cycle counters	Set

Set = An editable parameter (password needed).

The breaker curve table is edited with VAMPSET.

♦ L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Energy pulse outputs

The device can be configured to send a pulse whenever certain amount of energy has been imported or exported. The principle is presented in Figure 6.5. Each time the energy level reaches the pulse size, an output relay is activated and the relay will be active as long as defined by a pulse duration setting.

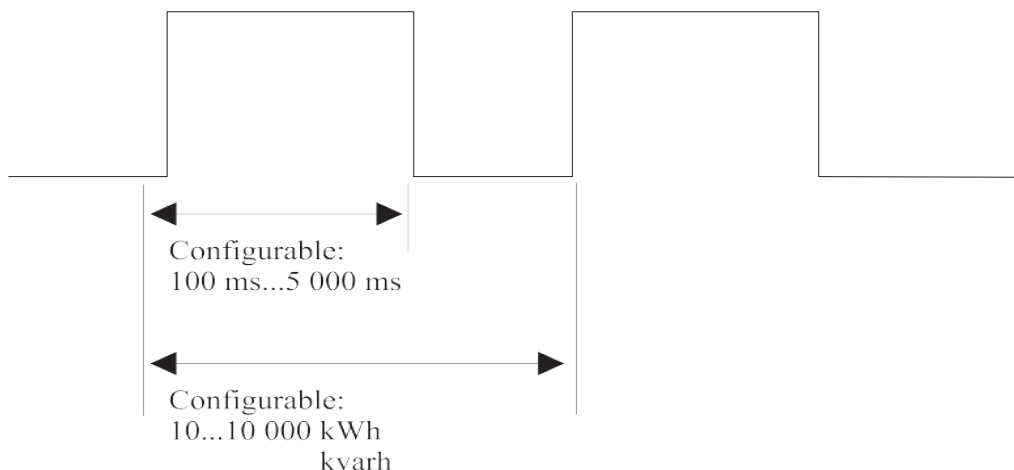


Figure 6.5: Principle of energy pulses

The relay has four energy pulse outputs. The output channels are:

- Active exported energy
- Reactive exported energy
- Active imported energy
- Reactive imported energy

Each channel can be connected to any combination of the output relays using output matrix. The parameters for the energy pulses can be found in the E menu under the submenus E-PULSE SIZES and E-PULSE DURATION.

Table 6.15: Energy pulse output parameters

	Parameter	Value	Unit	Description
E-PULSE SIZES	E+	10 – 10 000	kWh	Pulse size of active exported energy
	Eq+	10 – 10 000	kvarh	Pulse size of reactive exported energy
	E-	10 – 10 000	kWh	Pulse size of active imported energy
	Eq-	10 – 10 000	kvarh	Pulse size of reactive imported energy
E-PULSE DURATION	E+	100 – 5000	ms	Pulse length of active exported energy
	Eq+	100 – 5000	ms	Pulse length of reactive exported energy
	E-	100 – 5000	ms	Pulse length of active imported energy
	Eq-	100 – 5000	ms	Pulse length of reactive imported energy

Scaling examples

- Average active exported power is 250 MW.
 Peak active exported power is 400 MW.
 Pulse size is 250 kWh or .025 MWh.
 The average pulse frequency will be $250/0.250 = 1000$ pulses/h.
 The peak pulse frequency will be $400/0.250 = 1600$ pulses/h.
 Set pulse length to $3600/1600 - 0.2 = 2.0$ s or less.
 The lifetime of the mechanical output relay will be
 $50 \times 10^6 / 1000$ h = 6 years.
 This is not a practical scaling example unless an output relay lifetime of about six years is accepted.
- Average active exported power is 100 MW.
 Peak active exported power is 800 MW.
 Pulse size is 400 kWh.
 The average pulse frequency will be $100/0.400 = 250$ pulses/h.
 The peak pulse frequency will be $800/0.400 = 2000$ pulses/h.
 Set pulse length to $3600/2000 - 0.2 = 1.6$ s or less.
 The lifetime of the mechanical output relay will be
 $50 \times 10^6 / 250$ h = 23 years
- Average active exported power is 20 MW.
 Peak active exported power is 70 MW.
 Pulse size is 60 kWh.
 The average pulse frequency will be $25/0.060 = 416.7$ pulses/h.
 The peak pulse frequency will be $70/0.060 = 1166.7$ pulses/h.
 Set pulse length to $3600/1167 - 0.2 = 2.8$ s or less.
 The lifetime of the mechanical output relay will be
 $50 \times 10^6 / 417$ h = 14 years
- Average active exported power is 1900 kW.
 Peak active exported power is 50 MW.
 Pulse size is 10 kWh.
 The average pulse frequency will be $1900/10 = 190$ pulses/h.
 The peak pulse frequency will be $50000/10 = 5000$ pulses/h.
 Set pulse length to $3600/5000 - 0.2 = 0.5$ s or less.
 The lifetime of the mechanical output relay will be
 $50 \times 10^6 / 190$ h = 30 years

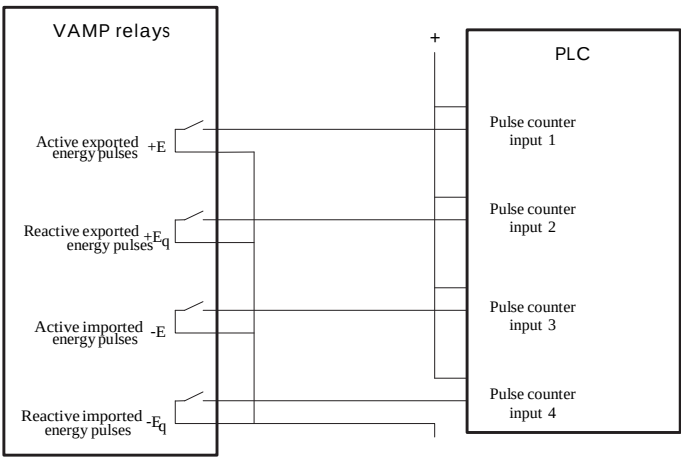


Figure 6.6: Application example of wiring the energy pulse outputs to a PLC having common plus and using an external wetting voltage

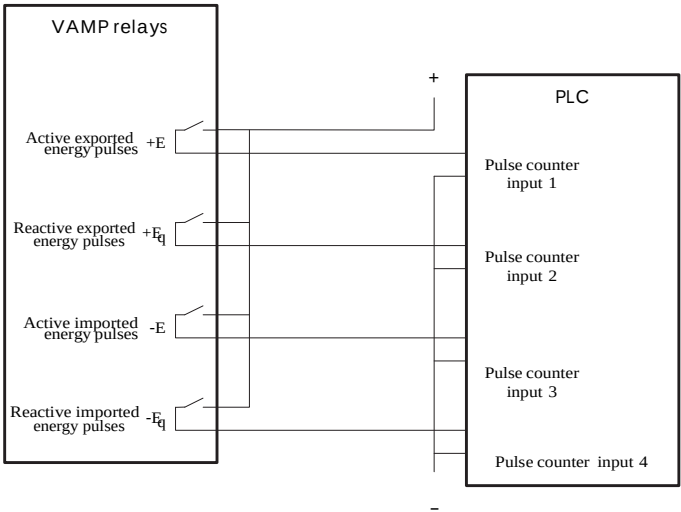


Figure 6.7: Application example of wiring the energy pulse outputs to a PLC having common minus and using an external wetting voltage

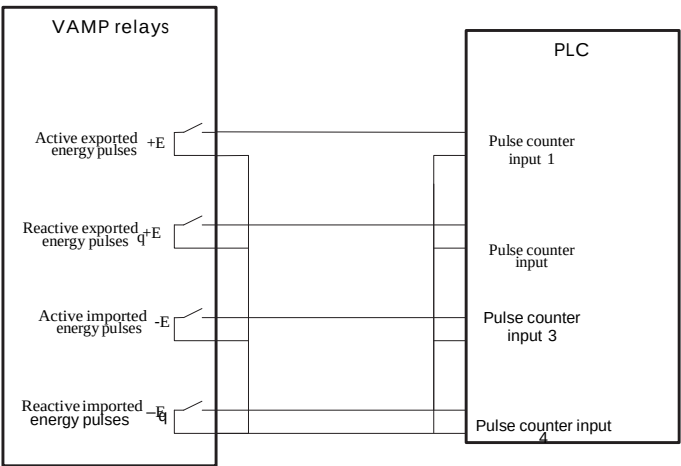


Figure 6.8 Application example of wiring the energy pulse outputs to a PLC having common minus and an internal wetting voltage.

System clock and synchronization

The internal clock of the relay is used to time stamp events and disturbance recordings.

The system clock should be externally synchronised to get comparable event time stamps for all the relays in the system.

The synchronizing is based on the difference of the internal time and the synchronising message or pulse. This deviation is filtered and the internal time is corrected softly towards a zero deviation.

Time zone offsets

Time zone offset (or bias) can be provided to adjust the local time for IED. The Offset can be set as a Positive (+) or Negative (-) value within a range of -15.00 to +15.00 hours and a resolution of 0.01/h. Basically quarter hour resolution is enough.

Daylight saving time (DST)

IED provides automatic daylight saving adjustments when configured. A daylight savings time (summer time) adjustment can be configured separately and in addition to a time zone offset.

SYSTEM CLOCK

Date	2014-05-12
Day of week	Monday
Time of day	15:24:47
Date style	y-m-d
Time zone	2 h

Enable DST	☒
Event enabling	☒

Status of DST

Status of DST	ACTIVE
---------------	--------

Next DST changes

Next DSTbegin date	2015-03-29
DSTbegin hour	03:00
Next DSTend date	2014-10-26
DSTend hour (DST)	04:00 DST

Daylight time standards vary widely throughout the world. Traditional daylight/summer time is configured as one (1) hour positive bias. The new US/Canada DST standard, adopted in the spring of 2007 is: one (1) hour positive bias, starting at 2:00am on the second Sunday in March, and ending at 2:00am on the first Sunday in November. In the European Union, daylight change times are defined relative to the Coordinated Universal Time (UTC) time of day instead of local time of day (as in U.S.) European customers, please carefully find out local country rules for DST.

The daylight saving rules for Finland are the IED defaults (24-hour clock):

- Daylight saving time start: Last Sunday of March at 03.00
- Daylight saving time end: Last Sunday of October at 04.00

DSTbegin rule	
DSTbegin month	Mar
Ordinal of day of week	Last
Day of week	Sunday
DSTbegin hour	3
DSTend rule	
DSTend month	Oct
Ordinal of day of week	Last
Day of week	Sunday
DSTend hour (DST)	4 DST

To help ensure proper hands-free year-around operation, automatic daylight time adjustments must be configured using the "Enable DST" and not with the time zone offset option.

Adapting auto adjust

During tens of hours of synchronizing the device will learn its average deviation and starts to make small corrections by itself. The target is that when the next synchronizing message is received, the deviation is already near zero. Parameters "AAIntv" and "AvDrft" will show the adapted correction time interval of this ± 1 ms auto-adjust function.

Time drift correction without external sync

If any external synchronizing source is not available and the system clock has a known steady drift, it is possible to roughly correct the clock deviation by editing the parameters "AAIntv" and "AvDrft". The following equation can be used if the previous "AAIntv" value has been zero.

$$AAIntv = \frac{604.8}{DriftInOneWeek}$$

If the auto-adjust interval "AAIntv" has not been zero, but further trimming is still needed, the following equation can be used to calculate a new auto-adjust interval.

$$AAIntv_{NEW} = \frac{1}{\frac{1}{AAIntv_{PREVIOUS}} + \frac{DriftInOneWeek}{604.8}}$$

The term $DriftInOneWeek/604.8$ may be replaced with the relative drift multiplied by 1000, if some other period than one week has been used. For example if the drift has been 37 seconds in 14 days, the relative drift is $37 \cdot 1000 / (14 \cdot 24 \cdot 3600) = 0.0306$ ms/s.

Example 1

If there has been no external sync and the relay's clock is leading sixty-one seconds a week and the parameter $AAIntv$ has been zero, the parameters are set as

$$AvDrft = \frac{Lead}{604.8}$$

$$AAIntv = \frac{61}{61} = 9.9s$$

With these parameter values the system clock corrects itself with -1 ms every 9.9 seconds which equals -61.091 s/week.

Example 2

If there is no external sync and the relay's clock has been lagging five seconds in nine days and the $AAIntv$ has been 9.9 s, leading, then the parameters are set as

$$AAIntv_{NEW} = \frac{1}{\frac{1}{9.9} - \frac{5000}{9 \cdot 24 \cdot 3600}} = 10.6$$

$$AvDrft = Lead$$

When the internal time is roughly correct – deviation is less than four seconds – any synchronizing or auto-adjust will never turn the clock backwards. Instead, in case the clock is leading, it is softly slowed down to maintain causality.

Table 6.16: System clock parameters

Parameter	Value	Unit	Description	Note
Date			Current date	Set
Time			Current time	Set
Style			Date format	Set
	y-d-m		Year-Month-Day	
	d.m.y		Day.Month.Year	
	m/d/y		Month/Day/Year	
SyncDI	-		DI not used for synchronizing	***)
	DI1 – DI6		Minute pulse input	
TZone	-15.00 – +15.00 *)		UTC time zone for SNTP synchronization. Note: This is a decimal number. For example for state of Nepal the time zone 5:45 is given as 5.75	Set
DST	No; Yes		Daylight saving time for SNTP	Set
SySrc			Clock synchronisation source	
	Internal		No sync recognized since 200s	
	DI		Digital input	
	SNTP		Protocol sync	
	SpaBus		Protocol sync	
	ModBus		Protocol sync	
	ModBus TCP		Protocol sync	
	ProfibusDP		Protocol sync	
	IEC101		Protocol sync	
	IEC103		Protocol sync	
	DNP3		Protocol sync	
	IRIG-B003		IRIG timecode B003 ****)	
MsgCnt	0 – 65535, 0 – etc.		The number of received synchronisation messages or pulses	
Dev	±32767	ms	Latest time deviation between the system clock and the received synchronization	
SyOS	±10000.000	s	Synchronisation correction for any constant deviation in the synchronizing source.	Set
AAIntv	±10000	s	Adapted auto adjust interval for 1 ms correction	Set**)
AvDrft	Lead; Lag		Adapted average clock drift sign	Set**)
FilDev	±125	ms	Filtered synchronization deviation	Set**)

Set = An editable parameter (password needed).

*) A range of -11 h – +12 h would cover the whole Ground but because the International Date Line does not follow the 180° meridian, a more wide range is needed.

**) If external synchronization is used this parameter will be set automatically.

***) Set the DI delay to its minimum and the polarity such that the leading edge is the synchronizing edge.

****) Relay needs to be equipped with suitable hardware option module to receive IRIG-B clock synchronization signal. (See Section 14: Order information).

Synchronisation with DI

Clock can be synchronized by reading minute pulses from digital inputs, virtual inputs or virtual outputs. Sync source is selected with SyncDI setting. When rising edge is detected from the selected input, system clock is adjusted to the nearest minute. Length of digital input pulse should be at least 50 ms. Delay of the selected digital input should be set to zero.

Synchronisation correction

If the sync source has a known offset delay, it can be compensated with SyOS setting. This is useful for compensating hardware delays or transfer delays of communication protocols. A positive value will compensate a lagging external sync and communication delays. A negative value will compensate any leading offset of the external sync source.


Sync source

When the device receives new sync message, the sync source display is updated. If no new sync messages are received within next 1.5 minutes, the device will change to internal sync mode.

Sync source: IRIG-B003

IRIG-B003 synchronization is supported with a dedicated communication option with either a two-pole or two pins in a D9 rear connector (See Section 14: Order information).

IRIG-B003 input clock signal voltage level is TLL. The input clock signal originated in the GPS receiver must be taken to multiple relays through an IRIG-B distribution module. This module acts as a centralized unit for a point-to-multiple point connection. Note: Daisy chain connection of IRIG-B signal inputs in multiple relays must be avoided.

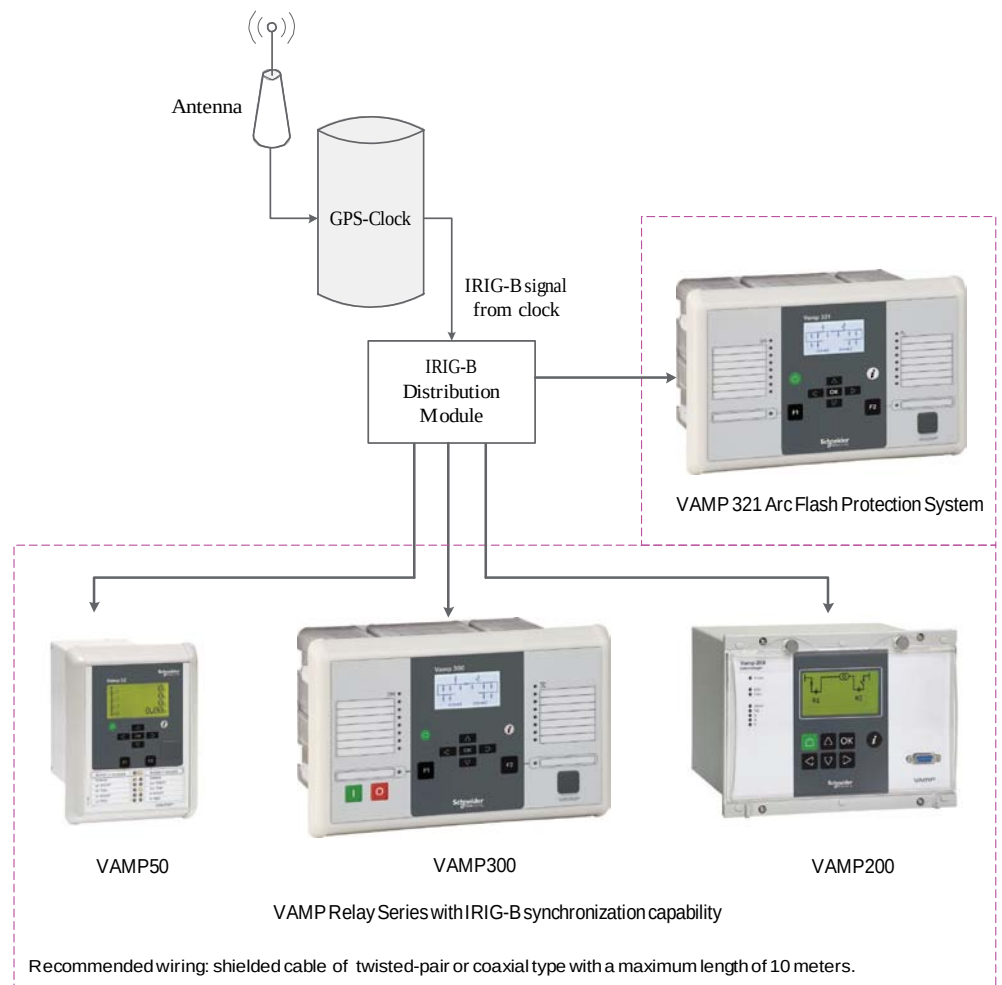

The recommended cable must be shielded and either of coaxial or twisted pair type. Its length should not exceed a maximum of 10 meters.

Deviation

The time deviation means how much system clock time differs from sync source time. Time deviation is calculated after receiving new sync message. The filtered deviation means how much the system clock was really adjusted. Filtering takes care of small deviation in sync messages.

Auto-lag/lead

The device synchronizes to the sync source, meaning it starts automatically leading or lagging to stay in perfect sync with the master. The learning process takes few days.

Running hour counter

This function calculates the total active time of the selected digital input, virtual I/O or output matrix output signal. The resolution is ten seconds.

Table 6.17: Running hour counter parameters

Parameter	Value	Unit	Description	Note
Runh	0 – 876000	h	Total active time, hours Note: The label text "Runh" can be edited with VAMPSET.	(Set)
Runs	0 – 3599	s	Total active time, seconds	(Set)
Starts	0 – 65535		Activation counter	(Set)
Status	Stop Run		Current status of the selected digital signal	
DI	- DI1 – DI _n , VI1 – VI _n , LedAI, LedTr, LedA, LedB, LedC, LedDR, VO1 – VO6		Select the supervised signal None Physical inputs Virtual inputs Output matrix out signal AI Output matrix out signal Tr Output matrix out signal LA Output matrix out signal LB Output matrix out signal LC Output matrix out signal DR Virtual outputs	Set
Started at			Date and time of the last activation	
Stopped at			Date and time of the last inactivation	

Set = An editable parameter (password needed).

(Set) = An informative value which can be edited as well.

Timers

The VAMP protection platform includes four settable timers that can be used together with the user's programmable logic or to control setting groups and other applications that require actions based on calendar time. Each timer has its own settings. The selected on-time and off-time is set and then the activation of the timer can be set to be as daily or according the day of week (See the setting parameters for details). The timer outputs are available for logic functions and for the block and output matrix.

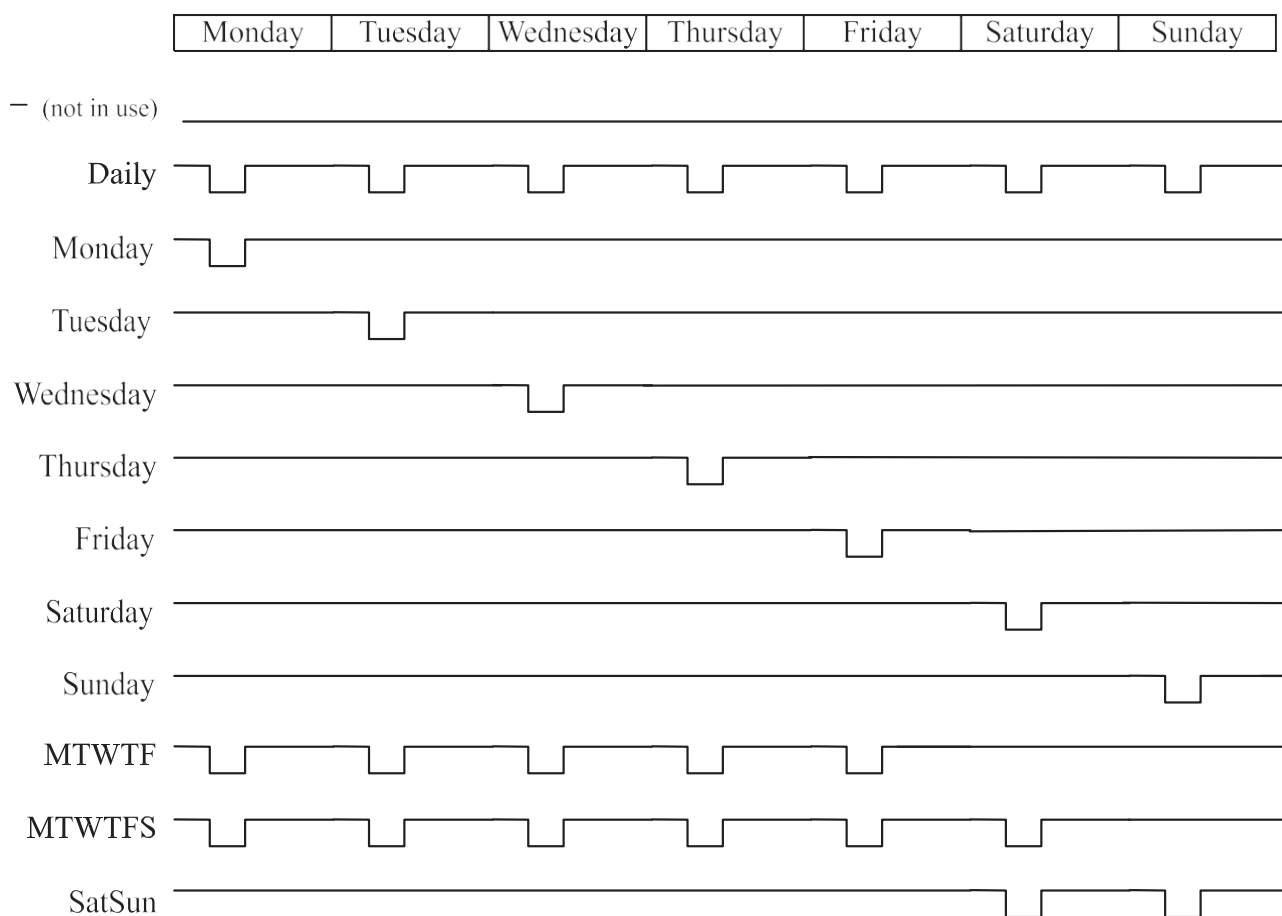


Figure 6.9: Timer output sequence in different modes.

The user can force any timer, which is in use, on or off. The forcing is done by writing a new status value. No forcing flag is needed as in forcing i.e. the output relays.

The forced time is valid until the next forcing or until the next reversing timed act from the timer itself.

The status of each timer is stored in non-volatile memory when the auxiliary power is switched off. At start up, the status of each timer is recovered.

Table 6.18: Setting parameters of timers

Parameter	Value	Description
TimerN		Timer status
	-	Not in use
	0	Output is inactive
	1	Output is active
On	hh:mm:ss	Activation time of the timer
Off	hh:mm:ss	De-activation time of the timer
Mode		For each four timers there are 12 different modes available:
	-	The timer is off and not running. The output is off i.e. 0 all the time.
	Daily	The timer switches on and off once every day.
	Monday	The timer switches on and off every Monday.
	Tuesday	The timer switches on and off every Tuesday.
	Wednesday	The timer switches on and off every Wednesday.
	Thursday	The timer switches on and off every Thursday.
	Friday	The timer switches on and off every Friday.
	Saturday	The timer switches on and off every Saturday.
	Sunday	The timer switches on and off every Sunday.
	MTWTF	The timer switches on and off every day except Saturdays and Sundays
	MTWTFS	The timer switches on and off every day except Sundays.
	SatSun	The timer switches on and off every Saturday and Sunday.

Combined overcurrent status

This function is collecting faults, fault types and registered fault currents of all enabled overcurrent stages.

Table 6.19: Line fault parameters

Parameter	Value	Unit	Description	Note
IFltLas		xlmode	Current of the latest overcurrent fault	(Set)
LINE ALARM				
AlrL1			Start (=alarm) status for each phase.	
AlrL2	0		0=No start since alarm ClrDly	
AlrL3	1		1=Start is on	
OCs	0 1		Combined overcurrent start status. AlrL1=AlrL2=AlrL3=0 AlrL1=1 or AlrL2=1 or AlrL3=1	
LxAlarm	On Off		'On' Event enabling for AlrL1-3 Events are enabled Events are disabled	Set
LxAlarmOff	On Off		'Off' Event enabling for AlrL1-3 Events are enabled Events are disabled	Set
OCAalarm	On Off		'On' Event enabling for combined o/c starts Events are enabled Events are disabled	Set
OCAalarmOff	On Off		'Off' Event enabling for combined o/c starts Events are enabled Events are disabled	Set
IncFltEvnt	On Off		Disabling several start <u>and</u> trip events of the same fault Several events are enabled *) Several events of an increasing fault is disabled **)	Set
ClrDly	0 – 65535	s	Duration for active alarm status AlrL1, AlrL2, AlrL3 and OCs	Set
LINE FAULT				
FItL1			Fault (=trip) status for each phase.	
FItL2	0		0=No fault since fault ClrDly	
FItL3	1		1=Fault is on	
OCt	0 1		Combined overcurrent trip status. FItL1=FItL2=FItL3=0 FItL1=1 or FItL2=1 or FItL3=1	

Parameter	Value	Unit	Description	Note
LxTrip	On Off		'On' Event enabling for FltL1 – 3 Events are enabled Events are disabled	Set
LxTripOff	On Off		'Off' Event enabling for FltL1 – 3 Events are enabled Events are disabled	Set
OCTrip	On Off		'On' Event enabling for combined o/c trips Events are enabled Events are disabled	Set
OCTripOff	On Off		'Off' Event enabling for combined o/c starts Events are enabled Events are disabled	Set
IncFltEvnt	On Off		Disabling several events of the same fault Several events are enabled *) Several events of an increasing fault is disabled **)	Set
ClrDly	0 – 65535		Duration for active alarm status FltL1, Flt2, FltL3 and OCT	Set

Set = An editable parameter (password needed).

*) Used with IEC 60870-105-103 communication protocol. The alarm screen will show the latest if it's the biggest registered fault current. Not used with Spabus, because Spabus masters usually don't like to have unpaired On/Off events.

**) Used with SPA-bus protocol, because most SPA-bus masters do need an off-event for each corresponding on-event.

Self-supervision

The functions of the microcontroller and the associated circuitry, as well as the program execution are supervised by means of a separate watchdog circuit. Besides supervising the relay, the watchdog circuit attempts to restart the micro controller in an inoperable situation. If the micro controller does not restart, the watchdog issues a self-supervision signal indicating a permanent internal condition.

When the watchdog circuit detects a permanent internal condition, it always blocks any control of other output relays (except for the self-supervision output relay). In addition, the internal supply voltages are supervised. Should the auxiliary supply of the IED disappear, an indication is automatically given because the IED status inoperative (SF) output relay functions on a working current principle. This means that the SF relay is energized when the auxiliary supply is on and the arc flash protection is healthy.

Diagnostics

The device runs self-diagnostic tests for hardware and software in boot sequence and also performs runtime checking.

Permanent inoperative state or Detected Fatal Error

If the device has a persistent detected fatal error, the device releases SF relay contact and status LED is set on. Local panel will also display a detected error message. The detected fatal error state is entered when the device is not able to handle main functions.

Detected Runtime Errors

When self-diagnostic function detects a runtime error, Selfdiag matrix signal is set and an event (E56) is generated. In case the detected runtime error was only temporary, an off event is generated (E57). The self diagnostic detected error can be reset via local HMI.

Diagnostic registers

There are four 16-bit diagnostic registers which are readable through remote protocols. The following table shows the meaning of each diagnostic register and their bits.

Register	Bit	Code	Description
SelfDiag1	0 (LSB)	T1	Output relay detected error
	1	T2	
	2	T3	
	3	T4	
	4	A1	
	5	A2	
	6	A3	
	7	A4	
	8	A5	
SelfDiag3	0 (LSB)	DAC	Potential mA-output detected error
	1	STACK	OS: stack detected error
	2	MemChk	OS: memory detected error
	3	BGTask	OS: background task timeout
	4	DI	Digital input detected error (Remove DI1, DI2)
	5		
	6	Arc	Arc card detected error
	7	SecPulse	Hardware detected error
	8	RangeChk	DB: Setting outside range
	9	CPULoad	OS: overload
	10	+24V	Internal voltage detected error
	11	-15V	
	12	ITemp	Internal temperature too high
	13	ADChk1	A/D converter detected error
	14	ADChk2	A/D converter detected error
	15 (MSB)	E2prom	E2prom detected error
SelfDiag4	0 (LSB)	+12V	Internal voltage detected error
	1	ComBuff	BUS: buffer detected error

The code is displayed in self diagnostic events and on the diagnostic menu on local panel and VAMPSET.

Short circuit fault locator

The device includes a stand-alone fault locator algorithm. The algorithm can locate a short circuit in radial operated networks. The fault location is given in reactance (ohms) and kilometers (or miles). Fault value can then be exported, for example, with event to a DMS (Distribution Management System). The system can then localize the fault. If a DMS is not available, the distance to the fault is displayed as kilometers, as well as a reactance value. However, the distance value is valid only if the line reactance is set correctly. Furthermore, the line should be homogenous, that is, the wire type of the line should be the same for the whole length. If there are several wire types on the same line, an average line reactance value can be used to get an approximate distance value to the fault.

The fault locator is normally used in the incoming bay of the substation. Therefore, the fault location is obtained for the whole network with just one device. This is very cost-effective upgrade of an existing system.

The algorithm functions in the following order:

1. The needed measurements (phase currents and voltages) are continuously available.
2. The fault distance calculation can be triggered in two ways: by opening a feeder circuit-breaker due to a fault and sudden increase in phase currents (Enable Xfault calc1 + Triggering digital input). Other option is to use only the sudden increase in the phase currents (Enable Xfault calc1).
3. Phase currents and voltages are registered in three stages: before the fault, during the fault and after the detected faulty feeder circuit-breaker was opened.
4. The fault distance quantities are calculated.
5. Two phases with the biggest fault current are selected.
6. The load currents are compensated.
7. The detected faulty line length reactance is calculated.

Table 6.20: Setting parameters of short circuit fault locator


Parameter	Value	Unit	Default	Description
Triggering digital input	-; DI1 – DI18 VI1 – VI4 VO1 – VO6 NI1 – NI64 POC1 – POC16	-	-	Trigger mode (=- triggering based on sudden increase of phase current, otherwise sudden increase of phase current + DIx/VIx)
Line reactance	0.010 – 10.000	Ohms/km	0.389	Line reactance of the line. This is used only to convert the fault reactance to kilometers.
dltrig	10 – 800	% Imode	50	Trigger current (sudden increase of phase current)
Blocked before next trig	10 – 600	s	70	Blocks function for the next trigger time. This is used for blocking calculation in autoreclose.
Xmax limit	0.5 – 500.0	Ohm	11.0	Limit for maximum reactance. If reactance value is above set limit calculation result will not be shown.
Event	Disabled; Enabled	-	Enabled	Event mask

Table 6.21: Measured and recorded values of short circuit fault locator

	Parameter	Value	Unit	Description
Measured values/ recorded values	Distance		km	Distance to the fault
	Xfault		ohm	Fault reactance
	Date		-	Fault date
	Time		-	Fault time
	Time		ms	Fault time
	Cntr		-	Number of faults
	Pre		A	Pre-fault current (=load current)
	Fault		A	Current during the fault
	Post		A	Post-fault current
	Udrop		% Un	Voltage dip during the fault
	Durati		s	Fault duration
	Type		-	Fault type (1-2,2-3,1-3,1-2-3)

Below is presented an application example where the fault location algorithm is used at the incoming side. Observe the following things while commissioning the relay:


INCOMER SC FAULT LOCATOR	
Enable Xfault calc 1	☒
Fault reactance	22.03 ohm
Distance to fault	44.8 km
Voltage drop	74 %
Fault duration	1.10 s
Fault type	12
Number of faults	1
Fault date	2013-11-21
Fault time hh:mm:ss.mss	17:26:14.449
Current before fault	67 A
Fault current	1337 A
Current after fault	0 A
Algorithm condition	OK
Reference current	67 A
Trig limit current	300 A
Current change to trig	20 %
Triggering digital input	-
Line reactance/unit	0.492 ohm
Blocked before next trig	10 s
Xmax limit	50.0 ohm
Unit(km)	km
Event enabling	☒

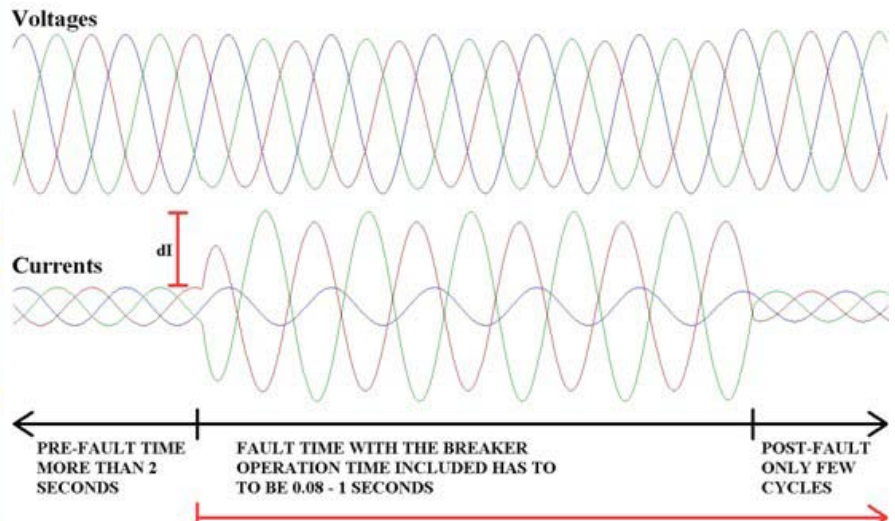

IN CASE THE DIGITAL INPUT IS USED TOGETHER WITH THE CURRENT CHANGE, THE INPUT SIGNAL HAS TO BE ACTIVATED AT LEAST 0.5 SECONDS AFTER THE FAULT OCCURS

Below is an application example where the fault location algorithm is used at the feeder side. Observe the following things while commissioning the relay:

INCOMER SC FAULT LOCATOR	
Enable Xfault calc 1	☒
Fault reactance	22.03 ohm
Distance to fault	44.8 km
Voltage drop	74 %
Fault duration	1.10 s
Fault type	12
Number of faults	1
Fault date	2013-11-21
Fault time hh:mm:ss.mss	17:26:14.449
Current before fault	67 A
Fault current	1337 A
Current after fault	0 A
Algorithm condition	OK
Reference current	67 A
Trig limit current	300 A
Current change to trig	20 %
Triggering digital input	-
Line reactance/unit	0.492 ohm
Blocked before next trig	10 s
Xmax limit	50.0 ohm
Unit(km)	km
Event enabling	☒

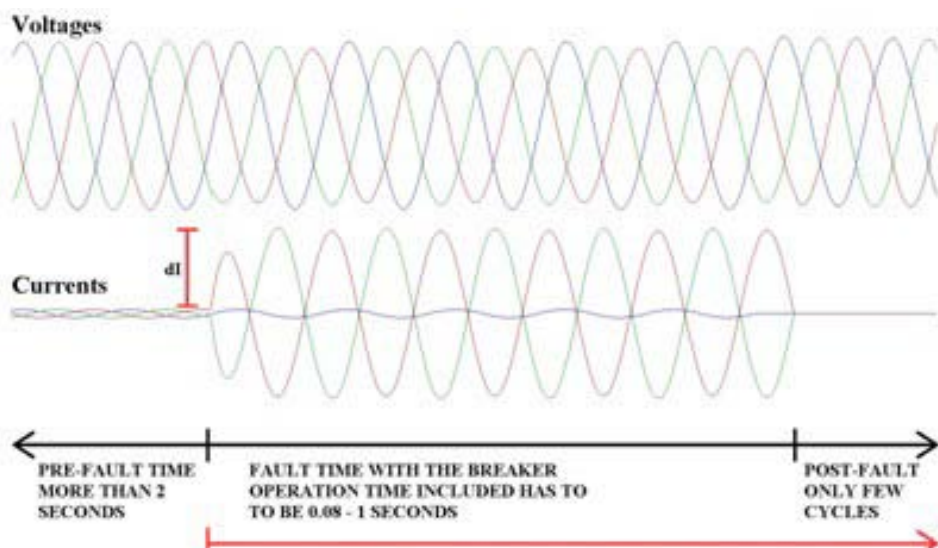

IN CASE THE DIGITAL INPUT IS USED TOGETHER WITH THE CURRENT CHANGE, THE INPUT SIGNAL HAS TO BE ACTIVATED AT LEAST 0.5 SECONDS AFTER THE FAULT OCCURS

Feeder fault locator

The device includes a stand-alone fault locator algorithm. The algorithm can locate a short circuit and ground fault in radial operated networks. The fault location is given in reactance (ohms) and kilometers (or miles). Fault value can then be exported, for example, with event to a DMS (Distribution Management System). The system can then localize the fault. If a DMS is not available, the distance to the fault is displayed as kilometers (or miles), as well as a reactance value.

However, the distance value is valid only if the line reactance is set correctly.

Furthermore, the line should be homogenous, that is, the wire type of the line should be the same for the whole length. If there are several wire types on the same line, an average line reactance value can be used to get an approximate distance value to the fault (examples of line reactance values: Overhead wire: 0.408 ohms/km and 0.378 ohms/km).

This fault locator cannot be used in incoming because this locator has not ability to compensate healthy feeders away.

When feeder fault locator is calculating short circuit impedance following formula is used:

$$Z_{AB} = \frac{\overline{V_A} - \overline{V_B}}{\overline{I_A} - I_B}$$

V_A = Vector between the voltage and the ground

V_B = Vector between the voltage and the ground

I_A = Vector between the current and the ground

I_B = Vector between the current and the ground

When feeder fault locator is calculating ground fault impedance following formula is used:

$$Z_A = \frac{\overline{V_A}}{\overline{I_A} + k \times 3I_0}$$

V_A = Vector between the voltage and the ground

I_A = Vector between the current and the ground

k = Ground factor k , needs to be set by user

$3I_0$ = Residual current, calculated from phase currents (I_{0Calc})

Ground factor k is calculated with following formula:

K_0 = $(Z_{0L} - Z_{1L}) / (3 \times Z_{1L})$

Z_{0L} = Zero sequence line impedance

Z_{1L} = Positive sequence line impedance

Triggering of the fault reactance calculation happens when "Pick-up setting" -value is exceeded OR if user wants, both "Pick-up setting" and "Triggering digital input" terms are fulfilled. When used, "Triggering digital input" can be either digital or virtual input.

Table 6.22: Setting parameters of feeder fault locator

Parameter	Value	Unit	Default	Description
Pick-up setting	0.10 – 5.00	xIn	1.2	Current limit for triggering.
Triggering digital input	-; DI1 – DI18 VI1 – VI4 VO1 – VO6 NI1 – NI64 POC1 – POC16	-	-	Trigger mode (=- triggering based on sudden increase of phase current, otherwise sudden increase of phase current + DIx/VIx/VOx/NIx/POCx)
Line reactance	0.010 – 10.000	Ohms/km	0.491	Line reactance of the line. This is used only to convert the fault reactance to feet.
Ground factor	0.000 – 10.000	-	0.678	Calculated ground factor from line specifications.
Ground factor angle	-60 – +60	°	10	Angle of calculated ground factor from line specifications.
Event enabling	Off; On	-	On	Event mask

Table 6.23: Measured and recorded values of feeder fault locator

	Parameter	Value	Unit	Description
Measured values/ recorded values	Distance		km	Distance to the fault
	Xfault		ohm	Fault
	reactance Date		-	Fault date
	Time		-	Fault time
	Cntr		-	Number of faults
	Fault		A	Current during the fault
	Udrop		% Un	Voltage dip during the fault
	Type		-	Fault type (1-2,2-3,1-3,1-2-3, 1-N,2-N,3-N,1-N-2-N, 2-N-3-N,3-N-1-N,1-N-2-N-3-N)

FEEDER FAULT LOCATOR

Enable Xfault calc 2 ☒

Fault reactance 22.10 ohm
Distance to fault 44.9 km
Fault type 1-N 3-N

Number of faults 5
Algorithm condition OK

Pick-up setting 800 A
Pick-up setting 0.80 xIn
Triggering digital input -
Line reactance/unit 0.492 ohm
Earth factor 0.961
Earth factor angle -34 °
Unit(km) km
Event enabling ☒

FAULT LOG

	Date	hh:mm:ss.ms	Fault reactance	Distance to fault	Fault type	Voltage drop	Fault current
[1]	2013-11-21	17:23:38.070	22.10 ohm	44.9 km	1-N 3-N	57.9 %	1.71 xIn
[2]	2013-11-21	17:22:59.653	22.08 ohm	44.9 km	2-N	49.6 %	1.55 xIn
[3]	2013-11-21	17:22:20.074	43.86 ohm	89.1 km	12	37.8 %	1.07 xIn
[4]	2013-11-21	17:21:34.088	22.70 ohm	46.1 km	12	44.8 %	1.31 xIn
[5]	2013-11-21	17:21:12.669	23.39 ohm	47.5 km	12	44.7 %	1.14 xIn
[6]	-	-	0.00 ohm	0.0 km	-	0.0 %	0.00 xIn
[7]	-	-	0.00 ohm	0.0 km	-	0.0 %	0.00 xIn
[8]	-	-	0.00 ohm	0.0 km	-	0.0 %	0.00 xIn

ADVANCED SETTINGS

Uavg limit 2.0 %Un
Io limit 0.50 xIn
Io limit 500 A
DI timeout 1.00 s
Release timeout 0.50 s

Ground-fault location

The device includes a sophisticated stand-alone ground-fault location algorithm. The algorithm can locate an ground-fault accurately in radically operated compensated grounded networks.

The function can locate a fault only if the fault resistance is low, say less than 50 ohms. The fault location is given in reactance value. This value can then be exported, for example, with event to a DMS (Distribution Management System). The system can then localize the fault and display it on a map.

The fault location must be used in the incoming bay of the substation. Therefore, the fault location is obtained for the whole network with just one device. This is very cost-effective upgrade of an existing system.

Please note also that the ground-fault location function requires a change during an ground-fault. This change is done by switching the secondary resistor of the compensation coil on or off. The fault should be allowed to be on at least 200 ms, of which 100 ms without the resistor. The resistor change can be done by using the logic functionality of the device.

The reactance value is converted to distance in the DMS. The following formula is used:

$$S = \frac{3 * X}{X_0 + X_1 + X_2}$$

S = distance in km

X reactance calculated by the device

X₀ = zero sequence reactance per kilometre of the line

X₁ = positive sequence reactance per kilometre of the line

X₂ = negative sequence reactance per kilometre of the line

The algorithm functions in the following order:

1. The needed measurements (phase currents and voltages) are continuously available.
2. The fault distance calculation can be triggered in two ways: by switching ON or OFF the secondary resistor (that is, by using a digital input) or the calculation can be triggered if there is a change in ground fault or negative sequence current
3. The fault phase is identified by that the voltage of the faulted phase is decreased at least by half.
4. The fault distance is calculated by dividing the change of the voltage by the change of the negative sequence current.
5. Only the imaginary part is used, so then the reactance is solved.

Table 6.24: Setting parameters of ground-fault location EFDi

Parameter	Value	Unit	Default	Description
EFMode	Normal; Reverse	-	Normal	Normal: The resistor is switched ON during a fault. Reverse: The resistor is switched OFF during a fault
TrigIn	I ₀ ; I ₂ ; DI1	-	I ₀	Triggering input: I ₀ : ground fault current will trigger the function. I ₂ : negative phase sequence current will trigger the function DI1: the function is triggered by activating the digital input 1
UoTrig	1 – 80	% U _{on}	20	Trigger level for U ₀
Itrig	10 – 800	% I _n	80	Trigger level for current
Event	On; Off	-	On	Event mask

Table 6.25: Measured and recorded values of ground-fault location EFDi

	Parameter	Value	Unit	Description
Measured values/recorded values	Fault ph			Fault phase information
	X		ohm	Fault reactance
	Date		-	Fault date
	Time		-	Fault time
	Time		ms	Fault time
	Count		-	Number of faults

Section 7: Measurement functions

All the direct measurements are based on fundamental frequency values. The exceptions are frequency and instantaneous current for arc detection.

The figure shows a current waveform and the corresponding fundamental frequency component f1, second harmonic f2 and rms value in a special case, when the current deviates significantly from a pure sine wave.

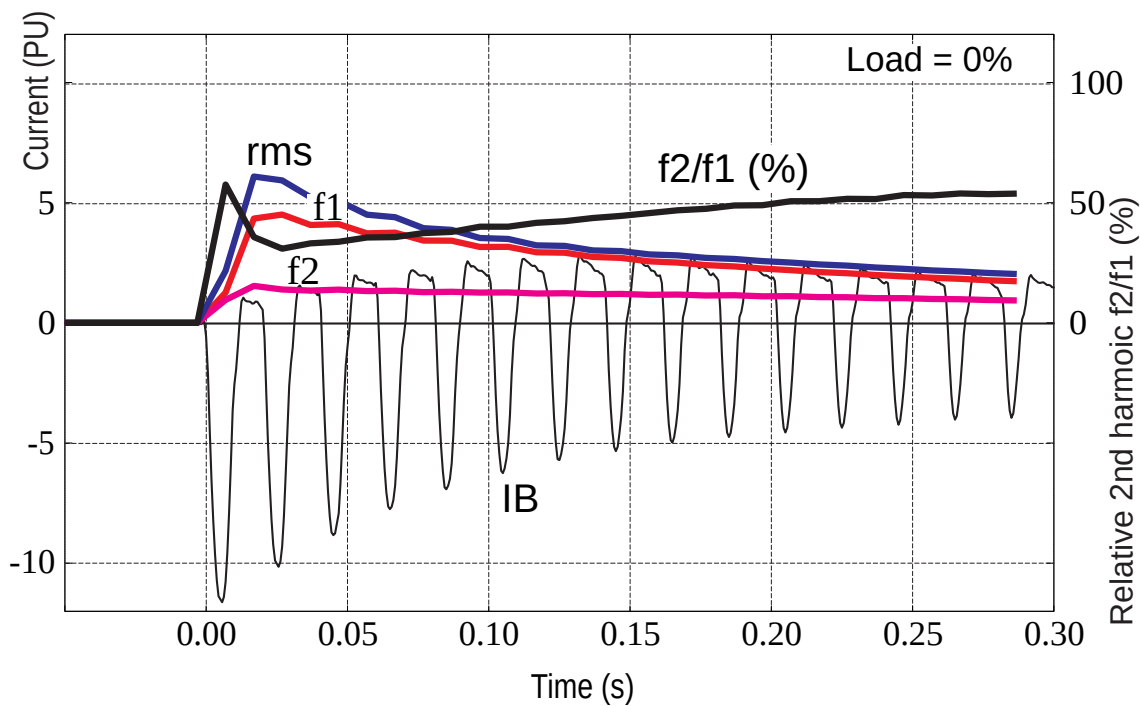


Figure 7.1: Example of various current values of a transformer inrush current

Measurement accuracy

Table 7.1: Phase current inputs A, B, C

Measuring range	0.025 – 250 A
Inaccuracy:	
$I \leq 7.5 \text{ A}$	$\pm 0.5 \text{ \% of value or } \pm 15 \text{ mA}$
$I > 7.5 \text{ A}$	$\pm 3 \text{ \% of value}$
The specified frequency range is 45 Hz – 65 Hz.	
Squelch limit:	
Phase current inputs: 0.5% of I_{NOM} (tolerance $\pm 0.05\%$)	
Residual current: 0.2% of I_{NOM} (tolerance $\pm 0.05\%$)	

Table 7.2: Voltage inputs V_A , V_B , V_C

Measuring range	0.5 – 175 V
Inaccuracy	$\pm 0.5\%$ or ± 0.3 V
The usage of voltage inputs depends on the configuration parameter “voltage measurement mode”. For example, U_C is the zero sequence voltage input U_0 if the mode “2LL + U_0 ” is selected.	
The specified frequency range is 45 Hz – 65 Hz.	

Table 7.3: Residual current inputs I_{01} , I_{02}

Measuring range	0 – $10 \times I_N$ (VAMP 255) 0 – $5 \times I_N$ (VAMP 230)
Inaccuracy:	
$I \leq 1.5 \times I_N$	$\pm 0.3\%$ of value or $\pm 0.2\%$ of I_N
$I > 1.5 \times I_N$	$\pm 3\%$ of value
The rated input I_N is 5A, 1 A or 0.2 A. It is specified in the order code of the relay.	
The specified frequency range is 45 Hz – 65 Hz.	

Table 7.4: Frequency

Measuring range	16 Hz – 75 Hz
Inaccuracy	± 10 mHz
In VAMP 255/230, the frequency is measured from voltage signals.	

Table 7.5: Power measurements P , Q , S

Inaccuracy $ PF > 0.5$	$\pm 1\%$ of value or ± 3 VA _{SEC}
The specified frequency range is 45 Hz – 65 Hz.	

Table 7.6: Power factor

Inaccuracy $ PF > 0.5$	$\pm 2^\circ$ or ± 0.02
The specified frequency range is 45 Hz – 65 Hz.	

Table 7.7: Energy counters $E+$, E_q+ , $E-$, E_q-

Inaccuracy $ PF > 0.5$	$\pm 1\%$ of value or ± 3 Wh _{SECONDARY} /1 h
The specified frequency range is 45 Hz – 65 Hz.	

Table 7.8: THD and harmonics

Inaccuracy I , $U > 0.1$ PU	$\pm 2\%$ units
Update rate	Once a second
The specified frequency range is 45 Hz – 65 Hz.	

Table 7.9: Transducer (mA) outputs

Inaccuracy	20 μ A + the error of the linked value
Response time	dead time 250 ms + time constant $\tau = 50$ ms
The transducer outputs are optional. (See Section 14: Order information)	

RMS values

RMS currents

The device calculates the RMS value of each phase current. The minimum and the maximum of RMS values are recorded and stored (see section Minimum and maximum values).

$$I_{RMS} = \sqrt{I_{f1}^2 + I_{f2}^2 + \dots + I_{f15}^2}$$

RMS voltages

The device calculates the RMS value of each voltage input. The minimum and the maximum of RMS values are recorded and stored (see section Minimum and maximum values). For NEMA, U=V.

$$U_{RMS} = \sqrt{U_{f1}^2 + U_{f2}^2 + \dots + U_{f15}^2}$$

Harmonics and Total Harmonic Distortion (THD)

The device calculates the THDs as percentage of the base frequency for currents and voltages.

The device calculates the harmonics from the 2nd to the 15th of phase currents and voltages. (The 17th harmonic component will also be shown partly in the value of the 15th harmonic component. This is due to the nature of digital sampling.)

The harmonic distortion is calculated using equation

$$THD = \frac{\sqrt{\sum_{h=2}^{15} h^2}}{h_1}$$

h_1 = Fundamental value

h_{2-15} = Harmonics

Example

$h_1 = 100 \text{ A}$, $h_3 = 10 \text{ A}$, $h_7 = 3 \text{ A}$, $h_{11} = 8 \text{ A}$

$$THD = \frac{\sqrt{10^2 + 3^2 + 8^2}}{100} = 13.2\%$$

For reference the RMS value is

$$RMS = \sqrt{100^2 + 10^2 + 3^2 + 8^2} = 100.9 \text{ A}$$

Another way to calculate THD is to use the RMS value as reference instead of the fundamental frequency value. In the example above the result would then be 13.0 %.

Demand values

The relay calculates average i.e. demand values of phase currents I_A , I_B , I_C and power values S , P and Q .

The demand time is configurable from 10 minutes to 30 minutes with parameter "Demand time".

Table 7.10: Demand value parameters

Parameter	Value	Unit	Description	Set
Time	10 – 30	min	Demand time (averaging time)	Set
Fundamental frequency values				
IL1da		A	Demand of phase current IL1 [*]	
IL2da		A	Demand of phase current IL2 [*]	
IL3da		A	Demand of phase current IL3 [*]	
Pda		kW	Demand of active power P	
PFda			Demand of power factor PF	
Qda		Kvar	Demand of reactive power Q	
Sda		kVA	Demand of apparent power S	
RMS values				
IL1da		A	Demand of phase current IL1 [*]	
IL2da		A	Demand of phase current IL2 [*]	
IL3da		A	Demand of phase current IL3 [*]	

Set = An editable parameter (password needed).

^{*} L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Minimum and maximum values

Minimum and maximum values are registered with time stamps since the latest manual clearing or since the device has been restarted. The available registered min & max values are listed in the following table.

Min & Max measurement	Description
IL1, IL2, IL3 [*]	Phase current (fundamental frequency value)
IL1RMS, IL2RMS, IL3RMS	Phase current, rms value
I_{01} , I_{02}	Residual current
U12, U23, U31	Line-to-line voltage
U ₀	Zero sequence voltage
f	Frequency
P, Q, S	Active, reactive, apparent power
IL1da, IL2da, IL3da	Demand values of phase currents
IL1da, IL2da, IL3da (rms value)	Demand values of phase currents, rms values
PFda	Power factor demand value

The clearing parameter "ClrMax" is common for all these values.

^{*} L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Table 7.11: Parameters

Parameter	Value	Description	Set
ClrMax	- Clear	Reset all minimum and maximum values	Set

Maximum values of the last 31 days and twelve months

Some maximum and minimum values of the last 31 days and the last twelve months are stored in the non-volatile memory of the relay. Corresponding time stamps are stored for the last 31 days. The registered values are listed in the following table.

Measurement	Max	Min	Description
IL1, IL2, IL3 [*]	X		Phase current (fundamental frequency value)
Io1, Io2	X		Residual current
S	X		Apparent power
P	X	X	Active power
Q	X	X	Reactive power

^{*} L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

The value can be a one cycle value or an average based on the "Timebase" parameter.

Table 7.12: Parameters of the day and month registers

Parameter	Value	Description	Set
Timebase		Parameter to select the type of the registered values	Set
	20 ms	Collect min & max of one cycle values *	
	200 ms	Collect min & max of 200 ms average values	
	1 s	Collect min & max of 1 s average values	
	1 min	Collect min & max of 1 minute average values	
	demand	Collect min & max of demand values (see section Demand values)	
ResetDays		Reset the 31 day registers	Set
ResetMon		Reset the 12 month registers	Set

* This is the fundamental frequency rms value of one cycle updated every 20 ms.

Voltage measurement modes

Depending on the application and available voltage transformers, the relay can be connected either to line-to-line voltages or phase-to-ground voltages. The configuration parameter "Voltage measurement mode" must be set according the connection used.

- "2LL+U₀"
The device is connected to line-to-line voltages U_{12} and U_{23} and to zero sequence voltage U_0 . For NEMA, $U=V$.
The phase-to-ground voltages are calculated. See Figure 11.17 for VAMP 255 and Figure 11.21 for VAMP 230. The network must use only three wires. Any neutral wire must not exist.
- "3LN"
The device is connected to phase-to-ground voltages V_A , V_B and V_C .
The zero sequence voltage is calculated. See Figure 11.18 for VAMP 255 and Figure 11.22 for VAMP 230. There may exist a neutral wire.
- "1LL+U₀/LLy"
This mode is used with the synchrocheck function. See Table 5.39
- "2LL/LLy"
This mode is used with the synchrocheck function. See Table 5.39
- "LL/LLy/LLz"
This mode is used with the synchrocheck function. See Table 5.39

The overvoltage protection is always based on the line-to-line voltage regardless of the measurement mode.

Power calculations

The power calculation in VAMP devices are dependent on the voltage measurement mode, see section Voltage measurement modes. The equations used for power calculations are described in this section.

The device is connected to line-to-line voltages

When the device is connected to line-to-line voltages, the voltage measurement mode is set to equal to "2LL+U₀". The following Aron equation is used for power calculation.

Note: L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C. U=V.

$$\bar{S} = \bar{U}_{12} \cdot I_{L1}^* - \bar{U}_{23} \cdot I_{L3}^*$$

$\bar{S}$ = Three phase power phasor

$\bar{U}_{12}$ = Measured voltage phasor corresponding the fundamental frequency voltage between phases L1 and L2.

I_{L1}^* = Complex conjugate of the measured phase L1 fundamental frequency current phasor.

$\bar{U}_{23}$ = Measured voltage phasor corresponding the fundamental frequency voltage between phases L2 and L3.

I_{L3}^* = Complex conjugate of the measured phase L3 fundamental frequency current phasor.

Apparent power, active power and reactive power are calculated as follows

$$S = |\bar{S}|$$

$$P = \text{real}(\bar{S})$$

$$Q = \text{imag}(\bar{S})$$

$$\cos\phi = \frac{P}{S}$$

The device is connected to line-to-neutral voltage

When the device is connected to line-to-neutral voltages, the voltage measurement mode is set equal to "3LN". The following equation is used for power calculation.

Note: L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

$$\bar{S} = \bar{U}_{L1} \cdot I_{L1}^* + \bar{U}_{L2} \cdot I_{L2}^* + \bar{U}_{L3} \cdot I_{L3}^*$$

$\bar{S}$ = Three phase power phasor

$\bar{U}_{L1}$ = Measured voltage phasor corresponding the fundamental frequency voltage of phase L1.

I_{L1}^* = Complex conjugate of the measured phase L1 fundamental frequency current phasor.

$\bar{U}_{L2}$ = Measured voltage phasor corresponding the fundamental frequency voltage of phase L2.

I_{L2}^* = Complex conjugate of the measured phase L2 fundamental frequency current phasor.

$\bar{U}_{L3}$ = Measured voltage phasor corresponding the fundamental frequency voltage of phase L3.

I_{L3}^* = Complex conjugate of the measured phase L3 fundamental frequency current phasor.

Apparent power, active power and reactive power are calculated similarly as with line-to-line voltages

$$S = |\bar{S}|$$

$$P = \text{real}(\bar{S})$$

$$Q = \text{imag}(\bar{S})$$

$$\cos\phi = \frac{P}{S}$$

Direction of power and current

Figure 7.2 shows the concept of three phase current direction and sign of $\cos\phi$ and power factor PF. Figure 7.3 shows the same concepts, but on a PQ-power plane.

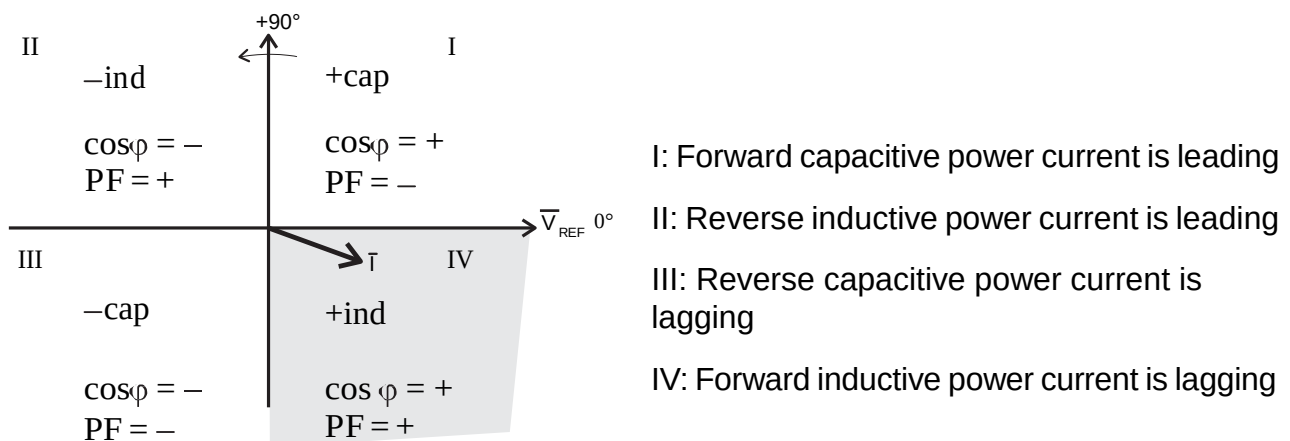


Figure 7.2: Quadrants of voltage/current phasor plane

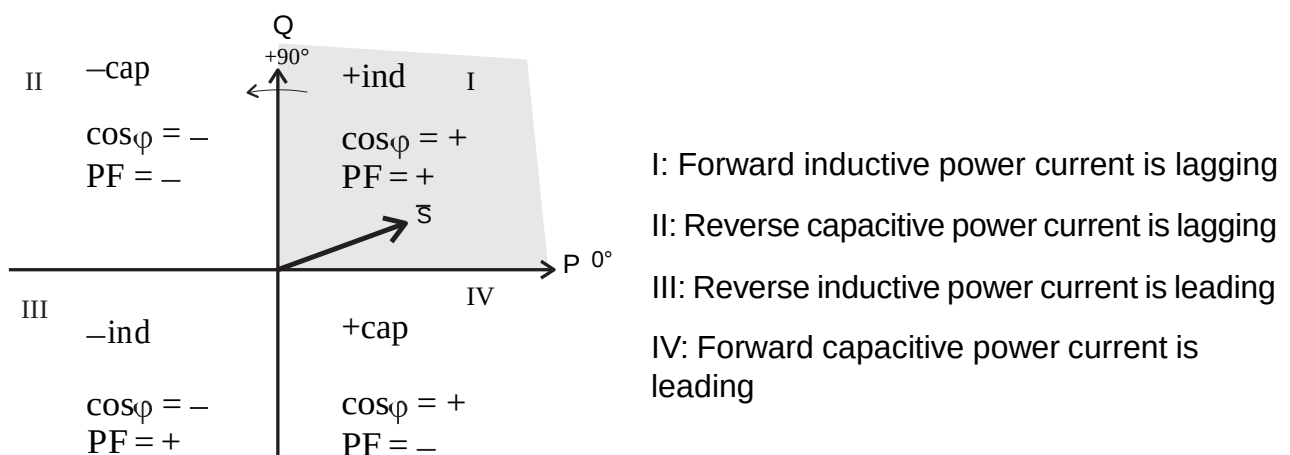


Figure 7.3: Quadrants of power plane

Table 7.13: Power quadrants

Power quadrant	Current related to voltage	Power direction	$\cos\phi$	Power factor PF
+ inductive	Lagging	Forward	+	+
+ capacitive	Leading	Forward	+	-
- inductive	Leading	Reverse	-	+
- capacitive	Lagging	Reverse	-	-

Symmetric components

In a three phase system, the voltage or current phasors may be divided in symmetric components according to C. L. Fortescue (1918). The symmetric components are:

- Positive sequence 1
- Negative sequence 2
- Zero sequence 0

Symmetric components are calculated according the following equations:

$$\begin{bmatrix} \underline{S}_0 \\ \underline{S}_1 \\ \underline{S}_2 \end{bmatrix} = \frac{1}{3} \begin{bmatrix} 1 & 1 & 1 \\ 1 & \underline{a} & \underline{a}^2 \\ 1 & \underline{a}^2 & \underline{a} \end{bmatrix} \begin{bmatrix} \underline{U} \\ \underline{V} \\ \underline{W} \end{bmatrix}$$

$\underline{S}_0$ = zero sequence component

$\underline{S}_1$ = positive sequence component

$\underline{S}_2$ = negative sequence component

$$\underline{a} = 1\angle 120^\circ = -\frac{1}{2} + j\frac{\sqrt{3}}{2}, \text{ a phasor rotating constant}$$

Note: L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C. $\underline{U}=\underline{V}$.

$\underline{U}$ = phasor of phase L1 (phase current or line-to-neutral voltage)

$\underline{V}$ = phasor of phase L2

$\underline{W}$ = phasor of phase L3

In case the voltage measurement mode is "2LL+U₀" i.e. two line-to-line voltage are measured, the following equation is used instead.

$$\begin{bmatrix} \underline{U}_1 \\ \underline{U}_2 \end{bmatrix} = \frac{1}{3} \begin{bmatrix} 1 & -\underline{a}^2 \\ 1 & -\underline{a} \end{bmatrix} \begin{bmatrix} \underline{U}_{12} \\ \underline{U}_{23} \end{bmatrix}$$

U_{12} = Voltage between phases L1 and L2

U_{23} = Voltage between phases L2 and L3

When using line-to-line voltages, any zero sequence voltage can not be calculated.

NOTES: The zero sequence or residual measurement signals connected to the device are $-U_0$ and $3I_0$. However, usually the name " I_0 " is used instead of the correct name " $3I_0$ ".

L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C. Also, $U=V$.

Examples:

1. Single phase injection

$$U_N = 100 \text{ V}$$

Voltage measurement mode is "2LL+ U_0 ".

Injection:

$$U_A = U_{12} = 100 \text{ V}$$

$$U_B = U_{23} = 0$$

$$\begin{aligned} \begin{bmatrix} U_1 \\ U_2 \end{bmatrix} &= -\frac{1}{3} \begin{bmatrix} 1 & -a^2 \\ 1 & -a \end{bmatrix} \begin{bmatrix} 100 \angle 0^\circ \\ 0 \end{bmatrix} = -\frac{1}{3} \begin{bmatrix} 100 \angle 0^\circ \\ 100 \angle 0^\circ \end{bmatrix} = \begin{bmatrix} -33 \\ 33 \end{bmatrix} \\ \begin{bmatrix} U_1 \\ U_2 \end{bmatrix} &= \begin{bmatrix} -33 \\ 33 \end{bmatrix} \end{aligned}$$

$$U_1 = 33 \%$$

$$U_2 = 33 \%$$

$$U_2/U_1 = 100 \%$$

When using a single phase test device, the relative unbalance U_2/U_1 will always be 100 %.

2. Two phase injection with adjustable phase angle

$$U_N = 100 \text{ V}$$

Voltage measurement mode is "2LL+ U_0 ".

Injection:

$$U_A = U_{12} = 100 \text{ V } \angle 0^\circ$$

$$U_B = U_{23} = 100/\sqrt{3} \text{ V } \angle -150^\circ = 57.7 \text{ V } \angle -150^\circ$$

$$\begin{aligned} \begin{bmatrix} U_1 \\ U_2 \end{bmatrix} &= \frac{1}{3} \begin{bmatrix} 1 & -a^2 \\ 1 & -a \end{bmatrix} \begin{bmatrix} 100 \angle 0^\circ \\ 100/\sqrt{3} \angle -150^\circ \end{bmatrix} = \frac{100}{3} \begin{bmatrix} 1 \angle 0^\circ - 1/\sqrt{3} \angle +90^\circ \\ 1 \angle 0^\circ - 1/\sqrt{3} \angle -30^\circ \end{bmatrix} \\ &= \frac{100}{3} \begin{bmatrix} 2/\sqrt{3} \angle -30^\circ \\ 38.5 \angle -30^\circ \end{bmatrix} = \begin{bmatrix} 38.5 \angle -30^\circ \\ 38.5 \angle -30^\circ \end{bmatrix} \end{aligned}$$

$$3 \angle [1/\sqrt{3}\angle + 30^\circ] \quad [19.2\angle + 30^\circ]$$

$$U_1 = 38.5 \%$$

$$U_2 = 19.2 \%$$

$$U_2/U_1 = 50 \%$$

Figure 7.4 shows a geometric solution. The input values have been scaled with $\sqrt{3}/100$ to make the calculation easier.

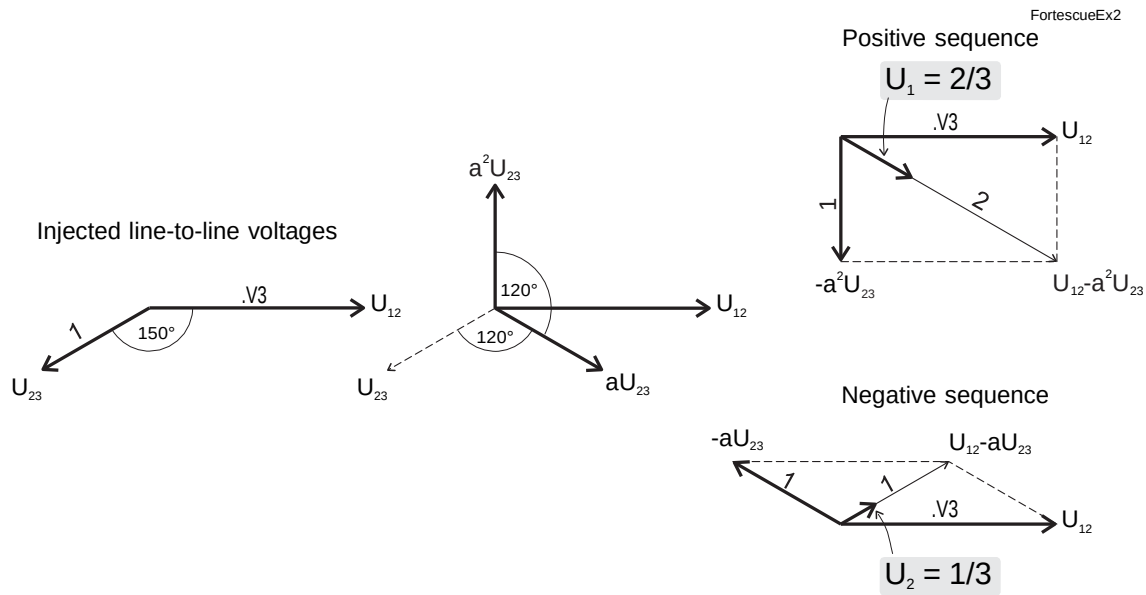


Figure 7.4: Example of symmetric component calculation using line-to-line voltages.

Unscaling the geometric results gives

$$U_1 = 100/\sqrt{3} \times 2/3 = 38.5 \%$$

$$U_2 = 100/\sqrt{3} \times 1/3 = 19.2 \%$$

$$U_2/U_1 = 1/3:2/3 = 50 \%$$

3. Two phase injection with adjustable phase angle

$$U_N = 100 \text{ V}$$

Voltage measurement mode is "3LN".

Injection:

$$U_A = U_{L1} = 100/\sqrt{3} \text{ V } \angle 0^\circ = 57.7 \text{ V } \angle 0^\circ$$

$$U_B = U_{L2} = 100/\sqrt{3} \text{ V } \angle -120^\circ = 57.7 \text{ V } \angle -120^\circ$$

$$U_C = U_{L3} = 0 \text{ V}$$

This is actually identical case with example 2 because the resulting line-to-line voltages $U_{12} = U_{L1} - U_{L2} = 100 \text{ V } \angle 30^\circ$ and $U_{23} = U_{L2} - U_{L3} = U_{L2} = 100/\sqrt{3} \text{ V } \angle -120^\circ$ are the same as in example 2. The only difference is a $+30^\circ$ phase angle difference, but without any absolute angle reference this phase angle difference is not seen by the device.

$$\begin{aligned}
 \begin{bmatrix} \underline{U}_0 \\ \underline{U}_1 \\ \underline{U}_2 \end{bmatrix} &= \frac{1}{3} \begin{bmatrix} 1 & 1 & 1 \\ 1 & a & a^2 \\ 1 & a^2 & a \end{bmatrix} \begin{bmatrix} \frac{100}{\sqrt{3}} \angle 0^\circ \\ \frac{100}{\sqrt{3}} \angle -120^\circ \\ 0 \end{bmatrix} = \frac{1}{3\sqrt{3}} \begin{bmatrix} 100 \angle 0^\circ + 100 \angle -120^\circ \\ 100 \angle 0^\circ + 100 \angle 0^\circ \\ 100 \angle 0^\circ + 100 \angle +120^\circ \end{bmatrix} \\
 &= \frac{1}{3\sqrt{3}} \begin{bmatrix} 100 \angle -60^\circ \\ 200 \angle 0^\circ \\ 100 \angle 60^\circ \end{bmatrix} = \begin{bmatrix} 19.2 \angle -60^\circ \\ 38.5 \angle 0^\circ \\ 19.2 \angle +60^\circ \end{bmatrix}
 \end{aligned}$$

$$U_0 = 19.2 \%$$

$$U_1 = 38.5 \%$$

$$U_2 = 19.2 \%$$

$$U_2/U_1 = 50 \%$$

Figure 7.5 shows a graphical solution. The input values have been scaled with $\sqrt{3}/100$ to make the calculation easier.

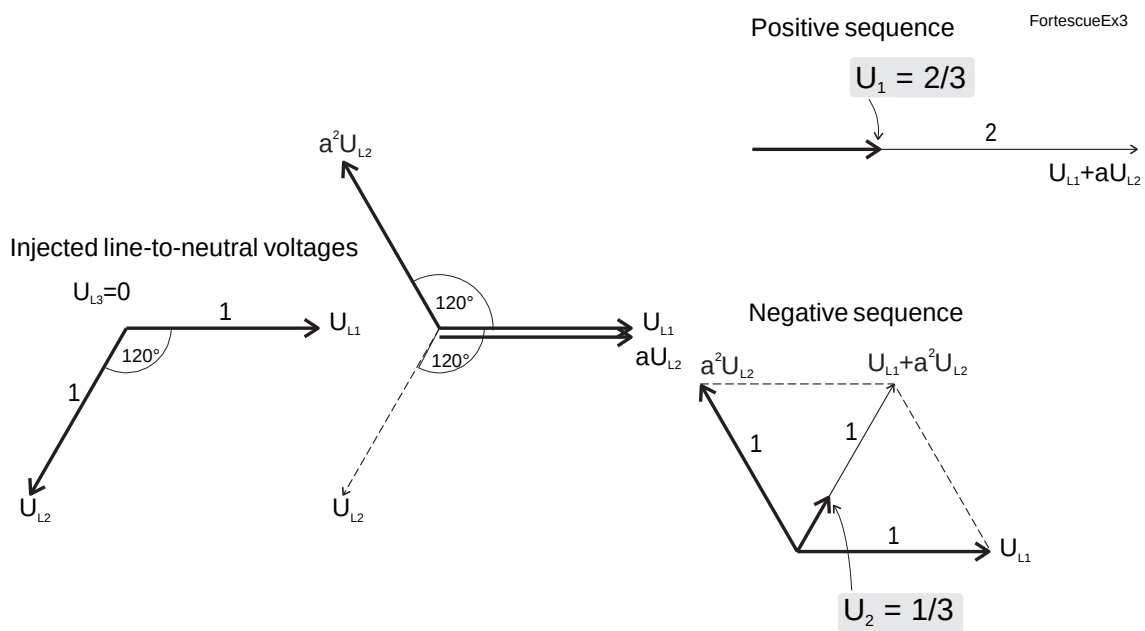


Figure 7.5: Example of symmetric component calculation using line-to-neutral voltages.

Unscaling the geometric results gives

$$U_1 = 100/\sqrt{3} \times 2/3 = 38.5 \%$$

$$U_2 = 100/\sqrt{3} \times 1/3 = 19.2 \%$$

$$U_2/U_1 = 1/3:2/3 = 50 \%$$

Primary, secondary, and per unit scaling

Many measurement values are shown as primary values although the relay is connected to secondary signals. Some measurement values are shown as relative values - per unit or per cent. Almost all pick-up setting values are using relative scaling.

The scaling is done using the given CT, VT in feeder mode and furthermore motor name plate values in motor mode.

The following scaling equations are useful when doing secondary testing.

Current scaling

NOTE: The rated value of the device's current input, for example 5 A or 1A, does not have any effect in the scaling equations, but it defines the measurement range and the maximum allowed continuous current. See the section Measuring circuits for details.

Primary and secondary scaling

	Current scaling
secondary → primary	$I_{PRI} = I_{SEC} \cdot \frac{CT_{PRI}}{CT_{SEC}}$
primary → secondary	$I_{CT_{SEC}} = I_{SEC} \cdot \frac{CT_{PRI}}{CT_{SEC}}$

For residual current to input I_{01} or I_{02} use the corresponding CT_{PRI} and CT_{SEC} values. For ground fault stages using I_{0Calc} signals use the phase current CT values for CT_{PRI} and CT_{SEC} .

Examples:

- Secondary to primary
 $CT = 500 / 5$
 Current to the relay's input is 4 A.
 $\Rightarrow$ Primary current is $I_{PRI} = 4 \times 500 / 5 = 400$ A
- Primary to secondary
 $CT = 500 / 5$
 The relay displays $I_{PRI} = 400$ A
 $\Rightarrow$ Injected current is $I_{SEC} = 400 \times 5 / 500 = 4$ A

Per unit [pu] scaling

For phase currents excluding Arcl> stage:

1 pu = 1 x I_{MODE} = 100 %, where

I_{MODE} is the rated current according to the mode. See the section Abbreviations.

For residual currents and Arcl> stage:

1 pu = 1 x CT_{SEC} for secondary side and 1 pu = 1 x CT_{PRI} for primary side.

	Phase current scaling for motor mode	Phase current scaling for feeder mode, Arcl> stage and residual current (3I ₀)
secondary → per unit	$I^{PU} = \frac{I_{SEC} \cdot CT_{PRI}}{CT_{SEC} \cdot I_{MOT}}$	$I_{PU} = \frac{I_{SEC}}{CT_{SEC}}$
per unit → secondary	$I_{SEC} = I_{PU} \cdot CT_{SEC} \cdot \frac{I_{MOT}}{CT_{PRI}}$	$I_{SEC} = I_{PU} \cdot CT_{SEC}$

Examples:

1. Secondary to per unit for feeder mode and Arcl>

$$CT = 750 / 5$$

Current injected to the relay's inputs is 7 A.

Per unit current is I_{PU} = 7 / 5 = 1.4 pu = 140 %

2. Secondary to per unit and percent for phase currents in motor mode excluding Arcl>

$$CT = 750/5$$

$$I_{MOT} = 525 \text{ A}$$

Current injected to the relay's inputs is 7 A.

=> Per unit current is I_{PU} = 7 x 750 / (5 x 525) = 2.00 pu = 2.00 x I_{MOT} = 200 %

3. Per unit to secondary for feeder mode and Arcl>

$$CT = 750 / 5$$

The device setting is 2 pu = 200 %.

Secondary current is I_{SEC} = 2 x 5 = 10 A

4. Per unit and percent to secondary for phase currents in motor mode excluding Arcl>

$$CT = 750 / 5$$

$$I_{MOT} = 525 \text{ A}$$

The device setting is $2 \times I_{MOT} = 2 \text{ pu} = 200 \%$.

Secondary current is $I_{SEC} = 2 \times 5 \times 525 / 750 = 7 \text{ A}$

5. Secondary to per unit for residual current

Input is I_{01} or I_{02} .

$$CT_0 = 50 / 1$$

Current injected to the relay's input is 30 mA.

Per unit current is $I_{PU} = 0.03 / 1 = 0.03 \text{ pu} = 3 \%$

6. Per unit to secondary for residual current

Input is I_{01} or I_{02} .

$$CT_0 = 50 / 1$$

The relay setting is $0.03 \text{ pu} = 3 \%$.

Secondary current is $I_{SEC} = 0.03 \times 1 = 30 \text{ mA}$

7. Secondary to per unit for residual current

Input is I_{0Calc} .

$$CT = 750 / 5$$

Currents injected to the relay's I_A input is 0.5 A.

$$I_B = I_C = 0.$$

Per unit current is $I_{PU} = 0.5 / 5 = 0.1 \text{ pu} = 10 \%$

8. Per unit to secondary for residual current

Input is I_{0Calc} .

$$CT = 750 / 5$$

The relay setting is $0.1 \text{ pu} = 10 \%$.

If $I_B = I_C = 0$, then secondary current to I_B is $I_{SEC} = 0.1 \times 5 = 0.5 \text{ A}$

Voltage scaling

Primary / secondary scaling of line-to-line voltages

	Line-to-line voltage scaling	
	Voltage measurement mode = "2LL+U ₀ "	Voltage measurement mode = "3LN"
secondary → primary	$U_{PRI} = U_{SEC} \cdot \frac{VT_{PRI}}{VT_{SEC}}$	$U_{PRI} = \sqrt{3} \cdot U_{SEC} \cdot \frac{VT_{PRI}}{VT_{SEC}}$
primary → secondary	$U_{SEC} = U_{PRI} \cdot \frac{VT_{SEC}}{VT_{PRI}}$	$U_{SEC} = \frac{U_{PRI}}{\sqrt{3}} \cdot \frac{VT_{SEC}}{VT_{PRI}}$

Examples:

Note: For NEMA, U=V.

1. Secondary to primary. Voltage measurement mode is "2LL + U₀".

$$VT = 12000 / 110$$

Voltage connected to the device's input U_A or U_B is 100 V.

Primary voltage is U_{PRI} = 100 x 12000 / 110 = 10909 V.

2. Secondary to primary. Voltage measurement mode is "3LN".

$$VT = 12000 / 110$$

Three phase symmetric voltages connected to the device's inputs U_A, U_B and U_C are 57.7 V.

Primary voltage is U_{PRI} = $\sqrt{3}$ x 58 x 12000 / 110 = 10902 V

3. Primary to secondary. Voltage measurement mode is "2LL + U₀".

$$VT = 12000 / 110$$

The relay displays U_{PRI} = 10910 V.

Secondary voltage is U_{SEC} = 10910 x 110 / 12000 = 100 V

4. Primary to secondary. Voltage measurement mode is "3LN".

$$VT = 12000 / 110$$

The relay displays U₁₂ = U₂₃ = U₃₁ = 10910 V.

Symmetric secondary voltages at U_A, U_B and U_C are U_{SEC} = 10910 / $\sqrt{3}$ x 110 / 12000 = 57.7 V.

Per unit [pu] scaling of line-to-line voltages

One per unit = 1 pu = $1 \times U_N = 100\%$, where U_N = rated voltage of the VT.

	Line-to-line voltage scaling	
	Voltage measurement mode = "2LL+U ₀ ", "1LL+U ₀ /LLy", "2LL/LLy", "LL/LLy/LLz"	Voltage measurement mode = "3LN"
secondary → per unit	$U^{PU} = \frac{U_{SEC}}{VT_{SEC}} \cdot \frac{VT_{PRI}}{U_N}$	$U^{PU} = \sqrt{3} \cdot \frac{U_{SEC}}{VT_{SEC}} \cdot \frac{VT_{PRI}}{U_N}$
per unit → secondary	$U_{SEC} = U_{PU} \cdot VT_{SEC} \cdot \frac{U_N}{VT_{PRI}}$	$U_{SEC} = U_{PU} \cdot \frac{VT_{SEC}}{\sqrt{3}} \cdot \frac{U_N}{PRI}$

Examples:

Note: For NEMA, $U=V$.

1. Secondary to per unit. Voltage measurement mode is "2LL+U₀".

$$VT = 12000 / 110,$$

Voltage connected to the device's input U_A or U_B is 110 V.

Per unit voltage is $U_{PU} = 110 / 110 = 1.00 \text{ pu} = 1.00 \times U_N = 100 \%$

2. Secondary to per unit. Voltage measurement mode is "3LN".

$$VT = 12000 / 110,$$

Three symmetric phase-to-neutral voltages connected to the device's inputs U_A , U_B and U_C are 63.5 V

Per unit voltage is $U_{PU} = \sqrt{3} \times 63.5 / 110 \times 12000 / 11000 = 1.00 \text{ pu} = 1.00 \times U_N = 100 \%$

3. Per unit to secondary. Voltage measurement mode is "2LL+U₀".

$$VT = 12000/110, U_N = 11000 \text{ V}$$

The relay displays $1.00 \text{ pu} = 100 \%$.

Secondary voltage is $U_{SEC} = 1.00 \times 110 \times 11000 / 12000 = 100.8 \text{ V}$

4. Per unit to secondary. Voltage measurement mode is "3LN".

$$VT = 12000 / 110, U_N = 11000 \text{ V}$$

The relay displays $1.00 \text{ pu} = 100 \%$.

Three symmetric phase-to-neutral voltages connected to the device's inputs U_A , U_B and U_C are

$$U_{SEC} = 1.00 \times 110 / \sqrt{3} \times 11000 / 12000 = 58.2 \text{ V}$$

Per unit [pu] scaling of zero sequence voltage

	Zero-sequence voltage (U_0) scaling	
	Voltage measurement mode = "2LL+ U_0 ", "1LL+ U_0 /LLy"	Voltage measurement mode = "3LN"
secondary -> per unit	$U_{PU} = \frac{U_{SEC}}{U_{0SEC}}$	$U_{PU} = \frac{1}{VT_{SEC}} \cdot \frac{ \overline{U}_a + \overline{U}_b + \overline{U}_c _{SEC}}{\sqrt{3}}$
per unit -> secondary	$U_{SEC} = U_{PU} \cdot U_{0SEC}$	$ \overline{U}_a + \overline{U}_b + \overline{U}_c _{SEC} = \sqrt{3} \cdot U_{PU} \cdot VT_{SEC}$

Examples:

Note: For NEMA, $U=V$.

1. Secondary to per unit. Voltage measurement mode is "2LL+ U_0 ".

$U_{0SEC} = 110$ V (This is a configuration value corresponding to U_0 at full ground fault.)

Voltage connected to the device's input U_C is 22 V.

Per unit voltage is $U_{PU} = 22 / 110 = 0.20$ pu = 20 %

2. Secondary to per unit. Voltage measurement mode is "3LN".

$VT = 12000 / 110$

Voltage connected to the device's input U_A is 38.1 V, while

$U_A = U_B = 0$.

Per unit voltage is $U_{PU} = (\underline{38.1} + \underline{0} + \underline{0}) / (\sqrt{3} \times 110) = 0.20$ pu = 20 %

3. Per unit to secondary. Voltage measurement mode is "2LL + U_0 ".

$U_{0SEC} = 110$ V (This is a configuration value corresponding to U_0 at full ground fault.)

The device displays $U_0 = 20$ %.

Secondary voltage at input U_C is $U_{SEC} = 0.20 \times 110 = 22$ V

4. Per unit to secondary. Voltage measurement mode is "3LN".

$VT = 12000/110$

The device displays $U_0 = 20$ %.

If $U_B = U_C = 0$, then secondary voltages at U_A is

$U_{SEC} = \sqrt{3} \times 0.2 \times 110 = 38.1$ V

Analog output (option)

A device with the mA option has four configurable analog outputs that take up two of the output relays (A4 and A5). Thus, a device with the mA option has two output relays less than the version without mA option.

The resolution of the analog output is 12 bits resulting current steps less than 6 μA . The output current range is configurable allowing e.g. the following ranges: 0-20 mA and 4-20 mA. More exotic ranges like 0-5 mA or 10-2 mA can be configured freely as long as the boundary values are within 0-20 mA.

NOTE: All positive poles (X2:1, -3, -5 and -7) are internally connected together, see figures in the section Block optional diagrams.

mA scaling examples

Example of mA scaling for IL

Coupling = IL

Scaled minimum = 0 A

Scaled maximum = 300 mA

Analog output minimum value = 0 mA

Analog output maximum value = 20 mA

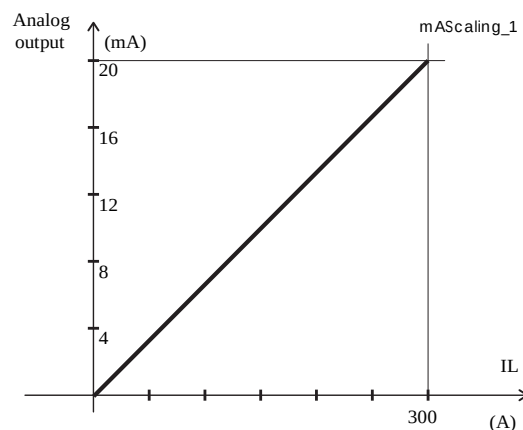


Figure 7.6: The average of the three phase currents. At 0 A the transducer output is 0 mA, at 300 A the output is 20 mA

Example of mA scaling for Uline

Coupling = Uline

Scaled minimum = 0 V

Scaled maximum = 15000 V

Analog output minimum value = 4 mA

Analog output maximum value = 20 mA

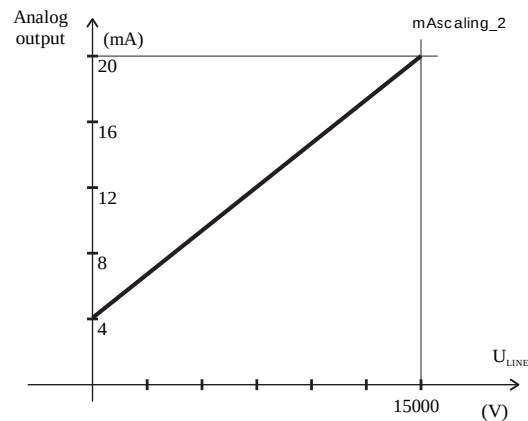


Figure 7.7: The average of the line-to-line voltages. At 0 V the transducer output is 4 mA, at 15000 V the output is 20 mA

Example of mA scaling for bi-directional power

Coupling = Q

Scaled minimum = -2000 kVar

Scaled maximum = 6000 kVar

Analog output minimum value = 4 mA

Analog output maximum value = 20 mA

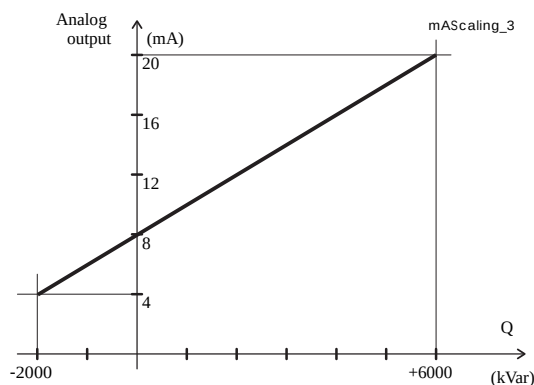


Figure 7.8: At -2000 kVar the transducer output is 4 mA, at 0 kVar it is 8 mA and at 6000 kVar the output is 20 mA

Section 8: Control functions

Output relays

The output relays are also called digital outputs. Any internal signal can be connected to the output relays using output matrix. An output relay can be configured as latched or non-latched. See the section Output matrix for more details.

NOTE: If the device has the mA option, it is equipped with only three alarm relays from A1 to A3.

The difference between trip contacts and alarm contacts is the DC breaking capacity. See the section Trip contacts and the section Signal contacts for details. The contacts are SPST normal open type (NO), except alarm relays A1 – A5, which have change over contacts (SPDT). Polarity of all output relays can be changed in VAMPSET or from Local display.

Table 8.1: Parameters of output relays

Parameter	Value	Unit	Description	Note
T1 – Tn	0		Status of trip output relay	F
	1			
A1 – A5	0		Status of signal output relay	F
	1			
SF	0		Status of the SF relay	F
	1		In VAMPSET, it is called as "Service status output"	
Force	On		Force flag for output relay forcing for test purposes. This is a common flag for all output relays and detection stage status. Any forced relay(s) and this flag are automatically reset by a 5-minute timeout.	Set
	Off			
REMOTE PULSES				
A1 – A5	0.00 – 99.98 or 99.99	s	Pulse length for direct output relay control via communications protocols. 99.99 s = Infinite. Release by writing "0" to the direct control parameter	Set
NAMES for OUTPUT RELAYS (editable with VAMPSET only)				
Description	String of max. 32 characters		Names for DO on VAMPSET screens. Default is "Trip relay n", or "Signal relay n"	Set

Set = An editable parameter (password needed). F = Editable when force flag is on.

Digital inputs

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Connect only dry (potential free) contacts to digital inputs DI1 – DI6.

Failure to follow these instructions will result in death, serious injury, or equipment damage.

There are 6 digital inputs available for control purposes.

The polarity – normal open (NO) / normal closed (NC) – and a delay can be configured according the application. The signals are available for the output matrix, block matrix, user's programmable logic etc.

The contacts connected to digital inputs DI1 – DI6 must be dry (potential free). These inputs use the common internal 48 Vdc wetting voltage from terminal X3:1, only.

Other digital inputs supported by VAMP 255 need an external control voltage (ac or dc). The voltage nominal activation level can be selected in the ordering code (see Section 14: Order information).

It is possible to use two different control voltages for DI7 – 20.

Selection in order code	Nominal voltage 24
3	V dc / 110 V ac 110
6	V dc / 220 V ac
7	220 V dc

When 110 or 220 V ac voltage is used to activate the digital Inputs, the AC mode should be selected as shown below:

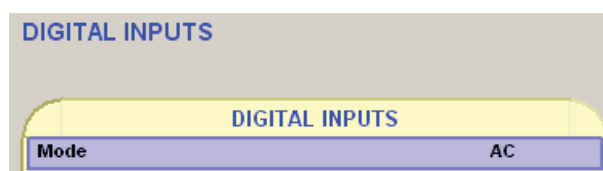


Figure 8.1: AC mode selection in VAMPSET

These inputs are ideal for transferring the status information of switching devices into the device. Please note that it is possible to use two different control voltages for the inputs.

Table 8.2: Summary of digital inputs:

DI	Terminal	Operating voltage	Availability
<-	X3:1	48VDC supply for DI1 – 6	VAMP 230
1	X3:2	Internal 48VDC	VAMP 255
2	X3:3		
3	X3:4		
4	X3:5		
5	X3:6		
6	X3:7		
7	X7:1	External 18 – 265 VDC	VAMP 255
8	X7:2	50 – 250 VAC	
9	X7:3		
10	X7:4		
11	X7:5		
12	X7:6		
->	X7:7	Common for DI7 – 12	
13	X7:8	External 18 – 265 VDC	VAMP 255
14	X7:9	50 – 250 VAC	
15	X7:10		
16	X7:11		
17	X7:12		
18	X7:13		
->	X7:14	Common for DI13 – 17	
19	X6:1 – 2	External 18 – 265 VDC	ARC card with 2 DIs
20	X6:3 – 4	50 – 250 VAC	

NOTE: These digital inputs must not be connected parallel with inputs of an another device.

Label and description texts can be edited with VAMPSET according the application. Labels are the short parameter names used on the local panel and descriptions are the longer names used by VAMPSET.

Table 8.3: Parameters of digital inputs

Parameter	Value	Unit	Description	Note
DI1 – DI6	0; 1		Status of digital input	
DI COUNTERS				
DI1 – DI6	0 – 65535		Cumulative active edge counter	(Set)
DELAYS FOR DIGITAL INPUTS				
DI1 – DI6	0.00 – 60.00	s	Definite delay for both on and off transitions	Set
CONFIGURATION DI1 – DI6				
Inverted	no		For normal open contacts (NO). Active edge is 0 -> 1	Set
	yes		For normal closed contacts (NC). Active edge is 1 -> 0	
Indication display	no		No pop-up display	Set
	yes		Indication display is activated at active DI edge	
On event	On		Active edge event enabled	Set
	Off		Active edge event disabled	
Off event	On		Inactive edge event enabled	Set
	Off		Inactive edge event disabled	
NAMES for DIGITAL INPUTS (editable with VAMPSET only)				
Label	String of max. 10 characters		Short name for DIs on the local display. Default is "DI n", n = 1 – 6	Set
Description	String of max. 32 characters		Long name for DIs. Default is "Digital input n", n = 1 – 6	Set

Set = An editable parameter (password needed).

Virtual inputs and outputs

There are four virtual inputs and six virtual outputs. The four virtual inputs acts like normal digital inputs. The state of the virtual input can be changed from display, communication bus and from VAMPSET. For example setting groups can be changed using virtual inputs.

Table 8.4: Parameters of virtual inputs

Parameter	Value	Unit	Description	Note
VI1 – VI4	0; 1		Status of virtual input	
Events	On; Off		Event enabling	Set
NAMES for VIRTUAL INPUTS (editable with VAMPSET only)				
Label	String of max. 10 characters		Short name for VIs on the local display Default is "VIn", n = 1 – 4	Set
Description	String of max. 32 characters		Long name for VIs. Default is "Virtual input n", n = 1 – 4	Set

Set = An editable parameter (password needed).

The six virtual outputs do act like output relays, but there are no physical contacts. Virtual outputs are shown in the output matrix and the block matrix. Virtual outputs can be used with the user's programmable logic and to change the active setting group etc.

Output matrix

By means of the output matrix, the output signals of the various protection stages, digital inputs, logic outputs and other internal signals can be connected to the output relays, front panel indicators, virtual outputs etc.

There are two LED indicators named "Alarm" and "Trip" on the front panel. Furthermore there are three general purpose LED indicators - "A", "B" and "C" - available for customer-specific indications. In addition, the triggering of the disturbance recorder (DR) and virtual outputs are configurable in the output matrix. See an example in Figure 8.2.

An output relay or indicator LED can be configured as latched or non-latched. A non-latched relay follows the controlling signal. A latched relay remains activated although the controlling signal releases.

There is a common "release latched" signal to release all the latched relays. This release signal resets all the latched output relays and indicators. The reset signal can be given via a digital input, via a keypad or through communication. Any digital input can be used for resetting. The selection of the input is done with the VAMPSET software under the menu "Release output matrix latches". Under the same menu, the "Release latches" parameter can be used for resetting.

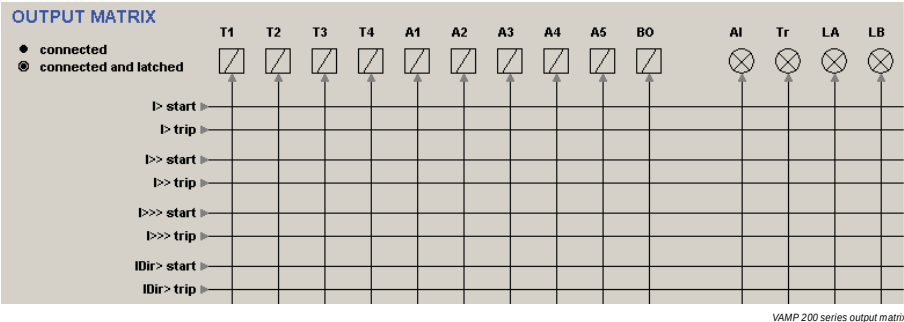


Figure 8.2: Output matrix.

Blocking matrix

By means of a blocking matrix, the operation of any protection stage can be blocked. The blocking signal can originate from the digital inputs DI1 to DI6(20)*, or it can be a start or trip signal from a protection stage or an output signal from the user's programmable logic. In the block matrix Figure 8.3 an active blocking is indicated with a black dot (•) in the crossing point of a blocking signal and the signal to be blocked.

* In VAMP 230, the display shows 20 DI, but only 6 of them are available. Digital input 19 & 20 are only available with DI19, DI20 option.

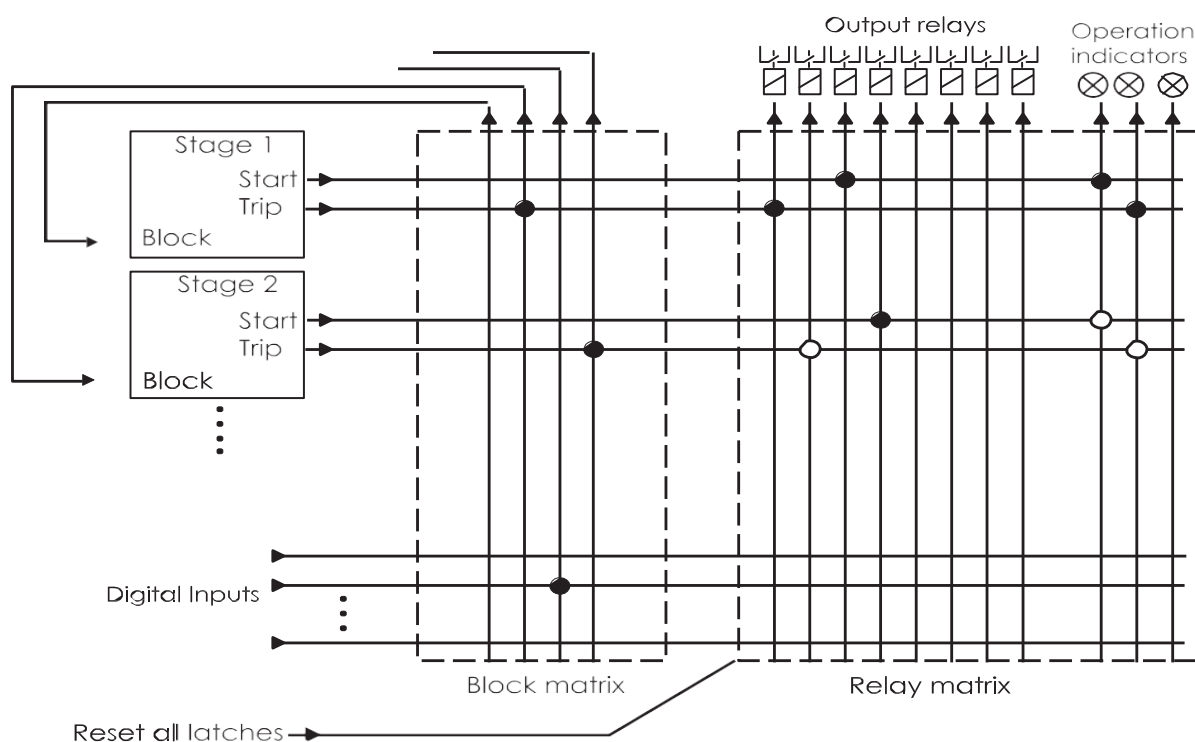


Figure 8.3: Blocking matrix and output matrix

Controllable objects

The device allows the control of six objects, that is, circuit breakers, disconnects, and grounding switches. Controlling can be done by "select-execute" or "direct control" principle.

The object block matrix and logic functions can be used to configure interlocking before the output pulse is issued. The objects 1 – 6 are controllable while the objects 7 – 8 are only able to show the status.

Controlling is possible by the following ways:

- through the local HMI
- through a remote communication
- through a digital input

The connection of an object to specific output relays is done via an output matrix (object 1 – 6 open output, object 1 – 6 close output). There is also an output signal "Object failed", which is activated if the control of an object is not completed.

Object states

Each object has the following states:

Setting	Value	Description
Object state	Undefined (00)	Actual state of the object
	Open	
	Close	
	Undefined (11)	

Basic settings for controllable objects

Each controllable object has the following settings:

Setting	Value	Description
DI for 'obj open'	None, any digital input, virtual input or virtual output	Open information
DI for 'obj close'		Close information
DI for 'obj ready'		Ready information
Max ctrl pulse length	0.02 – 600 s	Pulse length for open and close commands
Completion timeout	0.02 – 600 s	Timeout of ready indication
Object control	Open/Close	Direct object control

If changing states takes longer than the time defined by "Max ctrl pulse length" setting, object does not complete and "Object failure" matrix signal is set. Also undefined-event is generated. "Completion timeout" is only used for the ready indication. If "DI for 'obj ready'" is not set, completion timeout has no meaning.

Each controllable object has 2 control signals in matrix:

Output signal	Description
Object x Open	Open control signal for the object
Object x Close	Close control signal for the object

These signals send control pulse when an object is controlled by digital input, remote bus, auto-reclose etc.

Each read-only object has the following settings:

Setting	Value	Description
DI for 'obj open'	None, any digital input, virtual input or virtual output	Open information
DI for 'obj close'		Close information
Object timeout	0.02 – 600 s	Timeout for state changes

If changing states takes longer than the time defined by “Object timeout” setting, and “Object failure” matrix signal is set. Also undefined-event is generated.

Local/Remote selection

WARNING

LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Example: Emergency Stop.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of anticipated transmission delays or failures of the link.

Failure to follow these instructions can result in death or serious injury.

In Local mode, the output relays can be controlled via a local HMI, but they cannot be controlled via a remote serial communication interface.

In Remote mode, the output relays cannot be controlled via a local HMI, but they can be controlled via a remote serial communication interface.

The selection of the Local/Remote mode is done by using a local HMI, or via one selectable digital input. The digital input is normally used to change a whole station to a local or remote mode. The selection of the L/R digital input is done in the “Objects” menu of the VAMPSET software.

NOTE: A password is not required for a remote control operation.

Controlling with DI

Objects can be controlled with digital input, virtual input or virtual output. There are four settings for each controllable object:

Setting	Active
DI for remote open / close control	In remote state
DI for local open / close control	In local state

If the device is in local control state, the remote control inputs are ignored and vice versa. Object is controlled when a rising edge is detected from the selected input. Length of digital input pulse should be at least 60 ms.

Auto-reclose function (79)

The VAMP protection relays include a sophisticated Auto-reclosing (AR) function. The AR function is normally used in feeder protection relays that are protecting an overhead line. Most of the overhead line faults are temporary in nature. 85% can be cleared by using the AR function.

General

The basic idea is that normal protection functions will detect the fault. Then the protection function will trigger the AR function. After tripping the circuit-breaker (CB), the AR function can reclose the CB. Normally, the first reclose (or shot) is so short in time that consumers cannot detect anything. However, the fault is cleared and the feeder will continue in normal service.

Terminology

Even though the basic principle of AR is very simple; there are a lot of different timers and parameters that have to be set.

In VAMP relays, there are five shots. A shot consists of open time (so called “dead” time) and close time (so called “burning” time or discrimination time). A high-speed shot means that the dead time is less than 1 s. The time-delayed shot means longer dead times up to 2-3 minutes.

There are four AR lines. A line means an initialization signal for AR. Normally, start or trip signals of protection functions are used to initiate an AR-sequence. Each AR line has a priority. AR1 has the highest and AR4 has the lowest one. This means that if two lines are initiated at the same time, AR will follow only the highest priority line. A very typical configuration of the lines is that the instantaneous overcurrent stage will initiate the AR1 line, time-delayed overcurrent stage the AR2 line and ground-fault protection will use lines AR3 and AR4.

For more information about auto-reclosing, please refer to our application note “Auto-reclosing function in VAMP protection relays.”

The auto-reclose (AR) matrix in the following Figure 8.4 describes the start and trip signals forwarded to the auto-reclose function.

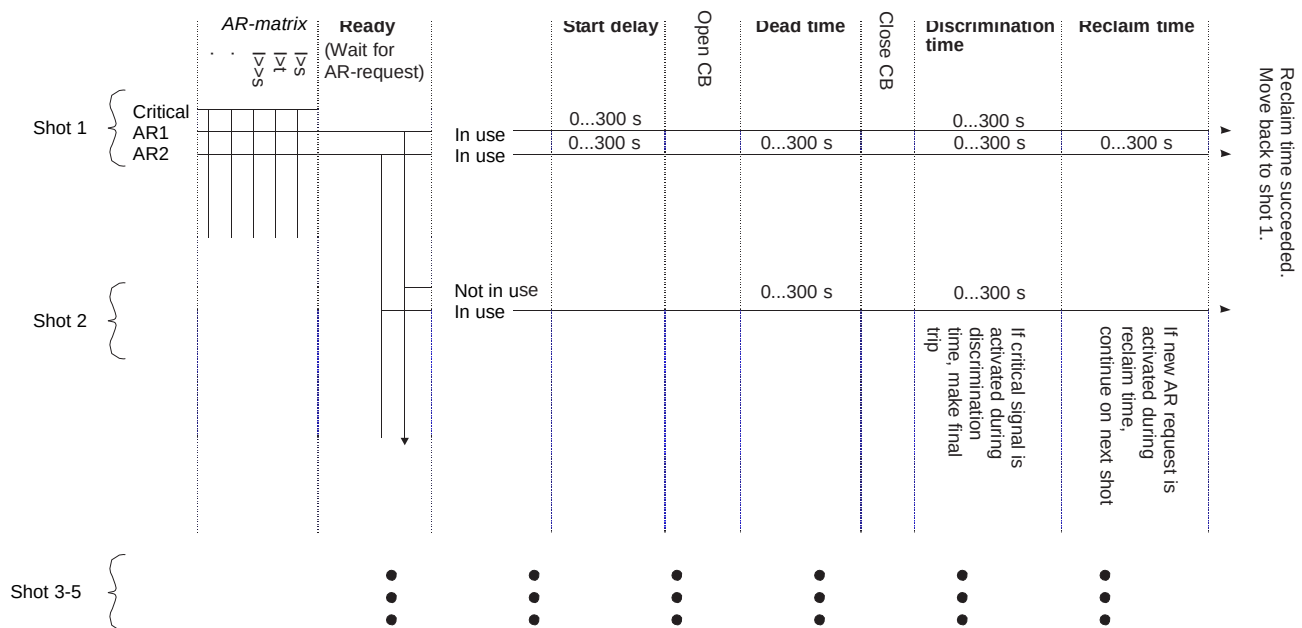


Figure 8.4: Auto-reclose matrix

The AR matrix above defines which signals (the start and trip signals from protection stages or digital input) are forwarded to the auto-reclose function. In the AR function, the AR signals can be configured to initiate the reclose sequence. Each shot from 1 to 5 has its own enabled/disabled flag. If more than one AR signal activates at the same time, AR1 has highest priority and AR2 the lowest. Each AR signal has an independent start delay for the shot 1. If a higher priority AR signal activates during the start delay, the start delay setting will be changed to that of the highest priority AR signal.

After the start delay the circuit-breaker (CB) will be opened if it is closed. When the CB opens, a dead time timer is started. Each shot from 1 to 5 has its own dead time setting.

After the dead time the CB will be closed and a discrimination time timer is started. Each shot from 1 to 5 has its own discrimination time setting. If a critical signal is activated during the discrimination time, the AR function makes a final trip. The CB will then open and the AR sequence is locked. Closing the CB manually clears the “locked” state.

After the discrimination time has elapsed, the reclaim time timer starts. If any AR signal is activated during the reclaim time or the discrimination time, the AR function moves to the next shot. The reclaim time setting is common for every shot.

If the reclaim time runs out, the auto-reclose sequence is successfully executed and the AR function moves to ready -state and waits for a new AR request in shot 1.

A trip signal from the protection stage can be used as a backup. Configure the start signal of the protection stage to initiate the AR function. If something does not work to specification in the AR function, the trip signal of the protection stage will open the CB. The delay setting for the protection stage should be longer than the AR start delay and discrimination time.

If a critical signal is used to interrupt an AR sequence, the discrimination time setting should be long enough for the critical stage, usually at least 100 ms.

Manual closing

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

If the relay interrupted a fault condition, determine and clear the causes of the fault. Check the condition of the circuit breaker before putting it back into service.

Failure to follow these instructions will result in death, serious injury, or equipment damage.

When CB is closed manually with the local panel, remote bus, digital inputs etc., the reclaim-state is activated. Within the reclaim time all AR requests are ignored. It is up to protection stages to take care of tripping. Trip signals of protection stages must be connected to a trip relay in the output matrix.

Manual opening

Manual CB open command during AR sequence will stop the sequence and leaves the CB open.

Reclaim time setting

- Use shot specific reclaim time: No
Reclaim time setting defines reclaim time between different shots during sequence and also reclaim time after manual closing.
- Use shot specific reclaim time: Yes
Reclaim time setting defines reclaim time only for manual control. Reclaim time between different shots is defined by shot specific reclaim time settings.

Support for 2 circuit breakers

AR function can be configured to handle 2 controllable objects. Object 1 – 6 can be configured to CB1 and any other controllable object can be used as CB2. The object selection for CB2 is made with Breaker 2 object setting. Switching between the two objects is done with a digital input, virtual input, virtual output or by choosing Auto CB selection. AR controls CB2 when the input defined by Input for selecting CB2 setting is active (except when using auto CB selection when operated CB 1 or 2 is that which was last in close state). Control is changed to another object only if the current object is not close.

Blocking of AR shots

Each AR shot can be blocked with a digital input, virtual input or virtual output. Blocking input is selected with Block setting. When selected input is active the shot is blocked. A blocked shot is treated like it doesn't exist and AR sequence will jump over it. If the last shot in use is blocked, any AR request during reclaiming of the previous shot will cause final tripping.

Starting AR sequence

Each AR request has own separate starting delay counter. The one which starting delay has elapsed first will be selected. If more than one delay elapses at the same time, an AR request of the highest priority is selected. AR1 has the highest priority and AR4 has the lowest priority. First shot is selected according to the AR request. Next AR opens the CB and starts counting dead time.

Starting sequence at shot 2 – 5 & skipping of AR shots

Each AR request line can be enabled to any combination of the 5 shots. For example making a sequence of Shot 2 and Shot 4 for AR request 1 is done by enabling AR1 only for those two shots.

NOTE: If AR sequence is started at shot 2 – 5 the starting delay is taken from the discrimination time setting of the previous shot. For example if Shot 3 is the first shot for AR2, the starting delay for this sequence is defined by Discrimination time of Shot 2 for AR2.

Critical AR request

Critical AR request stops the AR sequence and causes final tripping. Critical request is ignored when AR sequence is not running and also when AR is reclaiming.

Critical request is accepted during dead time and discrimination time.

Shot active matrix signals

When starting delay has elapsed, active signal of the first shot is set. If successful reclosing is executed at the end of the shot, the active signal will be reset after reclaim time. If reclosing was not successful or new fault appears during reclaim time, the active of the current shot is reset and active signal of the next shot is set (if there are any shots left before final trip).

AR running matrix signal

This signal indicates dead time. The signal is set after controlling CB open. When dead time ends, the signal is reset and CB is controlled close.

Final trip matrix signals

There are 5 final trip signals in the matrix, one for each AR request (1 – 4 and critical). When final trip is generated, one of these signals is set according to the AR request which caused the final tripping. The final trip signal will stay active for 0.5 seconds and then resets automatically.

DI to block AR setting

This setting is useful with an external synchro-check device. This setting only affects re-closing the CB. Re-closing can be blocked with a digital input, virtual input or virtual output. When the blocking input is active, CB won't be closed until the blocking input becomes inactive again. When blocking becomes inactive the CB will be controlled close immediately.

AR info for mimic display setting

When AR info is enabled, the local panel mimic display shows small info box during AR sequence.

Table 8.5: Setting parameters of AR function

Parameter	Value	Unit	Default	Description
ARena	ARon; ARoff	-	ARon	Enabling/disabling the autoreclose
ExtSync	None, any digital input, virtual input or virtual output	-	-	The digital input for blocking CB close. This can be used for Synchrocheck.
AR_DI	None, any digital input, virtual input or virtual output	-	-	The digital input for toggling the ARena parameter
AR2grp	ARon; ARoff	-	ARon	Enabling/disabling the autoreclose for group 2
RecIT	0.02 – 300.00	s	10.00	Reclaim time setting. This is common for all the shots.
CB	Obj1 – Obj6		Obj1	Breaker object in use
CB1	Obj1 – Obj6		Obj1	Breaker 1 object
CB2	Obj1 – Obj6		-	Breaker 2 object
AutoCBSel	On; Off		off	Enabling/disabling the auto CB selection
CB2Sel	None, any digital input, virtual input or virtual output		-	The digital input for selecting the CB2.
ARreq	On; Off	-	Off	AR request event
ShotS	On; Off	-	Off	AR shot start event
ARlock	On; Off	-	Off	AR locked event
CritAr	On; Off	-	Off	AR critical signal event
ARrun	On; Off	-	Off	AR running event
FinTrp	On; Off	-	Off	AR final trip event
ReqEnd	On; Off	-	Off	AR end of request event
ShtEnd	On; Off	-	Off	AR end of shot event
CriEnd	On; Off	-	Off	AR end of critical signal event
ARUnl	On; Off	-	Off	AR release event
ARStop	On; Off	-	Off	AR stopped event
FTrEnd	On; Off	-	Off	AR final trip ready event
ARon	On; Off	-	Off	AR enabled event
ARoff	On; Off	-	Off	AR disabled event

Parameter	Value	Unit	Default	Description
CRITri	On; Off	-	On	AR critical final trip on event
AR1Tri	On; Off	-	On	AR AR1 final trip on event
AR2Tri	On; Off	-	On	AR AR2 final trip on event
Shot settings				
DeadT	0.02 – 300.00	s	5.00	The dead time setting for this shot. This is a common setting for all the AR lines in this shot
AR1	On; Off	-	Off	Indicates if this AR signal starts this shot
AR2	On; Off	-	Off	Indicates if this AR signal starts this shot
AR3	On; Off	-	Off	Indicates if this AR signal starts this shot
AR4	On; Off	-	Off	Indicates if this AR signal starts this shot
Start1	0.02 – 300.00	s	0.02	AR1 Start delay setting for this shot
Start2	0.02 – 300.00	s	0.02	AR2 Start delay setting for this shot
Start3	0.02 – 300.00	s	0.02	AR3 Start delay setting for this shot
Start4	0.02 – 300.00	s	0.02	AR4 Start delay setting for this shot
Discr1	0.02 – 300.00	s	0.02	AR1 Discrimination time setting for this shot
Discr2	0.02 – 300.00	s	0.02	AR2 Discrimination time setting for this shot
Discr3	0.02 – 300.00	s	0.02	AR3 Discrimination time setting for this shot
Discr4	0.02 – 300.00	s	0.02	AR4 Discrimination time setting for this shot

Table 8.6: Measured and recorded values of AR function

	Parameter	Value	Unit	Description
Measured or recorded values	Obj1	UNDEFINED; OPEN; CLOSE; OPEN_REQUEST; CLOSE_REQUEST; READY; NOT_READY; INFO_NOT_AVAILABLE; FAIL	-	Object 1 state
	Status	INIT; RECLAIM_TIME; READY; WAIT_CB_OPEN; WAIT_CB_CLOSE; DISCRIMINATION_TIME; LOCKED; FINAL_TRIP; CB_FAIL; INHIBIT	-	AR-function state
	Shot#	1 – 5	-	The currently running shot
	RecIT	RECLAIMTIME; STARTTIME; DEADTIME; DISCRIMINATIONTIME	-	The currently running time (or last executed)
	SCntr		-	Total start counter
	Fail		-	The counter for unsuccessful AR shots
	Shot1*		-	Shot1 start counter
	Shot2*		-	Shot2 start counter
	Shot3*		-	Shot3 start counter
	Shot4*		-	Shot4 start counter
	Shot5*		-	Shot5 start counter

* There are 5 counters available for each one of the two AR signals.

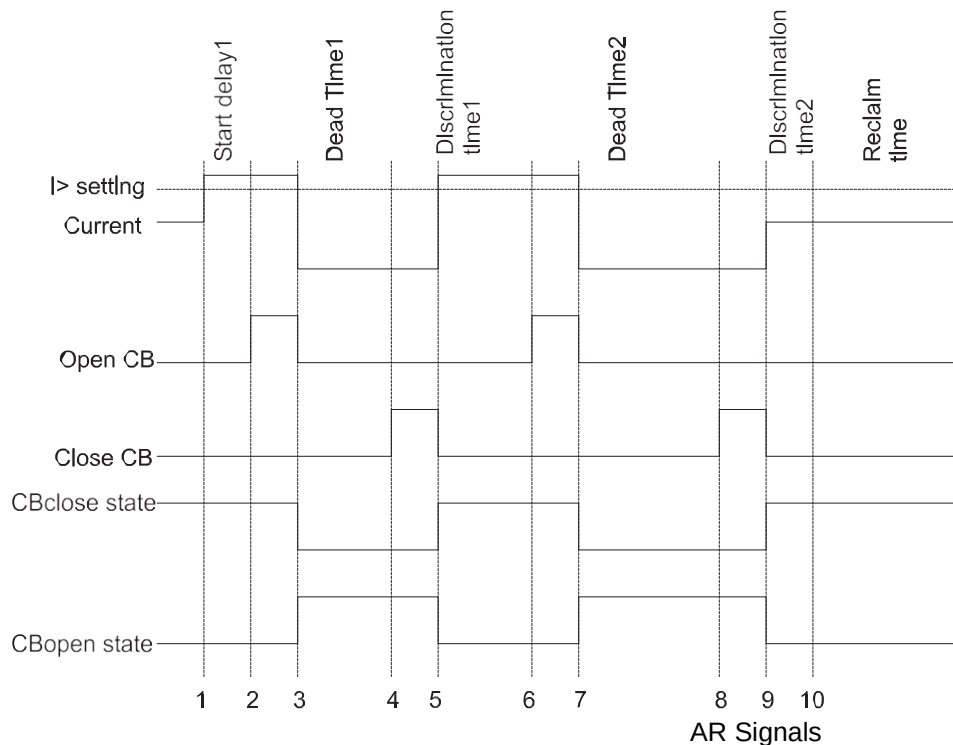


Figure 8.5: Example sequence of two shots. After shot 2 the fault is cleared.

1. Current exceeds the $I > \text{setting}$; the start delay from shot 1 starts.
2. After the start delay, an OpenCB relay output closes.
3. A CB opens. The dead time from shot 1 starts, and the OpenCB relay output opens.
4. The dead time from shot 1 runs out; a CloseCB output relay closes.
5. The CB closes. The CloseCB output relay opens, and the discrimination time from shot 1 starts. The current is still over the $I > \text{setting}$.
6. The discrimination time from the shot 1 runs out; the OpenCB relay output closes.
7. The CB opens. The dead time from shot 2 starts, and the OpenCB relay output opens.
8. The dead time from shot 2 runs out; the CloseCB output relay closes.
9. The CB closes. The CloseCB output relay opens, and the discrimination time from shot 2 starts. The current is now under $I > \text{setting}$.
10. Reclaim time starts. After the reclaim time the AR sequence is successfully executed. The AR function moves to wait for a new AR request in shot 1.

Logic functions

The device supports customer-defined programmable logic for boolean signals.

The logic is designed by using the VAMPSET setting tool and downloaded to the device. Functions available are:

- AND
- OR
- XOR
- NOT
- COUNTERs
- RS & D flip-flops

Logic is made with VAMPSET setting tool. Consumed memory is dynamically shown on the configuration view in percentage. The first value indicates amount of used inputs, second amount of gates and third values shows amount of outputs consumed.

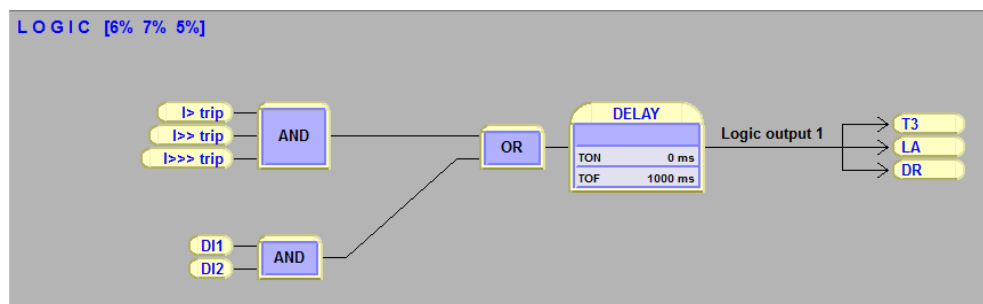


Figure 8.6: Logic can be found and modified in "logic" menu in VAMPSET setting tool

Percentages show used memory amount.

Inputs/Logical functions/Outputs- used. None of these is not allowed to exceed 100%.

See guide below to learn basics of logic creation:

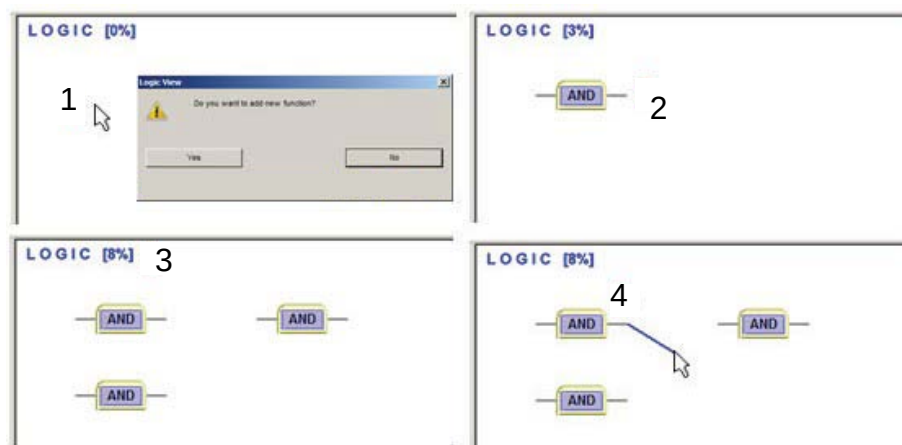


Figure 8.7: How to create logical nodes.

1. Press empty area to add a logic gate, confirm new function by pressing "Yes".
2. Logic function is always "AND" -gate as a default.
3. While logic increases the capacity is increasing as well.
4. To joint logic functions, go on top of the output line of gate and hold down mouse left -> make the connection to other logic functions input.

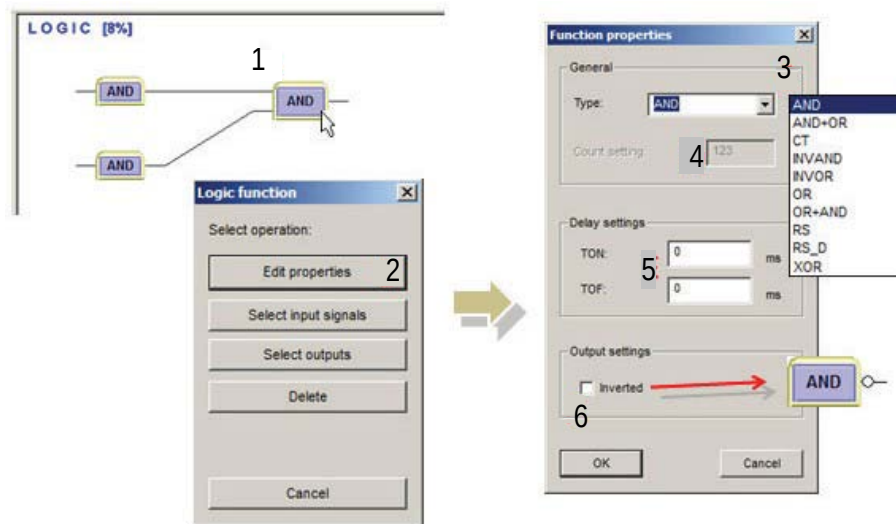


Figure 8.8: Logic creation.

1. Left click on top of any logic function to activate the "Select operation" view.
2. Edit properties button opens the "Function properties" window.
3. Generally it is possible to choose the type of logic function between and/or/counter/swing -gate.
4. When counter is selected, count setting may be set here.
5. Separate delay setting for logic activation and dis-activation.
6. Possible to invert the output of logic. Inverted logic output is marked with circle.

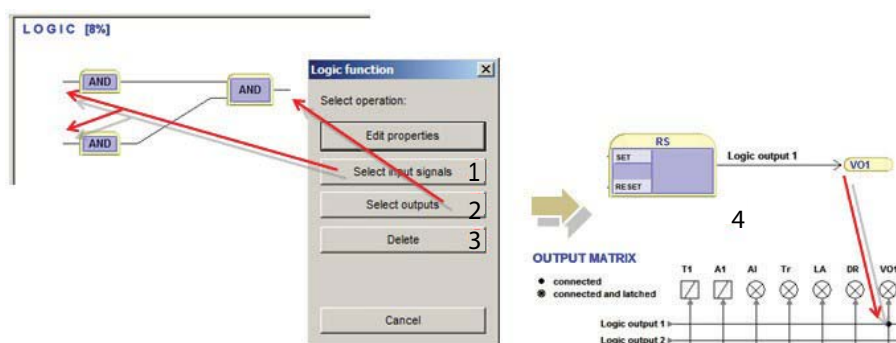


Figure 8.9: Logic creation

1. Select input signals can be done by pressing the following button or by clicking mouse left on top of the logic input line.
2. Select outputs can be done by pressing the following button or by clicking mouse left on top of the logic output line.
3. This deletes the logic function.
4. When logic is created and settings are written to the IED the unit requires a restart. After restarting the logic output is automatically assigned in output matrix as well.

NOTE: During commissioning, whenever writing new logic to the IED the unit has to be restarted.

Section 9: Communication

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, NOM-029-STPS-2011, and CSA Z462.
- This unit must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this unit before working on or inside the unit.
- Always use a properly rated voltage sensing device to confirm that the power is off.
- A live current transformer secondary circuit must not be opened without turning off the primary side of the transformer and short circuiting transformer secondary circuits first.
- Replace all devices, doors and covers before turning on power to this unit.

Failure to follow these instructions will result in death or serious injury.

Communication ports

The device has three communication ports as standard. A fourth port, Ethernet, is available as option. See Figure 9.1.

There are three communication ports in the rear panel. The Ethernet port is optional. The X4 connector includes two ports: local port and extension port. The front panel RS-232 port will shut off the local port on the rear panel when a VX003 cable is inserted.

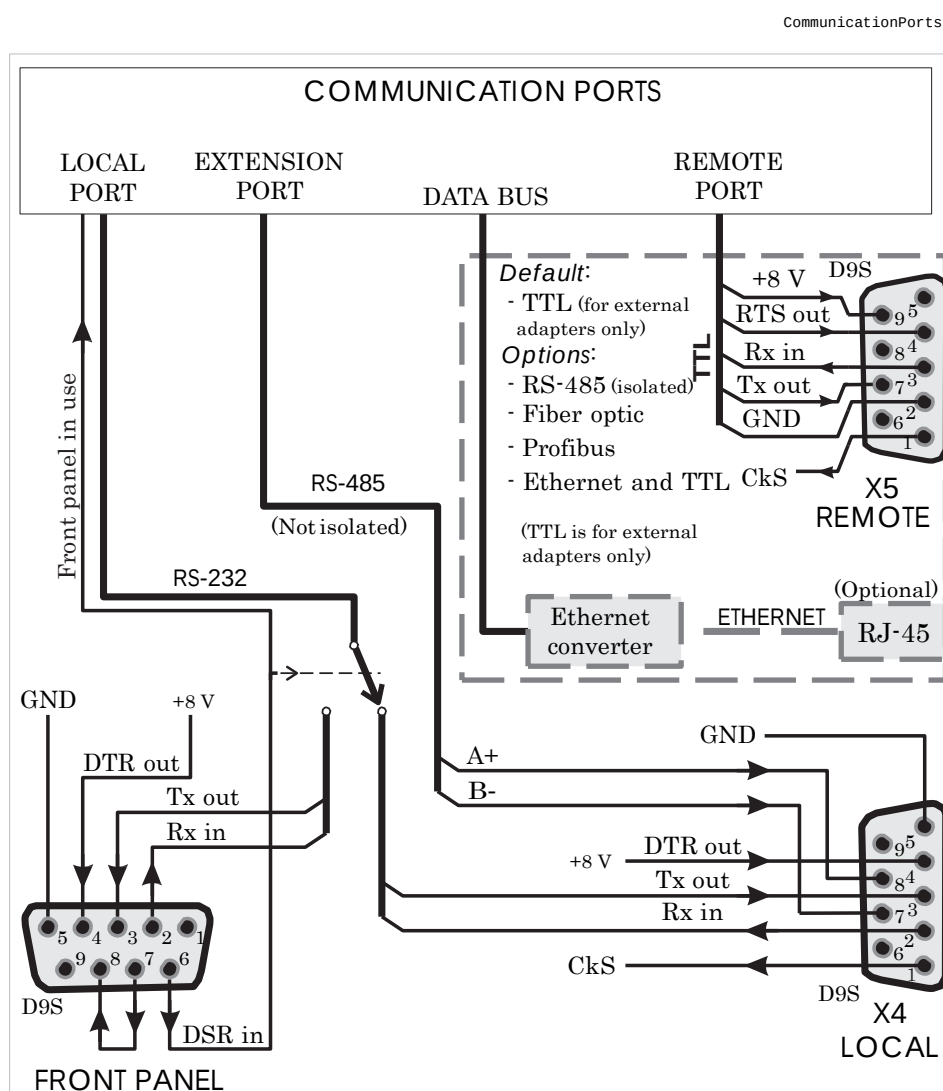


Figure 9.1: Communication ports and connectors. By default the X5 is a D9S type connector with TTL interface. The DSR signal from the front panel port selects the active connector for the RS232 local port.

By default the remote port has a TTL interface. It can only be used together with external converters or converting cables. Built-in options for RS-485, fiber optic (plastic/plastic, plastic/glass, glass/plastic or glass/glass), Profibus and Ethernet are available.

Local port X4

The local port has two connectors:

- On the front panel
- X4 the rear panel (D9S pins 2, 3 and 5)

Only one can be used at a time.

NOTE: The extension port is located in the same X4 connector.

When the VX003 cable is inserted to the front panel connector it activates the front panel port and disables the rear panel local port by connecting the DTR pin 6 and DSR pin 4 together. See Figure 9.1.

Protocol for the local port

The front panel port is always using the command line protocol for VAMPSET regardless of the selected protocol for the rear panel local port.

If other than "None" protocol is selected for the rear panel local port, the front panel connector, when activated, is still using the plain command line interface with the original speed, parity etc. For example if the rear panel local port is used for remote VAMPSET communication using SPA-bus default 9600/7E1, it is possible to temporarily connect a PC with VAMPSET to the front panel connector with the default 38400/8N1. While the front panel connector is in use, the rear panel local port is disabled. The communication parameter display on the local display will show the active parameter values for the local port.

Physical interface

The physical interface of this port is RS-232.

Table 9.1: Parameters

Parameter	Value	Unit	Description	Note
Protocol			Protocol selection for the rear panel local port.	Set
	None		Command line interface for VAMPSET	
	SpaBus		SPA-bus (slave)	
	ProfibusDP		Profibus DB (slave)	
	ModbusSla		Modbus RTU slave	
	ModbusTCPs IEC-		Modbus TCP slave	
	103		IEC-60870-5-103 (slave)	
	ExternalIO		Modbus RTU master for external I/O-modules	
	DNP3		DNP 3.0	
Msg#	0 – $2^{32}-1$		Message counter since the device has restarted or since last clearing	Clr
Errors	0 – $2^{16}-1$		Detected protocol errors since the device has restarted or since last clearing	Clr
Tout	0 – $2^{16}-1$		Detected timeout errors since the device has restarted or since last clearing	Clr
	speed/DPS Default = 38400/8N1 for VAMPSET		Display of actual communication parameters. Speed = bit/s D = number of data bits P = parity: none, even, odd S = number of stop bits	1)
VAMPSET communication (Direct or SPA-bus embedded command line interface)				
Tx	bytes/size		Unsent bytes in transmitter buffer/size of the buffer	
Msg#	0 – $2^{32}-1$		Message counter since the device has restarted or since last clearing	Clr
Errors	0 – $2^{16}-1$		Detected errors since the device has restarted or since last clearing	Clr
Tout	0 – $2^{16}-1$		Detected timeout errors since the device has restarted or since last clearing	Clr

Set = An editable parameter (password needed). Clr = Clearing to zero is possible.

1) The communication parameters are set in the protocol specific menus. For the local port command line interface the parameters are set in configuration menu.

Remote port X5

Physical interface

The physical interface of this port depends of the communication letter in the order code. See Figure 9.1, the section Rear panel connector X5 (REMOTE), and the table below. The TTL interface is for external converters and converter cables only. It is not suitable for direct connection to distances more than one meter.

Physical interface and connector types of remote port X5 with various options. TTL (A) is the default.

Order Code	Communication Interface	Connector Type
A	TTL (for external converters only)	D9S
B	Plastic fiber interface	HFBR-0500
C	Not available	
D	RS-485 (isolated)	screw crimp
E	Glass fiber interface (62.5/125 μm)	SMA
F	Plastic Rx/glass (62.5/125 μm) Tx fiber interface	HFBR-0500/SMA
G	Glass (62.5/125 μm) Rx/plastic fiber interface	SMA/HFBR-0500

Table 9.2: Parameters

Parameter	Value	Unit	Description	Note
Protocol			Protocol selection for remote port	Set
	None SPA-		Command line interface for VAMPSET	
	bus		SPA-bus slave	
	ProfibusDP		Profibus DB slave	
	ModbusSla		Modbus RTU slave	
	ModbusTCPs IEC-		Modbus TCP slave	
	103		IEC-60870-5-103 slave	
	ExternalIO		Modbus RTU master for external I/O-modules	
	DNP3		DNP 3.0	
Msg#	0 – $2^{32}-1$		Message counter since the device has restarted or since last clearing	Clr
Errors	0 – $2^{16}-1$		Detected protocol errors since the device has restarted or since last clearing	Clr
Tout	0 – $2^{16}-1$		Detected timeout errors since the device has restarted or since last clearing	Clr
	speed/DPS		Display of current communication parameters. Speed = bit/s D = number of data bits P = parity: none, even, odd S = number of stop bits	1)
Debug	No		Echo to local port No echo	Set
	Binary		For binary protocols	
	ASCII		For SPA-bus protocol	

Set = An editable parameter (password needed). Clr = Clearing to zero is possible.

1) The communication parameters are set in the protocol specific menus. For the local port command line interface the parameters are set in configuration menu.

Extension port X4

This is a non-isolated RS-485 port for external I/O devices. The port is located in the same rear panel D9S connector X4 as the local port, but pins (7, 8, 5) are used instead of the standard RS-232 pins (2, 3, 5) used by the local port. See Figure 9.1.

Table 9.3: Parameters

Parameter	Value	Unit	Description	Note
Protocol			Protocol selection for extension port	Set
	None		-	
	SPA-bus		SPA-bus slave	
	ProfibusDP		Profibus DB slave	
	ModbusSla		Modbus RTU slave	
	ModbusTCPs IEC-		Modbus TCP slave	
	103		IEC-60870-5-103 slave	
	ExternalIO		Modbus RTU master for external I/O-modules	
	DNP3		DNP 3.0	
Msg#	0 – 2 ³² -1		Message counter since the device has restarted or since last clearing	Clr
Errors	0 – 2 ¹⁶ -1		Detected protocol errors since the device has restarted or since last clearing	Clr
Tout	0 – 2 ¹⁶ -1		Detected timeout errors since the device has restarted or since last clearing	Clr
	speed/DPS Default = 38400/8N1 for VAMPSET		Display of current communication parameters. Speed = bit/s D = number of data bits P = parity: none, even, odd S = number of stop bits	1)

Set = An editable parameter (password needed). Clr = Clearing to zero is possible.

1) The communication parameters are set in the protocol specific menus. For the local port command line interface the parameters are set in configuration menu.

Ethernet port

TCP port 1st INST and TCP port 2nd INST are ports for ethernet communication protocols. Ethernet communication protocols can be selected to these ports when such hardware option is installed. The parameters for these ports are set via local HMI or with VAMPSET in menus TCP port 1st INST and TCP port 2nd INST. Two different protocols can be used simultaneously on one physical interface (both protocols use the same IP address and MAC address but different IP port).

Protocol configuration menu contains address and other related information for the ethernet port. TCP port 1st and 2nd instance include selection for the protocol, IP port settings and message/detected error/timeout counters. More information about the protocol configuration menu on table below.

Table 9.4: Main configuration parameters (local display), built-in Ethernet port

Parameter	Value	Unit	Description	Note
Protocol			Protocol selection for the extension port	Set
	None		Command line interface for VAMPSET	
	ModbusTCPs		Modbus TCP slave	
	IEC-101		IEC-101	
	IEC 61850		IEC-61850 protocol	
	EtherNet/IP		Ethernet/IP protocol	
	DNP3		DNP/TCP	
Port	nnn		Ip port for protocol, default 102	Set
IpAddr	n.n.n.n		Internet protocol address (set with VAMPSET)	Set
NetMsk	n.n.n.n		Net mask (set with VAMPSET)	Set
Gatew	default = 0.0.0.0		Gateway IP address (set with VAMPSET)	Set
NTPSvr	n.n.n.n		Network time protocol server (set with VAMPSET) 0.0.0.0 = no SNTP	Set
KeepAlive	nn		TCP keepalive interval	Set ¹
FTP server	on/off		Enable FTP server	Set
FTP speed	4 Kb/s (default)		Maximum transmission speed for FTP	Set
FTP password	? (user) config (configurator)		FTP password	Set
MAC address	001ADnnnnnnn		MAC address	
VS Port	nn 23 (default)		IP port for Vampset	Set
Msg#	nnn		Message counter	
Errors	nnn		Detected error counter	
Tout	nnn		Detected timeout counter	

Parameter	Value	Unit	Description	Note
EthSffEn	on/off		Sniffer port enable	Set
SniffPort	Port2		Sniffer port	

Set = An editable parameter (password needed)

¹⁾ KeepAlive: The KeepAlive parameter sets in seconds the time between two keepalive packets that are sent from the IED. The setting range for this parameter is between zero (0) and 20 seconds; with the exception that zero (0) means actually 120 seconds (2 minutes). A keep alive's packet purpose is for the VAMP IED to send a probe packet to a connected client for checking the status of the TCP-connection when no other packet is being sent e.g. client does not poll data from the IED. If the keepalive packet is not acknowledged, the IED will close the TCP connection. Connection must be resumed on the client side.

Table 9.5: TCP PORT 1st INST

Parameter	Value	Unit	Description	Note
Protocol			Protocol selection for the extension port	Set
	None		Command line interface for VAMPSET	
	ModbusTCPs		Modbus TCP slave	
	IEC 61850		IEC-61850 protocol	
	Ethernet/IP		Ethernet/IP protocol	
	DNP3		DNP/TCP	
Port	nnn		Ip port for protocol, default 502	Set
Msg#	nnn		Message counter	
Errors	nnn		Detected error	
Tout	nnn		Timeout counter	

Table 9.6: CP PORT 2nd INST

Parameter	Value	Unit	Description	Note
Ethernet port protocol (TCP PORT 2nd INST)			Protocol selection for the extension port.	Set
	None		Command line interface for VAMPSET	
	ModbusTCPs		Modbus TCP slave	
	IEC 61850		IEC-61850 protocol	
	EtherNet/IP		Ethernet/IP protocol	
	DNP3		DNP/TCP	
Port	nnn		Ip port for protocol, default 502	Set
Msg#	nnn		Message counter	
Errors	nnn		Detected error	
Tout	nnn		Timeout counter	

Set = An editable parameter (password needed).

Communication protocols

The protocols enable the transfer of the following type of data:

- events
- status information
- measurements
- control commands.
- clock synchronizing
- Settings (SPA-bus and embedded SPA-bus only)

PC communication

PC communication is using a VAMP specified command line interface. The VAMPSET program can communicate using the local RS-232 port or using ethernet interface.

It is also possible to select SPA-bus protocol for the local port and configure the VAMPSET to embed the command line interface inside SPA-bus messages.

For Ethernet configuration, see the section Ethernet port.

Modbus TCP and Modbus RTU

These Modbus protocols are often used in power plants and in industrial applications. The difference between these two protocols is the media. Modbus TCP uses Ethernet and Modbus RTU uses asynchronous communication (RS-485, optic fiber, RS-232).

VAMPSET will show the list of all available data items for Modbus.

A separate document, “Modbus Parameters,” is also available.

The Modbus communication is activated usually for remote port via a menu selection with parameter “Protocol.” See the section Communication ports.

For ethernet interface configuration, see the section Ethernet port.

Table 9.7: Parameters

Parameter	Value	Unit	Description	Note
Addr	1 – 247		Modbus address for the device. Broadcast address 0 can be used for clock synchronizing. Modbus TCP uses also the TCP port settings.	Set
bit/s	1200 2400 4800 9600 19200	bps	Communication speed for Modbus RTU	Set
Parity	None Even Odd		Parity for Modbus RTU	Set

Set = An editable parameter (password needed)

Profibus DP

The Profibus DP protocol is widely used in industry. A built-in Profibus option card or external VPA 3CG is required.

Device profile "continuous mode"

In this mode, the device is sending a configured set of data parameters continuously to the Profibus DP master. The benefit of this mode is the speed and easy access to the data in the Profibus master. The drawback is the maximum buffer size of 128 bytes, which limits the number of data items transferred to the master. Some PLCs have their own limitation for the Profibus buffer size, which may further limit the number of transferred data items.

Device profile "Request mode"

Using the request mode it is possible to read all the available data from the VAMP device and still use only a very short buffer for Profibus data transfer. The drawback is the slower overall speed of the data transfer and the need of increased data processing at the Profibus master as every data item must be separately requested by the master.

NOTE: In request mode, it is not possible to continuously read only one single data item. At least two different data items must be read in turn to get updated data from the device.

There is a separate manual for VPA 3CG (VVPA3CG/EN M/xxxx) for the continuous mode and request mode. The manual is available to download from our website.

Available data

VAMPSET will show the list of all available data items for both modes. A separate document "Profibus parameters.pdf" is also available.

The Profibus DP communication is activated usually for remote port via a menu selection with parameter "Protocol." See the section Communication ports.

Table 9.8: Parameters

Parameter	Value	Unit	Description	Note
Mode			Profile selection	Set
	Cont		Continuous	
	Reqs		mode	
bit/s	2400	bps	Communication speed from the main CPU to the Profibus converter. (The actual Profibus bit rate is automatically set by the Profibus master and can be up to 12 Mbit/s.)	
Emode			Event numbering style.	(Set)
	Channel		Use this for new installations.	
	(Limit60)		(The other modes are for compatibility with old systems.)	
	(NoLimit)			
InBuf		bytes	Size of Profibus master's Rx buffer. (data to the master)	1. 3.
OutBuf		bytes	Size of Profibus master's Tx buffer. (data from the master)	2. 3.
Addr	1 – 247		This address has to be unique within the Profibus network system.	Set 4.
Conv			Converter type	
	-		No converter recognized	
	VE		Converter type "VE" is recognized	

Set = An editable parameter (password needed)

Clr = Clearing to zero is possible

1. In continuous mode the size depends of the biggest configured data offset of a data item to be send to the master. In request mode the size is 8 bytes.
2. In continuous mode the size depends of the biggest configured data offset of a data to be read from the master. In request mode the size is 8 bytes.
3. When configuring the Profibus master system, the lengths of these buffers are needed. The device calculates the lengths according the Profibus data and profile configuration and the values define the in/out module to be configured for the Profibus master.
4. If the value is "-", Profibus protocol has not been selected or the device has not restarted after protocol change or there is a communication problem between the main CPU and the Profibus ASIC.

SPA-bus

The device has full support for the SPA-bus protocol including reading and writing the setting values. Also reading of multiple consecutive status data bits, measurement values or setting values with one message is supported.

Several simultaneous instances of this protocol, using different physical ports, are possible, but the events can be read by one single instance only.

There is a separate document “Spabus parameters.pdf” of SPA-bus data items available.

Table 9.9: Parameters

Parameter	Value	Unit	Description	Note
Addr	1 – 899		SPA-bus address. Must be unique in the system.	Set
bit/s	1200 2400 4800 9600 (default) 19200	bps	Communication speed	Set
Emode			Event numbering style.	(Set)
	Channel		Use this for new installations.	
	(Limit60)		(The other modes are for compatibility with old systems.)	
	(NoLimit)			

Set = An editable parameter (password needed)

IEC 60870-5-103

The IEC standard 60870-5-103 "*Companion standard for the informative interface of protection equipment*" provides standardized communication interface to a primary system (master system).

The unbalanced transmission mode of the protocol is used, and the device functions as a secondary station (slave) in the communication. Data is transferred to the primary system using "data acquisition by polling"-principle.

The IEC functionality includes application functions:

- station initialization
- general interrogation
- clock synchronization and
- command transmission.

It is not possible to transfer parameter data or disturbance recordings via the IEC 103 protocol interface.

The following ASDU (Application Service Data Unit) types will be used in communication from the device:

- ASDU 1: time tagged message
- ASDU 3: Measurands I
- ASDU 5: Identification message
- ASDU 6: Time synchronization and
- ASDU 8: Termination of general interrogation.

The device will accept:

- ASDU 6: Time synchronization
- ASDU 7: Initiation of general interrogation and
- ASDU 20: General command.

The data in a message frame is identified by:

- type identification
- function type and
- information number.

These are fixed for data items in the compatible range of the protocol, for example, the trip of I> function is identified by: type identification = 1, function type = 160 and information number = 90. "Private range" function types are used for such data items, which are not defined by the standard (e.g. the status of the digital inputs and the control of the objects).

The function type and information number used in private range messages is configurable. This enables flexible interfacing to different master systems.

For more information on IEC 60870-5-103 in VAMP devices refer to the “IEC103 Interoperability List” document.

Table 9.10: Parameters

Parameter	Value	Unit	Description	Note
Addr	1 – 254		A unique address within the system	Set
bit/s	9600 19200	bps	Communication speed	Set
MeasInt	200 – 10000	ms	Record reading timeout	Set
SyncRe	Sync Sync+Proc Msg Msg+Proc		ASDU6 response time mode	Set

Set = An editable parameter (password needed)

Table 9.11: Parameters for disturbance record reading

Parameter	Value	Unit	Description	Note
ASDU23	On Off		Enable record info message	Set
Smpls/msg	1 – 25		Record samples in one message	Set
Timeout	10 – 10000	s	Record reading timeout	Set
Fault			Fault identifier number for IEC-103. Starts + trips of all stages.	
TagPos			Position of read pointer	
Chn			Active channel	
ChnPos			Channel read position	
Fault numbering				
Faults			Total number of faults	
GridFlts			Fault burst identifier number	
Grid			Time window to classify faults together to the same burst	Set

DNP 3.0

The relay supports communication using DNP 3.0 protocol. The following DNP 3.0 data types are supported:

- binary input
- binary input change
- double-bit input
- binary output
- analog input
- counters

Additional information can be obtained from the “DNP 3.0 Device Profile Document” and “DNP 3.0 Parameters.pdf”. DNP 3.0 communication is activated via menu selection. RS-485 interface is often used but also RS-232 and fiber optic interfaces are possible.

Table 9.12: Parameters

Parameter	Value	Unit	Description	Set
bit/s	4800 9600 (default) 19200 38400	bps	Communication speed	Set
Parity	None (default) Even Odd		Parity	Set
SlvAddr	1 – 65519		An unique address for the device within the system	Set
MstrAddr	1 – 65519 255 = default		Address of master	Set
LLTout	0 – 65535	ms	Link layer confirmation timeout	Set

LLRetry	1 – 255 1 = default		Link layer retry count	Set
APLTout	0 – 65535 5000 = default	ms	Application layer confirmation timeout	Set
CnfMode	EvOnly (default) All		Application layer confirmation mode	Set
DBISup	No (default) Yes		Double-bit input support	Set
SyncMode	0 – 65535	s	Clock synchronization request interval. 0 = only at boot	Set

Set = An editable parameter (password needed)

IEC 60870-5-101

The IEC 60870-5-101 standard is derived from the IEC 60870-5 protocol standard definition. In VAMP devices, IEC 60870-5-101 communication protocol is available via menu selection. The VAMP unit works as a controlled outstation (slave) unit in unbalanced mode.

Supported application functions include process data transmission, event transmission, command transmission, general interrogation, clock synchronization, transmission of integrated totals, and acquisition of transmission delay.

For more information on IEC 60870-5-101 in VAMP devices, refer to the “IEC 101 Profile checklist & datalist.pdf” document.

Table 9.13: Parameters

Parameter	Value	Unit	Description	Note
bit/s	1200	bps	Bitrate used for serial communication.	Set
	2400			
	4800			
	9600			
Parity	None		Parity used for serial communication	Set
	Even			
	Odd			
LLAddr	1 – 65534		Link layer address	Set
LLAddrSize	1 – 2	Bytes	Size of Link layer address	Set
ALAddr	1 – 65534		ASDU address	Set
ALAddrSize	1 – 2	Bytes	Size of ASDU address	Set
IOAddrSize	2 – 3	Bytes	Information object address size. (3-octet addresses are created from 2-octet addresses by adding MSB with value 0.)	Set
COTsize	1	Bytes	Cause of transmission size	
TTFormat	Short		The parameter determines time tag format: 3-octet time tag or 7-octet time tag.	Set
	Full			
MeasFormat	Scaled		The parameter determines measurement data format: normalized value or scaled value.	Set
	Normalized			
DbandEna	No		Dead-band calculation enable flag	Set
	Yes			
DbandCy	100 – 10000	ms	Dead-band calculation interval	Set

Set = An editable parameter (password needed)

External I/O (Modbus RTU master)

External Modbus I/O devices can be connected to the relay using this protocol. (See the section External input / output module module for more information).

IEC 61850

The relay supports communication using IEC 61850 protocol with native implementation. IEC 61850 protocol is available with the optional built-in Ethernet port. The protocol can be used to read / write static data from the relay or to receive events and to receive / send GOOSE messages to other relays.

IEC 61850 server interface is capable of

- Configurable data model: selection of logical nodes corresponding to active application functions
- Configurable pre-defined data sets
- Supported dynamic data sets created by clients
- Supported reporting function with buffered and unbuffered Report Control Blocks
- Sending analog values over GOOSE
- Supported control modes:
 - direct with normal security
 - direct with enhanced security
 - select before operation with normal security
 - select before operation with enhanced security
- Supported horizontal communication with GOOSE: configurable GOOSE publisher data sets, configurable filters for GOOSE subscriber inputs, GOOSE inputs available in the application logic matrix

Additional information can be obtained from the separate documents “IEC 61850 conformance statement.pdf”, “IEC 61850 Protocol data.pdf” and “Configuration of IEC 61850 interface.pdf”.

EtherNet/IP

The device supports communication using EtherNet/IP protocol which is a part of CIP (Common Industrial Protocol) family. EtherNet/IP protocol is available with the optional built-in Ethernet port. The protocol can be used to read / write data from the device using request / response communication or via cyclic messages transporting data assigned to assemblies (sets of data).

EtherNet/IP main features:

- Static data model: 2 standard objects (Overload and Control Supervisor), 2 private objects (one for digital data and one for analog data) and 4 configuration objects for protection functions configuration
- Two configurable assemblies (one producing and one consuming) with the maximum capacity of 128 bytes each EDS file that can be fed to any client supporting EDS files: can be generated at any time, all changes to EtherNet/IP configuration (see configuration parameters in Table 9.14) or to assemblies' content require generating of the new EDS file.
- Three types of communications are supported: UCMM (one time request/response), Class 3 connection (cyclic request/response) and Class 1 connection (cyclic I/O messages containing assemblies' data)

EtherNet/IP implementation on VAMP device serves as a server and is not capable of initiating communication.

Table 9.14: EtherNet/IP main configuration parameters

Parameter	Range	Description
IP address		IP protocol address identifying device in the network
Multicast IP		Multicast IP address used for sending I/O messages
Multicast TTL	1 – 100	Time allowed to live in the header field of the I/O messages sent to multicast address
Vendor ID	1 – 65535	Identification of a vendor by number
Device Type	0 – 65535	Indication of general type of product
Product Code	1 – 65535	Identification of a particular product of an individual vendor
Major Revision	1 – 127	Major revision of the item the Identity Object represents
Minor Revision	1 – 255	Minor revision of the item the Identity Object represents
Serial Number	0 – 4294967295	Serial number of device
Product Name	32 chars	Human readable identification
Producing Instance	1 – 1278	Instance number of producing assembly
Include Run/Idle Header (Producing)	On/Off	Include or exclude Run/Idle Header in an outgoing I/O messages
Consuming Instance	1 – 1278	Instance number of consuming assembly
Include Run/Idle Header (Consuming)	On/Off	Expect presence or absence of Run/Idle Header in an incoming I/O messages

FTP server

The FTP server is available on VAMP IEDs equipped with an built-in or optional Ethernet card.

The server enables downloading of the following files from an IED:

- Disturbance recordings.
- The MasterICD and MasterICDEd2 files.

The MasterICD and MasterICDEd2 files are VAMP-specific reference files that can be used for offline IEC61850 configuration.

The built-in FTP client in Microsoft Windows or any other compatible FTP client may be used to download files from the device.

Parameter	Value	Unit	Description	Note
Enable FTP server	Yes No		Enable or disable the FTP server.	Set
FTP password	Max 33 characters		Required to access the FTP server with an FTP client. Default is "config". The user name is always "vamp".	Set
FTP max speed	1 – 10	KB/s	The maximum speed at which the FTP server will transfer data.	Set

Section 10: Application

The following examples illustrate the versatile functions in different applications.

Substation feeder protection

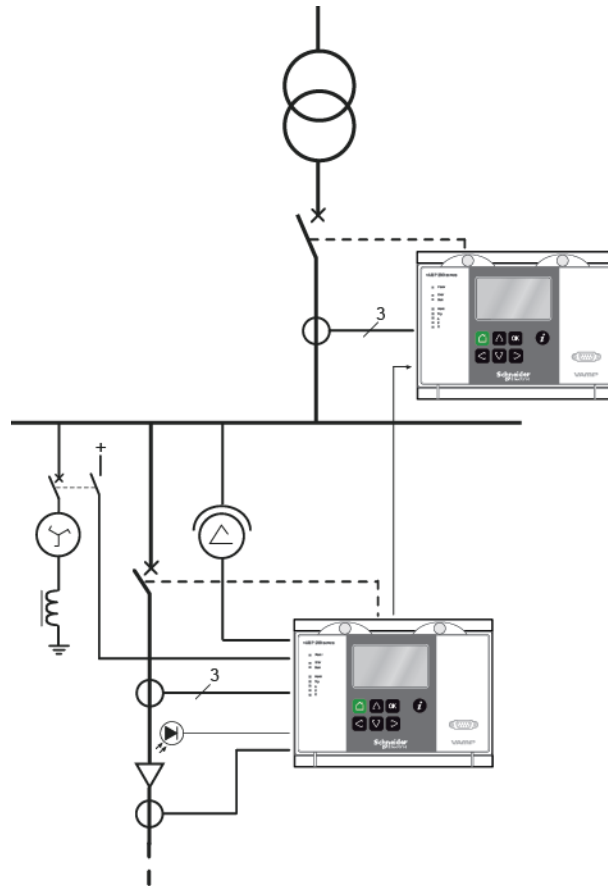


Figure 10.1: VAMP feeder and motor devices used in substation feeder protection

The feeder device includes three-phase overcurrent protection, directional ground fault protection and fast arc detection. At the incoming feeder, the instantaneous stage $I>>>$ of the VAMP feeder devices is blocked with the start signal of the overcurrent stage. This helps prevent the trip signal if the fault occurs on the outgoing feeder.

For the directional function of ground fault function, the status information (on/off) of the Petersen coil is routed to one of the digital inputs of the feeder device so that either $I_{0\sin\phi}$ or $I_{0\cos\phi}$ function is obtained.

The function $I_{0\sin\phi}$ is used in isolated networks, and the function $I_{0\cos\phi}$ is used in resistance or resonant grounded networks.

Industrial feeder protection

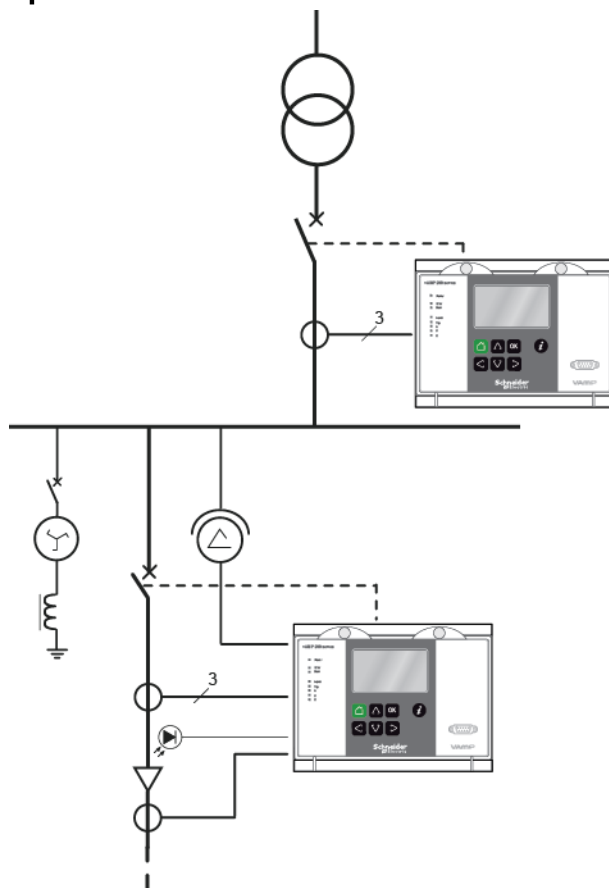


Figure 10.2: VAMP feeder and motor devices used in cable protection of an industry plant network

Directional ground fault protection and three-phase overcurrent protection is required in a cable feeder. Furthermore, the thermal stage can be used to protect the cable against overloading. This example also includes fast arc detection.

Parallel line protection


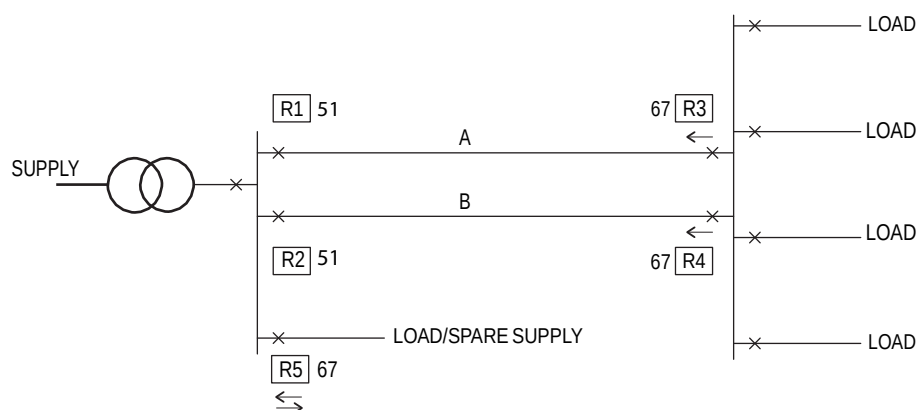


Figure 10.3: Feeder and motor device used for protection of parallel lines.

Figure 10.3 shows two parallel lines, A and B, protected with (51) overcurrent relays R1, R2, R3 and R4. The relays R3 and R4 are directional (67).

If there is a fault in one of the lines, only the detected faulty line will be switched off because of the direction functions of the relays R3 and R4. A detailed schematic of e.g. the relay R3 is shown in Figure 10.4.

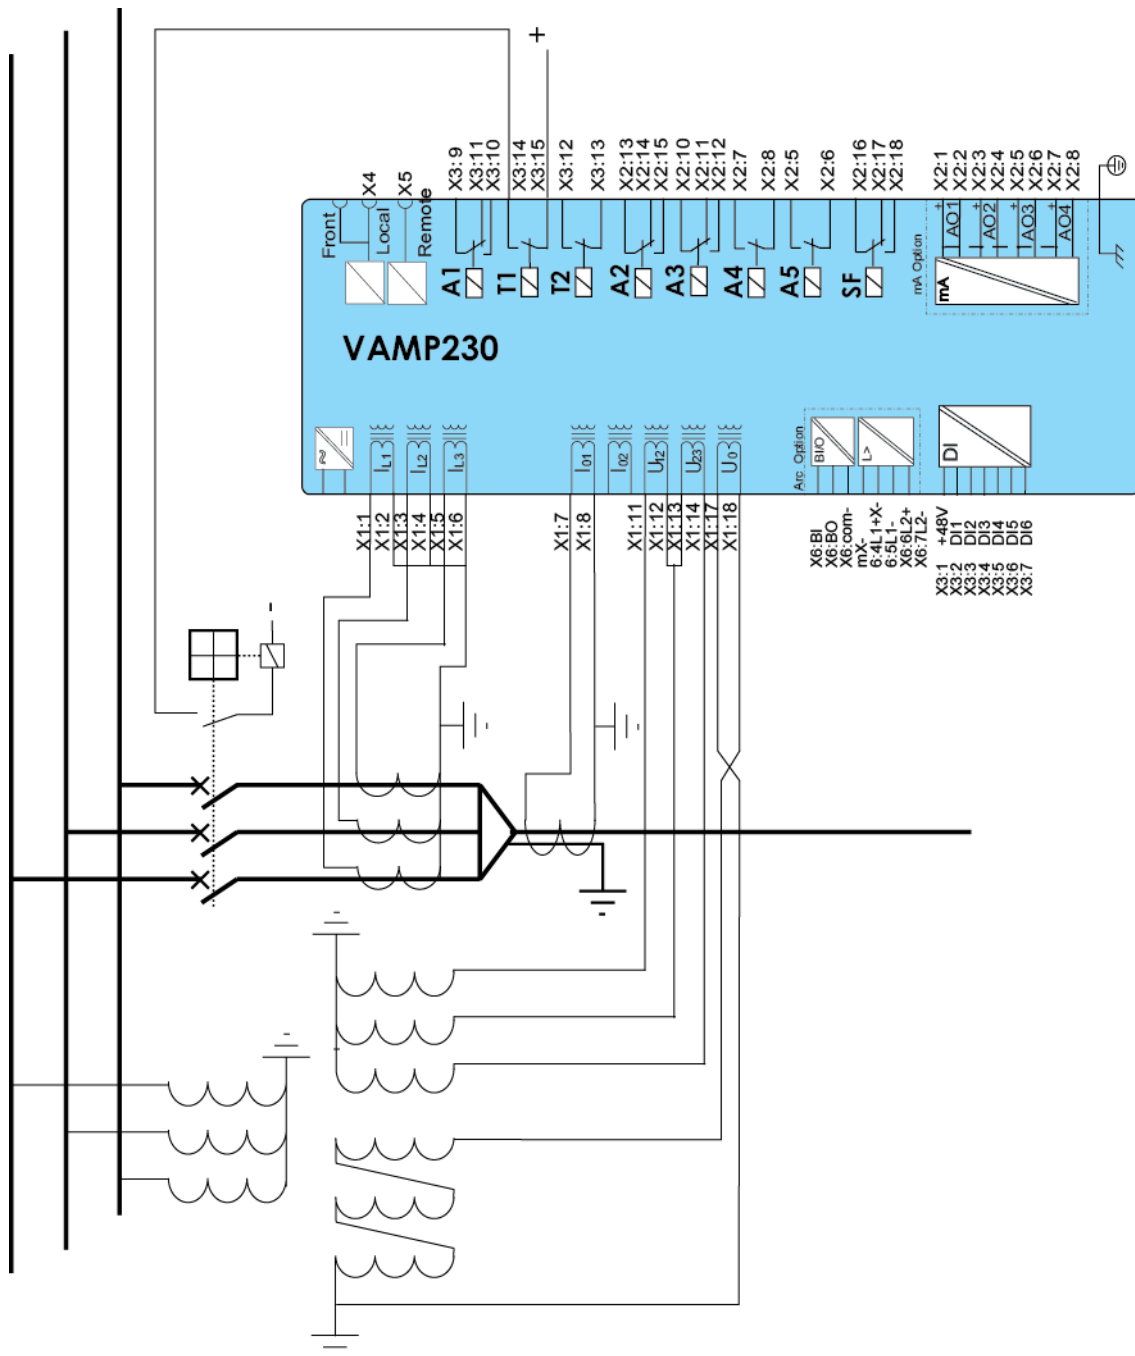

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, NOM-029-STPS-2011, and CSA Z462.
- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off power to the busway and equipment before installing, removing, or working on this equipment.
- The successful operation of this equipment depends upon proper handling, installation, operation, and maintenance.

Failure to follow these instructions can result in death or serious injury.

Figure 10.4: Example connection using VAMP 230, same connection applies for VAMP 255. Both short-circuits and ground-faults will be detected. The outgoing line is one of several parallel lines or the line is feeding a ring network.

Ring network protection

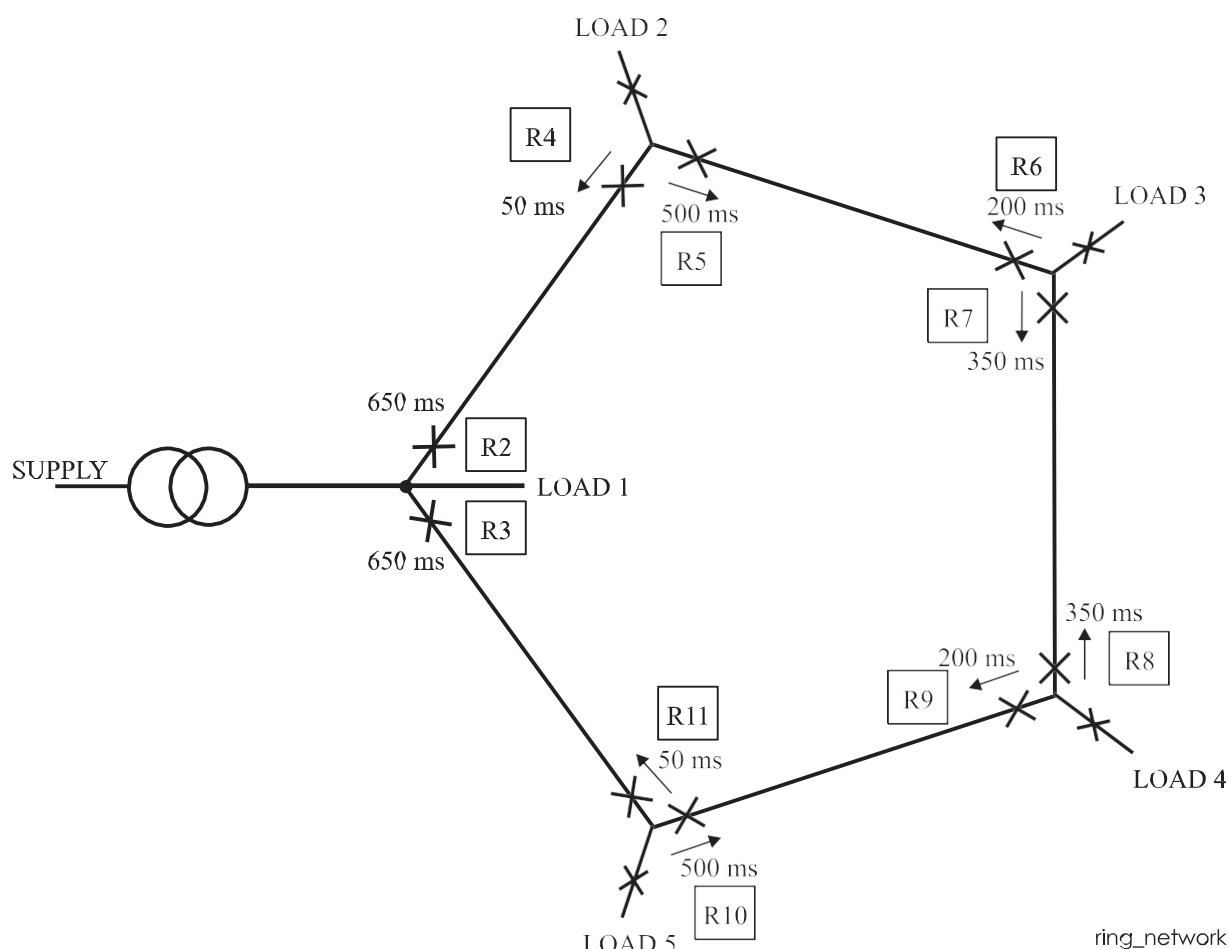


Figure 10.5: Feeder terminals used for protection of ring main circuit with one feeding point.

Ring networks can be protected with complete selectivity using directional overcurrent relays as long as there is only one feeding point in the network. Figure 10.5 shows an example of a ring main with five nodes using one circuit breaker at each end of each line section (e.g. a ring main unit). When there is a short-circuit fault in any line section, only the detected faulty section will be disconnected. The calculating time in this example is 150 ms.

Trip circuit supervision

Trip circuit supervision is used to monitor the wiring from the protective device to a circuit breaker. This circuit is unused most of the time, but when a protection device detects a fault in the network, it is too late to detect that the circuit breaker cannot be tripped because of an open trip circuitry.

The digital inputs of the device can be used for trip circuit monitoring. The dry digital inputs are most suitable for trip circuit supervision. The first six digital inputs of VAMP 200 series relays are not dry and an auxiliary miniature relay is needed, if these inputs are used for trip circuit supervision.

Also the closing circuit can be supervised, using the same principle.

In many applications the optimum digital inputs for trip circuit supervision are the optional inputs DI19 and DI20. They don't share their terminals with any other digital inputs.

Trip circuit supervision with one digital input

The benefits of this scheme is that only one digital inputs is needed and no extra wiring from the relay to the circuit breaker (CB) is needed. Also supervising a 24 Vdc trip circuit is possible.

The drawback is that an external resistor is needed to supervise the trip circuit on both CB positions. If supervising during the closed position only is enough, the resistor is not needed.

- The digital input is connected parallel with the trip contacts (Figure 10.6).
- The digital input is configured as Normal Closed (NC).
- The digital input delay is configured longer than maximum fault time to inhibit any superfluous trip circuit fault alarm when the trip contact is closed.
- The digital input is connected to a relay in the output matrix giving out any trip circuit alarm.
- The trip relay should be configured as non-latched. Otherwise, a superfluous trip circuit fault alarm will follow after the trip contact operates, and the relay remains closed because of latching.
- By utilizing an auxiliary contact of the CB for the external resistor, also the auxiliary contact in the trip circuit can be supervised.
- When using the dry digital inputs DI7 –, using the other inputs of the same group, sharing a common terminal, is limited.
- When using the wet digital inputs DI1 – DI6, an auxiliary relay is needed.

Using any of the dry digital inputs DI7 –

NOTE: In VAMP 230 only the optional digital inputs DI19 and DI20 are dry (see the ordering code for this option).

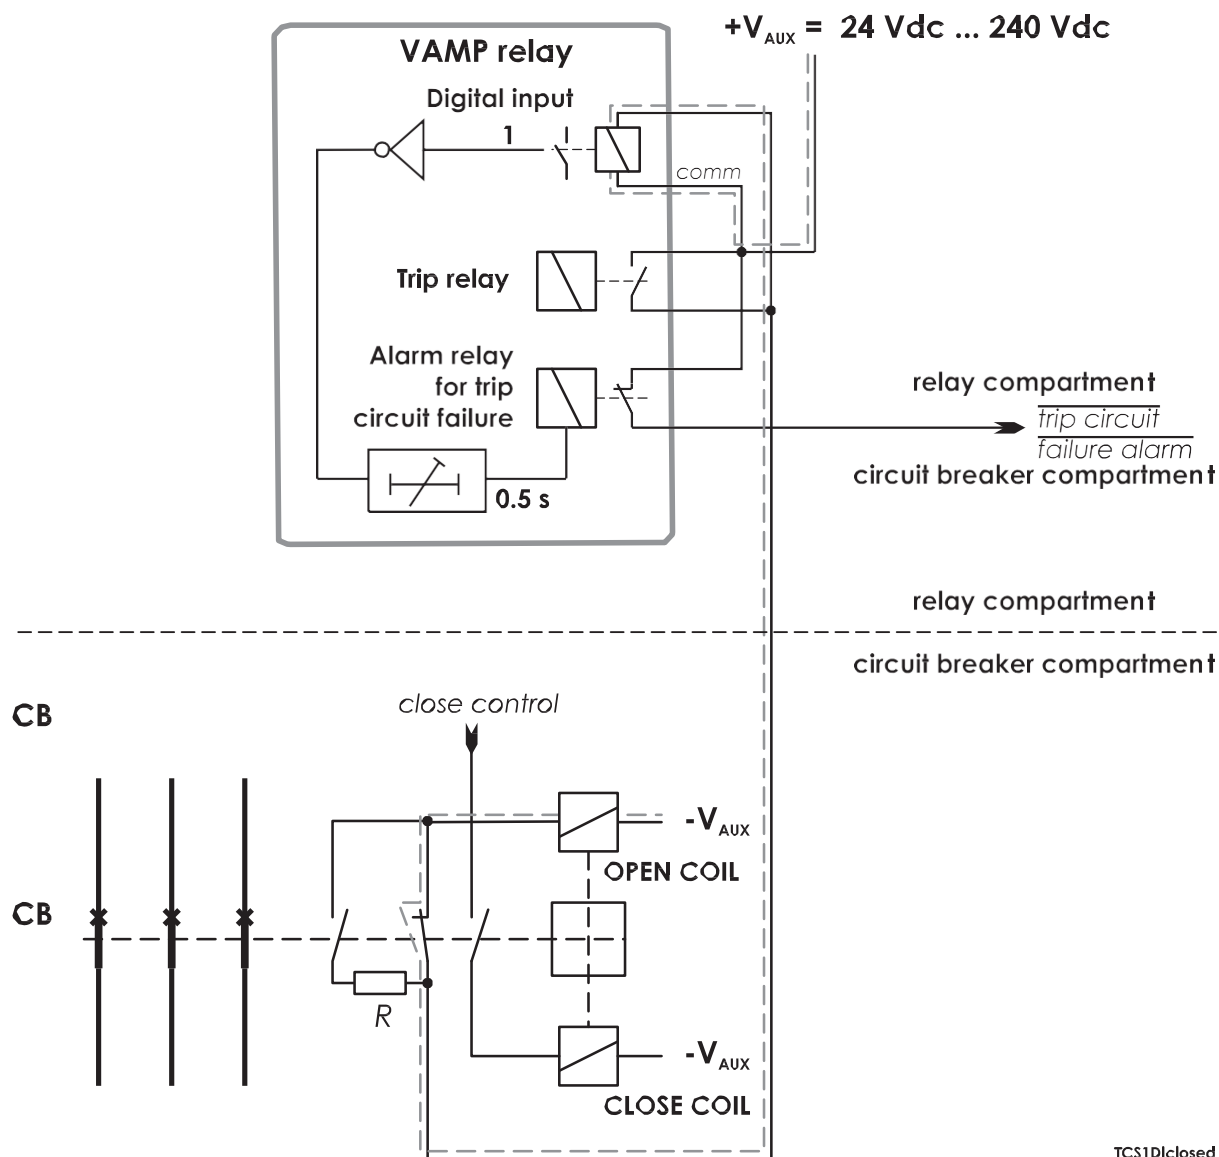


Figure 10.6: Trip circuit supervision using a single digital input and an external resistor *R*. The circuit breaker is in the closed position. The supervised circuitry in this CB position is double-lined. The digital input is in active state when the trip circuit is complete. This is applicable for dry inputs DI7 – DI20.

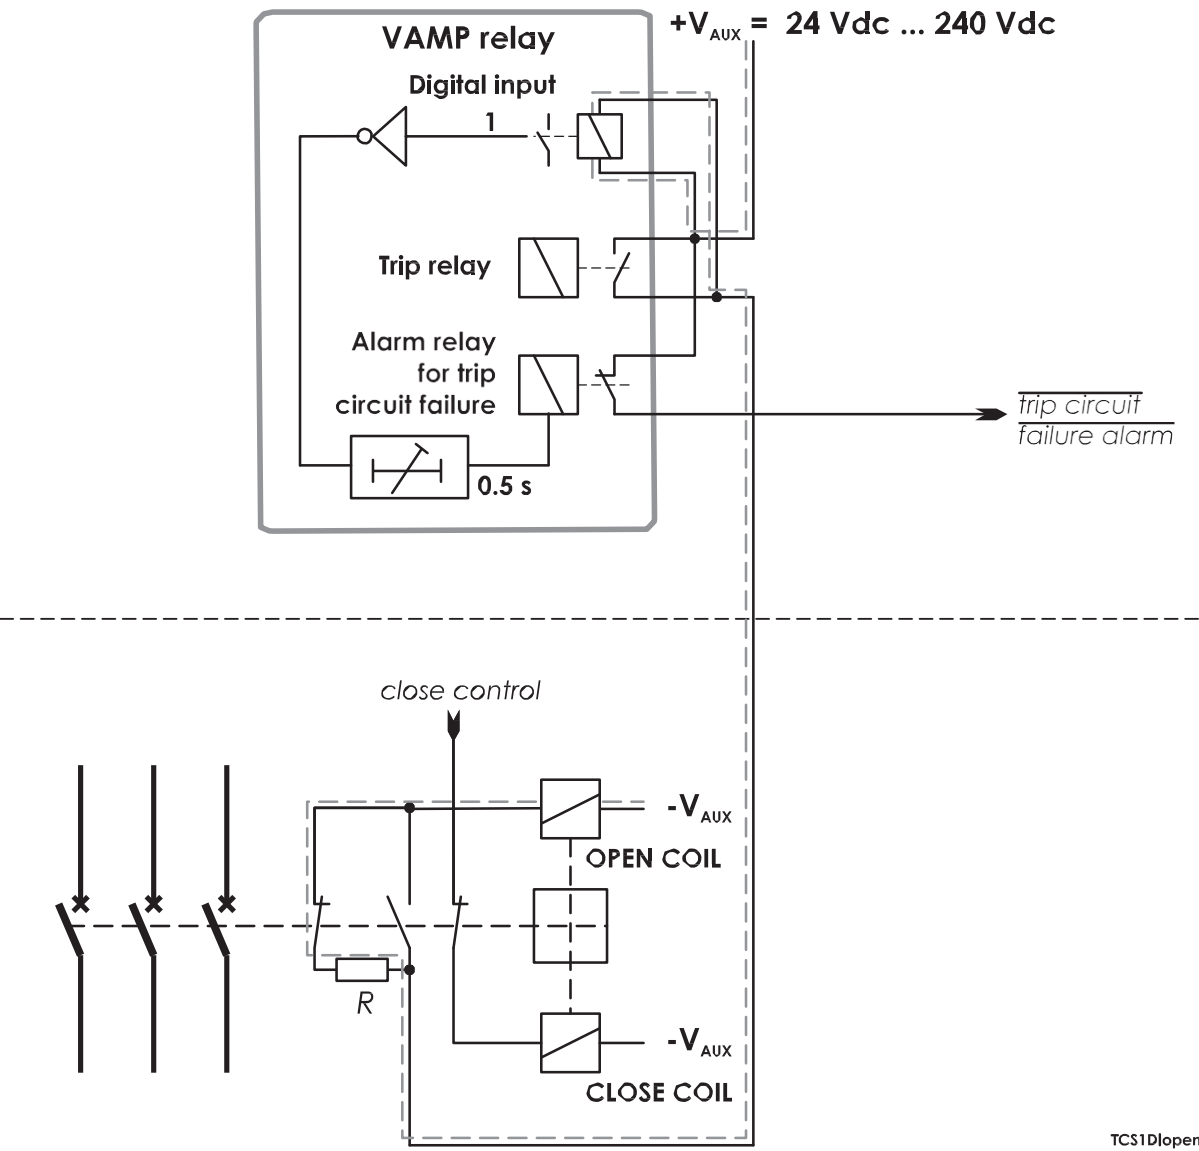


Figure 10.7: Trip circuit supervision using a single digital input, when the circuit breaker is in open position.

NOTE: If for example DI7 is used for trip circuit supervision, the usage of DI8 – DI14 is limited to the same circuitry sharing the V_{AUX} in the common terminal.

DIGITAL INPUTS								
DIGITAL INPUTS								
Input	State	Polarity	Delay	On Event	Off Event	Alarm display	Counters	
1	0	NO	0.20 s	On	On	On	0	
2	0	NO	0.00 s	On	On	On	0	
3	0	NO	0.00 s	On	On	On	0	
4	0	NO	0.00 s	On	On	On	0	
5	0	NO	0.00 s	On	On	On	0	
6	0	NO	0.00 s	On	On	On	0	
7	0	NC	0.5 s	Off	Off	Off	0	

Figure 10.8: An example of digital input DI7 configuration for trip circuit supervision with one dry digital input.

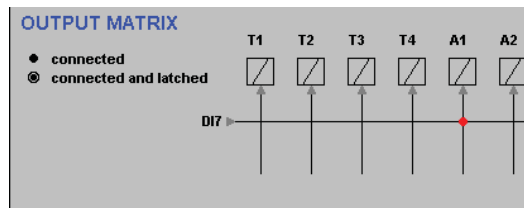


Figure 10.9: An example of output matrix configuration for trip circuit supervision with one digital input.

Example of dimensioning the external resistor R (using Phoenix Contact component connector - P-CO 1N4007/L-R – 3032460 and the Phoenix Disconnect terminal block - UT 2,5-TG –3046388 on at least terminals - UT 2,5-TG and - UT 4-TG):

$V_{AUX} =$ 110 Vdc –20 % + 10%, Auxiliary voltage with tolerance

$V_{DI} =$ 18 Vdc, Threshold voltage of the digital input

$I_{DI} =$ 3 mA, Typical current needed to activate the digital input including a 1 mA margin.

$P_{COIL} =$ 50 W, Rated power of the open coil of the circuit breaker. If this value is not known, 0 Ω can be used for the R_{COIL} .

$V_{MIN} =$ $U_{AUX} - 20 \% = 88 \text{ V}$

$V_{MAX} =$ $U_{AUX} + 10 \% = 121 \text{ V}$

$R_{COIL} =$ $U^2_{AUX}/P = 242 \Omega$.

Note: For NEMA, $U=V$.

The external resistance value is calculated using Equation 10.1.

Equation 10.1:

$$R = \frac{U_{MIN} - U_{DI} - I_{DI} \cdot R_{Coil}}{I_{DI}}$$

$$R = (88 - 18 - 0.003 \cdot 242) / 0.003 = 23.1 \text{ k}\Omega$$

(In practice the coil resistance has no effect.)

By selecting the next smaller standard size we get 22 kΩ.

The power rating for the external resistor is estimated using Equation 10.2 and Equation 10.3. The Equation 10.2 is for the CB open situation including a 100 % margin to limit the maximum temperature of the resistor.

Equation 10.2:

$$P = 2 \cdot I_{DI}^2 \cdot R$$

$$P = 2 \cdot 0.003^2 \cdot 22000 = 0.40 \text{ W}$$

Select the next bigger standard size, for example 0.5 W.

When the trip contacts are still closed and the CB is already open, the resistor has to withstand much higher power (Equation 10.3) for this short time.

Equation 10.3:

$$P = \frac{U_{MAX}^2}{R}$$

$$P = 121^2 / 22000 = 0.67 \text{ W}$$

A 0.5 W resistor will be enough for this short time peak power, too. However, if the trip relay is closed for longer time than a few seconds, a 1 W resistor should be used.

NOTE: The final resistor selection is dependent on the specifications of the application.

Using any of the non-dry digital inputs DI1-DI6

In this scheme an auxiliary relay is needed to connect the wet digital input to the trip circuit (Figure 10.10). The rated coil voltage of the auxiliary relay is selected according the rated auxiliary voltage used in the trip circuit. The operating voltage range of the relay should be as wide as possible to cover the tolerance of the auxiliary voltage.

In this application using the other wet inputs for other purposes is not limited unlike, when using the dry inputs.

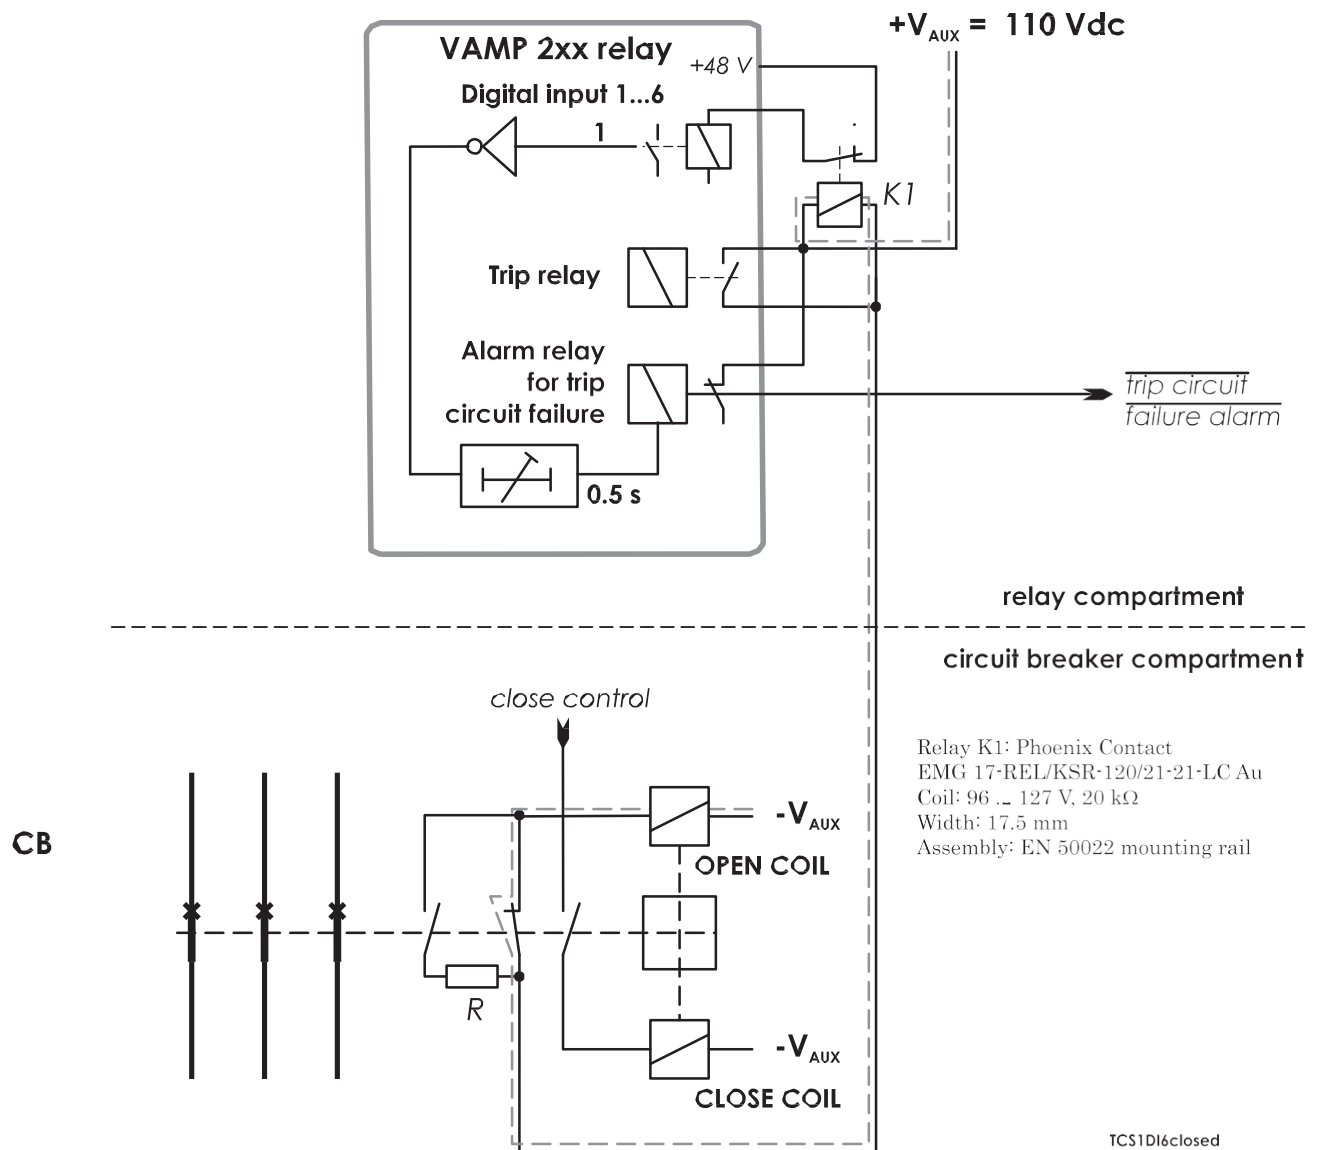


Figure 10.10: Trip circuit supervision using one of the VAMP 200 series internally wetted digital input (DI1 – DI6) and auxiliary relay K1 and an external resistor R. The circuit breaker is in the closed position. The supervised circuitry in this CB position is double-lined. The digital input is in active state when the trip circuit is complete.

DIGITAL INPUTS								
DIGITAL INPUTS								
Input	State	Polarity	Delay	On Event	Off Event	Alarm display	Counters	
1	0	NC	0.5 s	Off	Off	On	0	

Figure 10.11: An example of digital input DI1 configuration for trip circuit supervision with one wet digital input.

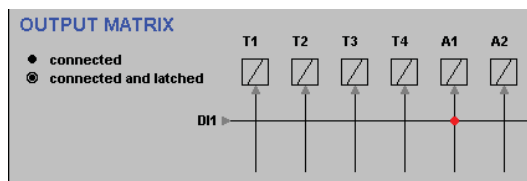


Figure 10.12: An example of output matrix configuration for trip circuit supervision with one wet digital input.

Example of dimensioning the external resistor R (using Phoenix Contact component connector - P-CO 1N4007/L-R – 3032460 and the Phoenix Disconnect terminal block - UT 2,5-TG – 3046388 on at least terminals - UT 2,5-TG and - UT 4-TG):

$$V_{AUX} = 110 \text{ Vdc} - 5 \% + 10\%$$

Auxiliary voltage with tolerance. Short time voltage dips more than 5 % are not critical from the trip circuit supervision point of view.

Relay type for the K1 auxiliary relay:

Phoenix Contact 2941455

EMG 17-REL/KSR-120/21-21-LC Au

$$V_{K1} = 120 \text{ Vac/dc} - 20 \% + 10\%$$

Coil voltage of the auxiliary relay K1

$$I_{K1} = 6 \text{ mA}$$

Nominal coil current of the auxiliary relay K1

$$P_{CBcoil} = 50 \text{ W}$$

Rated power of the open coil of the circuit breaker.

$$V_{MIN} = V_{AUX} - 5 \% = 104.5 \text{ V}$$

$$V_{MAX} = V_{AUX} + 10 \% = 121 \text{ V}$$

$$V_{K1MIN} = V_{K1} - 10 \% = 96 \text{ V}$$

$$R_{K1Coil} = V_{K1} / I_{K1} = 20 \text{ k}\Omega.$$

$$I_{K1MIN} = V_{K1MIN} / R_{K1Coil} = 4.8 \text{ mA}$$

$$I_{K1MAX} = V_{K1MAX} / R_{K1Coil} = 6.1 \text{ mA}$$

$$R_{CBCoil} = U^2_{AUX} / P = 242 \text{ }\Omega \text{ (for NEMA, } U=V)$$

The external resistance value is calculated using Equation 10.4.

Equation 10.4:

$$R = \frac{V_{MIN} - V_{K1Min}}{I_{K1Min}} + R_{Coil}$$

$$R = (104.5 - 96)/0.0048 - 242 = 1529 \, \Omega$$

By selecting the next smaller standard size we get 1.5 kΩ.

The power rating for the external resistor is calculated using Equation 10.5. This equation includes a 100 % margin to limit the maximum temperature of the resistor, because modern resistors are extremely hot at their rated maximum power.

Equation 10.5:

$$P = 2 \cdot I_{K1Max}^2 \cdot R$$

$$P = 2 \cdot 0.0061^2 \cdot 1500 = 0.11 \, W$$

Select the next bigger standard size, for example 0.5 W.

When the trip contacts are still closed and the CB is already open, the resistor has to withstand much higher power (Equation 10.3) for this short time.

$$P = 121^2/1500 = 9.8 \, W$$

A 1 W resistor should be selected to withstand this short time peak power. However, if the trip relay can be closed for longer time than a few seconds, a 20 W resistor should be used.

NOTE: The final resistor selection is dependent on the specifications of the application.


Trip circuit supervision with two digital inputs

The benefits of this scheme is that no external resistor is needed.

The drawbacks are, that two digital inputs from two separate groups are needed and two extra wires from the relay to the CB compartment is needed. Additionally, the minimum allowed auxiliary voltage is 48 Vdc, which is more than twice the threshold voltage of the dry digital input, because when the CB is in open position, the two digital inputs are in series.

- The first digital input is connected parallel with the auxiliary contact of the open coil of the circuit breaker.
- Another auxiliary contact is connected in series with the circuitry of the first digital input. This makes it possible to supervise also the auxiliary contact in the trip circuit.
- The second digital input is connected in parallel with the trip contacts.
- Both inputs are configured as normal closed (NC).
- The user's programmable logic is used to combine the digital input signals with an AND port. The delay is configured longer than maximum fault time to inhibit any superfluous trip circuit fault alarm when the trip contact is closed.
- The output from the logic is connected to a relay in the output matrix giving out any trip circuit alarm.
- The trip relay should be configured as non-latched. Otherwise, a superfluous trip circuit detected fault alarm will follow after the trip contact operates, and the relay remains closed because of latching.
- Both digital inputs must have their own common potential. Using the other digital inputs in the same group as the upper DI in the Figure 10.13 is not possible in most applications. Using the other digital inputs in the same group as the lower DI in the Figure 10.13 is limited, because the whole group will be tied to the auxiliary voltage V_{AUX} .

NOTE: In many applications the optimum digital inputs for trip circuit supervision are the optional inputs DI19 and DI20 because they don't share their terminals with any other digital inputs.

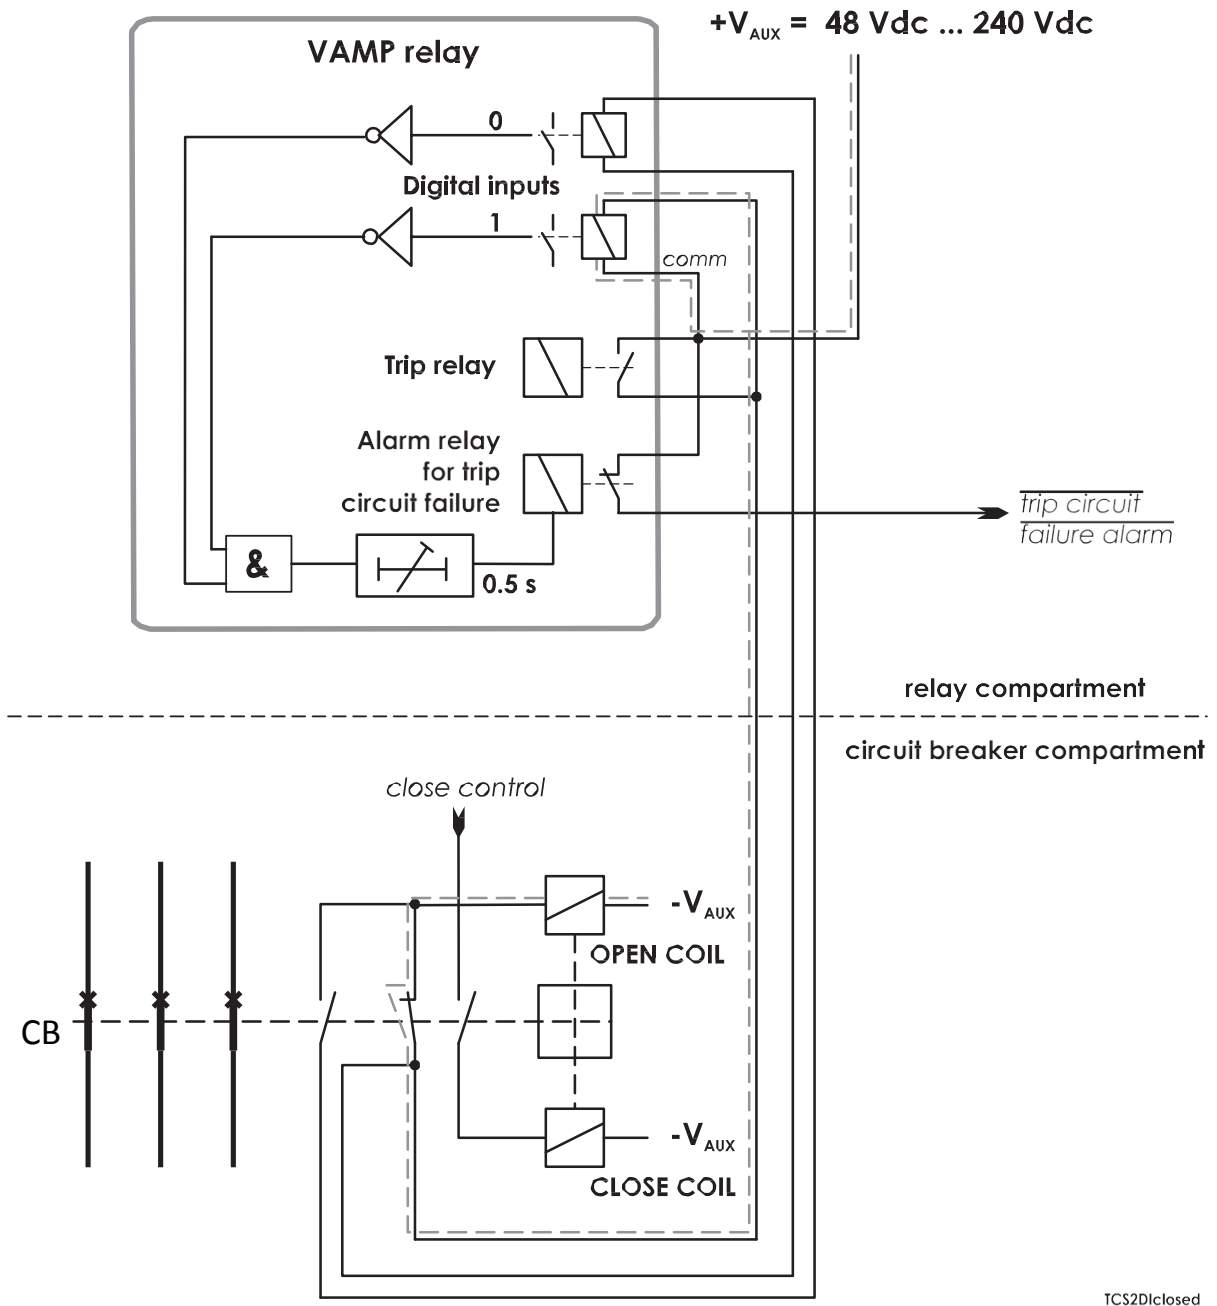

TCS2DIclosed

Figure 10.13: Trip circuit supervision with two digital inputs. The CB is closed. The supervised circuitry in this CB position is double-lined. The digital input is in active state when the trip circuit is complete. This is applicable for dry inputs DI7 – D20 only.

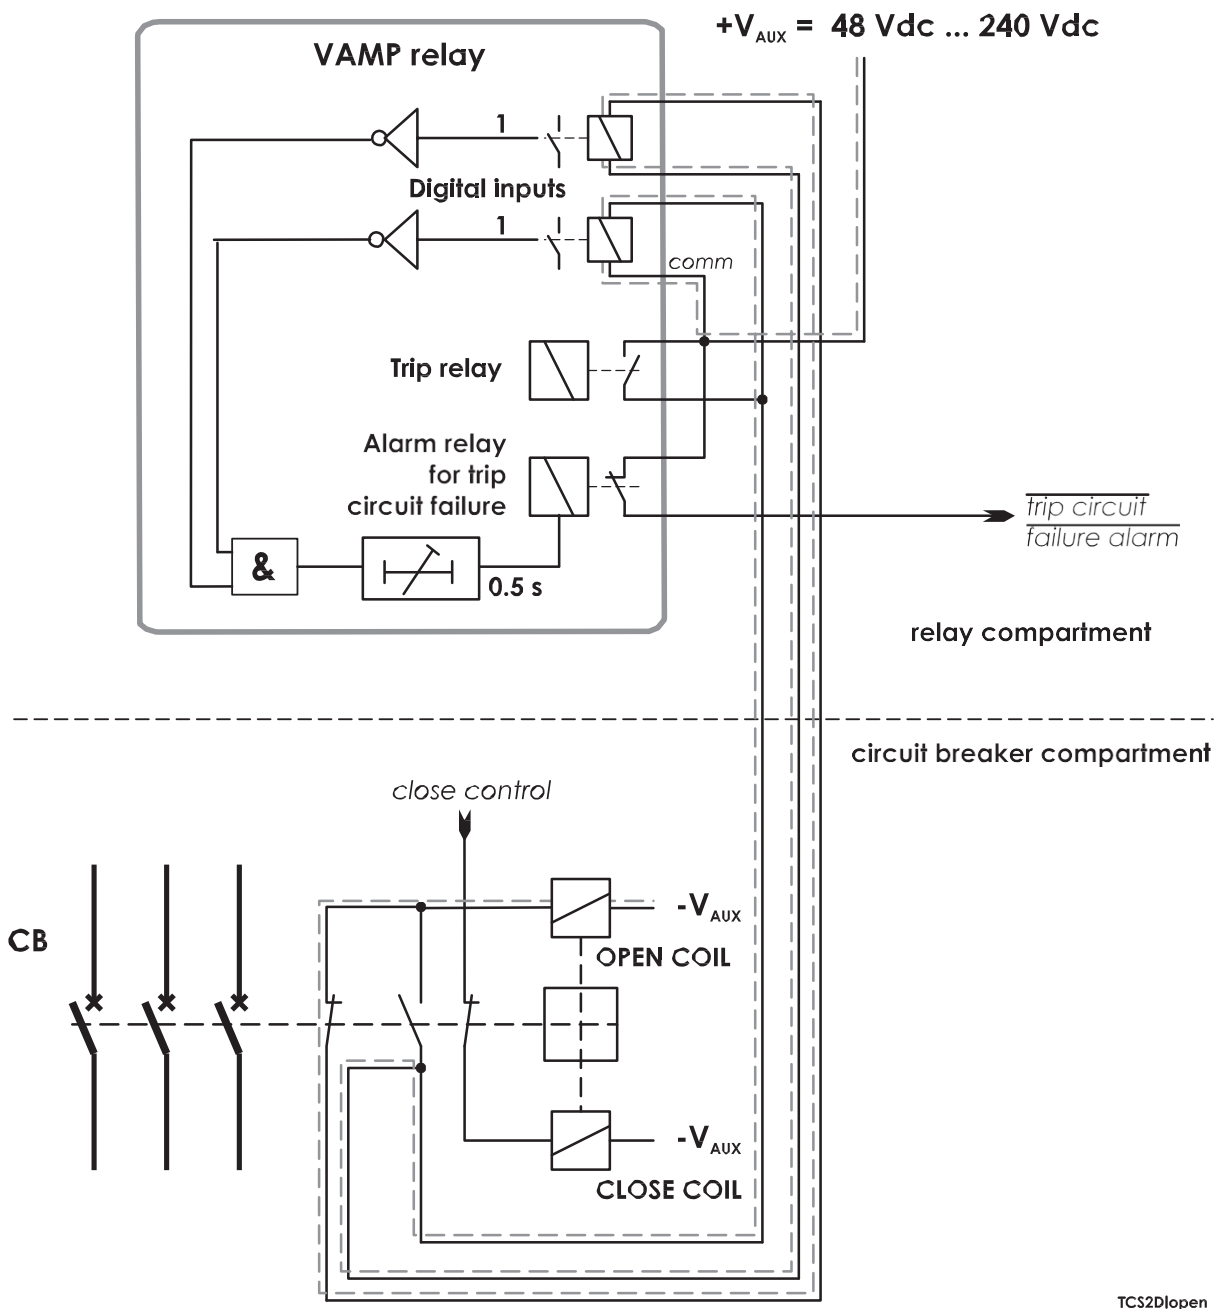


Figure 10.14: Trip circuit supervision with two digital inputs. The CB is in the open position. The two digital inputs are now in series.

NOTE: If for example DI13 and DI7 are used as the upper and lower digital inputs in the Figure 10.14, the usage of DI8-DI14 is limited to the same circuitry sharing the V_{AUX} in the common terminal and the DI14-DI18 cannot be used, because they share the same common terminal with DI13.

DIGITAL INPUTS							
Input	State	Polarity	Delay	On Event	Off Event	Alarm display	Counters
1	0	NO	0.00 s	On	On	On	0
2	0	NO	0.00 s	On	On	On	0
3	0	NO	0.00 s	On	On	On	0
4	0	NO	0.00 s	On	On	On	0
5	0	NO	0.00 s	On	On	On	0
6	0	NO	0.00 s	On	On	On	0
7	0	NC	0.00 s	Off	Off	Off	0
8	0	NO	0.00 s	On	On	On	0
9	0	NO	0.00 s	On	On	On	0
10	0	NO	0.00 s	On	On	On	0
11	0	NO	0.00 s	On	On	On	0
12	0	NO	0.00 s	On	On	On	0
13	0	NC	0.00 s	Off	Off	Off	0

Figure 10.15: An example of digital input configuration for trip circuit supervision with two dry digital inputs DI7 and DI13.

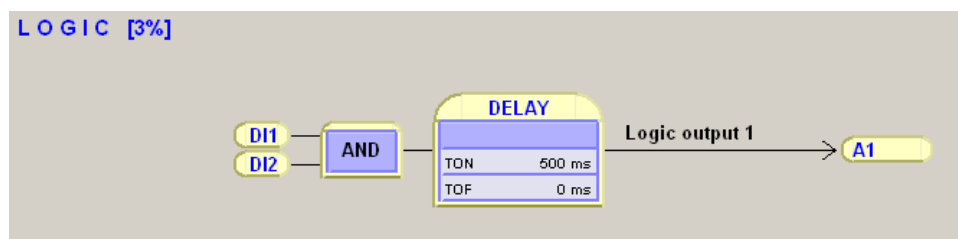


Figure 10.16: An example of logic configuration for trip circuit supervision with two dry digital inputs DI1 and DI2.

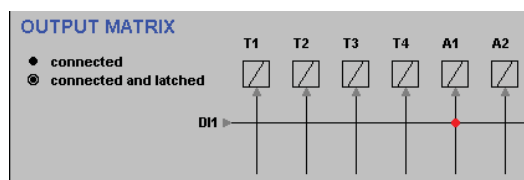


Figure 10.17: An example of output matrix configuration for trip circuit supervision with two digital inputs.

Section 11: Connections

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, NOM-029-STPS-2011, and CSA Z462.
- This unit must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this unit before working on or inside the unit.
- Always use a properly rated voltage sensing device to confirm that the power is off.
- A live current transformer secondary circuit must not be opened without turning off the primary side of the transformer and short circuiting transformer secondary circuits first.
- Replace all devices, doors and covers before turning on power to this unit.

Failure to follow these instructions will result in death or serious injury.

Rear panel

VAMP 255

Note: L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

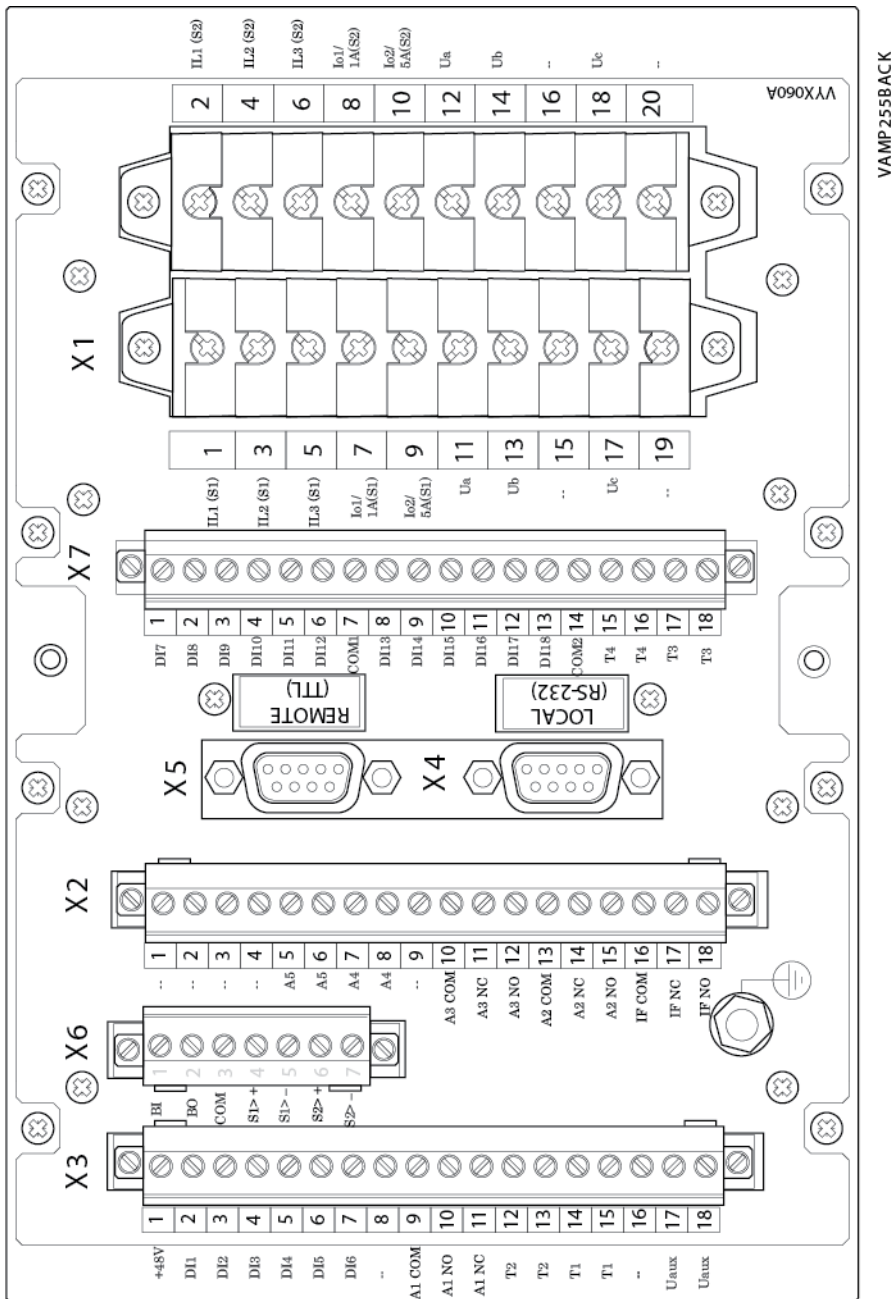


Figure 11.1: Connections on the rear panel of the VAMP 255

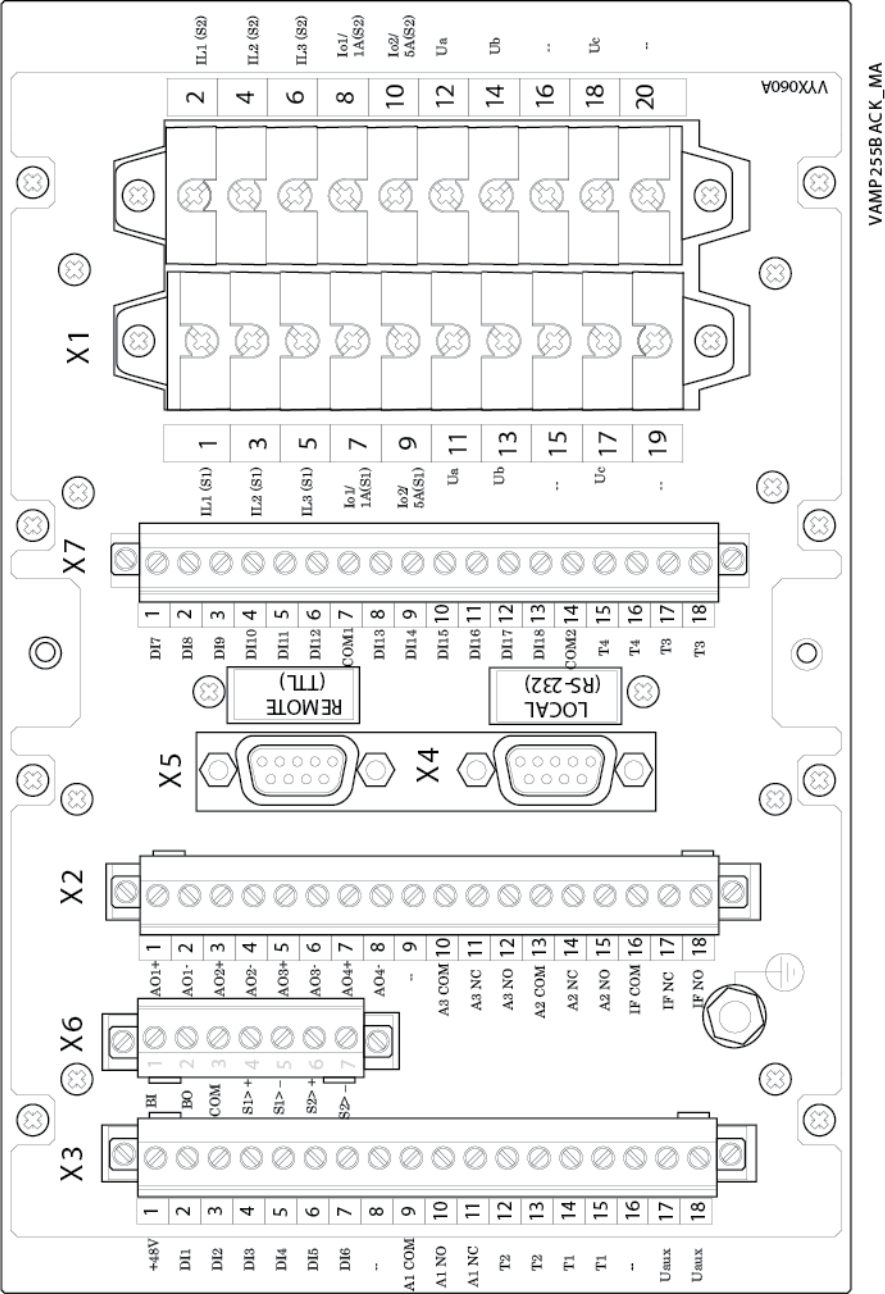


Figure 11.2: 2 Connections on the rear panel of the VAMP 255 with mA option.

The feeder and motor manager VAMP 255, with and without the optional analog outputs, is connected to the protected object through the following measuring and control connections:

Terminal X1 left side


	No	Symbol	Description
1	1	IL1(S1)	Phase current L1 [*] (S1)
3	3	IL2(S1)	Phase current L2 [*] (S1)
5	5	IL3(S1)	Phase current L3 [*] (S1)
7	7	Io1/1A(S1)	Residual current Io1(S1)
9	9	Io2/5A(S1)	Residual current Io2(S1)
11	11	Ua	See the section Voltage measurement modes
13	13	Ub	See the section Voltage measurement modes
15	15	--	--
17	17	Uc	See the section Voltage measurement modes
19	19	--	--

Terminal X1 right side

	No	Symbol	Description
2	2	IL1(S2)	Phase current L1 [*] (S2)
4	4	IL2(S2)	Phase current L2 [*] (S2)
6	6	IL3(S2)	Phase current L3 [*] (S2)
8	8	Io1/1A(S2)	Residual current Io1 (S2)
10	10	Io2/5A(S2)	Residual current Io2 (S2)
12	12	Ua	See the section Voltage measurement modes
14	14	Ub	See the section Voltage measurement modes
16	16	--	--
18	18	Uc	See the section Voltage measurement modes
20	20	--	--

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Terminal X2

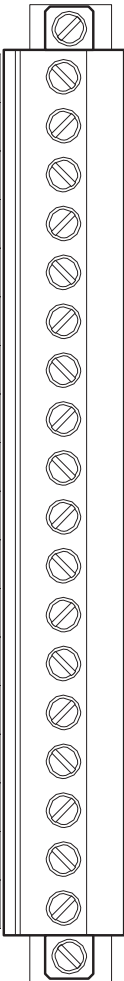		No	Symbol	Description
1		1	--	--
2		2	--	--
3		3	--	--
4		4	--	--
5		5	A5	Alarm relay 5
6		6	A5	Alarm relay 5
7		7	A4	Alarm relay 4
8		8	A4	Alarm relay 4
9		9	--	--
10		10	A3 COM	Alarm relay 3, common connector
11		11	A3 NC	Alarm relay 3, normal closed connector
12		12	A3 NO	Alarm relay 3, normal open connector
13		13	A2 COM	Alarm relay 2, common connector
14		14	A2 NC	Alarm relay 2, normal closed connector
15		15	A2 NO	Alarm relay 2, normal open connector
16		16	SF COM	Detected internal fault relay, common connector
17		17	SF NC	Detected internal fault relay, normal closed connector
18		18	SF NO	Detected internal fault relay, normal open connector

Terminal X2 with analog output

	No	Symbol	Description
1	1	AO1+	Analog output 1, positive connector
2	2	AO1-	Analog output 1, negative connector
3	3	AO2+	Analog output 2, positive connector
4	4	AO2-	Analog output 2, negative connector
5	5	AO3+	Analog output 3, positive connector
6	6	AO3-	Analog output 3, negative connector
7	7	AO4+	Analog output 4, positive connector
8	8	AO4-	Analog output 4, negative connector
9	9	--	--
10	10	A3 COM	Alarm relay 3, common connector
11	11	A3 NC	Alarm relay 3, normal closed connector
12	12	A3 NO	Alarm relay 3, normal open connector
13	13	A2 COM	Alarm relay 2, common connector
14	14	A2 NC	Alarm relay 2, normal closed connector
15	15	A2 NO	Alarm relay 2, normal open connector
16	16	SF COM	Detected internal fault relay, common connector
17	17	SF NC	Detected internal fault relay, normal closed connector
18	18	SF NO	Detected internal fault relay, normal open connector

Terminal X3

	No	Symbol	Description
1	1	+48V	Internal control voltage for digital inputs 1 – 6
2	2	DI1	Digital input 1
3	3	DI2	Digital input 2
4	4	DI3	Digital input 3
5	5	DI4	Digital input 4
6	6	DI5	Digital input 5
7	7	DI6	Digital input 6
8	8	--	--
9	9	A1 COM	Alarm relay 1, common connector
10	10	A1 NO	Alarm relay 1, normal open connector
11	11	A1 NC	Alarm relay 1, normal closed connector
12	12	T2	Trip relay 2
13	13	T2	Trip relay 2
14	14	T1	Trip relay 1
15	15	T1	Trip relay 1
16	16	--	--
17	17	Uaux	Auxiliary voltage
18	18	Uaux	Auxiliary voltage

Terminal X7


	No	Symbol	Description
	1	DI7	Digital input 7
	2	DI8	Digital input 8
	3	DI9	Digital input 9
	4	DI10	Digital input 10
	5	DI11	Digital input 11
	6	DI12	Digital input 12
	7	COM1	Common potential of digital inputs 7 - 12
	8	DI13	Digital input 13
	9	DI14	Digital input 14
	10	DI15	Digital input 15
	11	DI16	Digital input 16
	12	DI17	Digital input 17
	13	DI18	Digital input 18
	14	COM2	Common potential of digital inputs 13 – 18
	15	T4	Trip relay 4
	16	T4	Trip relay 4
	17	T3	Trip relay 3
	18	T3	Trip relay 3

Terminal X6

	No	Symbol	Description
	1	BI	External arc light input
	2	BO	Arc light output
	3	COM	Common connector of arc light I/O
	4	S1>+	Arc sensor 1, positive connector *
	5	S1>-	Arc sensor 1, negative connector *
	6	S2>+	Arc sensor 2, positive connector *
	7	S2>-	Arc sensor 2, negative connector *

* Arc sensor itself is polarity free

Terminal X6 with DI19/DI20 option

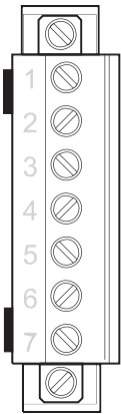

No	Symbol	Description Digital input
1	DI19	19
2	DI19	Digital input 19
3	DI20	Digital input 20
4	DI20	Digital input 20
5	--	--
6	S1>+	Arc sensor 1, positive connector * Arc sensor
7	S1>-	1, negative connector *

* Arc sensor itself is polarity free

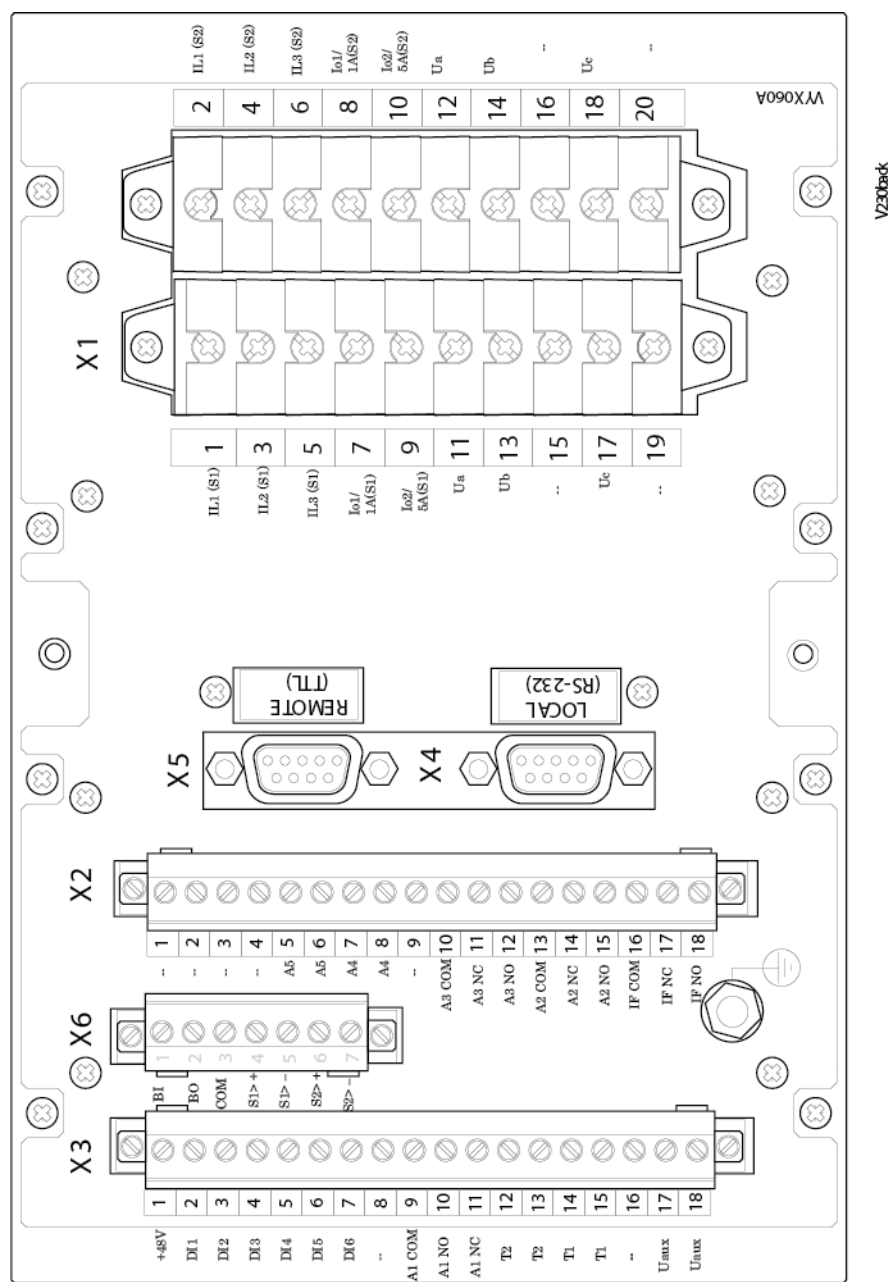


Figure 11.3: Connections on the rear panel of the VAMP 230

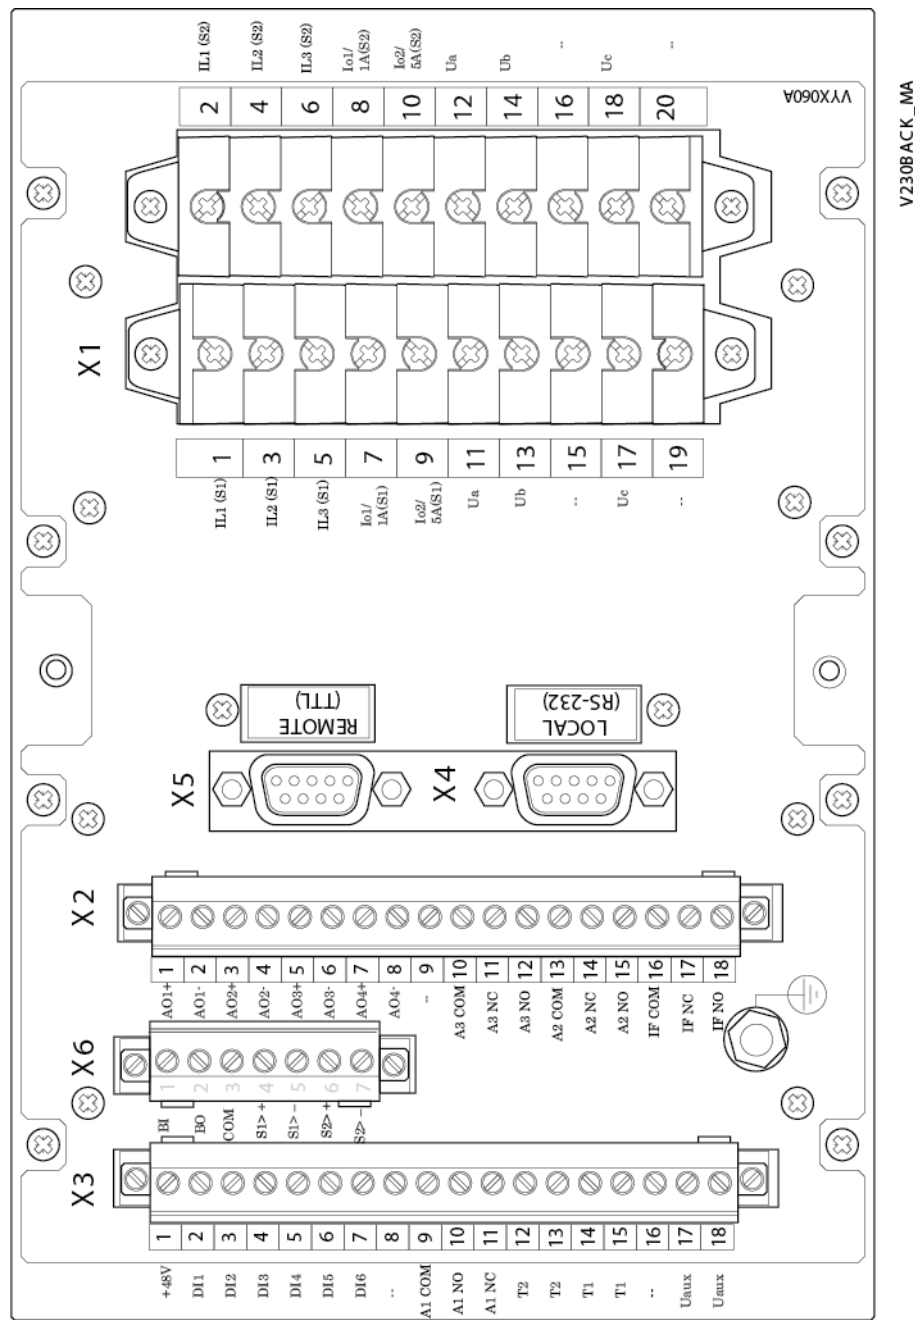


Figure 11.4: Connections on the rear panel of the VAMP 230 with mA option

The feeder and motor manager VAMP 230, with and without the optional analog outputs, is connected to the protected object through the following measuring and control connections:

Terminal X1 left side


	No	Symbol	Description
1	1	IL1(S1)	Phase current L1* (S1)
3	3	IL2(S1)	Phase current L2* (S1)
5	5	IL3(S1)	Phase current L3* (S1)
7	7	Io1/1A(S1)	Residual current Io1(S1)
9	9	Io2/5A(S1)	Residual current Io2(S1)
11	11	Ua	See the section Voltage measurement modes
13	13	Ub	See the section Voltage measurement modes
15	15	--	--
17	17	Uc	See the section Voltage measurement modes
19	19	--	--

Terminal X1 right side

	No	Symbol	Description
2	2	IL1(S2)	Phase current L1* (S2)
4	4	IL2(S2)	Phase current L2* (S2)
6	6	IL3(S2)	Phase current L3* (S2)
8	8	Io1/1A(S2)	Residual current Io1 (S2)
10	10	Io2/5A(S2)	Residual current Io2 (S2)
12	12	Ua	See the section Voltage measurement modes
14	14	Ub	See the section Voltage measurement modes
16	16	--	--
18	18	Uc	See the section Voltage measurement modes
20	20	--	--

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.


Terminal X2

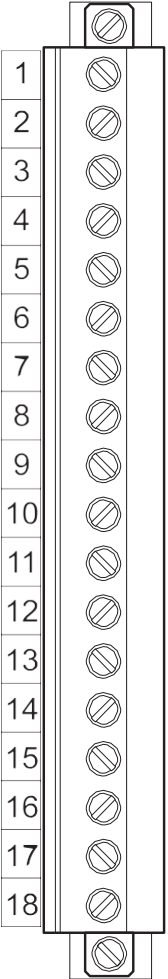		No	Symbol	Description
1		1	--	--
2		2	--	--
3		3	--	--
4		4	--	--
5		5	A5	Alarm relay 5
6		6	A5	Alarm relay 5
7		7	A4	Alarm relay 4
8		8	A4	Alarm relay 4
9		9	--	--
10		10	A3 COM	Alarm relay 3, common connector
11		11	A3 NC	Alarm relay 3, normal closed connector
12		12	A3 NO	Alarm relay 3, normal open connector
13		13	A2 COM	Alarm relay 2, common connector
14		14	A2 NC	Alarm relay 2, normal closed connector
15		15	A2 NO	Alarm relay 2, normal open connector
16		16	SF COM	Detected internal fault relay, common connector
17		17	SF NC	Detected internal fault relay, normal closed connector
18		18	SF NO	Detected internal fault relay, normal open connector


Terminal X2 with analog output

	No	Symbol	Description
1	1	AO1+	Analog output 1, positive connector
2	2	AO1-	Analog output 1, negative connector
3	3	AO2+	Analog output 2, positive connector
4	4	AO2-	Analog output 2, negative connector
5	5	AO3+	Analog output 3, positive connector
6	6	AO3-	Analog output 3, negative connector
7	7	AO4+	Analog output 4, positive connector
8	8	AO4-	Analog output 4, negative connector
9	9	--	--
10	10	A3 COM	Alarm relay 3, common connector
11	11	A3 NC	Alarm relay 3, normal closed connector
12	12	A3 NO	Alarm relay 3, normal open connector
13	13	A2 COM	Alarm relay 2, common connector
14	14	A2 NC	Alarm relay 2, normal closed connector
15	15	A2 NO	Alarm relay 2, normal open connector
16	16	SF COM	Detected internal fault relay, common connector
17	17	SF NC	Detected internal fault relay, normal closed connector
18	18	SF NO	Detected internal fault relay, normal open connector

Terminal X3

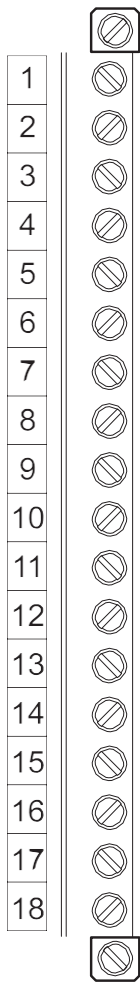
	No	Symbol	Description
	1	+48V	Internal control voltage for digital inputs 1 – 6
2	2	DI1	Digital input 1
3	3	DI2	Digital input 2
4	4	DI3	Digital input 3
5	5	DI4	Digital input 4
6	6	DI5	Digital input 5
7	7	DI6	Digital input 6
8	8	--	--
9	9	A1 COM	Alarm relay 1, common connector
10	10	A1 NO	Alarm relay 1, normal open connector
11	11	A1 NC	Alarm relay 1, normal closed connector
12	12	T2	Trip relay 2
13	13	T2	Trip relay 2
14	14	T1	Trip relay 1
15	15	T1	Trip relay 1
16	16	--	--
17	17	Uaux	Auxiliary voltage
18	18	Uaux	Auxiliary voltage

Terminal X6

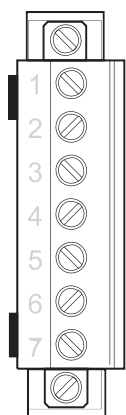	No	Symbol	Description
	1	BI	External arc light input
2	2	BO	Arc light output
3	3	COM	Common connector of arc light I/O
4	4	S1>+	Arc sensor 1, positive connector *
5	5	S1>-	Arc sensor 1, negative connector *
6	6	S2>+	Arc sensor 2, positive connector *
7	7	S2>-	Arc sensor 2, negative connector *

* Arc sensor itself is polarity free

Terminal X6 with DI19/DI20 option

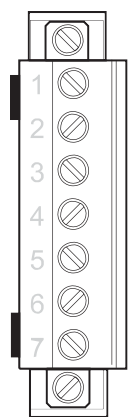	No	Symbol	Description
	1	DI19	Digital input 19
	2	DI19	Digital input 19
	3	DI20	Digital input 20
	4	DI20	Digital input 20
	5	--	--
	6	S1>+	Arc sensor 1, positive connector *
	7	S1>-	Arc sensor 1, negative connector *

* Arc sensor itself is polarity free

Auxiliary voltage

The external auxiliary voltage V_{AUX} (standard 40 – 265 V ac/dc or optional 18 – 36 Vdc) for the terminal is connected to the terminals X3: 17-18.

NOTE: When optional 18 – 36 Vdc power module is used, the polarity is as follows: X3:17 negative, X3:18 positive.

Serial communication connection

The pin assignments of communication connectors including internal communication converters are presented in the following figures and tables.

Front panel connector

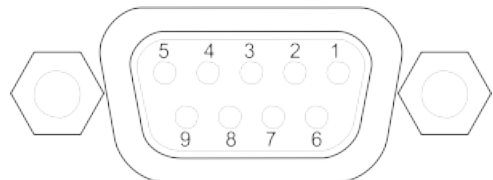
	Pin	RS232 signal
	1	Not connected
	2	Rx in
	3	Tx out
	4	DTR out (+8 V)
	5	GND
	6	DSR in (activates this port and disables the X4 RS232 port)
	7	RTS in (Internally connected to pin 8)
	8	CTS out (Internally connected to pin 7)
	9	IRIG-B input

Figure 11.5: Pin numbering of the front panel D9S connector

NOTE: DSR must be connected to DTR to activate the front panel connector and disable the rear panel X4 RS232 port. (The other port in the same X4 connector will not be disabled.)

Rear panel connector X5 (REMOTE)

 
 
The X5 remote port communication connector options are shown in Figure 11.6. The connector types are listed in Table 11.1.

 
Without any internal options, X5 is a TTL port for external converters. Some external converters (VSE) are attached directly to the rear panel and X5. Some other types (VEA, VPA) need various TTL/RS-232 converter cables. The available accessories are listed in Section 14: Order information.

 
2&4-wire galvanically isolated RS-485 (Figure 11.7), internal options for fiber optic (Figure 11.8), and Profibus (Figure 11.9) are available. See ordering code in Section 14: Order information.

Table 11.1: Physical interface and connector types of remote port X5 with various options. Serial interface (A) is the default.

Order Code	Communication interface	Connector type	Pin usage
A	Serial interface for external converters only (REMOTE port)	D9S	1 = reserved 2 = TX_out / TTL 3 = RX_in /TTL 4 = RTS out /TTL 7 = GND 9 = +8V out
B	Plastic fiber interface (REMOTE port)	HFBR-0500	
C	Profibus interface (REMOTE port)	D9S	3=RXD/TXD+/P 4=RTS 5= GND 6=+5V 8= RXD/TXD-/N
D	RS-485, isolated (REMOTE port)	screw terminal	1= Signal ground 2= Receiver - 3= Receiver + 4= Transmitter - 5= Transmitter +
E	Glass fiber interface (62.5/125 µm) (REMOTE port)	ST	
F	Plastic / glass (62.5/125 µm) fiber interface (REMOTE port)	HFBR-0500/ST	Plastic Rx Glass Tx
G	Glass (62.5/125 µm) / plastic fiber interface (REMOTE port)	ST/HFBR-0500	Glass Rx Plastic Tx

Order Code	Communication interface	Connector type	Pin usage
H	Ethernet interface and Serial interface for external converters only (REMOTE port)	D9S and RJ-45 	D-connector: 1 = reserved 2 = TX_out / TTL 3 = RX_in /TTL 4 = RTS out /TTL 7 = GND 9 = +8V out RJ-45 connector : 1=Transmit+ 2=Transmit- 3=Receive+ 4=Reserved 5=Reserved 6=Receive- 7=Reserved 8=Reserved
M	10Mbps Ethernet interface with IEC 61850 and Serial interface for external converters only (REMOTE port)	D9S and RJ-45 	D-connector: 1 = reserved 2 = TX_out / TTL 3 = RX_in /TTL 4 = RTS out /TTL 7 = GND 9 = +8V out RJ-45 connector : 1=Transmit+ 2=Transmit- 3=Receive+ 4=Reserved 5=Reserved 6=Receive- 7=Reserved 8=Reserved

Order Code	Communication interface	Connector type	Pin usage
O	100 Mbps Ethernet fiber interface with IEC 61850 and Serial interface for external converters only (REMOTE port)	D9S and LC 	D-connector: 1 = reserved 2 = TX_out / TTL 3 = RX_in /TTL 4 = RTS out /TTL 7 = GND 9 = +8V out Fiber connector: TX=Upper LC-connector RX=Lower LC-connector
P	100Mbps Ethernet interface with IEC 61850 and Serial interface for external converters only (REMOTE port)	D9S and RJ-45 	D-connector: 1 = reserved 2 = TX_out / TTL 3 = RX_in /TTL 4 = RTS out /TTL 7 = GND 9 = +8V out RJ-45 connector : 1=Transmit+ 2=Transmit- 3=Receive+ 4=Reserved 5=Reserved 6=Receive- 7=Reserved 8=Reserved
R	100 Mbps Ethernet fiber interface with IEC 61850	2 x LC 	LC-connector from top: -Port 2 Tx -Port 2 Rx -Port 1 Tx -Port 1 Rx

Order Code	Communication interface	Connector type	Pin usage
S	100Mbps Ethernet interface with IEC 61850	2 x RJ-45 	1=Transmit+ 2=Transmit- 3=Receive+ 4=Reserved 5=Reserved 6=Receive- 7=Reserved 8=Reserved

NOTE: In VAMP device, RS485 interfaces a positive voltage from Tx+ to Tx- or Rx+ to Rx- does correspond to the bit value “1”. In X5 connector the optional RS485 is galvanically isolated.

In 2-wire mode the receiver and transmitter are internally connected in parallel. See a table below.

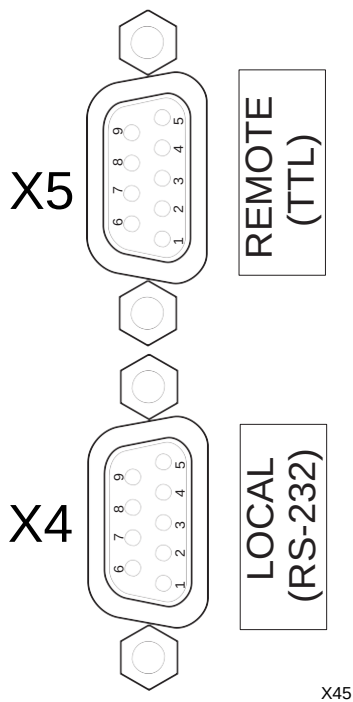


Figure 11.6: Pin numbering of the rear communication ports, REMOTE TTL

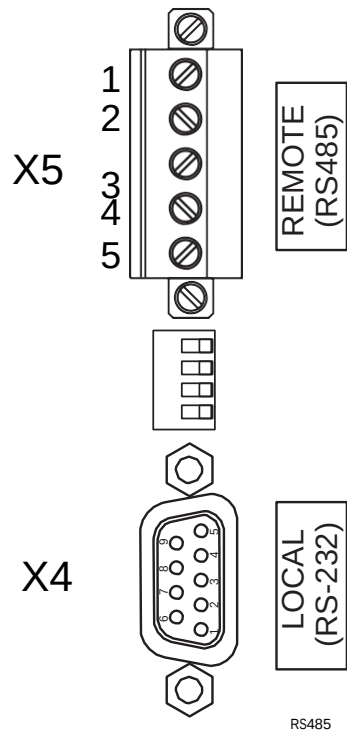


Figure 11.7: Pin numbering of the rear communication ports, REMOTE RS-485

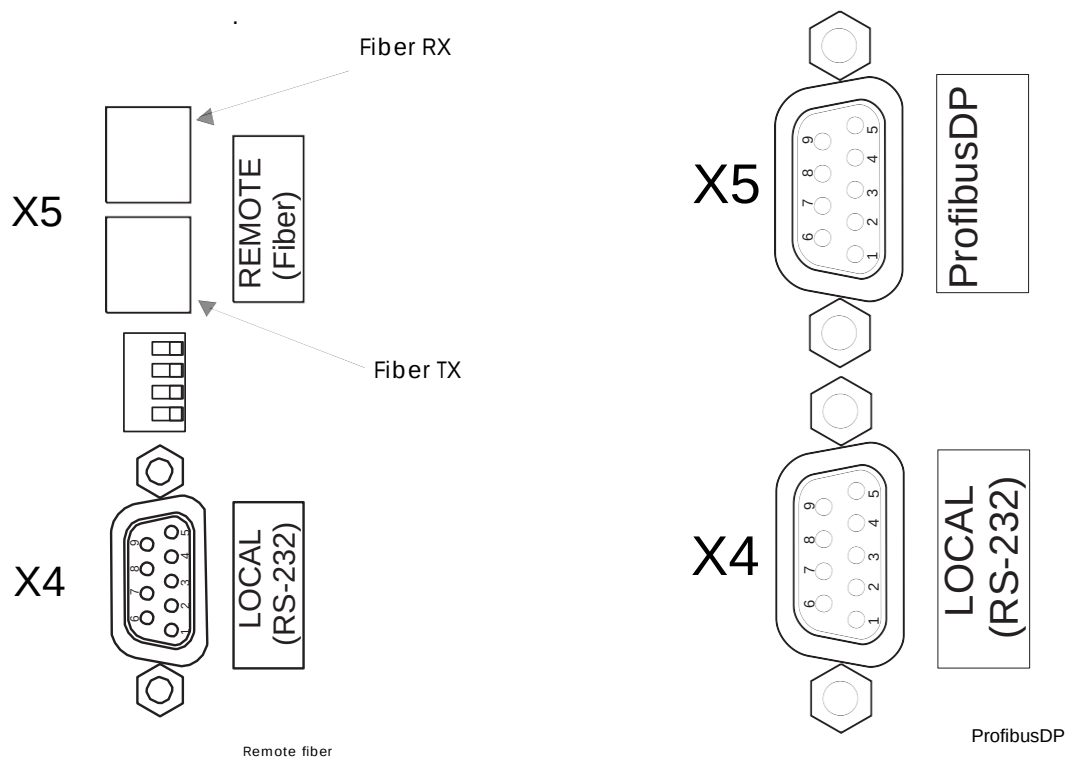


Figure 11.8: Picture of rear communication port, REMOTE FIBER

Figure 11.9: Pin numbering of the rear communication ports, Profibus DP

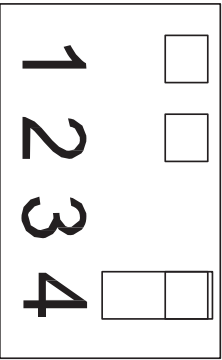


Figure 11.10: Dip switches in RS-485 and optic fiber options.

Dip switch number	Switch position	Function	Function
		RS-485	Fiber optics
1	Left	2 wire connection	Echo off
1	Right	4 wire connection	Echo on
2	Left	2 wire connection	Light on in idle state
2	Right	4 wire connection	Light off in idle state
3	Left	Termination On	Not applicable
3	Right	Termination Off	Not applicable
4	Left	Termination On	Not applicable
4	Right	Termination Off	Not applicable

X4 rear panel connector (local RS232 and extension RS485 ports)

Rear panel port (LOCAL)	Pin	Signal
X4	1	No connection
	2	Rx in, RS232 local
	3	Tx out, RS232 local
	4	DTR out (+8 V)
	5	GND
	6	No connection
	7	B- RS485 extension port
	8	A+ RS485 extension port
	9	No connection

NOTE: In VAMP devices, a positive RS485 voltage from A+ to B- corresponds to bit value "1". In X4 connector the RS485 extension port is not galvanically isolated.

Optional two channel arc detection card

NOTE: When this option card is installed, the parameter "Arc card type" has value "2Arc+BI/O". Please check the ordering code in Section 14: Order information.

If the slot X6 is already occupied with the DI19/DI20 digital input card, this option is not available, but there is still one arc sensor channel available. See the section Optional digital I/O card (DI19/DI20).

The optional arc detection card includes two arc sensor channels. The arc sensors are connected to terminals X6: 4-5 and 6-7.

The arc information can be transmitted and/or received through digital input and output channels. This is a 48 V dc signal.

Connections:

X6: 1	Binary input (BI)
X6: 2	Binary output (BO)
X6: 3	Common for BI and BO.
X6: 4-5	Sensor 1
X6: 6-7	Sensor 2

The binary output of the arc option card may be activated by the arc sensors or by any available signal in the output matrix. The binary output can be connected to an arc binary input of another VAMP protection device.

Optional digital I/O card (DI19/DI20)

NOTE: When this option card is installed, the parameter "Arc card type" has value "Arc+2DI". With DI19/DI20 option only one arc sensor channel is available. Please check the ordering code in Section 14: Order information.

If the slot X6 is already occupied with the two channel arc sensor card (the section Optional two channel arc detection card), this option is not available.

The DI19/DI20 option enables two more digital inputs. These inputs are useful in applications where the contact signals are not potential free. For example trip circuit supervision is such application. The inputs are connected to terminals X6:1 – X6:2 and X6:3 – X6:4.

Connections:

X6:1	DI19+
X6:2	DI19-
X6:3	DI20+
X6:4	DI20-
X6:5	NC
X6:6	L+
X6:7	L-

External option modules

External LED module VAM 16D

The optional external VAM 16D led module provides 16 extra led-indicators in external casing. Module is connected to the serial port of the device's front panel. Please refer the User manual VAM 16D for details.

External input / output module

The device supports optional external input/output modules used to extend the number of digital inputs and outputs. Also modules for analog inputs and outputs are available.

The following types of devices are supported:

- Analog input modules (RTD)
- Analog output modules (mA-output)
- Binary input/output modules

EXTENSION port is primarily designed for I/O modules. This port is found in the LOCAL connector of the device backplane and I/O devices should be connected to the port with VSE003 adapter.

NOTE: If External I/O protocol is not selected to any communication port, VAMPSET doesn't display the menus required for configuring the I/O devices. After changing EXTENSION port protocol to External I/O, restart the relay and read all settings with VAMPSET.

External analog inputs configuration (VAMPSET only)

EXTERNAL ANALOG INPUTS												Range	Description		
AI Enabled	AI Meas	AI Unit	AI Slave Address	AI Modbus Address	AI Register Type	AI Offset	x1	y1	x2	y2	AI Error Counter				
On	0.00 C	C	1	1	HoldingR	0	0	0	1	1	0				
Off	0.00 C	C	1	2	HoldingR	0	0	0	1	1	0				
Off	0.00 C	C	1	3	HoldingR	0	0	0	1	1	0				
												X: -32000 – 32000 Y: -1000 – 1000	Scaling i n g c a l c u l a t i o n	Detected communication read errors	
												-32000 – 32000		Offset	Subtracted from Modbus value, before running XY scaling
												InputR or HoldingR		Modbus register type	
												1 – 9999		Modbus register for the measurement	
												1 – 247		Modbus address of the I/O device	
												C, F, K, mA, Ohm or V/A	Unit selection		
													Active value		
												On / Off	Enabling for measurement		

Alarms for external analog inputs

EXTERNAL ANALOG INPUT ALARMS									
AI Enabled	AI Slave Address	AI Modbus Address	AI Meas	External AI Alarm State >	Alarm Limit >	External AI Alarm State >>	Alarm Limit >>	Alarm hysteresis	
On	1	1	0.00 C	-	0.0	-	0.0	1.0	
Off	1	2	0.00 C	-	0.0	-	0.0	1.0	
Off	1	3	0.00 C	-	0.0	-	0.0	1.0	
Range					Description				
0 – 10000					Hysteresis for alarm limits				
-21x107 – +21x107					Alarm >>		Limit setting		
							Active state		
- / Alarm							Active state		
-21x107 – +21x107					Alarm >		Limit setting		
							Active state		
- / Alarm							Active state		
					Active value				
1 – 9999					Modbus register for the measurement				
1 – 247					Modbus address of the I/O device				
On / Off					Enabling for measurement				

Analog input alarms have also matrix signals, “Ext. Aix Alarm1” and “Ext. Aix Alarm2”.

External digital inputs configuration (VAMPSET only)

EXTERNAL DIGITAL INPUTS								Range	Description
DI Enabled	DI State	DI Slave Address	DI ModBus Address	DI Register Type	DI Selected Bit	DI Error Counter			
On	0	1	1	Coils	1	0			Detected communication read errors
Off	0	1	2	Coils	1	0		1 – 16	Bit number of Modbus register value
Off	0	1	3	Coils	1	0		CoilS, InputS, InputR or HoldingR	Modbus register type
								1 – 9999	Modbus register for the measurement
								1 – 247	Modbus address of the I/O device
								0 / 1	Active state
								On / Off	Enabling for measurement

External digital outputs configuration (VAMPSET only)

EXTERNAL DIGITAL OUTPUTS						Range	Description
DO Enabled	DO State	DO Slave Address	DO ModBus Address	DO Error Counter			Detected communication errors
On	0	1	1	0			
Off	0	1	2	0		1 – 9999	Modbus register for the measurement
Off	0	1	3	0		1 – 247	Modbus address of the I/O device
						0 / 1	Output state
						On/Off	Enabling for measurement

External analog outputs configuration (VAMPSET only)

EXTERNAL ANALOG OUTPUTS												
AO Enabled	mA Output	mA Min	mA Max	AO Link	Linked Val. Min	Linked Val. Max	AO Slave Address	AO Modbus Address	AO Register Type	Modbus Min	Modbus Max	AO Error Counter
On	0.00	0	20	IL1	0 A	1000 A	1	1	HoldingR	0	100	0
Off	0.00	0	20	IL2	0 A	1000 A	1	2	HoldingR	0	100	0
Off	0.00	0	20	IL3	0 A	1000 A	1	3	HoldingR	0	100	0
					-32768 – +32767 (0 – 65535)					Detected communication errors		
								Modbus value corresponding Linked Val. Max				
		Modbus value corresponding Linked Val. Min										
					InputR or HoldingR			Modbus register type				
					1 – 9999			Modbus register for the output				
					1 – 247			Modbus address of the I/O device				
					0 – 42x108, -21x108 – +21x108			Maximum limit for lined value, corresponding to “Modbus Max”				
								Minimum limit for lined value, corresponding to “Modbus Min”				
								Link selection				
					-21x107 – +21x107			Minimum & maximum output values				
								Active value				
On / Off								Enabling for measurement				

Block optional diagrams

VAMP 255

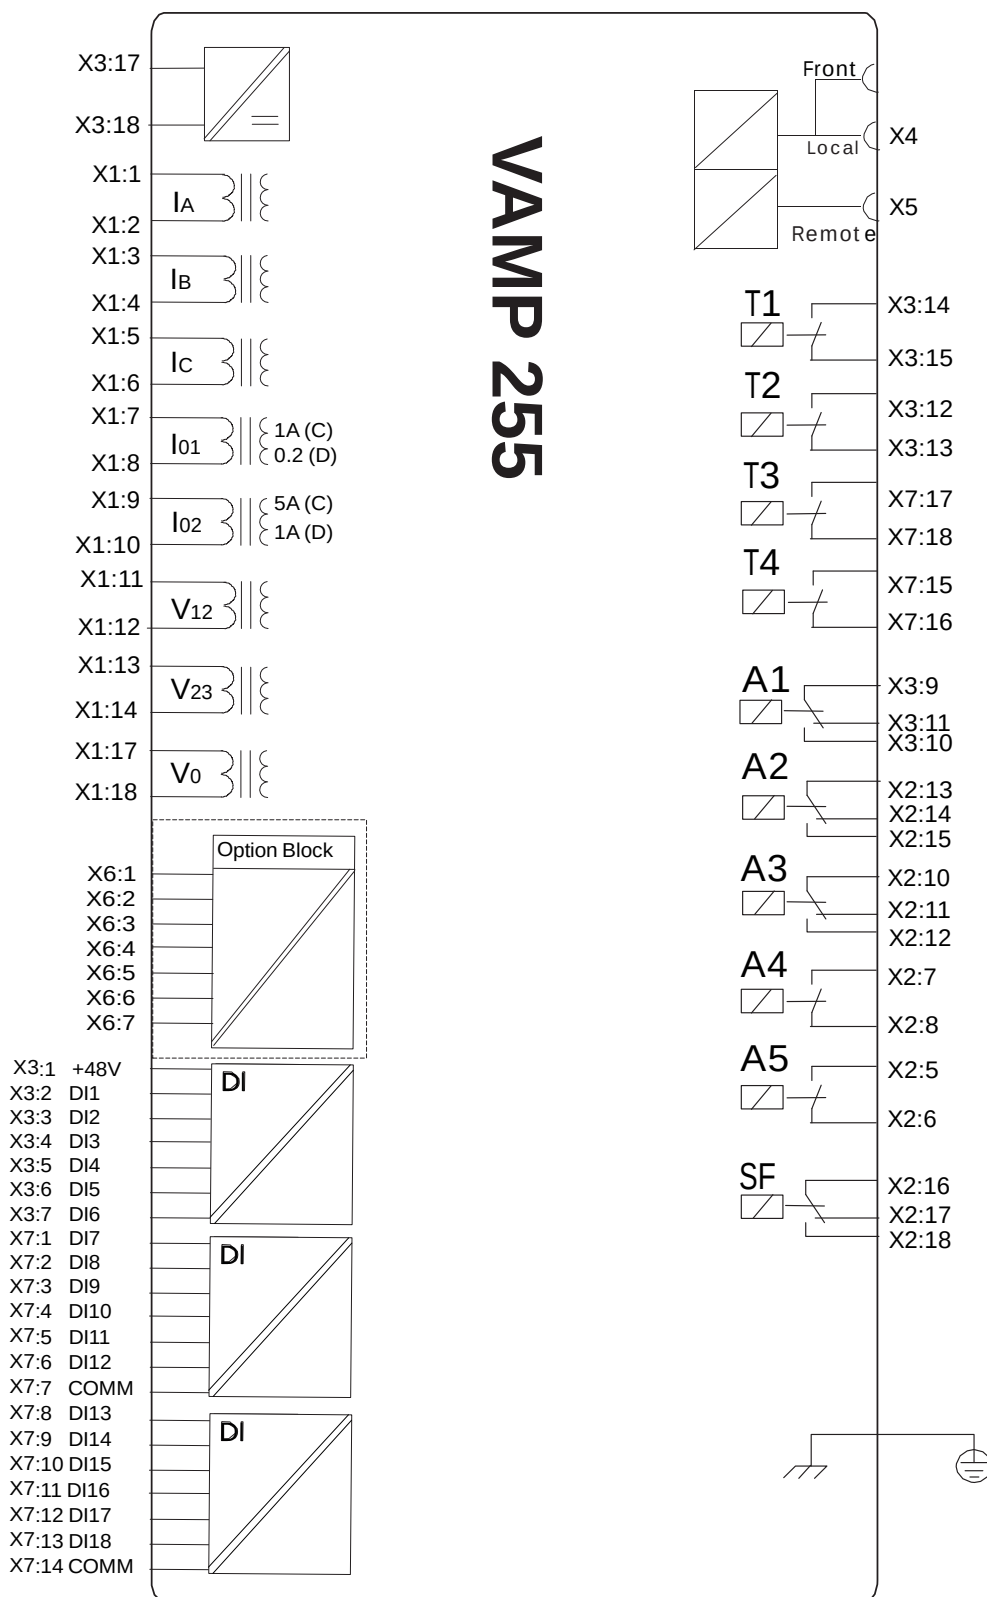


Figure 11.11: Block diagram of VAMP 255

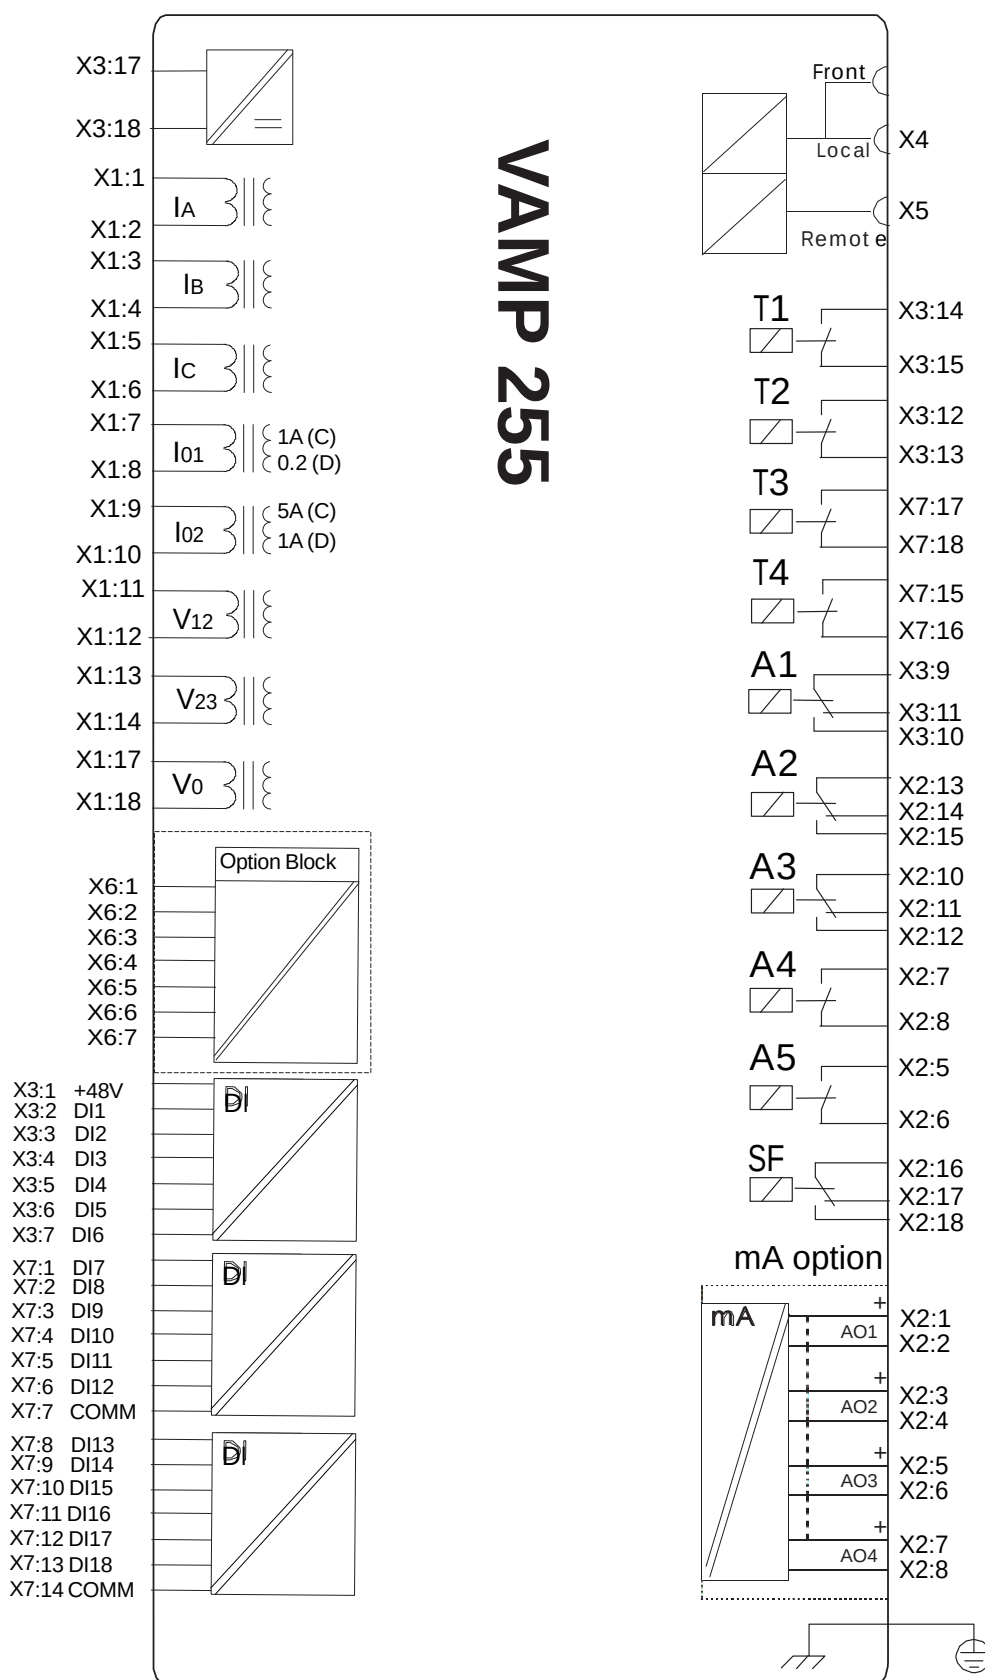


Figure 11.12: Block diagram of VAMP 255, with the mA-option included.

VAMP 230

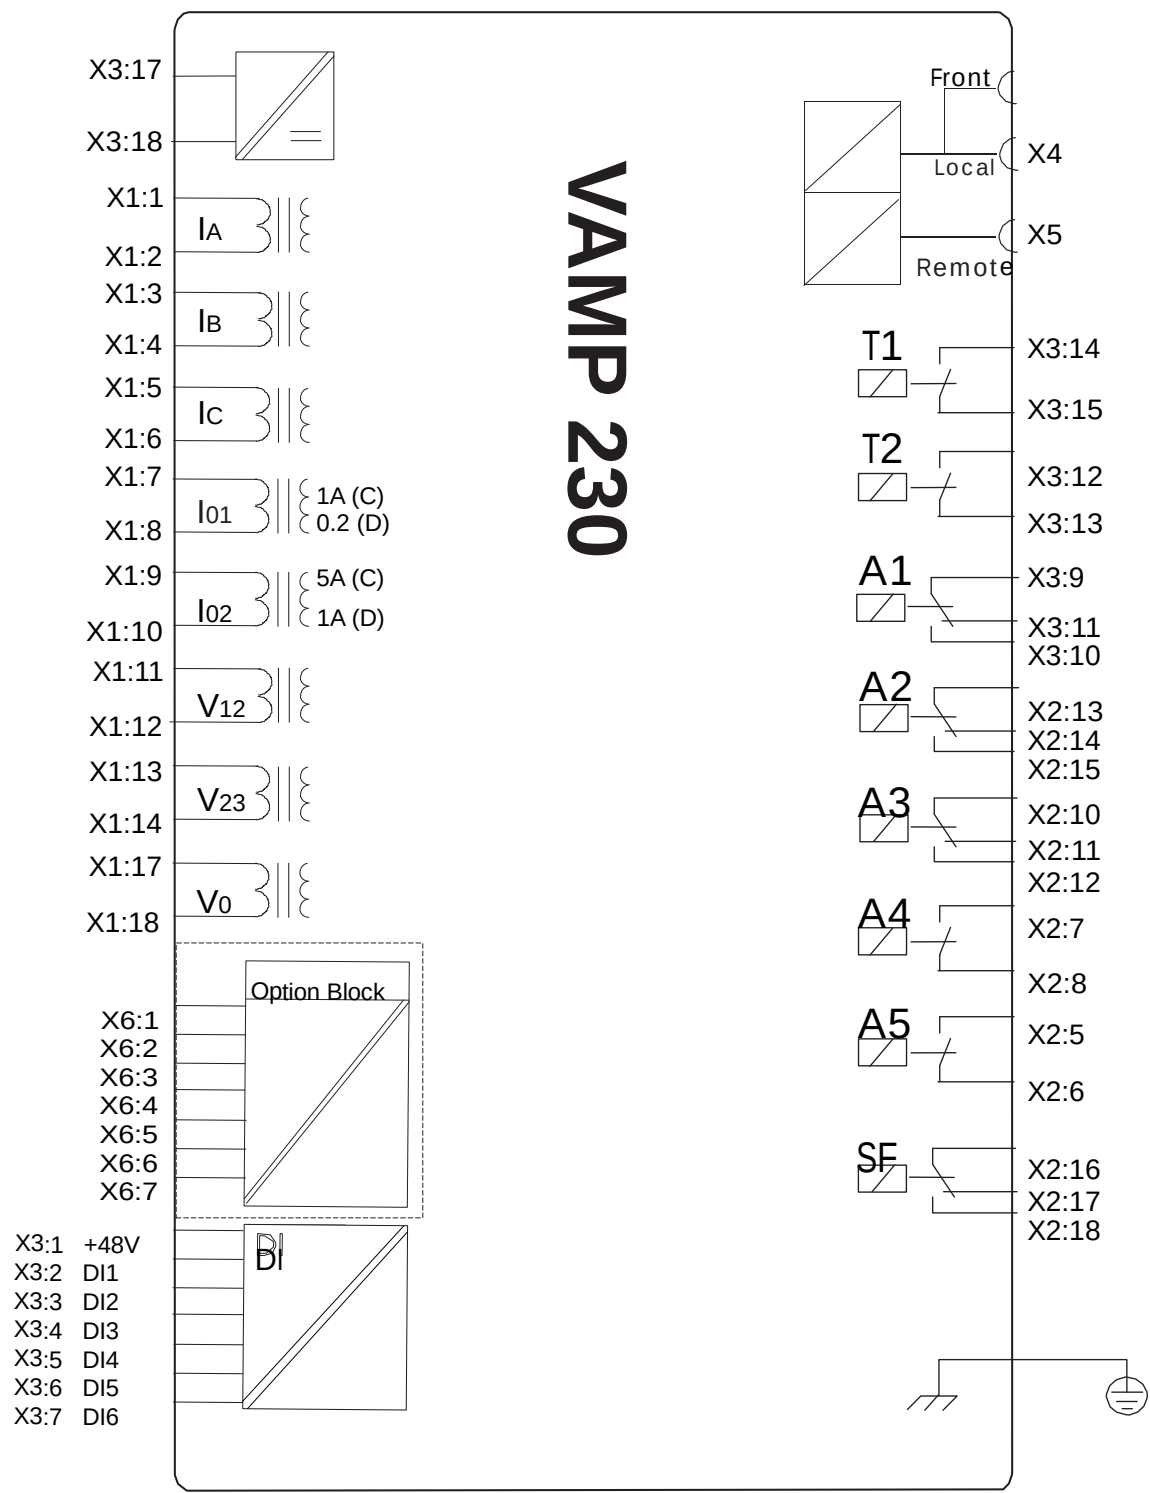


Figure 11.13: Block diagram of VAMP 230.

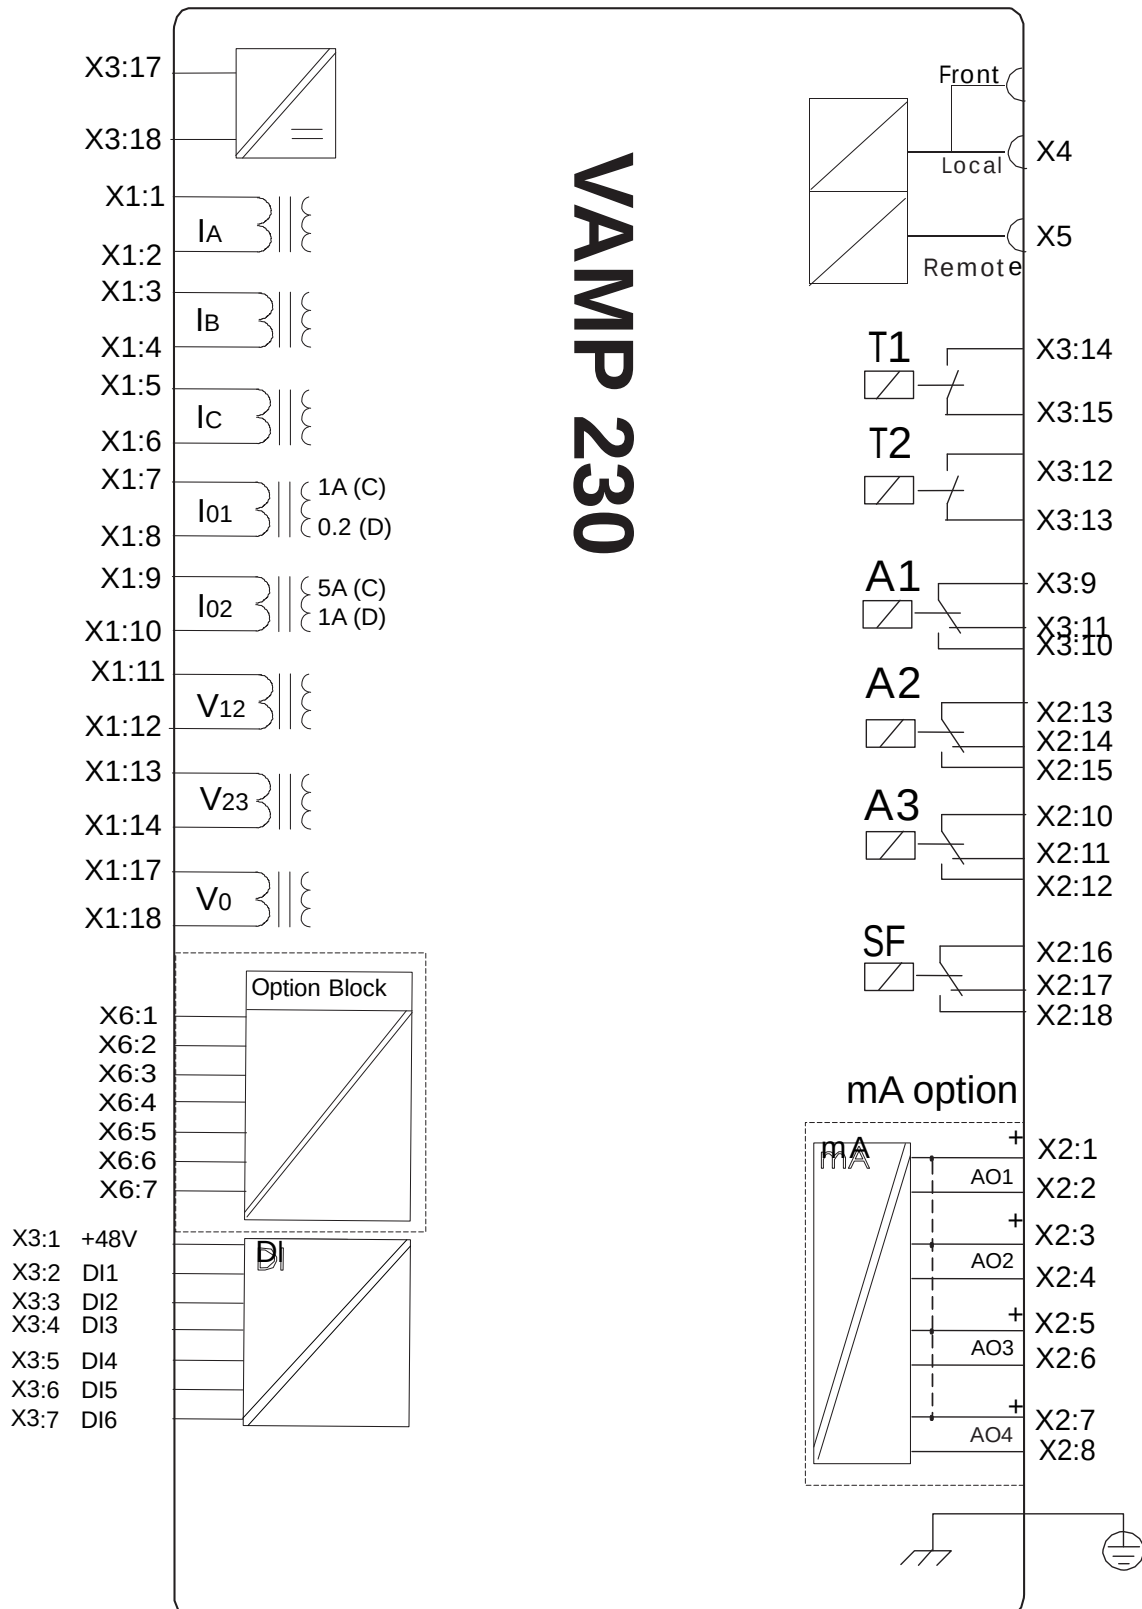


Figure 11.14: Block diagram of VAMP 230, with mA-option included.

Block diagrams of option modules

Block diagrams of optional arc modules

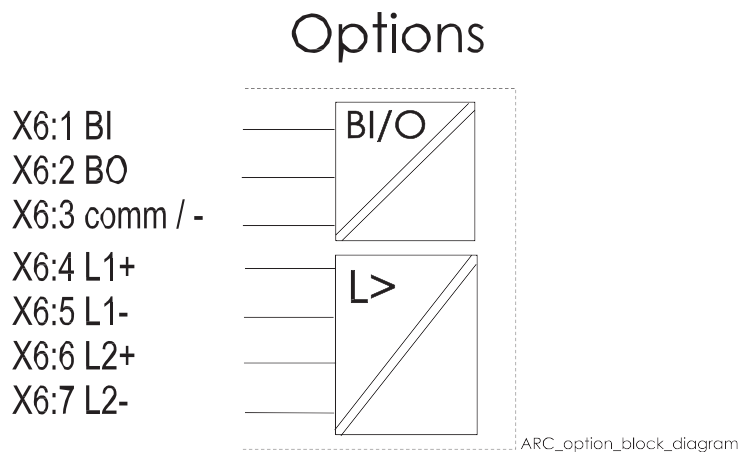


Figure 11.15: Block diagram of optional arc detection module.

Block diagram of optional DI19/DI20

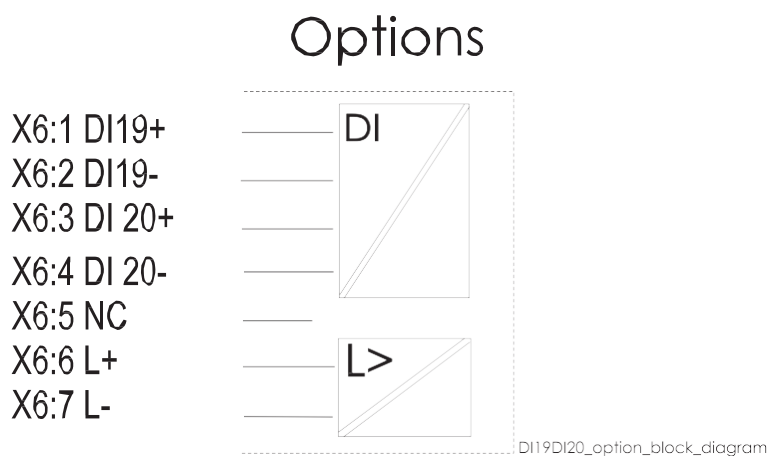


Figure 11.16: Block diagram of optional DI19/DI20 module with one arc channel.



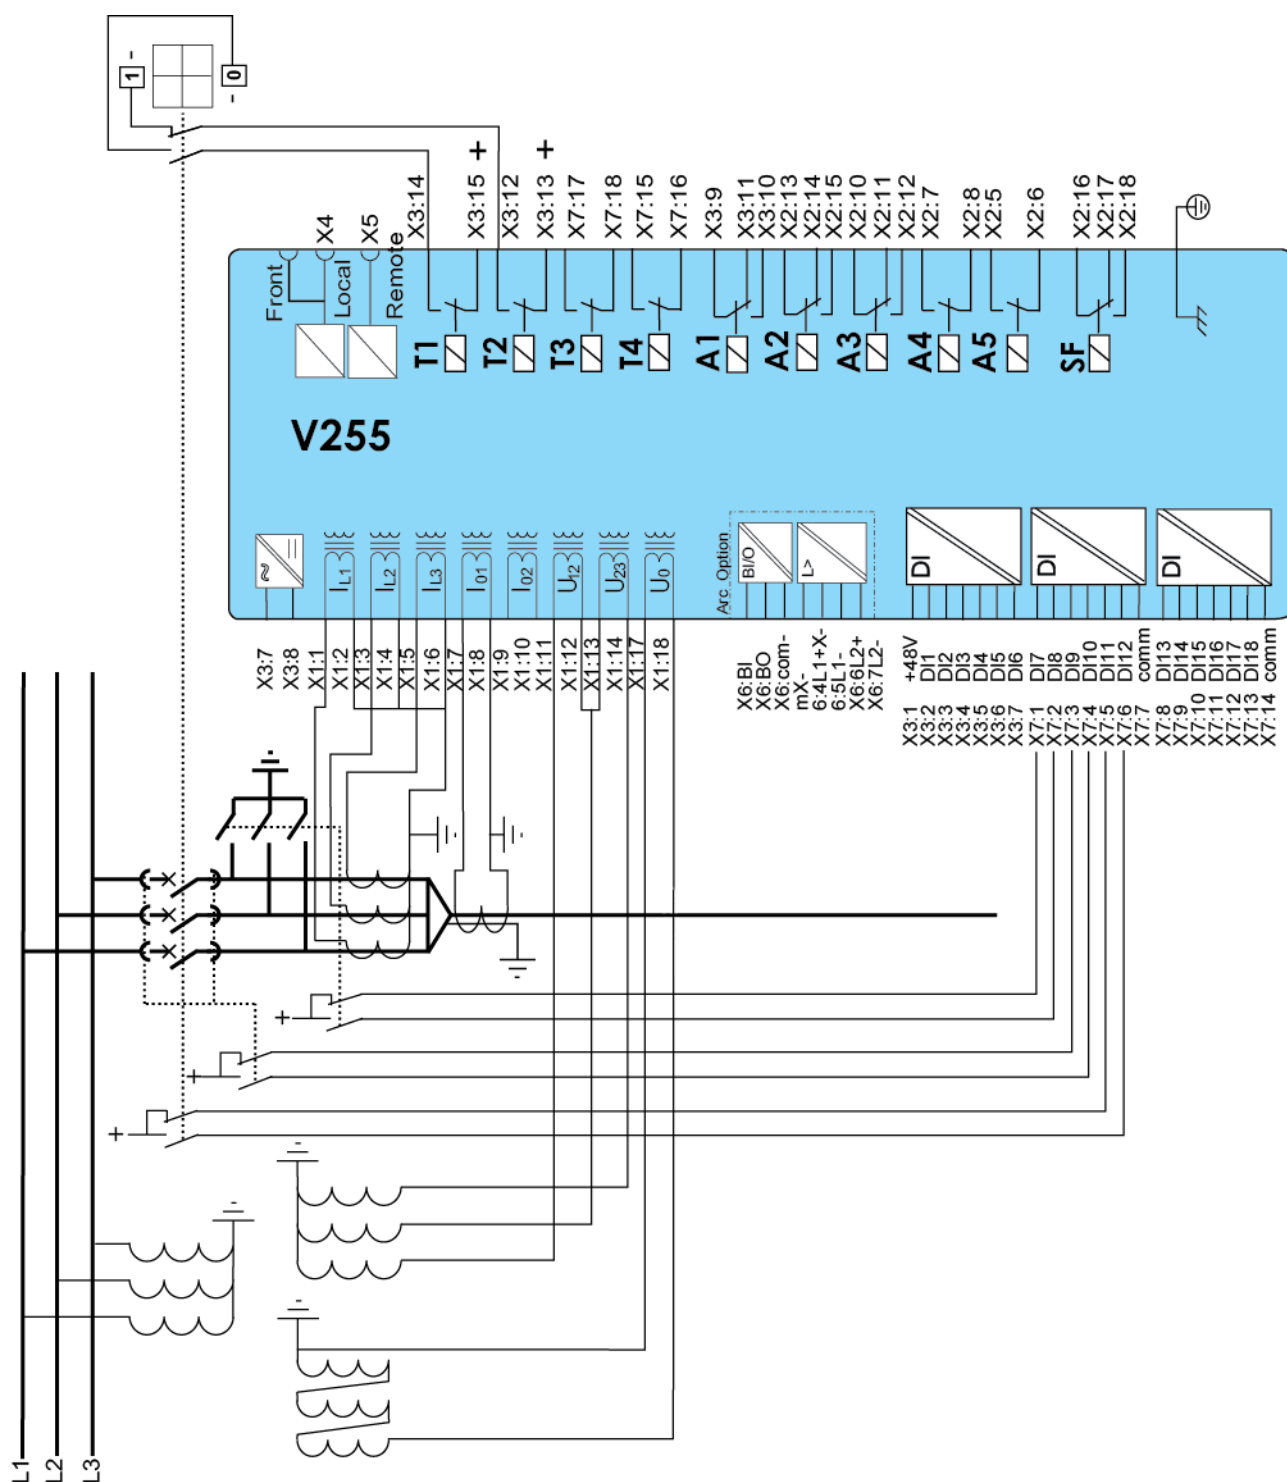


Figure 11.17: Connection example of VAMP 255. The voltage measurement mode is set to "2LL+U₀".

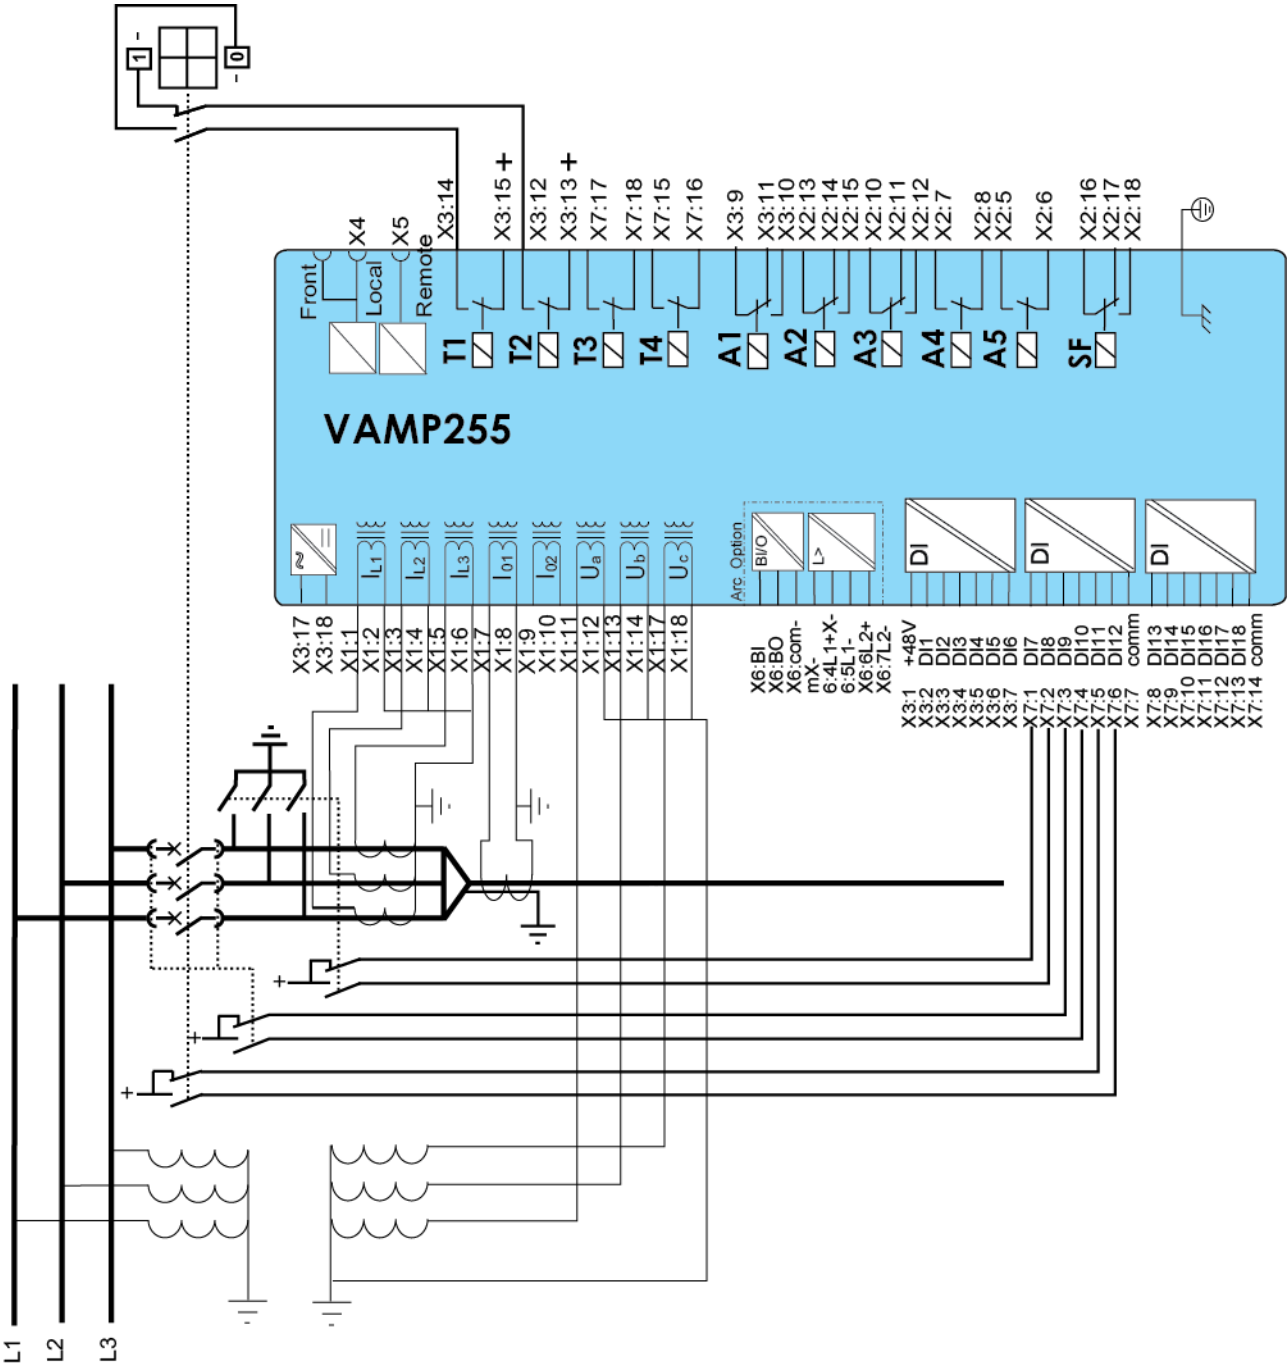


NOTE: For the phases, L1=A, L2=B, and L3=C.

Figure 11.18: Connection example of VAMP 255 without an open delta voltage transformer. The device is calculating the zero sequence voltage. The voltage measurement mode is set to “3LN.”

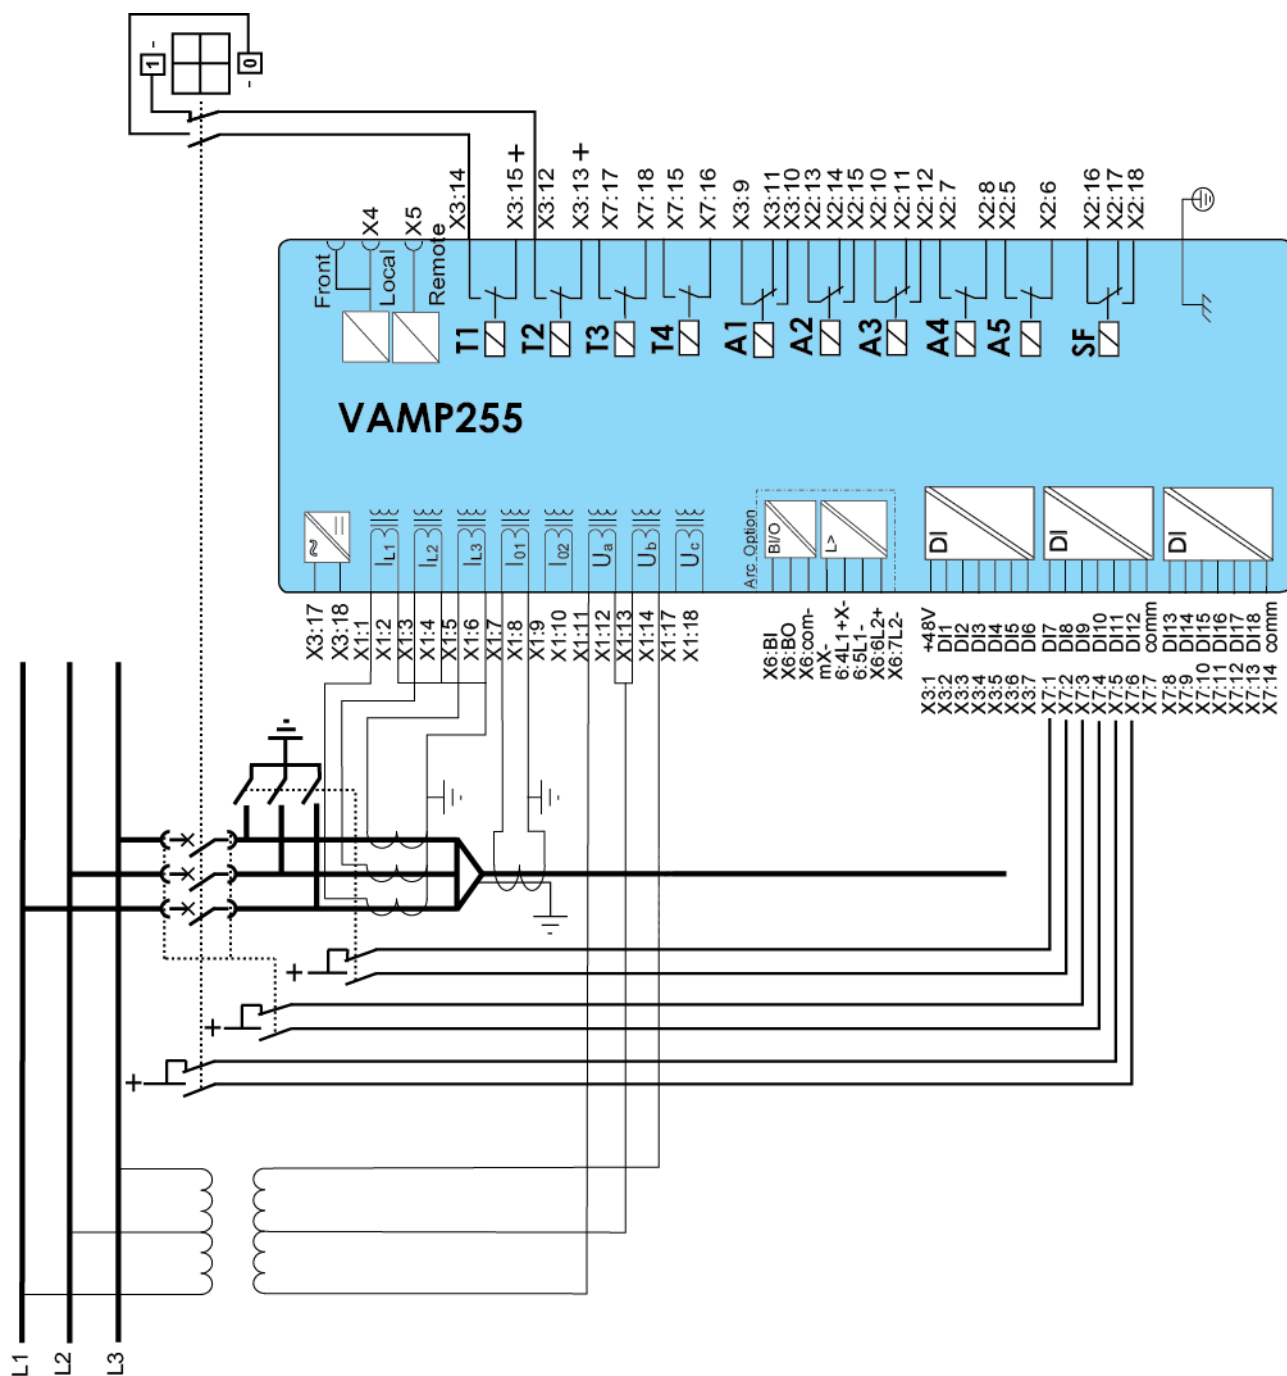


NOTE: For the phases, L1=A, L2=B, and L3=C.

Figure 11.19: Connection example of VAMP 255 with V-connected voltage transformers. The voltage measurement is set to "2LL+U₀". Directional ground fault stages are not available without the polarizing U₀ voltage.

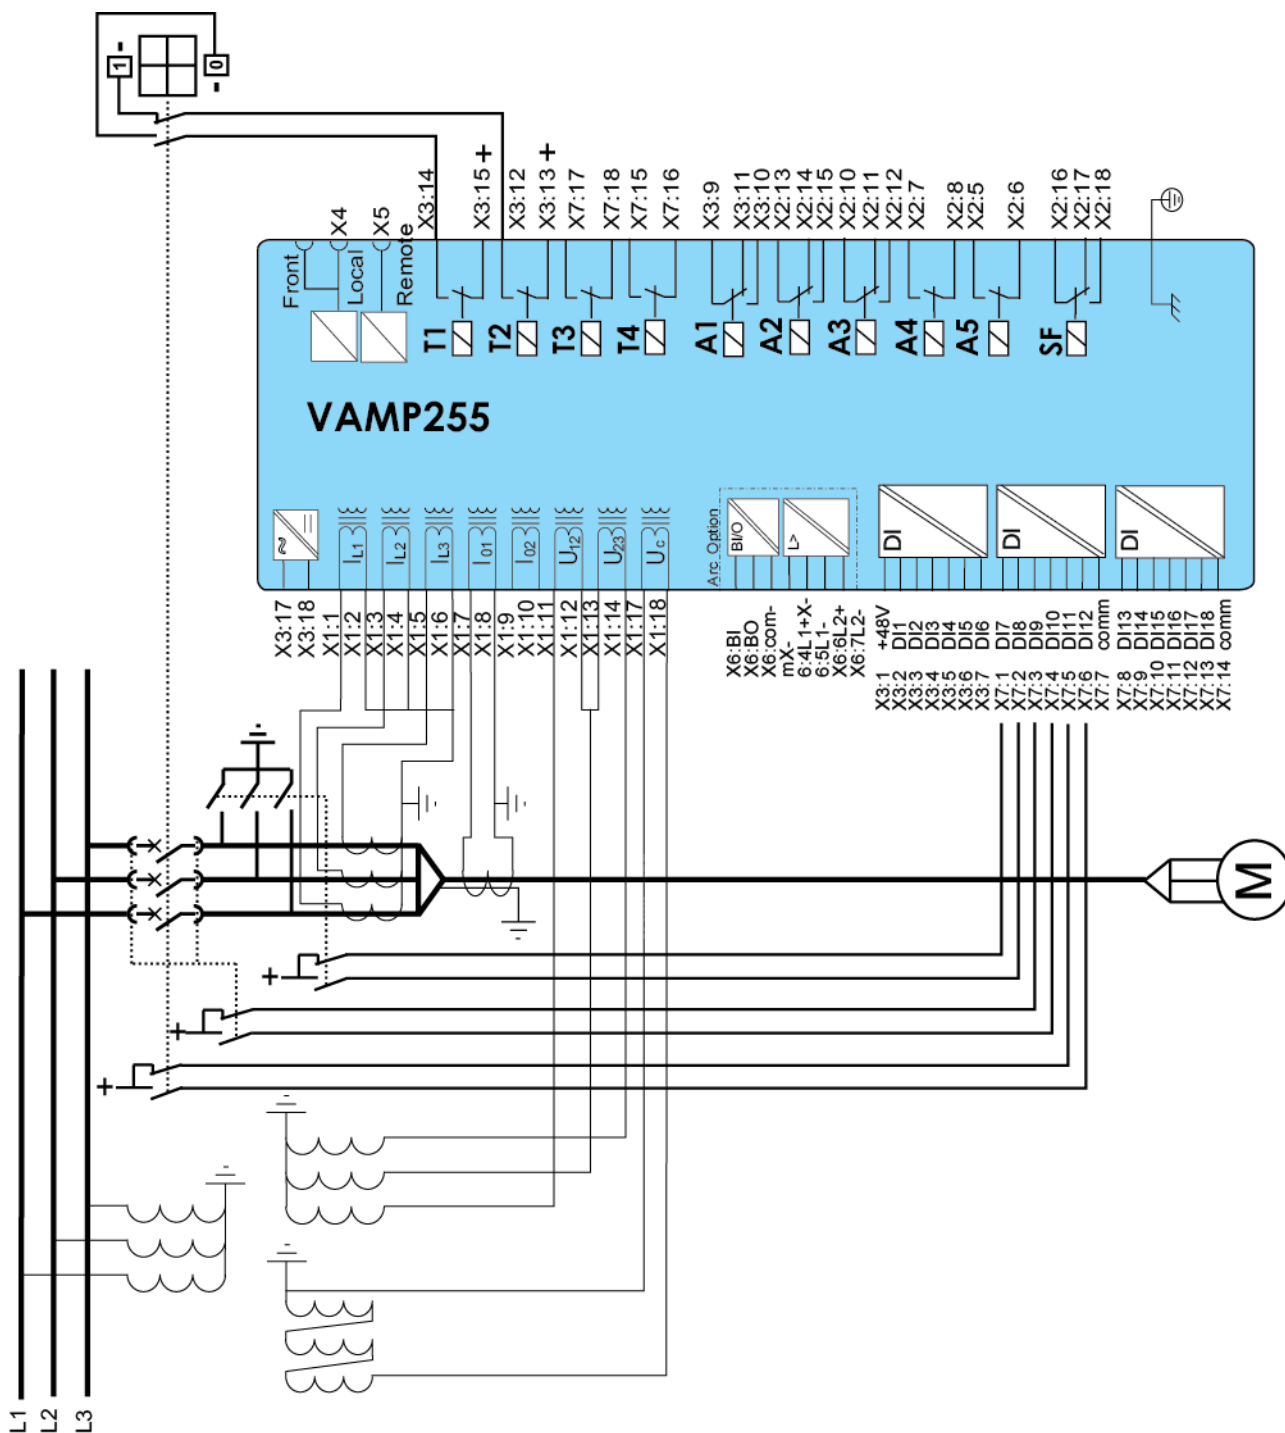


NOTE: For the phases, L1=A, L2=B, and L3=C.

Figure 11.20: Connection example of VAMP 255 as a motor detection device. The voltage measurement mode is set to "2LL+U₀".

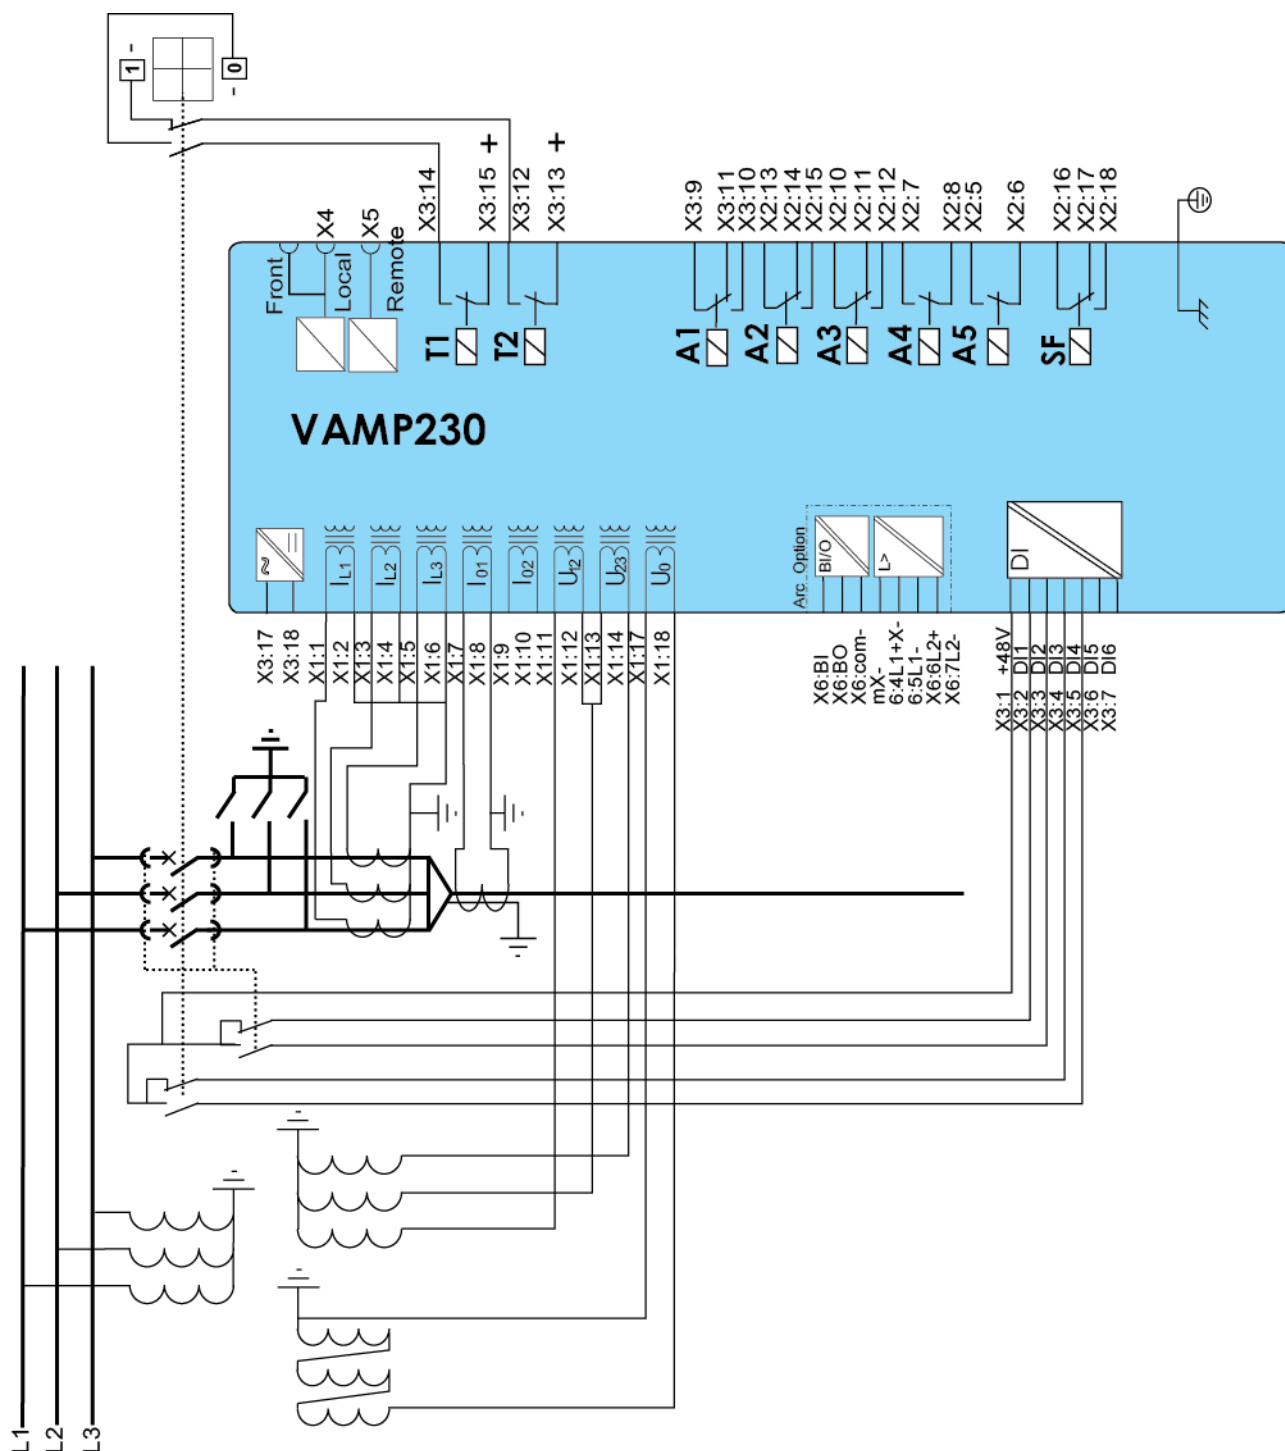


NOTE: For the phases, L1=A, L2=B, and L3=C.

Figure 11.21: Connection example of VAMP 230. The voltage measurement mode is set to "2LL+U₀".

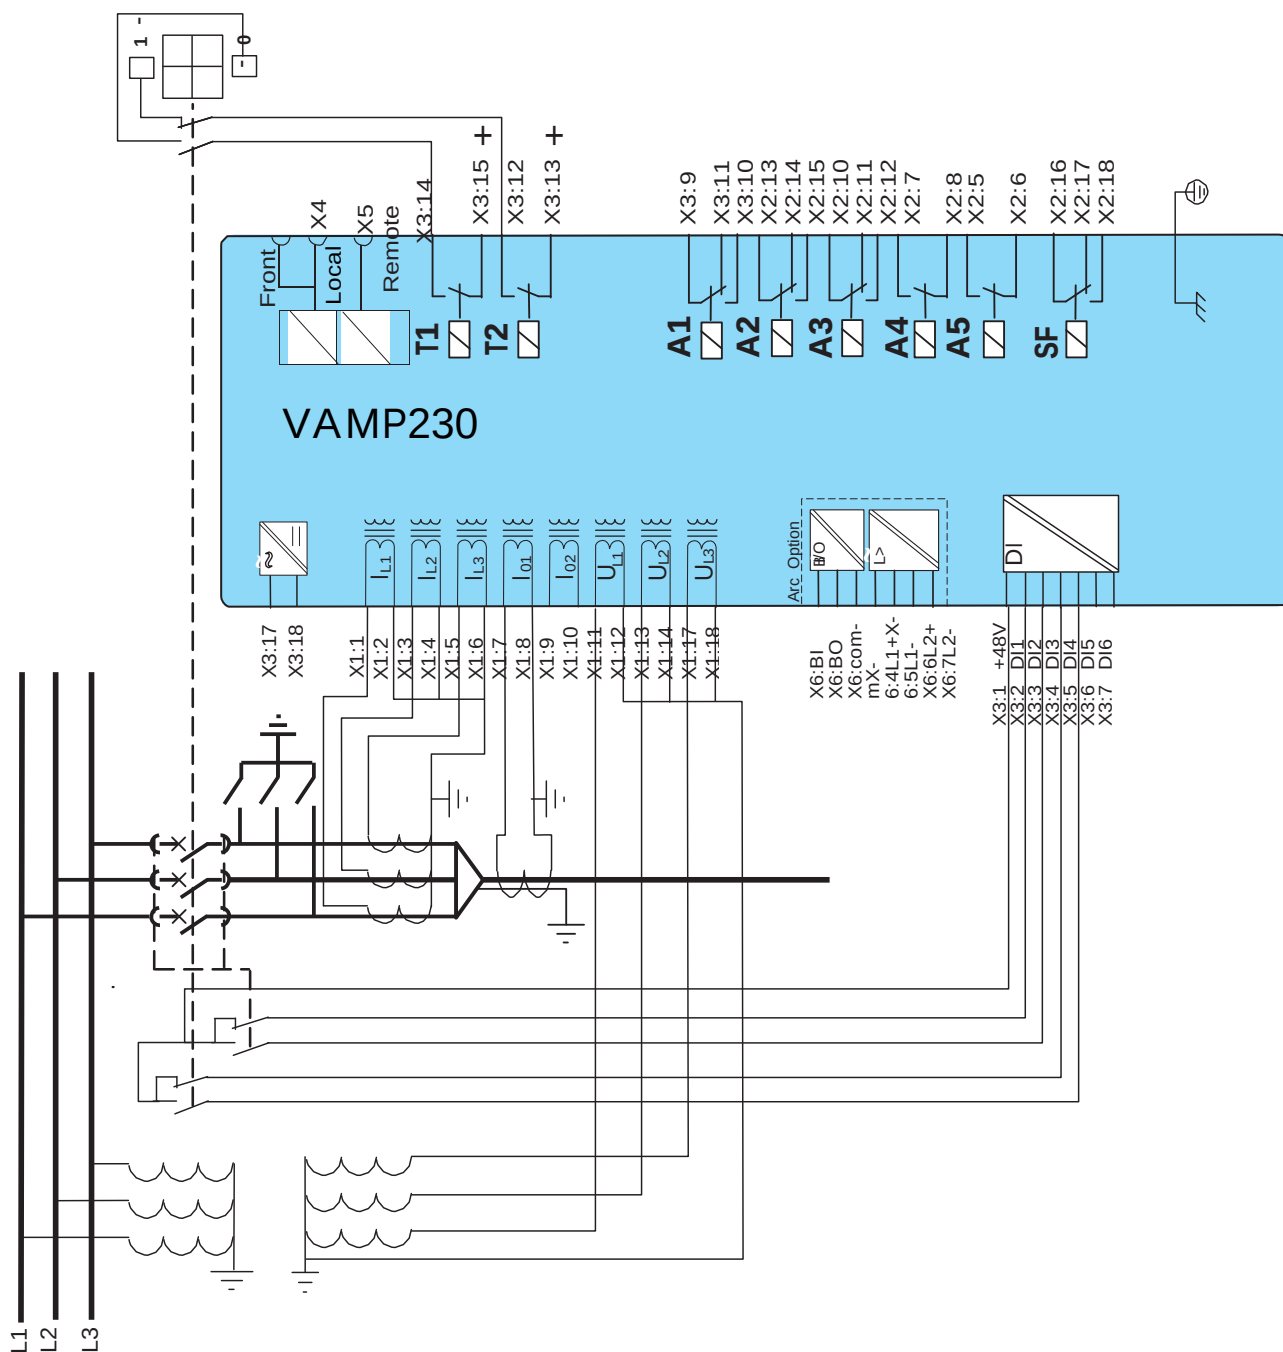

NOTE: For the phases, L1=A, L2=B, and L3=C.

Figure 11.22: Connection example of VAMP 230 without an open delta voltage transformer. The device is calculating the zero sequence voltage. The voltage measurement mode is set to "3LN".

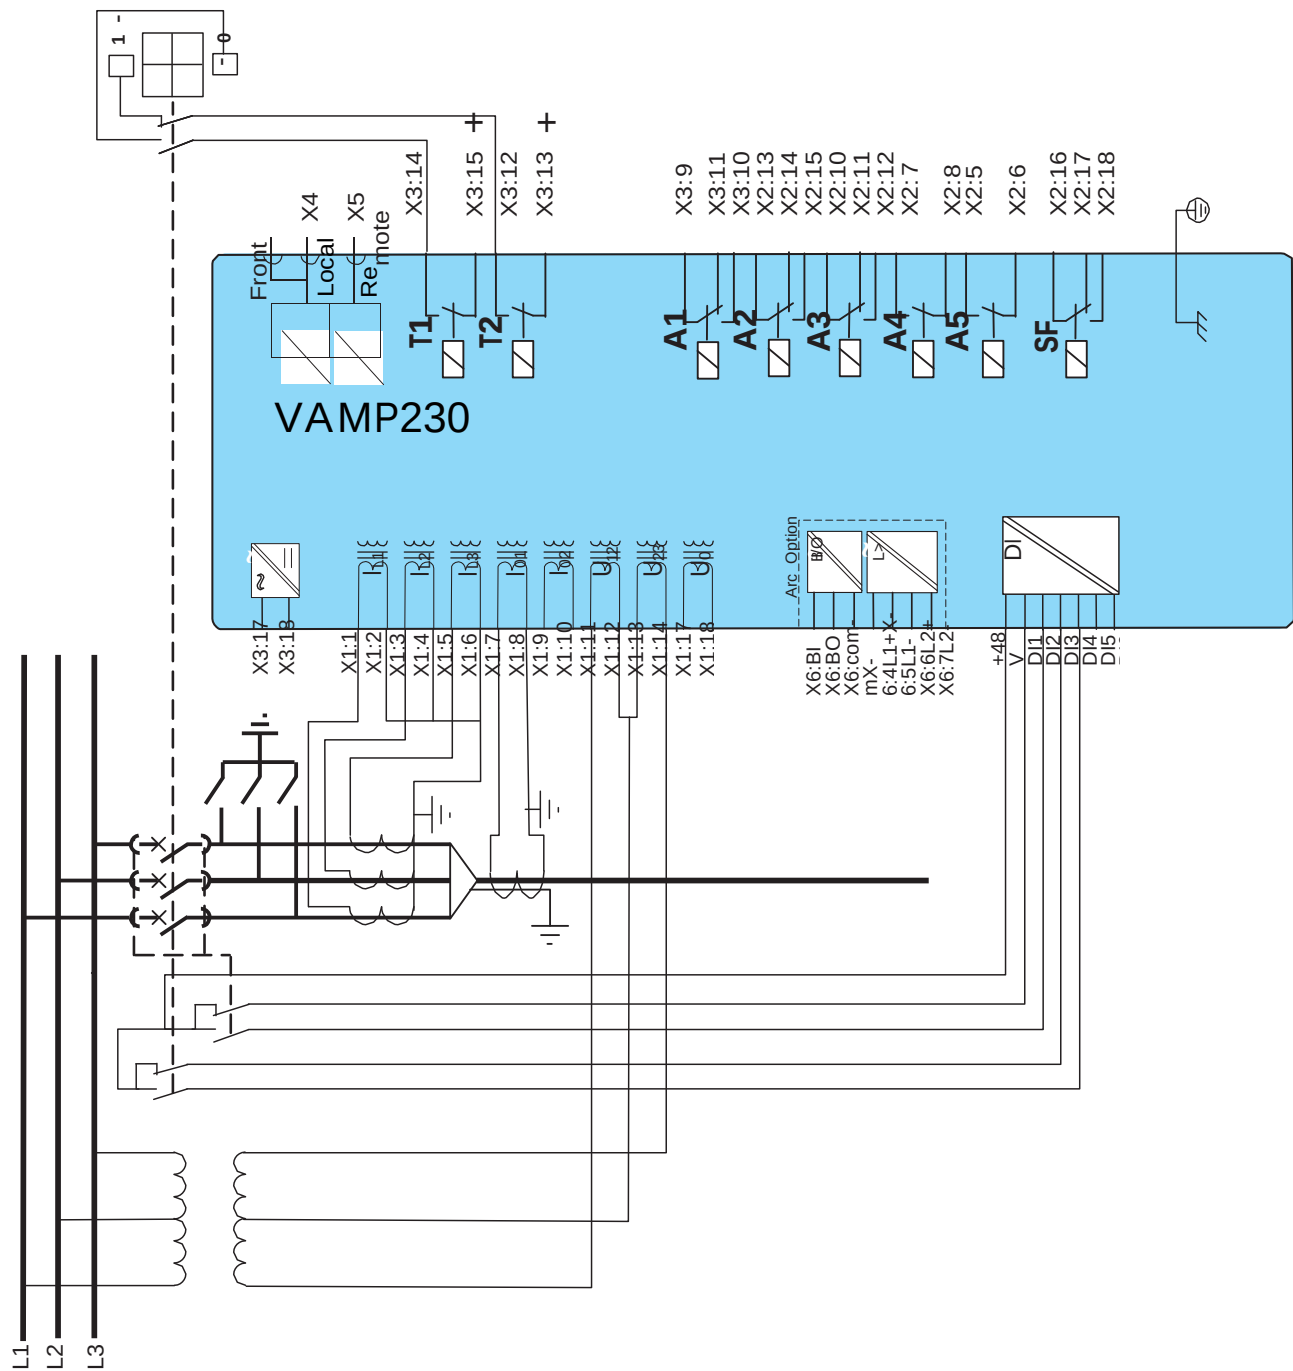

NOTE: For the phases, L1=A, L2=B, and L3=C.


Figure 11.23: Connection example of VAMP 230 with V-connected voltage transformers. The voltage measurement is set to “2LL+U₀”. Directional ground fault stages are not available without the polarizing U₀ voltage.


Section 12: Technical data

Connections

Torque for Terminal Connections

For panel mounted or semi-flush (where the terminals are fixed in the relay), the torque is 10.6 in-lb (1.2 N•m).
For detachable terminals, the torque is 4.4-5.3 in-lb (0.5-0.6 N•m).

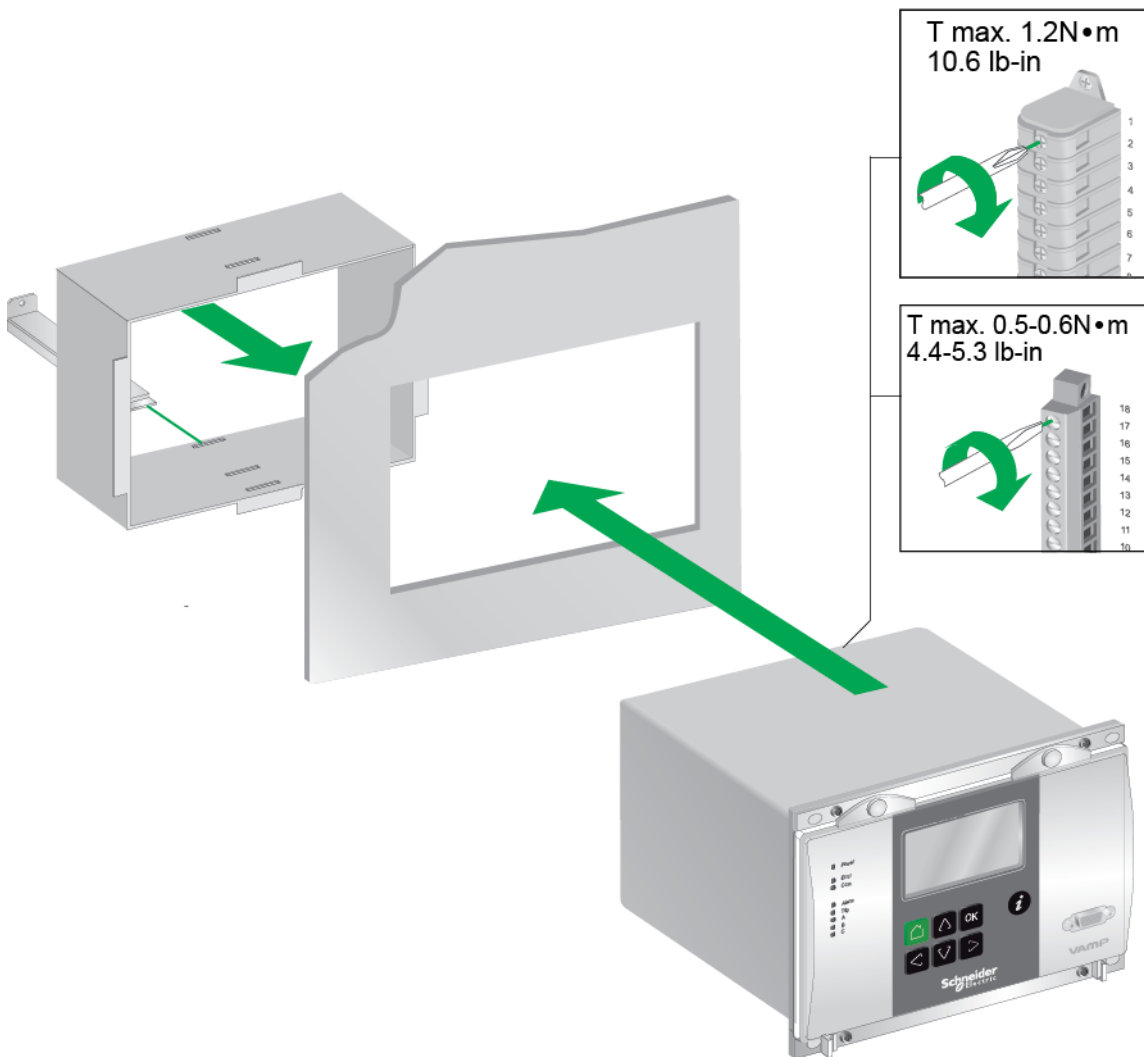

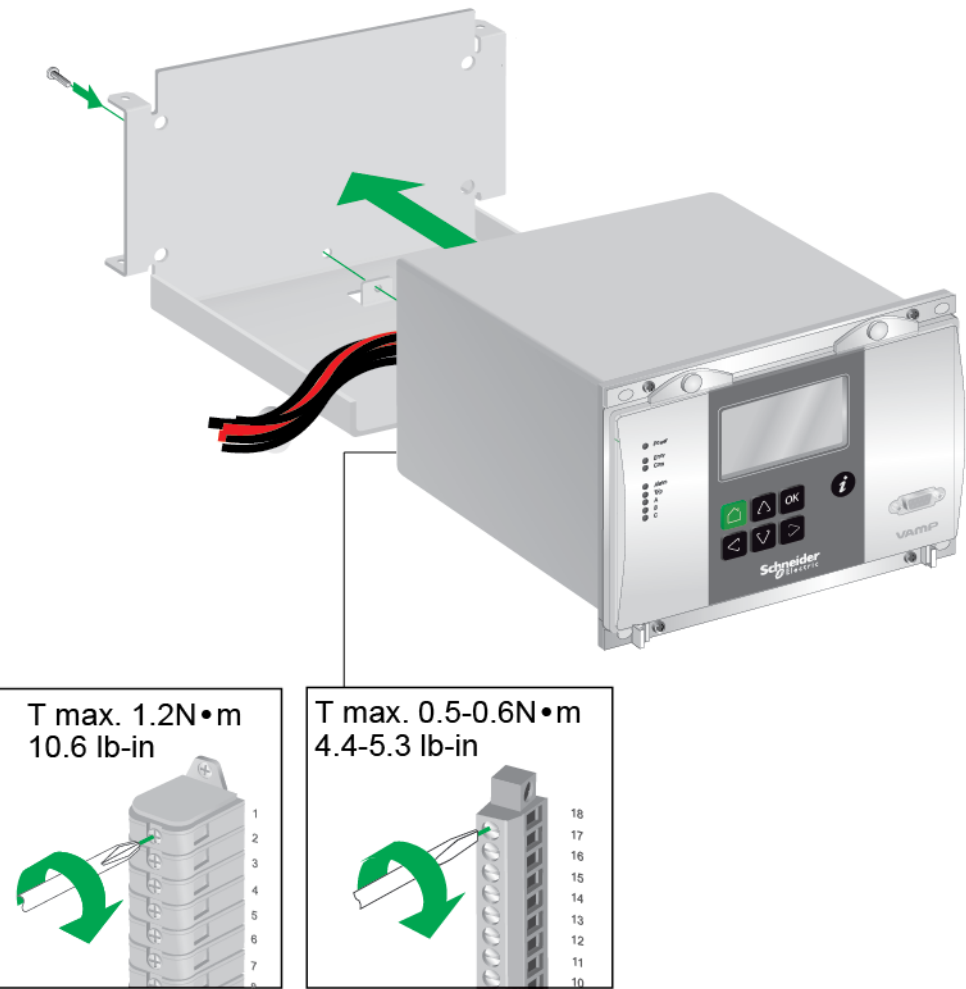

Measuring circuits

Rated phase current	5 A (configurable for CT secondaries 1–10 A)
- Current measuring range	0 – 250 A
- Thermal withstand	20 A (continuously) 100 A (for 10 s) 500 A (for 1 s)
- Burden	< 0.2 VA
I_{02} input option C	See Section 14: Order information
Rated residual current (optional)	5 A (configurable for CT secondaries 1 – 10 A)
- Current measuring range	0 – 50 A
- Thermal withstand	20 A (continuously) 100 A (for 10 s) 500 A (for 1 s)
- Burden	< 0.2 VA
I_{01} input option C / I_{02} input option D	See Section 14: Order information
Rated residual current	1 A (configurable for CT secondaries 0.1 – 10.0 A)
- Current measuring range	0 – 10 A for VAMP 255 0 – 5 A for VAMP 230
- Thermal withstand	4 A (continuously) 20 A (for 10 s) 100 A (for 1 s)
- Burden	< 0.1 VA
I_{01} input option D	See Section 14: Order information
Rated residual current (optional)	0.2 A (configurable for CT secondaries 0.1 – 10.0 A)
- Current measuring range	0 – 2 A for VAMP 255 0 – 1 A for VAMP 230
- Thermal withstand	0.8 A (continuously) 4 A (for 10 s) 20 A (for 1 s)
- Burden	< 0.1 VA

Rated voltage U_N	100 V (configurable for VT secondaries 50 – 120 V)
- Voltage measuring range	0 – 250 V (100 V/110 V) for VAMP 230
- Continuous voltage withstand	0 – 190 V (100 V/110 V) for VAMP 255
- Burden	250 V < 0.5V A
Rated frequency f_N	45 – 65 Hz
Terminal block:	Maximum wire dimension:
- Solid or stranded wire	4 mm ² (10 – 12 AWG)

Auxiliary power supply

	Type A (standard)	Type B (option)
Rated voltage U_{AUX}	40 – 265 V ac/dc	18 – 36 Vdc Note! Polarity X3:17= negative (-) X3:18= positive (+)
Start-up peak (DC)		
110V (Type A)	15A with time constant of 1ms	
220V (Type A)	25A with time constant of 1ms	
Power consumption	< 15 W (normal conditions) < 25 W (output relays activated)	
Max. permitted interruption time	< 50 ms (110 V dc)	
Terminal block:	Maximum wire dimension:	
- Phoenix MVSTBW or equivalent	2.5 mm ² (14 AWG)	

Digital inputs

Internal operating voltage

Number of inputs	6
Internal operating voltage	48 V dc
Current draw when active (max.)	approx. 20 mA
Current draw, average value	< 1 mA
Terminal block:	Maximum wire dimension:
- Phoenix MVSTBW or equivalent	2.5 mm ² (13 – 14 AWG)

External operating voltage (Only VAMP 255)

Number of inputs	12
External operating voltage	Rated voltage selectable in order code: 3: 24V dc/ac (max 265 V) 6: 110V dc/ac (max 265 V) 7: 220V dc/ac (max 265 V)
Current draw	approx. 2 mA
Activation time dc/ac	< 11 ms / < 15 ms
Reset time dc/ac	< 11 ms / < 15 ms
Terminal block:	Maximum wire dimension:
- Phoenix MVSTBW or equivalent	2.5 mm ² (13 – 14 AWG)

Trip contacts

Number of contacts	2 or 4 (depends on the ordering code)
Rated voltage	250 V ac/dc
Continuous carry	5 A
Make and carry, 0.5 s	30 A
Make and carry, 3s	15 A
Breaking capacity, AC	2 000 VA
Breaking capacity, DC (L/R=40ms)	
at 48 V dc:	5 A
at 110 V dc:	3 A
at 220 V dc	1 A
Contact material	AgNi 90/10
Terminal block:	Maximum wire dimension:
- Phoenix MVSTBW or equivalent	2.5 mm ² (13 – 14 AWG)

Signal contacts

Number of contacts:	3 change-over contacts (relays A1, A2 and A3) 2 making contacts (relays A4 and A5) 1 change-over contact (SF relay)
Rated voltage	250 V ac/dc
Max. make current, 4s at duty cycle 10%	15 A
Continuous carry	5 A
Breaking capacity, AC	2 000 VA
Breaking capacity, DC (L/R=40ms)	
at 48 V dc:	1.3 A
at 110 V dc:	0.4 A
at 220 V dc	0.2 A
Contact material	AgNi 90 / 10
Terminal block	Maximum wire dimension
- Phoenix MVSTBW or equivalent	2.5 mm ² (13 – 14 AWG)

Ethernet connection

Number of ports	1
Electrical connection	Ethernet RJ-45 (Ethernet 10-Base-T)
Protocols	VAMPSET Modbus TCP IEC 61850
Data transfer rate	10 Mb/s

Local serial communication port

Number of ports	1 on front and 1 on rear panel
Electrical connection	RS 232
Data transfer rate	2 400 – 38 400 kb/s

Remote control connection (option)

Number of ports	1 on rear panel
Electrical connection	TTL (standard) RS 485 (option) RS 232 (option) Plastic fiber connection (option) Glass fiber connection (option) Ethernet 10 Base-T (option, external module) 100M Ethernet fiber 100M Ethernet copper (RJ 45)
Data transfer rate	1 200 - 19 200 kb/s
Protocols	Modbus, RTU master Modbus, RTU slave SPA-bus, slave IEC 60870-5-103 Profibus DP (option) Modbus TCP (internal / external optional module) IEC 60870-5-101 IEC 60870-5-101 TCP DNP 3.0 DNP 3.0 TCP IEC 61850

Arc detection interface (option)

NOTE: Three arc binary inputs can be connected to one arc binary output without an external amplifier.

Number of arc sensor inputs	2
Sensor type to be connected	VA 1 DA
Operating voltage level	12 V dc
Current draw, when active	> 11.9 mA
Current draw range	1.3 – 31 mA (Note! If the draw is outside the range, either sensor or the wiring is defected)
Number of binary inputs	1 (optically isolated)
Operating voltage level	+48 V dc
Number of binary outputs	1 (transistor controlled)
Operating voltage level	+48 V dc

Analog output connection (option)

Number of analog mA output channels	4
Maximum output current	1 - 20 mA, step 1 mA
Minimum output current	0 - 19 mA, step 1 mA
Resolution	12 bit
Current step	< 6 μ A
Inaccuracy	± 20 μ A
Response time	
- normal mode	< 400 ms
- fast mode	< 50 ms
Burden	< 600 Ω

Test and environmental conditions

Table 12.1: Disturbance tests

Test	Standard & Test class / level	Test value
Emission	EN 61000-6-4 / IEC 60255-26	
- Conducted	EN 55011, Class A / IEC 60255-25	0.15 – 30 MHz
- Emitted	EN 55011, Class A / IEC 60255-25 / CISPR 11	30 – 1000 MHz
Immunity	EN 61000-6-2 / IEC 60255-26	
- 1Mhz damped oscillatory wave	IEC 60255-22-1	±2.5kVp CM, ±1.0kVp DM
- Static discharge (ESD)	EN 61000-4-2 Level 4 / IEC 60255-22-2 Class 4	8 kV contact discharge 15 kV air discharge
- Emitted HF field	EN 61000-4-3 Level 3 / IEC 60255-22-3	80 - 1000 MHz, 10 V/m
- Fast transients (EFT)	EN 61000-4-4 Level 3 / IEC 60255-22-4 Class B	2 kV, 5/50 ns, 5 kHz
- Surge	EN 61000-4-5 Level 3 / IEC 60255-22-5	2 kV, 1.2/50 µs, CM 1 kV, 1.2/50 µs, DM
- Conducted HF field	EN 61000-4-6 Level 3 / IEC 60255-22-6	0.15 - 80 MHz, 10 Vemf
- Power-frequency magnetic field	EN 61000-4-8	300A/m (continuous)
- Pulse magnetic field	EN 61000-4-9 Level 5	1000A/m, 1.2/50 µs
- Voltage interruptions	IEC 60255-11	100ms / 100%
- Voltage alternative component	IEC 60255-11	12% of operating voltage (DC)
- Voltage dips and short interruptions	EN 61000-4-11	30%/10ms, 100%/10ms, 60%/100ms, >95%/5000ms

Table 12.2: Electrical safety tests

Test	Standard & Test class / level	Test value
- Impulse voltage withstand	EN 60255-5, Class III	5 kV, 1.2/50 µs
- Dielectric test	EN 60255-5, Class III	2 kV, 50 Hz
- Insulation resistance	EN 60255-5	
- Protective bonding resistance	EN 60255-27	
- Power supply burden	IEC 60255-1	

Table 12.3: Mechanical tests

Vibration (IEC 60255-21-1)	10 – 60 Hz, amplitude ±0.035 mm
Class I	60 – 150 Hz, acceleration 0.5g sweep rate 1 octave/min 20 periods in X-, Y- and Z axis direction
Shock (IEC 60255-21-1)	half sine, acceleration 5 g, duration 11 ms
Class I	3 shocks in X-, Y- and Z axis direction

Table 12.4: Environmental conditions

Ambient temperature, in-service	-40 – 55°C (-40 – 131°F)
Ambient temperature, storage	-40 – 70°C (-40 – 158°F)
Relative air humidity	< 75% (1 year, average value) < 95%

Table 12.5: Casing

Degree of protection (IEC 60529)	Standard, front panel: NEMA 2 (IP30) IP20 rear panel Option: NEMA 2 (IP54) front panel
Standard model (w x h x d):	208 x 155 x 225 mm / 8.19 x 6.10 x 8.86 in
Material	1 mm (0.039 in) steel plate
Weight	4.2 kg (9.272 lb)
Color code	RAL 7032 (Casing) / RAL 7035 (Back plate)

Table 12.6: Package

Dimensions (W x H x D)	215 x 160 x 275 mm / 8.46 x 6.30 x 10.83 in
Weight (Terminal, Package and Manual)	5.2 kg (11.479 lb)

The following VAMP devices are UL and cUL listed: Models VAMP 321, VAMP 300F, VAMP 300M, followed by suffixes; Accessories - I/O Units, VAM 3L, VAM 3LX, VAM 10L, VAM 10LD, VAM 12L, and VAM 12LD; Sensor, Model ARC SLM-x where x represents the fiber length.

Protection functions

NOTE: Please see the section Current protection function dependencies for explanation of I_{MODE} .

*) EI = Extremely Inverse, NI = Normal Inverse, VI = Very Inverse, LTI = Long Time Inverse, MI = Moderately Inverse

**) This is the instantaneous time i.e. the minimum total operational time including the fault detection time and operation time of the trip contacts.

Non-directional current protection

Table 12.7: Overcurrent stage I> (50/51)

Pick-up current	1.10 – 5.00 x I_{MODE}
Definite time function:	DT**
- Operating time	0.04 – 300.00 s (step 0.02 s)
IDMT function:	
- Delay curve family	(DT), IEC, IEEE, RI Prg
- Curve type	EI, VI, NI, LTI, MI..., depends on the family*
- Time multiplier k	0.05 – 20.0, except 0.50 – 20.0 for RXIDG, IEEE and IEEE2
Start time	Typically 30 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Reset ratio	0.97
Transient over-reach, any τ	< 10 %
Inaccuracy:	
- Starting	±3% of the set value or 5 mA secondary
- Operating time at definite time function	±1% or ±25ms
- Operating time at IDMT function	±5% or at least ±25 ms**

Table 12.8: Overcurrent stage I>> (50/51)

Pick-up current	$1.10 - 20.00 \times I_N$
Definite time function	DT**
Operating time	0.04 – 1800.00 s (step 0.01 s)
Start time	Typically 30 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Reset ratio	0.97
Transient over-reach, any τ	< 10 %
Inaccuracy:	
- Starting	$\pm 3\%$ of the set value or 5 mA secondary
- Operation time	$\pm 1\%$ or ± 25 ms

Table 12.9: Overcurrent stage I>>> (50/51)

Pick-up current	$0.10 - 40.00 \times I_N (I>>>)$
Definite time function	DT**
Operating time	0.03 – 300.00 s (step 0.01 s)
Instant operation time:	
I_M/I_{SET} ratio > 1.5	<30 ms
I_M/I_{SET} ratio 1.03 – 1.5	< 50 ms
Start time	Typically 20 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Reset ratio	0.97
Inaccuracy:	
- Starting	$\pm 3\%$ of the set value or 5 mA secondary
- Operation time DT (I_M/I_{SET} ratio > 1.5)	$\pm 1\%$ or ± 15 ms
- Operation time DT (I_M/I_{SET} ratio 1.03 – 1.5)	$\pm 1\%$ or ± 25 ms

Table 12.10: Stall protection stage (48) in motor mode

Setting range:	
- Motor start detection current	1.30 – 10.00 x I_{MOT} (step 0.01)
- Nominal motor start current	1.50 – 10.00 x I_{MOT} (step 0.01)
Delay type:	DT, INV
Definite time characteristic (DT):	
- operating time	1.0 – 300.0 s (step 0.1)**
Inverse time characteristic (INV):	
- operation delay	1.0 – 300.0 s (step 0.1)
- Inverse time coefficient, k	1.0 – 200.0 s (step 0.1)
Minimum motor stop time to activate stall protection	500 ms
Maximum current raise time from motor stop to start	200 ms
Motor stopped limit	0.10 x I_{MOT}
Motor running lower limit	0.20 x I_{MOT}
Motor running limit after starting	1.20 x I_{MOT}
Start time	Typically 60 ms
Reset time	< 95 ms
Reset ratio	0.95
Inaccuracy:	
- Starting	±3% of the set value or 5 mA secondary
- Operating time at definite time function	±1% or at ±30 ms
- Operating time at IDMT function	±5% or at least ±30 ms

NOTE: Motor stopped and running limits are based on the average of three phase currents.

Table 12.11: Thermal overload stage $T>$ (49)

Maximum continuous current:	0.1 – 2.40 x I_{MODE} (step 0.01)
Alarm setting range:	60 – 99 % (step 1%)
Time constant Tau:	2 – 180 min (step 1)
Cooling time coefficient:	1.0 – 10.0 x Tau (step 0.1)
Max. overload at +40°C	70 – 120 % I_{MOT} (step 1)
Max. overload at +70°C	50 – 100 % I_{MOT} (step 1)
Ambient temperature	-55 – 125°C (step 1°)
Resetting ratio	0.95
Accuracy:	
- operating time	±5% or ±1 s

Table 12.12: Current unbalance stage $I_2 >$ (46) in motor mode

Setting range:	2 – 70% (step 1%)
Definite time characteristic:	
- operating time	1.0 – 600.0s s (step 0.1)
Inverse time characteristic:	
- 1 characteristic curve	Inv
- time multiplier	1 – 50 s (step 1)
- upper limit for inverse time	1000 s
Start time	Typically 300 ms
Reset time	< 450 ms
Reset ratio	0.95
Inaccuracy:	
- Starting	±1% - unit
- Operate time	±5% or ±200 ms

NOTE: Stage is operational when all secondary currents are above 250 mA.

Table 12.13: Incorrect phase sequence $I_2 >>$ (47)

Setting:	80 % (fixed)
Operating time	<120 ms
Reset time	< 105 ms

NOTE: Stage is blocked when motor has been running for 2 seconds.

Stage is operational only when least one of the currents is above $0.2 \times I_{MOT}$

Table 12.14: Undercurrent protection stage $I <$ (37)

Current setting range:	20 – 70 % I_{MODE} (step 1%)
Definite time characteristic:	
- operating time	0.3 – 300.0s s (step 0.1)
Block limit	15 % (fixed)
Start time	Typically 200 ms
Reset time	< 450 ms
Reset ratio	1.05
Accuracy:	
- starting	±2% of set value or ±0.5% of the rated value
- operating time	±1% or ±150 ms

NOTE: Stage Blocking is functional when all phase currents are below the block limit.

Table 12.15: Current unbalance stage $I_2 >$ (46) in feeder mode

Settings:	
- Setting range $I_2 / I_1 >$	2 – 70 %
Definite time function:	
- Operating time	1.0 – 600.0 s (step 0.1 s)
Start time	Typically 300 ms
Reset time	< 450 ms
Reset ratio	0.95
Inaccuracy:	
- Starting	±1% - unit
- Operate time	±5% or ±200 ms

Table 12.16: Ground fault stage $I_0 >$ (50N/51N)

Input signal	I_{01} (input X1:7-8) I_{02} (input X1:9-10) $I_{0Calc} (= I_{L1} + I_{L2} + I_{L3})^{\diamond}$
Setting range $I_0 >$	0.005 – 8.00 pu (when I_{01} or I_{02}) 0.05 – 20.0 pu (when I_{0Calc})
Definite time function:	DT**
- Operating time	0.04** – 300.00 s (step 0.02 s)
IDMT function:	
- Delay curve family	(DT), IEC, IEEE, RI Prg
- Curve type	EI, VI, NI, LTI, MI..., depends on the family*
- Time multiplier k	0.05 – 20.0, except 0.50 – 20.0 for RXIDG, IEEE and IEEE2
Start time	Typically 30 ms
Reset time	< 95 ms
Reset ratio	0.95
Inaccuracy:	
- Starting	±2% of the set value or ±0.3% of the rated value
- Starting (Peak mode)	±5% of the set value or ±2% of the rated value (Sine wave <65 Hz)
- Operating time at definite time function	±1% or ±25 ms
- Operating time at IDMT function	±5% or at least ±25 ms**

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Table 12.17: Ground fault stages $I_0>>$, $I_0>>>$, $I_0>>>>$ (50N/51N)

Input signal	I_{01} (input X1:7-8) I_{02} (input X1:9-10) $I_{0Calc} (= I_{L1} + I_{L2} + I_{L3}^*)$
Setting range	0.01 – 8.00 pu (When I_{01} or I_{02}) 0.05 – 20.0 pu (When I_{0Calc})
Definite time function:	
- Operating time	0.04** – 300.00 s (step 0.02 s)
Start time	Typically 30 ms
Reset time	< 95 ms
Reset ratio	0.95
Inaccuracy:	
- Starting	±2% of the set value or ±0.3% of the rated value
- Starting (Peak mode)	±5% of the set value or ±2% of the rated value (Sine wave <65 Hz)
- Operate time	±1% or ±25 ms

Table 12.18: Directional intermittent transient ground fault stage $I_{0INT}>$ (67NI)

Input selection for I_0 peak signal	I_{01} Connectors X1:7-8 I_{02} Connectors X1:9-10
I_0 peak pick up level (fixed)	0.1 pu @ 50 Hz
U_0 pickup level	1 – 60 % U_{0N}
Definite operating time	0.12 – 300.00 s (step 0.02)
Intermittent time	0.00 – 300.00 s (step 0.02)
Start time	< 60 ms
Reset time	< 60 ms
Reset ratio (hysteresis) for U_0	0.97
Inaccuracy:	
- starting	±3% for U_0 . No inaccuracy defined for I_0 transients
- time	±1% or ±30 ms (The actual operation time depends of the intermittent behavior of the fault and the intermittent time setting.)

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Directional current protection

Table 12.19: Directional overcurrent stages $I_{\phi}>$, $I_{\phi}>>$ (67)

Pick-up current	0.10 – 4.00 x I_{MODE}
Mode	Directional/Directional+BackUp
Minimum voltage for the direction solving	2 $V_{SECONDARY}$
Base angle setting range	-180° – +179°
Operation angle	±88°
Definite time function:	DT**
- Operating time	0.04 – 300.00 s (step 0.02 s)
IDMT function:	
- Delay curve family	(DT), IEC, IEEE, RI Prg
- Curve type	EI, VI, NI, LTI, MI...depends on the family*
- Time multiplier k	0.05 – 20.0, except 0.50 – 20.0 for RXIDG, IEEE and IEEE2
Start time	Typically 30 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Reset ratio	0.95
Reset ratio (angle)	2°
Transient over-reach, any τ	< 10 %
Voltage memory	1.5 seconds
Inaccuracy:	
- Starting (rated value $I_N= 1-5A$)	±3% of the set value or ±0.5% of the rated value
- Angle	±2° $U>5 V$ ±30° $U= 0.1 - 5.0 V$
- Operate time at definite time function	±1% or ±25 ms
- Operate time at IDMT function	±5% or at least ±30 ms**

Table 12.20: Directional overcurrent stages $I_{\phi}>>>$, $I_{\phi}>>>>$ (67)

Pick-up current	$0.10 - 20.0 \times I_{MODE}$
Mode	Directional/Directional+BackUp
Minimum voltage for the direction solving	$2 V_{SECONDARY}$
Base angle setting range	$-180^{\circ} - +179^{\circ}$
Operation angle	$\pm 88^{\circ}$
Definite time function:	DT**
- Operating time	0.04 – 300.00 s (step 0.02 s)
Start time	Typically 30 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Reset ratio	0.95
Reset ratio (angle)	2°
Transient over-reach, any τ	< 10 %
Inaccuracy:	
- Starting (rated value $I_N = 1 - 5A$)	$\pm 3\%$ of the set value or $\pm 0.5\%$ of the rated value
- Angle	$\pm 2^{\circ} U > 5 V$ $\pm 30^{\circ} U = 0.1 - 5.0 V$
- Operate time at definite time function	$\pm 1\%$ or ± 25 ms

Table 12.21: Directional ground fault stages $I_{0\phi} >$, $I_{0\phi} >>$ (67N)

Pick-up current	0.005 – 8.0 pu (for $I_{0\phi} >$) 0.01 – 8.0 pu (for $I_{0\phi} >>$) 0.005 – 20.0 pu When I_{0Calc} (for $I_{0\phi} >$) 1.1 – 20.0 pu When I_{0Calc} (for $I_{0\phi} >>$)
Start voltage	1 – 50 % U_{0N}
Input signal	I_{01} (input X1:7-8) I_{02} (input X1:9-10) I_{0Calc} ($= I_{L1} + I_{L2} + I_{L3}$ *)
Mode	Non-directional/Sector/ResCap
Base angle setting range	-180° – +179°
Operation angle	±88°
Definite time function:	
- Operating time	0.10** – 300.00 s (step 0.02 s)
IDMT function:	
- Delay curve family	(DT), IEC, IEEE, RI Prg
- Curve type	EI, VI, NI, LTI, MI..., depends on the family*
- Time multiplier k	0.05 – 20.0, except 0.50 – 20.0 for RI, IEEE and IEEE2
Start time	Typically 60 ms
Reset time	< 95 ms
Reset ratio	0.95
Reset ratio (angle)	2°
Inaccuracy:	
- Starting U_0 & I_0 (rated value $I_n = 1 – 5A$)	±3% of the set value or ±0.3% of the rated value
- Starting U_0 & I_0 (Peak Mode when, rated value $I_{0N} = 1 – 10A$)	±5% of the set value or ±2% of the rated value (Sine wave <65 Hz)
- Starting U_0 & I_0 (I_{0Calc})	±3% of the set value or ±0.5% of the rated value
- Angle	±2° when $U > 1V$ and $I_0 > 5\%$ of I_{0N} or $> 50 mA$ else ±20°
- Operate time at definite time function	±1% or ±30 ms
- Operate time at IDMT function	±5% or at least ±30 ms**

* L1, L2, and L3 are IEC phase names. For NEMA, the phases are as follows: L1=A, L2=B, and L3=C.

Frequent start protection

Table 12.22: Frequent start protection $N >$ (66)

Settings:	
- Max motor starts	1 – 20
- Min time between motor starts	1.1 – 100 min. (step 0.1 min)
Operation time	<250 ms
Inaccuracy:	
- Min time between motor starts	±5% of the set value

Voltage protection

Table 12.23: Overvoltage stage $U >$ (59)

Overvoltage setting range:	50 – 150 % U_N The measurement range is up to 160 V. This limit is the maximum usable setting when rated VT secondary is more than 100 V.
Definite time characteristic:	
- operating time	0.08** – 300.00 s (step 0.02)
Hysteresis	0.99 – 0.800 (0.1 – 20.0 %, step 0.1 %)
Start time	Typically 60 ms
Release delay	0.06 – 300.00 s (step 0.02)
Reset time	< 95 ms
Retardation time	< 50 ms
Inaccuracy:	
- starting	±3% of the set value
- operate time	±1% or ±30 ms

Table 12.24: Overvoltage stage $U >>$ (59)

Overvoltage setting range:	50 – 150 % U_N The measurement range is up to 160 V. This limit is the maximum usable setting when rated VT secondary is more than 100 V.
Definite time characteristic:	
- operating time	0.06** – 300.00 s (step 0.02)
Hysteresis	0.99 – 0.800 (0.1 – 20.0 %, step 0.1 %)
Start time	Typically 60 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Inaccuracy:	
- starting	±3% of the set value
- operate time	±1% or ±30 ms

Table 12.25: Overvoltage stage $U \gg$ (59)

Overvoltage setting range:	50 – 160 % U_N The measurement range is up to 160 V. This limit is the maximum usable setting when rated VT secondary is more than 100 V.
Definite time characteristic:	
- operating time	0.04** – 300.00 s (step 0.01)
Hysteresis	0.99 – 0.800 (0.1 – 20.0 %, step 0.1 %)
Start time	Typically 30 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Inaccuracy:	
- starting	±3% of the set value
- operate time	±1% or ±25 ms

Table 12.26: Undervoltage stage $U <$ (27)

Undervoltage setting range	20 – 120 % U_N
Definite time characteristic:	
- operating time	0.08** – 300.00 s (step 0.02)
Hysteresis	1.001 – 1.200 (0.1 – 20.0 %, step 0.1 %)
Self-blocking value of the undervoltage	0 – 80 % U_N
Start time	Typically 60 ms
Release delay	0.06 – 300.00 s (step 0.02 s)
Reset time	<95 ms
Retardation time	< 50 ms
Reset ratio (Block limit)	0.5 V or 1.03 (3 %)
Reset ratio	1.3 (depends on the hysteresis setting)
Inaccuracy:	
- starting	±3% of the set value
- blocking	±3% of set value or ±0.5 V
- operate time	±1% or ±30 ms

Table 12.27: Undervoltage stage $U_{<<}$ (27)

Undervoltage setting range	20 – 120 % U_N
Definite time characteristic:	
- operating time	0.06** – 300.00 s (step 0.02)
Hysteresis	1.001 – 1.200 (0.1 – 20.0 %, step 0.1 %)
Self-blocking value of the undervoltage	0 – 80 % U_N
Start time	Typically 60 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Reset ratio (Block limit)	0.5 V or 1.03 (3 %)
Reset ratio	1.3 (depends on the hysteresis setting)
Inaccuracy:	
- starting	±3% of the set value
- blocking	±3% of set value or ±0.5 V
- operate time	±1% or ±30 ms

Table 12.28: Undervoltage stage $U_{<<<}$ (27)

Undervoltage setting range	20 – 120 % U_N
Definite time characteristic:	
- operating time	0.04** – 300.00 s (step 0.01)
Hysteresis	1.001 – 1.200 (0.1 – 20.0 %, step 0.1 %)
Self-blocking value of the undervoltage	0 - 80 % U_N
Start time	Typically 30 ms
Reset time	< 95 ms
Retardation time	< 50 ms
Reset ratio (Block limit)	0.5 V or 1.03 (3 %)
Reset ratio	1.3 (depends on the hysteresis setting)
Inaccuracy:	
- starting	±3% of the set value
- blocking	±3% of set value or ±0.5 V
- operate time	±1% or ±25 ms

Table 12.29: Zero sequence voltage stage $U_0 > (59N)$

Zero sequence voltage setting range	1 – 60 % U_{0N}
Definite time function:	
- Operating time	0.3 – 300.0 s (step 0.1 s)
Start time	Typically 200 ms
Reset time	< 450 ms
Reset ratio	0.97
Inaccuracy:	
- Starting	$\pm 2\%$ of the set value or $\pm 0.3\%$ of the rated value
- Starting U_{0Calc} (3LN mode)	± 1 V
- Operate time	$\pm 1\%$ or ± 150 ms

Table 12.30: Zero sequence voltage stage $U_0 >> (59N)$

Zero sequence voltage setting range	1 – 60 % U_{0N}
Definite time function:	
- Operating time	0.08 – 300.0 s (step 0.02 s)
Start time	Typically 60 ms
Reset time	< 95 ms
Reset ratio	0.97
Inaccuracy:	
- Starting	$\pm 2\%$ of the set value or $\pm 0.3\%$ of the rated value
- Starting U_{0Calc} (3LN mode)	± 1 V
- Operate time	$\pm 1\%$ or ± 30 ms

Circuit breaker failure protection CBFP (50BF)

Table 12.31: Circuit breaker failure protection CBFP (50BF)

Relay to be supervised	T1 – Tn (depending the order code)
Definite time function	
- Operating time	0.1** – 10.0 s (step 0.1 s)
Reset time	< 95 ms
Inaccuracy	
- Operating time	± 20 ms

Magnetizing inrush 68F2

Table 12.32: Magnetizing inrush 68F2

Settings:	
- Setting range magnetizing inrush	10 – 100 %
- Operating time	0.05 – 300.00 s (step 0.01 s)
Inaccuracy:	
- Starting	±1%- unit

NOTE: The amplitude of second harmonic content has to be at least 2% of the nominal of CT. If the nominal current is 5 A, the 100 Hz component needs to exceed 100 mA.

Over excitation 68F5

Table 12.33: Over excitation 68F5

Settings:	
- Setting range over excitation	10 – 100 %
- Operating time	0.05 – 300.00 s (step 0.01 s)
Inaccuracy:	
- Starting	±2%- unit

NOTE: The amplitude of fifth harmonic content has to be at least 2% of the nominal of CT. If the nominal current is 5 A, the 250 Hz component needs to exceed 100 mA.

Frequency protection

Table 12.34: Overfrequency and underfrequency stages $f > <$, $f > < <$ (81H/81L)

Frequency measuring area	16.0 – 75.0 Hz
Current and voltage meas. Range	45.0 – 65.0 Hz
Frequency stage setting range	40.1 – 70.0 Hz
Low voltage blocking	10 – 100 %U _N Suitable frequency area for low voltage blocking is 45 – 65 Hz. Low voltage blocking is checking the maximum of line to line voltages.
Definite time function:	
-operating time	0.10** – 300.0 s (step 0.02 s)
Start time	< 100 ms
Reset time	<120 ms
Reset ratio ($f >$ and $f > <$)	0.998
Reset ratio ($f <$ and $f < <$)	1.002
Reset ratio (LV block)	Instant (no hysteresis)
Inaccuracy:	
- starting	±20 mHz
- starting (LV block)	3% of the set value or ±0.5 V
- operating time	±1% or ±30 ms

NOTE: If device restarts for some reason there will be no trip even if the frequency is below the set limit during the start up (Start and trip is blocked). To cancel this block, frequency has to rise above the set limit.

Table 12.35: Underfrequency stages $f<$, $f<<$ (81L)

Frequency measuring area	16.0 – 75.0 Hz
Current and voltage meas. range	45.0 – 65.0 Hz
Frequency stage setting range	40.1 – 64.0 Hz
Low voltage blocking	10 – 100 %U _N Suitable frequency area for low voltage blocking is 45 – 65 Hz. Low voltage blocking is checking the maximum of line to line voltages.
Definite time function:	
-operating time	0.10** – 300.0 s (step 0.02 s)
Undervoltage blocking	2 – 100 %
Start time	< 100 ms
Reset time	<120 ms
Reset ratio	1.002
Reset ratio (LV block)	Instant (no hysteresis)
Inaccuracy:	
- starting	±20 mHz
- starting (LV block)	3% of the set value or ±0.5 V
- operating time	±1% or ±30 ms

Table 12.36: Rate of change of frequency (ROCOF) stage df/dt (81R)

Pick-up setting df/dt	1.2– 10.0 Hz/s (step 0.1 Hz/s)
Definite time delay ($t>$ and $t_{Min}>$ are equal):	
- operating time $t>$	0.14** – 10.00 s (step 0.02 s)
Inverse time delay ($t>$ is more than $t_{Min}>$):	
- minimum operating time $t_{Min}>$	0.14** – 10.00 s (step 0.02 s)
Start time	Typically 140 ms
Reset time	+150 ms
Retardation time	<90 ms
Reset ratio	1
Inaccuracy:	
- starting	10% of set value or ±0.1 Hz/s
- operating time (overshoot ≥ 0.2Hz/s)	±35 ms, when area is 0.2 – 1.0 Hz/s

NOTE: ROCOF stage is using the same low voltage blocking limit as the frequency stages.

Power protection

Table 12.37: Directional power stages $P<$, $P<<$ (32)

Pick-up setting range	-200.0 – +200.0 %S _N
Definite time function:	
- Operating time	0.3 – 300.0 s
Start time	Typically 200 ms
Reset time	<500 ms
Reset ratio	1.05
Inaccuracy:	
- Starting	±3 % of set value or ±0.5 % of rated value
- Operating time at definite time function	±1 % or ±150 ms

NOTE: When pick-up setting is +1 – +200% an internal block will be activated if max. voltage of all phases drops below 5% of rated.

Synchrocheck function

Table 12.38: Synchrocheck function

Sync mode	Off; Async; Sync;
Voltage check mode	DD; DL; LD; DD/DL; DD/LD; DL/LD; DD/DL/LD
CB closing time	0.04 – 0.6 s
U _{DEAD} limit setting	10 – 120 %U _N
U _{LIVE} limit setting	10 – 120 %U _N
Frequency difference	0.01 – 1.00 Hz
Voltage difference	1 – 60 %U _N
Phase angle difference	2° – 90°
Request timeout	0.1 – 600.0 s
Stage operation range	46.0 – 64.0 Hz
Reset ratio (U)	0.97
Inaccuracy:	
- voltage	±3 %U _N
- frequency	±20 mHz
- phase angle	±2° (when Δf < 0.2 Hz, else ±5°)
- operating time	±1% or ±30 ms

NOTE: When “sync” mode is used, Δf should be less < 0.2 Hz.

Arc fault detection (option)

The operation of the arc detection depends on the setting value of the $Arcl>$, $Arcl_{01}>$ and $Arcl_{02}>$ current limits.

The arc current limits cannot be set, unless the relay is provided with the optional arc protection card.

Table 12.39: Arc detection stage $Arcl>$ (50ARC), $Arcl_{01}>$ (50NARC), $Arcl_{02}>$ (50NARC)

Setting range	0.5 – 10.0 x I_N
Arc sensor connection:	S1, S2, S1/S2, BI, S1/BI, S2/BI, S1/S2/BI
- Operating time (Light only)	13 ms
- Operating time ($4 \times I_{SET}$ + light)	17 ms
- Operating time (BIN)	10 ms
- Operating time (Delayed Arc L>)	0.01 – 0.15 s
- BO operating time	< 3 ms
Reset time	< 95 ms
Reset time (Delayed ARC L)	<120 ms
Reset time (BO)	<85 ms
Reset ratio	0.90
Inaccuracy:	
- Starting	10% of the set value
- Operating time	±5 ms
- Delayed ARC light	±10 ms
Inaccuracy:	
- Activation	±0.5 V or ±3% of the set value
- Activation (block limit)	±5% of the set value
- Operating time at definite time function	±1% or ±30 ms

Supporting functions

****)** This is the instantaneous time i.e. the minimum total operational time including the fault detection time and operation time of the trip contacts.

The operation of disturbance recorder depends on the following settings. The recording time and the number of records depend on the time setting and the number of selected channels.

Table 12.40: Disturbance recorder (DR)

Mode of recording	Saturated/Overflow
Sample rate:	
- Waveform recording	32/cycle, 16/cycle, 8/cycle
- Trend curve recording	10, 20, 200 ms 1, 5, 10, 15, 30 s 1 min.
Recording time (one record)	0.1 s – 12 000 min (According recorder setting)
Pre-trigger rate	0 – 100%
Number of selected channels	0 – 12

Table 12.41: Inrush current detection

Cold load settings:	
- Idle current	$0.01 - 0.50 \times I_N$
- Pickup current	$0.30 - 10.00 \times I_N$
- Maximum time	$0.01^{**} - 300.00 \text{ s}$ (step 0.01 s)
Inrush settings:	
- Pickup for 2nd harmonic	0 – 99 %

Table 12.42: Current transformer supervision

Pick-up current	$1.2 - 10.00 \times I_N$
Definite time function:	DT
- Operating time	$0.06 - 600.00 \text{ s}$ (step 0.02 s)
Reset time	< 60 ms
Reset ratio $I_{MAX}>$	0.97
Reset ratio $I_{MIN}<$	1.03
Inaccuracy:	
- Activation	±3% of the set value
- Operating time at definite time function	±1% or ±30 ms

Table 12.43: Voltage transformer supervision

U ₂ > setting	0.0 – 200.0 %
I ₂ < setting	0.0 – 200.0 %
Definite time function:	DT
- Operating time	0.04 – 600.00 (step 0.02s)
Reset time	< 60 ms
Reset ratio	3% of the pick-up value
Inaccuracy:	
- Activation U ₂ >	±1%-unit
- Activation I ₂ <	±1%-unit
- Operating time at definite time function	±1% or ±30 ms

Table 12.44: Voltage sag and swell

Measurement mode	Default; L-L; L-N
Voltage sag limit	10 – 120 % U _N
Voltage swell limit	20 – 150 % U _N
Definite time function:	DT
- Operating time	0.08 – 1.00 s (step 0.02 s)
Low voltage blocking	0 – 50 %
Voltage low limit (U ₁)	10 – 120 % U _N
Definite time function:	DT
- Operating time	<60 ms (Fixed)
Reset time	< 60 ms
Reset ration:	
- Sag	1.03
- Swell	0.97
Block limit	0.5 V or 1.03 (3 %)
Inaccuracy:	±0.5 V or ±3% of the set value
- Activation	±5% of the set value
- Activation (block limit)	
- Operating time at definite time function	±1% or ±30 ms


If one of the phase voltages is below sag limit and above block limit but another phase voltage drops below block limit, blocking is disabled.

Table 12.45: Voltage interruptions

Voltage low limit (U ₁)	10 – 120 %U _N
Definite time function:	DT
- Operating time	<60 ms (Fixed)
Reset time	< 60 ms
Reset ratio	1.03
Inaccuracy:	3% of the set value
- Activation	



Section 13: Construction

PANEL MOUNTING VAMP 200 SERIES

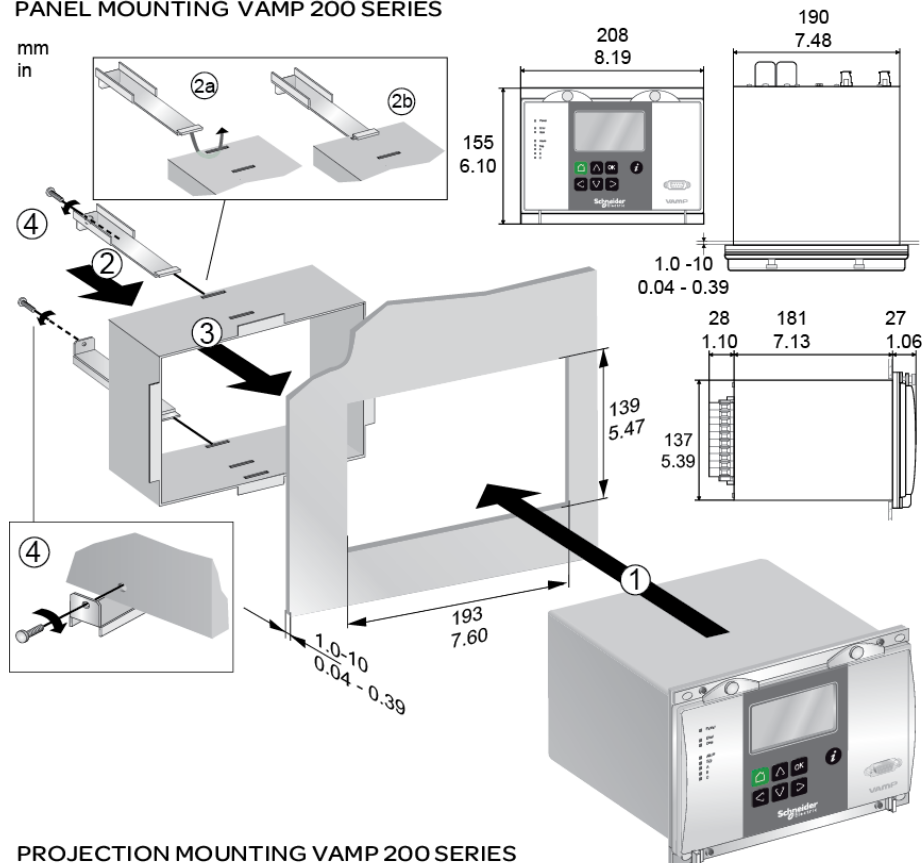


PROJECTION MOUNTING VAMP 200 SERIES

Projection	A	B	Fixing bracket
VYX076	40 mm / 1.57"	169 mm/ 6.65"	Standard for 200 series
VYX077	60 mm / 2.36"	149 mm/ 5.87"	Standard for 200 series
VYX233	100 mm / 3.94"	109 mm/4.29"	2 x VYX199 needed

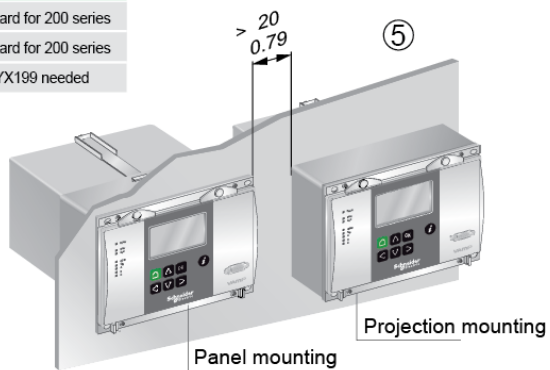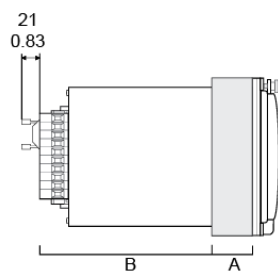

VAMP 200 SERIES WALL ASSEMBLY FRAME TYPE V200WAF

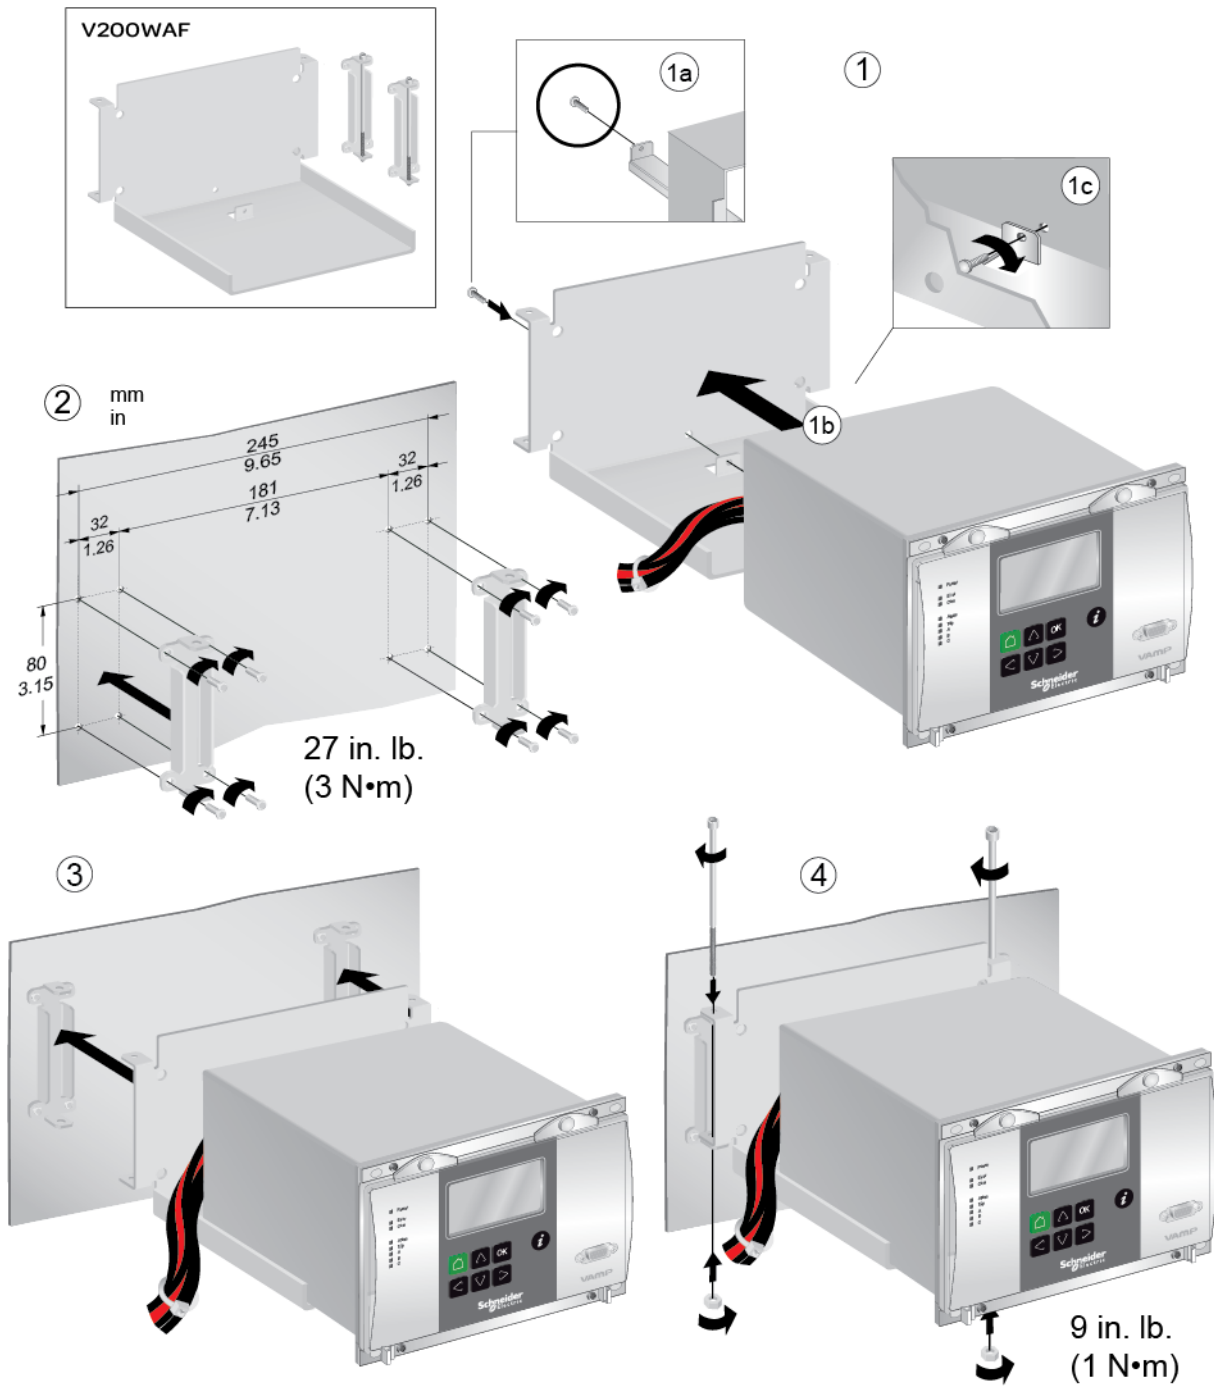


Section 14: Order information

When ordering, please state:


- Type designation:
- Quantity:
- Options (see respective ordering code):

Vamp 255 ordering code

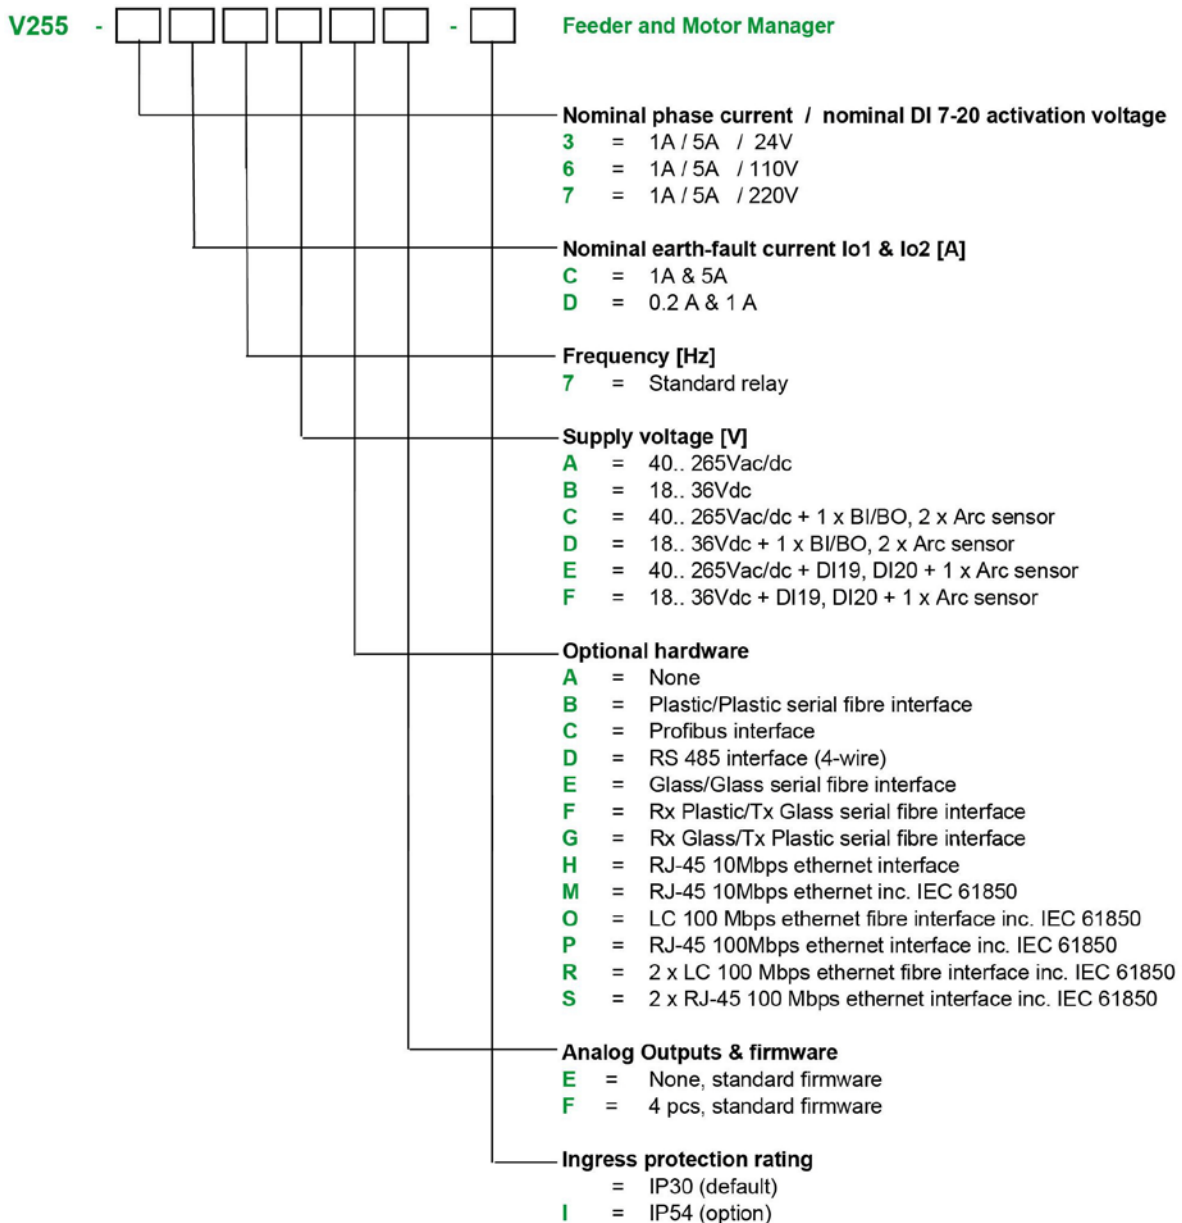

NOTE: 1) DI activation voltage selection applies to DI 7 - DI20 only

Vamp 230 ordering code

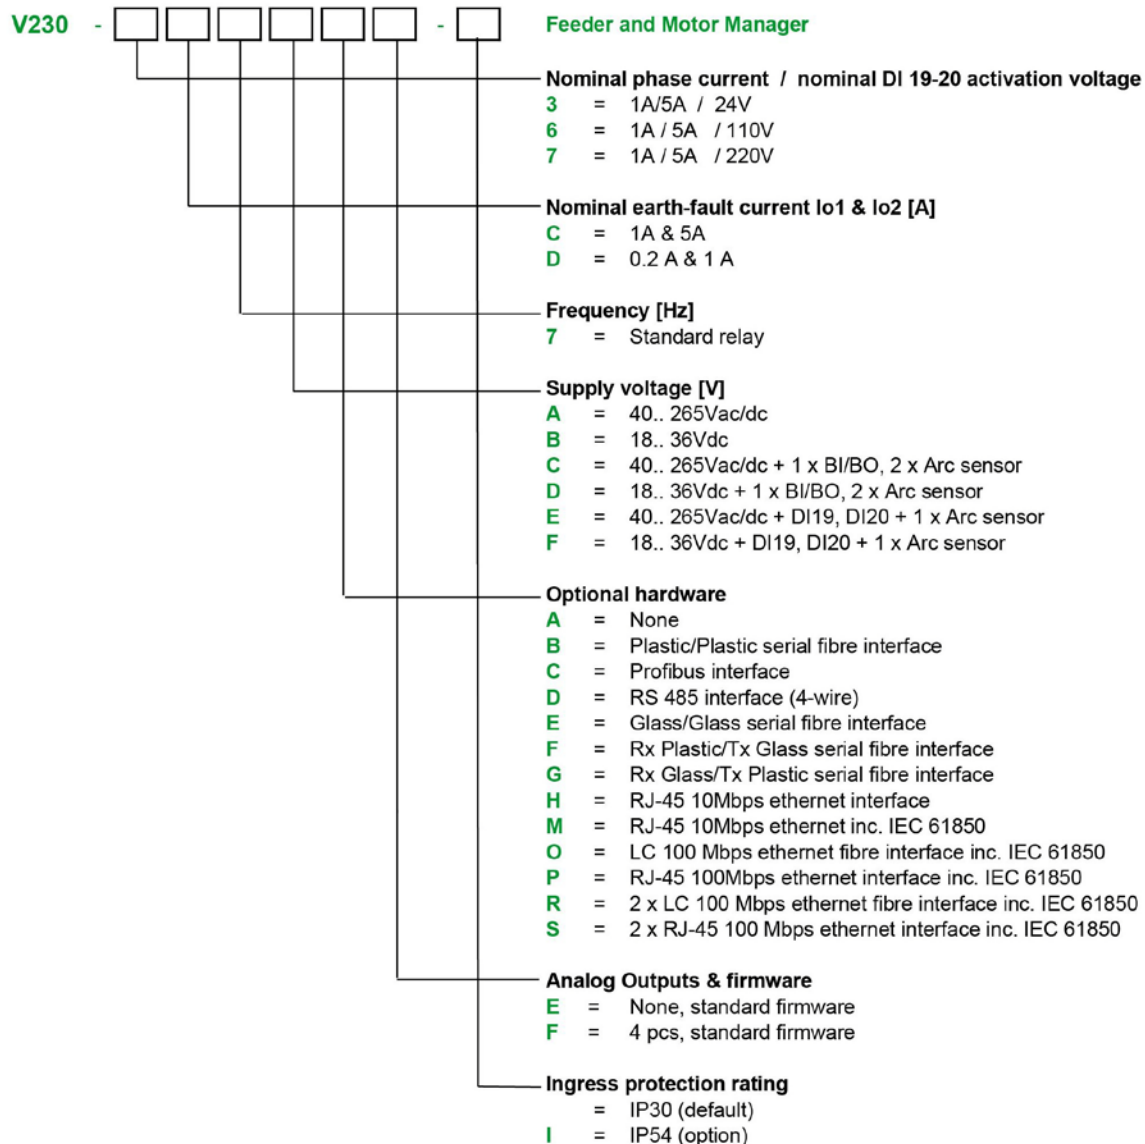

NOTES: 1) DI activation voltage selection applies to DI 7 - DI20 only

NEMA rating for IP30=NEMA 1

NEMA rating for IP54=NEMA 2

Accessories

Order code	Description	Note
VEA 3CGi	Ethernet adapter	
VPA 3CG	Profibus DP fieldbus option board	
VSE001PP	Fiber optic Interface Module (plastic - plastic)	Max. distance: 0.62 mile (1 km)
VSE002	RS485 Interface Module	
VSE003	Local port RS-485 interface module, Ext I/O interface	
VSE009	External DeviceNet interface module	
VIO 12 AB	RTD Module, 12pcs RTD inputs, RS 485 Communication (24-230 Vac/dc)	
VIO 12 AC	RTD/mA Module, 12pcs RTD inputs, PTC, mA inputs/outputs, RS232, RS485 and Optical Tx/Rx Communication (24 Vdc)	
VIO 12 AD	RTD/mA Module, 12pcs RTD inputs, PTC, mA inputs/outputs, RS232, RS485 and Optical Tx/Rx Communication (48-230 Vac/dc)	Cable length: 20 ft. (6 m)
VX003-3 3P025	RS232 programming cable (VAMPSET, VEA 3CGi) USB to RS232 adapter	Cable length: 10 ft. (3 m)
VX004-M3	TTL/RS232 converter cable (PLC, VEA 3CGi)	Cable length: 10 ft. (3 m)
VX007-F3	TTL/RS232 converter cable (VPA 3CG)	Cable length: 10 ft. (3 m)
VA 1 DA-6	Arc Sensor	Cable length: 20 ft. (6 m)
VAM 16D	External LED module	Disables rear local communication
VYX076	Projection for 200 series	Height: 1.6 in. (40 mm)
VYX077	Projection for 200 series	Height: 2.4 in. (60 mm)
VYX233	Projection for 200 series	Height: 4 in. (100 mm)
V200WAF	V200 wall assembly frame	

Section 15: Revision history

Table 15.1: Firmware revision history

10.58	New features in IEC 61850 added. Outputs vef files with suomi & russian language packets.
10.65	100 Mbps option card support.
10.67	Default font sizes changed. IO>> minimum delay setting changed to 0.05s with 0.01s step. Popup window added for language packet init. EF items: EFDX, EFDFph, EFctr and EFDFItDist added to IEC103.
10.74	I> and I ₀ > - I ₀ >>>> -stages with faster operation time.
10.85	Virtual output events added.
10.97	Autoreclose: - when two CB's are used and both closed, AR is blocked - start counter is not increased after manual CB close 5th harmonic blocking stage added.
10.106	GOOSE supervision signals added. Automatic LED latch release added. Disturbance recorder full event added. Motor load current in per cent.
10.108	Use of recorder memory in percents added. Various additions to IEC 61850.
10.116	IP and other TCP parameters are able to change without reboot. Logic output numbering is not changed when changes are made in the logic. NOTE! Minimum VAMPSet version of 2.2.97 required.
10.118	Enable sending of analog data in GOOSE message. Day light saving (DST) rules added for system clock. HMI changes: - Order of the first displays changed, 1.measurement, 2. mimic, 3. title - timeout does not apply if the first 3 displays are active

10.135	Fast <30ms total operation time for I>>> stage. Added 61850 File Transfer. Added Difference of 2 signals compare mode in programmable stage. Stages renamed: • If2> = MAGNETIZING INRUSH 68F2 • If5> = OVER EXCITATION 68F5 • P< = DIRECTIONAL POWER 32 • P<< = DIRECTIONAL POWER 32 Harmonic and waveform displays have real input channel names, not Ua-Ud. IEC 101 over Ethernet. ModbusTCP and ModbusSlv can be used simultaneously. Enable sending of analog data in GOOSE message. Added for distance protection: Low current block. Added FTP passive mode. Added second CB object to syncrocheck.
--------	---

Schneider Electric USA, Inc.

800 Federal Street

Andover, MA 01810 USA

888-778-2733

www.schneider-electric.us

Standards, specifications, and designs may change, so please ask for confirmation that the information in this publication is current.

Schneider Electric and Square D are owned by Schneider Electric Industries SAS or its affiliated companies. All other trademarks are the property of their respective owners.

© 2015 Schneider Electric All Rights Reserved

63230-218-205, 05/2015