

User's Manual



Farm & Learn Animal Wagon™



© 2015 VTech Printed in China 91-003021-002 (§)

Dear Parent,

Welcome to the world of **Go! Go! Smart Animals**^m! We're excited you've decided to go on an adventure with us and explore all that **Go! Go! Smart Animals**^m has to offer. These toys have been designed to give your child a thrilling learning experience with hours of fun.

GO! GO! Smart Animals™ features a collection of animals that interact with your child by lighting up and playing music and sounds while teaching your child letters and animal names*. But that's only the beginning of the learning excitement! When your child interacts with our innovative SmartPoint® technology, they will love hearing the animals respond to each SmartPoint® location on GO! GO! Smart Animals™ and GO! GO! Smart Wheels® playsets* with different phrases, cheerful melodies, sing-along songs or sound effects.

Additionally, our Go! Go! Smart Animals playsets include tracks that can be arranged in endless ways and can be connected to other playsets including Go! Go! Smart Wheels to stimulate your child's creativity. The playsets also feature buttons, gears and other manipulative elements to encourage the development of your child's fine motor skills.

With Go! Go! Smart Animals™, playtime goes wild with learning!

sincerely,

Your friends at VTecho


To learn more about **VTech®** toys, visit www.vtechkids.com

*Each sold separately.

INTRODUCTION

Thank you for purchasing the VTech® Go! Go! Smart Animals™ Farm & Learn Animal Wagon™ playset!

Explore the Go! Go! Smart Animals™ Farm & Learn Animal Wagon™ playset by VTech®. Learn about animals, colors and more with the SmartPoint® goat. Launch the goat and kid down the slide and through the wagon. For added fun, you can connect this playset to other Go! Go! Smart Animals™ and Go! Go! Smart Wheels® playsets (each sold separately).

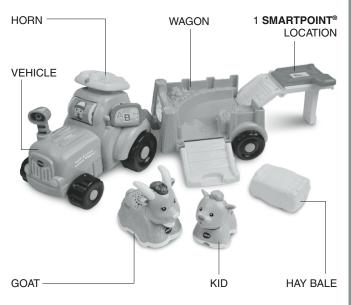

INCLUDED IN THIS PACKAGE

One User's Manual One Label Sheet



One SmartPoint® Goat



One Kid



One Vehicle



One Horn



One Animal Wagon



One Hay Bale

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet. NOTE:

Please keep the user's manual as it contains important information.

Unlock the packaging locks:



- ① Turn the packaging lock counter-clockwise several times.
- 2 Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION – GOAT

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the goat. Use a coin or a screwdriver to loosen the screw.
- Install 2 new "AAA" (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure the battery cover.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- · Remove batteries during long periods of non-use.
- · Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Please adhere the labels to the playset securely as indicated below:





ASSEMBLY INSTRUCTIONS

With the VTech® Go! Go! Smart Animals™ Farm & Learn Animal Wagon™ playset, safety comes first. To ensure your child's safety, adult assembly is required.

 
 Attach the horn to the vehicle as shown. You will hear a "click" sound to indicate the horn is secure.



PRODUCT FEATURES - GOAT

1. ON/OFF SWITCH

To turn the unit ON, slide the ON/OFF SWITCH on the unit to the ON (\oplus) position. To turn the unit OFF, slide the ON/OFF SWITCH to the OFF (\oplus) position.




2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Go! Go! Smart Animals™ Goat will automatically power-down after approximately 30 seconds without input. The unit only can be turned on again by pressing the light-up button or pushing the goat quickly.

Note: This product is in a try-me mode in the packaging. After opening the package, turn the animal off and on again to proceed with normal play.

ACTIVITIES - GOAT

  Slide the ON/OFF SWITCH to the ON position to turn the unit on. You will hear a goat sound, a song and a phrase. The light will flash with the sounds.



Press the LIGHT-UP BUTTON to hear fun sounds, sing-along songs and phrases. The light will flash with the sounds.




 Push the goat to hear fun sounds and melodies. While a melody is playing, push the goat again to add in fun sounds on top of the melody. The light will flash with the sounds.



4. Press the goat's nose to hear nurturing phrases about her baby.



 The kid can be attached to the mother goat. Simply unfold the snap ring from under the kid and insert the snap ring into the holes on the back of the goat. To remove the kid, pull gently on the snap ring.

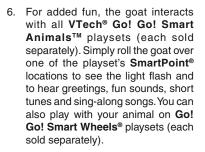





ACTIVITIES - VEHICLE & WAGON

1. Tap the horn to hear fun sounds.



2. Roll the windshield to change drivers.



 
3. Flip the window to see the driver inside.



4. Turn the chimney for mechanical fun.



Attach the wagon to the vehicle by placing the ring on the wagon over the post on the back of the vehicle.



 Place the goat on the LAUNCHER inside the wagon. Lift up the LAUNCHER to send the goat down the slide.



7. Fold the launcher inside the wagon and flip up the slide so that the wagon can roll smoothly.



CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit sit for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service.

against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.