



AzureWave

AzureWave Technologies, Inc.

IEEE 802.11 b/g Wireless Router with 4 Port Switch

AW-GR520

User's Manual

COPYRIGHT

AzureWave Technologies, Inc. All rights reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of AzureWave Technologies, Inc.

DISCLAIMER

AzureWave provides this document “as is”, without warranty of any kind, neither expressed nor implied, including, but not limited to, the particular purpose. AzureWave may make improvements and/or changes in this document or in the product described in this document at any time. This document could include technical inaccuracies or typographical errors.

TRADEMARKS

AzureWave is a trademark of AzureWave Technologies, Inc. Other names mentioned in this document are trademarks/registered trademarks of their respective owners.

USING THIS DOCUMENT

This document provides detailed user guidelines to provide AzureWave 802.11 g/b Wireless Router with 4 Port Switch operation and setting-up. Though every effort has been made to assure that this document is current and accurate, more information may have become available subsequent to the production of this guide. In that event, please contact your AzureWave representative for additional information that may help in the development process.

Model: AW-GR520
User's Manual
English
1st Edition, April 2007

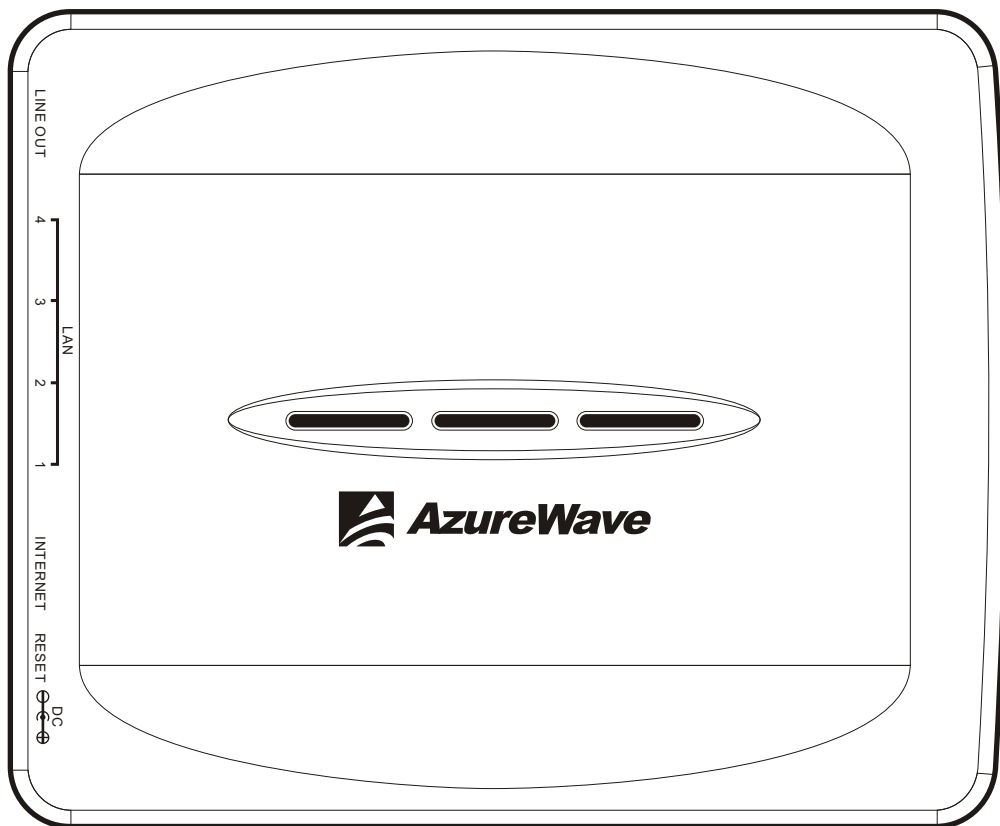


Table of Contents

Contents of Package	5	Advanced	19
System Requirements	5	Broadcast SSID	19
Introduction	6	Channel With	19
Product overview	6	Beacon Period	19
Key Features	6	RTS Threshold	19
LED Indicator & Hardware overview	7	Fragmentation Threshold	19
LED Indicator	8	DTIM Interval	19
Antenna Location	8	WMM	19
The Hardware Installation	8	Short GI	20
System Requirements	8	Firewall	20
Hardware Installation	8	Internet Access	20
Range of Operation	8	MAC Filter	21
How to Access the Web-based Utility	10	Domain Filter	22
Status-Main Page	10	URL Filter	23
Log	11	Port Forwarding	23
DHCP Client List	11	Triggering	24
Wireless Station List	11	DMZ	25
Network	12	Security	26
Connection type	12	Ping Access on WAN	26
DHCP-Automatically Set	12	IDENT Pass Through	26
Static IP	12	Stateful Protect	26
PPPOE	12	SYN FLOOD Protect	26
PPTP	13	PING FLOOD Protect	26
LAN	14	VPN Pass Through	26
Mac Clone	14	IPSec Pass Through	26
Dynamic DNS	14	PPTP Pass Through	26
UPnP	15	L2TP Pass Through	26
Wireless	15	System	27
Basic	15	Admin	27
Encryption type	16	Time	28
64bit/128bit	16	Config	28
WPA-PSK	16	Firmware	29
WPA2-PSK	17	Regulatory Information	30
WPA-PSK/WPA2-PSK Mixed	17		
WPA Enterprise	17		
WPA2 Enterprise	18		
WPA/WPA2 Mixed	19		

Contents of Package:


Azurewave AW-GR520



802.11 b/g Wireless Router



User Manual on CD-ROM

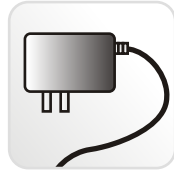

Power Adapter 5V/2.0A



Ethernet Cable



Quick Installation Guide

※ If any of the above items are missing, please contact your retailer.

System Requirements:

1. Browser-Internet Explorer 5.5 above or Firefox 1.0
2. Wired or Wireless Network Adapter
3. CD-ROM Drive

Introduction

Product overview

Compliant with the IEEE 802.11b/g standard and the AW-GR520 use Direct Sequence Spread Spectrum (DSSS), Orthogonal Frequency Division Multiplexing (OFDM), DBPSK, DQPSK, CCK and QAM baseband modulation.



AW-GR520 is a Wireless Access Point and Broadband Router which allow user access Internet via LAN/WLAN. AW-GR520 supports advanced security features including WEP, WPA,WPA2, and Firewall, DoS (Denial of Service) protection, and internet access control.

Key Features

- Standard
Wireless: IEEE 802.11b, IEEE 802.11g standard
Ethernet: IEEE802.3, IEEE802.3u
- Data Rate: Up to 54Mbps data rate.
- Security: Wi-Fi Protected Access (WPA), WPA2, 128-bit WEP encryption and MAC filtering
- UPnP IGD enabled.
- Web-based browser configuration for simplified management.
- DHCP Client and Server allow true plug-and play installations.
- Network Address /Port Translation (NAT/PAT) and Virtual Server Mapping allow LANs to be served with one of few IP addresses
- Firewall support for access-list control, DoS Attack prevention, stateful inspection (SPI).
- Supporting Internet protocols include Cable modem (DHCP Client), ADSL modem (PPPoE), PPTP, and Static IP.
- Support VPN Pass Through for IPSec, PPTP, and L2TP.
- All LAN ports support Auto-Crossover(MDI/MDI-X)

Environmental factors may adversely affect range

LED Indicator & Hardware overview

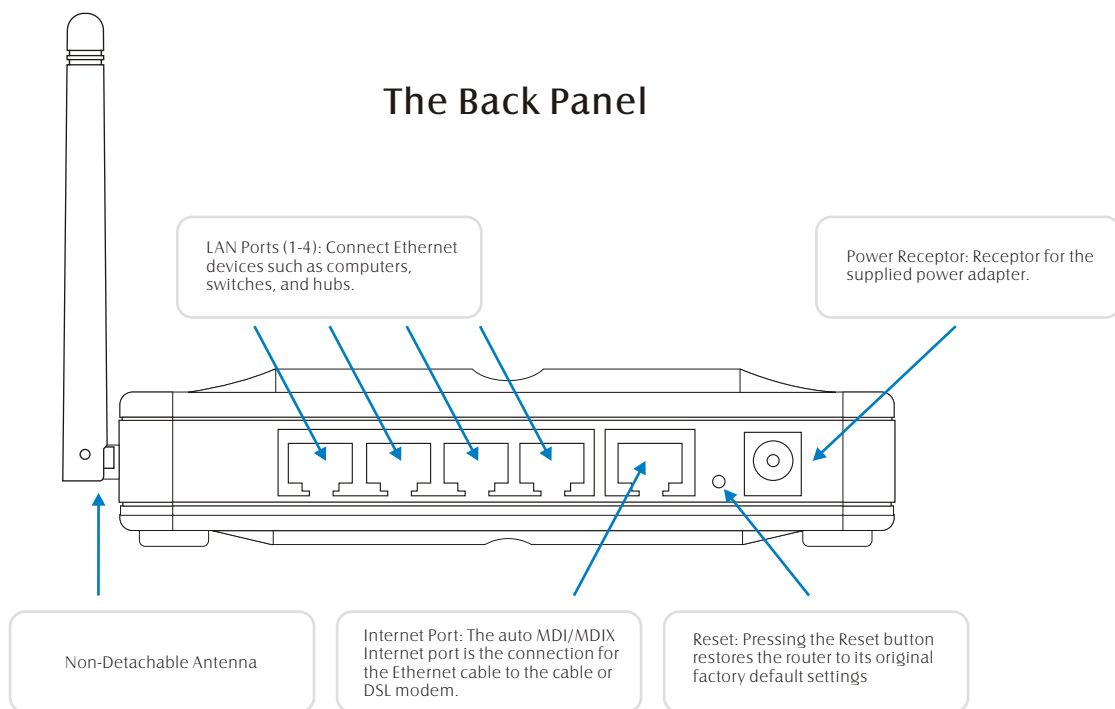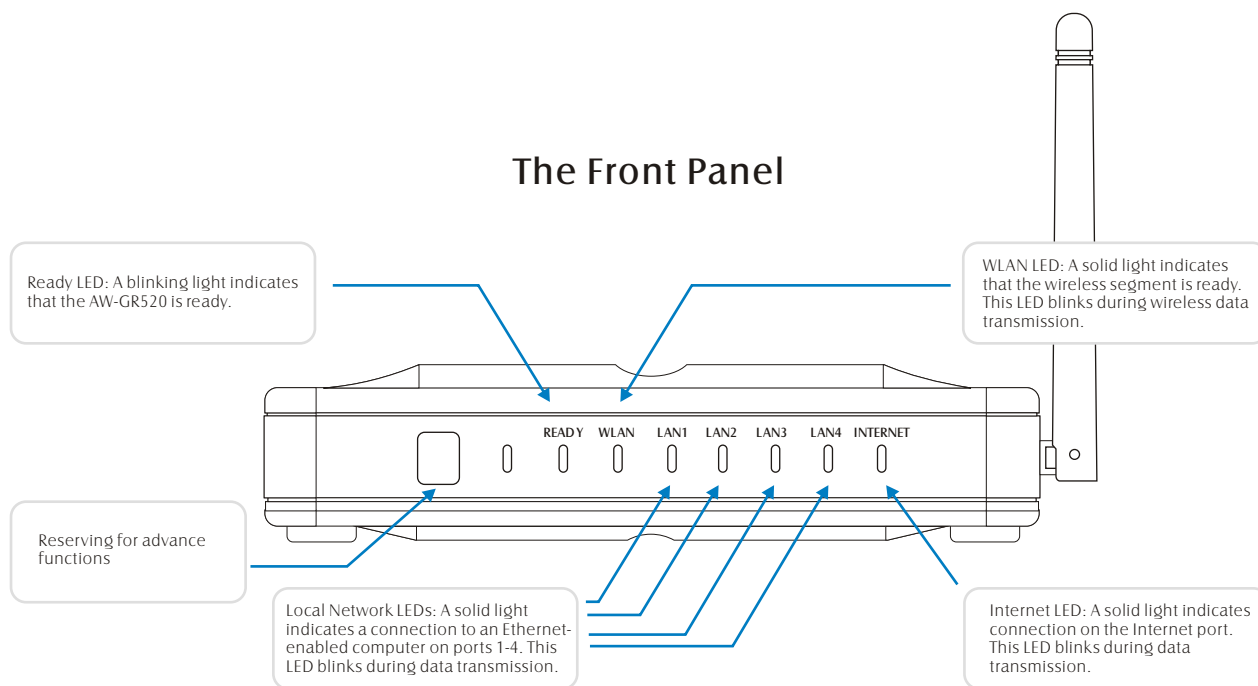

The Hardware Installation

System Requirements

Before installing the AW-GR520, make sure your system satisfies the following requirements.

- Desktop or Laptop with an Ethernet port
- Browser-Internet Explorer 5.5 or Firefox 1.0 above
- Wired or Wireless Network Adapter
- CD-ROM Drive

Hardware Installation

The AW-GR520 package comes together with a Non-detachable type-antenna to maximize its network operating range.

1. Make sure that all of your hardware is powered off, including the broadband modem and PCs.
2. Connect your broadband modem's Ethernet cable to the Router's Internet port.
3. Connect one end of an Ethernet network cable to one of the numbered ports on the back of the Router. Connect the other end to an Ethernet port on a network device, e.g., a PC, print server, or switch. Repeat this step to connect more PCs or other network devices to the Router.
4. Power on the broadband modem.
5. Connect the included power adapter to the Router's Power port, and then plug the power adapter into an electrical outlet.
6. Power on your PC(s).
7. Locate an optimum location for the Router. The best place for the Router is usually at the center of your wireless network, with line of sight to all of your wireless devices.


Operating Range

The signal range of AW-GR520 varies from the operating environment. Obstacles such as walls and metal barriers could reflex and absorb radio signals. Devices like microwave ovens can create problems to the wireless network greatly. 802.11b/g: Indoor 130ft (40m), outdoor (LOS, Light-of-Sight) 1000ft (310m) Set by default, the AW-GR520 should automatically adjust the data rate. The closer the wireless stations are the better the signal and transmission speed they will receive. To improve your wireless transmission, try moving your wireless stations closer to the AW-GR520

AW-GR520 Configuration

How to Access the Web-based Utility


To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the AW-GR520 router (192.168.0.1).

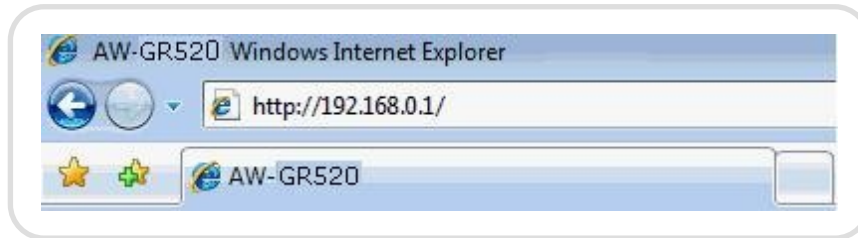

Status-Main page

The Router Status menu provides status and usage information. This page displays the current information for the AW-GR520. It will display the System (Firmware version) WAN (Internet), LAN, and Wireless.

If your Internet connection is set up for a Dynamic IP address then a Release button and a Renew button will be displayed. Use Release to disconnect from your ISP and use Renew to connect to your ISP. If your Internet connection is set up for PPPoE or PPTP, a Connect button and a Disconnect button will be displayed. Use Disconnect to drop the PPPoE or PPTP connection and use Connect to establish the PPPoE or PPTP connection.

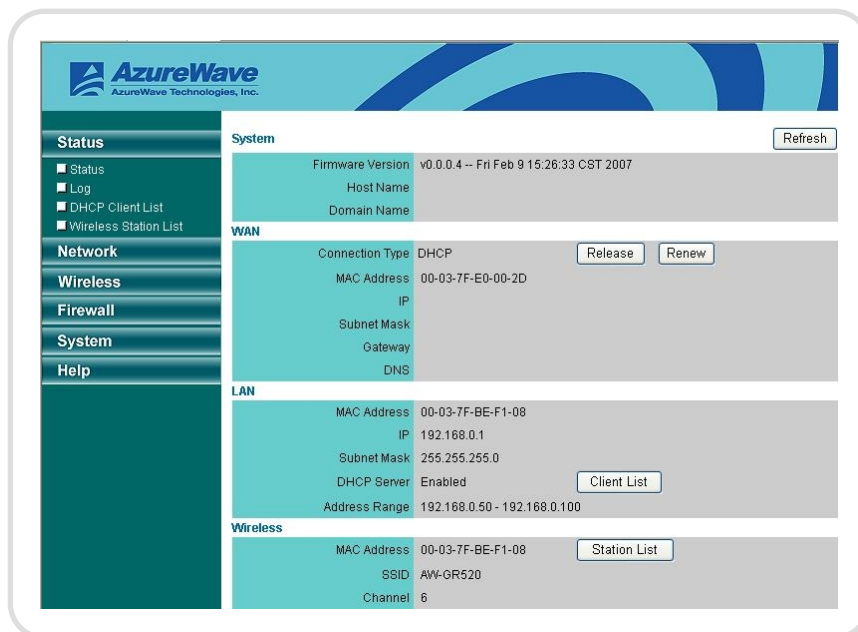

System: This field displays the AW-GR520 firmware was built time, firmware version, Host Name and Domain Name assigned to the router.

WAN (Internet): Displays the MAC address and IP address assigned by ISP.

LAN: Displays the MAC address and the private (local) IP settings and DHCP IP address range from the AW-GR520 router.

Wireless: Displays the wireless MAC address and wireless settings such as SSID, Channel, Wireless mode and Encryption mode.

Status-Log

The AW-GR520 router automatically logs (records) events of possible interest in its internal memory. If there isn't enough internal memory for all events, logs of older events are deleted but logs of the latest events are retained.

Refresh: Click this button to refresh the log screen.

Clear: Click this button to clear the log entries.

Time	Message
------	---------

Status-DHCP Client List

Displays computers and devices that are connected to the AW-GR520 router via Ethernet or Wireless and that are receiving an IP address assigned by the AW-GR520 router

Host Name	IP	MAC Address	Expiring Time
-----------	----	-------------	---------------

Status-Wireless Station List

The wireless Station List displays a list of current connected wireless Station. This List also displays the MAC address and Wireless Mode of the connected wireless Stations.

No.	MAC Address	Mode
-----	-------------	------

Network-WAN (Internet) DHCP -- Automatically Set

Connection Type: Select DHCP-Automatically Set to obtain IP Address information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.

Host Name: The Host Name is optional but may be required by some ISPs. **Domain Name:** The Domain Name is optional but may be required by some ISPs

WAN	
Connection Type	DHCP - Automatically Set ▼
Host Name	<input type="text"/> (optional)
Domain Name	<input type="text"/> (optional)

Network-WAN - Static IP

Connection Type: Select Static IP Address if all the Internet port's IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The AW-GR520 router will not accept the IP address if it is not in this format

IP: Enter the IP address assigned by your ISP.

Subnet Mask: Enter the Subnet Mask assigned by your ISP.

Gateway: Enter the Gateway assigned by your ISP.

DNS: The DNS server information will be supplied by your ISP (Internet Service Provider.)

WAN	
Connection Type	Static IP ▼
IP	<input type="text"/>
Subnet Mask	<input type="text"/>
Gateway	<input type="text"/>
DNS 1	<input type="text"/>
DNS 2	<input type="text"/> (optional)
DNS 3	<input type="text"/> (optional)

Network-WAN -- PPPoE

Connection Type: Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services. Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router. Select PPPoE (Username/Password) from the drop-down menu.

User Name: Enter your PPPoE user name.

Password: Enter your PPPoE password and then retype the password in the next box. Select either "Always connect" or "Auto connect."

Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable "Always connect."

The screenshot shows a configuration panel titled "WAN" with a teal sidebar. The "Connection Type" dropdown is set to "PPPoE". Below it are input fields for "User Name" and "Password". At the bottom, there are two radio buttons: "Always connect" (unselected) and "Auto connect" (selected). The "Auto connect" option includes a "Disconnect idle time" field set to "3" and the unit "min(s)".

Network-WAN - PPTP

Connection Type: Choose PPTP (Point-to-Point-Tunneling Protocol) if your ISP uses a PPTP connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

IP: Enter the IP address assigned by your ISP.

Subnet Mask: Enter the Subnet Mask assigned by your ISP

Server IP: Enter the Server IP provided by your ISP (optional).

User Name: Enter your PPTP username assigned by your ISP.

Password: Enter your PPTP password assigned by your ISP.

Select either "Always connect" or "Auto connect."

Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable "Always connect."

The screenshot shows a configuration panel titled "WAN" with a teal sidebar. The "Connection Type" dropdown is set to "PPTP". Below it are input fields for "IP", "Subnet Mask", "Server IP", "User Name", and "Password". At the bottom, there are two radio buttons: "Always connect" (unselected) and "Auto connect" (selected). The "Auto connect" option includes a "Disconnect idle time" field set to "3" and the unit "min(s)".

Network-LAN

This section will allow you to change the local network settings of the router and to configure the DHCP settings.

IP: Enter the IP address of the AW-GR520 router. The default IP address is 192.168.0.1. If you change the IP address, once you click Apply, you will need to enter the new IP address in your browser to get back into the configuration utility.

Subnet mask: The default subnet mask is 255.255.255.0.

DHCP Server: DHCP stands for Dynamic Host Control Protocol. The AW-GR520 Router has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to "Obtain an IP Address Automatically." When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the Router. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

DHCP Server: Choose the "Enable" button to enable the DHCP server or choose the "Disabled" button to disable DHCP server function on your router

Address Range: Enter the starting and ending IP addresses for the IP assignment from DHCP server.

WINS: Enter the Domain name (Optional).

LAN

IP	192.168.0.1
Subnet Mask	255.255.255.0
DHCP Server	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Address Range	192.168.0.50 - 192.168.0.100
WINS	

Apply Cancel

Network-MAC Clone

The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the Clone MAC of this PC button to replace the Internet port's MAC address with the MAC address of your Ethernet card.

Status

Network

- LAN / WAN
- MAC Clone
- Dynamic DNS
- UPnP

MAC Clone Disabled Enabled

MAC Address

Clone MAC of this PC

Apply Cancel

Network-Dynamic DNS

The DDNS feature allows you to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.dyndns.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter in your domain name to connect to your server no matter what your IP address is.

Dynamic DNS: Enabled/Disabled DDNS function.

User Name: Enter the Username for your DDNS account.

Password: Enter the Password for your DDNS account.

Host Name: Enter the Host Name that you registered with your DDNS service provider.

The screenshot shows a configuration window with a sidebar on the left containing 'Status' and 'Network' sections. The 'Network' section has checkboxes for 'LAN / WAN', 'MAC Clone', 'Dynamic DNS', and 'UPnP'. The main area is titled 'Dynamic DNS' and has radio buttons for 'Disabled' (selected) and 'Enabled'. Below are three input fields for 'User Name', 'Password', and 'Host Name'. 'Apply' and 'Cancel' buttons are at the bottom right.

Network-UPnP

To use the Universal Plug and Play (UPnP™) feature click on Enabled. UPnP provides compatibility with networking equipment, software and peripherals.

UPnP: Enabled/Disabled UPnP function.

The screenshot shows a configuration window with a sidebar on the left containing 'Status' and 'Network' sections. The 'Network' section has checkboxes for 'LAN / WAN', 'MAC Clone', 'Dynamic DNS', and 'UPnP'. The main area is titled 'UPnP' and has radio buttons for 'Disabled' (selected) and 'Enabled'. 'Apply' and 'Cancel' buttons are at the bottom right.

Wireless-Basic

SSID: Service Set Identifier (SSID) is the name of your wireless network. Create a name using up to 32 characters. The SSID is case-sensitive.

Channel: Indicates the channel setting for the AW-GR520. By default the channel is set to 6. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network.


Mode: Mixed 802.11b/g- using a mix of 802.11b/g wireless clients.

The screenshot shows a configuration window with three input fields: 'SSID' with the value 'AW-GR520', 'Channel' with a dropdown menu showing '6', and 'Encryption Type' with a dropdown menu showing 'None'. 'Apply' and 'Cancel' buttons are at the bottom right.

Wireless-Basic Encryption Type – WEP 64/128bit

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption.

1. Select Encryption Type to WEP 64/128bit.
2. Next to WEP Key Length, select the level of encryption (64 or 128-bit) and either Hex or ASCII. Hex - (recommended) Letters A-F and numbers 0-9 are valid. ASCII - All numbers and letters are valid.
3. Next to WEP Key 1, enter a WEP key that you create. Make sure you enter this key exactly on all your wireless devices. You may enter up to 4 different keys.
4. Click Apply to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WEP on your adapter and enter the same WEP key as you did on the router.

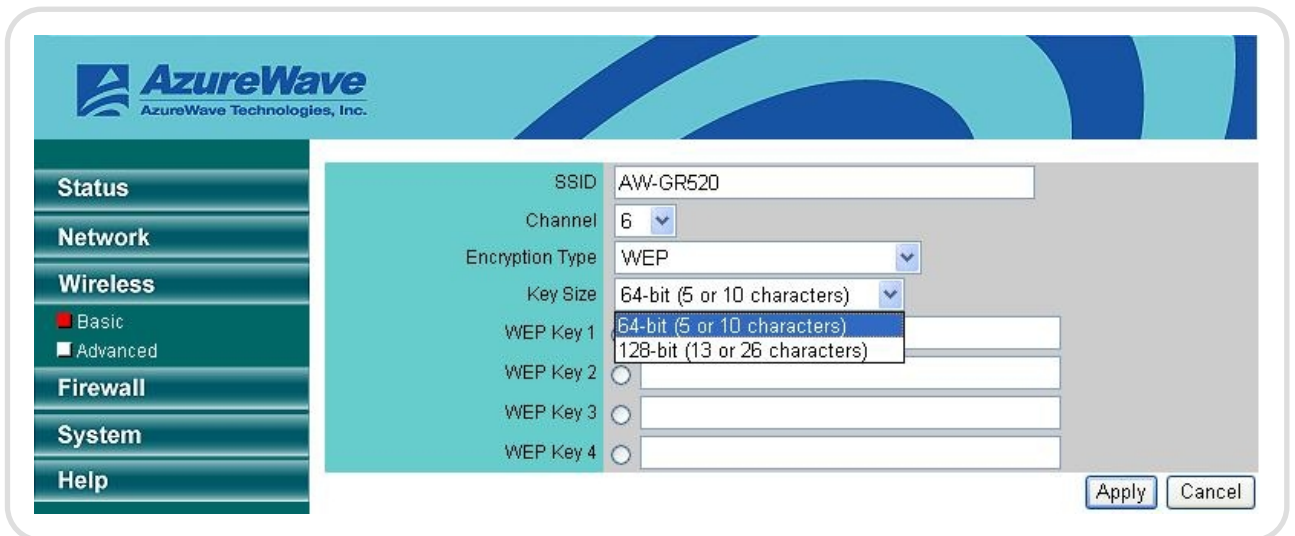

The screenshot shows the AzureWave router configuration interface. On the left is a navigation menu with options: Status, Network, Wireless (selected), Firewall, System, and Help. Under the 'Wireless' section, 'Basic' is selected. The main configuration area is titled 'Wireless' and contains the following fields:


- SSID: AW-GR520
- Channel: 6
- Encryption Type: WEP
- Key Size: 64-bit (5 or 10 characters) (selected)
- WEP Key 1: 64-bit (5 or 10 characters) (selected)
- WEP Key 2: (empty)
- WEP Key 3: (empty)
- WEP Key 4: (empty)

At the bottom right of the configuration area are 'Apply' and 'Cancel' buttons.

Wireless-Basic Encryption Type – WPA-PSK

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption.

1. Select WPA-PSK mode.
2. Next to Cipher Suite, select TKIP or CCMP (AES).
3. Next to WPA Pass Phrase (Pre-Shared Key), enter a key (pass phrase). The key is entered as a pass-phrase in ASCII format at both ends of the wireless connection. The pass-phrase must be between 8-63 characters.
4. Click Apply to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA-PSK on your adapter and enter the same pass phrase as you did on the router.

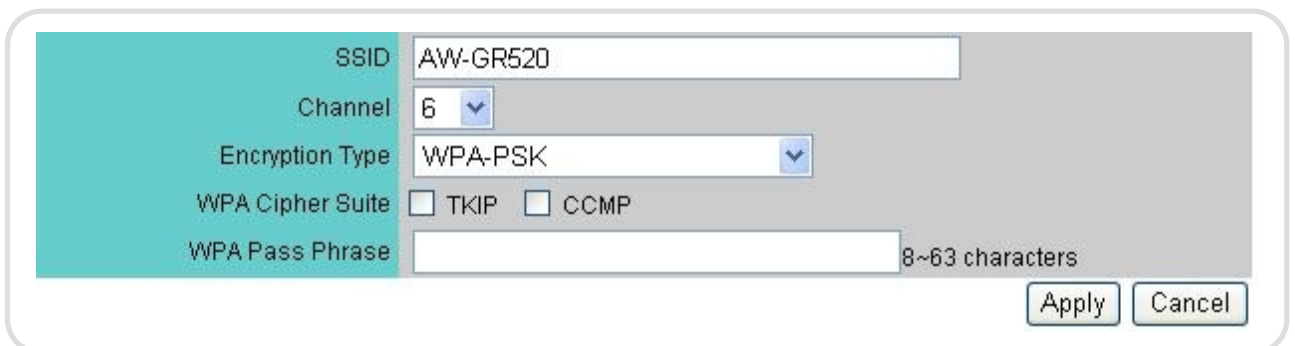

The screenshot shows the AzureWave router configuration interface for WPA-PSK encryption. The main configuration area contains the following fields:


- SSID: AW-GR520
- Channel: 6
- Encryption Type: WPA-PSK
- WPA Cipher Suite: TKIP CCMP
- WPA Pass Phrase: (empty) 8~63 characters

At the bottom right of the configuration area are 'Apply' and 'Cancel' buttons.

Wireless-Basic Encryption Type – WPA2-PSK

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption.

1. Select WPA2-PSK mode.
2. Next to Cipher Suite, select TKIP or CCMP (AES).
3. Next to WPA Pass Phrase (Pre-Shared Key), enter a key (pass phrase). The key is entered as a pass-phrase in ASCII format at both ends of the wireless connection. The pass-phrase must be between 8-63 characters.
4. Click Apply to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA2-PSK on your adapter and enter the same pass phrase as you did on the router.

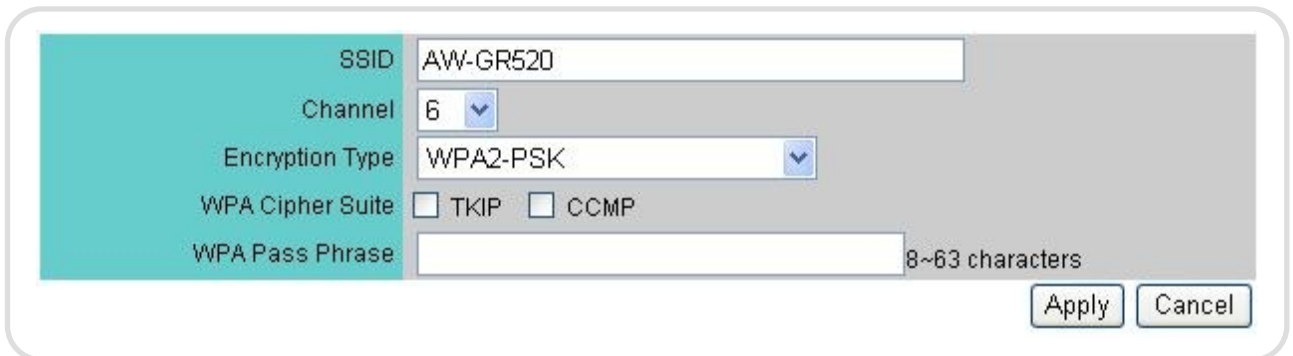

The screenshot shows a configuration window for WPA2-PSK encryption. The left sidebar is teal and lists the following settings: SSID, Channel, Encryption Type, WPA Cipher Suite, and WPA Pass Phrase. The main area is light gray and contains the following fields: SSID (text input: AW-GR520), Channel (dropdown: 6), Encryption Type (dropdown: WPA2-PSK), WPA Cipher Suite (checkboxes: TKIP, CCMP), and WPA Pass Phrase (text input: 8~63 characters). At the bottom right are 'Apply' and 'Cancel' buttons.

Wireless-Basic Encryption Type – WPA-PSK/WPA2-PSK Mixed

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption.

1. Select WPA-PSK/WPA2-PSK Mixed mode.
2. Next to Cipher Suite, select TKIP or CCMP (AES).
3. Next to WPA Pass Phrase (Pre-Shared Key), enter a key (pass phrase). The key is entered as a pass-phrase in ASCII format at both ends of the wireless connection. The pass-phrase must be between 8-63 characters.
4. Click Apply to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA-PSK/WPA2-PSK Mixed on your adapter and enter the same pass phrase as you did on the router.




The screenshot shows a configuration window for WPA-PSK/WPA2-PSK Mixed encryption. The left sidebar is teal and lists the following settings: SSID, Channel, Encryption Type, WPA Cipher Suite, and WPA Pass Phrase. The main area is light gray and contains the following fields: SSID (text input: AW-GR520), Channel (dropdown: 6), Encryption Type (dropdown: WPA-PSK/WPA2-PSK Mixed), WPA Cipher Suite (checkboxes: TKIP, CCMP), and WPA Pass Phrase (text input: 8~63 characters). At the bottom right are 'Apply' and 'Cancel' buttons.

Wireless-Basic Encryption Type – WPA Enterprise

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption.

1. Select WPA Enterprise mode.
2. Next to Cipher Suite, select TKIP or CCMP (AES).
3. Next to RADIUS Server IP Address enter the IP Address of your RADIUS server.
4. Next to RADIUS Server Port, enter the port you are using with your RADIUS server. 1812 is the default port.
5. Next to RADIUS Server Shared Secret, enter the security key.
6. Click Apply to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA Enterprise on your adapter.

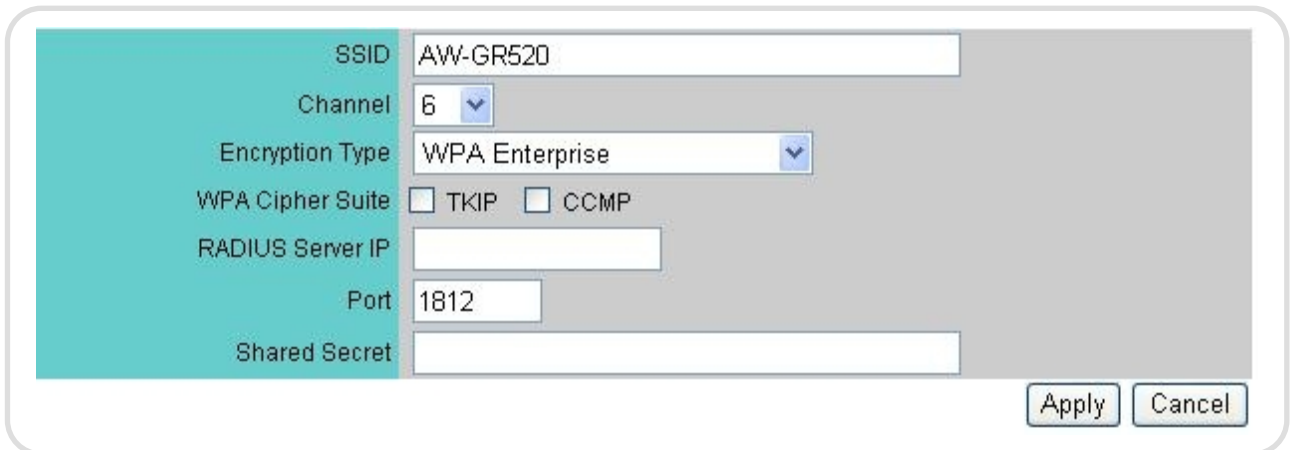

The screenshot shows a configuration window with a teal sidebar on the left. The settings are as follows:


SSID	AW-GR520
Channel	6
Encryption Type	WPA Enterprise
WPA Cipher Suite	<input type="checkbox"/> TKIP <input type="checkbox"/> CCMP
RADIUS Server IP	
Port	1812
Shared Secret	

Buttons for 'Apply' and 'Cancel' are located at the bottom right of the configuration area.

Wireless-Basic Encryption Type – WPA2 Enterprise

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption.

1. Select WPA2 Enterprise mode.
2. Next to Cipher Suite, select TKIP or CCMP (AES).
3. Next to RADIUS Server IP Address enter the IP Address of your RADIUS server.
4. Next to RADIUS Server Port, enter the port you are using with your RADIUS server. 1812 is the default port.
5. Next to RADIUS Server Shared Secret, enter the security key.
6. Click Apply to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA2 Enterprise on your adapter.

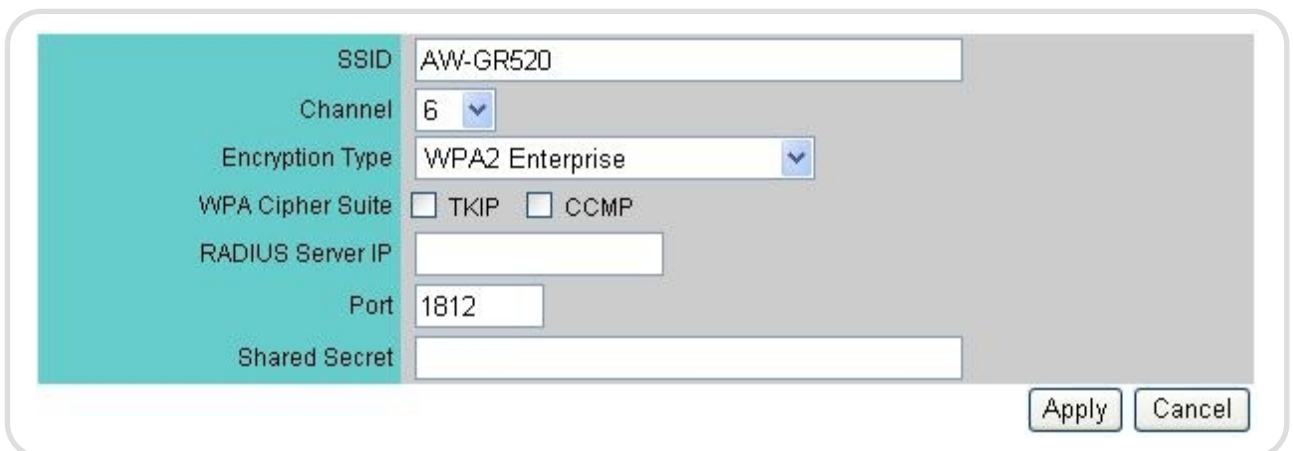

The screenshot shows a configuration window with a teal sidebar on the left. The settings are as follows:


SSID	AW-GR520
Channel	6
Encryption Type	WPA2 Enterprise
WPA Cipher Suite	<input type="checkbox"/> TKIP <input type="checkbox"/> CCMP
RADIUS Server IP	
Port	1812
Shared Secret	

Buttons for 'Apply' and 'Cancel' are located at the bottom right of the configuration area.

Wireless-Basic Encryption Type – WPA/WPA2 Mixed

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption.

1. Select WPA/WPA2 Mixed mode.
2. Next to Cipher Suite, select TKIP or AES.
3. Next to RADIUS Server IP Address enter the IP Address of your RADIUS server.
4. Next to RADIUS Server Port, enter the port you are using with your RADIUS server. 1812 is the default port.
5. Next to RADIUS Server Shared Secret, enter the security key.
6. Click Apply to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA/WPA2 Mixed on your adapter.

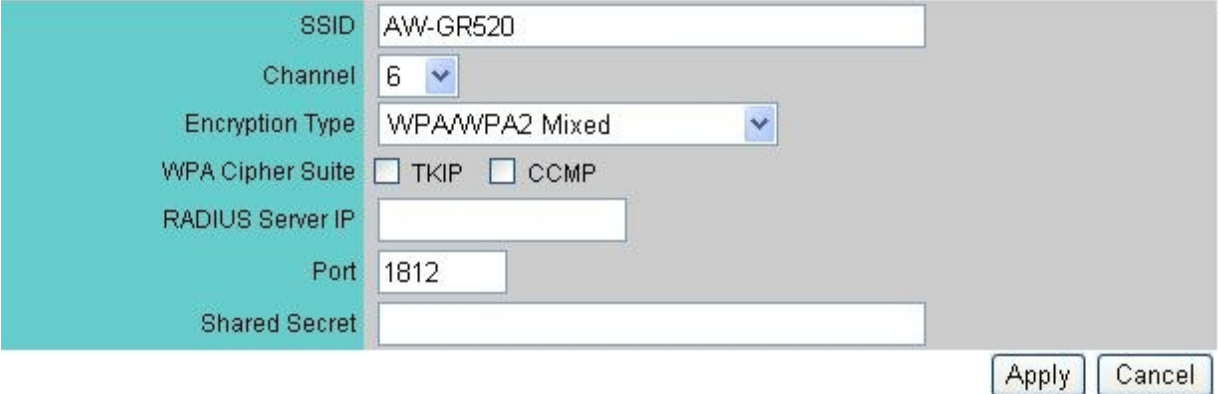


SSID	AW-GR520
Channel	6
Encryption Type	WPA/WPA2 Mixed
WPA Cipher Suite	<input type="checkbox"/> TKIP <input type="checkbox"/> CCMP
RADIUS Server IP	
Port	1812
Shared Secret	

Apply Cancel

Wireless-Advanced

Broadcast SSID: Select disabled if you do not want the SSID of your wireless network to be broadcasted by the AW-GR520. If Disabled is selected, the SSID of the AW-GR520 will not be seen by Site Survey utilities so your wireless clients will have to know the SSID of your AW-GR520 in order to connect to it. **Beacon Period:** Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. 100 is the default setting and is recommended. **RTS Threshold:** This value should remain at its default setting of 2346. If inconsistent data flow is a problem, only a minor modification should be made. **Fragmentation Threshold:** The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting. **DTIM Interval:** (Delivery Traffic Indication Message) is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

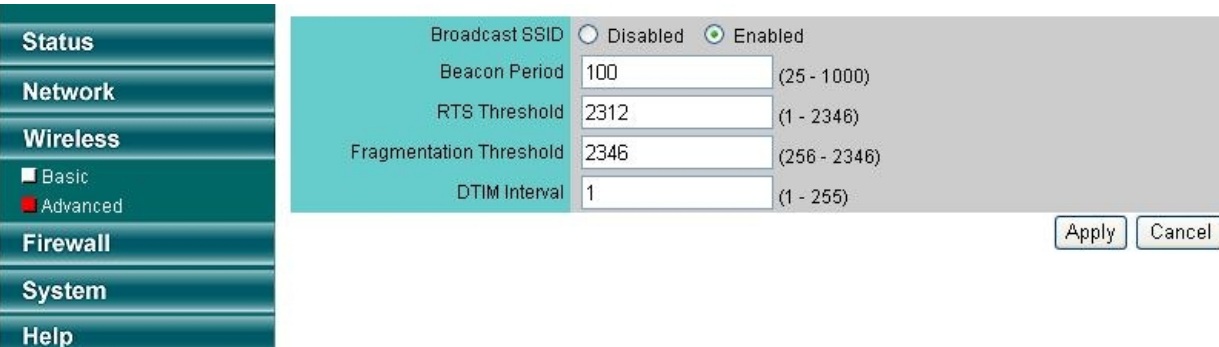

Broadcast SSID	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
Beacon Period	100 (25 - 1000)
RTS Threshold	2312 (1 - 2346)
Fragmentation Threshold	2346 (256 - 2346)
DTIM Interval	1 (1 - 255)

Apply Cancel

Firewall-Internet Access

The AW-GR520 router allows you to block the use of certain Internet services by computers on your network. This is called Internet Access blocking or port filtering. Enter a name for the rule and select a Service (HTTP, FTP....) from the drop-down menu. Select the Protocol TCP or UDP port that you want to block. You can enter a single port or a range of ports. When you have finished making changes to this screen, click the Apply button to save the changes.

Disabled: Select this option if you do not want to block Internet services.

Allow to access services listed below, others are blocked: Select this option to allow using Internet services listed below. Users will be block to all other Internet services.

Block services listed below, others are allowed: Select this option to block Internet services listed below. Users will be allowed access to all other Internet services.

Enable	Service Name	Protocol	Port
--------	--------------	----------	------

To delete the rules, click "**delete Button.**"

Service Disabled Enabled
Preset Services --- Select Service ---
Name Test
Protocol TCP
Port 80 - 80

Firewall-MAC Filter

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) and wireless station computers by their MAC addresses from accessing the Network. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

Select Turn MAC Filtering Off, allow MAC addresses listed below, or deny MAC addresses listed.

Disabled: Select this option if you do not want to use MAC Filter.

Allow PC listed below to access this device, others are denied: Select this option to only allow PCs that are in the list to access the network and Internet. All other PCs will be denied access to the network and Internet.

Deny PCs listed below to access this device, others are allowed: Select this option to only deny PCs that are in the list to access the network and Internet. All other PCs will be allowed access to the network and Internet.

Status

- Disabled
- Allow PCs listed below to access this device, others are denied.
- Deny PCs listed below to access this device, others are allowed.

Network

Wireless

Firewall

- Internet Access
- MAC Filter
- Domain Filter
- URL Filter
- Port Forwarding
- Port Triggering
- DMZ
- Security
- VPN Pass Through

System

Help

MAC Address List

1		2
3		4
5		6
7		8
9		10
11		12
13		14
15		16
17		18
19		20
21		22
23		24
25		26
27		28
29		30
31		32

Apply Cancel

Firewall-Domain Filter

Domain Filters are used to deny LAN and wireless station computers from accessing specific domain.

Enter the keywords of Domain that you want to block (or allow). Any Domain with the keyword in it will be blocked.

Disabled: Select this option if you do not want to use Domain filters.

Allow to access domains listed below, others are blocked: Select this option to allow users to access the specified Internet domains listed below. Users will be denied access to all other Internet domains.

Block domains listed below, others are allowed: Select this option to block users access to the specified Internet domains listed below. Users will be allowed access to all other Internet domains.


The screenshot shows the Firewall-Domain Filter configuration interface. On the left is a navigation menu with the following items: Status, Network, Wireless, Firewall, Internet Access, MAC Filter, Domain Filter (highlighted with a red square), URL Filter, Port Forwarding, Port Triggering, DMZ, Security, and VPN Pass Through. The main area has three radio button options: Disabled, Allow to access domains listed below, others are blocked., and Block domains listed below, others are allowed. Below these options are three buttons: New Domain, Apply, and Cancel. At the bottom, there is a table with a teal header row containing 'Enable' and 'Domain Name' columns.

To use this feature, Select Allow/Block then click New Domain Button, enters the text string to be blocked and click Apply. The text to be blocked will appear in the list. To delete the text, click “delete Button.”


The screenshot shows the New Domain dialog box. It has a teal header bar on the left with the text 'Domain Name'. To the right of the header bar are two radio button options: Disabled and Enabled. Below the header bar is a text input field containing the word 'test'. At the bottom right of the dialog box are three buttons: Delete, Apply, and Cancel.

Firewall-URL Filter

URL Filters are used to deny LAN and wireless station computers from accessing specific web sites by the URL. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible and the web page will not display.

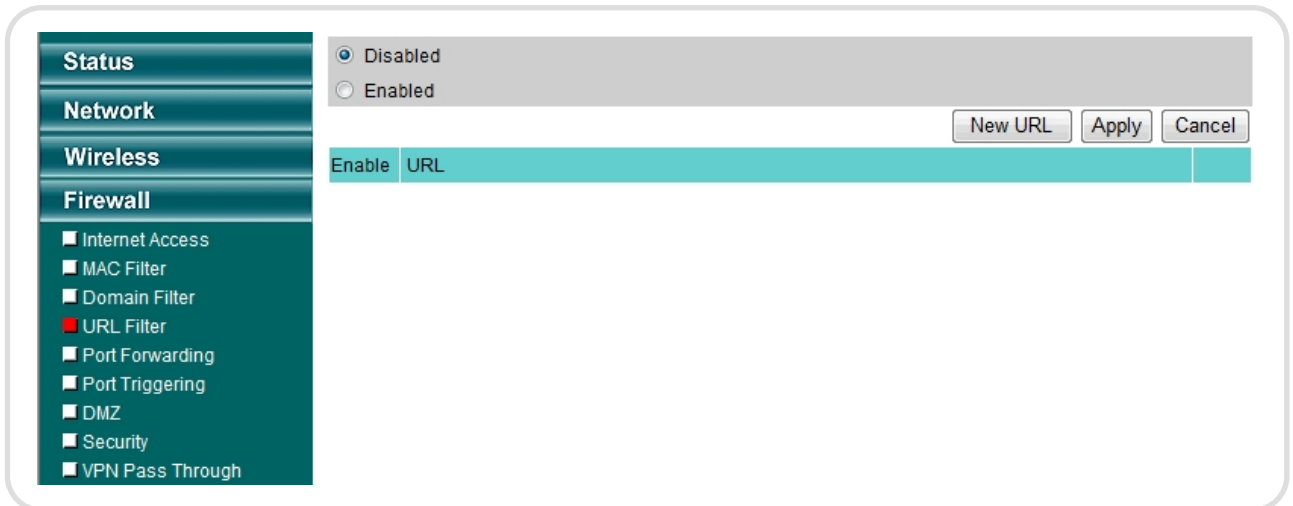

To use this feature, Select Enabled then click New URL Button, enters the text string to be blocked and click Apply. The text to be blocked will appear in the list. To delete the text, click "delete Button."

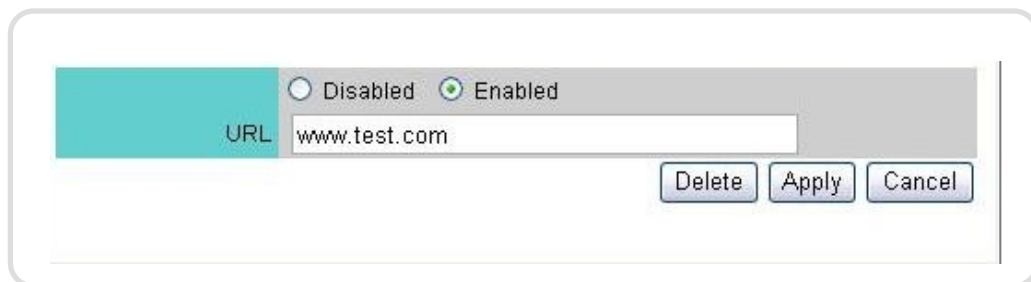

Firewall-Port Forwarding

The AW-G520 can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network). This will allow you to open a single port or a range of ports. Enter a name for the rule and select an Service (HTTP, FTP....) from the drop-down menu. Enter the IP address of the computer on your local network that you want to allow the incoming service to. Enter the TCP and/or UDP port or ports that you want to open. You can enter a single port or a range of ports. Separate ports with a common. Example: 3000-4000. When you have finished making changes to this screen, click the Apply button to save the changes.

The screenshot shows the Firewall-Port Forwarding configuration interface. On the left, a sidebar lists various settings: Status, Network, Wireless, and Firewall. Under Firewall, several options are listed with checkboxes: Internet Access, MAC Filter, Domain Filter, URL Filter, Port Forwarding (which is selected with a red square), Port Triggering, DMZ, Security, and VPN Pass Through. The main configuration area has a status section with radio buttons for 'Disabled' (selected) and 'Enabled'. Below this are buttons for 'New Entry', 'Apply', and 'Cancel'. A table with the following columns is shown: 'Enable', 'Name', 'Public Port', 'Protocol', 'Local IP', and 'Local Port'. The table is currently empty.

To delete the rules, click "delete Button."

The screenshot shows the Port Forwarding rule configuration dialog. It has a 'Port Forward' section with radio buttons for 'Disabled' and 'Enabled' (selected). Below this is a 'Preset Port' section with a dropdown menu showing '--- Select Service ---' and a 'Select' button. The 'Name' field contains 'test'. The 'Public Port' field shows '80' and '80' separated by a hyphen. The 'Protocol' dropdown is set to 'TCP'. The 'Local IP' field contains '192.168.0.10'. The 'Port' field contains '80'. At the bottom right, there are buttons for 'Delete', 'Apply', and 'Cancel'.

Firewall-Trigging

This screen instructs the Router to watch outgoing data for specific port numbers. The IP address of the computer that sends the matching data is remembered by the Router, so that when the requested data returns through the Router, the data is sent to the proper computer by way of IP address and port mapping rules.

Name. Enter the name of the application.

Triggering Port. Enter the starting and ending port numbers of the triggered port range. Check with the Internet application documentation for the port number(s) and Protocol needed.

Open Port. Enter the starting and ending port numbers of opened port range and Protocol needed.

When you have finished making changes to this screen, click the Apply button to save the changes.

The screenshot shows a web interface for configuring the Firewall. On the left is a navigation menu with categories: Status, Network, Wireless, and Firewall. Under Firewall, several options are listed with checkboxes: Internet Access, MAC Filter, Domain Filter, URL Filter, Port Forwarding, Port Triggering (which is selected with a red square), DMZ, Security, and VPN Pass Through. The main content area shows the Port Triggering configuration. At the top, there are radio buttons for 'Disabled' (selected) and 'Enabled'. Below this are three buttons: 'New Entry', 'Apply', and 'Cancel'. A table with the following headers is visible: 'Enable', 'Name', 'Trigger Port', 'Protocol', 'Open Port', and 'Protocol'. The table is currently empty.

To delete the rules, click "delete Button."


This screenshot shows a detailed view of a Port Triggering rule configuration. The 'Port Triggering' section is active, with the 'Enabled' radio button selected. The 'Name' field contains the text 'test'. The 'Triggering Port' field is set to '80 - 80' and the 'Protocol' dropdown is set to 'TCP'. The 'Open Port' field is also set to '80 - 80' and its 'Protocol' dropdown is set to 'TCP'. At the bottom right of the form are three buttons: 'Delete', 'Apply', and 'Cancel'.

Firewall-DMZ

The DMZ screen allows one local user to be exposed to the Internet for use of a special-purpose service such as Internet gaming and videoconferencing. DMZ hosting forwards all the ports at the same time to one PC. The Port Range Forwarding is more secure because it only opens the ports you want to have opened, while DMZ hosting opens all the ports of one computer, exposing the computer to the Internet.

Note: Placing a computer in the DMZ may expose that computer to a variety of security risks. Use of this option is only recommended as a last resort.

To use this feature, select Enabled. To disable DMZ hosting, select Disabled. And enter the IP address(es) in the fields provided.

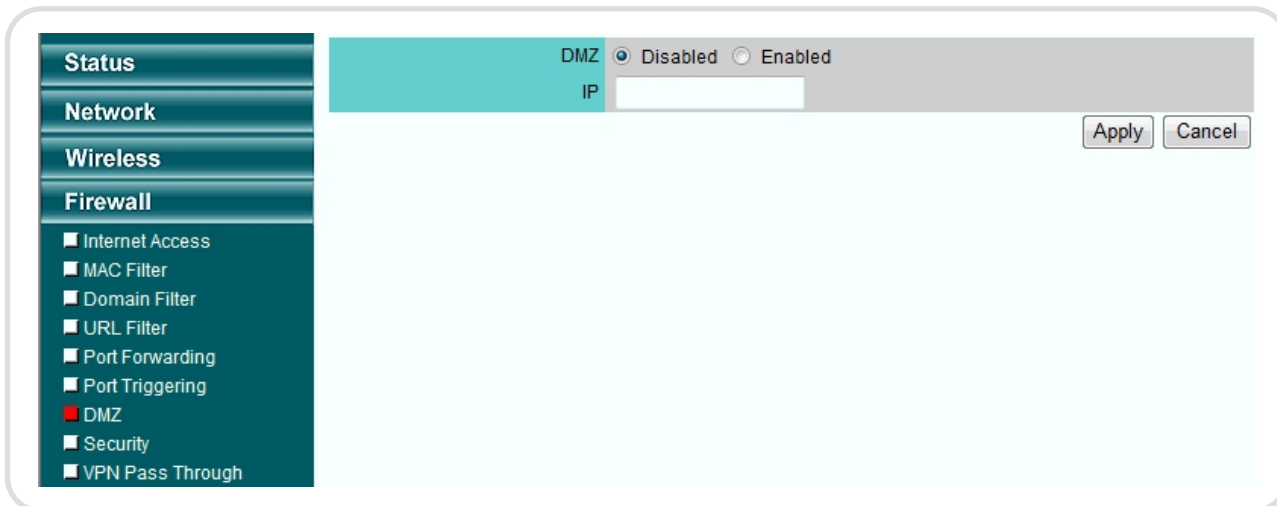

The screenshot shows the Firewall-DMZ configuration interface. On the left, a sidebar lists various settings: Status, Network, Wireless, Firewall, Internet Access, MAC Filter, Domain Filter, URL Filter, Port Forwarding, Port Triggering, DMZ (highlighted in red), Security, and VPN Pass Through. The main content area is titled 'DMZ' and features two radio buttons: 'Disabled' (selected) and 'Enabled'. Below this is an 'IP' input field. At the bottom right of the main area are 'Apply' and 'Cancel' buttons.

Firewall-Security


Ping Access on WAN: Set to Disabled to prevent your router's WAN port from being detected by ping.

IDENT Pass Through: This feature keeps port 113 from being scanned by devices outside of your local network. Select Enabled to open port 113, or Disabled to filter port 113.

Stateful Protect: A firewall enhances network security and uses Stateful Packet Inspection (SPI) for more detailed review of data packets entering your network. Select Enabled to use a firewall, or Disabled to disable it.

SYN FLOOD Protect: Set to Enabled will protect your router from SYN FLOOD attack.

PING FLOOD Protect: Set to Enabled will protect your router from PING FLOOD attack.

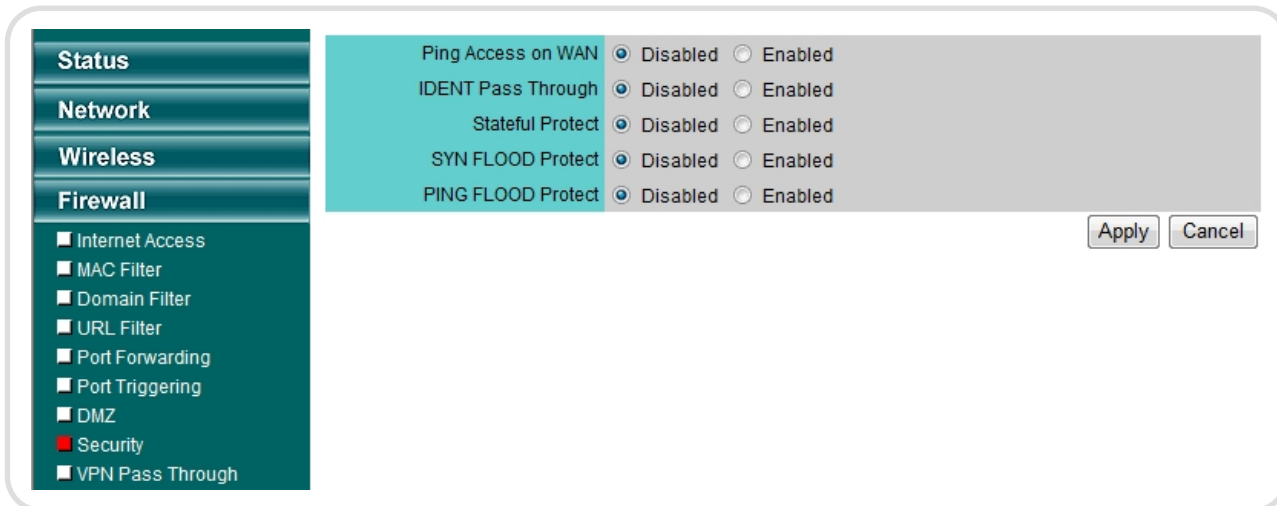

The screenshot shows the Firewall-Security configuration interface. The left sidebar is the same as in the previous screenshot, but 'Security' is now highlighted in red. The main content area lists five security features, each with 'Disabled' and 'Enabled' radio buttons: 'Ping Access on WAN', 'IDENT Pass Through', 'Stateful Protect', 'SYN FLOOD Protect', and 'PING FLOOD Protect'. All 'Disabled' options are selected. 'Apply' and 'Cancel' buttons are at the bottom right.

Firewall-VPN Pass Through

IPSec Pass Through: IPSec (Internet Protocol Security) is a suite of protocols used to implement secure exchange of packets at the IP layer. To allow IPSec Pass through, click the Enabled button. To disable IPSec Pass through, click the Disabled button.

PPTP Pass Through: PPTP (Point-to-Point Tunneling Protocol) Pass through allows the Point-to-Point (PPP) to be tunneled through an IP network. To allow PPTP Pass through, click the Enabled button. To disable PPTP Pass through, click the Disabled button.

L2TP Pass Through: Layer 2 Tunneling Protocol is the method used to enable Point-to-Point sessions via the Internet on the Layer 2 level. To allow L2TP tunnels to pass through the Router, click the Enabled button. To disable L2TP Pass through, click the Disabled button.

Status	IPSec Pass Through	<input type="radio"/> Disabled	<input checked="" type="radio"/> Enabled
Network	PPTP Pass Through	<input type="radio"/> Disabled	<input checked="" type="radio"/> Enabled
Wireless	L2TP Pass Through	<input type="radio"/> Disabled	<input checked="" type="radio"/> Enabled
Firewall			
Internet Access			
MAC Filter			
Domain Filter			
URL Filter			
Port Forwarding			
Port Triggering			
DMZ			
Security			
VPN Pass Through			

Apply Cancel

System-Admin

This page will allow you to change the Administrator passwords. You can also enable Remote Management.

Device Name: Enter a name for the AW-GR520 router.

New Password: Enter a new password for the Administrator Login Name. The administrator can make changes to the settings.

Retype Password: Retype the new password again.

Remote management: Remote management allows the AW-GR520 to be configured from the Internet by a web browser. A username and password is optional to require to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform Administrator tasks. This feature enables you to perform Administrator tasks from the remote (Internet) host.

The port number used to access the AW-GR520.

Example: <http://x.x.x.x:8080> whereas x.x.x.x is the Internet IP address of the AW-GR520 and 8080 is the port used for the Web Management interface.

Status	Device Name	AW-GR520
Network	Login Name	admin
Wireless	New Password	
Firewall	Retype Password	
System	Remote Management	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled
Admin	Port	8080
Time		
Config		
Firmware		


Apply Cancel

System-Time

The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the Time Server.

Time Zone: Select the Time Zone from the drop-down menu.

NTP server: Enter the NTP server. NTP is short for Network Time Protocol. NTP synchronizes computer clock times in a network of computers. This will only connect to a server on the Internet, not a local server.

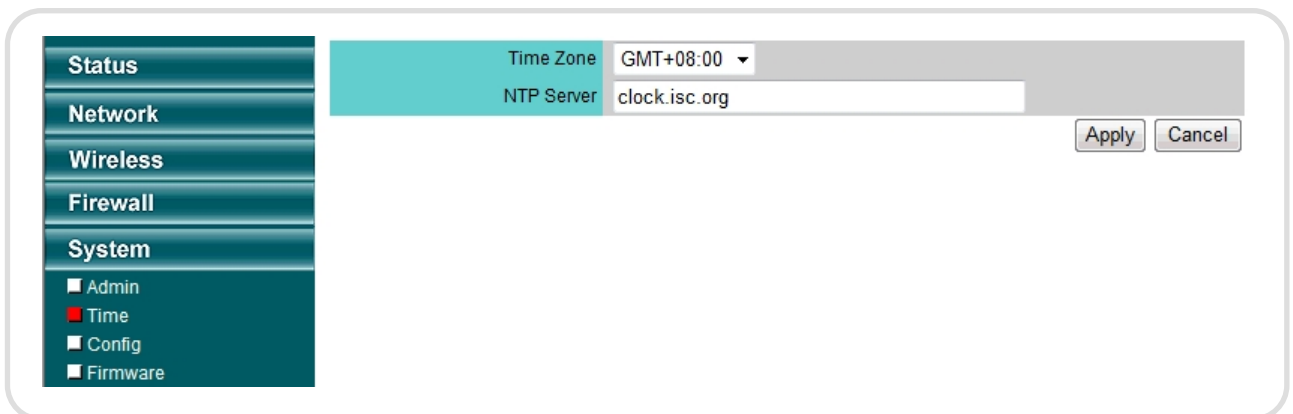


The screenshot shows a web interface for configuring system time. On the left is a vertical navigation menu with the following items: Status, Network, Wireless, Firewall, System, Admin (with a square icon), Time (with a red square icon), Config (with a square icon), and Firmware (with a square icon). The main content area has a teal header bar with 'Time Zone' and 'NTP Server' labels. The 'Time Zone' is set to 'GMT+08:00' with a dropdown arrow. The 'NTP Server' is 'clock.isc.org' in a text input field. At the bottom right of the main area are 'Apply' and 'Cancel' buttons.

System-Config

Save Configuration File: Use this option to save the current router configuration settings to a file on the hard disk of the computer you are using. First, click the Save button. You will then see a file dialog, where you can select a location and file name for the settings.

Restore Configuration File: Use this option to load previously saved router configuration settings. First, use the Browse control to find a previously save file of configuration settings. Then, click the Load button to transfer those settings to the router.


Restore to Factory Default: This option will restore all configuration settings back to the settings that were in effect at the time the router was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current router configuration settings, use the Save button above.

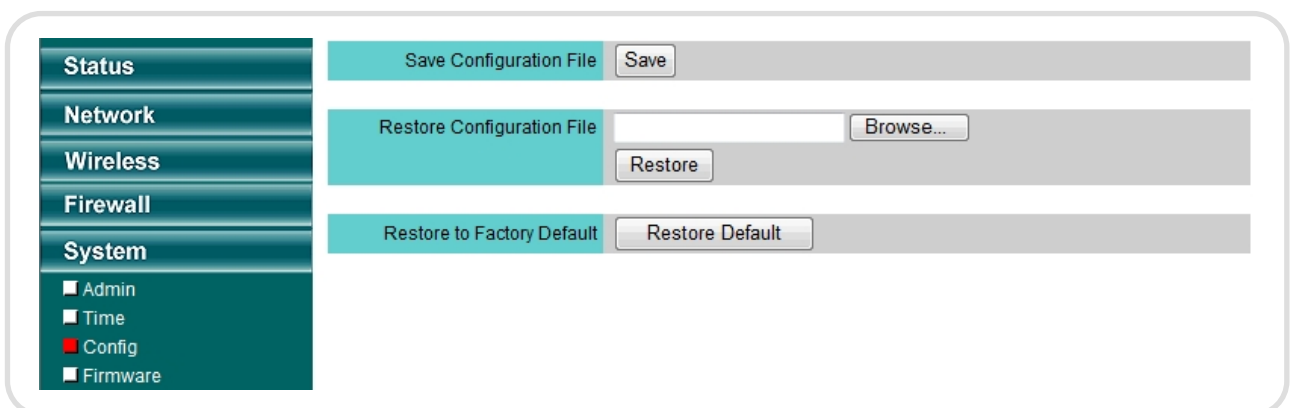

The screenshot shows a web interface for system configuration. On the left is a vertical navigation menu with the following items: Status, Network, Wireless, Firewall, System, Admin (with a square icon), Time (with a square icon), Config (with a red square icon), and Firmware (with a square icon). The main content area has three teal header bars. The first bar is labeled 'Save Configuration File' and has a 'Save' button. The second bar is labeled 'Restore Configuration File' and has a text input field, a 'Browse...' button, and a 'Restore' button. The third bar is labeled 'Restore to Factory Default' and has a 'Restore Default' button.

System-Firmware

You can upgrade the firmware of the Router here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on Browse button to locate the firmware file to be used then Click Update button.

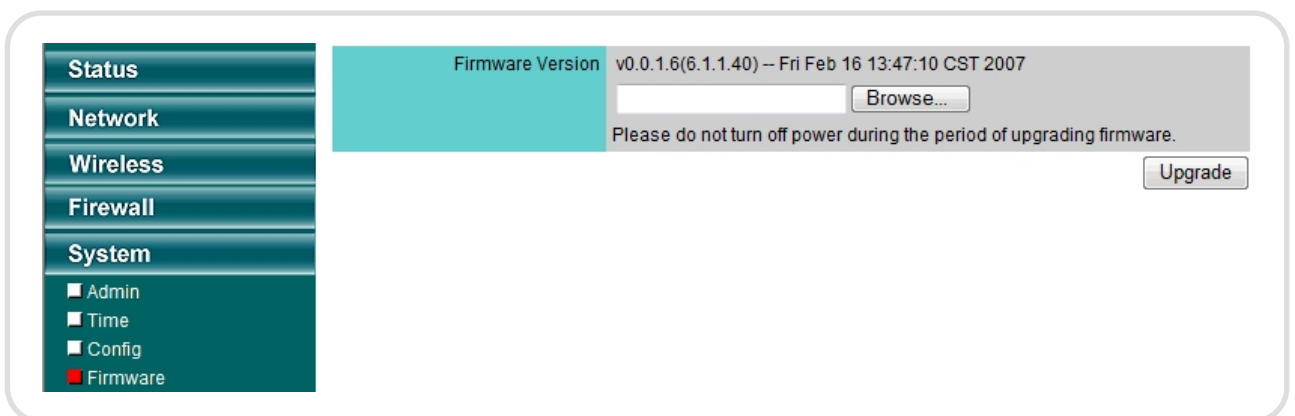

The screenshot shows a web interface for upgrading router firmware. On the left is a vertical menu with the following items: Status, Network, Wireless, Firewall, System, Admin, Time, Config, and Firmware. The 'System' menu item is expanded, showing the 'Firmware' sub-item. The main content area displays the current 'Firmware Version' as v0.0.1.6(6.1.1.40) -- Fri Feb 16 13:47:10 CST 2007. Below this is a text input field and a 'Browse...' button. A warning message states: 'Please do not turn off power during the period of upgrading firmware.' At the bottom right of the main area is an 'Upgrade' button.

Regulatory Information

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

EN 60 950-1: 2001 +A11: 2004

Safety of Information Technology Equipment

EN50371 : (2002-03)

Generic standard to demonstrate the compliance of low power electronic and electrical apparatus with the basic restrictions related to human exposure to electromagnetic fields (10 MHz - 300 GHz) -- General public

EN 300 328 V1.6.1 (2004-11)

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

EN 301 489-1 V1.6.1: (2005-09)

Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN 301 489-17 V1.2.1 (2002-08) Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

CE 0560 !

Česky [Czech]	[Jméno výrobce] tímto prohlašuje, že tento [typ zařízení] je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk [Danish]	Undertegnede [fabrikantens navn] erklærer herved, at følgende udstyr [udstyrets typebetegnelse] overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]	Hiermit erklärt [Name des Herstellers], dass sich das Gerät [Gerätetyp] in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab [tootja nimi = name of manufacturer] seadme [seadme tüüp = type of equipment] vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, [name of manufacturer], declares that this [type of equipment] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]	Por medio de la presente [nombre del fabricante] declara que el [clase de equipo] cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ [name of manufacturer] ΔΗΛΩΝΕΙ ΟΤΙ [type of equipment] ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Français [French]	Par la présente [nom du fabricant] déclare que l'appareil [type d'appareil] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Italiano [Italian]	Con la presente [nome del costruttore] dichiara che questo [tipo di apparecchio] è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo [name of manufacturer / izgatavotāja nosaukums] deklarē, ka [type of equipment / iekārtas tips] atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo [manufacturer name] deklaruoja, kad šis [equipment type] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart [naam van de fabrikant] dat het toestel [type van toestel] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese]	Hawnhekk, [isem tal-manifattur], jiddikjara li dan [il-mudel tal-prodott] jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar [Hungarian]	Alulírott, [gyártó neve] nyilatkozom, hogy a [... típus] megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym [nazwa producenta] oświadczam, że [nazwa wyrobu] jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português [Portuguese]	[Nome do fabricante] declara que este [tipo de equipamento] está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Slovensko [Slovenian]	[Ime proizvajalca] izjavlja, da je ta [tip opreme] v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]	[Meno výrobcu] týmto vyhlasuje, že [typ zariadenia] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Lietuvių [Lithuanian]	Šiuo [manufacturer name] deklaruoja, kad šis [equipment type] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Suomi [Finnish]	[Valmistaja = manufacturer] vakuuttaa täten että [type of equipment = laitteen tyyppimerkintä] tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar [företag] att denna [utrustningstyp] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.



Version: 1.00