

SCALE CALIBRATION – FOR ADVANCED USERS ONLY

In case the scale loses its accuracy, then the re-calibration of the scale may be needed. The load cell of this precision scale is normally protected against overloaded weight applied slowly, but overload caused by dropping the scale or dropping something heavy on the scale may require re-calibration.

CAUTION: Please do not attempt any calibration by yourself unless you have a 500 g weight available. Otherwise the scale will render itself into a useless state and requires servicing. If the scale did come from a colder or warmer environment let it first stay for sometime to be at the same temperature as your current environment.

Plug the mains adapter to the power supply. The scale will turn on and display ©Elane then Selftest. Press the Paket key while it displays selftest. The scale will then ask you to put a 500 gram weight on the platform. The scale will indicate that you need to wait as it automatically recalibrates the scale. When it is done, the scale will restart automatically.



User's Manual

Postage Austria Electronic Postage Computing Scale

BASIC TECHNICAL DETAILS

Maximum Capacity	: 2000 g
Accuracy	: 1 g
Power Supply	: 9 - 12 volt AC adapter
Power Consumption	: Approx. 400mW
Dimensions/Weight	: Overall: 7¾" x 5½" x 2¼"
Platform	: 5" x 5½" (opens for flats)
Unit Weight	: 520 g
Packaged Weight	: 1050 g

BASIC SERVICES AVAILABLE

- Brief (B)**
inland
ausland
Europa
Welt (w)
- Paket (P)**
inland
ausland – zones 1a, 1b, 2, 3, 4, 5
Standard
Schnell (s)
- Express Mail Service (E)**
inland
ausland – zones 1a, 1b, 2, 3, 4, 5

SPECIAL SERVICES AVAILABLE

- Einschreiben**
- Eigenhändig**
- Rückshein**
- Nachname**

INSTRUCTIONS

A. START-UP INSTRUCTIONS and DISPLAY

- Plug the mains adapter supplied with the scale into the mains and connect the adapter's output plug to the input socket at the rear of the scale.
- Place the scale on a firm level surface then switch on the mains supply. The Scale will then go through an electronic self-test for 1-3 seconds. If the Scale is not stable, the display will not change. If excess TARE or other LOAD is being applied, the display will read, 'overload', until the excess weight is removed.

When the Scale has passed its self-test and is ready for weighing the default display will show on screen.

THE DISPLAY

- SERVICE**
The default display shows the service on the leftmost part of the first line of the LCD. In this case, Service 'B' (Brief inland) is the default. The first letter is the initial letter of the basic service. The second character indicates the zone number when in ausland mode or 'P' if Priority or 'E' for Economy Brief. In briefs, 'w' is displayed to indicate welt. The default for Brief ausland is Europa. Schnell is indicated by an 's' as the third character in Pakets. The default for Paket ausland is standard.
 - WEIGHT**
The weight is displayed at the rightmost part of the first line.
 - POSTAGE**
On the second line, below the weight, the corresponding postage is displayed.
- It is recommended to leave the scale always plugged in – do not switch off mains power socket. A small current will keep the weighing mechanism in operating temperature even while the scale is off.
 - To tare the current weight on the scale, press the '**Tara**' key. All subsequent weight displays will be tared.

B. POSTAL SELECTIONS

Basic Services

- (Brief)**
Postage Austria "wakes up" in the Brief inland mode when first switched on.
When in ausland mode, the Brief key switches between priority and economy. The Europa/Welt key will toggle between the Europa and Welt rates for this service.
Pressing the inland key sets the service back to Brief inland.
- (Paket)**
To display the postage for Paket, press the Paket key.
When in ausland mode, you need to press any of the zone keys when prompted to get the standard international rates for this service. Press the Paket key again to get the schnell rates. Next press of the Paket key prompts the user to choose another zone.
Pressing the inland key sets the service back to Paket inland.
- (Express Mail Service)**
To display the postage for Express Mail Service, press the EMS key.
When in ausland mode, you need to press any of the zone keys when prompted to get the international rates for this service. Press the EMS key again to display the rates for another zone.
Pressing the inland key sets the service back to Paket inland.

Special Services

- (Einschreiben)**
Press the Einschreiben key to display the postage plus the Einschreiben fee. Press it again to clear Einschreiben. Press any of the basic service keys to clear special service memory at once.
- (Eigenhändig)**
- (Rückshein)**

The above two services are activated in one key. First press activates Eigenhandy. The second press activates Ruckschein. The third activates both. Fourth press will clear both special services.

Press any of the basic service keys to reset special service memory at once.

4. (Nachname)

The Nachname key selects the two rates for Nachname. The third press resets the addition of the Nachname fee. Press any of the three basic service keys to clear special service memory at once.

If the selected special service is not applicable, "n/a" will be displayed.