


# ALBERGO™ +

DAB/DAB+/DMB/FM Clock Radio

 Bluetooth®

## OWNER'S MANUAL

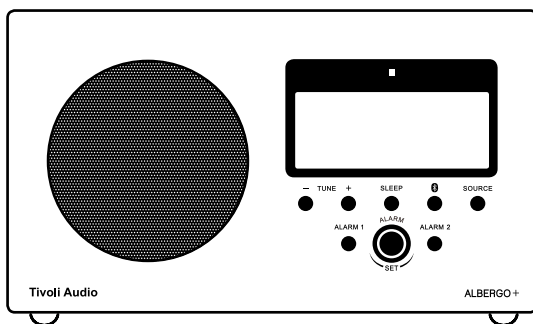

**Tivoli Audio™**

# ALBERGO™ +

DAB/DAB+/DMB/FM Clock Radio

## TABLE OF CONTENTS

Safety Instructions..... 5

Introduction; About Tivoli Audio..... 8

Front panel controls ..... 8

Rear panel controls ..... 10

Remote control..... 11

Digital Radio / FM / Auxiliary Menus ..... 12

How to set alarm ..... 14


Alarm options ..... 15

*Bluetooth* Operation ..... 15

Digital Radio/FM Reception; RDS; Placement; Cleaning..... 16

Warranty ..... 17

Specifications..... 19

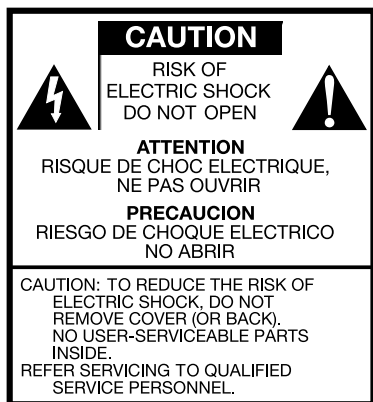

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. **CAUTION** – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
6. **Warning:** Batteries shall not be exposed to excessive heat such as sunshine, fire, or the like.
7. **WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.** The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
8. **WARNING** – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
9. Clean only with a dry cloth.
10. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
11. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
12. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
13. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

14. Only use attachments/accessories specified by the manufacturer.

15. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



16. Unplug this apparatus during lightning storms or when unused for long periods of time.

17. Operate this product only from the type of power source indicated on the rear panel. For products using an external power supply, use an exact replacement if lost or damaged. For products operating from battery power, refer to the user manual.

18. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power supply cord or plug is damaged.
- b. If liquid has been spilled or objects have fallen into the product.
- c. If the product has been exposed to water or rain.
- d. If the product does not operate normally by following the operating instructions.
- e. If the product has been dropped or damaged in any way.
- f. When the product exhibits a distinctive change in performance.

19. When replacement parts are required, be sure your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

20. Upon completion of any service, ask the service technician to perform safety checks to confirm the product is in proper operating condition.

21. If the LCD becomes cracked and damaged, do not touch the liquid.

22. Keep this product a safe distance away from naked flame, such as a lit candle.

23. Do not expose this product to splashing or dripping. Objects containing liquid, such as vases or drinking glasses, should not be placed on top of this product.

24. The recommended operating temperature range is 5° C to 40° C (41° F to 104° F).

25. WARNING – The mains are not disconnected in the off position, but the circuits are de-powered.

26. The external power supply serves as the disconnect device and should remain readily accessible.



**WARNING: THE ALBERGO+ EXTERNAL ANTENNA IS NOT INTENDED TO BE DETACHED.**



This product can be recycled. Products bearing this symbol must NOT be thrown away with normal household waste. At the end of the product's life, take it to a collection point designated for recycling of electrical and electronic devices. Find out more about return and collection points through your local authority.

The European Waste Electrical and Electronic Equipment (WEEE) Directive was implemented to dramatically reduce the amount of waste going to landfills, thereby reducing the environmental impact on the planet and on human health. Please act responsibly by recycling used products. If this product is still useable, consider giving it away or selling it.

## Albergo+ Instructions

Congratulations on your purchase. We believe the Albergo+ to be one of the finest DAB/DAB+/DMB/FM table radios on the market today. We know you are eager to begin listening to your new radio, but in order to take full advantage of what your radio is capable of, please take a moment to read this owner's manual and the safety instructions. If you have any questions, please do not hesitate to contact your dealer or Tivoli Audio.

**Please save the carton and original packing should you ever need to ship your radio, as shipping damage is not covered by the factory warranty.**

On behalf of all of us, thank you for choosing Tivoli Audio, and enjoy your Albergo+!

## About Tivoli Audio

Tivoli Audio was founded by Tom DeVesto with the mission of bringing simple to use, elegantly designed, high quality audio products to consumers. As CEO and head of research and development at his former company, Cambridge SoundWorks, Tom was responsible for the development of many of the best selling home entertainment and multi-media products on the market. He also held senior management positions in product development at both Advent and Kloss Video.


\*Cambridge SoundWorks is a registered trademark of Creative Labs, Singapore.

### Packed with your Albergo+ you should find one each:


- 1 External Power Supply
- 1 Remote Control (battery installed)

Please contact your dealer or Tivoli Audio if any of these items are missing.

## Guide to Features (Front Panel)

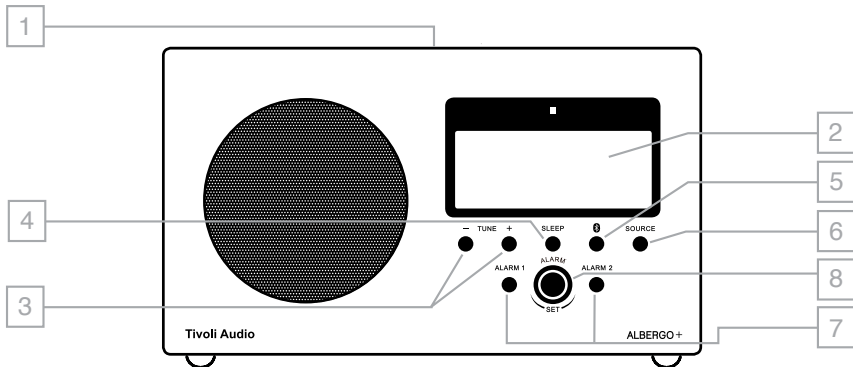

1. **MULTI-FUNCTION CONTROL WHEEL (TOP):** The control wheel conveniently serves many functions:
  - a. **Power:** When the Alberg+ is off, press to power the unit on. When the Alberg+ is on in any source, press to power the unit off.
  - b. **Volume:** When the Alberg+ is on in any source, rotate clockwise to increase the volume level and counter-clockwise to decrease the volume level.
  - c. **Snooze:** Press to engage Snooze when the alarm sounds. An  icon will show on the display when Snooze is active. The Snooze time is fixed at 10 minutes. Pressing the Snooze button again while still in Snooze mode will re-set the Snooze timer back to 10 minutes. While the alarm is sounding, press and hold down the Snooze button to turn off the alarm and the unit, or press the respective alarm button.
2. **LCD:**

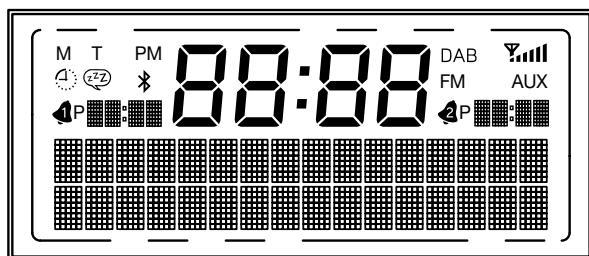

**88:88** : (center digits): Time

AUX: Auxiliary

FM: FM band

 : Sleep timer

 : Reception level

 : *Bluetooth* mode

 : Snooze timer

DAB: DAB/DAB+ band

M: Mono

  : Alarms 1 and 2


PM: When 12 hour clock is selected

T: Manual tuning mode

3. **TUNE +/-:** In DAB mode, use these buttons to show all available DAB/DAB+ stations. Use the +/- buttons to highlight specific stations and the highlighted DAB station will tune automatically after 3 seconds, or press the Enter button on the remote control. FM: Press the Tune +/- buttons briefly to Auto Scan to the next station detected. See "Auto Scan" under "FM Menu" on how to disable Auto Scan and tune stations manually.
4. **SLEEP:** Press repeatedly to activate the amount of time the radio will play before it turns off automatically, and or press the Select button on the remote control to select that time. A small clock face  will show on the display when the Sleep timer is active. To cancel Sleep, press the Sleep button until the display shows "Off".
5. ** BLUETOOTH:** Press to enter *Bluetooth* mode. See "*Bluetooth* Operation" for more information. Press and hold the *Bluetooth* button to clear the memory of all paired devices. The display will show "Memory Cleared".
6. **SOURCE:** Press repeatedly to change sources.
7. ** ALARM 1 AND 2:** Press to set the desired wake time for either alarm and automatically set the alarm to wake.
8. **ALARM KNOB:** After pressing either Alarm button, rotate this knob to set the hour and push the knob in to Enter, then do the same for the minutes and press the knob in when done, or the alarm time will set automatically after 3 seconds. The alarm will be set to

wake. Each alarm's wake time will be shown in the display. Press the respective Alarm button again to cancel the alarm. **Please also see “How to Change Alarm Settings and Set the Alarm Via the Main Menu” for additional very important Alarm settings.**


## Guide to Features (Rear Panel)

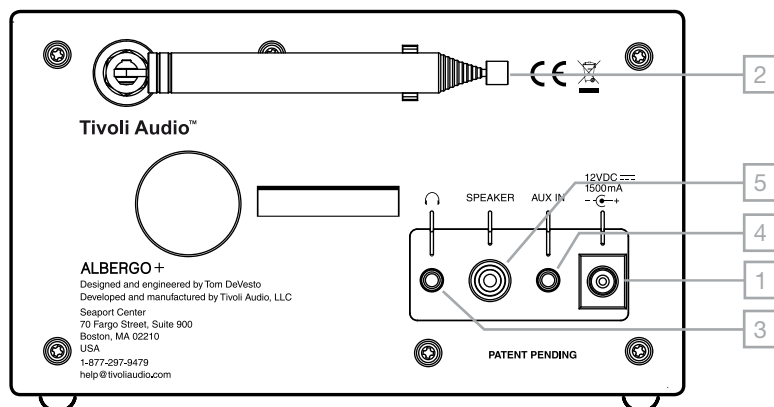

1. **12VDC/1500mA:** Use this input to operate the Albergo+ using its included external power supply. **Use only the power supply provided with this product.** Should the power supply become damaged or misplaced, use only a like replacement. Any DC adapter used must meet the requirements of EN/IEC 60065 and be rated at 12VDC 1500mA and 230V 50Hz (depending on your region's power requirements). Use of any DC adapter not recommended by the manufacturer/not meeting this specification may cause a safety hazard. The connector is 5.5 mm/2.1 mm center positive. It is normal for the power supply to become warm during use.
2. **EXTERNAL ANTENNA:** An external telescoping antenna is affixed to this input and is not intended to be detached. Adjust for best reception. For more, see the section marked “Digital Radio/FM Reception”.
3. **HEADPHONE OUT:** Connect a headset (not included) to this variable stereo output for private listening. The headset will mute the primary speaker. The headset's volume is adjusted using the control wheel or the remote control. The remote's “Mono” button also affects this output. This stereo output accepts a 3.5 mm stereo male mini connector. Avoid using headphones at high volume levels to prevent possible hearing damage.
4. **AUX IN:** To hear audio from another device, such as Tivoli Audio's Model CD, a MP3 player, or TV, connect said device's audio output to this stereo input and change the source to Auxiliary. This stereo input accepts a 3.5 mm stereo male mini connector. **Note: you may need to adjust the volume level differently for an auxiliary device than the level used for radio listening.**
5. **Speaker:** Connect the male RCA cable from the optional Tivoli Audio Albergo Speaker to this female RCA output. Make sure the Stereo/Mono setting is set to Stereo by pressing the Mono button on the remote control and be sure the display doesn't show “M” for mono.

## Guide to Features (Remote Control)

1. **POWER:** Press briefly to power the Albergo+ off or on. The radio will power on to the last source used.
2. **MUTE/SNOOZE:** Press to mute the audio while the unit is playing; press again or adjust the volume to restore sound. Press to mute the alarm for 10 minutes after the alarm sounds. A  icon will show on the display when Snooze is active. The Snooze time is not adjustable. Pressing the Snooze button again while still in Snooze mode will re-set the Snooze timer back to 10 minutes.
3. **ALARM:** With the Albergo+ powered on, use the  and  and Select buttons to adjust and set the alarms. **Please also see “How to Change Alarm Settings and Set the Alarm Via the Main Menu” for additional very important Alarm settings.**
4. **SLEEP:** Press repeatedly to activate the amount of time the radio will play before it turns off automatically, and or press the Select button on the remote control to select that time. A small clock face  will show on the display when the Sleep timer is active. To cancel Sleep, press the Sleep button until the display shows “Off”.
5. **SOURCE:** Press repeatedly to change sources.
6. **INFO:** Press repeatedly to cycle through the information available depending on the source mode you are in.
7. **PRESETS 1-5:** Press and hold to store the currently tuned station. Press briefly to recall the station associated with that specific preset. In FM mode, the preset number will be indicated on the display. There are 5 presets for each band.
8. **VOLUME +/-:** Press the Volume + button to raise the volume level or the Volume – button to lower the volume level. If the audio ever sounds distorted, lower the volume level to avoid damaging the speaker. Adjusting the volume while the Albergo+ is muted will cancel the muting.
9. **▲▼/TUNE +/-:** Press to adjust menu items when in the Menu. In DAB mode, use these buttons to show all available DAB/DAB+ stations. Use the   buttons to highlight specific stations and the highlighted DAB station will tune automatically after 3 seconds, or press the Enter button on the remote control. FM: Press the Tune +/- buttons briefly to Auto Scan to the next station detected. See “Auto Scan” under “FM Menu” on how to disable Auto Scan and tune stations manually.
10. **▶◀:** The right arrow button duplicates the Select button. The left arrow button moves you to the previous page in certain menu items.

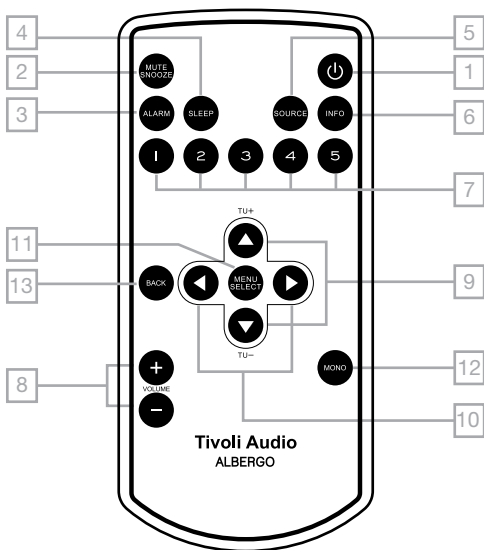

11. **MENU/SELECT:** Press and hold to enter the main menu within each source mode and press briefly to select items within the menu. For more, see the sections below marked “Menu” for DAB, FM, and Auxiliary Menus.
12. **MONO:** Press to change the Stereo/Mono setting. The display will show “M” for mono. This setting also affects the headphone output. For more, see the section marked “Digital Radio/FM Reception”.
13. **BACK:** Press to go back to the previous menu page.

**Note:** With the Albergo+ in standby, you can control the display's backlight without having to turn the Albergo+ on and accessing the menu. Press the remote's ▲ button twice to turn the backlight off. Press the remote's ▲ button to turn the backlight on for 10 seconds. Press the remote's ▲ button two more times to restore the backlight.

## Digital Radio (DAB/DAB+) Menu

In DAB mode, press and hold the Menu button on the remote to enter the main menu. Use the ▲▼ buttons and the Select button to change the items within the menu. Use the Back button to navigate back.

An asterisk (\*) indicates the shown menu item is currently set.

**Note:** Upon entering Digital radio mode, if the Station List is empty, an auto scan will initiate.

**Note:** The Main Menu will time out if no action is taken after nine seconds.

1. **AUTO SCAN:** Searches the entire frequency range. If you move the Albergo+ to another location, you must perform a new scan so the radio will find stations in the new location. To cancel the auto scan, press the Back button on the remote.
2. **TIVOLI EQ:** Press the Select button and use ▲▼ and Select buttons to adjust the Bass and Treble. The adjusted values will be shown in “User EQ”. Press the Select button to turn Loudness On or Off. Turning Loudness on when listening at low volume levels is recommended since it boosts high and low frequencies resulting in a more natural sound. Use the ▲▼ and Select buttons to activate any one of the pre-set EQ settings. Selecting a preset EQ will over-ride any adjustment made to the Bass and Treble settings, but Loudness will be unaffected. The “Flat” EQ restores the audio settings to the factory defaults, meaning Bass and Treble will be re-set to zero. The “Flat” EQ also restores Loudness Off. However, if the Bass and Treble had been adjusted, those settings will still be shown in “User EQ”. Simply selecting “User EQ” will reactivate the Bass and Treble settings. In the EQ menu page, the numbers to the right hand side indicate the bass and treble settings.
3. **MANUAL TUNE:** Press the ▲▼ buttons to manually tune specific DAB/DAB+ frequencies. The highlighted DAB station will tune automatically after 3 seconds, or press the Enter button on the remote control.
4. **DRC:** Dynamic Range Control allows you change the sound level of stations to make quiet passages louder to compensate for a noisy environment, or when listening at a low volume level.
5. **SETTINGS (A-F):**
  - A. **ALARM:** See “How to Change Alarm Settings and Set the Alarm Via the Main Menu.”
  - B. **TIME:**

**Set Time/Date:** Press the Select button and use ▲▼ and Select buttons to adjust the hour and then minutes. You must also set the Auto update to “No update”. For more, refer to “Auto update” below.

**Auto Update:** Press the Select button and use ▲▼ and Select buttons to choose between “Update from any”, “Update from DAB”, or “Update from FM” (RDS). For any of the auto updates to work, you must have consistent reception of DAB or FM RDS with a time/date signal provided. It could take up to a minute or more for the clock to update. Tivoli Audio is not responsible for inaccurate time/date information provided by the auto update signal. To set the clock manually, select “No Update”, and then select “Set Time/Date” under the “Time” menu using the ▲▼ buttons and the Select button to set the hour. Repeat to set the minutes and press Select to save.

**Set 12/24 Hour:** Press the Select button and use the ▲▼ and Select buttons to choose 12 or 24 hour clock format.

**Set Date Format:** Press the Select button and use the ▲▼ and Select buttons to choose the date format you prefer.

### C. BACKLIGHT:

**Timeout:** The backlight level can be constant regardless of whether you are using any controls on the Albergo+ or not (this is the way the Albergo+ is configured from the factory), or you can customize the backlight to automatically change to a “Dim level” setting after a fixed period of time for as long as no controls are being used. Once a control on the unit or the remote is pressed, the normal backlight level is restored. Press Select and use the ▲▼ and the Select buttons to set the amount of time it will take for the backlight to change to the dim level from 10, 20, 30, 45, 60, 90, 120, or 180 seconds, or to keep the timeout feature Off.

**On Level:** Press Select and use the ▲▼ and Select buttons to choose the intensity of the backlight.

**Dim Level:** If you selected a time for the backlight to change to a dim setting under “Timeout”, then press Select and use the ▲▼ and Select buttons to choose the intensity of the backlight when it changes to this dim setting.

- D. **LANGUAGE:** Press Select and use the ▲▼ and Select buttons to set your language.
- E. **FACTORY RESET:** Press Select and use the ▲▼ and Select buttons to confirm (Yes) or reject (No) the factory reset. A factory reset will restore factory defaults and cancel all your personal settings such as presets and language. Also see the section marked “Digital Radio/FM Reception”.
- F. **ID:** Press Select to view the ID. If you contact your dealer or Tivoli Audio with a question, you may be asked to provide the number shown in this field.

## FM Menu

In FM mode, press and hold the Menu/Select button on the remote to enter the main menu. Use the ▲▼ buttons and the Select button to change the items within the menu. Use the Back button to navigate back. An asterisk (\*) indicates the shown menu item is currently set.

**Note:** The Main Menu will time out if no action is taken after nine seconds.

1. **SCAN SETTING:** Press the Select button and use ▲▼ and Select button to choose between “Strong stations only” or “All stations” when performing an auto scan (see #9 (▲▼/Tune +/-) under “Remote Control”. Selecting “All stations” increases the sensitivity of the scan, possibly resulting in the auto seek stopping on noise.

2. **AUTO SCAN (NOT IN AUX MENU):** Press the Select button and use ▲▼ and Select buttons to enable or disable Auto Scan. When enabled, Auto Scan will automatically tune the next station received each time the Tune +/- buttons are pressed. When disabled, the Tune +/- buttons can be used to manually navigate the frequencies.
3. **RDS:** Press the Select button and use the ▲▼ and Select buttons to choose between Enabling or Disabling FM RDS text. For more, see “RDS”.
4. **TIVOLI EQ:** See the description under “Digital Radio Menu”.
5. **SETTINGS:** See the description under “Digital Radio Menu”.

## Auxiliary Menu

In Auxiliary mode, press and hold the Menu/Select button on the remote to enter the main menu. Use the ▲▼ buttons and the Select button to change the items within the menu. Use the Back button to navigate back. An asterisk (\*) indicates the shown menu item is currently set.

Note: The Main Menu will time out if no action is taken after nine seconds.

1. **TIVOLI EQ:** See the description under “Digital Radio Menu”.
2. **ALARM 2:** If you do not expect to use Alarm 2 or are afraid Alarm 2 may be set in error, press the Select button and use the ▲▼ and Select buttons to Disable Alarm 2.
3. **SETTINGS:** See the description under “Digital Radio Menu”.
4. **VOLUME LIMIT:** If you wish to reduce the maximum volume level so as not to disturb others, press the Select button and use the ▲▼ and Select buttons to choose between Volume limit 26 or 22. Selecting “Off” keeps the maximum volume at the factory default setting of 30. Note reducing the overall volume level will also reduce the level of the alarm’s volume when the alarm sounds.
5. **BLUETOOTH LEVEL:** Use the ▲▼ and Select buttons to select “Low” should you wish to reduce the range of the *Bluetooth* signal. This may be desirable if the *Bluetooth* feature will only be used when you are in very close proximity to the radio. We recommend this setting remain in the “Normal” position.

## How to Change Alarm Settings and Set the Alarm Via the Main Menu

1. With the Albergo+ powered on, access the alarm setting through the main menu in DAB, FM, or Aux modes by pressing and holding the Menu button on the remote. Once in the Menu, select “Settings” and “Alarm”.
2. Alarm 1 is shown first. Use the ▲▼ and Select buttons to choose between Alarm 1 and Alarm 2. Note: At any point you can navigate through the alarm menu by using the back or left arrow buttons, and the Select or right arrow buttons.
3. Use the ▲▼ and Select buttons to set the alarm on or off.
4. Use the ▲▼ buttons to set/change the hour, then press Select. Repeat this process to set/change the minutes, followed by AM/PM (if time is set to 12 hour format), then press Select.
5. Use the ▲▼ buttons to select the source you wish to wake to, then press Select. If you set the source to DAB (includes DAB+) or FM, use the ▲▼ buttons to select the station preset (if presets have been stored) or last listened, then press Select.

6. Use the ▲▼ buttons to set how often the alarm should be set to wake, then press Select.
7. Lastly, use the ▲▼ buttons to set the volume level of the alarm, then press Select. To ensure there is sound when the alarm activates, the alarm's volume level cannot be set below a minimum level. Also, if enabled, the "Volume Limit" feature under the Auxiliary Menu will affect the alarm volume.
8. Repeat this process for Alarm 2 if desired.

If you make a mistake at any point in the process, press the Back button on the remote and begin again.

**Note:** Your settings will not be saved unless you complete the entire process and the display shows "Alarm Saved".

**Note:** If you set the alarm source to DAB and the last listened or preset station is unavailable at the time the alarm sounds, the alarm will default to the tone.

**Power Loss:** Should power be lost, or the Albergo+ becomes disconnected, the alarm time will be saved but the Albergo+ alarm cannot sound if there is no power.

## Alarm Options

The alarm sounds with a gradual volume increase. When the alarm sounds you can activate the Snooze feature or shut the alarm off.

**Snooze:** To activate Snooze while the alarm is sounding, press the Snooze button on the remote, or briefly press the Multi-Function Control Wheel on top of the unit. The Snooze time is not adjustable. Pressing the Snooze button again while still in Snooze mode will re-set the Snooze timer back to 10 minutes. While the alarm is sounding, press and hold down the Snooze top wheel to turn off the alarm and the unit, or press the respective alarm button.

**Alarm off:** To stop the alarm while it is sounding, press the Alarm button on the unit or remote, or press and hold the Multi-Function Control Wheel on top of the unit. You can also press the Power button on the remote.

**Alarm Quick Set:** With the Albergo+ in Standby, repeatedly press the alarm button on the remote briefly to toggle each alarm on or off.

## Bluetooth Operation

Prior to pairing, verify your device supports *Bluetooth* 2.1+EDR A2DP and your device is not connected to any other *Bluetooth* product. Devices may pair differently. Below is a general guide.

1. Press the Albergo+'s front panel *Bluetooth* button or change the source to *Bluetooth*. This will power on the *Bluetooth*. Turn the volume up about ¼ to start. Also turn up the volume on the source device (the device you are streaming from).
2. Turn on the *Bluetooth* wireless technology on your enabled device.
3. Select "Tivoli *Bluetooth* (Not Paired)" when it appears on your device's screen to initiate searching. Some devices may prompt you for a PIN. If so, enter "0000". "Tivoli *Bluetooth*" will change from "Not Paired" to "Connected".
4. You will hear a ring tone from the Albergo+ confirming connection and you can begin playing your music files wirelessly. Adjust the volume level on your device. You should not have to pair your device again. **Depending on your device, you may need to make multiple attempts at Pairing and/or Connecting to the Albergo+, but please give your device adequate time to Pair or Connect before repeating the process.**

## Pairing A *Bluetooth* Wireless Technology Enabled iPhone/iPod Touch/iPad

1. Press the Albero+’s front panel *Bluetooth* button or change the source to *Bluetooth*. This will power on the *Bluetooth*. Turn the volume up about ¼ to start. Also turn up the volume on the source device (the device you are streaming from).
2. Select “Settings” (depending on software version).
3. Select “General”.
4. Select “*Bluetooth*”.
5. Switch *Bluetooth* “On” to initiate searching.
6. Select “Tivoli *Bluetooth* (Not Paired)” when it appears on the display. If you are prompted to enter a PIN, enter “0000”. “Tivoli *Bluetooth*” will change from “Not Paired” to “Connected”.
7. You will hear a ring tone from the Albero+ and you can begin playing your music files wirelessly. Adjust the volume level on your device. You should not have to pair your iPhone/iPod/iPad again.

The volume output level of music files varies. If you prefer an even higher output level, check the settings in your iPhone/iPod touch/iPad: Set the EQ Off, the SoundCheck Off, and the Volume limit Off.

If you encounter a problem Pairing, press the small arrow to the right of “Tivoli *Bluetooth*” on your iPhone/iPod touch/iPad display and select “Forget this Device”, then repeat the Pairing process. **Depending on your device, you may need to make multiple attempts at Pairing and/or Connecting to the Albero+, but please give your device adequate time to Pair or Connect before repeating the process.**

When streaming music, you can press the blue arrow to the right of the next track button >>/ on the iPhone/iPod touch/iPad display to alternate between the iPhone/iPod/iPad and *Bluetooth*.

### NOTE:

- The Albero+ will remember pairing information for up to 8 devices. Additional devices can be paired, but the least-recently used device will be replaced by the newly paired device.
- If the audio drops out or stops during playback, move your device closer to the Albero+, or check to be sure another wireless device is not interfering with the signal.
- When switching from *Bluetooth* to DAB or FM, you may need to re-adjust (lower) the radio’s volume level.

## Digital Radio/FM Reception

The included external antenna will provide good reception. In strong FM signal locations, reducing the antenna’s length may provide better reception.

If you are using the Albero+ together with the optional Albero Speaker for stereo sound and you are listening to a noisy FM station, press the Mono button on the remote control, as this might make the FM station more listenable. The display will show an “M” when in mono

Buildings made with concrete, steel, or aluminum siding will hinder reception. Household appliances, electric blankets, computers, CD players, and other electronic devices can also

adversely affect reception or inject noise. If you experience this, move the Alberg+ further from the offending device or plug it into an electrical outlet not shared by another device.

**Note:** When moving the Alberg+ to another location where there may be different DAB stations from the previous location, it is recommended to perform a factory reset to initiate a new scan to refresh the DAB station list.

## DAB Display Messages

**Secondary Services:** Secondary stations will be indicated by a >> symbol next to the station name. Secondary services may not be available in your area.

“?”: If this symbol appears next to the station name, it means the station is invalid or inactive.

“Not Available”: Shown when tuning a DAB station with an insufficient signal.

## RDS (FM Band only)

The Radio Data System (RDS) transmits text data along with the audio broadcast. Not all FM stations utilize this service, thus text may not be present with some stations. For stations broadcasting RDS, the text still might not appear, or might appear scrambled if the signal is too weak. In such cases, experiment with the position of the FM antenna. If RDS is being received, repeatedly press the Info button to see the information available. Note RDS content is determined by each individual FM station.

## Placement

Place the Alberg+ on a flat, stable surface. For proper bass and ventilation, do not obstruct the rear bass port. The Alberg+ is not video shielded and should be kept at minimum of 127 mm away from a computer monitor or television set. Placement in a bookcase, cabinet, or close to walls or corners may inflate the bass, creating an unnatural sound.

## Cleaning

Never use any harsh cleansers or solvents on your radio.

## Limited Warranty

Tivoli Audio manufactures its products to very high standards and we are confident our products will perform well. Accordingly, we provide a limited warranty on this product against manufacturing defects in material and workmanship to the original owner. This warranty is non-transferable.

Products purchased in the European Union and Norway have a minimum warranty term of two years. For countries where minimum warranty terms are determined by statute, the warranty term is the statutory period required. In all other locations, the warranty term is one year.

This Limited Warranty covers the functionality of the product for its normal, intended use as specified in this Owner's Manual. It does not cover a malfunction or damage that has resulted from improper or unreasonable use or installation, using the charger to charge alkaline batteries, faulty ancillary equipment, modifications, unauthorized repair, shipping damage or loss, abuse, accidents, use on improper voltage/current, power surges, lightning or other acts of God, excess moisture, normal wear and tear, commercial use, or purchase from unauthorized dealers. Proof of purchase as evidence the unit was purchased from an authorized dealer may be required for warranty service.

**Please contact the dealer of purchase or local distributor for warranty service or repair.**

Please refrain from opening this product or taking it apart as doing so will void this Limited Warranty. There are no user serviceable parts inside. Tivoli Audio will not pay for costs incurred due to correction of reception problems, elimination of externally generated static/noise, loss of time, inconvenience, loss of use of product, or damage caused by improper use of this product.

In the event the product is returned during the warranty term and is eligible for service under this Limited Warranty, we will repair or replace any defective parts within a reasonable period of time and free of charge.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS SUBJECT TO SPECIFIED CONDITIONS. YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH APPLY TO THE PRODUCT YOU HAVE ACQUIRED. THESE LEGAL RIGHTS VARY FROM COUNTRY TO COUNTRY. SOME PLACES DO NOT ALLOW THE EXCLUSION, RESTRICTION, OR MODIFICATION OF CERTAIN IMPLIED RIGHTS OR THEIR EFFECT. IN THOSE SITUATIONS THIS LIMITED WARRANTY WILL ONLY APPLY TO THE EXTENT THAT THE APPLICABLE LAW ALLOWS.

The laws of your country may provide you with legal claims against the seller or manufacturer of this product. This Limited Warranty does not affect those rights.

The provisions of the Limited Warranty are in lieu of any other warranties or conditions, except those provided by law. This Limited Warranty does not affect any legal rights provided to you by law and does not preclude any remedy you may have under law.

In countries where liability limits are not precluded by statute, the maximum liability of Tivoli Audio shall not exceed the purchase price paid by you for the product. In countries where limitations of liability are precluded by law, Tivoli Audio shall be liable for no more than the direct damages for bodily injury, and/or real or personal property arising from the negligence of Tivoli Audio.

Where not prohibited by law, Tivoli Audio shall not be liable for special, incidental, consequential, or indirect damages. Some places do not allow limitations on the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

This Limited Warranty is void if the label bearing the serial number has been removed or defaced.

If you purchased an extended service contract from your dealer and service is required after the term of this Limited Warranty has expired, please contact your extended service contract provider to obtain service.

For your convenience, you may register your product for warranty service online at our website [www.tivoliaudio.com](http://www.tivoliaudio.com). There is no legal obligation for you to provide personal information. However, such information allows us to maintain a record of the Tivoli Audio products acquired by you and better understand the purchasers of our products. The information collected will be used for marketing purposes by Tivoli Audio and, where permitted, to contact you in relation to the products you have acquired or other products which might be of interest to you from Tivoli Audio or other companies. The information that you provide may be processed in another country.

## Specifications

|                         |                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------|
| <b>Model:</b>           | Tivoli Audio Albergo+                                                                  |
| <b>Type:</b>            | DAB/DAB+/DMB/FM clock radio<br>with <i>Bluetooth</i> wireless technology               |
| <b>Drivers:</b>         | 76.2 mm (3") full range driver                                                         |
| <b>Receiving bands:</b> | FM:87.5-108MHz<br>DAB (Band III)/DAB+: 174-240MHz<br>(Receiving ranges vary by region) |
| <b>Power:</b>           | 12VDC nominal - 15 VDC maximum, 1500 mA                                                |
| <b>Power Supply:</b>    | Tivoli Audio 1.5A- CE                                                                  |
| <b>FM De-Emphasis:</b>  | 50uSec or 75uSec (depending upon region)                                               |
| <b>Dimensions:</b>      | 110 mm H x 186 mm W x 129 mm D<br>(4.34"H x 7.32"W x 5.22"D)                           |
| <b>Weight:</b>          | 1.0 kg (2.2 lbs.)                                                                      |

All specifications subject to change without notice. Tivoli Audio reserves the right to make product changes without notice. Tivoli Audio, the Tivoli Audio logo, Albergo, Albergo+, and the Albergo Speaker are trademarks of Tivoli Audio, LLC. The *Bluetooth* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Tivoli Audio is under license. iPod, iPod touch, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. Other trademarks and trade names are those of their respective owners.

